

SKYDANCE WT-SPI Digital Pixel RGB Controller Owner's Manual

Home » SKYDANCE » SKYDANCE WT-SPI Digital Pixel RGB Controller Owner's Manual

Contents

- 1 SKYDANCE WT-SPI Digital Pixel RGB
- 2 WT-SPI RGB/RGBW SPILED Controller
- 3 Features
- **4 Technical Parameters**
- **5 Mechanical Structures and Installations**
- 6 System wiring
- 7 Wiring Diagram
- 8 Tuya APP network connection
- 9 Tuya APP interface
- 10 Documents / Resources
- 11 Related Posts



SKYDANCE WT-SPI Digital Pixel RGB Controller



WT-SPI RGB/RGBW SPILED Controller

The WT-SPI RGB/RGBW SPI LED Controller is a multi-pixel LED strip controller that supports SPI signal output. It allows for Tuya APP cloud control, voice control, and is compatible with 45 kinds of RGB or RGBW LED strips. The controller also features customized dynamic scenario mode, multiple music rhythms, and wireless remote control.

Features:

- Multi-pixel RGB/RGBW LED strip controller with SPI signal output
- Tuya APP cloud control
- Voice control, support for Amazon ECHO, Google, Tmall Genie and Xiaodu smart speakers
- Compatible with 45 kinds of RGB or RGBW LED strips
- · Customized dynamic scenario mode
- Multiple music rhythms
- · Wireless remote control

Technical Parameters:

LVD Input and Output

• Input voltage: 5-24VDC

• Input Current: 8A

• Input signal: Tuya APP + RF 2.4GHz

• Output signal: SPI(TTL) x 2

Scenario Mode: 44 default and 10+ customizations

• Pixel Dots: MAX.1000

Safety and EMC:

EMC standard (EMC): ETSI EN 301 489-1 V2.2.3 ETSI EN 301 489-17 V3.2.4

Safety standard(LVD): EN 62368-1:2020+A11:2020

· Certification: CE, EMC, LVD

· Warranty: 5 years

Environment:

• Operation temperature: Ta: -30 OC ~ +55OC

• Case temperature (Max.): T c:+65OC

• IP rating: IP20

• Package Size: L120 x W43 x H35mm

• Gross weight: 0.066kg

Mechanical Structures and Installations:

• Power input +

- Power input -
- Installation rack
- · DC socket input
- LED indicator
- · Match/Set key

System Wiring:

- V+
- Output + DATA1 CLK1
- Installation rack DATA2 CLK2
- GND

Wiring Diagram:

To connect the WT-SPI with SPI spotlights (TM1803), use a power supply of AC100-240V with a constant voltage of 5-24VDC. Connect the V+ and SPI Signal cables to the SPI spotlights.

To connect the WT-SPI with SPI pixel strips (LPD6803), use a power supply of AC100-240V with a constant voltage of 5-24VDC. Connect the V+ and SPI Signal cables to the LED Pixel Strip.

To connect the WiFi-SPI with SPI digital light tube (TM1809), use a power supply of AC100-240V with a constant voltage of 5-24VDC. Connect the V+, CK, DA, and V- cables to the SPI Digital Light Tube.

Note: When the load exceeds 8A, the light strip needs to be powered by other power supplies. Only DATA/CLK and GND cables are connected between the controller and the light strip.

Match R9 remote control:

To match the R9 remote control, short press on the match key, immediately press on/off key of the remote. The LED indicator fast flash a few times means match is successful. To delete all match, press and hold match key for 10s. The LED indicator fast flash a few times means all matched remotes were deleted.

Set the length, chip type and RGB order of the SPI LED strip using R9 remote control:

Refer to the user manual for instructions on setting up the length, chip type and RGB order of the SPI LED strip using the R9 remote control.

WT-SPI RGB/RGBW SPI LED Controller

Model No.: WT-SPI

Tuya APP cloud control/Voice control/Compatible with 45 kinds IC/Customized dynamic scenario mode/Multiple music rhythms/Wireless remote control

Features



- Multi-pixel RGB/RGBW LED strip controller with SPI signal output, Tuya APP cloud control.
- Voice control, support for Amazon ECHO, Google, Tmall Genie and Xiaodu smart speakers.
- Compatible with 45 kinds of RGB or RGBW LED strips.
 - Factory default controllable chip types of light strips:
 - TM1809, TM1804, TM1812, UCS1903, UCS1909, UCS1912, SK6813, UCS2903, UCS2909, UCS2912, WS2811, WS2812, WS2813, WS2815.
 - Need to purchase a separate R9 remote control to set the chip type of light strips: TM1803, TM1829, TLS3001, TLS3002, GW6205, MBI6120, TM1814B(RGBW), SK6812(RGBW), WS2813(RGBW), WS2814(RGBW), UCS8904B(RGBW), LPD6803, LPD1101, D705, UCS6909, UCS6912, LPD8803, LPD8806, WS2801, WS2803, P9813, SK9822, TM1914A, GS8206, GS8208, UCS2904, SM16804, SM16825, SM16714(RGBW), UCS2603, UCS5603.
- Painted segment color mixing: full color ?lling, color pencil segment painting, eraser segment light off.
- Rich dynamic effects: 44 default and 10+ custom dynamic scenarios, 16 variations.
- Multiple music rhythms: 6 local music rhythms, 3 APP music rhythms.
- Match with RF 2.4G RGB remote control.


Technical Parameters


Input and Output	
Input voltage	5-24VDC
Input Current	8A
Input signal	Tuya APP + RF 2.4GHz
Output signal	SPI(TTL) x 2
Scenario Mode	44 default and 10+ customizations
Pixel Dots	MAX.1000

Safety and EMC		
EMC standard (EMC)	ETSI EN 301 489-1 V2.2.3 ETSI EN 301 489-17 V3.2.4	
Safety standard(LVD)	EN 62368-1:2020+A11:2020	
Certiication	CE,EMC,LVD	
Warranty		
Warranty	5 years	


Environment		
Operation temperature	Ta: -30 OC ~ +55OC	
Case temperature (Max.)	T c:+65OC	
IP rating	IP20	
Package		
Size	L120 x W43 x H35mm	
Gross weight	0.066kg	

Mechanical Structures and Installations

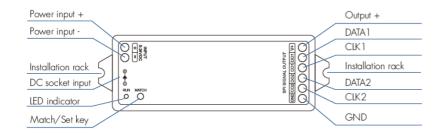

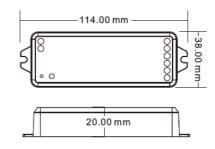

System wiring

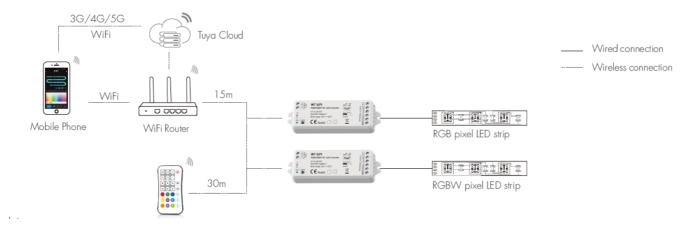


Note:

1. The above distance is measured in spacious (no obstacle) environment, Please refer to the actual test


- distance before installation.
- Please check if the WiFi router net in 2.4G band, the 5G band is not available, and do not hide your router network.
- 3. Please keep the distance between WT-SPI devices and router close, and check the WiFi signals.
- 4. WiFi signal strength detection: open the main interface of social security, click enter the device interface, click "check device network" for testing.

Wiring Diagram


WT-SPI connect with SPI spotlights (TM1803)



• WT-SPI connect with SPI pixel strips (LPD6803)



WiFi-SPI connect with SPI digital light tube (TM1809)



Note:

- 1. If the SPI LED strip is a single-wire control method, the DATA and CLK signal line outputs of the controller are same, and one controller can connect 4 LED strips.
- When the load exceeds 8A, the light strip needs to be powered by other power supplies.Only DATA/CLK and GND cables are connected between the controller and the light strip.

Match R9 remote control

Match: Short press on the match key, immediately press on/off key of the remote. The LED indicator fast flash a few times means match is successful.

Delete: Press and hold match key for 10s to delete all match, The LED indicator fast flash a few times means all matched remotes were deleted.

Set the length, chip type and RGB order of the SPI LED strip using R9 remote control

- Set the LED strip length[number of pixels(10~1000)]:
 - * + 3 digits + * Example:
 - *032*, set the number of pixels 32.
 - *600*, set the number of pixels 600.
 - *1000*, set the number of pixels 1000.
- Set the LED strip chip type: * + 2 digits + *
 - · *11* TM1803
 - *12* TM1809, TM1804, TM1812, UCS1903, UCS1909, UCS1912, SK6813, UCS2903, UCS2909, UCS2912, WS2811, WS2812, WS2813, WS2815
 - · *13* TM1829
 - *14* TLS3001, TLS3002
 - · *15* GW6205
 - · *16* MBI6120
 - *17* TM1814B(RGBW)
 - *18* SK6812(RGBW), WS2813(RGBW), WS2814(RGBW)
 - *19* UCS8904B(RGBW)
 - *21* LPD6803, LPD1101, D705, UCS6909, UCS6912
 - *22* LPD8803, LPD8806
 - *23* WS2801, WS2803
 - 。*24* P9813
 - · *25* SK9822
 - 。*31* TM1914A
 - *32* GS8206,GS8208
 - · *33* UCS2904
 - · *34* SM16804
 - · *35* SM16825
 - *36* SM16714(RGBW)
 - · *37* UCS5603
 - · *38* UCS2603
- Set LED strip RGB order * + 1 digit + *
 - *1* RGB, *2* RBG, *3* GRB, *4* GBR, *5* BRG, *6* BGR.

Note: The factory default light strip chip type is *12*, if you need to change the chip type or RGB order, you must use the R9 remote control.

Tuya APP network connection

Push twice Match key fastly, or press and hold Match key for 2s:

clear previous network connection, enter Smart config mode, LED indicator flash fastly.


Press and hold Match key for 5s:

Clear previous network connection, enter AP config mode, LED indicator flash slowly.

If smart config failed, please try AP config.


If Tuya APP network connection succeed, the RUN LED indicator will stop flash, and in Tuya APP, you can find RGB-SPI device .

Tuya APP interface

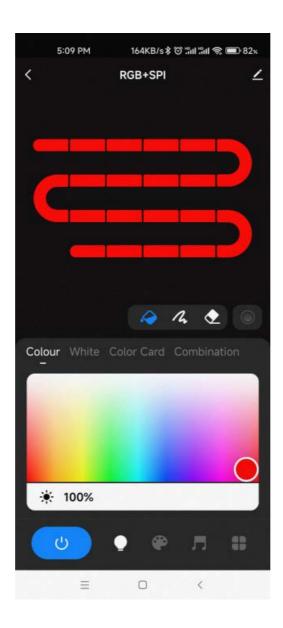

Colour:

Touch the color rectangle to adjust color and saturation. Touch the brightness slide to adjust brightness.

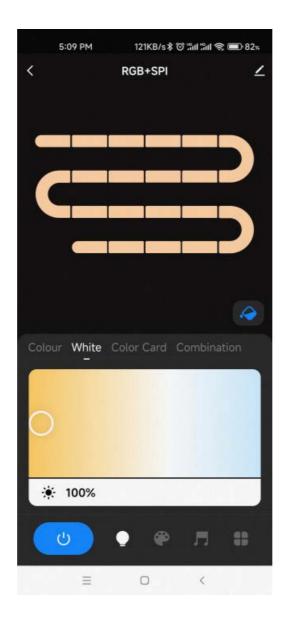


White:

Touch the color rectangle to adjust color temperature. Touch the brightness slide to adjust brightness.



Color Card:

Touch the color card array to select many different colors. Touch the brightness slide to adjust brightness.

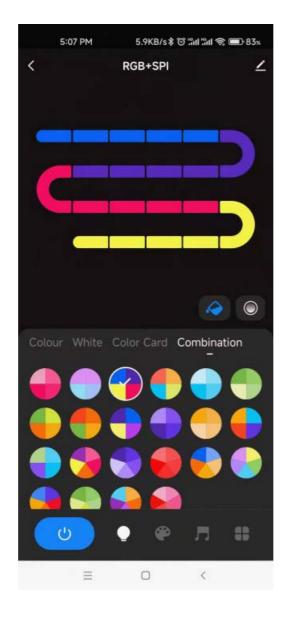

Combination:

Select a proportional distribution of multi-color circle, evenly distribute these colors on the LED strip.



Color Fill: Change the color of the full segment of the LED strip.




Color pen: change the color of a single segment of the LED strip.




Eraser: Erase the color of a single segment of the LED strip, i.e., turn off the light.


• Color transition: When there are multiple colors in the LED strip, you can set to turn on or off the color gradient transition.

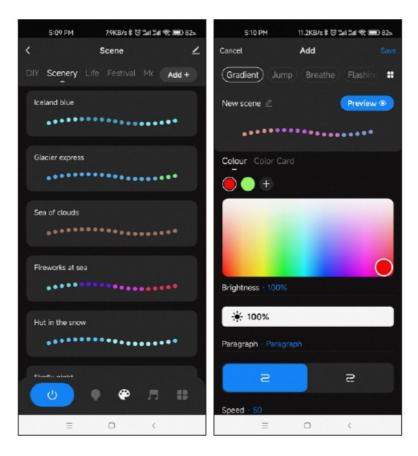

Scene interface

44 predefined scenarios and 10+ custom dynamic scenarios selectable. The custom scenarios can select 16 types variations (fade, jump, breath, flash, flow, rainbow, shooting star, pile-up, floating down, chasing light, floating, flashing, bouncing, shuttle, chaotic flashing, open and close), the 1-8 colors, full or segment control, forward or reverse motion direction, adjustable brightness and speed.

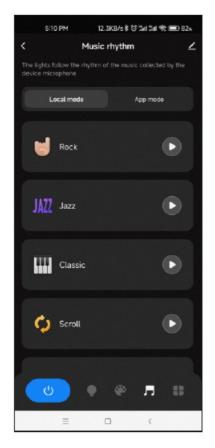

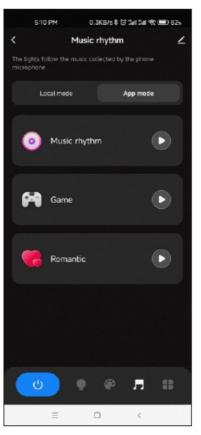


6 local music modes (rock, jazz, classical, rolling, energy, spectrum) selectable. 3 APP modes (music rhythm, game, romance) selectable.

Adjustable sensitivity of the received sound.


The light follows the rhythm according to the music collected by the phone microphone.

Note: the controller only supports App mode.

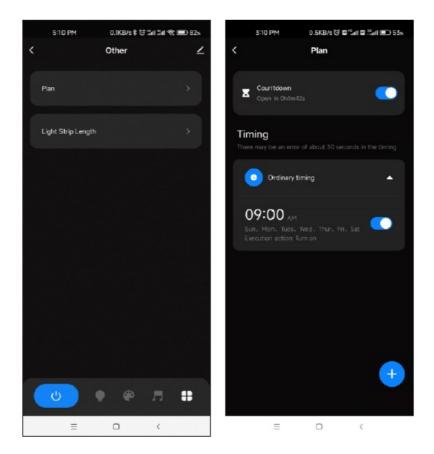

Plan interface

Countdown: Customize the countdown time (Max.24 hours) to perform the on/off action. Timer: Customize multiple times (days of the week) to perform the on/off light action.

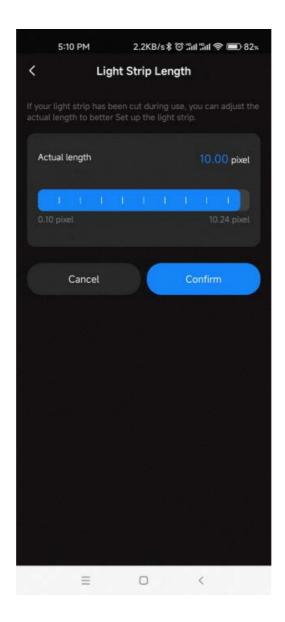

Light Strip Length interface

Strip length setting: Select the appropriate number of pixels according to the actual length of the strip, 10 -1000.

Notes.

- In APP, a light strip is fixed with 20 segments,
 Strip length (total number of pixel points) ÷ 20 segments = number of pixel points per segment.
- 2. The maximum length of the light strip is 1000 pixels, for example, a light strip of 5 meters long with 60 pixels per meter, you can set the length to 300 pixels. The whole light strip is divided into 20 segments, each segment has 15 pixels.
- 3. When the light strip length is less than or equal to 20 pixels, for example, 10-20, each pixel sequentially corresponds to each segment from the beginning.
- 4. When the light strip length is not an integer multiple of 20, the remainder of the strip will display the color of the last segment.
- 5. When the actual light strip length is not an integer multiple of 20, it is recommended to set the length longer and increase the value to a multiple of 20.
- 6. When the set of the light strip length is less than the actual length, the back part of the light strip can not be controlled.

Documents / Resources



SKYDANCE WT-SPI Digital Pixel RGB Controller [pdf] Owner's Manual

WT-SPI Digital Pixel RGB Controller, WT-SPI, Digital Pixel RGB Controller, Pixel RGB Controller, RGB Controller, Controller

Manuals+,