




SONOFF 433 RF Bridge User Manual

[Home](#) » [SonOFF](#) » SONOFF 433 RF Bridge User Manual 



433MHz RF Bridge

RF Bridge
User manual V1.1




Contents


- [1 Operating Instruction](#)
- [2 Compatible Pairing Mode](#)
- [3 Specifications](#)
- [4 Product Introduction](#)
- [5 LED indicator status instruction](#)
- [6 Features](#)
- [7 Factory Reset](#)
- [8 Common Problems](#)
- [9 FCC Warning](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)

Operating Instruction

1. Download the “eWeLink” APP

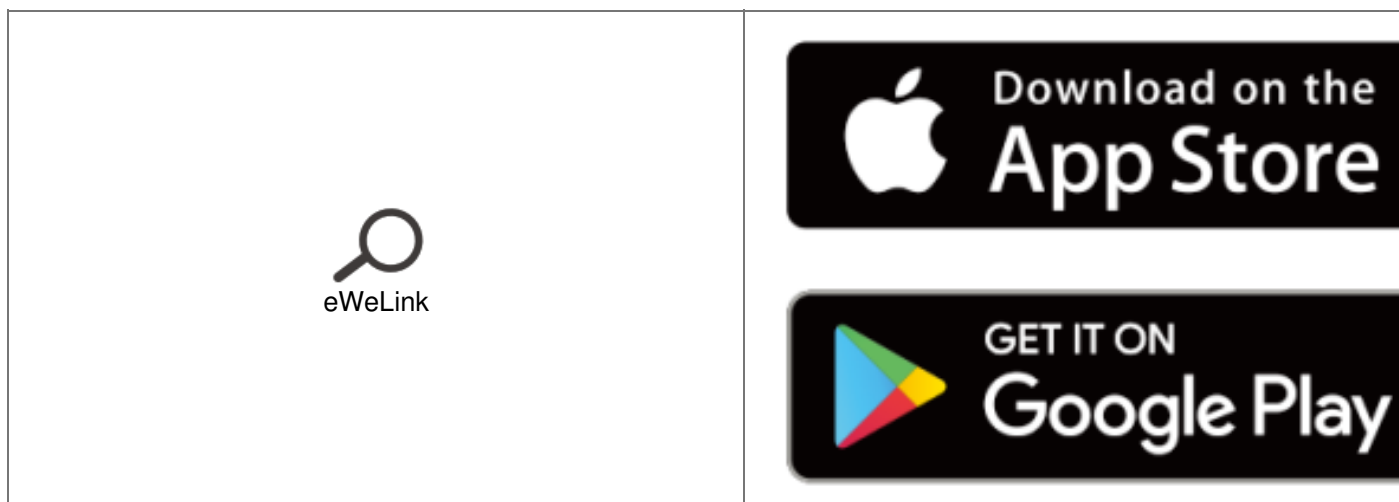

2. Power on

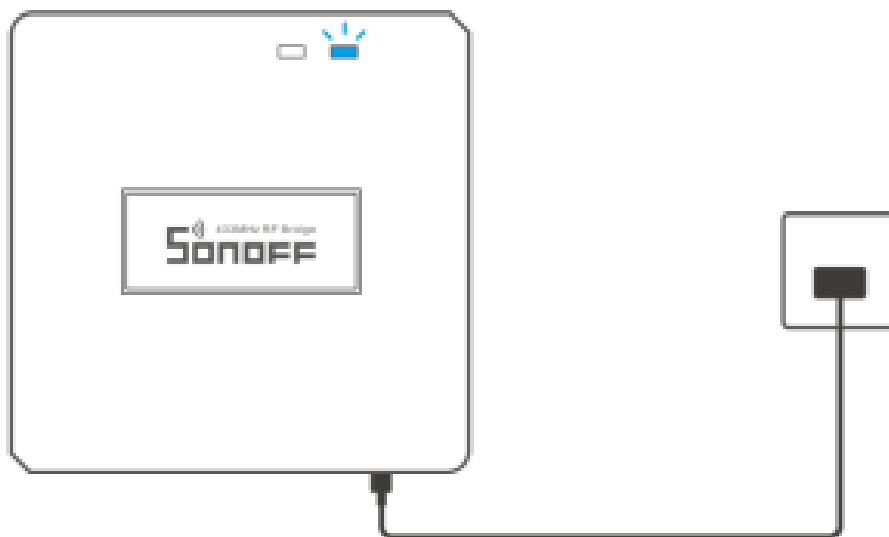


After powering on, the device will enter the quick pairing mode (Touch) during the first use. The Wi-Fi LED indicator changes in a cycle of two short and one long flash.



The device will exit the quick pairing mode (Touch) if not paired within 3mins. If you want to enter this mode, please long press the pairing button for about 5s until the Wi-Fi LED indicator changes in a cycle of two short and one long flash and release.

3. Add Bridge

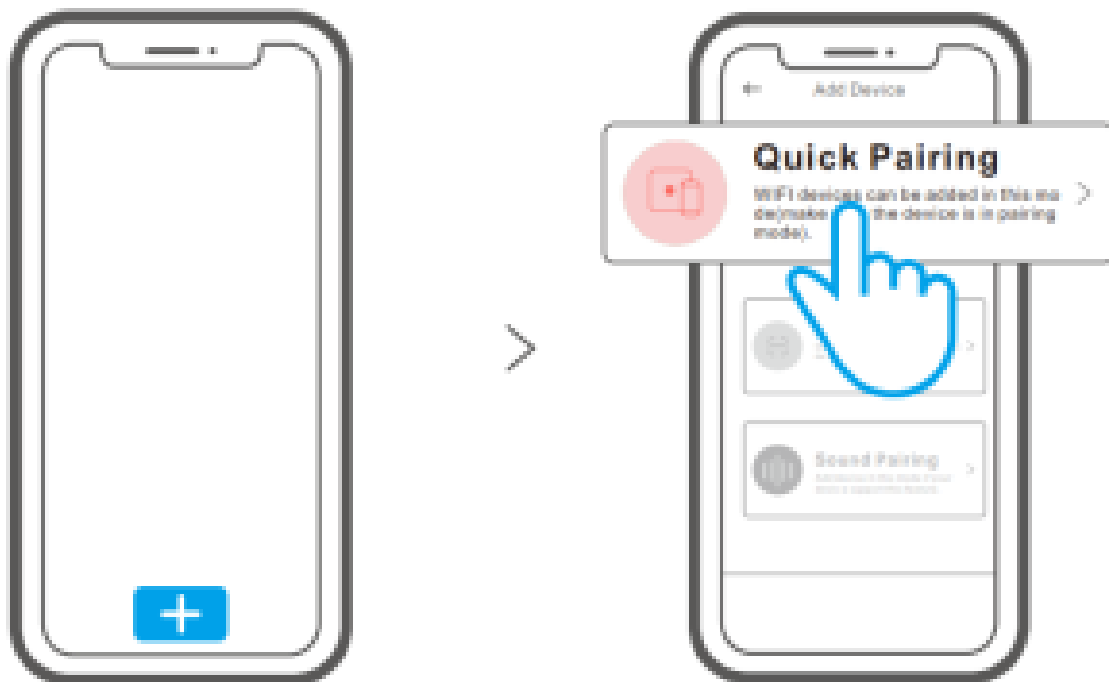

Tap “+” and select “Quick Pairing”, then operate following the prompt on the APP.

Compatible Pairing Mode

1. If you fail to enter Quick Pairing Mode (Touch), please try “Compatible Pairing Mode ” to pair.
Long press the Pairing button for 5s until the Wi-Fi LED indicator changes in a cycle of two short flashes and one long flash and release. Long press the Pairing button for 5s again until the Wi-Fi LED indicator flashes quickly. Then, the device enters Compatible Pairing Mode.
2. Tap “+” and select “Compatible Pairing Mode ” on APP. Select Wi-Fi SSID with ITEAD-***** and enter the password 12345678, and then go back to eWeLink APP and tap “Next”. Be patient until pairing completes.

Add sub-devices



Tap “+” and select the remote controller type, then a “Beep” indicates that the device enters quick pairing mode. Proceed to operate on the sub-device to pair and “Beep Beep” indicates that the pairing is successful.



Please refer to the user manual of the sub-device for the pairing method.




The device can add up to 16 sub-devices.

Specifications

Model	RF Bridge/RF BridgeR2
Input	5V 1A
RF	433.92MHz
Wi-Fi	IEEE 802.11 b/g/n 2.4GHz
Operating systems	Android & iOS
Working temperature	-10°C~40°C
Material	RF Bridge: ABS V0/RF BridgeR2: PC V0
Dimension	62x62x20mm

Product Introduction

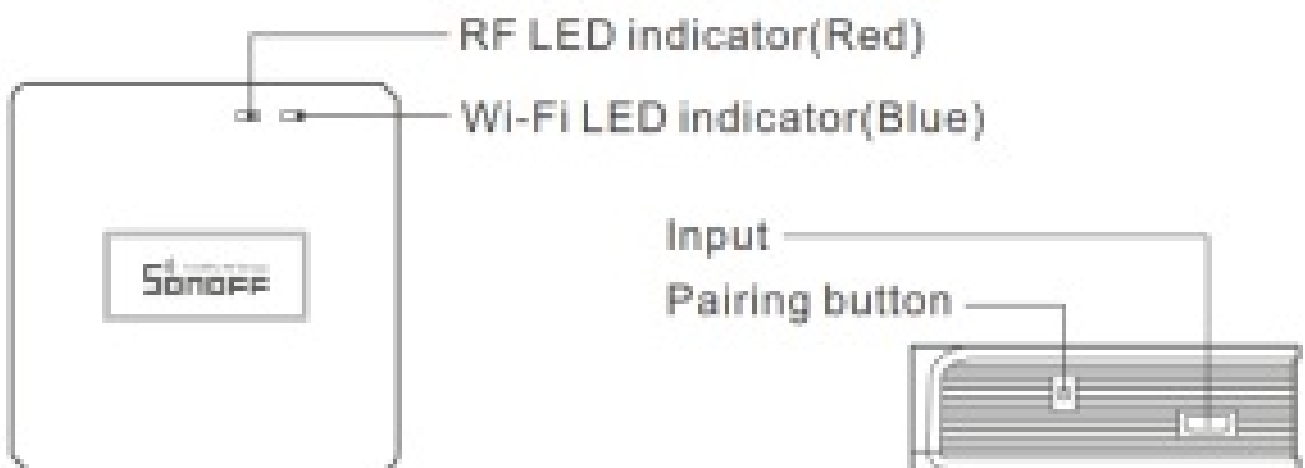








The device's weight is less than 1 kg.
An installation height of less than 2 m is recommended.

LED indicator status instruction

LED indicator status	Status instruction
Blue LED flashes (one long and two short)	Quick Pairing Mode
Blue LED flashes quickly	Compatible Pairing Mode (AP)
Blue LED keeps on	The device is connected successfully
Blue LED flashes quickly once	Unable to discover the router
Blue LED flashes quickly twice	Connect to the router but fail to connect to Wi-Fi
Blue LED flashes quickly three times	Upgrading
Red LED flashes quickly	Searching and adding ...


Features

This is a 433MHz RF bridge with multiple features that allows you to connect a variety of 433MHz wireless devices by switching 433MHz to Wi-Fi. You can set schedules, countdowns, alarm notifications, and more.

 Remote Control	 Single/Countdown Timing	 Voice Control	
 Sync Status	 Alarm notification	 Smart Scene	

Factory Reset

Long press the pairing button for about 5s until the Wi-Fi LED indicator changes in a cycle of two short and one long flash and release, then the reset is successful. The device enters quick pairing mode (Touch).

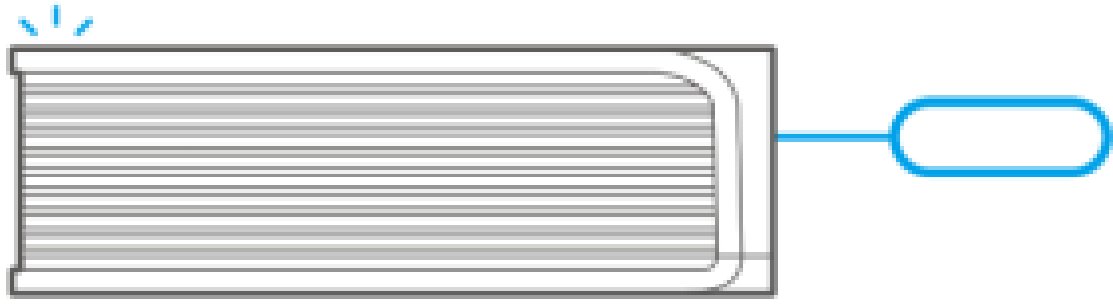

Please reset the device to factory defaults if you want to change the Wi-Fi network, then reconnect the new network.

Common Problems

Q: Why does my device stay “Offline”?

A: The newly added device needs 1 – 2mins to connect to Wi-Fi and network. If it stays offline for a long time, please judge these problems by the blue Wi-Fi indicator status:

1. The blue Wi-Fi indicator quickly flashes once per second, which means that the switch failed to connect your Wi-Fi:

- ① Maybe you have entered the wrong Wi-Fi password.
- ② Maybe there's too much distance between the switch your router or the environment causes interference, consider getting close to the router. If failed, please add it again.
- ③ The 5G Wi-Fi network is not supported and only supports the 2.4GHz wireless network.
- ④ Maybe the MAC address filtering is open. Please turn it off.

If none of the above methods solved the problem, you can open the mobile data network on your phone to create a Wi-Fi hotspot, then add the device again.

2. Blue indicator quickly flashes twice per second, which means your device has connected to Wi-Fi but failed to connect to the server.

Ensure a steady enough network. If double flash occurs frequently, which means you access an unsteady network, not a product problem. If the network is normal, try to turn off the power to restart the switch.

FCC Warning

Changes or modifications not expressly approved by the party responsible for compliance could avoid the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off

and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Hereby, Shenzhen Sonoff Technologies Co., Ltd. declares that the radio equipment type RF Bridge/RF BridgeR2 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: <https://sonoff.tech/usermanuals>

TX Frequency: (WiFi: 2412-2472MHz SRD: 433.92MHz)

RX Frequency: (WiFi: 2412-2472MHz SRD: 433.92MHz)

Output Power: 12.02dBm(802.11b), 11.18dBm(802.11g), 11.14dBm(802.11n20)



Shenzhen Sonoff Technologies Co., Ltd.



1001, BLDG8, Lianhua Industrial Park, shenzhen, GD, China

ZIP code: 518000 Website: sonoff.tech






MADE IN CHINA

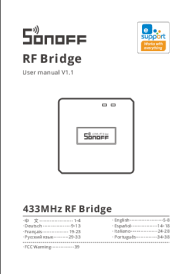



Documents / Resources

	SONOFF 433 RF Bridge [pdf] User Manual 433, RF Bridge, 433 RF Bridge
	SONOFF 433 RF Bridge [pdf] User Manual 433 RF Bridge, 433, RF Bridge, Bridge

References

-  [Alza.sk](https://alza.sk) – rýchly a pohodlný nákup odkiaľkoľvek | alza.sk
-  alza.at
-  alza.co.uk
-  alza.de
-  alza.fr

-  alza.hu
-  alza.sk

[Manuals+](#), [home](#) [privacy](#)