

# How to set up the remote login router web interface

## Contents

- [1 How to set up the remote login router web interface?](#)
- [2 Q1: Can't remote login the router?](#)
  - [2.1 1. The service provider shields the corresponding port;](#)
  - [2.2 2. WAN IP must be the public IP address;](#)
  - [2.3 3. WAN IP address has changed.](#)
- [3 DOWNLOAD](#)
- [4 Related Posts](#)


## How to set up the remote login router web interface?

It is suitable for: **N600R, A800R, A810R, A3100R, A950RG, A3000RU**


**Application introduction:** If you want to manage your router anywhere on the network, you can configure it in real time and securely. The remote WEB management function enables remote management of the router where it is connected to the Internet.

**Take A3000RU as an example:**

**STEP-1:** Login to the TOTOLINK router in your browser;

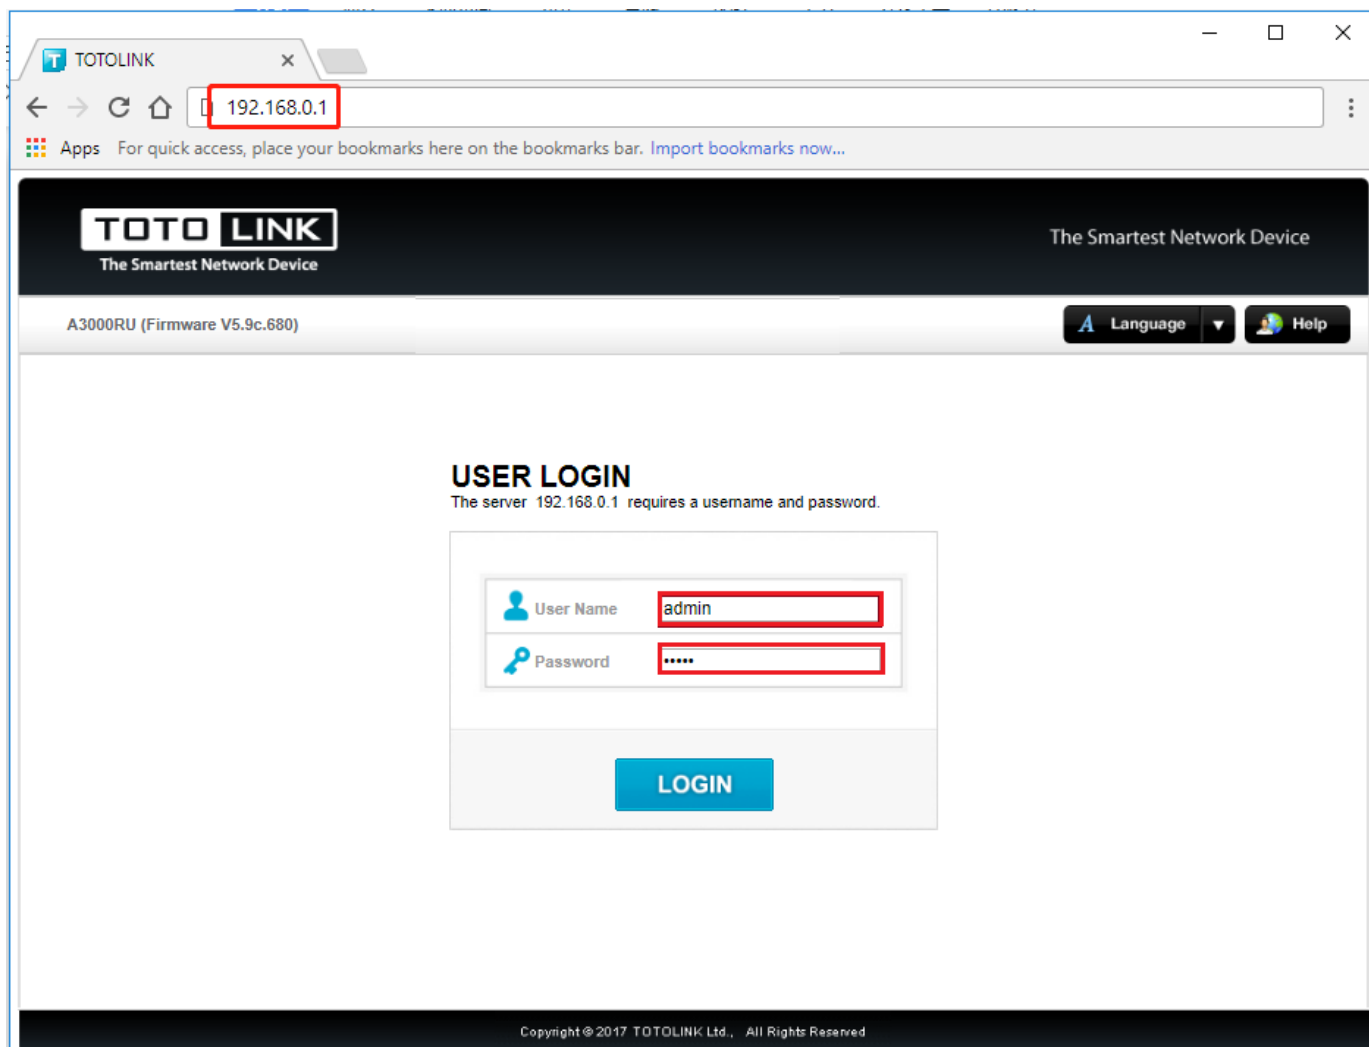

**STEP-2:** In the left menu, click **System Status**, check the WAN IP address and remember.

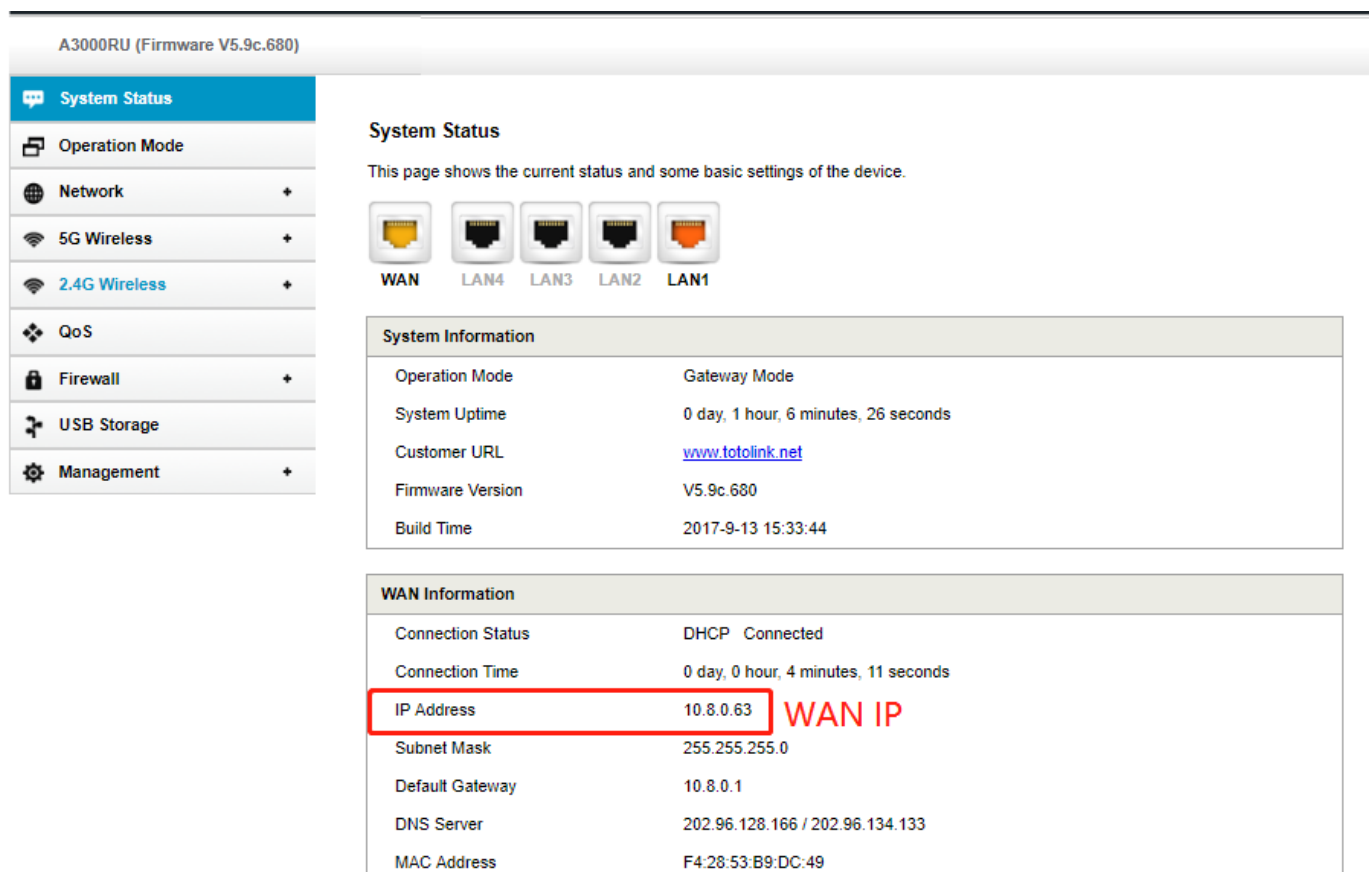

**STEP-3:** In the left menu, click **Management** ->**Management-Remote**. Select Enable, Input the remote port. Then click **Apply**.

A3000RU (Firmware V5.9c.680)

**System Status**

**Operation Mode**

**Network** +

**5G Wireless** +

**2.4G Wireless** +

**QoS**

**Firewall** +

**USB Storage**

**Management** - 1

- Administrator Setting
- Time Setting
- DDNS
- Remote Management** 2
- UPnP
- Upgrade Firmware
- System Configuration
- System Log
- Reboot Schedule
- Wireless Schedule
- Logout

**Remote Management**

This page is used to set Remote Management.

On/Off 3 Enable


Port 4 1024 80-65535

5 Apply

**[Note]:**

The remote WEB management port set by the router is only needed when the external network computer accesses the router. Local area network computer access router is not affected and still uses 192.168.0.1 access.

**STEP-4:** In external network, use WIN IP address + port access, as shown below:

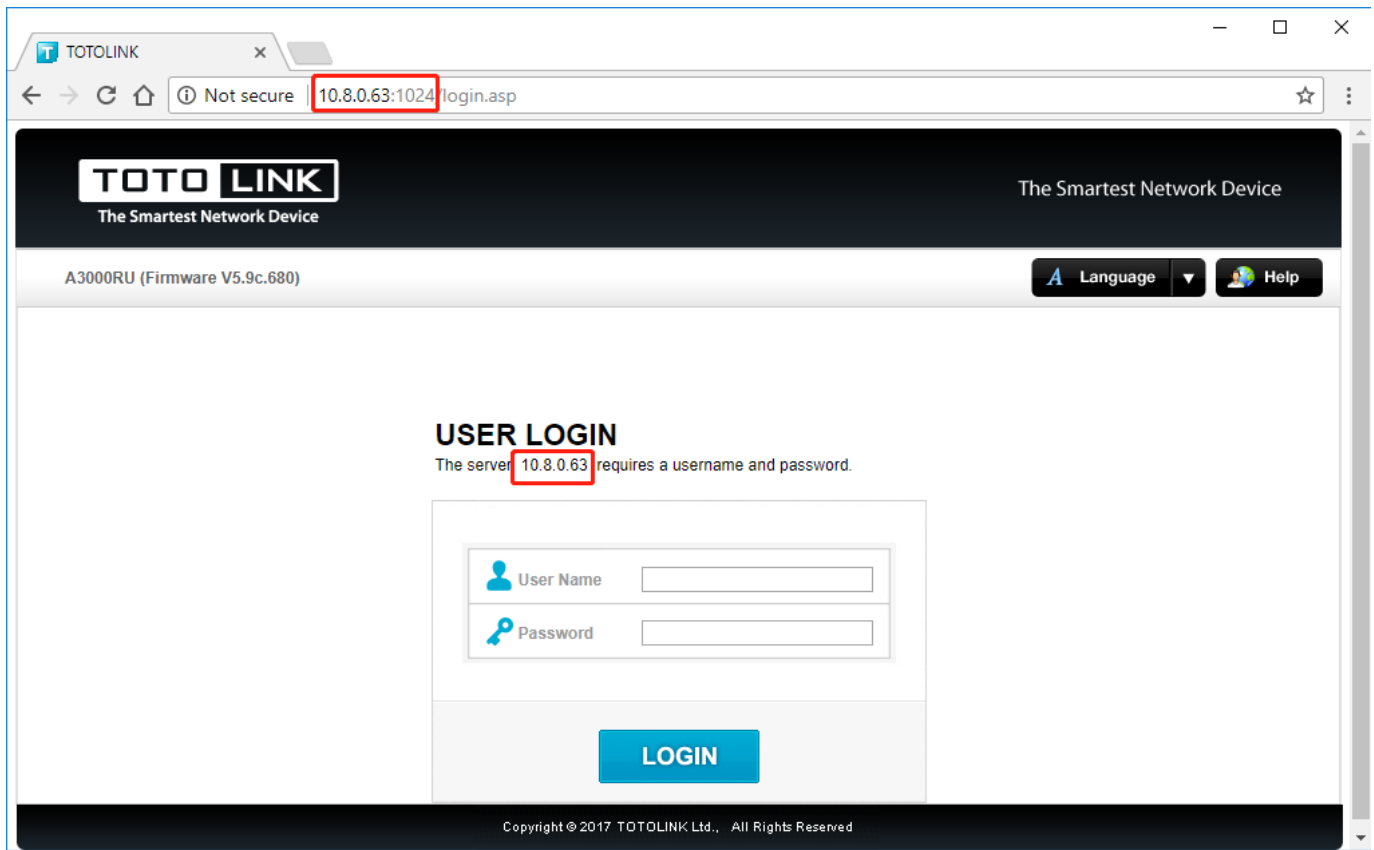

## Q1: Can't remote login the router?

### 1. The service provider shields the corresponding port;

Some broadband service providers may block common ports such as 80, resulting in inaccessibility of the router interface. It is recommended to set the WEB management port to 9000 or higher. The external network user uses the set port to access the router.

### 2. WAN IP must be the public IP address;

The computer in the LAN accesses <http://www.apnic.net>. If the IP address is different from the IP address of the router's WAN port, the IP address of the WAN port is not the public IP address, which prevents the external network user from directly accessing the router interface. It is recommended to contact the broadband service provider to solve the problem.

### 3. WAN IP address has changed.

When the Internet access mode of the WAN port is dynamic IP or PPPoE, the IP address of the WAN port is not fixed. When using the external network access, you need to confirm the IP address of the router WAN port.

---

## DOWNLOAD

How to set up the remote login router web interface – [[Download PDF](#)]

---

---

Manuals+