

WAVES WRC-1 Advanced WIFI Stage Router User Guide

Home » WAVES » WAVES WRC-1 Advanced WIFI Stage Router User Guide 12



Contents

- 1 About WRC-1
- 2 Features and Highlights
- 3 Rack Installation guidelines
- 4 Setting Up WRC-1 for Use With eMotion LV1 and the MyMon App
- 5 To Set up DLNA, go to the rear panel and follow these steps
- 6 Set 5G Wi-Fi Password Using WRC-1 Management Software
- 7 Resetting WRC-1
- 8 Updating WRC-1 Firmware
- 9 Changing Lan Address and DHCP Options
- 10 Documents / Resources
- 11 Related Posts

About WRC-1

WRC-1 is an advanced Wi-Fi router designed specifically with the needs of live sound engineers in mind. It's a perfect match with the Waves MyMon Personal Monitor Mixing app for mobile devices, as well as other remote control mixing apps

Features and Highlights

- · Dual-band gigabit Wi-Fi router
- Standard 19" (1RU) cabinet
- True Diversity transmission, with two antennas for each band (four high-performance antennas supplied)
- Greater range and higher data throughput thanks to advanced MIMO technology
- DLNA player with Balanced XLR outputs. Compatible with IOS, Android, MacOS, Windows, and AirPlay via a WRC-1 WIFI network
- · USB3 HUB with fast charging for mobile devices

WRC-1 REAR PANEL



- 1. LAN ports
- 2. DLNA WAN Port
- 3. DLNA analog outputs
- 4. Reset switch

Rack Installation guidelines

The rack placement and operational environment for the WRC-1 can affect the wireless signal range and coverage.

For best results, follow these guidelines:

- Mount the WRC-1 near the top of the rack and away from any other gear that may use radio waves in the same
 2.4 GHz or 5 GHz range. Note that rack-mount computers or laptops placed directly above the WRC-1 may
 cause wireless interference. The WRC-1 antennas should never be covered in the rack while in operation.
- Avoid interference from other electronic devices. Interference may be caused by nearby appliances such astwo-way radios, copy machines, printers, microwave ovens, and refrigerators.
- Minimize obstacles, especially large steel or metal objects, between the WRC-1 and wireless-connected devices. The WRC-1 should not, for example, be placed in a location where a stage or riser is directly between the unit and the wireless device.

Setting Up WRC-1 for Use With eMotion LV1 and the MyMon App

If you are unfamiliar with setting up or using the MyMon app, please refer to the MyMon user guide.

1. Attach the supplied antennas to the WRC-1 unit. Do not force the connection, as antennas marked 2.4 GHz will

fit only the 2.4 GHz sockets and antennas marked 5 GHz will fit only the 5 GHz sockets.

- 2. Connect the AC cable and power up WRC-1.
- 3. If you want to use DLNA, connect the DLNA WPA Ethernet port (2) to any available LAN port (1) on the back ofthe unit, using a short Cat 5e (or better) cable.
- 4. Connect any available WRC-1 LAN port (1) to the Ethernet port on the host computer. This must be the same port used by the MyMon /LV1 network, not the SoundGrid network. Use Cat 5e (or better) cable.
- 5. Connect your MyMon Mobile device to the WRC-1 5G Wi-Fi network. Out-of-the-box WRC-1 Wi-Fi network is not password protected. You can password protect your network using WRC-1 Management Software.

Important: The LV1 Ethernet port used for the MyMon network must not be the same Ethernet port used by the SoundGrid network. Combining MyMon and SoundGrid Networks on the same LV'1 ethernet port is not supported.

To Set up DLNA, go to the rear panel and follow these steps

- 1. Connect the DLNA WPA Ethernet Port (2) to any available LAN port (1) on the back of the unit, using a short Cat 5e (or better) cable.
- 2. Connect DLNA Audio Outputs (3) to LV1 Analog Inputs using 2 XLR Cables.
- 3. Connect your mobile device to WRC-1 Wi-Fi Network.
- 4. Play audio on your mobile device.
- 5. Open the AirPlay/Bluetooth menu on your mobile device and select DLNA WRC-1 as the playback target device.

Set 5G Wi-Fi Password Using WRC-1 Management Software

- 1. Disconnect the computer that you will use to configure WRC-1 from all connected networks and disable Wi-Fi.
- 2. Connect any available WRC-1 LAN port to a port on the computer, using Cat 5e cable.




- 3. Open a browser and type: 192.168.2.1, followed by Enter.
- 4. When, prompted type admin and click Enter.
- 5. Click the Wi-Fi Setup tab on the left sidebar.
- 6. Click 5G tab on the top left side of the Wi-Fi Setup page.
- 7. Under WPA-PSK select encryption from the menu.
- 8. Enter your 8-character password under 5G Wireless Password and click Save.
- Reboot WRC-1 and connect to a WRC-1-5G Wi-Fi network using your mobile device. When prompted, enter your new Wi-Fi Password.

Resetting WRC-1

RESET USING ROUTER MANAGEMENT SOFTWARE

Repeat steps 1-4 as above, then:

- 5. Click the System Management tab on the left sidebar.
- 6. Click the Restore Settings Tab on the top left side of the System Management page.
- 7. Click Perform Reset next to "Factory Reset" and follow the prompts.

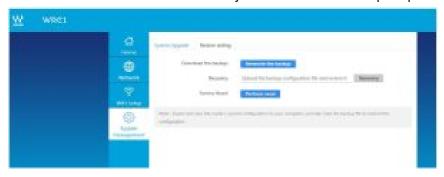

RESET USING THE RESET SWITCH (#4 IN REAR PANEL DIAGRAM)

- 1. Make sure WRC-1 unit is ON.
- 2. Press and Hold the Reset Switch for six seconds.

WRC-1 will restart in "Factory" state.

Updating WRC-1 Firmware

To update WRC-1 firmware, repeat steps 1-4 as above, and then:

- 5. Go to System Management on the left sidebar.
- 6. Click on the System Upgrade Tab
- 7. Click Upload the Upgrade, then browse and select the firmware file.
- 8. Click OK and follow the prompts.



Changing Lan Address and DHCP Options

It is possible to change the router's LAN address and DHCP options. This is done in the Network page under LAN and DHCP tabs.

We are strongly advise that you use default settings, as these settings are compatible with almost all use cases.

Documents / Resources



WAVES WRC-1 Advanced WIFI Stage Router [pdf] User Guide

WRC-1, Advanced WIFI Stage Router, WRC-1 Advanced WIFI Stage Router, WIFI Stage Router, Router

Manuals+,