



aap Touch Screen Keypads Installation Guide

[Home](#) » [AAP](#) » aap Touch Screen Keypads Installation Guide 

Contents

- 1 aap Touch Screen Keypads
- 2 Touch Keypad Installation Guide
 - 2.1 Specifications
 - 2.2 Installation
- 3 Programming Setup
 - 3.1 Adding Custom Images
- 4 Documents / Resources
 - 4.1 References
- 5 Related Posts



aap Touch Screen Keypads



Touch Keypad Installation Guide

Specifications

- Voltage: +10 to +15VDC (from a Battery Backed up PSU)
- Current: 250mA(Normal) 500mA(Max.)
- Maximum Cable Length: 30m (4C2 0.2mm²) 80m (4C5 0.5mm²) 125KHz RFID Prox Reader (Prox model only)
- Dimensions: 140(w) x 96(h) x 14(d)mm
- Screen Resolution: 800 x 480 pixels
- Touch Sensor: Resistive (glove and stylus friendly)
- Supported SD Cards: 1GB AAP Micro SD Card only, Fat32 format (supplied)
- Photo Format: .pic (custom AAP format)

Compatible with:

ESL, Elite-S and Elite-S Lite (V9.00 and above)

ESX (ESX must be v10.0.307 or above)

- A maximum of 2 Touch Keypads should be connected directly to these systems.
- More than 2 Touch Keypads will require a larger/extra power supply.

Installation

Recommended Mounting Height: 1500mm

Only use the supplied screws to fasten the keypad to the wall

Keypad bus termination should only be done with system powered down.

Connector colour code:

- Red = +12VDC (Positive)
- Black = -0VDC (Negative)
- Yellow = Clock
- Blue = Data
- White = Optional Input feature (see Keypad settings to configure)




Field Update:

The Touch keypads can be field updated even by the end user.

Download the latest firmware from www.aap.co.nz/touch and copy it to the SD card.

With the SD card back in the Touch Keypad, go to 'Settings' then 'My Settings' Enter your user code. Then go down and select 'Update Firmware from SD card' Choose the file, then press the Start Button. The keypad will reboot when done.

(depending on the update, you might also need to update the Icons and Tones. Please see update notes)

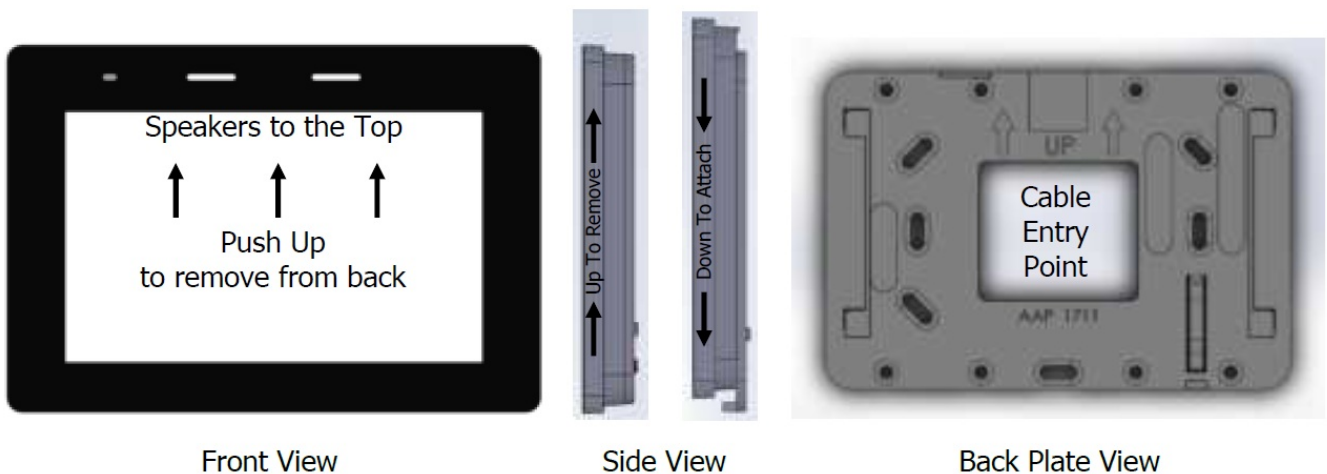

Programming Setup

To use the Output4 button on the home page, you will need to do have the 2 options below on. In Installer Mode:
P 83 E (then KP address) 1-8 E now turn On 4 E.

Then: P 34 E 4 E now turn On 7 E

Adding Custom Images

1. Remove the SD card from the keypad and insert into a computers SD card reader (adapter may be required)
2. Install 'ImageCvt.exe' found on the SD card under software (or download it from the www.aap.co.nz/touch)
3. Open the ImageCvt program
4. Click 'Select Image' then find a photo you wish to add. (photos should be 800×480 pixel or greater)

5. Click 'Save location' now select the SD card drive and name the photo (every photo requires a new name)
6. Click 'Convert' you should get a response at bottom confirming file name Saved
7. Repeat steps 4 to 6 until you have all the photos converted
8. Eject the SD card and insert back in keypad
9. The photos will automatically come up in 'Photo Gallery' mode (on by default)
10. Photo Gallery setup can be adjusted by going to 'Settings' then 'My Settings' there you will find Photo Gallery and Display & Brightness.

Changing the Home Screen Image:

A custom home screen image can be Selected by going to 'Settings' then 'My Settings'
Press the down arrow till you see 'Select Background From SD Card'

Note. If your photo did not appear in the list you may need to:


- Check the photos have been converted to the .pic file using ImageCvt
- Remove and re-insert the SD card into the keypad
- Format the SD card to FAT32 (copy your photos off the SD card first and add back after Formatting)

Home Screen Buttons Customizing:

The Default home screen shows the buttons: ARM, STAY & OUTPUT 4
Go to 'Settings' then 'My Settings' press down till you see:

- 'Home Screen Settings' here you can select Buttons: Arm, Stay, Chime, Keypad, Panics & Areas
- 'Control Buttons on Home Screen' here you can select outputs for control (ESL programming required)

Documents / Resources

	<p>aap Touch Screen Keypads [pdf] Installation Guide Touch Screen Keypads, Screen Keypads, Keypads</p>
---	--

References

- [📄 Intruder Alarm Systems, Security Products | Arrowhead Alarm Products](#)
- [📄 EC-TOUCH W - Keypads - Alarm Systems - Arrowhead Alarm Products](#)