




AES-GLOBAL e-Loop Mini Wireless Vehicle Detection System User Guide

[Home](#) » [AES GLOBAL](#) » AES-GLOBAL e-Loop Mini Wireless Vehicle Detection System User Guide 



Mini

Mini Wireless Vehicle Detection System
User Guide

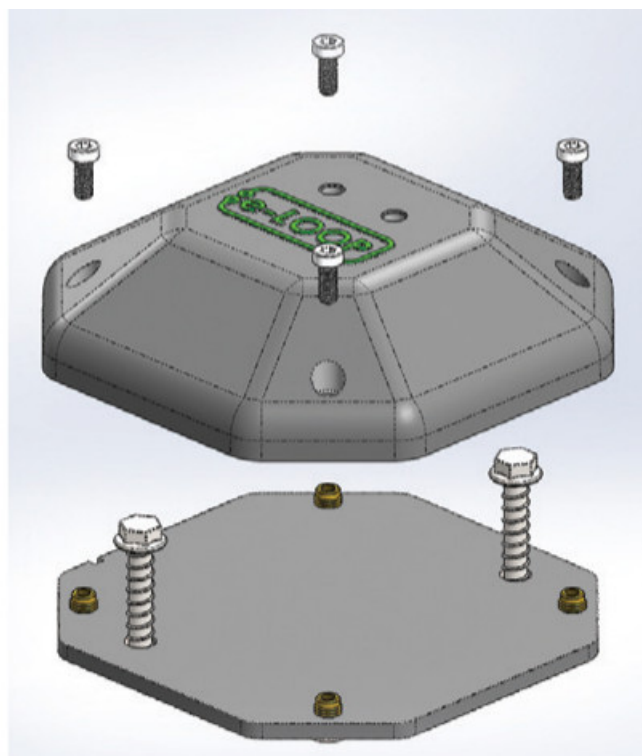

Contents

[1 Specifications](#)

[2 e-LOOP Mini Fitting Instructions](#)

[3 Uncalibrate e-LOOP Mini](#)

[4 Documents / Resources](#)

[5 Related Posts](#)

Specifications

Frequency:	433.39 MHz
Security:	128-bit AES encryption
Range:	up to 50 metres
Battery life:	up to 3 years
Battery type:	Eveready AA Lithium 1.5Vx 2 (not Included)
Important:	Use only AA1.5V Lithium batteries – do not use Alkaline batteries

e-LOOP Mini Fitting Instructions

Before fitting thee-Loop, you will need to fit the 2xAA batteries and screw the bottom plate to thee-Loop using the M3 screws supplied.

Ensure all screws are tight.

Step 1- Coding e-LOOP Mini

1. Press and hold the CODE button on transceiver until the Red LED illuminates, now release button.
2. Press the CODE button on thee-Loop Mini.

The Yellow LED on the e-Loop will flash 3 times to indicate transmission, and the Red LED on the transceiver will flash 3 times to confirm the coding sequence has completed.

Step 2 –Fitting e-LOOP Mini

(Refer to Diagram on the right)

1. Place e-Loop in the desired location and secure base plate into the ground using 2 Dyna bolts (supplied).

NOTE: Never fit near high voltage cables, this can affect the e-Loop's detection capability.

Step 3- Calibrate e-LOOP Mini

1. Move any metal objects away from thee-Loop, including cordless drills.
2. Press and hold the CODE button and the Yellow LED will flash once, keep your finger on the button until the Red LED flashes twice.
3. Now fit thee-Loop to the base plate using the 4x Hex Head bolts.

After 3 minutes, the Red LED will flash a further 3 times.

Thee-Loop is now calibrated and ready to use.

System is now ready.


Uncalibrate e-LOOP Mini

1. Press and hold CODE button and the Yellow LED will flash, keep finger on the CODE button until you see the Red LED flash 4 times.

Now release button and e-Loop is uncalibrated.

sales@aesglobalonline.com
WWW.AESGLOBALONLINE.COM
+44 (0) 288 639 0 693

Documents / Resources

	<p>AES-GLOBAL e-Loop Mini Wireless Vehicle Detection System [pdf] User Guide e-Loop Mini Wireless Vehicle Detection System, e-Loop, Wireless Vehicle Detection System, Vehicle Detection System</p>
---	---

Manuals+.