



BALTECH RFID Card Reader User Manual

[Home](#) » [BALTECH](#) » BALTECH RFID Card Reader User Manual 



Operation Manual RFID Reader

Covered Variants:M/N: 12115-1

Contents

- [1 RFID Card Reader](#)
- [2 Mounting and Connection](#)
- [3 Operation](#)
- [4 Technical Features](#)
- [5 Pinning](#)
- [6 General regulatory requirements for 12115-100](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)
- [8 Related Posts](#)

RFID Card Reader

The “12115-100” Reader/Writer is a desktop contactless smart card USB Smart card reader and writer with the high frequency card technology. It supports Mifare, ISO 14443A/B and ISO 15693 standards transponders. Based on BALTECH’s core technology it provides support of the latest smartcard technologies, encryption and security features.

Mounting and Connection

The reader generates magnetic field at 13.56MHz which could be influenced by any electrically conductive material close to the device.

To ensure good performances and functionalities in terms of read range and reliability a minimum distance of 10cm from such materials is required. Mounting the unit directly to metal would result in a severe reduction of read

range down to zero functionality. Care should be taken when testing the device after mounting at a problematic environment: Read ranges and performance vary from card to card and very much from card to tag or key-fob. When mounting multiple readers, the distance between readers should be minimum 0.5 m in order to avoid degradation of performance due to interference.

To connect the device to a host system (a printer or a PC), please make sure that the system provides an USB socket intended for connection of the reader.

Operation

Whenever the device is connected to a proper power supply, it will switch on the internal antenna and periodically scan for a card. Once a card has been detected, the card number is read, the data converted and sent to the host system through the USB Interface. To enable the device to read cards, tags and key-fobs successfully, they should be placed centred above the reader. The device is used for identification, access control.

Technical Features

Operating Frequency	• 13.56MHz
Data transmission modulation reader to card:	ASK
Data transmission modulation card to reader:	AM/Load modulation
Interfaces	USB: Full speed 2.0
Contactless Card	Supported standards: ISO14443 A & B, ISO15693, Communication speed ISO14443A/B: Baud rate up to 424kBaude
Operating Range	<ul style="list-style-type: none"> • ISO14443A/B: up to 5cm • ISO15693: up to 8cm
Human	Red, Green, Blue LEDs & Buzzer
Supply Power [V _{DC}]	+5V (±5%)
Power Consumption [W]	Up to 1.5 / 1 typ.
Operating Temperature [°C]	-20 to +65
Operating Humidity [%]	20 to 80 relative humidity; non-condensing
Non-Operating Humidity [%]	10 to 90 relative humidity; non-condensing
Antennas	• 13.56MHz integrates PCB loop antenna
Duty cycle for normal use operation [6 minutes timewindow]	<p>Use 1 time within 6 minutes. An interaction with the user is 10 seconds in the vicinity to the device.</p> <ul style="list-style-type: none"> • Duty Cycle = (1 x 10s)/ 6 min = 2,78 %

Pinning

The reader supports USB host interface.

USB Interface Molex Header (4 pins)

Molex Part Number: 53261-0471

Pin#	Name	Type	Description
1	PWR	Power	5V Power Supply
2	D-	Data	USB-Data inverted
3	D+	Data	USB-Data
4	GND	Power	Signal and Power Ground

General regulatory requirements for 12115-100

FCC ID: OKY12115100A01A

IC : 7657A-12115100

PMN : RF1060R

NOTICE:

This device complies with Part 15 of the FCC Rules and with Industry Canada licence-exempt RSS standard(s).

Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications made to this equipment not expressly approved by BALTECH AG may void the FCC authorization to operate this equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



BALTECH AG

Lilienthalstraße 27

85399 Hallbergmoos

Germany

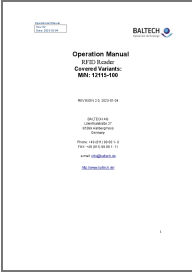
Phone: +49 (811) 99 88 1- 0

FAX: +49 (811) 99 88 1- 11

e-mail: info@baltech.de

<http://www.baltech.de/>

Documents / Resources

	<p>BALTECH RFID Card Reader [pdf] User Manual 12115100A01A, OKY12115100A01A, RFID Card Reader, Card Reader, RFID Reader, Reader</p>
--	---

References

-  [Baltech AG | Balanced Technology](#)