



BAPI BA-WTH-BLE-D-BB-BAT Wireless Duct Temperature Sensor Installation Guide

[Home](#) » [BAPI](#) » BAPI BA-WTH-BLE-D-BB-BAT Wireless Duct Temperature Sensor Installation Guide 

Contents

- 1 BAPI BA-WTH-BLE-D-BB-BAT Wireless Duct Temperature Sensor
- 2 Overview and Identification
- 3 Associated Receiver or Gateway
- 4 Adjustable Settings
- 5 Initial Activation
- 6 Mounting
- 7 Operation
- 8 Wireless Sensor Reset
- 9 Onboard Memory
- 10 Battery Replacement
- 11 Diagnostics
- 12 Specifications
- 13 Documents / Resources
 - 13.1 References
- 14 Related Posts



BAPI BA-WTH-BLE-D-BB-BAT Wireless Duct Temperature Sensor

**Specifications:**

- Product Name: Wireless Duct Temperature Sensor
- Model Number: 49799_Wireless_BLE_Duct_Temp
- User adjustable settings via receiver or WAM
- Onboard memory to store readings when communication is interrupted
- Transmits to a digital Gateway or a wireless-to-analog Receiver

Installation & Operations:**Initial Activation:****Battery Power Units:**

1. The unit comes with two pre-installed batteries. To activate the unit, open the cover to access the batteries.
2. Find the battery tab insulators and pull them out.
3. Press the Service button and the Service LED should flash once to confirm power.

Wire Power Units:

1. To activate the unit, open the cover to access the circuit board and apply the 9 to 30 VDC or 24 VAC to the power terminals as shown.
2. Press the Service button and the Service LED should flash once to confirm power.

Mounting:

1. Place the sensor in the middle of the duct away from temperature stratified air, coils, or humidifiers to achieve the best temperature reading.
2. Drill the probe hole as shown in Fig 3. Use the enclosure tabs to mark the pilot hole locations and drill the 1/8 (3.2mm) pilot holes. Mount the enclosure to the duct using the provided mounting screws.
3. Tighten the screws until the foam backing is depressed slightly to prevent air leakage.

Operation:

Power the unit as described in Initial Activation section. Follow the gateway or receiver instructions for pairing the unit and changing the adjustable settings. (The instructions are available on the BAPI website.)

FAQ:

- **Q: How many sensors does the receiver support?**

A: The receiver supports up to 32 sensors and up to 127 different analog output modules.

- **Q: How many sensors does the gateway support?**

A: The gateway supports up to 32 sensors.

Overview and Identification

- User adjustable settings via receiver or WAM
- Onboard memory to store readings when communication is interrupted
- Transmits to a digital Gateway or a wireless-to-analog Receiver



Duct Temperature Sensor

BAPI's Duct Wireless Sensor measures the temperature and transmits the data via Bluetooth Low Energy to a receiver or gateway. This unit features a rugged IP66-rated BAPI-Box enclosure and ¼" (6.4mm) stainless steel probe with standard probe lengths from 4" to 18" (102 to 457mm).

Associated Receiver or Gateway

RECEIVER (Wireless-to-Analog)

The wireless receiver from BAPI receives the data from one or more wireless sensors. The data is then transferred to the analog output modules and converted to an analog voltage or resistance. The receiver supports up to 32 sensors and up to 127 different analog output modules.



GATEWAY

The wireless gateway receives the data from one or more wireless sensors. The gateway then provides the data to the cloud via MQTT. The gateway also sends a confirmation signal to each sensor upon a successful reception of data. The gateway supports up to 32 sensors.



See BAPI's gateway instructions on the BAPI website (www.bapihvac.com/wp-content/uploads/50387_Wireless_BLE_Gateway.pdf) to establish communication between the sensors and gateway or the receiver instructions (www.bapihvac.com/wp-content/uploads/50335_Wireless_BLE_Receiver_AOM.pdf) to establish communication between the sensors and receiver.

Adjustable Settings

BAPI's wireless sensors have several settings that can be field adjusted to suit the needs of the installation. All settings are configured by either BAPI's cloud-based Wireless Asset Monitoring (WAM) or the receiver. (See the WAM or receiver instructions documents on the BAPI website for more information on adjusting the settings.)

- **Sample Rate/Interval** – The time between when the sensor wakes up and takes a reading. The available values are 1 min or 5 min with the gateway, or 30 sec, 1 min, 3 min or 5 min with the receiver.
- **Transmit Rate/Interval** – The time between when the sensor transmits the readings to the gateway or receiver. The available values are 1, 2, 3, 4, 5, 10, 15, 20 or 30 minutes, or 1, 6 or 12 hours with the gateway or 1, 5, 10 or 30 minutes with the receiver.
- **Delta Δ Temperature** – The change in temperature between a sample and the last transmission that will cause the sensor to override the transmit interval and immediately transmit the changed temperature. The available values are 0.1, 0.2, 0.3, 0.4, 0.5, 1, 2, 3, 4, 5 °F or °C with the gateway, and 1 or 3 °F or °C with the receiver.
- **Temperature Min/Max** – The maximum or minimum temperature that will cause the sensor to override the transmit interval and immediately transmit a reading to the gateway. (Only available when using a gateway.)
- **Temperature Offset** – Adjusts the temperature value being transmitted to match that of a calibrated reference device. The available values are ± 0.1 , 0.2, 0.5, 1, 2, 3, 4 or 5 °F or °C. (Only available when using a gateway.)

Initial Activation

Battery Power Units

The unit comes with two pre-installed batteries. To activate the unit, open the cover to access the batteries. Find the battery tab insulators and pull them out. Press the Service button and the Service LED should flash once to confirm power.

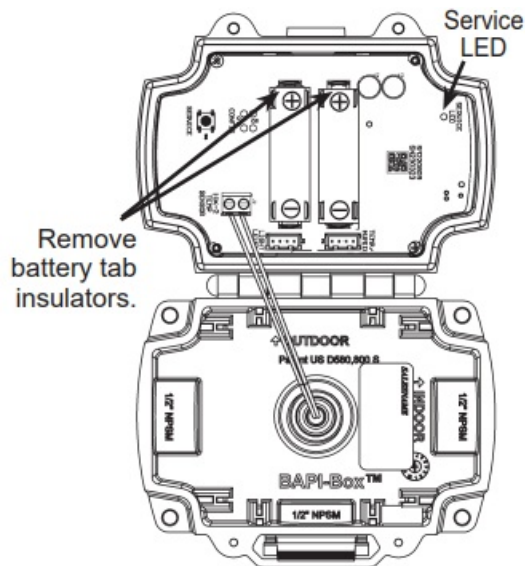


Fig. 1: Battery Power Unit

Wire Power Units

To activate the unit, open the cover to access the circuit board and apply the 9 to 30 VDC or 24 VAC to the power terminals as shown. Press the Service button and the Service LED should flash once to confirm power.


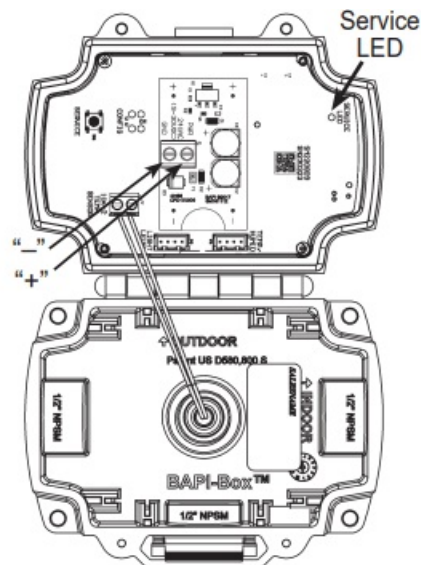


Fig. 2: Wire Power Unit

Mounting

1. Place the sensor in the middle of the duct away from temperature stratified air, coils or humidifiers to achieve the best temperature reading.
2. Drill the probe hole as shown in Fig 3. Use the enclosure tabs to mark the pilot hole locations and drill the 1/8" (3.2mm) pilot holes. Mount the enclosure to the duct using the provided mounting screws.
3. Tighten the screws until the foam backing is depressed slightly to prevent air leakage.

**Fig. 3: Duct
Sensor
Mounting**

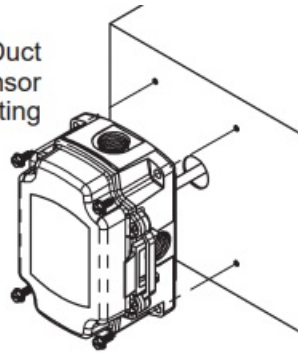

Note:


Do not drill into the enclosure which will violate the NEMA and IP rating.

Operation

Power the unit as described in “Initial Activation” section. Follow the gateway or receiver instructions for pairing the unit and changing the adjustable settings. (The instructions are available on the BAPI website.)


Pressing the
“Service”
button on the
circuit board
will force a
transmission.

**Fig. 4:
Battery
Power Unit**

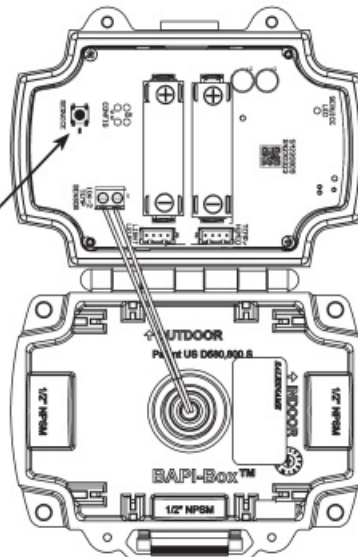

Pressing the
“Service”
button on the
circuit board
will force a
transmission.

**Fig. 5:
Wire Power
Unit**

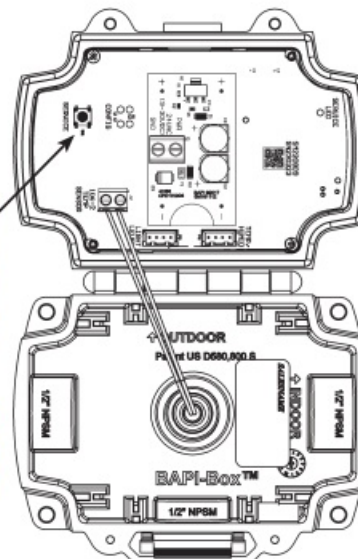

Wireless Sensor Reset

Sensors remain paired to the gateway or receiver and output modules when power is interrupted or the batteries are removed. To break the bonds between them, the sensors need to be reset. To do this, press and hold the “Service Button” on the sensor for about 30 seconds. During those 30 seconds, the green LED will be off for about 5 seconds, then flash slowly, then begin flashing rapidly. When the rapid flashing stops, the reset is complete. The sensor can now be paired to a new receiver or gateway. To re-pair to the same receiver or gateway, you must reset the receiver or gateway. Output modules that were previously paired to the sensor do not need to be re-paired.

Onboard Memory

Sensor retains up to 16,000 readings should the communication become interrupted. The sensor only stores readings from missed transmissions and only when the sensor is paired to a gateway. Once communication is re-established with the gateway, the stored readings are transmitted and then erased from the sensor. The current reading and nine previous readings are sent at each transmit interval until the sensor is caught up. Temporarily shortening the transmit interval will allow the sensor to more quickly clear any stored readings.


Battery Replacement

Open the cover to access the batteries (Fig 6).

Remove the batteries from their holders and discard in an environmentally safe manner. Replace with new batteries in the correct orientation.

Battery Specifications:

Two 3.6V Lithium batteries: (#14505, 14500 or equivalent)

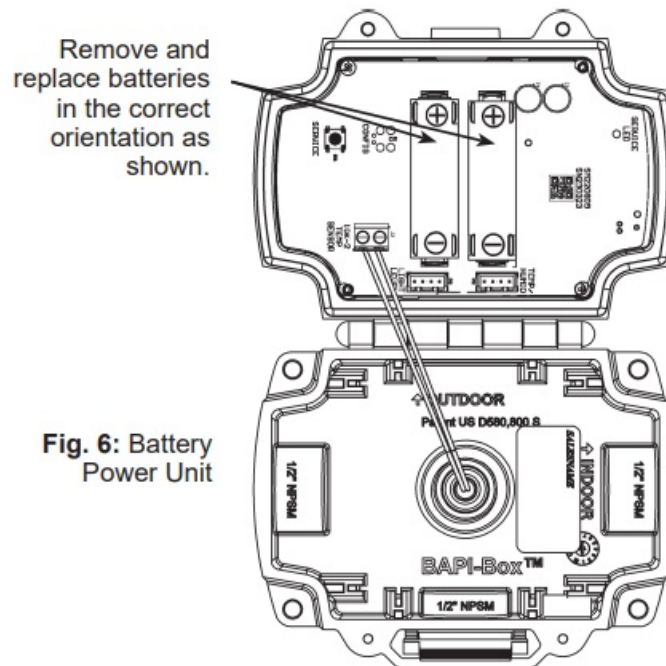

Diagnostics

Possible Problems:

Sensor is not communicating with the gateway or receiver, or the transmitted values are incorrect.

Possible Solutions:

Make sure the sensor is within range of the gateway or receiver. Verify that the green LED on the sensor circuit board flashes when the “Service” button is pressed, indicating a transmission. If it does not flash, replace the batteries. Verify that the sensor is properly paired to the gateway or receiver and analog output modules as described in the gateway or receiver instructions available on the BAPI website. Repair them if needed. If

necessary, perform the "Wireless Sensor Reset" procedure as described above.


Specifications


- **Battery Power:** Two included 3.6V 14505, 14500 or equiv. lithium batteries (Standard AA batteries are not compatible)
- **Wire Power:** 9 to 30 VDC or 24 VAC, halfwave rectified
- **Temperature Sensor Accuracy:** $\pm 1.0^{\circ}\text{F}$ (0.55°C) from 32 to 158°F (0 to 70°C)
- **Temperature Range:** -4 to 221°F (-20 to 105°C)
- **Transmission Distance:** Varies by application*

Environmental Operation Range:

- **Temp:** -4 to 149°F (-20 to 65°C)
- **Humidity:** 10 to 90%RH, non-condensing
- **Enclosure Rating and Material:** IP66, UV-Resistant Polycarbonate, UL94 V-0
- **Frequency:** 2.4 GHz (Bluetooth Low Energy)
- **Receiver Sensitivity:** -97 dBm

User Adjustable Settings:

- **Delta T (Temp):** 0.1°F/C to 5.0°F/C
- **Transmit Interval:** 30 sec to 12 hour***
- **Sample Interval:** 30 sec to 5 min***
- **Temp Offset:** $\pm 0.1^{\circ}\text{F/C}$ to $\pm 3.0^{\circ}\text{F/C}$
- **Onboard Memory:** Sensor retains up to 16,000 readings should the communication become interrupted. If using a Gateway, the data is re-transmitted once communication is re-established.
- **Agency:** RoHS / FCC: T4FSM220809  / IC: 9067A-SM220809

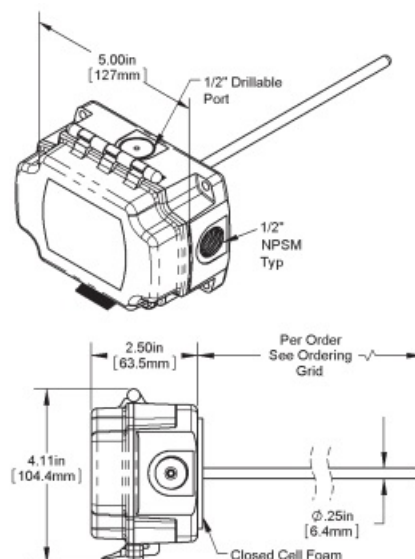

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
 2. This device must accept any interference received, including interference that may cause undesirable operation. Any changes or modifications not expressly approved by BAPI could void the user's authority to operate the equipment.
- This device complies with Industry Canada (IC) license-exempt RSS standard(s). Operation is subject to the following two conditions.
 - This device may not cause interference.
 - This device must accept any interference, including interference that may cause undesired operation of the device.
 - In-building range is dependent on obstructions such as furniture and walls and the density of those materials. In wide open spaces, the distance may be greater; in dense spaces, the distance may be less.
 - Actual battery life is dependent on the sensor's adjustable settings and environmental conditions.
 - The available transmit intervals and sample intervals are different depending on whether the system is using a gateway or a receiver.


Specifications subject to change without notice.

BAPI-Box Units Calculated Battery Life**		
Transmit Interval	Sample Rate	Estimated Life (years)
30 sec	30 sec	1.04
1 min	1 min	1.95
3 min	1 min	3.46
5 min	5 min	4.63
10 min	5 min	7.02

Building Automation Products, Inc., 750 North Royal Avenue, Gays Mills, WI 54631 USA

- Tel:+1-[608-735-4800](tel:608-735-4800)
- Fax+1-[608-735-4804](tel:608-735-4804)
- E-mail:sales@bapihvac.com
- Web:www.bapihvac.com

Documents / Resources

	<p>BAPI BA-WTH-BLE-D-BB-BAT Wireless Duct Temperature Sensor [pdf] Installation Guide BA-WTH-BLE-D-BB-BAT Wireless Duct Temperature Sensor, BA-WTH-BLE-D-BB-BAT, Wireless Duct Temperature Sensor, Duct Temperature Sensor, Temperature Sensor, Sensor</p>
-------------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

References

- bapihvac.com/wp-content/
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.