



BASstat BAST-221CH-B2 TP Thermostat with Humidity Reading Installation Guide

[Home](#) » [BASstat](#) » BASstat BAST-221CH-B2 TP Thermostat with Humidity Reading Installation Guide 

BASstat

Contents

- [1 BASstat BAST-221CH-B2 TP Thermostat with Humidity Reading Installation Guide](#)
- [2 Electrical \(Class 2 Circuits Only\)](#)
- [3 Installation](#)
- [4 Mechanical Drawing](#)
- [5 Operation Overview](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)

BASstat BAST-221CH-B2 TP Thermostat with Humidity Reading Installation Guide



BAST-221CH-B2

The BASstat series of BACnet-compliant wired communicating thermostats are BTL listed to ensure effortless integration into BACnet MS/TP (EIA-485) networks. These thermostats are suited for single or multi-stage heating, cooling and ventilation binary output control applications such as RTU or AHU. Configurable control algorithm parameters allow adaptability to the specific application. Adaptive control algorithm applied to multi-stage on/off control saves energy and ensures seamless comfort for the occupants. Built-in temperature sensor, input for remote temperature sensor, or temperature override network command from Building Automation System. Occupancy status can be set from thermostat buttons or over the BACnet network. Thermostat buttons are optionally lockable to prevent unauthorized control. Digital display with graphical icons is easy to read and understand. Several icons indicate parameters such as: Active Mode, Cooling stage 1 or 2, Heating stage 1 or 2, Ventilation Only, Fan Active, Occupied / Unoccupied state, and Clock icon to indicate Short Cycle Delay or Max Cycles per hour active waiting state. Four main control types are available: Cooling and Heating with Auto-changeover, Cooling or Heating with Manual-changeover, Cooling only, and Heating only. These control types are selectable from Engineering Menu (tyPE) or BACnet object MSV8.

Electrical (Class 2 Circuits Only)

- INPUT AC only
- **Voltage ($\pm 10\%$):** 24 VAC
- **Power:** 5 VA
- **Frequency:** 47-63 Hz
- **Environmental**
- **Operating temperature:** 0°C to 60°C
- **Storage temperature:** -40°C to +85°C
- **Relative humidity:** 10–95%, non-condensing
- Functional MS/TP
- **Physical Layer:** EIA-485
- **Cable length limit:** 4000 ft / 1200 m @76800 bps max
- **MS/TP data rate (bps):** 9600 – 76800 bps
- **MS/TP node limit:** 32 full-load devices max per segment

Installation

The BASstat requires 24 VAC while drawing no more than 5 VA of power. The recommended conductor size is 16–18 AWG or up to 2x 1.5mm wires.

WARNING: Internally, this device utilizes a half-wave rectifier and therefore can only share the same AC power source with other half-wave rectified devices. Sharing AC power with full-wave rectified devices is NOT recommended. Devices powered from a common AC source could be damaged if a mix of half-wave and full-wave rectified devices exists.

The BASstat does not provide End-of-Line termination. If the BASstat is the first or last device on the MS/TP bus, a termination resistor (120Ω) must be applied across pins 16 and 17 of the EIA-485 input terminal to avoid network errors or failure.

BASstat mounts directly onto wall, panel, standard 65×65mm junction box (hole pitch 60 mm) or standard 2×4 inch vertical junction box (hole pitch 83.5 mm). To mount on electric box, separate back plate from the controller by loosening the screw. Align the mounting holes of the back plate to the screw holes of the electric box. Fix the back plate to the electric box using screws. Suggested screws for use are Phillips wide “truss head” or “washer head” screws #6-32 x ¾” (20mm). Wire the controller and mount on top of back plate. Secure by tightening the mount screw at the bottom.


WARNING: DO NOT let the back-mount screw heads rise above the back plate or it may touch the circuit board and cause a short.

BACnet MS/TP configuration requires setting the baud rate (9.6kbps – 76.8kbps) or using the default baud rate of 38.4kbps. A unique MS/TP MAC address is required to distinguish each thermostat from other MS/TP devices on the bus (default MAC address is 1).


When more than one BASstat is installed at the same time on the same EIA-485 bus, their MAC addresses must be configured prior to communicating with all thermostats on the MS/TP bus, or communication will fail due to duplicate MAC addresses. The MAC address can be set from Engineering Menu item (Addr) with values of 1 – 127. The baud rate can be set from menu item (bAud) 9.6kbps – 76.8kbps. A unique Device Instance number throughout the entire BACnet internetwork is also required to distinguish the device from all other BACnet devices. Device instance can be modified in Engineering Menu items (dEVH) – high bytes and (dEVL) – low bytes; Device Instance = (dEVH)*1000+(dEVL). Max masters setting can be set from menu item (AdrH), default value is 127.

To enter the Engineering Menu, hold down the UP and DOWN buttons simultaneously for 5 seconds. Use the UP and DOWN buttons to navigate through the menu and change menu item values. Use the MODE button to enter a menu item and accept/confirm a selected value. To exit the Engineering Menu, navigate to menu item (End) and press MODE, or the menu will exit automatically when not used.

Mechanical Drawing

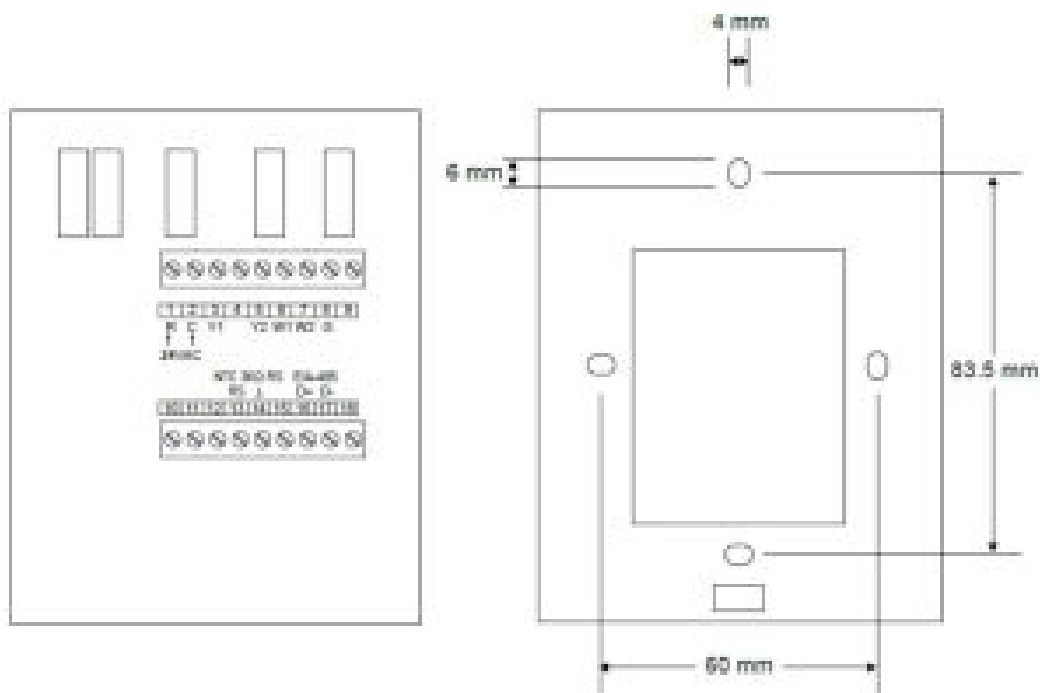

Operation Overview

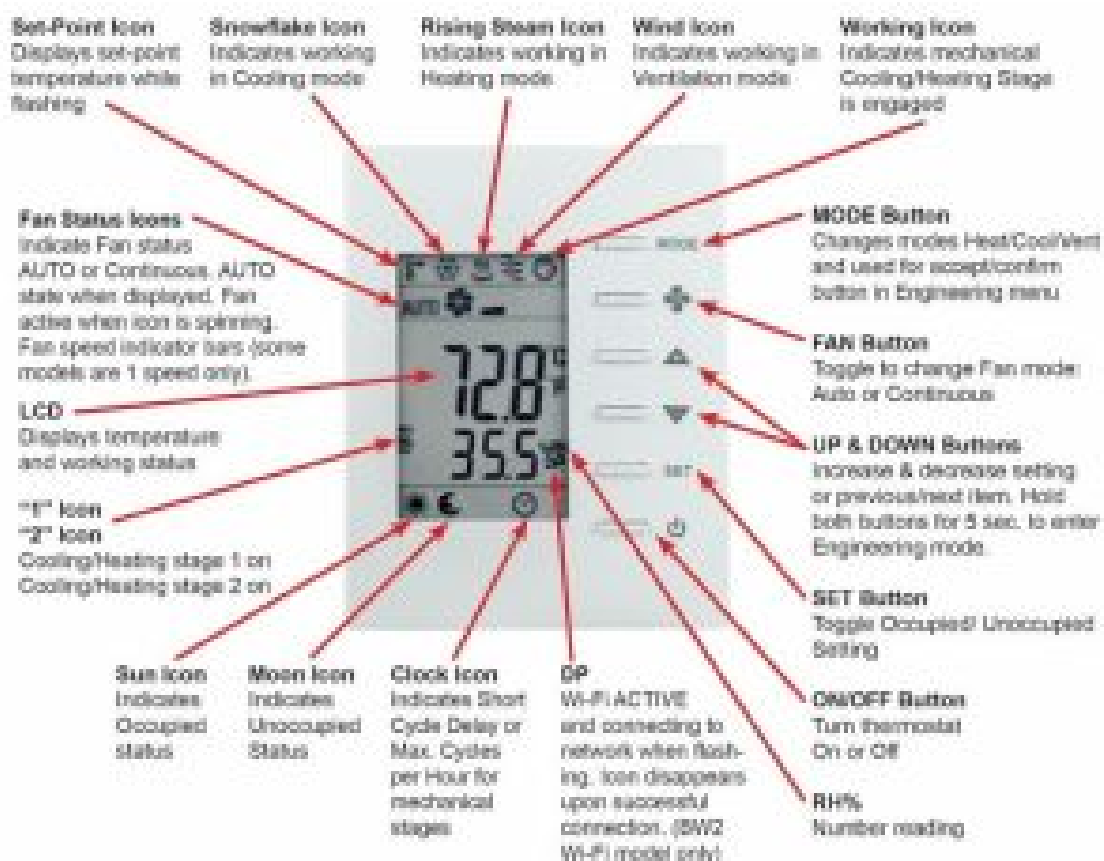

The BASstat has a built-in space temperature sensor with provision for remote wired 3k Ω NTC thermistor sensor or temperature value can be sent by another device over the BACnet network.

The default control type is Cooling and Heating with Auto-changeover. Two main control types are available: Cooling and Heating with Auto-changeover or Cooling and Heating with Manual-changeover. These control types are selectable from Engineering Menu (tyPE) or BACnet object MSV8.

User-side comfort control is accomplished with six buttons – mode (Heat, Cool, or Ventilation – dependent on control type chosen from Engineering Menu (tyPE) or BACnet object MSV8), fan, raise, lower, set, and power. There are also options to lock select buttons or all buttons on the thermostat. A large LCD display indicates setpoint, space temperature and current mode of operation using graphical icons.

By default, the BASstat thermostat will not provide Fan output signal when in Heat Mode since most HVAC comfort systems provide their own Fan control signal based on a delay after a call for heating. This can be configured from Engineering Menu item (F-Ht) or BACnet object BV15 with a default value of 0. To enable Fan control signal output for heating, set this value to 1.

Reset settings can be performed from Engineering Menu item (rSt) which will reset all parameters including communication (MAC and BACnet Device Instance) and all control algorithm values back to factory-programmed defaults.

For complete datasheet and details on BASstat, support, or compliance information, please download our BASstat User Manual and Data Sheet at: <https://www.ccontrols.com/basautomation/basstat.php> Free BACnet Discovery Tool for configuration: <https://www.ccontrols.com/sd/bdt.htm>

Contemporary Control Systems, Inc. reserves the right to make changes in the specifications of the product described within this manual at any time without notice and without obligation of Contemporary Control Systems, Inc. to notify any person of such revision or change.

Read More About This Manual & Download PDF:

Documents / Resources

	BASstat BAST-221CH-B2 TP Thermostat with Humidity Reading [pdf] Installation Guide BAST-221CH-B2, TP Thermostat with Humidity Reading
---	---