

BeingHD Touch Manager Modular Matrix Switcher User Manual

Home » BeingHD » BeingHD Touch Manager Modular Matrix Switcher User Manual

Contents [hide

- 1 BeingHD Touch Manager Modular Matrix
- Switcher
- 2 SAFETY
- **3 Product Introduction**
- **4 Product Features**
- **5 Technical Datasheet**
- **6 Packing Details**
- 7 Panels(Here take example with 10×10)
 - 7.1 Back Panel
- **8 Connection Diagram**
- 9 Operation
 - 9.1 Touch Screen
 - 9.2 WEB control
 - 9.3 Setup
 - 9.4 APP Control
 - 9.5 Central Control Commands
- 10 Trouble Shooting and Attention
- 11 After Sales
- 12 Documents / Resources
- **13 Related Posts**





SAFETY

To protect the device and operating personnel from electrostatic discharge, you need to check and ensure that the device is grounding well before the device is powered on. Please observe the following when you install, use, maintain this equipment.

Attention the equipment needs good earth grounded

- Please use single-phase three wire system AC 220V power supply, and ensure all transmission system is grounding well.
- To protect operating personnel and the device please turn off all power supplies and pull the plug before moving the device or doing some specific works which need to be done when the electricity is turned off. Please turn off the main power switch on rainy days or when not in use for a long time.
- Please do not put anything upon the cables, or tread the cables.
- To avoid damaging the device, please turn off power supply before plugging cable into the device or pulling cable from device. The damage caused by plugging/ pulling cables without turning off power supply is outside the scope of the warranty.
- The power of the device gives out heat when it works, so it's necessary to keep the work environment ventilated to protect the device from the damage caused by over temperature.
- Do not place the device in very cold or very hot places. Do not sprinkle any corrosive chemicals or liquid on or around the device.
- To avoid accident or any further damage ,non-professionals please do not dismantle or maintain the device without permission.

Product Introduction

The TOUCH MANAGER modular matrix switcher series include two:

TOUCH-MANAGER-800(80×80) and TOUCH-MANAGER-1600(160×160). All the signal input and output cards using 1-card 4-port, wide range selections of the input and output cards, it provides users the most flexible configuration ability to meet with the real applications. And the 1080P and 4K60 I/O cards can reach any switching, converting, extension, resolution adjustment. Supports seamless or fast switching function, electromagnetic protection function, it can efficiently shield the electromagnetic interference for the surrounding environment to make sure the equipment running more stable.

The single channel signal switching speed can reach 12.5Gbps, and the main board is using Four core four links processing technology, the switching ability speed can reach 32Gbps. With uncompressed transmission technology for the digital signal to make sure the image High fidelity output. Unique signal links shielding designing technology to make sure the signal completeness, the internal data switch has super strong capacity of resisting disturbance and long continuous and stable working ability. Supports 7*24 continuously working and with dual LAN and RS232 backup control, it's convenient for users to control via PC, iPad, APP and the 3rd parties central control by the the RS232 control commands.

With the dual RS232 and LAN control, users also can simply set up and control the surrounding equipment, such as the projector, electric curtain and TVs.

This matrix switchers have been widely used in the conferencing, radio & television project, multimedia conferencing hall, large screen display project, television teaching, command control center and so on applications.

Product Features

- Modular designing chassis
- 4-channel 1 card, supports DVI-I/ HDMI/ 3GSDI/ HDBaseT/ Fiber to mix input and output
- Support seamless switching between all the signals
- 4-core 4 links processing chipset provides up to 32GBPS signal switching processing ability
- Front buttons with background lights, easier to operate at any time
- Support EDID automatic recognition and compatible with HDCP
- Support 3.5mm audio embedded and de-embedd function
- Support 4K60, HDMI2.0 444 digital HD video signal transmission and seamless switching
- Support 3D image frequency repairing, pixel reread processing function
- Support scaling up/down function via the DIP switch
- Support dual LAN ports backup control and centralization network management function
- · Support hot-plug function
- Support auto saving protection and auto recovery function while power cut

Technical Datasheet

Model	TOUCH-MANAGER-800
Description	80×80 Modular Matrix Switch
Input card	1 card 4- port, Support HDMI/ DVI/ 3GSDI/ HDBaseT/ Fiber
Output card	1 card 4-port, Support HDMI/ DVI/ 3GSDI/ HDBaseT/ Fiber

Protocol	HDMI1.4a/ HDMI2.0, DVI1.0, compatible with HDCP and EDID function
Color Space	RGB444, YUV444, YUV422, support x.v. Color extension color gamut standard
Resolution	640×480—1920×1200@60Hz(VESA), 480i—4K30Hz(HDTV), 4K60Hz
Bandwidth	12.5Gbps
Transmission Distance	70/100m(Cat6), 80Km(Single-mode), 20m(Digital cable), 25m(Analog cable)
Control	Dual RS232, dual LAN(WEB GUI), front touch panel, iPad APP
Dimension	482*390*711mm(16U)
Weight	28KG(No cards)
Power	110–260V 50/60Hz
Consumption	180W(No cards)
Working Temperature	-10°C-50°C
Storage Temperature	-20°C-55°C
Working Humidity	10%-90%

Packing Details


Matrix switch chassis with customized

configuration 1 unit

Power cord pcs2

User manual pcs 1

Panels(Here take example with 10×10)

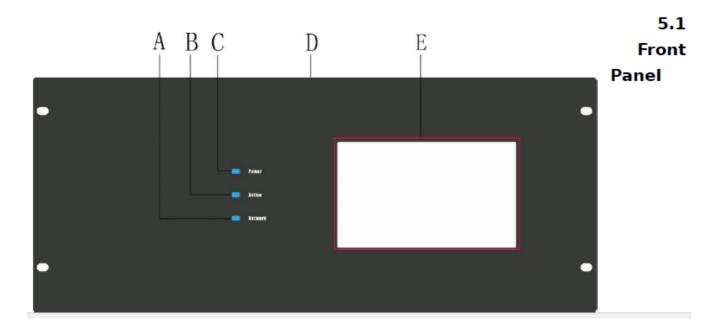

A: Network Indicator: Shows the operations of WEB control, flicking once for every operations


B: Active Indicator: Shows the operations of Touch panel control, flicking once for every operations

C: Power Indicator: Light up means power on, flicking means connection problem

D: Front Panel: 482*711mm

E: 10 inch touch screen

Back Panel

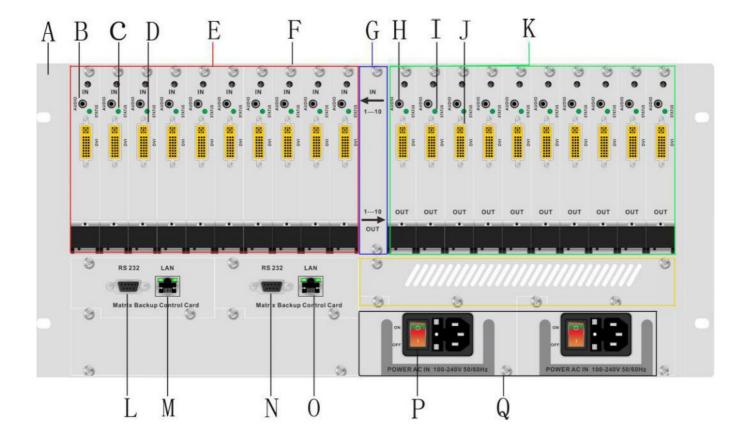

A: Back rack ear

B: 3.5mm Audio input

C: Status indicator: Power on will light up

D: DVI-I interface input, support DVI/ HDMI/ CVBS/ Ypbpr/ VGA input with adapters

E: Input area, maximum can support 80/160inputs, signals can be DVI/ HDMI/ CVBS/ Ypbpr/ VGA/ Fiber Optic

F: Plug helper

G: Input and output indicates flap, left side is 1-80 inputs, right side is 1-80outputs

H: 3.5mm Audio output


J: DVI-I interface output, support DVI/ HDMI/ CVBS/ Ypbpr/ VGA input with adapters

K: Output area, maximum can support 80/ 160 inputs, signals can be DVI/ HDMI/ CVBS/ Ypbpr/ VGA/ Fiber Optic

L & N: Dual RS232 ports
M & O: Dual LAN ports
P: ON/ OFF power switcher

Q: Redundant power system, 100-240V 50/60Hz

Connection Diagram

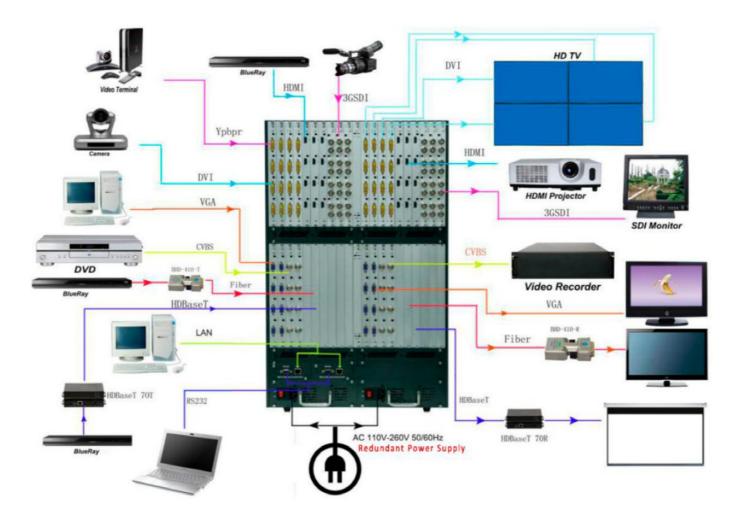

Operation


Touch Screen

After power on, it shows below interface:

Aitei pow	nter power on, it snows below interface.												
			SWITC	нф		SCENE	D	SE	TUP 🗦	×	VIE	w	
1	2	3	4	5		1	2	3	4	5		1 7	1 2
6	7	8	9	10		6	7	8	9	10	١.	(3),000	3
11	12	13	14	15		11	12	13	14	15		1 2 3	1 2 3
16	17	18	19	20		16	17	18	19	20	H	1	
21	22	23	24	25		21	22	23	24	25		3 —	
26	27	28	29	30		26	27	28	29	30	ľ	1	1
31	32	33	34	35		31	32	33	34	35		3	2 3
36	37	38	39	40		36	37	38	39	40		: 倍	
41	42	43	44	45		41	42	43	44	45	ŀ		
46	47	48	49	50		46	47	48	49	50		尚:	
			,, ,	"			-						

Switch Icon:

After click switch icon, it shows below interface:

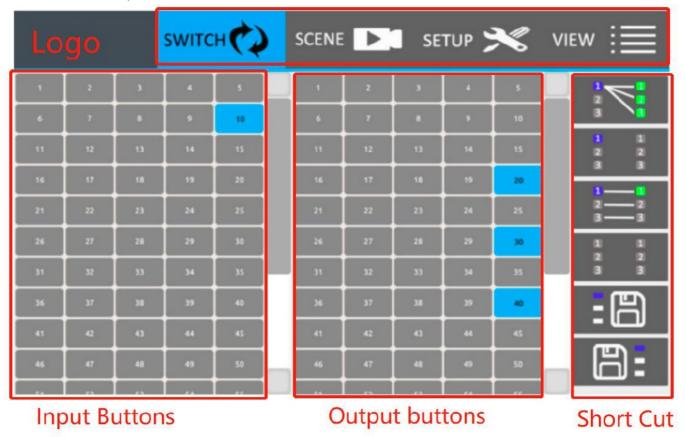


Eg. Switch input 10 to output 20/30/40.

Press number 10 from input buttons, and color turns to blue. Then same way to press number 20/30/40 on the output buttons area, shows as above picture.

SCENE Icon:

Total can save 24 scenes, after press SCENCE it will show below interface:

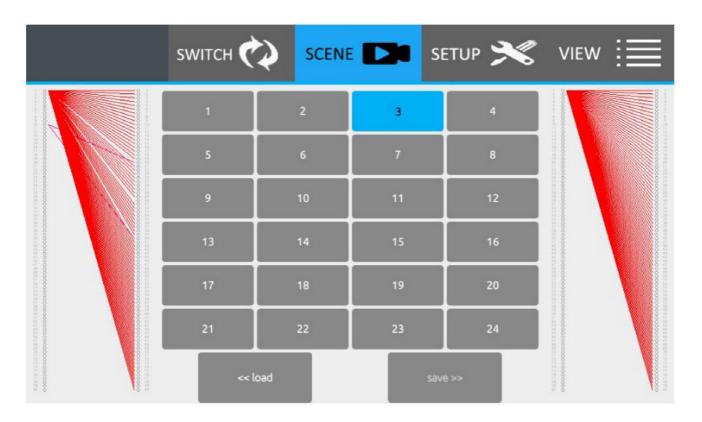


Save scene: After pressed scene icon, users can see above interface. Then users can choose any number buttons from the above 24, and then press Save. Such as, users want to save the current switching status to scene 1, users only need to press number 1 and then choose Save.(Note: This function only can be used under unlock status)

Recall scene: After the scenes saved successfully, user also can choose the scene name to recall the previous/saved switching status. Such as users want to recall scene 6, only need to press number 6 and then press load. Users also can preview the scene switching status by both side windows next to the numbers.


SETUP Icon:

Users can change the name of Scene, input and output here. After changing the default settings, users need to press Save to save the changes.

Change the name of scenes, only need to press Scene icon at the left bottom, showing as below

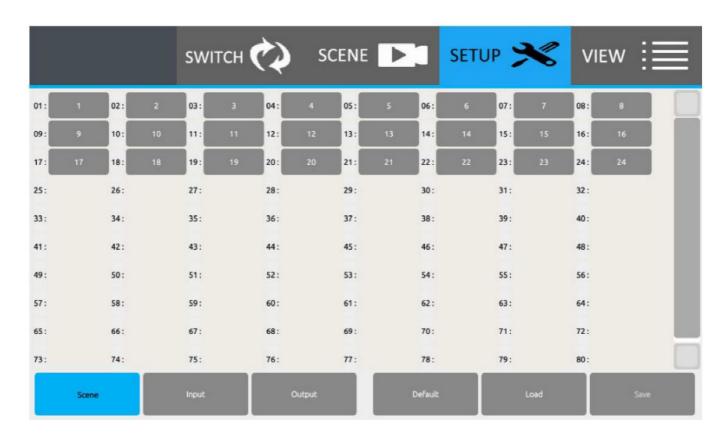

Then change to the needed names:

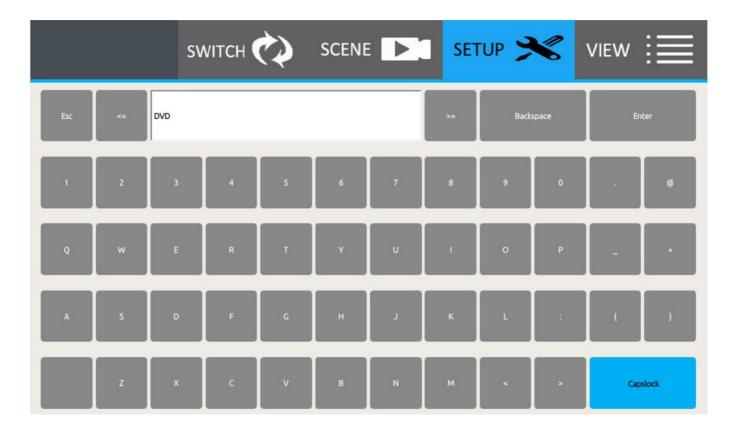

Then change to the needed names:

Users also can change all the 24 scenes name together or one by one and then to press the save button, as below




Change the name of Input and output, press the Input or Output icons, showing as below:

After users changed the names, and when back to the SWITCH and SCENE interface, users can see the names have been well changed, showing as below:




VIEW Icon:

After press VIEW button, will show below interface, users can change the IP maddress, display and sound settings here, also unlock and lock, get help information as so on.

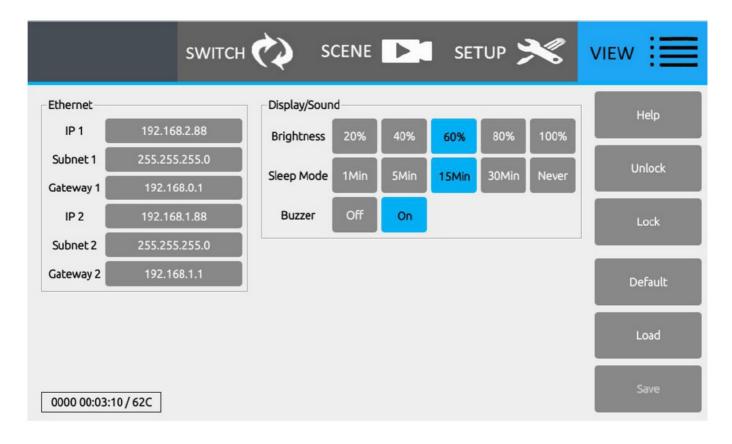

Unlock:

All the equipment have been locked, users need to unlock the equipment if need to change the default settings. First, press Unlock button, and enter the default password: 12345678 and press Enter to unlock the equipment. After unlocked the equipment, users can change the names of the scene, inputs, outputs, IP address and so on.

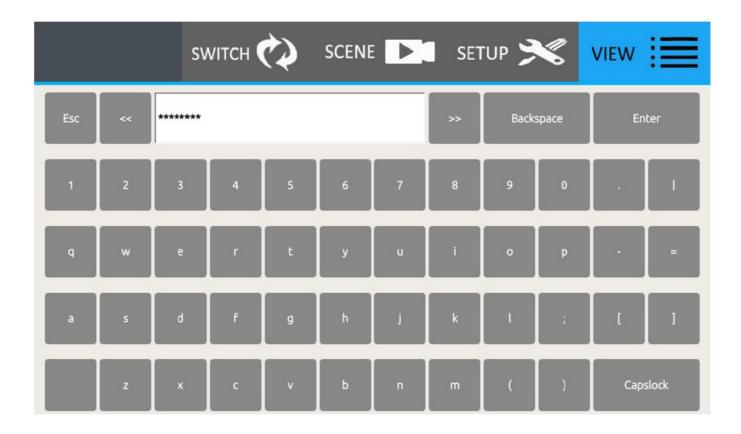

Introduction for the shortcut icons:

Introduction	Example
Switch one to all	Press the input number, then press this button to switch to all
Close the specific input switching status	Press any input number, then press this button to close the switching status
Switch one to one	Press this button to realize one to one switching status
Close all the switching status	Press this button to close all the switching status
Save scene	Press this button will turn to the scene save interface
Recall scene	Press this button will turn to the scene recall interface

WEB control

Touch Manager series products support dual control system, the default IP address are: 192.168.0.80(first one/left one) and 192.168.1.80(first one/right one). If users using the first one to control the matrix.

First step, users need to make the sure RI-45 cable is workable and well connected with the control PC. Second, users need to change the IP address of the control PC at the same segment.


Third, users only need to open the browser and type the matrix IP 192.168.0.80 and enter, will show below interface:

Matrix		Manager	Switch	Caption	Setup	Login	More →
	Please login						
	username						
	password						
	Login						
© 2016 Company, Inc. V1.1.0						В	ack to top

Default user name and password are the same: admin, then click to Logo in


Switch interface:

Users can switch and control with the same way on the touch panels

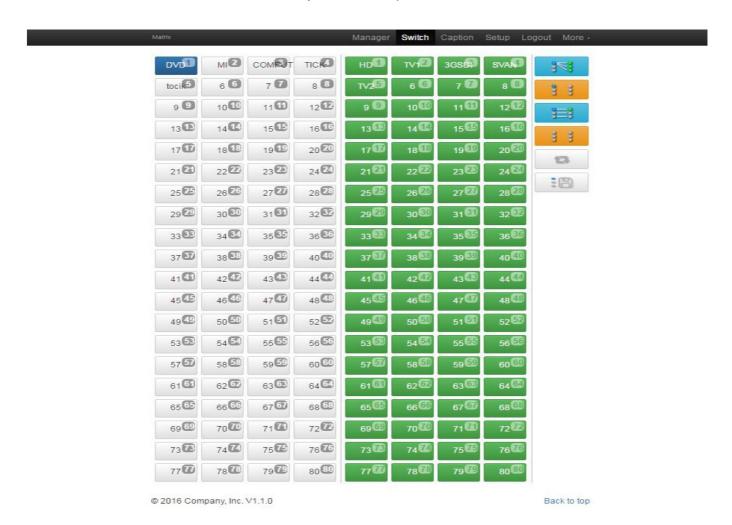


Caption Interface:

Users can change the name of scene, inputs and outputs here, and click to save after changes

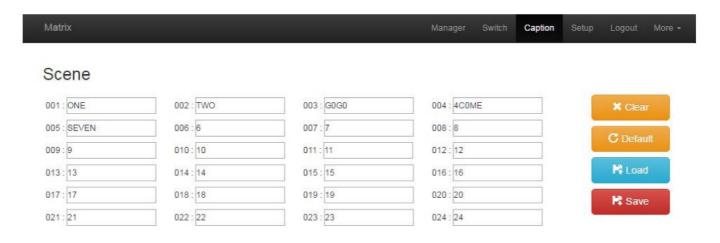

INPUT:

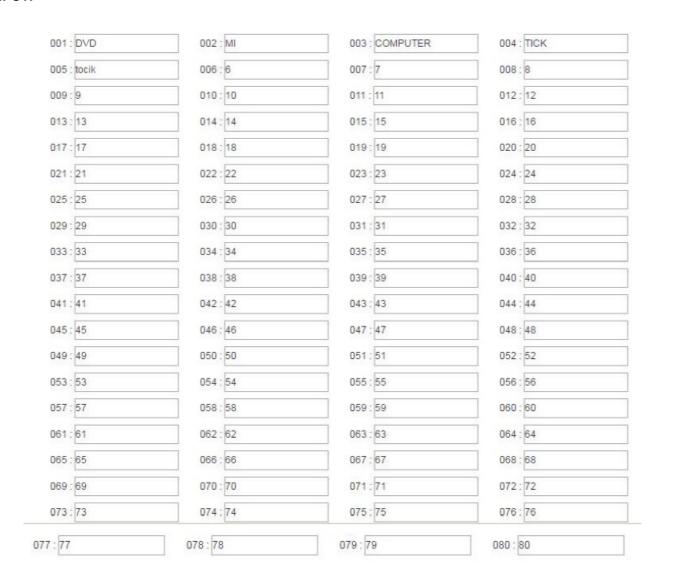

OUTPUT:

001:	HD	002 : TV1	003: 3GSDI	004 : SVAN
005 :	TV2	006 : 6	007 : 7	008:8
009 :	9	010 : 10	011 : 11	012: 12
013:	13	014: 14	015 : 15	016 : 16
017:	17	018: 18	019: 19	020 : 20
021	21	022:22	023:23	024 : 24
025 :	25	026 : 26	027 : 27	028 : 28
029 :	29	030:30	031:31	032 : 32
033:	33	034 : 34	035 : 35	036 : 36
037 :	37	038: 38	039 : 39	040 : 40
041:	41	042 : 42	043:43	044 : 44
045 :	45	046 : 46	047 : 47	048 : 48
049:	49	050 : 50	051 : 51	052 : 52
053:	53	054 : 54	055 : 55	056 : 56
057 :	57	058 : 58	059 : 59	060 : 60
061:	61	062 : 62	063 : 63	064 : 64
065:	65	066 : 66	067 : 67	068 : 68
069 :	69	070 : 70	071 : 71	072 : 72
073 :	73	074 : 74	075 : 75	076 : 76
077 :	77	078: 78	079:79	080:80


Setup

Set up interface:


System Reboot: for modifying the matrix configuration(IP address, Login password)

Ethernet: for changing IP address accordingly


Administrator: For changing the Login user name and password **Multifunction Buttons:** For controlling the surrounding equipment

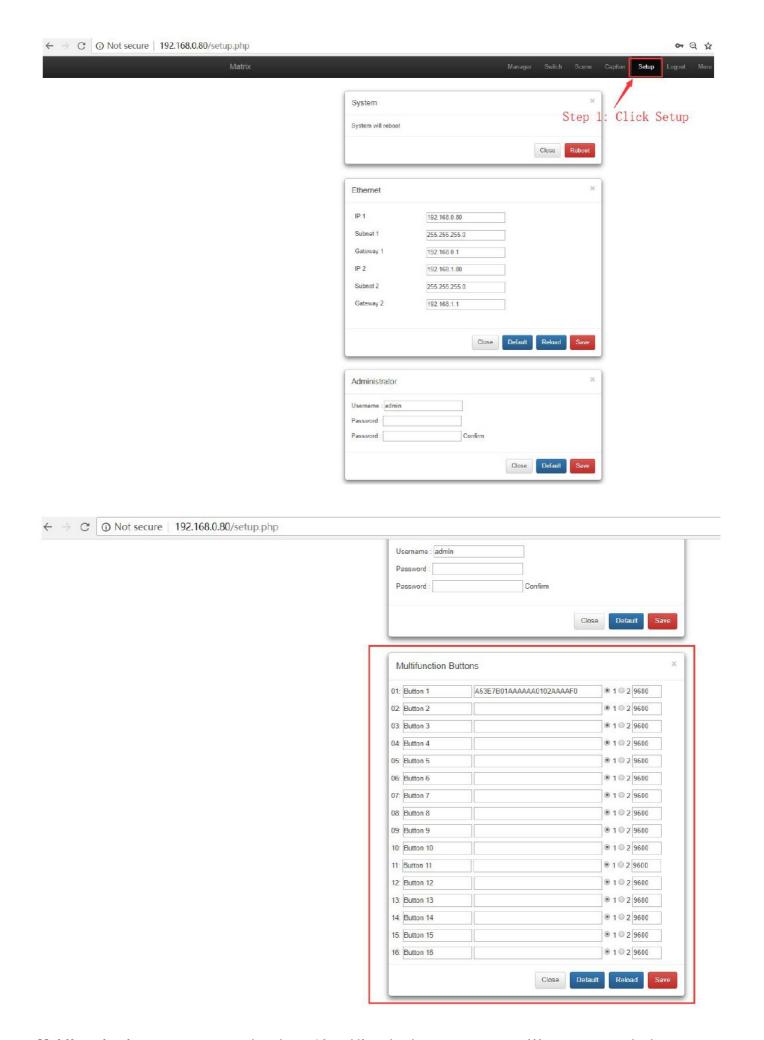

Multifunction buttons set up, total we have 16 multifunction buttons at present. We can rename the buttons, Type the HEX code for each button, and baud rate select. Then click "Save".

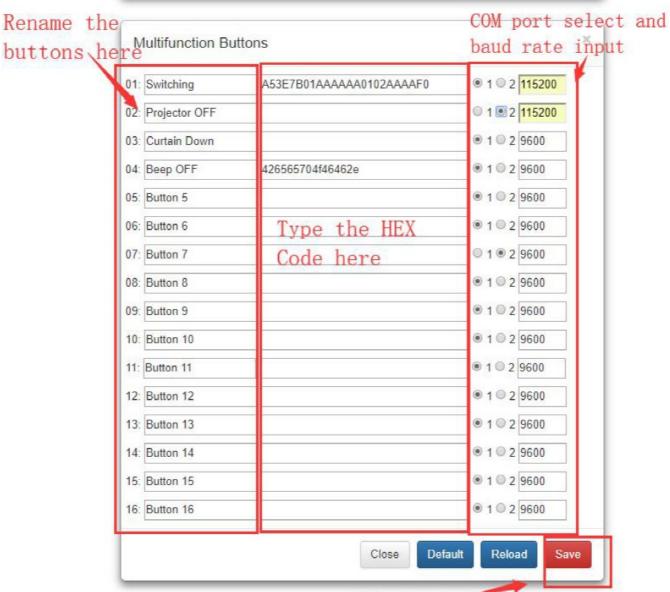


Click to save settings

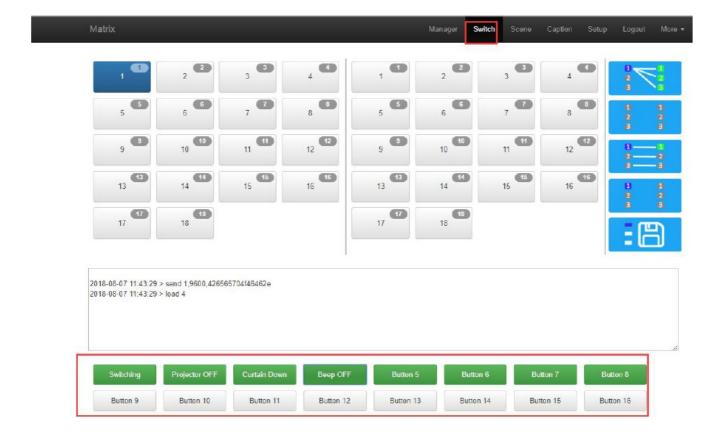

More:

Upgrading: Click Upgrade can realize new software upgrading

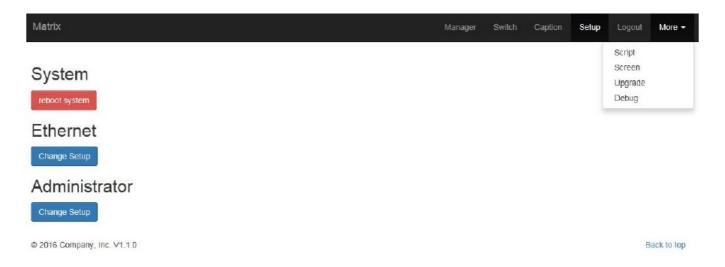


APP Control

It also can support IOS and Android APP control, users only need to well connected the matrix with the WIFI router or local network. Download the APP from the application store. The steps and interfaces show as below: **Step 1:** Make sure the matrix well connected with the router or local network, and open the APP:



Step 2: Enter the IP address of the matrix:

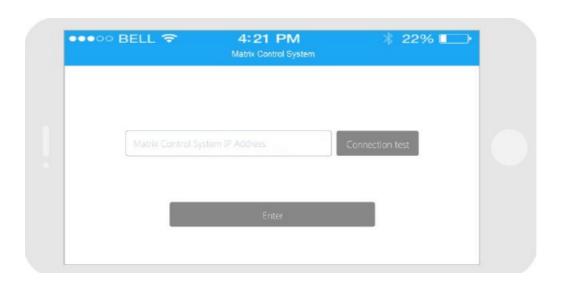

Step 3: After log in successfully, users can switch, change the inputs and outputs name directly.



Central Control Commands

RS232 cable with straight-through connection(USB-RS232 can be used directly to control)

Communication protocol: Baud rate: 115200

Data bit: 8 Stop bit: 1 Check bit: None

Comman	Explanation	Function description
YAII.	Y=1,2,3,4	Switch Input Y to all the outputs Eg. "1ALL." means switch input 1 to all outputs
All1.	One to one	Switch all the channels to be one to one. Eg.1->1 2->2 3->3
YXZ.	Y=1,2,3,4 Z=1,2,3,4	Switch Input Y to Output Z Eg. "1X2." means switch Input 1 to output 2
YXZ&Q& W.	Y=1,2,3,4 Z=1,2,3,4 Q=1,2,3,4 W=1,2,3,4	Switch Input Y to Output Z, Q, W Eg. "1X2&3&4." means switch Input 1 to Output 2, 3, 4
SaveY.	Y=1,2,3,4	Save current status to scene Y Eg. "Save2." means saving current status to Scene 2
RecallY.	Y=1,2,3,4	Recall the saved scene Y Eg. "Recall2." means recall the saved Scene 2

BeepON.	Beep sound	Buzzer on
BeepOFF.		Buzzer off
Y?.	Y=1,2,3,4	Check the Input Y to outputs switching status Eg. "1?." means to check Input 1 switching

Note:

- Every command ends with a period "." and it can't be missing.
- The letter can be capital or small letter.
- Switch success will return as "OK", and failed will return as "ERR".

Trouble Shooting and Attention

No signal on the display?

- Make sure all the power code well connected
- · Check the display switcher and make sure it's in good condition
- Make sure the the DVI cable between the device and display are short than 7 meters
- · Reconnect the DVI cable and restart the system
- · Make sure the signal sources are on
- Check the cables between the devices and displays are connected correctly.
- Dial the switcher 7 to 1, then dial the switcher 1,2 and choose the corresponding inputs.
- Make sure the resolution less than WUXGA(1920*1200)/ 60HZ
- Make sure the display can support the output resolution.

After Sales

Warranty Information

The Company warrants that the process and materials of the product are not defective under normal use and service for 2 (2) year following the date of purchase from the Company or its authorized distributors. If the product does not work within the guaranteed warranty period, the company will choose and pay for the repair of the defective product or component, the delivery of the equivalent product or component to the user for replacement of the defective item, or refund the payment which users have made.

The replaced product will become the property of the Company.

The replacement product could be new or repaired.

Whichever is longer, any replacement or repaired of the product or component is for a period of ninety (90) days or the remaining period of the initial warranty. The Company shall not be responsible for any software, firmware,

information, or memory data contained in, stored in, or integrated with the product repaired by the customer's return, whether or not during the warranty period.

Warranty limitations and exceptions

Except above limited warranty, if the product is damaged by over usage, incorrectly use, ignore, accident, unusual physical pressure or voltage, unauthorized modification, alteration or services rendered by someone other than the Company or its authorized agent, the company will not have to bear additional obligations. Except using the product properly in the proper application or normal usage

Attachment A: Input and output cards for TOUCH-MANAGER-800/1600

Input Card	Is					
1080P Seam	less Switching Cards					
		Support				
Universal		HDMI/DVI/VGA/YPBPR/CVBS+LR input				
oniversal		Support HDCP, 1080P60, Seamless				
		switching				
	. • • • • • • • • • • • • • • • • • • •	Support 4 SD/HD/3G-SDI input and loop				
SDI		out				
		Resolution up to 1080p60				
4K60 Seaml	ess Switching Cards					
4K60		Supports 4 HDMI2.0 inputs				
HDMI2.0	• • • • • • • • • • • • • • • • • • • •	Support HDCP2.2, 4K60				
TIDMIZ.0		Supports 3.5mm audio embedded				
		Support HDBaseT input with one HDMI				
4K60		loop out				
HDBaseT		Distance up to 40/70m at 4K60				
		Work with 4K60 40M TX				
		Supports 4 Fiber Optic LC input				
		Distance up to 2km at 4K60 with SM				
4K60 Fiber		fiber cable				
		Needs to work with				
		FIBER-HDV-2KT-4K60				

Output Ca	rds	
1080P Sean	nless Switching Cards	
MAV		Support HDMI/DVI/VGA/YPBPR/CVBS+LR input Support HDCP, 1080P60 , Seamless
		switching
SDI		Supports 2 SD/HD/3G-SDI outputs
301	° ;	Supports 1080P60, Seamless switching
4K60 Seam	less switching Cards	
4K60		Support 4K30 HDMI input
HDMI2.0		Support HDCP1.4
1101412.0		Support EDID handshaking
		Supports HDBaseT input with 1 HDMI
4K60		loop out
HDBaseT		Distance up to 40m at 4K30
		POC(Power over Cable) function
		Supports LC connector SM fiber output
4K60 Fiber		Distance up to 2km
		Work with the 4K60 Fiber Optic Rx

Note: All the above cards can work with TOUCH-MANAGER-800/1600, BUT we suggest to use only 1080P or 4K60 cards on one chassis instead of mixing use 1080P and 4K60 cards together.

Attachment B: D8mzmR7HB7a3HeDqhpRM1iqpzVLEBY4nTf

	Cus	tomi	ze Res	solution		3.5mm Audio		N	ull		IR Function		
DIP 1	DIP 2	DIP 3	DIP 4	Description	DIP 5	Description	DIP 6	Description	DIP 7	Description	DIP 8	Description	
0	0	0	0	1080P@60Hz	0	Using External audio	0	Null	0	Null	0	IR off	
0	0	0	1	1080P@50Hz	1	Using HDMI audio	1	Null	1	Non	1	IR on	
0	0	1	0	3840*2160@50Hz									
0	0	1	1	720P@60Hz									
0	1	0	1	1366*768@60Hz									
0	1	1	0	1024*768@60Hz		118 6 6 6 6 6 6 6 6 6 6 6 6 6 6 6 6 6 6	700		341	W tolk	100		
0	1	1	1	3840*2160@30Hz	l		~						
0	1	0	0	3840 2100@30112			ON			VE		8	
1	0	0	0	3840*2160@24Hz									
1	0	0	1	480P@60Hz									
1	0	1	0	720P@50Hz			1 2	2 3 4	5	6 7 8	3		
1	0	1	1	576P@50Hz			-				-	4	
	1	0	0	3840*2160@60Hz			MEAN			764	1		
1	_												
1	1	1	0	4096*2160@60Hz									

	4K60 HDMI2.0 Output Card DIP Switch												
Customize Resolution			Cus	tomi	ze Color Space	Н	DCP2.2	IR Function					
DIP 1	DIP 2	DIP 3	DIP 4	Description	DIP 5	DIP 6	Description	DIP 7	Description	DIP 8	Description		
0	0	0	0	1080P@60Hz	1	1	RGB	0	HDCP On	0	IR off		
0	0	0	1	1080P@50Hz	1	0	YUV422	1	HDCP Off	1	IR on		
0	0	1	0	3840*2160@50Hz	0	0	YUV420						
0	0	1	1	720P@60Hz	0	1	YUV444						
0	1	0	1	1366*768@60Hz									
0	1	1	0	1024*768@60Hz	l								
0	1	1	1	2040*2100@2011-	١ .								
1	1	1	1	3840*2160@30Hz	1 1						The Man		
0	1	0	0	4096*2160@50		0	ON			VÉ			
1	0	0	0	4096*2160@30		7000				_ V L			
1	0	0	1	480P@60Hz									
1	0	1	0	720P@50Hz			1 2	3 4	5 6	7	8		
1	0	1	1	576P@50Hz	- 2	-	00			00			
1	1	0	1	1920*1200/60		(2)	-		-		-		
1	1	0	0	3840*2160@60Hz	_					10.00			
1	1	1	0	4096*2160@60Hz									

1080P seamless switching cards:

				1549.3	10	80P	Input Card	DIP S	witch	20		-			
(Custo	mize R	esolution	Input Source Select				Image or Audio Select					IR Function		
DIP 3	DIP 4	DIP 5	Description	DIP 7	DIP 1	DIP2	Description	DIP 6	Version	Description		DIP 8	Description		
0	0	0	1024*768 1 0 0 CVBS Input		CVBS Input	1	\/i 1	Normal display	0	IR off					
0	0	1	1360*768	1	0	1	YPBPR input	0	Version 1	Image mirror	1	IR on			
0	1	0	1920*1200	1	1	0	VGA input	1	Version 2	HDMI audio input					
0	1	1	720P/60	1	1	1	DVI input	0	version 2	3.5mm audio inpu	it	1			
1	0	0	Null	0			Signal Auto detect								
1	0	1	Null												
1	1	0	1080P/50	1		0	ON				VE				
1	1	1	1080P/60			U					_				
						1	1 2	3	7.1	5 6 7		ı			
							1 2	3	4	0 6	8				

					1080P O	utpu	ut Card	DI	P S	witch	1						
		Res	soluti	on Set	t Up	(Color Space Image						IR				
D2	D3	D3 D4 D5 D6 Description		D1 Description		D7	Description			D8	De	scriptio					
0	0	0	0	0	1024*768@60	0	RGB		0	lmag	e mirro	r	0		IR ON		
0	0	0	0	1	800*600@60	1	YUV		1	Norma	al displa	ay	1		IR OFF		
0	0	0	1	0	1280*800@60												
0	0	0	1	1	1280*1024@60												
0	0	1	0	0	1360*768@60												
0	0	1	0	1	1366*768@60												
0	0	1	1	0	1400*1050@60												
0	0	1	1	1	1440*900@60												
0	1	0	0	0	1680*1050@60												
0	1	0	0	1	1600*1200@60												
0	1	0	1	0	1920*1200@60												
0	1	0	1	1	1600*1200@60												
0	1	1	0	0	1680*1050@60												
0	1	1	0	1	1400*900@75												
0	1	1	1	0	640*480@75												
0	1	1	1	1	800*600@75	600											
1	0	0	0	0	4801@60	0	Or	A						V	E		
1	0	0	0	1	5761@50												
1	0	0	1	0	480P@60			-	-	-	-			-			
1	0	0	1	1	576P@50	100				-	-		' '				
1	0	1	0	0	1280*720@24	1	4	2	3	A	5	6		7	0		
1	0	1	0	1	1280*720@25			-	9	-	3	U	_	1	0		
1	0	1	1	0	1280*720@30												
1	0	1	1	1	1280*720@50												
1	1	0	0	0	1280*720@60												
1	1	0	0	1	10801@50												
1	1	0	1	0	10801@60												
1	1	0	1	1	1080P@24												
1	1	1	0	0	1080P@25												
1	1	1	0	1	1080P@30												
1	1	1	1	0	1080P@50												
1	1	1	1	1	1080P@60	8											



Documents / Resources



BeingHD Touch Manager Modular Matrix Switcher [pdf] User Manual Touch Manager Modular Matrix Switcher, MANAGER-800

Manuals+, home privacy