


Bohemian LED Dimmable Ceiling Light With Built-In Fan

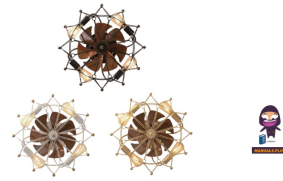

Bohemian LED Dimmable Ceiling Light With Built-In Fan User Manual


[Home](#) » [Bohemian](#) » Bohemian LED Dimmable Ceiling Light With Built-In Fan User Manual 

Contents

- 1 Bohemian LED Dimmable Ceiling Light With Built-In Fan
- 2 Product Information
- 3 Product Usage Instructions
- 4 Package contents
- 5 Product assembly
- 6 Mounting options
- 7 Installation
- 8 Remote control operation
- 9 Important safety instructions
- 10 Installation tools
- 11 Maintenance
- 12 Care and cleaning
- 13 Specifications
- 14 Documents / Resources
 - 14.1 References

Bohemian

Bohemian LED Dimmable Ceiling Light With Built-In Fan

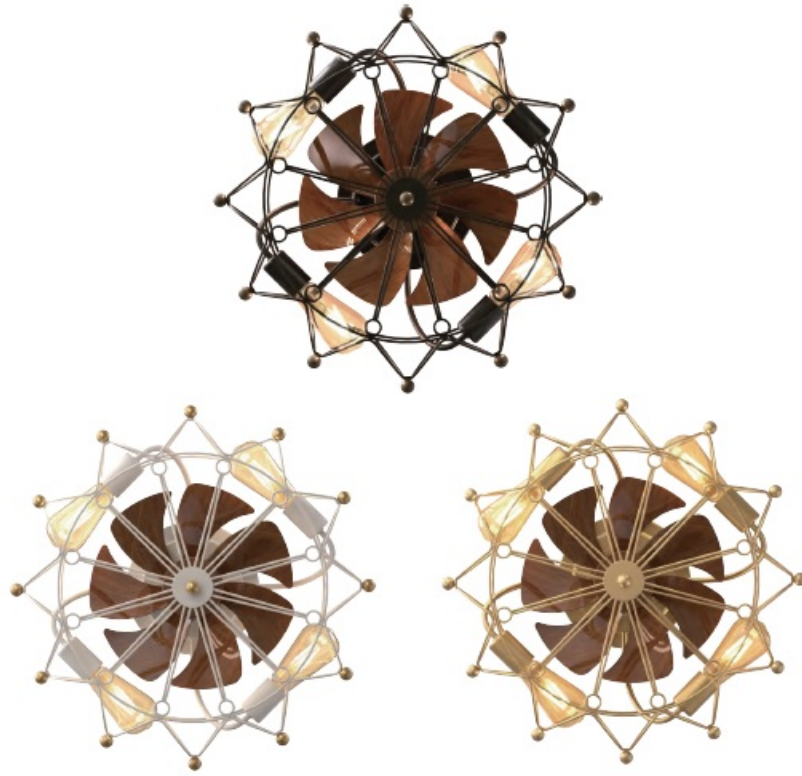

Product Information

Specifications:

- Ceiling fan light x 1
- Decorative ball x 15
- Remote control wall bracket x 1
- Remote control x 1
- S-hook (auxiliary mounting tool) x 1
- ST64 LED bulbs x 5
- Accessory pack x 1

Product Usage Instructions

Package Contents:

Check that you have received all the components listed in the specifications.

Product Assembly:

1. Assemble the thirteen decorative balls to the ceiling fan. (refer to fig.1)
2. Install the four LED bulbs onto the light brackets. (refer to fig.2)

Installation:

1. Use the auxiliary mounting tool S-hook to hang the ceiling fan with light under the ceiling. (refer to fig.5)
2. Remove the S-hook and snap the 7-shaped hole of the ceiling fan light holder onto the cross-hanging plate.

(refer to fig.7)

Mounting Options:

- Wooden ceiling: Use wood screws with flat washers. (refer to fig.3)
- Concrete ceiling: Use screws with lock washers. (refer to fig.4)

Wiring:

Follow the wiring instructions provided in fig.6 for proper connection.

Remote Control Operation:

1. Install AAA battery in the remote control. Remove the battery if not in use for an extended period to prevent damage to the transmitter. (refer to fig.10)
2. Refer to fig.11 for the functions of each button on the remote control.

Important Safety Instructions:

- Ensure power supply is shut off before wiring to avoid electric shock.
- All wiring must comply with national and local specifications; consult a qualified electrician if needed.
- If you lack electrical knowledge, have the fan installed by a licensed electrician.

Warm Tips:

If your remote control does not work, follow these steps:

Step 1: Replace the remote control battery.

Step 2: Try reprogramming the remote control.

FAQ:


Q: What should I do if the remote control does not work?

A: First, replace the battery in the remote control. If the issue persists, try reprogramming the remote control by following the provided instructions.

Manual

Important: Please read and understand this manual before any assembly. Before assembling this product, please ensure that all parts are in place. Compare the details with the product display presentation. If you have any questions, don't hesitate to contact us through Amazon.



Package contents

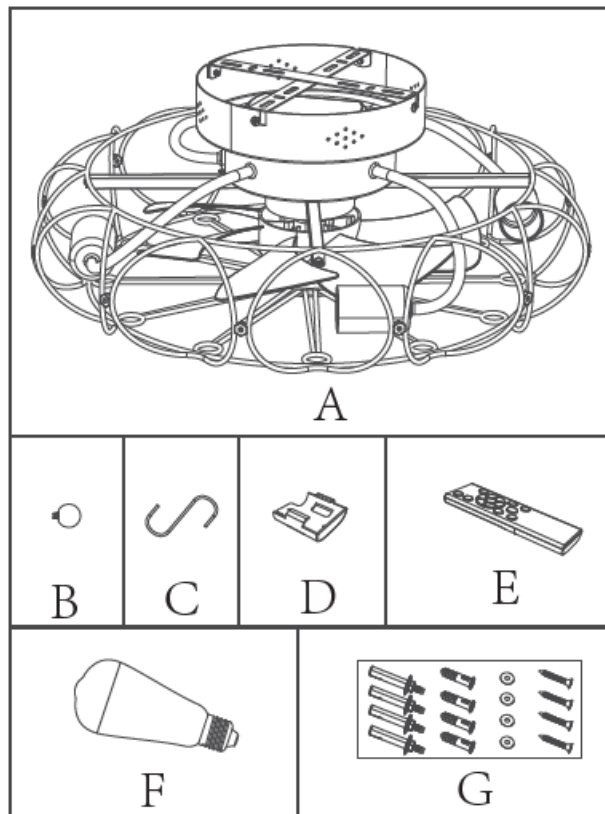

- A. Ceiling fan light x 1
- B. Decorative ball x 15
- C. S-hook (auxiliary mounting tool) x 1
- D. Remote control wall bracket x 1
- E. Remote control x 1
- F. ST64 LED bulbs x 5
- G. Accessory pack x 1


Product assembly

- Step 1: Assemble the thirteen decorative balls to the ceiling fan. (fig.1)
- Step 2: Install the four LED bulbs onto the light brackets.(fig.2).

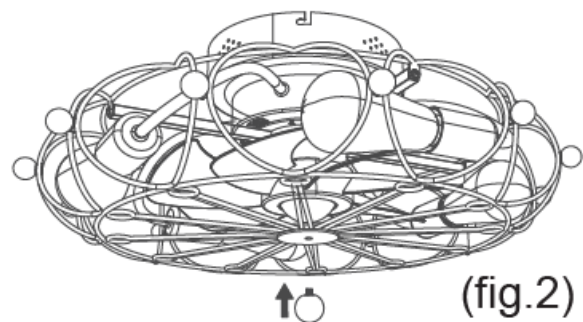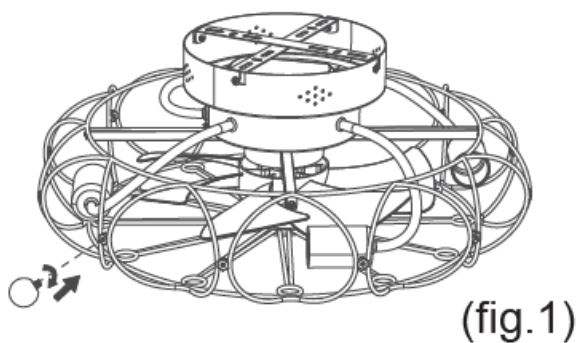


Mounting options

- Wooden ceiling If you have a wooden ceiling use wood screws with flat washers.(fig.3)

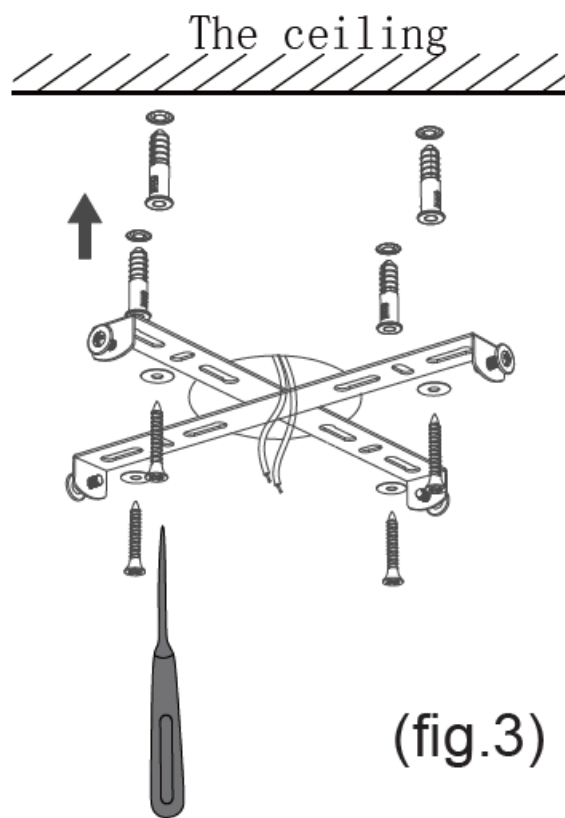


- Concrete ceiling If you have a concrete ceiling, use screws with lock washers. (fig.4)

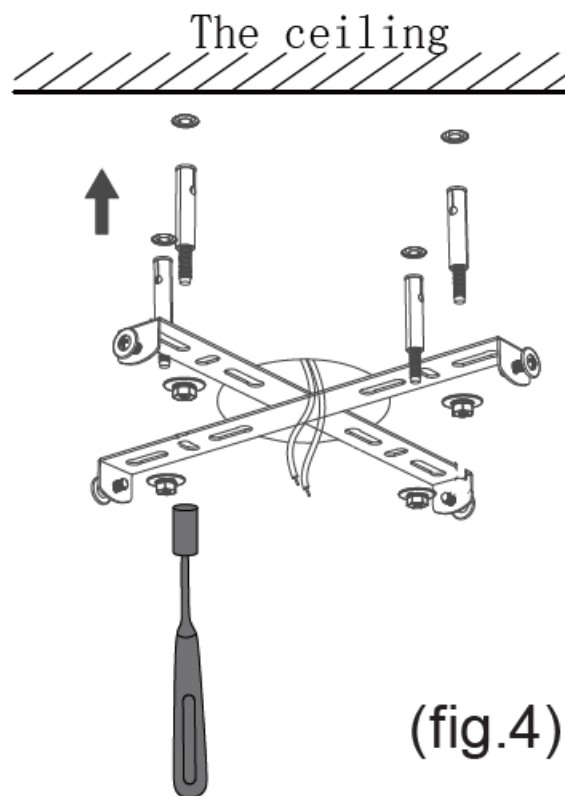


Installation

1. Step 1: Use the auxiliary mounting tool S-hook to hang the ceiling fan with light under the ceiling.(fig.5)

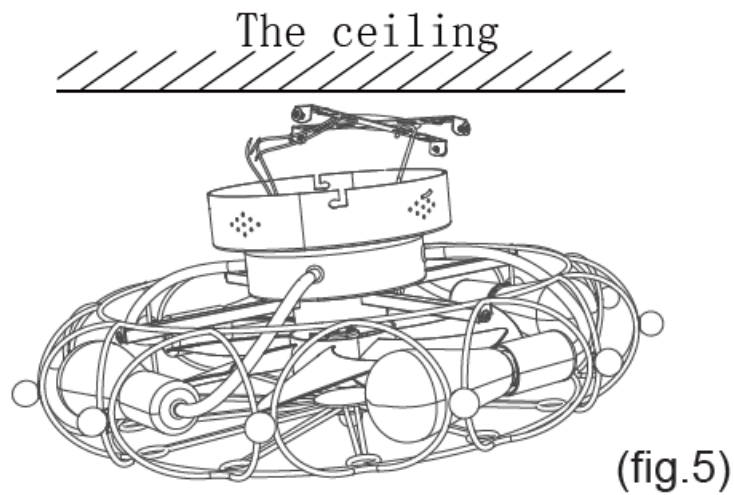


2. Step 2: Wiring(fig.6)


1. Connect the black live wire marked "L" on the receiver to the live wire (typically black) on the socket box.
2. Connect the white neutral wire marked "N" on the receiver to the neutral wire (typically white) on the socket box.

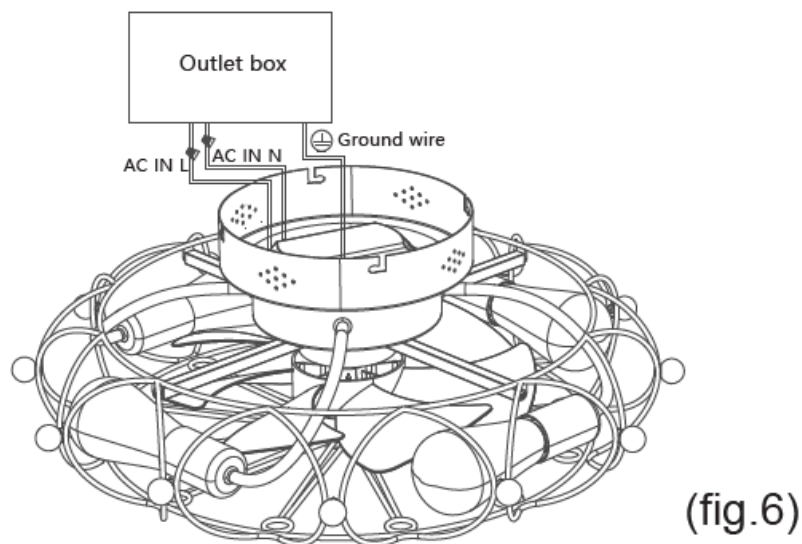


3. Connect the ground wire (bare wire) from the base of the ceiling fan base with the ground wire (bare wire) of the socket box
3. Step 3 Remove the S-hook and snap the 7-shaped hole of the ceiling fan light holder onto the cross-hanging plate.(fig.7)

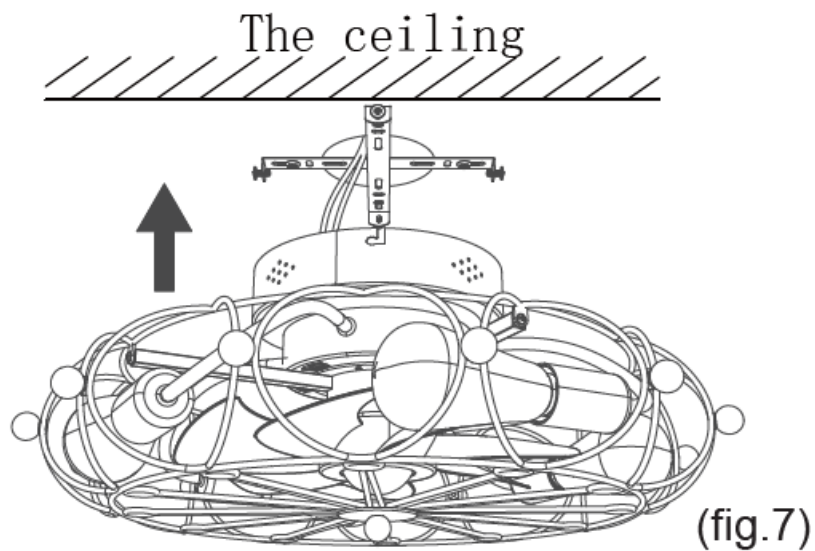

4. Step 4: Rotate the ceiling fan and snap the screws into the 7-shaped holes.(fig.8)

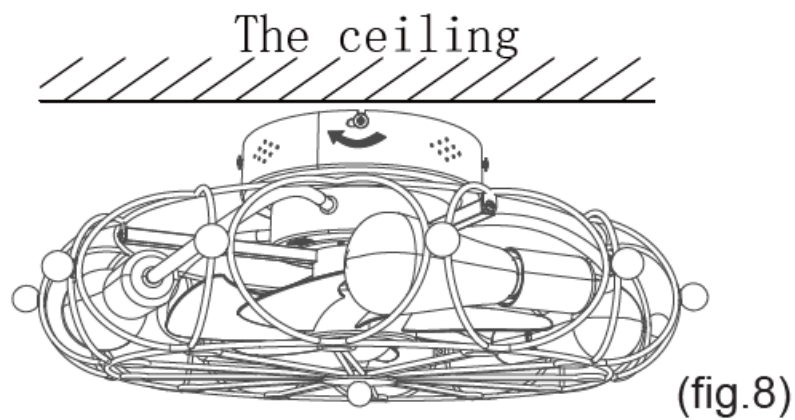

5. Step 5: Tighten the 4 screws to complete the installation.(fig.9)

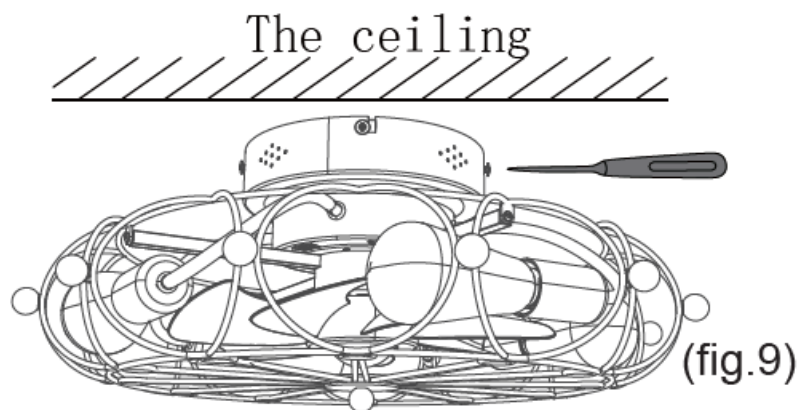

Warm Tips

If your remote control does not control the fan and lights, please follow the steps below to undo the fault.


- Step 1: Replace the battery of the the remote control.
- Step 2: Try to program the remote control.




Please turn off the main switch that controls the ceiling fan light and turn it on again. When turning on the light, press and hold the 2H button of the remote control within 5 seconds. If you hear a beeping sound, the code is matched successfully. Then try again to see if the remote control can control the fan and the light.

Remote control operation

Install the AAA battery. Please take out the battery If not used for a long time to prevent damage to the transmitter. (fig.10)

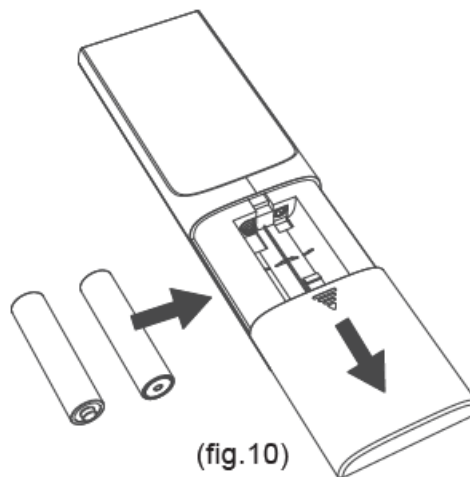

The function of each button of the remote control is explained.(fig.11)

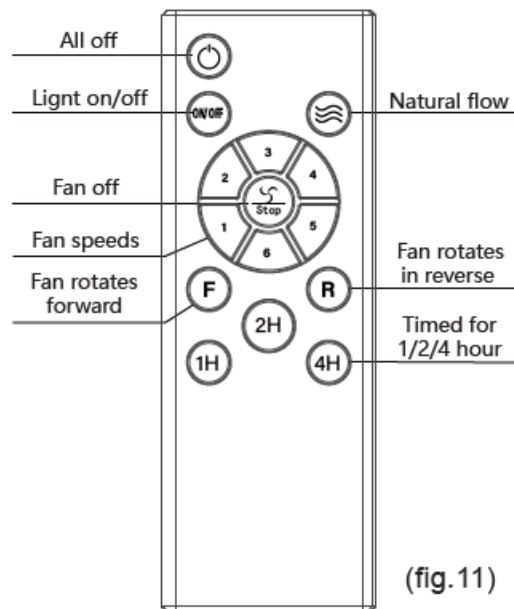





Important safety instructions

Caution

1. To avoid possible electric shock, make sure the power supply the box or circuit breaker is shut off before wiring.
2. All wiring must be carried out under national and local specifications. Please consult a qualified electrician to ensure that the live, neutral, and ground wires are connected correctly.
3. If you do not have sufficient knowledge of electrical wiring, please have the fan installed by a licensed electrician.
4. The ceiling fan light mounting carrier is solid and can reliably support at least 66 lbs(30kg).
5. Mount the lowest moving parts at least 7.5ft(2.3m) above the floor or ground level.
6. Ensure that all electrical connections are sealed with appropriate connectors and electrical tape in the outlet box.
7. All set screws must be checked and re-tightened if necessary before operating the ceiling fan.

Installation tools

This manual aims to make it as easy as possible for you to assemble, install, operate and maintain the ceiling fan. The tools listed below are required for assembly and installation.

Star-head Screwdriver	
Wire-stripping Pliers	
Stepladder	
Electrical Tape	

Maintenance

Some connections may become loose due to the movement of the fan. Check the support connections, brackets, and blade accessories twice a year. Please make sure they are safe.

Care and cleaning


1. Dust your fan regularly with a soft, dry cloth. Do not use harsh cleaners or materials as they may damage the device.
2. To prevent bending of the blades during Cleaning, support the blades from pressure.
3. Keep the ceiling fan or fan blades clear of water, or it may cause a fire or electric shock, which leads to property loss.

Specifications

Product Name	Ceiling Fan Light	Item Size	20in*7in
Input Voltage	120V	LED	8W*4
Dimensions	10*10ft-15*15ft	Valid Remote Distance	20M
Battery Type	AAA*2	Rotating Speed(rpm)	555-956r/min
Reversible	Yes	Fan Timing	1H/2H/4H



Documents / Resources

	Bohemian LED Dimmable Ceiling Light With Built-In Fan [pdf] User Manual W1340137055, LED Dimmable Ceiling Light With Built-In Fan, LED Dimmable Ceiling Light, Ceiling Light With Built-In Fan, Ceiling Light, Ceiling, Light
---	--

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.