


EK Water Blocks Reflection2 PC-O11D XL D5 PWM D-RGB **User Guide**

Home » EK Water Blocks » EK Water Blocks Reflection2 PC-O11D XL D5 PWM D-RGB User Guide 🖺





Reflection² PC-O11D XL D5 PWM D-RGB **DISTRIBUTION PLATE USER GUIDE**

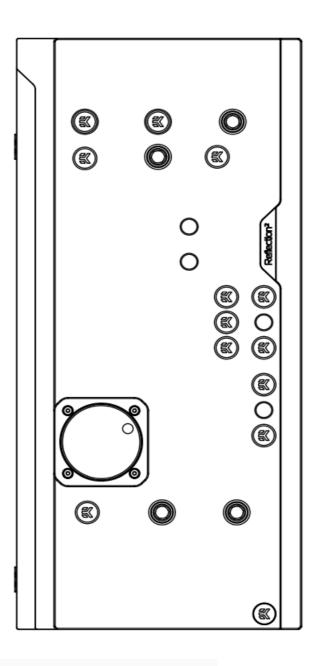

Contents

- 1 Reflection2 PC-O11D XL D5 PWM D-RGB
- **2 BOX CONTENTS**
- **3 DISTRIBUTION PLATE DIMENSIONS**
- **4 TECHNICAL SPECIFICATIONS AND PRODUCT PARTS**
- **5 PREPARING THE 011D XL CHASSIS**
- **6 PREPARING AND INSTALLING THE DISTRIBUTION PLATE**
- 7 RECOMMENDED DISTRIBUTION PLATE
- **CONFIGURATIONS**
- **8 ATTACHING THE PUSH-IN ADAPTER (OPTIONAL)**
- 9 CONNECTING THE D-RGB LED STRIP
- 10 CONNECTING THE PUMP
- 11 Documents / Resources
 - 11.1 References
- **12 Related Posts**

Reflection2 PC-O11D XL D5 PWM D-RGB

Before you start using this product please follow these basic guidelines:


Please carefully read the manual before beginning with the installation process!

The EK Fittings require only a small amount of force to screw them firmly in place since the liquid seal is ensured

by the rubber O-ring gaskets.


The use of corrosion inhibiting coolants is always recommended for any liquid cooling system. EKWB recommends any of the EKCryofuel for worry-free usage.

BOX CONTENTS

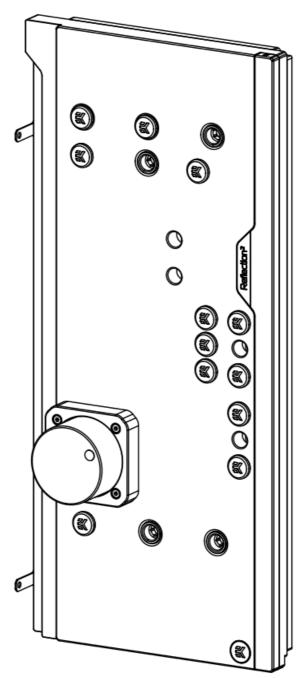


EK-Quantum Reflection² PC-O11D XL D5 PWM D-RGB


Mounting Mechanism EAN: 105250

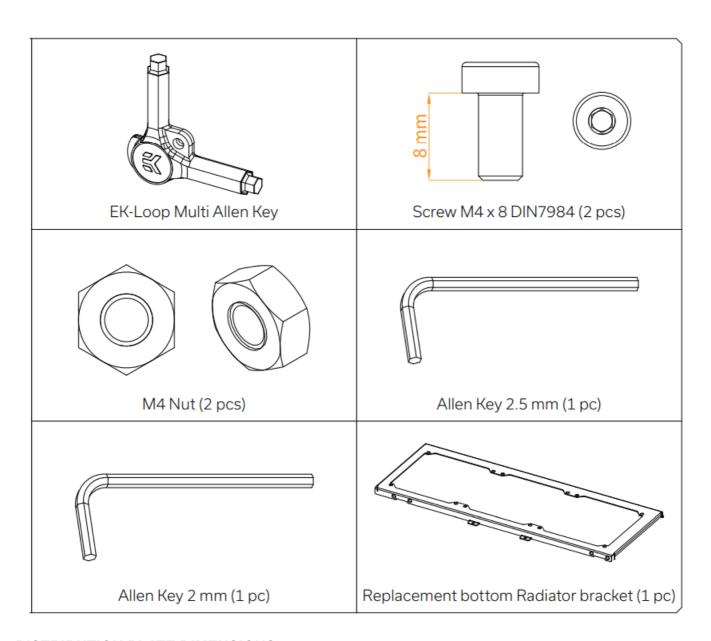

DISTRIBUTION PLATE DIMENSIONS

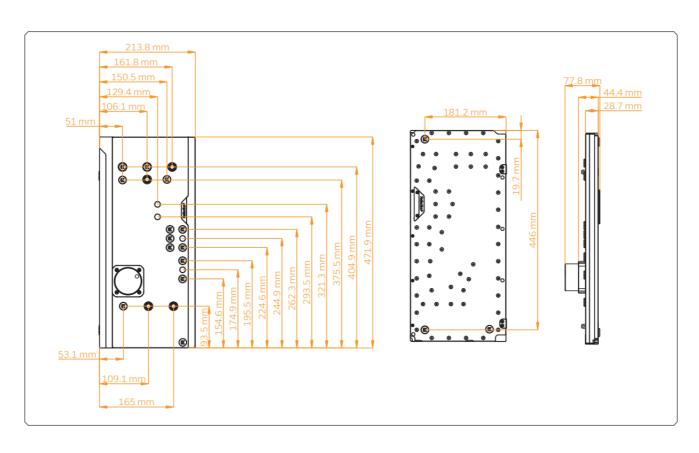

TECHNICAL SPECIFICATIONS AND PRODUCT PARTS

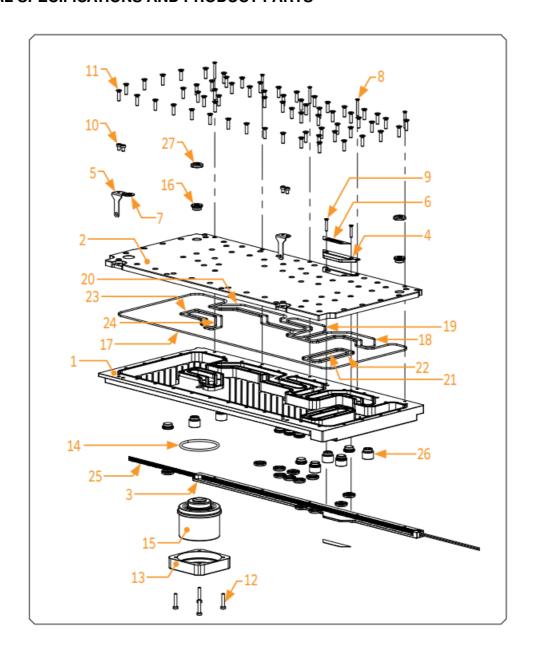

Technical Specification:

Dimensions with the attached pump (W x D x H): 215.1 x 77.8 x 471.9 mm


- D-RGB LED count:
- D-RGB cable length: 500 mm
- D-RGB connector standard 3-pin (+5V, Data, Blocked, Ground)

Position	EAN	Description	Quantity
1	104634	TOP Plexi -(Block part)	1
2	104635	TOP Plexi (Lid part)	1
3	104639	LED Cover (Black e.)	1
4	104642	Metal plate (Black)	1
5	104644	Metal holder (Black)	2
6	104599	Mylar sticker	2
7	100663	EK – Badge	2
8	9061	Screw M3 x 25 DIN7991	5
9	9017	Screw M3 x 18 7991DIN	2
10	9023	Screw M4 x 6 DIN7984	4
11	8312	Screw M4 x 16 DIN7991	64
12	8311	Screw M4 x 20 DIN7984	4
13	101803	Pump holder	1
14	5154	OR 52 x3 NBR50	1
15	3.831E+12	EK D5 Pump	1
16	102639	EK – Plug G1/4	14
17	104697	OR – 438 x 2 mm	1
18	104698	OR -105 x 2 mm	1
19	104699	OR – 90 x 2 mm	1
20	104700	OR -140 x 2 mm	1
21	104701	OR -77 x 2 mm	1
22	104702	OR -61 x 2 mm	1
23	104703	OR – 85 x 2 mm	1
24	104704	OR -65 x 2 mm	1
25	100815	LED D-RGB strip 800/600 mm	1
26	3.831E+12	Push in adapter	6
27	3.831E+12	Plug cover (Acetal)	14


PREPARING THE 011D XL CHASSIS

Before installing the distribution plate, carefully read the PC case manual. STEP 1

Unscrew the factory provided screws and remove the top panel from the case.

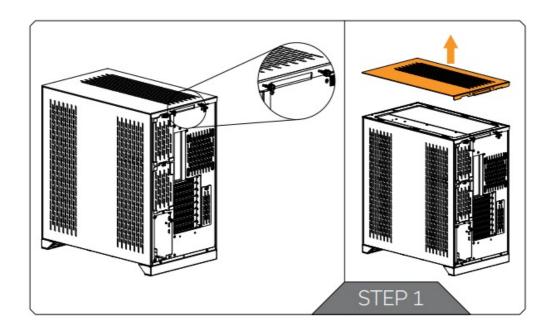


STEP 2Remove both side panels and the front panel from the case.

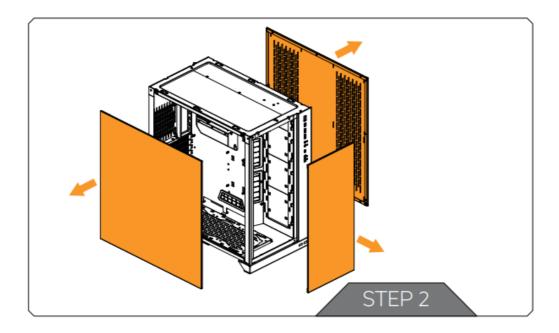


STEP 3


The SSD Trays also need to be removed from the back side of the chassis. Once the distribution plate is secured they can be reinstalled as required.

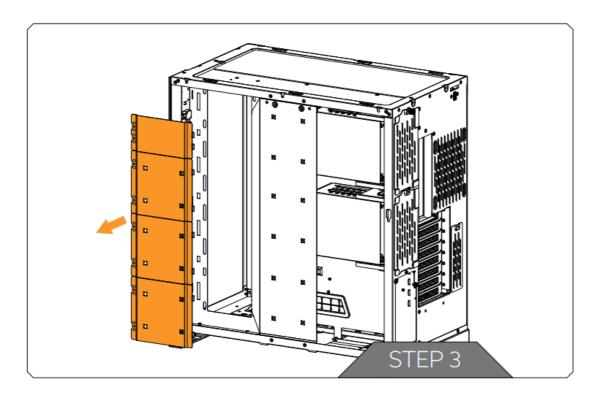

STEP 4Unscrew the 2(two) marked factory screws and remove the bottom Radiator bracket.

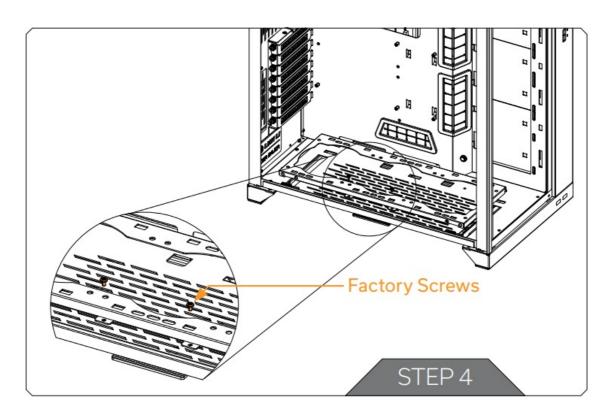

STEP 5From the original bottom Radiator bracket, remove two (2) marked plastic tabs attached by four (4) cross pattern screws.

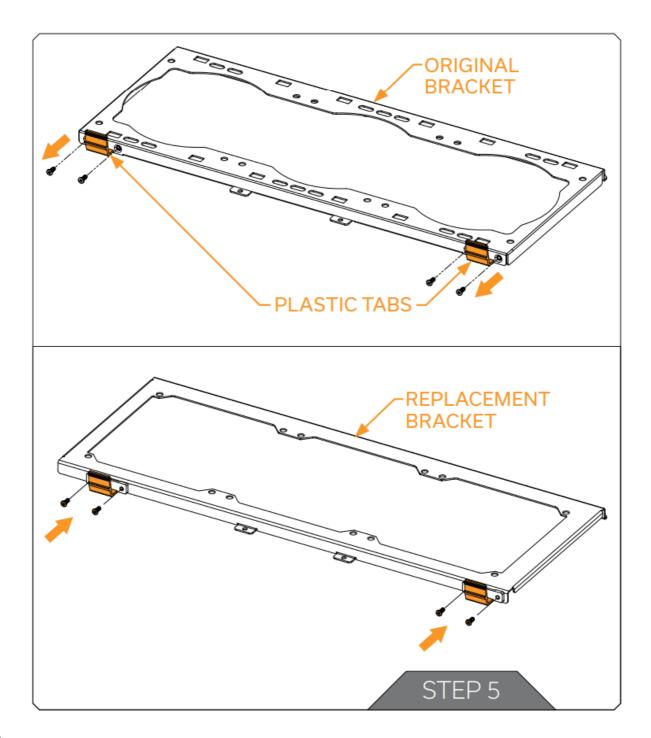

Plastic tabs and screws reattach to the replacement bottom Radiator bracket and secure them with Philips head screwdriver. Tighten the screws evenly.


After securing the distribution plate, replacement bottom Radiator bracket can be installed with the bottom radiator and fans.

PREPARING AND INSTALLING THE DISTRIBUTION PLATE


STEP 1

Before installing the distribution plate, unscrew two (2) M3 x 18 DIN7991 Screws and remove the metal plate. Save the removed parts for later steps.


For this step you will need:

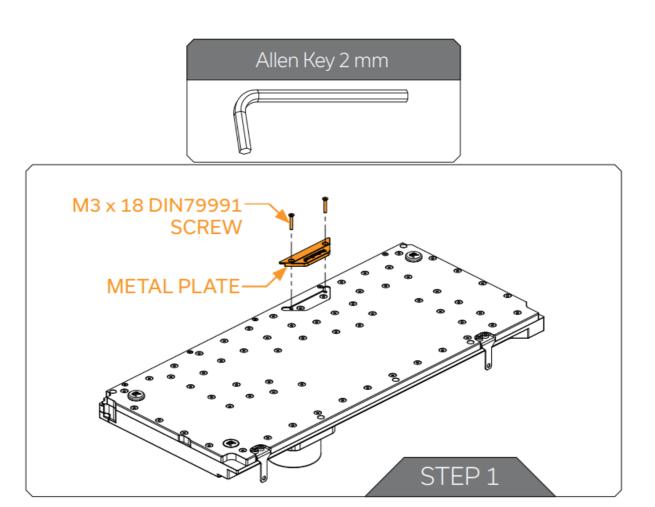

STEP 2
Carefully place the EK-Quantum Reflection PC-O11D XL D5 PWM D-RGB distribution plate into the PC case and align the mounting holes.

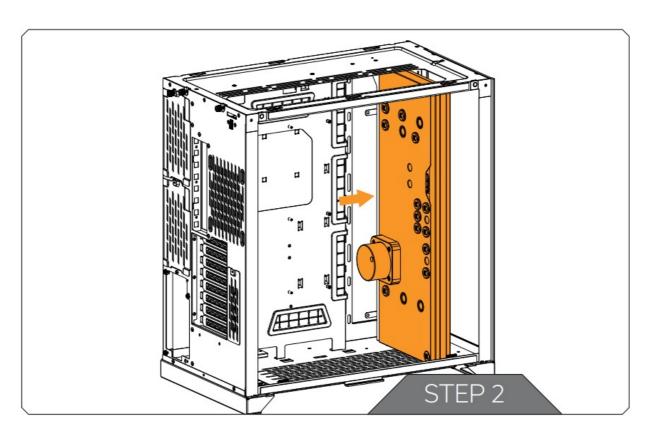


STEP 3
Secure the distribution plate to the chassis with two (2) M4 x 8 DIN7984 and M4 nuts (as shown in the diagram).

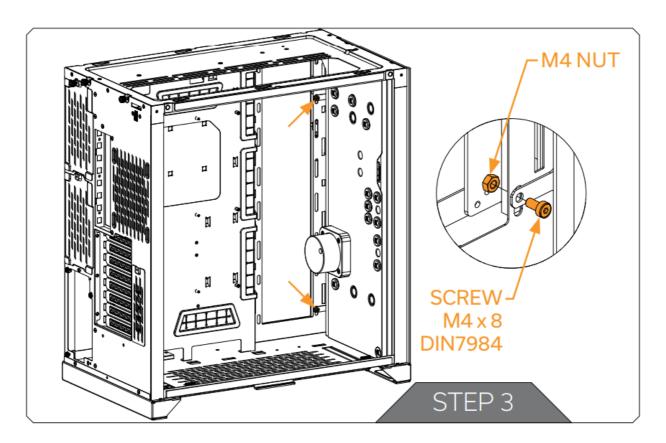


STEP 4


After the distribution plate is secured, the stored metal plate can be reattached using two (2) M3 \times 18 DIN7991 Screws. Tighten the screws evenly.

For this step you will need:

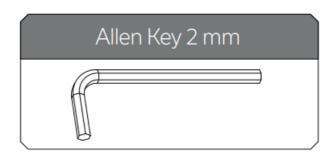

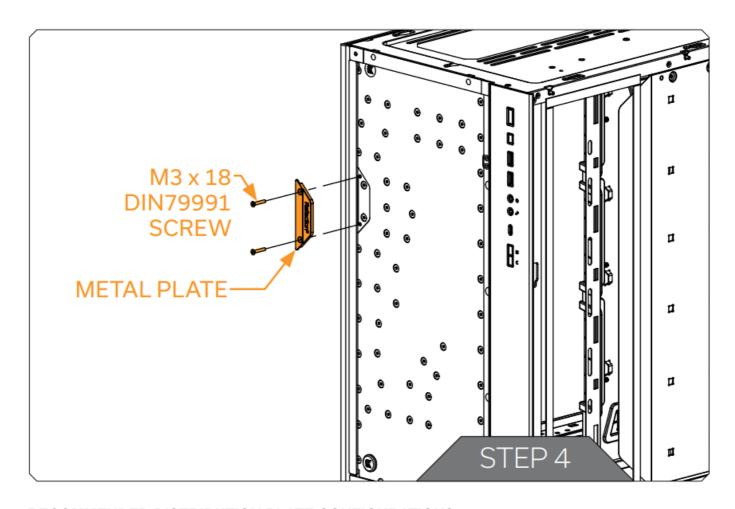


RECOMMENDED DISTRIBUTION PLATE CONFIGURATIONS

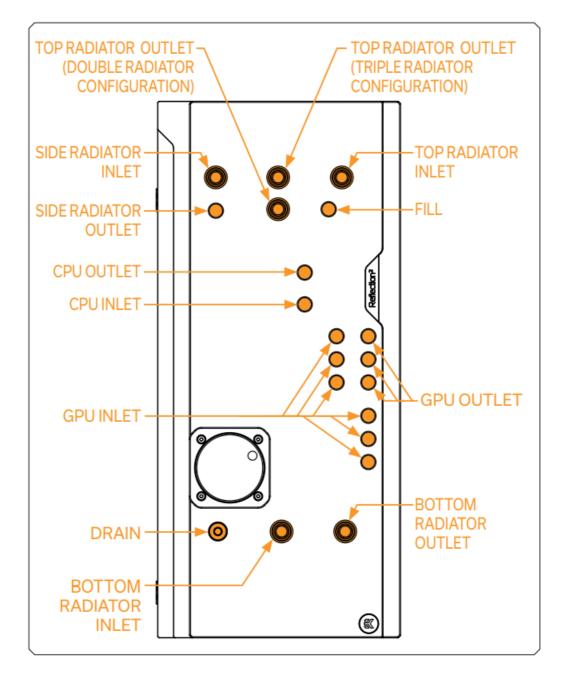


To complete your loop, all ports must be used as marked in the image. All remaining unused ports must be closed with supplied plugs, using the EK-Loop Multi Allen Key.

If one of the prescribed components will not be installed (ie. bottom radiator or GPU block) then one INLET and one OUTLET port must still be joined together in order for this distribution plate to function!

Only one INLET and one OUTLET port for the GPU connection can be used, while all other INLET and OUTLET GPU ports must be closed with G1/4 plugs (enclosed in the package).

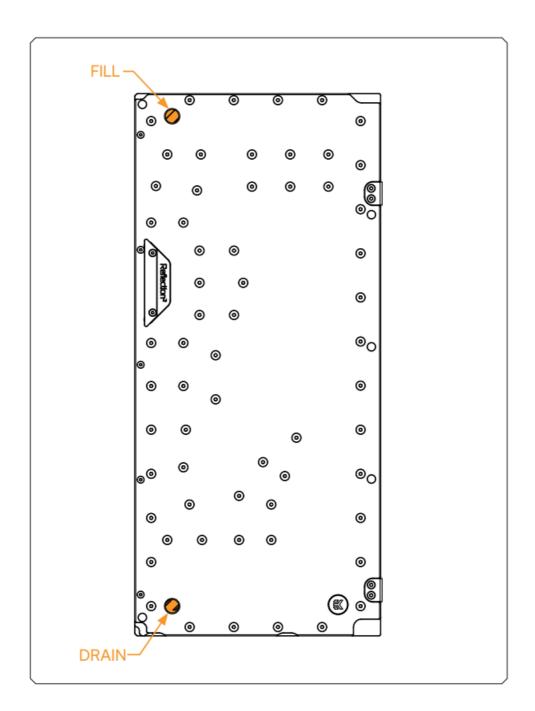


ATTACHING THE PUSH-IN ADAPTER (OPTIONAL)

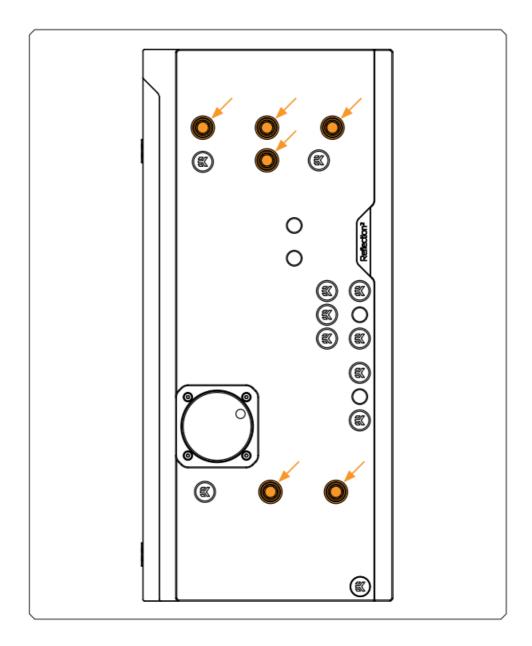

The push-in adapters can be attached to the marked places in the diagram.


For easier installation of the push-in adapters, EK recommends to lubricate the O-rings with a few drops of coolant or water.

CONNECTING THE D-RGB LED STRIP

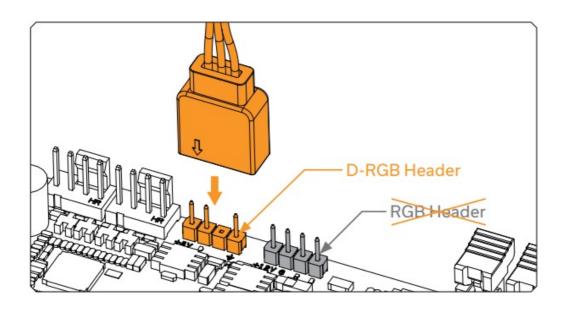

Plug the 3-pin connector of the distribution plate D-RGB LED light to the D-RGB HEADER on the motherboard. The LED will work if the pin layout on the header is as follows: +5V, Digital, Empty, Ground.

CONNECTING THE PUMP

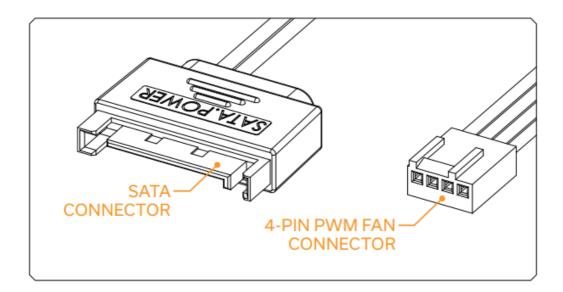

The EK-D5 PWM pump has two connectors.

- 1. SATA Connector: It must be connected directly to your PSU at all times as it is used to power the pump.
- 2. 4-pin PWM fan: It can be connected to your motherboard's CPU Fan or designated water pump header. It can also be connected to a controller. This cable is used to control and report the rotational speed of the pump. If it's not connected, the pump will run at maximum speed (100% PWM).

TESTING THE LOOP

To make sure the installation of EK components was successful, we recommend you perform a leak test for 24 hours.

When your loop is complete and filled with coolant, connect the pump to a PSU outside of your system. Do not connect power to any of the other components. Turn on the PSU and let the pump run continuously. It is normal for the coolant level to drop during this process as air collects in the distribution plate.

Inspect all parts of the loop, and in the eventuality that coolant leaks, fix the issue and repeat the testing process. Ensure that all hardware is dry before the system is powered on in order to prevent any damage.

SUPPORT AND SERVICE

In case you need assistance or wish to order spare parts or a new mounting mechanism, please contact: https://www.ekwb.com/customer-support/

For spare parts orders, refer to the page with "TECHNICAL SPECIFICATIONS AND PRODUCT PARTS" where you can find the EAN number of each part you might need.

Include the EAN number with quantity in your request. Mounting Mechanism EAN can be found under "BOX CONTENTS"

Thermal pads are readily available in the EK shop

SOCIAL MEDIA





@EKWaterBlocks



ekwaterblocks



EKWBofficial





Documents / Resources

	EK Water Blocks Reflection2 PC-O11D XL D5 PWM D-RGB [pdf] User Guide Reflection2 PC-O11D XL D5 PWM D-RGB, Reflection2, PC-O11D XL D5 PWM D-RGB	
--	--	--

References

• User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.