



Eltako ESR62PF-IP-110-240V Impulse Switch with Relay Function IP Instruction Manual

[Home](#) » [Eltako](#) » **Eltako ESR62PF-IP-110-240V Impulse Switch with Relay Function IP Instruction Manual** 

Contents

- [1 Eltako ESR62PF-IP-110-240V Impulse Switch with Relay Function IP](#)
- [2 Typical connection](#)
- [3 Technical data](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)
- [5 Related Posts](#)



Eltako ESR62PF-IP-110-240V Impulse Switch with Relay Function IP



Impulse switch with relay function IP ESR62PF-IP/110-240V

- built for



Only skilled electricians may install this electrical equipment otherwise there is the risk of fire or electric shock

- **Temperature at mounting location:** -20°C up to +50°C.
- **Storage temperature:** -25°C up to +70°C.
- **Relative humidity:** annual average value <75%.

Impulse switch with integrated relay function IP with 1 NO contact potential free 16 A/250 V AC, 230 V LED lamps up to 200 W, 230 V incandescent lamps and halogen lamps 2000 W. Only 0.7 watt standby loss.

For installation. 49 x 51 mm, 25 mm deep.

- The terminals are plug-in terminals for conductor cross-sections of 0.2 mm² to 2.5 mm².
- Supply and control voltage locally 110-240 V.

Distance control connections/contact 6 mm.

In case of a power failure the system is disconnected in a preset sequence.

State-of-the-art hybrid technology combines advantages of nonwearing electronic control with high capacity of special relays.


- With control input for a mains voltage control button that may be installed in front of it. Glow lamp current is not permitted.

- This actuator is Apple-certified and can therefore be taught in Apple Home.

Various operating modes can be set for the local control terminal using the Eltako Connect app:

- Impulse switch (factory setting)
- Relay function normally open (ER)
- Relay function normally closed (ER inverse)
- Toggle switch

Typical connection

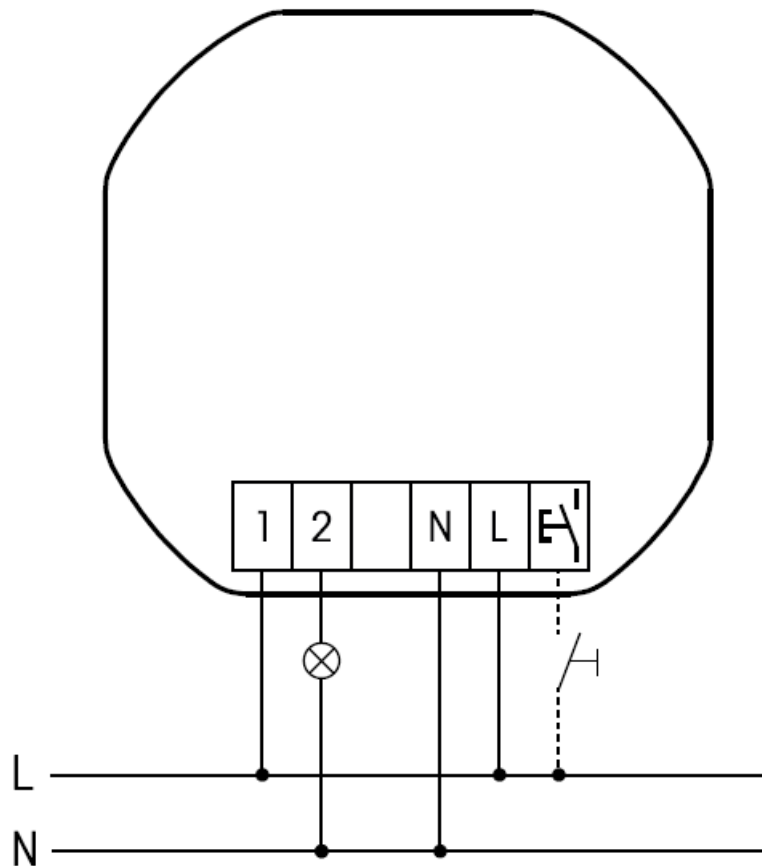

Add device to Apple Home:

- Only 2.4 GHz Wi-Fi frequency bands are supported.
- **Recommended:** Commissioning close to the main router.

1. Apply mains voltage and wait for the signal tone.
2. Wait 15 seconds until all modules have started.
3. Open the Apple Home app.
4. In the upper right corner press the '+' symbol and select 'Add device'.
5. Scan the Apple Home QR code. It can be found on the back of the device and on the QR code card in the packaging.
6. The Apple Home app will guide you through the remaining steps.

Important!

After a successful connection, an update is automatically searched for, installed and the device restarts.

Factory reset:

3 short and 3 long beeps will beep to confirm the reset:

Option 1:

Via the Eltako Connect app.

Option 2:

1. Apply supply voltage (time window of 5 minutes begins)
2. Connected switch/button: press 8x briefly (< 1 sec.) and 1x long (> 1.5 sec. and < 5 sec.).

A signal tone sounds for the last two short closing actions.

Outside of the time window, the device is simply restarted !

Option 3:

1. The device is disconnected from the supply voltage.
2. Apply supply voltage, wait for the signal tone and disconnect the supply voltage within 5 seconds.
3. Repeat step 2 a total of 5 times.
4. The sixth time the supply voltage is switched on, the successful factory reset is confirmed by 3 short and 3 long beeps

Over-the-Air (OTA) Firmware Updates:

- If the device is connected to the Internet, it will immediately search for possible updates. Updates are then requested cyclically every 12 hours.
- Data transfer between the Eltako update server and the device meets the highest security standards.
- Before an update is installed, it is checked whether it is correctly encrypted, validated and undamaged.
- Updates are downloaded and installed, but only activated when no important process is running and no load is switched. The restart required for this takes a few seconds and goes unnoticed.
- If an update fails or leads to device instability, the system automatically switches back to the previous firmware version and waits for a new update.

Offline firmware updates:

The device supports offline firmware updates via REST API. More information on this on the product website.

Technical data

- Rated switching capacity 16 A/250 V AC
- 230 V LED lamps up to 200 W 2), I on ≤ 78 A/5 ms
- Incandescent lamp load and halogen lamp load 1) 230 V 2000 W
- Fluorescent lamp load with KVG in lead-lag circuit or non compensated 1000 VA
- Fluorescent lamps with KVG* 500 VA shunt-compensated or with EVG*

- Max. parallel capacitance 30 nF (approx. length) of local control lead: (100 m)
- Standby loss (active power) 0,7 W

EVG = electronic ballast units;

KVG = conventional ballast units

1. For lamps with 150 W max.
2. Due to different lamp electronics and depending on the manufacturer, the maximum number of lamps may be limited, especially if the wattage of the individual lamps is very low (e.g. with 2 W LEDs).

Manuals and documents in further languages



http://eltako.com/redirect/ESR62PF-IP*110-240V



To control this HomeKit-enabled accessory, the latest version of iOS or iPadOS is recommended. Use of the Works with Apple badge means that an accessory has been designed to work specifically with the technology identified in the badge and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Apple, Apple Home, and HomeKit are trademarks of Apple Inc., registered in the U.S. and other countries and regions.

- **Frequency** 2.4 GHz
- **Transmit power max.** 100 mW

Hereby, Eltako GmbH declares that the radio equipment type ESR62PF-IP/110-240V is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity can be accessed via the QR code or the internet address under 'Documents'

Must be kept for later use! Eltako GmbH D-70736 Fellbach

Technical Support English:


+49 711 943 500 25

technical-support@eltako.de

eltako.com

51/2022 Subject to change without notice.

Documents / Resources

	<p>Eltako ESR62PF-IP-110-240V Impulse Switch with Relay Function IP [pdf] Instruction Manual</p> <p>ESR62PF-IP-110-240V Impulse Switch with Relay Function IP, ESR62PF-IP-110-240V, Impulse Switch with Relay Function IP, Switch with Relay Function IP, Relay Function IP, Function IP, IP</p>
---	--

References

-  [Home » Eltako](#)
-  [ESR62PF-IP/110-240V » Eltako](#)