



## EVERSPRING AN196 Dual Relay Module User Manual

[Home](#) » [EVERSPRING](#) » EVERSPRING AN196 Dual Relay Module User Manual 




The dual relay in-wall module contains two sets of relays and switches, with each set dedicated for controlling lighting or an appliance in your home.

The module is a Z-Wave™ enabled device that is fully compatible with any Z-Wave™ enabled network. Each relay can be turned on/off individually using Z-wave™ commands or using the switches connected to the module. At 230V voltage, this module can support up to 2\*4.3A output, 2\*1000W resistive load. This unit is to be installed and sealed inside an electrical switch box.

### Contents

- [1 Product Overview](#)
- [2 Adding to Z-Wave™ Network](#)
- [3 Safety Precautions & Installation](#)
- [4 IMPORTANT](#)
- [5 Operation](#)
- [6 Programming](#)
- [7 Command Classes](#)
- [8 Additional Command Classes Supported](#)
- [9 Troubleshooting](#)
- [10 Specifications](#)
- [11 Documents / Resources](#)
  - [11.1 References](#)
- [12 Related Posts](#)

## Product Overview

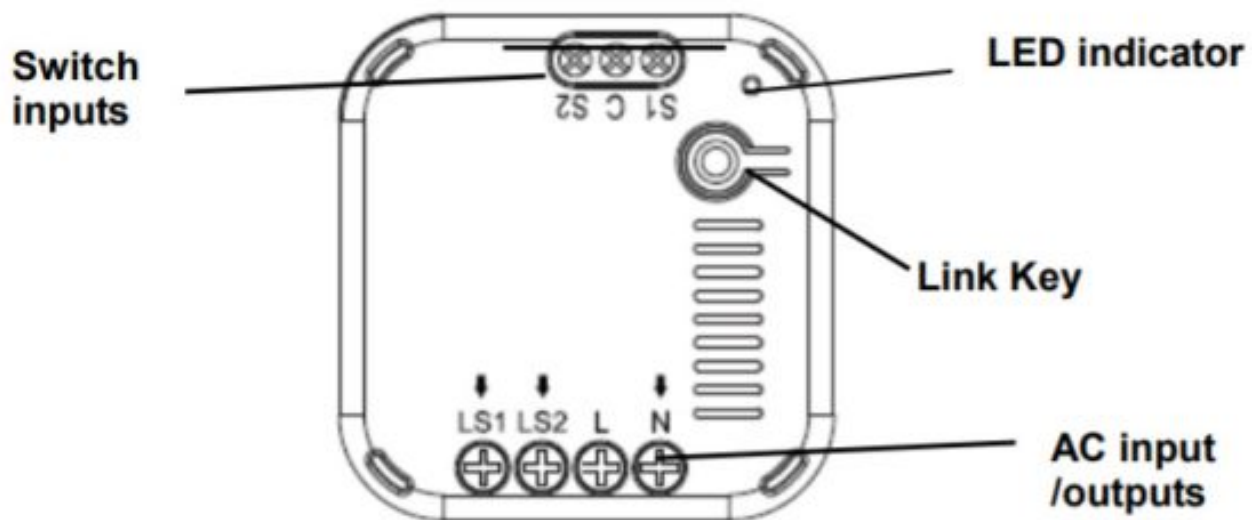

## Adding to Z-Wave™ Network

The unit supports the SmartStart function, where inclusion is initiated automatically on power-on, and repeated at dynamic intervals for as long as the device is not included in a Z-Wave network. Z-Wave SmartStart is based on the embedded SDK 6.8x and requires related gateway software components.

If the gateway does not support the SmartStart function, this device can be added to the Z-Wave network using manual inclusion, or by scanning the DSK QR code or entering a 5-digit Device Specific Key (DSK) when requested by the gateway.

## Safety Precautions & Installation

To ensure your safety, please read this manual carefully before installing the device; follow the instructions exactly. The manufacturer, Everspring Industry Co., Ltd, shall not be legally responsible for any equipment damage or personal injury caused by incorrect installation or operation other than that covered in the manual.

- Avoid installing the unit in storming or raining weather.
- Be sure to isolate or switch off the power source before installing or maintaining it.
- To ensure that the power supply circuit is protected by a 16 amp circuit breaker or suitable equivalent fuse.
- The electronic switch is designed to operate in electrical home installation. Faulty connection or use may result in fire or electric shock.

## IMPORTANT

Installation must be performed by skilled technicians who are informed about the standards and technical requirements of the appliance and its proper installation. Note that the Dual Relay Module is designed to be installed in a wall switch box to operate.

Check your local codes as they apply to your situation. If the house wiring is of aluminum, consult with an electrician about proper wiring methods.


Before proceeding with the installation, TURN OFF THE POWER TO THE LIGHTING CIRCUIT AT THE CIRCUIT BREAKER OR FUSE BOX TO AVOID ELECTRICAL SHOCK.

Do not connect the device to loads exceeding the recommended values. Connect the device exactly as shown in the provided diagrams. Improper wiring may be dangerous and result in equipment damage.

Locate the antenna as far from metal elements as possible (connecting wires, bracket rings, etc.) in order to prevent interferences.

To connect up the module, follow the wiring connection according to the following diagram.

The unit contains two relays, each relay independently controlling loads connected to LS1 and LS2. External switches S1 and S2 can be connected to the module to allow manual control of the LS1 and LS2 respectively.

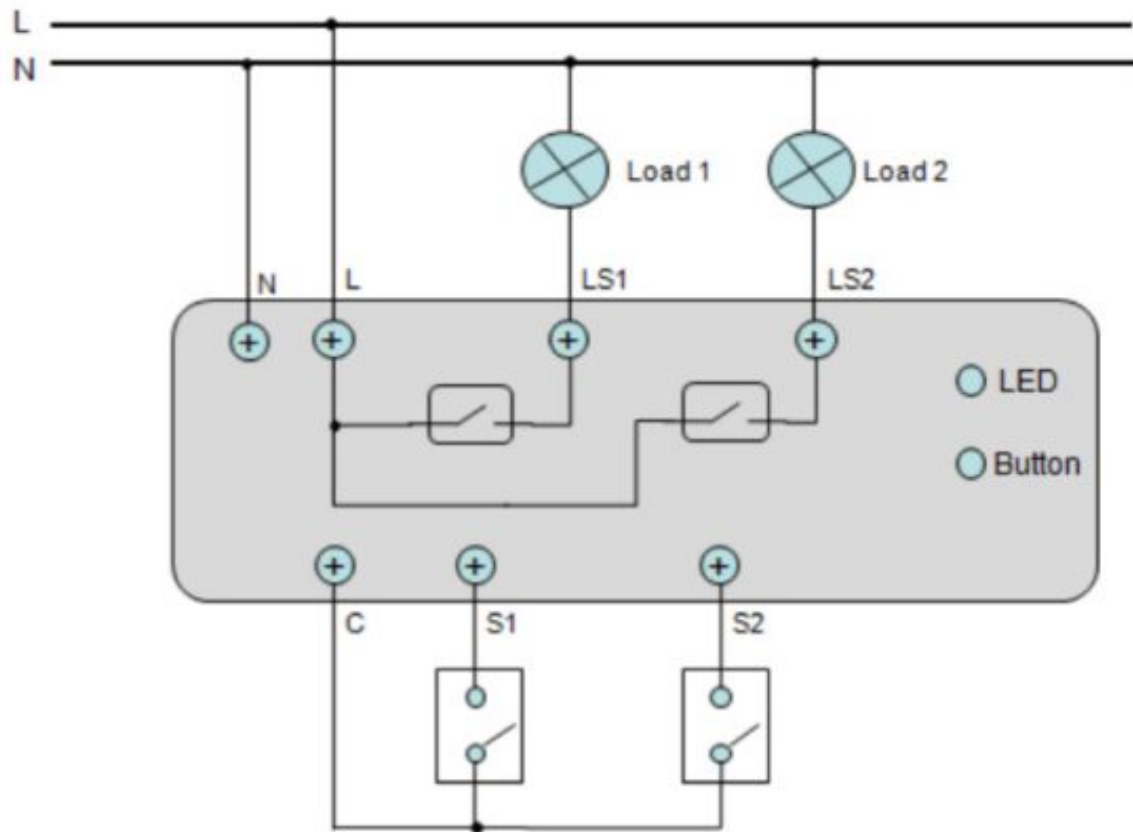

Warning: The external switches cannot be connected to the load directly.

## Operation

The relays in the unit can be controlled through Z-wave commands from a Z-Wave Controller, through connected switches S1 and S2.

When either one of the connected loads is on, the LED indicator will turn on, when both of the connected loads are off, the LED indicator will turn off.

The unit can be set to remember the status of the relay before power is cut off (such as power blackout).

When power is supplied again, the unit will resume the last status of the relay (on or off) automatically.

## Programming

### Z-Wave Group Support

The on/off plug supports two Z-wave Association Groups:

Group 1: Association with 5 Controller nodes.

Group 2: Association with 5 nodes.

Group 1 commands:

- When the unit is powered up for first time, a Notification Report will be sent to the node of Group 1.
- When performing Factory Reset, a Device Reset Locally Notification will be sent to the node of Group 1.
- When the device is on or off, the unit will send a Binary Switch Report to the node of Group 1.

**Group 2 commands:**

- When the button is pressed, a BASIC SET command containing a value will be sent to the node of Group 2  
(When the device is off, Basic Set Value=0x00, when the device is on, Basic Set Value=0xFF).

### Z-Wave Plus Info (Root/Endpoint1/Endpoint2)

Role Type	Node Type	Installer Icon	User Icon
Slave Always On	Z-Wave Plus node	On/Off Power Switch	On/Off Power Switch

### Version

Protocol Library	3 (Slave Enhance 232 Library)
Protocol Version	6.07 (6.81.06)

### Manufacturer

Manufacturer ID	Product Type	Product ID
0x0060	0x0004	0x000F

### AGI (Association Group Information) Table

Group	Profile	Command Class & Command (List) N bytes	Group Name(UTF-8)
1	General	Binary Switch Report, Notification Report, Device Reset Locally Notification	Lifeline
2	Control	Basic Set	On/Off control (Button))

### Basic commands

Command	Description
Basic Get	Inquire about the status of the device
Basic Report	Report the status of the device.
Basic Set	Set the status of the device.(Value=0xFF (ON), 0x00 (OFF))

### Notification

Event	Type	Event	Event Parameters Length
Power applied for the first time	0x08	0x01	0x00

## Configuration

The configurable values are as follows:

Parameter Number	Parameter Function	Size	Range	Default
1	Set whether to remember the last status	1	1/0	1: remember (0: do not remember)

## Command Classes

The module supports Command Classes including...

- COMMAND\_CLASS\_ZWAVEPLUS\_INFO\_V2
- COMMAND\_CLASS\_ASSOCIATION\_V2
- COMMAND\_CLASS\_ASSOCIATION\_GRP\_INFO
- COMMAND\_CLASS\_MULTI\_CHANNEL\_ASSOCIATION\_V2
- COMMAND\_CLASS\_TRANSPORT\_SERVICE\_V2
- COMMAND\_CLASS\_VERSION\_V2
- COMMAND\_CLASS\_MANUFACTURER\_SPECIFIC\_V2
- COMMAND\_CLASS\_DEVICE\_RESET\_LOCALLY
- COMMAND\_CLASS\_POWERLEVEL
- COMMAND\_CLASS\_SECURITY
- COMMAND\_CLASS\_SECURITY\_2
- COMMAND\_CLASS\_SUPERVISION
- COMMAND\_CLASS\_FIRMWARE\_UPDATE\_MD\_V4
- COMMAND\_CLASS\_NOTIFICATION\_V8
- COMMAND\_CLASS\_CONFIGURATION
- COMMAND\_CLASS\_SWITCH\_BINARY

## Additional Command Classes Supported

- Binary Switch: Refer to Basic.
- Multi-Channel: To control 2 relays independently.
- Firmware Update: For OTA function.

## Troubleshooting

The table below lists the several steps involved when adding or removing the detector from the Z-Wave network.

Action/Status	Description	LED indication
No node ID	The Z-Wave Controller does not allocate a node ID to the unit .	2-second on, 2-second off
Inclusion	1. Put the Z-Wave Controller into inclusion mode.	
	2. Press the link key three times within 1.5 seconds to put the unit into inclusion mode.	
Exclusion	1. Put the Z-Wave Controller into exclusion mode.	
	2. Press the link key three times within 1.5 seconds to put the unit into exclusion mode.	
Reset (This procedure should only be used when the network primary controller is inoperable.)	1. Press the link key three times within 1.5 seconds to put the unit into exclusion mode.	
	2. Within 1 second of step 1, press the link key again and hold until LED is off (about 5 seconds).	
	3. Node ID is excluded. The device reverts to the factory default state and will be in auto-inclusion mode for 4 minutes.	
*Failed or successful results in including/excluding the ID can be viewed on the Z-Wave Controller.		

**Note:** If you are connecting this unit to a Z-Wave Controller that utilizes the S2 security protocol, you may be asked to enter a 5 digit Device Specific Key (DSK) that is unique to each unit by your controller. This can be found in one of two places:

- on the QR code label on the back of the unit
- on the insert card inside the packaging

The table below lists typical problems encountered:

Symptom	Cause of Failure	Recommendation
Device not responding and LED not displaying	The device is not wired to the mains power correctly	Check if wiring is correct, or voltage is too high or too low
	Device malfunction	Send the device to be repaired
LED display, but cannot control On/Off status of connected load	The connected load has its own on/off switch	Turn the switch of the connected load to On.
Cannot control by RF but switch control works.	RF interference is occurring. Someone nearby might be emitting an RF signal of the same frequency	Wait for a while and retry the operation

## Specifications

Frequency Range	EU: 868.42MHz, AU: 921.42MHz
Power Input	AC230V,50Hz
Maximum Power Load(AC230V)	Resistive Load: 2x1000W, or 2 x 4.3A Incandescent lamp load: 2 x 800W Fluorescent lamp load: 2 x 120W LED: 2 x 100W
Transmission Range	70 meters (Indoor open area with the antenna outside of wall box )
Working Temperature	-10°C – 40°C

\*Specifications are subject to change without notice



### Warning:

Do not dispose of electrical appliances as unsorted municipal waste. Please use separate collection facilities instead.

Contact your local government for information regarding the available collection systems.

If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.

When replacing old appliances, the retailer is legally obligated to take back your old appliances for disposal free of charge.



**EVERSPRING®**

[www.everspring.com](http://www.everspring.com)

3F., No. 50, Sec 1, Zhonghua Rd., Tucheng Dist.,  
New Taipei City 23666, R.O.C

### Documents / Resources

	<a href="#">EVERSPRING AN196 Dual Relay Module</a> [pdf] User Manual AN196, Dual Relay Module
	<a href="#">EVERSPRING AN196 Dual Relay Module</a> [pdf] User Manual AN196, Dual Relay Module

### References

- [Everspring –](#)