




Gtech HT Series HT50 Cordless Hedge Trimmer User Manual

[Home](#) » [Gtech](#) » Gtech HT Series HT50 Cordless Hedge Trimmer User Manual 

Gtech

Cordless Hedge Trimmer
HT Series

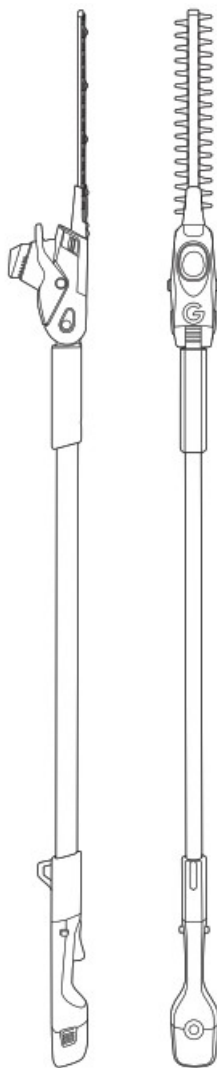

OPERATING MANUAL

IMPORTANT SAFEGUARDS:



**IMPORTANT: READ ALL INSTRUCTIONS BEFORE USE.
RETAIN INSTRUCTIONS FOR FUTURE REFERENCE.**



WARNING: Basic safety precautions should always be observed when using an electrical appliance to reduce the risk of fire, electrical shock or serious injury.



Do not use in rain or leave outdoors whilst raining.

Contents

1	Personal safety:
2	Electrical safety:
3	Battery safety:
4	Training:
5	Preparation:
6	Operation:
7	Maintenance and storage:
8	Service:
9	Intended use:
10	Assembly
11	Operation
12	Rotating the hedge trimmer blade
13	Removing the blade
14	Safety harness
15	Using your hedge trimmer
16	Removing the battery for charging
17	Checking battery charge status
18	Charging the battery
19	Troubleshooting
20	Product support
21	SUMMARY
22	WHAT ISN'T COVERED
23	Documents / Resources
23.1	References
24	Related Posts

Personal safety:

- Only use the hedge trimmer in the manner intended and for trimming hedges as described in this manual.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience or knowledge.
- Keep out of reach of children and animals at all times. Keep children and bystanders away while operating a power tool. Distractions can cause you to lose control.
- Pay special attention to the hazards posed to third parties by the reach working radius. Always be aware of your surroundings and stay alert for possible hazards.
- Stay alert, watch what you are doing, and use common sense when operating a power tool.
- The operator is responsible for accidents or hazards occurring to other people at their property.
- Do not use power tools while you are tired or under the influence of drugs, alcohol, or medication. This may result in serious personal injury.
- Do not expose this hedge trimmer to rain or wet conditions. Water entering a power tool will increase the risk of electric shock.
- Keep your work area clean and well-lit. Cluttered or dark areas invite accidents.
- Only use in daylight or good artificial light.
- Always be sure of your footing on ladders, slopes, or in slippery conditions. Do not over-reach or use this hedge trimmer on excessively steep slopes.
- Check the hedge and area where the hedge trimmer is being used for any objects, such as wire fences, that could damage or jam the trimmer blade.

- Dress appropriately. Do not wear loose clothing or jewelry and keep hair, clothing, and gloves away from moving parts. Do not operate when barefoot or wearing open-toed shoes.
- Use protective personal equipment such as safety glasses, non-skid safety shoes, and sturdy gloves to reduce the risk of personal injury.
- Keep all body parts, especially hands and feet, away from the blade at all times.
- Do not run with the hedge trimmer.
- When operating the hedge trimmer, ensure that both hands are correctly positioned on the handle.
- Do not operate the hedge trimmer if it is incomplete or has unauthorised modifications.
- Warning: the blade will continue to move after the motor is switched off.
- Remove the battery and ensure the motor and blade have stopped turning before: cleaning; clearing a blockage; checking or carrying out maintenance on the hedge trimmer.
- Avoid accidental starting. Ensure the switch is in the 'Off' position before picking up or carrying the hedge trimmer.
- Carry the hedge trimmer by the handle with the blade stopped.
- When transporting or storing the hedge trimmer, always fit the protective blade cover.
- Never operate the trimmer with damaged guards.
- Keep the product and all accessories away from hot surfaces.
- Never modify the hedge trimmer in any way.

Electrical safety:

- Do not operate this hedge trimmer in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Power tools create sparks which may ignite the dust or fumes.
- Do not use the hedge trimmer when a thunderstorm is approaching.
- Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is earthed or grounded.
- Do not overreach. Keep proper footing and balance at all times. This enables better control of the hedge trimmer in unexpected situations.
- Do not expose the hedge trimmer to rain or wet conditions.
- Do not handle the charger or hedge trimmer with wet hands.
- Before charging, check the power supply and charger cables for signs of damage or ageing.
- Do not overload the hedge trimmer. For safety, the hedge trimmer will automatically cut out if the motor becomes overloaded. If this occurs, wait a few seconds for the cut out to reset and then use lighter cuts to trim the hedge.

Battery safety:

- This product contains Li-ion batteries. Do not incinerate batteries or expose to high temperatures, as they may explode.
- Do not abuse the charger cord. Never use the charger cord for carrying, pulling or unplugging the power tool. Keep the charger cord away from heat, oil, sharp edges or moving parts. Damaged or entangled charger cords increase the risk of electric shock.
- Use only with the battery pack supplied.

- Do not attempt to use charger with any other product or to charge this product with any other charger.
- Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of injury and fire when used with another battery pack.
- Do not charge the battery when the surrounding air temperature or the battery pack is below 0°C or above 35°C.
- After heavy use or in high temperatures, the battery may become warm. Allow the product to cool for 30 minutes before charging.
- Leaks from battery cells can occur under extreme conditions. If the liquid gets on your skin, wash the area immediately with soap and water. If the liquid gets into your eyes, flush them immediately with cold water for a minimum of 10 minutes and seek urgent medical attention.
- Do not store the battery outside or in cold conditions for prolonged periods of time.
- When the battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.
- Do not use hedge trimmer continuously with multiple batteries without a minimum of 60 minutes of rest time in between uses.

Training:

- Read the instructions carefully. Be familiar with the controls and the correct use of the hedge trimmer.
- Never allow children or people unfamiliar with these instructions to use the hedge trimmer. Local regulations can restrict the age of the operator.
- Keep in mind that the operator or user is responsible for accidents or hazards occurring to other people or their property.

Preparation:

- Before use, always visually inspect the hedge trimmer for damages.
- Never operate the hedge trimmer while people, especially children, or pets are nearby.

Operation:

- Wear eye protection and stout shoes at all times while operating the hedge trimmer. Use protective personal equipment such as safety glasses, nonskid safety shoes, and sturdy gloves to reduce the risk of personal injury.
- Avoid using the hedge trimmer in bad weather conditions, especially when there is a risk of lightning.
- Switch on the motor only when the hands and feet are away from the cutting means.
- Always disconnect the hedge trimmer from the removable battery: whenever the hedge trimmer is left unattended; before clearing a blockage; before checking, cleaning, or working on the hedge trimmer; after striking a foreign object; whenever the hedge trimmer starts vibrating abnormally.
- Always ensure that the ventilation openings are kept clear of debris.
- Keep all parts of the body away from the cutter blade. Do not remove cut material, or hold material to be cut, when blades are moving. Make sure the switch is off when clearing jammed material. A moment of inattention while operating the hedge trimmer may result in serious personal injury.

- Do not operate product when ambient temperature is above 35 degrees.
- Carry the hedge trimmer by the handle with the cutter blade stopped. When transporting or storing the hedge trimmer, always fit the cutting device cover. Proper handling of the hedge trimmer will reduce possible personal injury from the cutter blades.
- Hold the hedge trimmer by its insulated gripping surfaces only, because the cutter blade may contact hidden wiring. Cutting blades contacting a 'live' wire may make exposed metal parts of the power tool 'live' and could give the operator an electric shock.
- Do not use the hedge trimmer if the switch does not turn it on and off. Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- Disconnect the charger from the hedge trimmer and the battery pack from the power tool before making any adjustments, changing accessories, or storing the hedge trimmer. Such preventive safety measure reduces the risk of starting the hedge trimmer accidentally.
- Store idle power tools out of way of children and do not allow persons unfamiliar with the hedge trimmer or these instructions to operate the power tool. Hedge trimmers are dangerous in the hands of untrained users.
- Maintain the hedge trimmer. Check for misalignment or binding of moving parts, breakage of parts, and any other condition that may affect the power tool's operation. If damaged, have the hedge trimmer repaired before use. Many accidents are caused by poorly maintained power tools.
- Keep cutting tools sharp and clean. Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.
- Use the hedge trimmer, accessories and tool bits etc in accordance with these instructions, taking into account the working conditions and the work to be performed. Use of the hedge trimmer for operations different from those intended could result in a hazardous situation.

Maintenance and storage:

- Disconnect the hedge trimmer from the removable battery before carrying out maintenance or cleaning work.
- Use only the manufacturer's recommended replacement parts and accessories.
- Inspect and maintain the hedge trimmer regularly. Have the hedge trimmer repaired only by an authorised repairer.
- When not in use, store the hedge trimmer out of the reach of children.








Service:

- Do not use the hedge trimmer if the switch does not turn it on or off. If hedge trimmer cannot be controlled by the switch it could be dangerous and therefore must be replaced.
- Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the trimmers operations. If damaged, have the power tool repaired or replaced.
- Check that the blade is clean and without damage. If the blade becomes worn, a replacement should be fitted before use.
- Wear protective gloves when handling or cleaning the blade.
- Before using the hedge trimmer, and after any impact, check for signs of wear and damage or replace as necessary.
- Always ensure that the ventilation openings are kept clear of debris.
- Do not attempt to repair any damaged parts on the hedge trimmer unless you are qualified to do so.

Intended use:

- This product is intended for **DOMESTIC USE ONLY**.

Warning label descriptions

	General hazard safety alert.		Measured sound power level: L WA = 87.1 dB(A) K =3dB(A) Guaranteed sound power level: 90 dB(A) Note: Measured noise values determined according to 2000/14 EC (1.60m height, 1.0 m distance away).
	Read instruction manual before use		Do not use in rain or leave outdoors whilst raining.
	Wear eye protection when using this product.		Risk of fatal injury due to electric shock! Keep at least 10m away from electricity lines.
	Wear ear protection when using this product.		




Thank you for choosing Gtech

“Welcome to the Gtech family. I started Gtech to create sensible, easy to use products that do a great job, and hope you get many years of trouble-free performance from your new product.”

Nick Grey – Inventor, owner of Gtech


What’s in the box

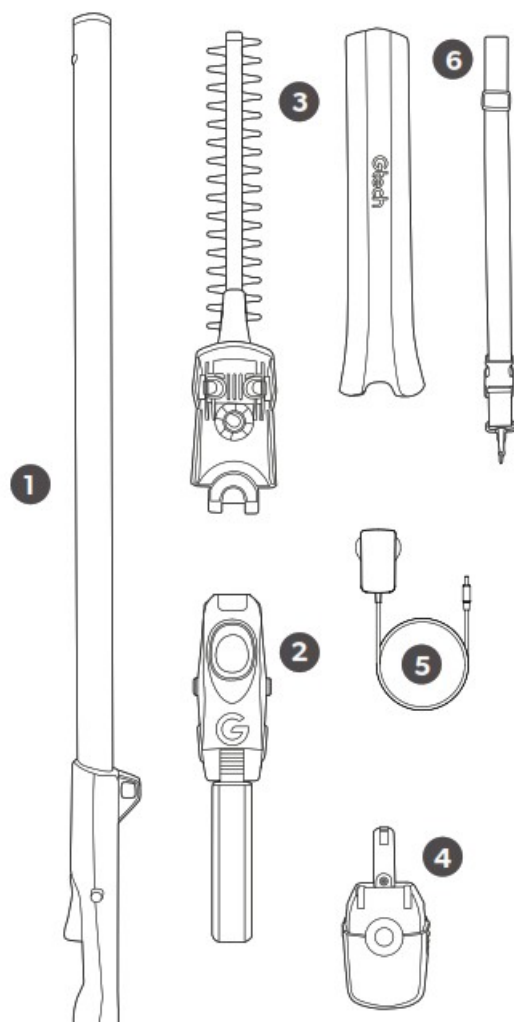


1. Hedge trimmer main unit
2. Hedge trimmer head
3. Blade + blade cover

4. Battery
5. Battery charger
6. Safety harness

Assembly

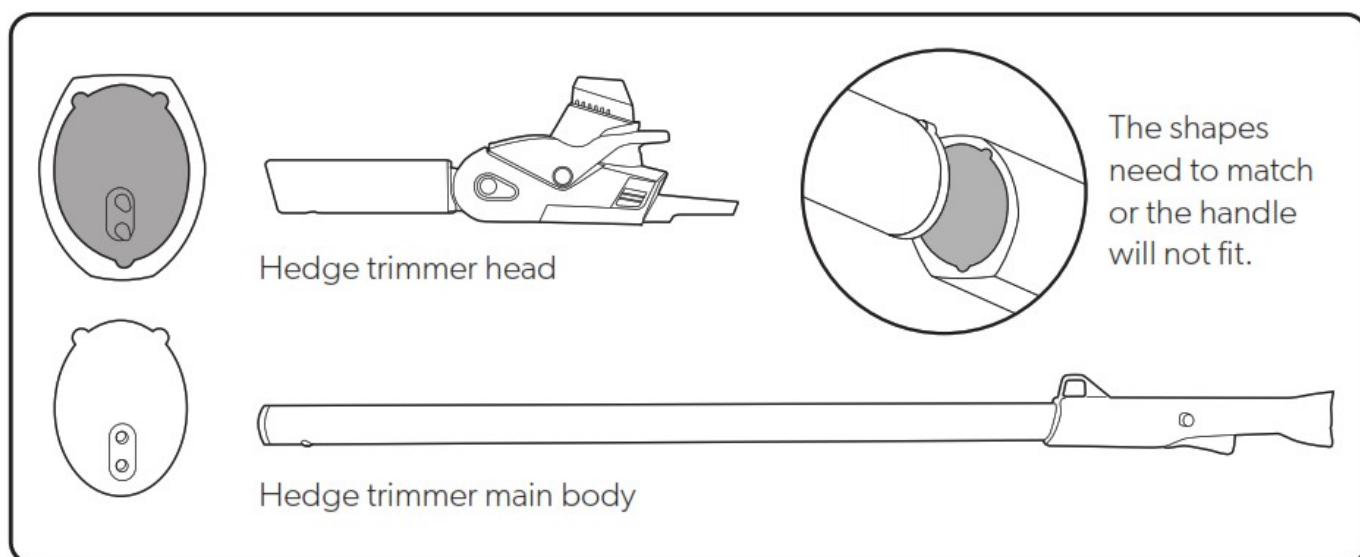


When inserting the body into the hedge trimmer head, ensure the body is the right way up. The shapes need to match or the handle will not fit.

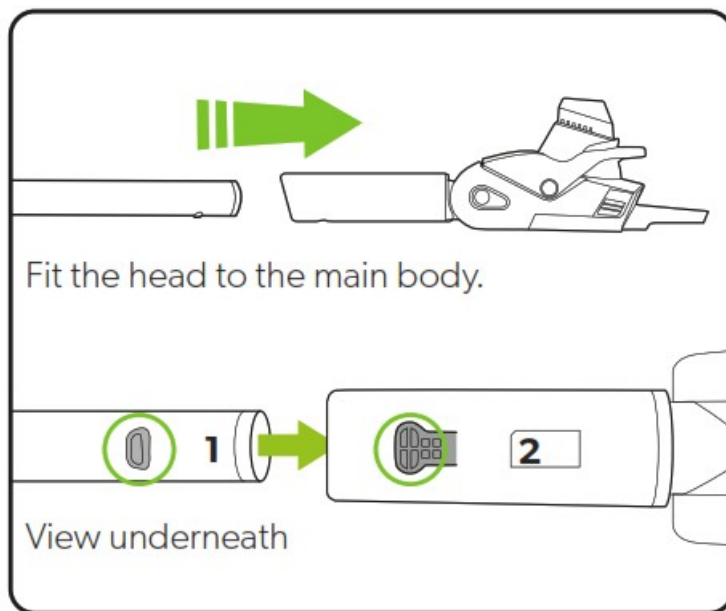

When the pole is fully inserted, the button (1) will pop up into the aperture (2). To remove, press the button (1) and pull the pole.



With the blade closed to the head.

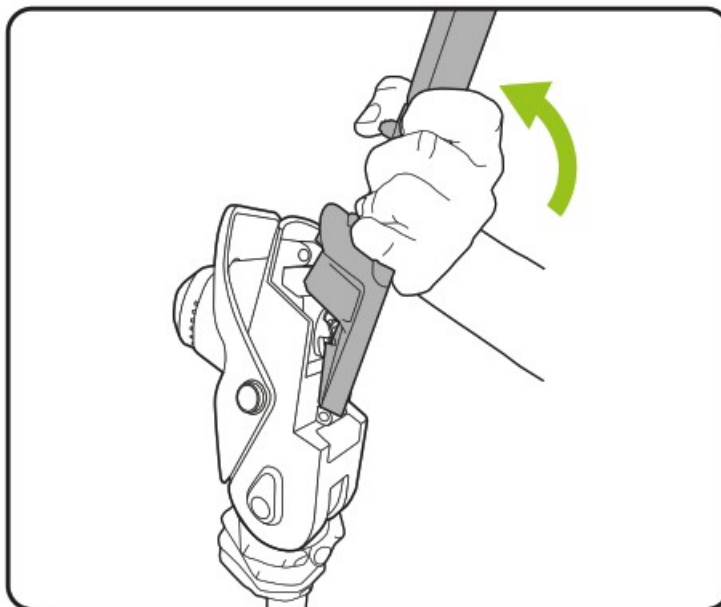

It will lock (click) securely into place.

Insert the battery.

Operation

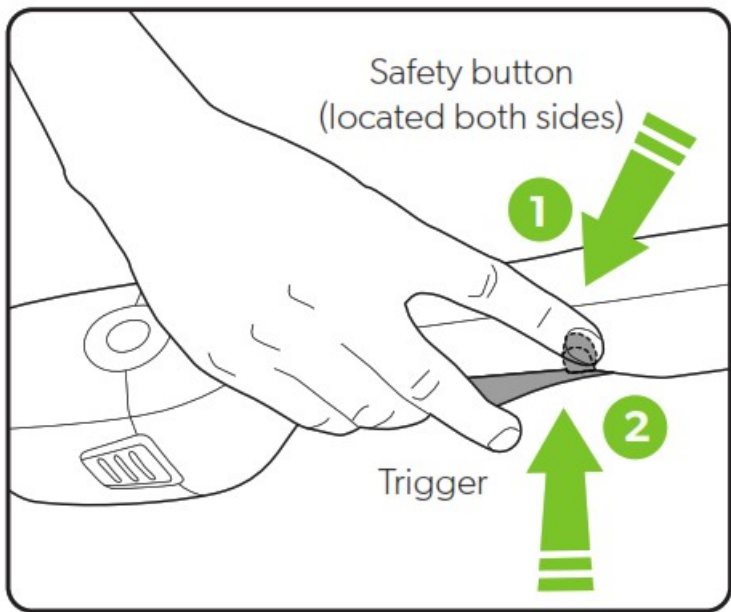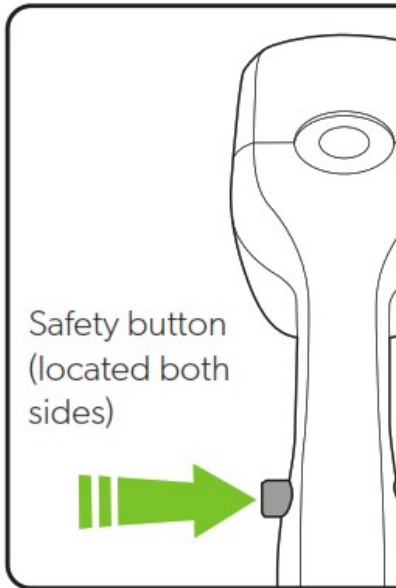 <p>Safety button (located both sides)</p> <p>1</p> <p>Trigger</p> <p>2</p>	 <p>Safety button (located both sides)</p>
<p>Push and hold the safety button on either side, then press the trigger to operate</p>	<p>When you release the trigger, the</p>



Rotating the hedge trimmer blade





WARNING: to reduce risk of personal injury, ensure the trimmer is switched off and the blade has stopped before adjusting the cutting head.



WARNING: ensure the cutting head is securely locked in position before starting the trimmer.

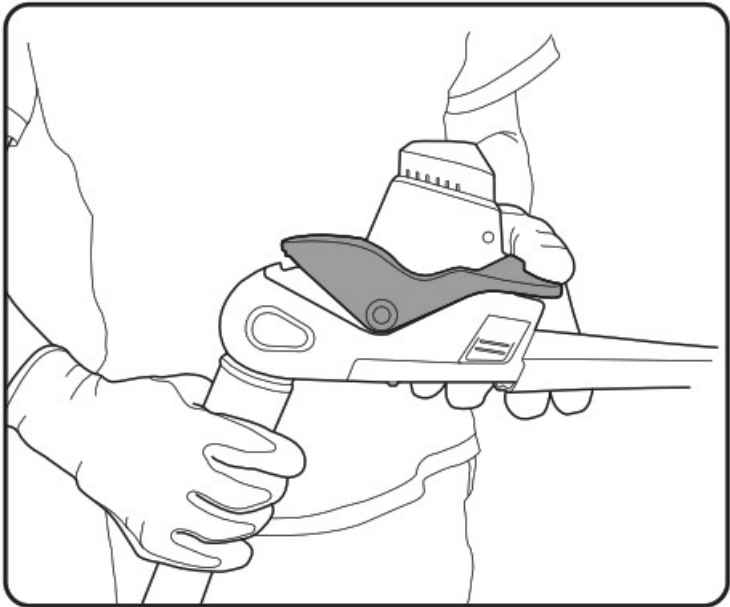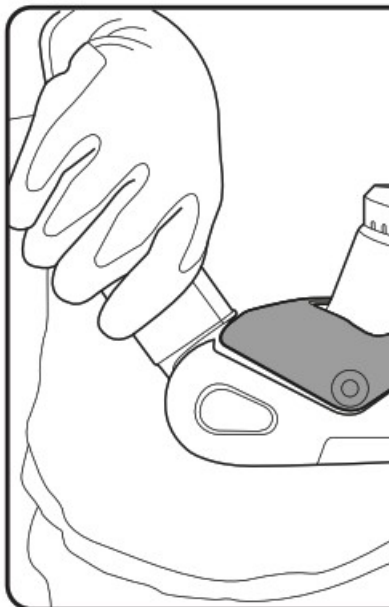
	
<p>Remove the battery and ensure that the blade cover is on before continuing the next step. Depress the lever as shown. The head will now rotate freely.</p>	<p>You can now rotate the head whilst press lever and it will lock into place. This feature cutter.</p>

Removing the blade

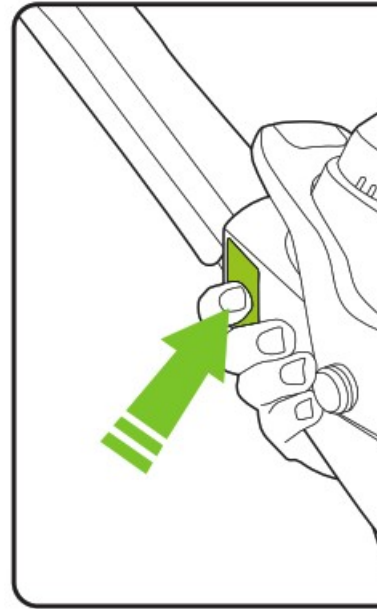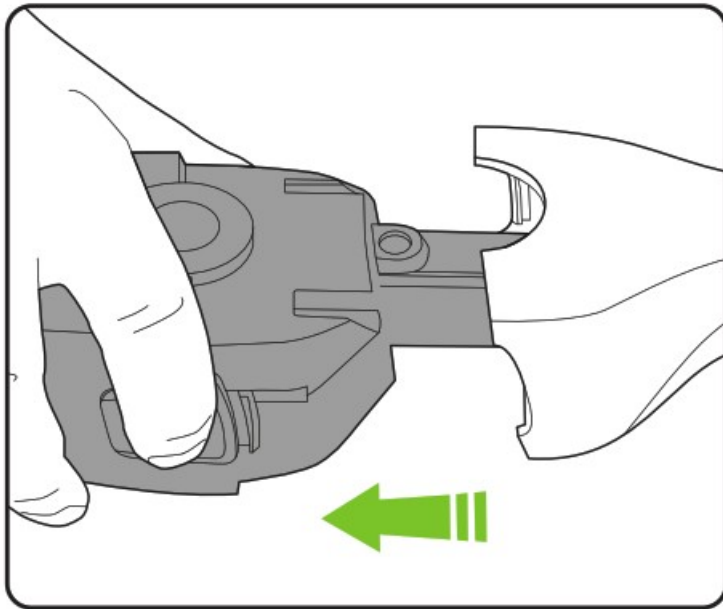



Remove the battery and ensure the cover is on the blade.

Press the green buttons on either side

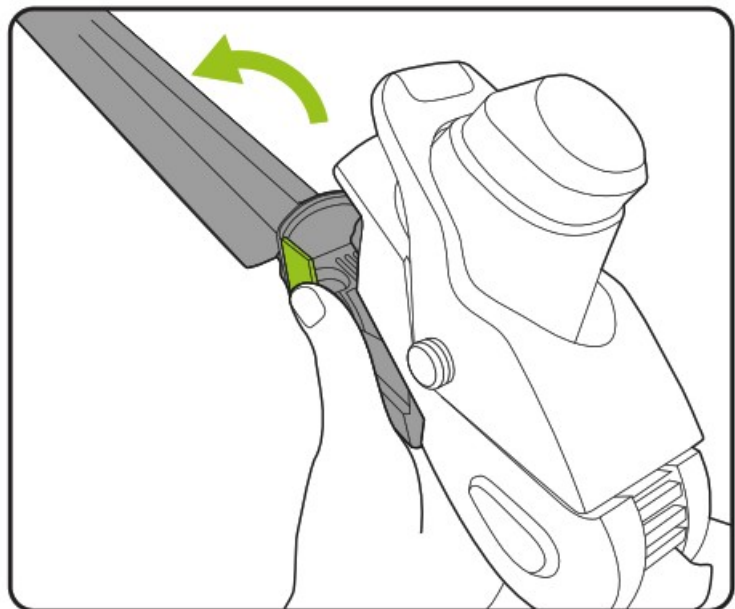


The blade will pivot away from the head.

Safety harness

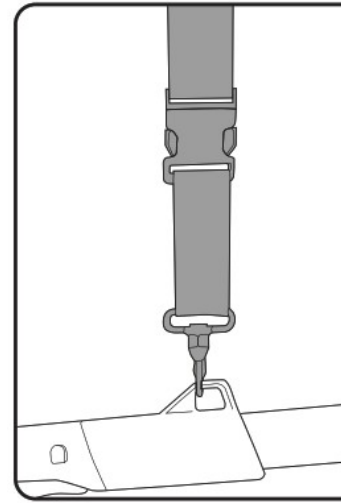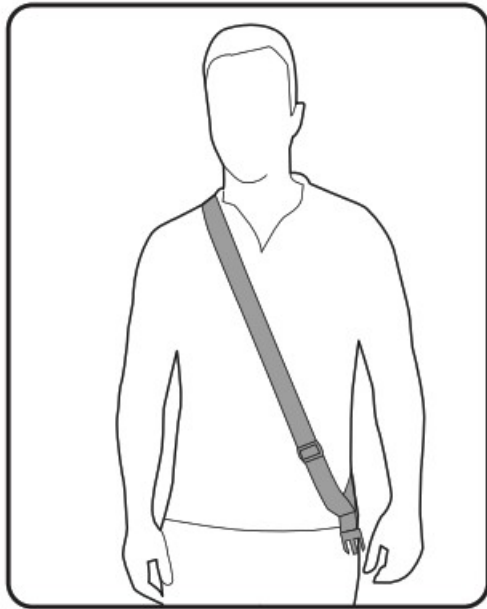

The harness is included as a safety feature for use with the branch cutter and the hedge trimmer. The sling passes over your head and rests on your shoulder – use the sliding adjuster to ensure the harness fits you comfortably.

Attach the clip to the loop or top of the handle. Then attach the clip to the harnesses.

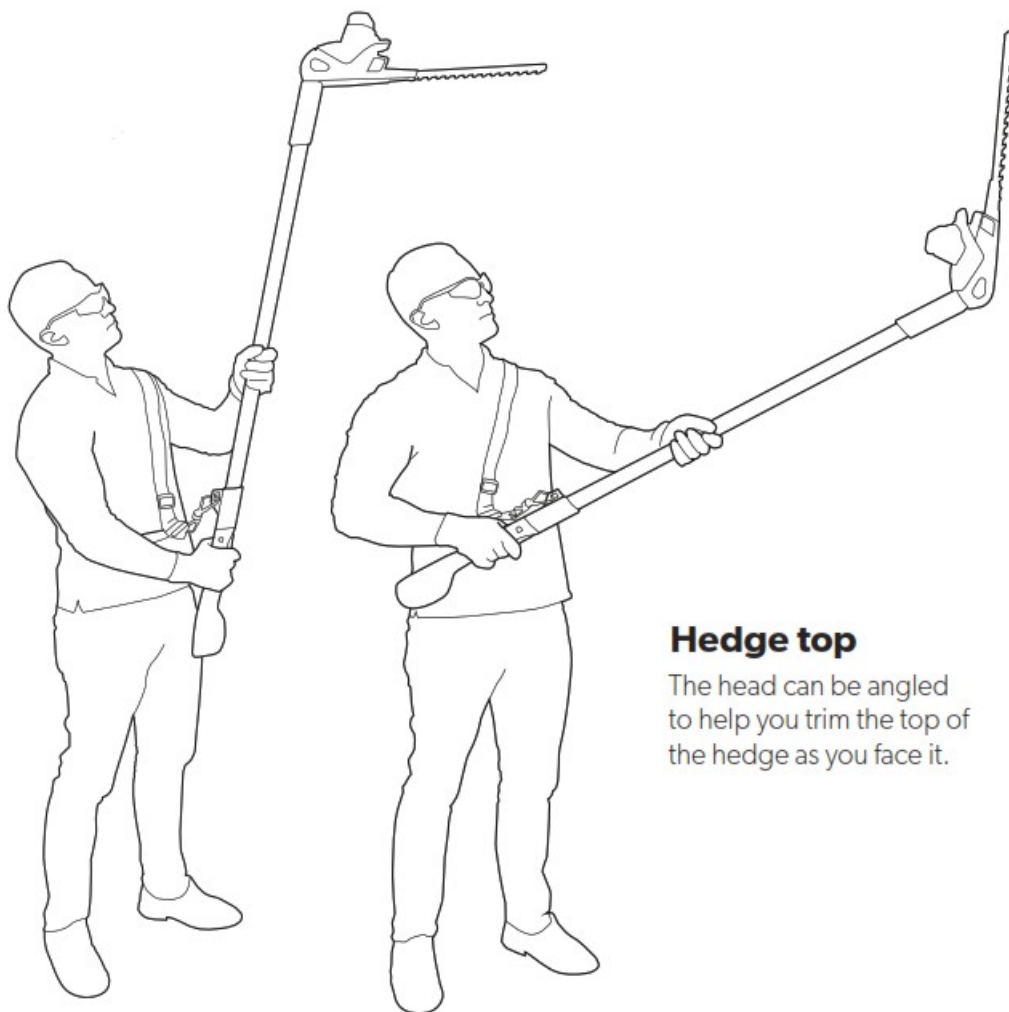

Hedge top

The head can be angled to help you trim the top of the hedge as you face it.

Using your hedge trimmer

Hold the trimmer away from your body using both hands and stand on a solid and secure surface. The double-edged blade allows you to cut with either a side-to-side or up and down motion.

When cutting, move slowly and steadily so that stems are fed directly into the blade.

Cut the sides of the hedge first and then the top. To keep the sides of the hedge flat, cutting upwards with the growth is recommended.



WARNING: risk of electric shock. Pay attention to the position of overhead cables.




WARNING: To reduce the risk of personal injury, always wear eye protection. Personal protective equipment such as sturdy gloves and non-slip shoes are recommended.



WARNING: to reduce risk of injury from accidental start-up of the trimmer, always ensure that the protective blade guard is fitted when the trimmer is not in use, and when being transported, handled or stored.




Pay attention to the hazard posed to third parties from the increased working area of the trimmer.

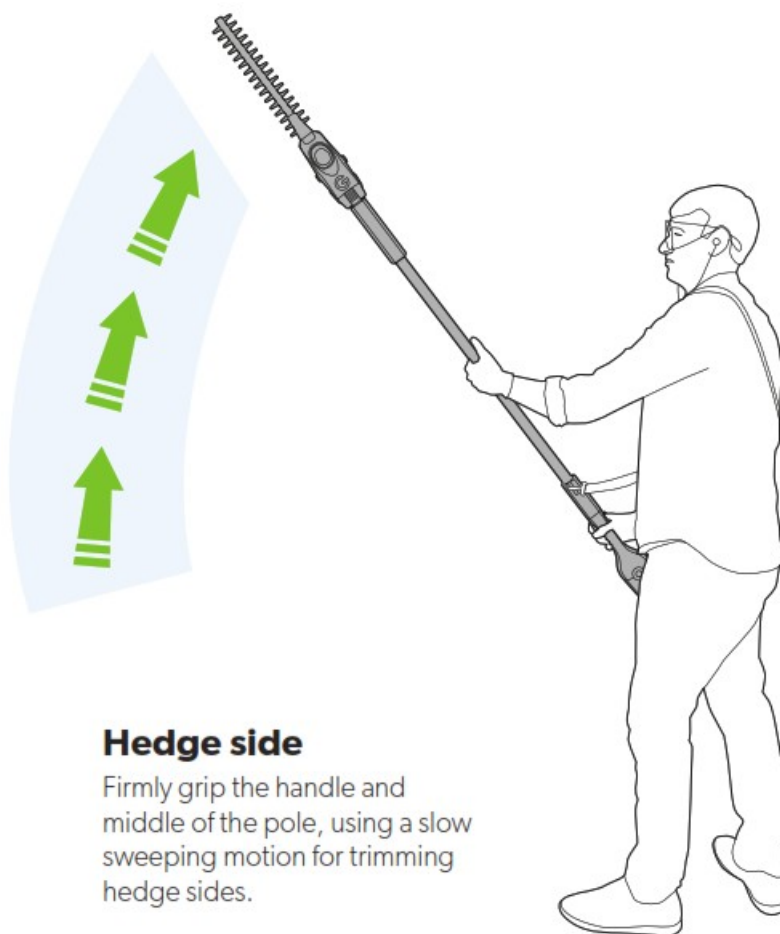

Hedge side



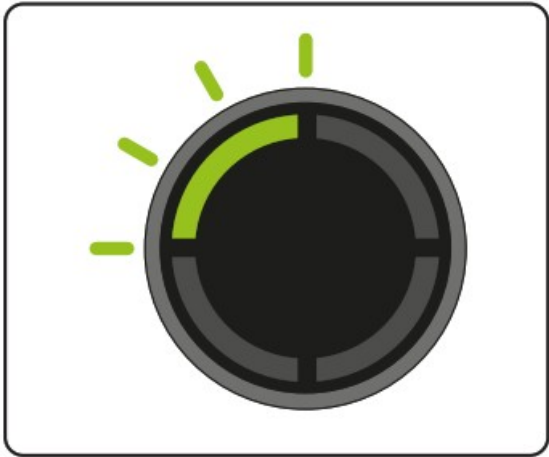
Firmly grip the handle and middle of the pole, using a slow sweeping motion for trimming hedge sides.

Removing the battery for charging




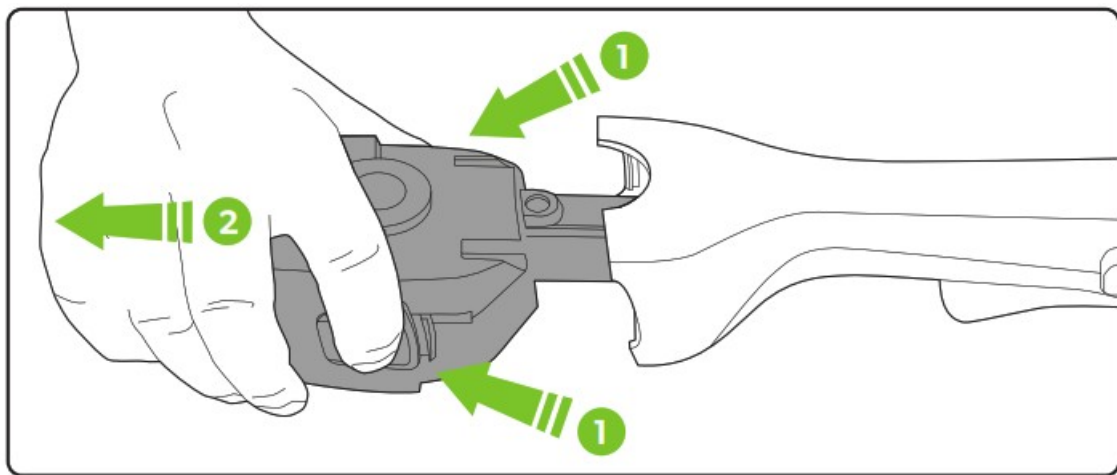


Press both buttons at the same time and pull to remove the battery.

Checking battery charge status

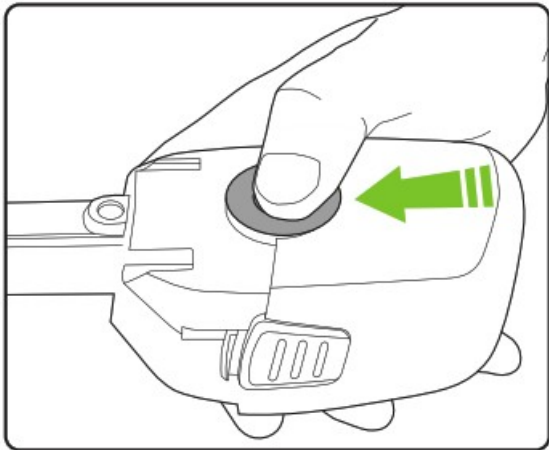	 <p>Figures are</p>
<p>Press the button to check how much charge there is in the battery.</p>	<p>The number of lit LEDs sho</p>
 <p>When there is no power left, the final LED will flash for 10 seconds then go out.</p>	

Charging the battery

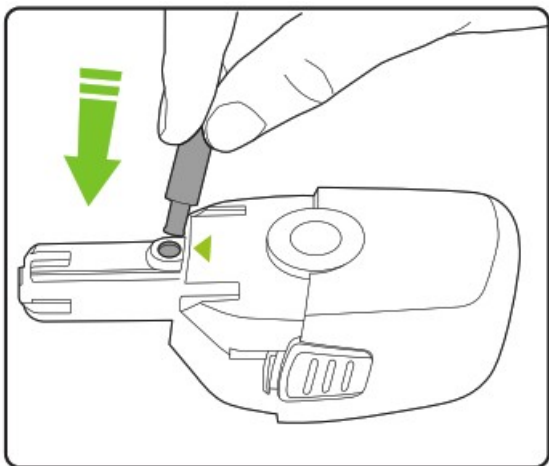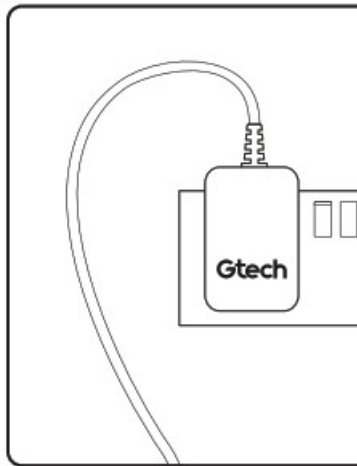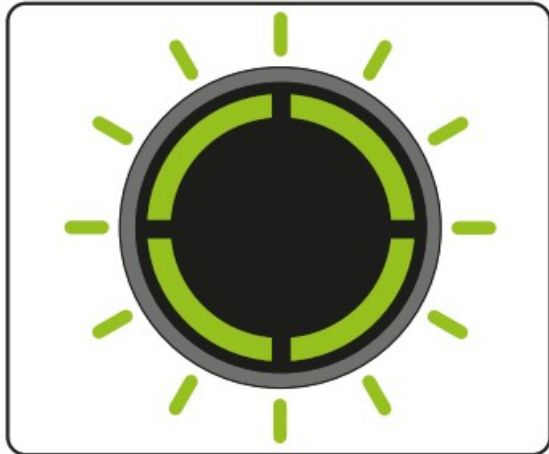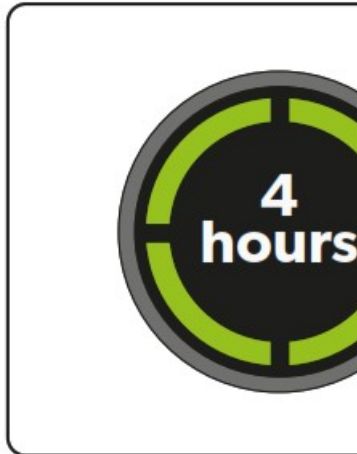	
<p>Connect the charger to the battery where indicated.</p>	<p>Plug the charger into an ordinary plug socket</p>
	
<p>While charging, the LEDs will progressively pulse until all 4 are lit.</p>	<p>The battery can be charged from flat in 4 hours. The state-of-charge indicator will show fully charged.</p>

Product Care



Wear protective gloves when handling or cleaning the blade.



To reduce risk of injury, ensure that protective blade guard is fitted when the trimmer is not in use, and when being transported, handled or stored.

To ensure that your product gives you a long and reliable service, carry out the following maintenance regularly:

- Check for obvious defects, such as loose, dislodged, worn or damaged blades, loose fixings, and worn, damaged, or loose parts.
- Check that all covers and guards are correctly fitted and undamaged.
- Always clean the cutting blade after use and apply a lubricating oil or spray before storage.
- During longer cutting periods, it is recommended to lubricate the blade. This will improve cutting performance and maximise the run-time.
- Before use, check the condition of the cutting edges of the blade and check that the blade fixings are secure.
- Do not use water, solvents, or polishes to clean the trimmer. Wipe clean with a dry cloth.
- Do not use abrasive materials to clean the product, and do not immerse it in water.
- Store the hedge trimmer in a secure, dry place, out of reach of children. Do not expose it to moisture.

PLEASE NOTE: if the product needs to be repaired or replaced, only use replacement parts supplied by the manufacturer.

Spare parts can be purchased from Grey Technology Ltd: tel: **01905 345 891** www.gtech.co.uk




Troubleshooting

Trimmer fails to operate	<ol style="list-style-type: none">1. Recharge battery.2. Check switch. It will click if operating correctly.3. Blade is jammed.
Cutting blade will not cut	<ol style="list-style-type: none">1. Blade is either worn or damaged.2. Replace blade.
Blade will not move	<ol style="list-style-type: none">1. Clean and lubricate blade.2. Replace blade.
Cutting time has reduced	<ol style="list-style-type: none">1. Use a lighter cutting action and cut in several stages.2. Fully discharge and recharge battery.3. Clean and lubricate blade.4. Replace blade.
Trimmer stops when cutting	<ol style="list-style-type: none">1. Wait for automatic cut-out to reset. Use a lighter cutting action.2. Check blade and remove any debris.3. Charge battery.
LEDs show solid red	<ol style="list-style-type: none">1. The hedge trimmer has jammed.2. Check blade and remove any debris.

Product support

If these initial tips do not solve your problem we please visit our support area where you can find troubleshooting help including online manuals, FAQs and how-to-videos, as well as genuine spares and replacement parts compatible with your product.


Visit: www.gtech.co.uk/support

			
Online	Live chat support	support@gtech.co.uk	†

HEDGE TRIMMER TECHNICAL SPECIFICATION

Blade cutting length	510mm
Blade cutting width	25mm
No load speed	1200min ⁻¹
Battery	18V DC 2000mAh Li-ion
Charging period	4 hours
Battery charger output	21.6V  0.5A 10.8W
Battery charger input	100-240V~50/60Hz
Measured sound power level, L _{WA}	L _{WA} =87.1 dB(A), uncertainty K=3dB(A)
Guaranteed sound power level, L _{WA}	90 dB(A)
Weight	2.9kg
Vibration	Front handle a _h = 0.64m/s ² Uncertainty k= 0.5 m/s ² Rear handle a _h = 0.79 m/s ² Uncertainty k= 0.5 m/s ²

Environmental and product recycling

The  symbol indicates that this product is covered by legislation for waste electrical and electronic products (EN2012/19/EU)

When the product has reached the end of its life, please do not dispose of it with general household waste. Consider the environment and take it to a recognised recycling facility.

The product contains a Li-ion battery which should not be disposed of with general household waste. The battery should be disposed of properly with the product at a recycling facility.

Call your local council, civic amenity site, or recycling centre for information on the disposal and recycling of electrical products.

Alternatively, visit www.recycle-more.co.uk

for advice on recycling and to find your nearest recycling facilities.



WARRANTY TERMS AND CONDITIONS

Your Gtech product is guaranteed against material or manufacturing faults for 2 years from the date of purchase, subject to the following terms and conditions:

SUMMARY

The guarantee becomes effective at the date of purchase (or the date of delivery if this is later). If a product is repaired or replaced during the warranty period, the warranty period is not started again.

- You must provide proof of delivery/ purchase before any work can be carried out on the product. Without this proof, any work carried out will be chargeable. Please keep your receipt or delivery note.

- All work will be carried out by Gtech or its authorised agents.
- Any parts which are replaced will become the property of Gtech.
- The repair or replacement of your product is under guarantee and will not extend the period of guarantee.
- The guarantee provides benefits which are additional to and do not affect your statutory rights as a consumer.

WHAT ISN'T COVERED

Gtech does not guarantee the repair or replacement of a product as a result of:

- Normal wear.
- Use of consumables
- Accidental damage, faults caused by negligent use or lack of care and maintenance, misuse, neglect, careless operation or handling of the product which is not in accordance with operating manual.
- Use of the product for anything other than the normal domestic household purposes.
- Use of parts and accessories which are not Gtech genuine components.
- Faulty installation (except where installed by Gtech)
- If it is modified in any way.
- Repairs or alterations carried out by parties other than Gtech or its authorised agents.
- Purchasing your product from an unofficial third party (i.e not from Gtech or an official Gtech retailer.
- If you are in doubt as to what is covered by your guarantee, please call the Gtech Customer Care Helpline on UK: 08000 308 794

International orders are subject to a delivery charge for both faulty and non faulty products.

EC Declaration of Conformity

We, manufacturer/importer
 Grey Technology Ltd
 Brindley Road
 Warndon
 Worcester
 WR4 9FB
 declare that the product


HT Series Cordless Hedge Trimmer

complies with the essential health and safety requirements of the following directives:

2014/30/EU 2006/42/EC 2000/14/EC 2011/65/EU	<ul style="list-style-type: none"> • EMC Directive. • Machinery Directive • Noise emission in the environment by ive • Conformity assessment procedure as • Measured Sound Power Level = 87.1 c =3dB(A) • Declared Guaranteed Sound Power Le • RoHS directive
--	---

Technical documentation holder: Grey Technology Ltd, WR4 9FB
 Standards and technical specifications referred to :

EN 60745-1:2009+A11:2010
EN 60745-2-15:2009+A1:2010
EN ISO 10517:2019
EN 55014-1:2017
EN 55014-2:2015
IEC 62133-2:2017

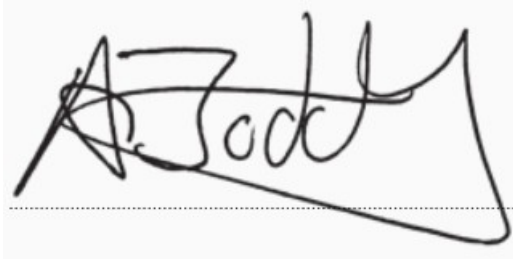
Dokumentationsbevollmächtigter: Authorized person for the compilation of the technical documentation:	Andrew Boddy
Herstellerunterschrift/Datum: Authorized Signature/Date/Place:	
Angaben zum Unterzeichner: Title of Signatory:	Technical Manager



Grey Technology Limited
Brindley Road, Warndon, Worcester WR4 9FB
email: support@gtech.co.uk
telephone: **01905 345891**
www.gtech.co.uk

4720_HT50 Manual Update 2020 aw2.indd
CPN4720
18/02/2021 10:35

Documents / Resources

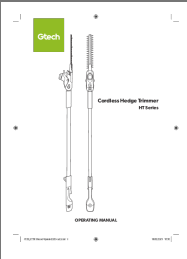	Gtech HT Series HT50 Cordless Hedge Trimmer [pdf] User Manual HT Series, HT50, Cordless Hedge Trimmer
---	--

References

- [Gtech UK Official: Vacuum Cleaners, Home & Gardening](#)
- [Gtech Support and Customer Service | Gtech](#)
- [Everything you need to know to Recycle More](#)