




HIKOKI C 12RSH3 Cordless Circular Saw Instruction Manual

[Home](#) » [HiKOKI](#) » HIKOKI C 12RSH3 Cordless Circular Saw Instruction Manual 

HIKOKI

C 12RSH3

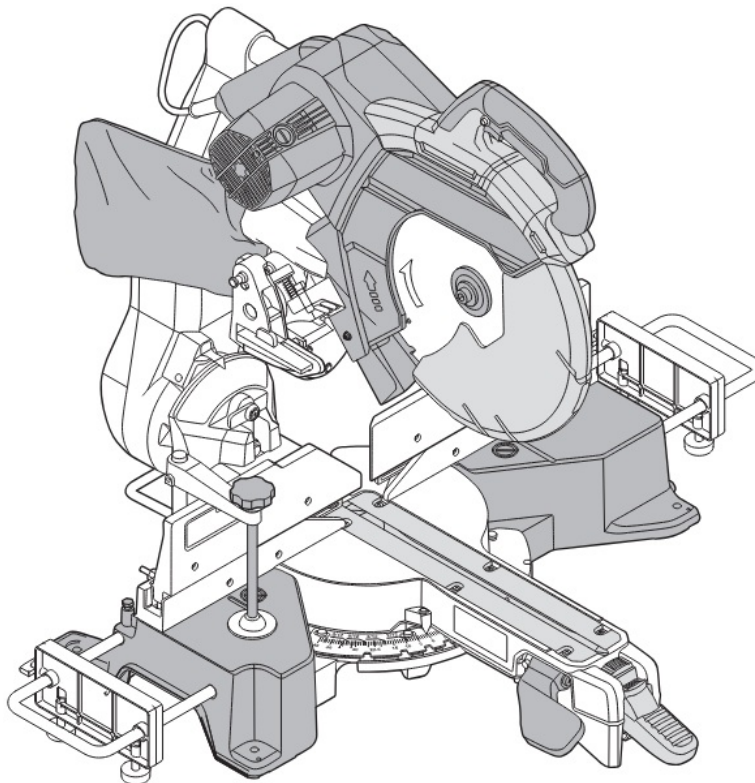


Handling instructions









Contents


- 1 C 12RSH3 Cordless Circular Saw**
- 2 GENERAL POWER TOOL SAFETY WARNINGS**
- 3 SAFETY INSTRUCTIONS FOR MITER SAW**
- 4 PRECAUTIONS ON USING SLIDE COMPOUND MITER SAW**
- 5 NAMES OF PARTS**
- 6 SYMBOLS**
- 7 STANDARD ACCESSORIES**
- 8 APPLICATIONS**
- 9 SPECIFICATIONS**
- 10 PRIOR TO OPERATION**
- 11 PRIOR TO CUTTING**
- 12 PRACTICAL APPLICATIONS**
- 13 MOUNTING AND DISMOUNTING SAW BLADE**
- 14 TRANSPORTATION OF THE MAIN BODY**
- 15 MAINTENANCE AND INSPECTION**
- 16 SELECTING ACCESSORIES**
- 17 TROUBLESHOOTING**
- 18 Documents / Resources**
 - 18.1 References**

C 12RSH3 Cordless Circular Saw

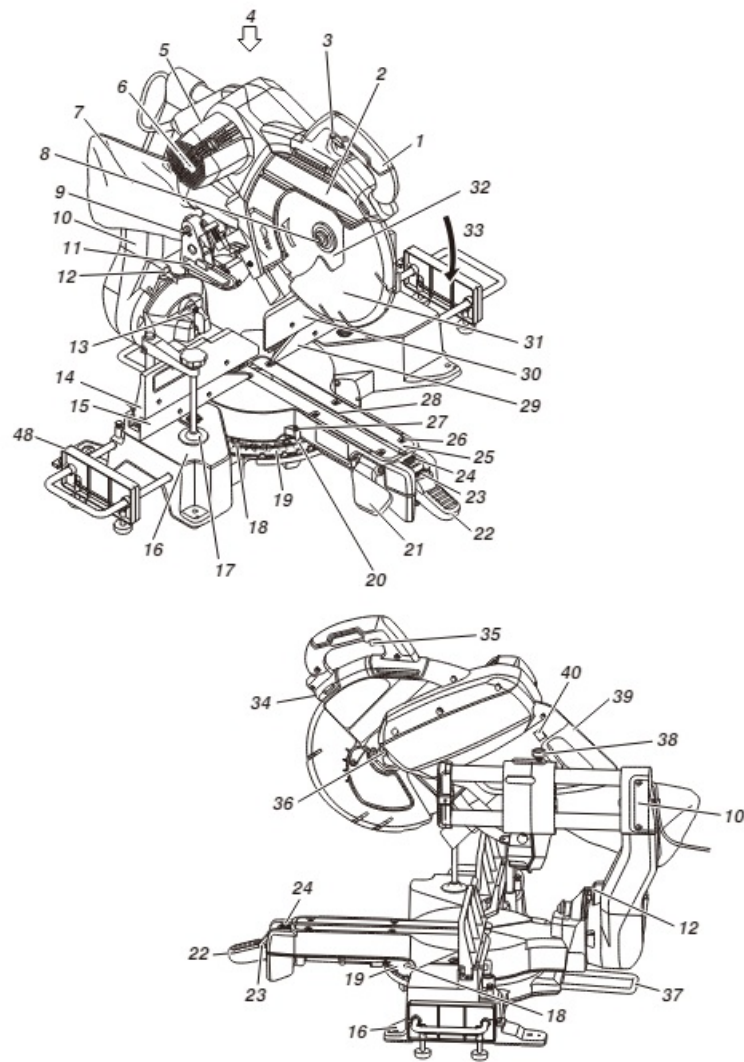


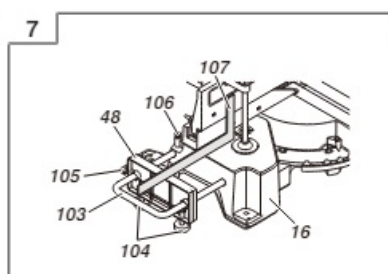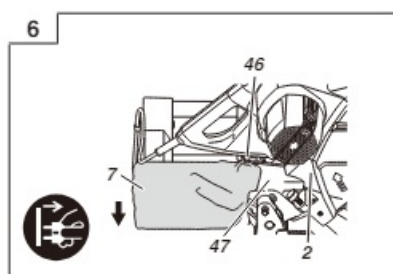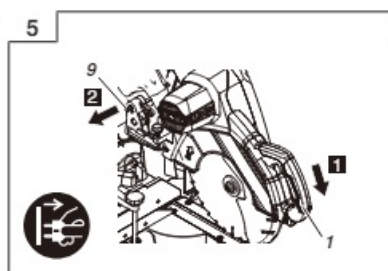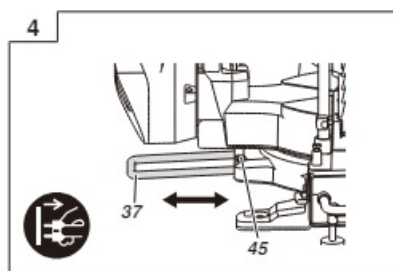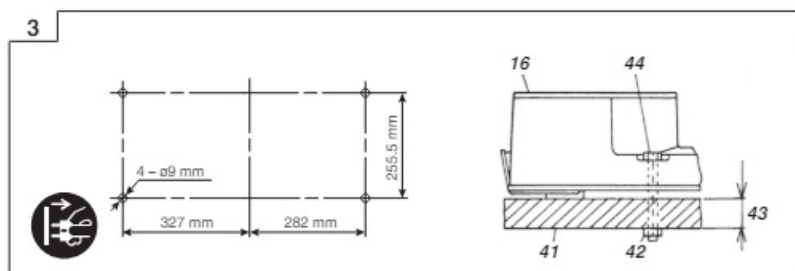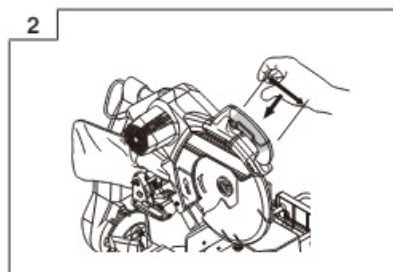


8






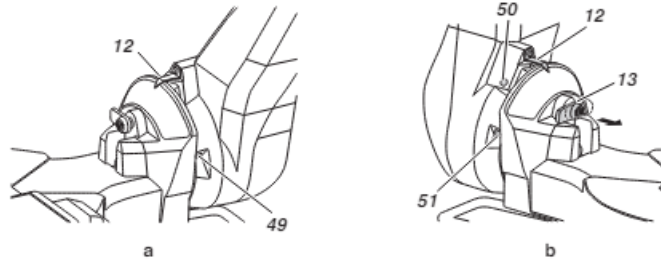






9





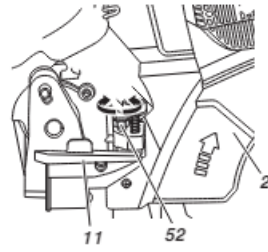








10

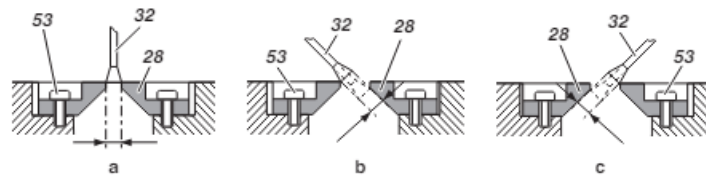

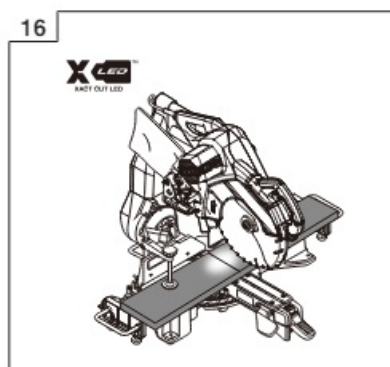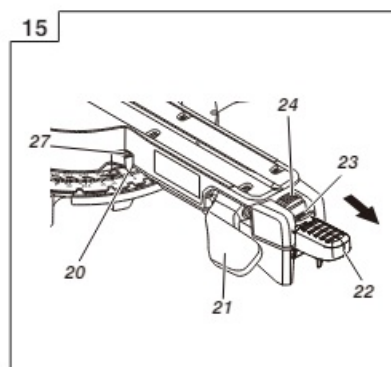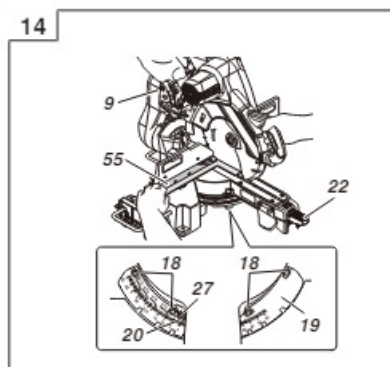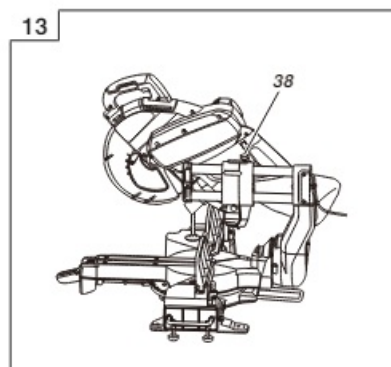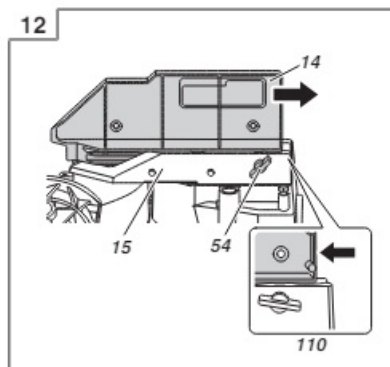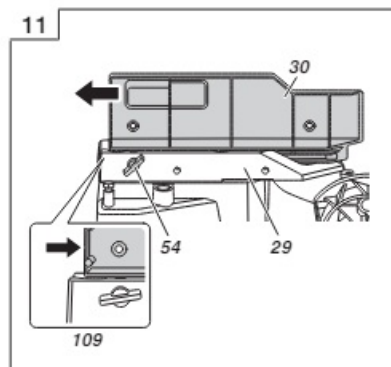


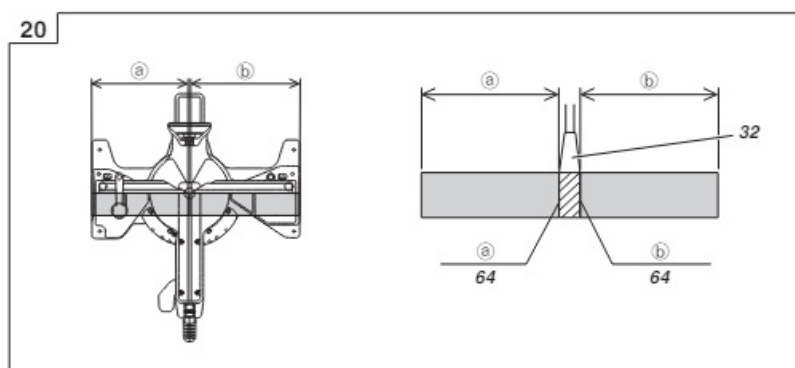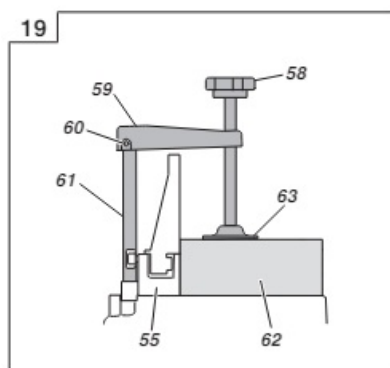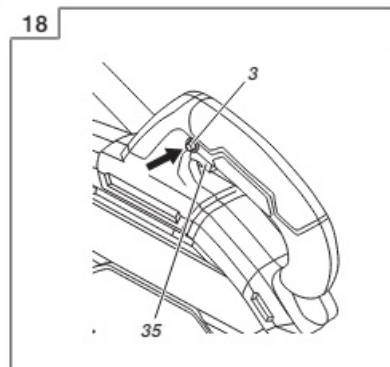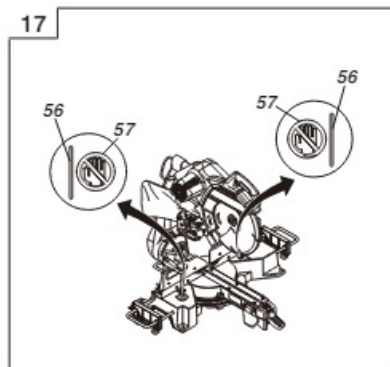

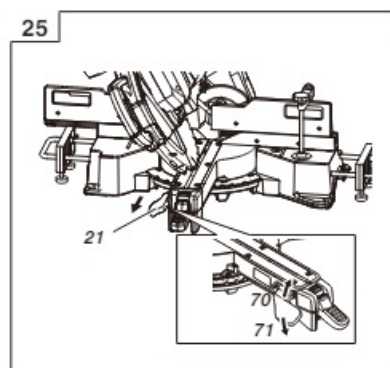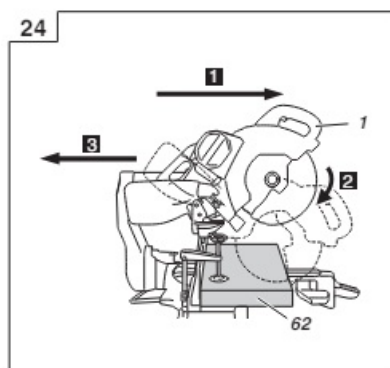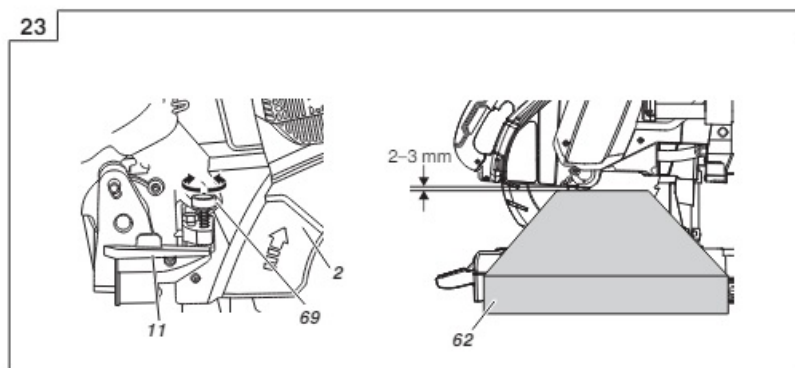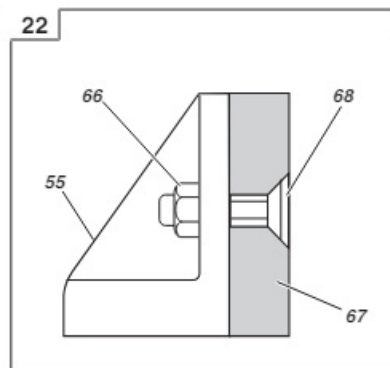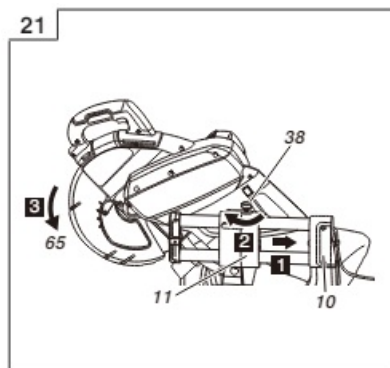


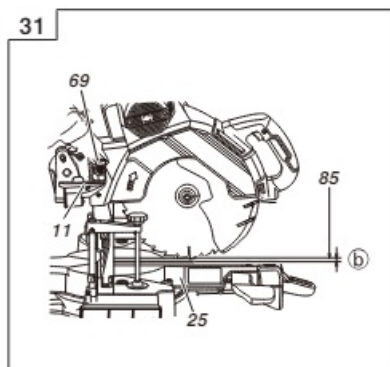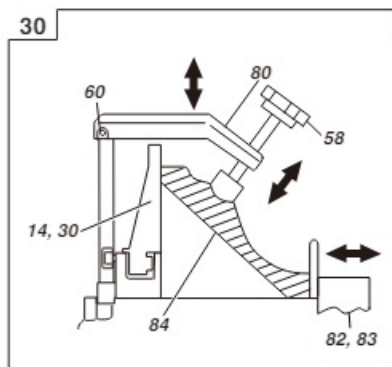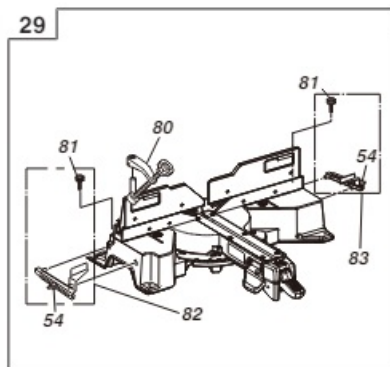
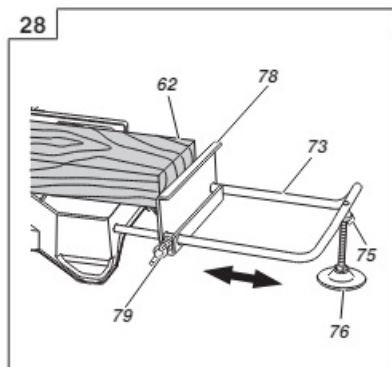
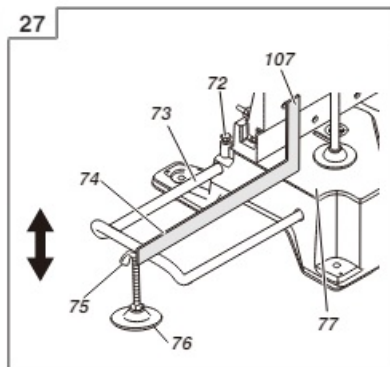
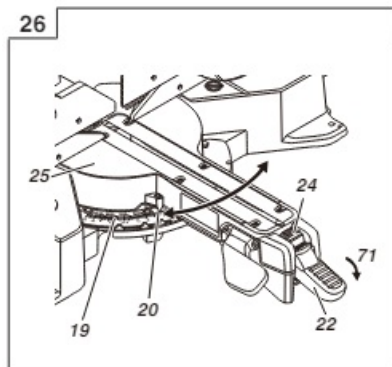


32

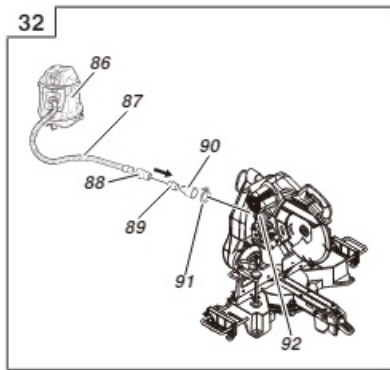

33

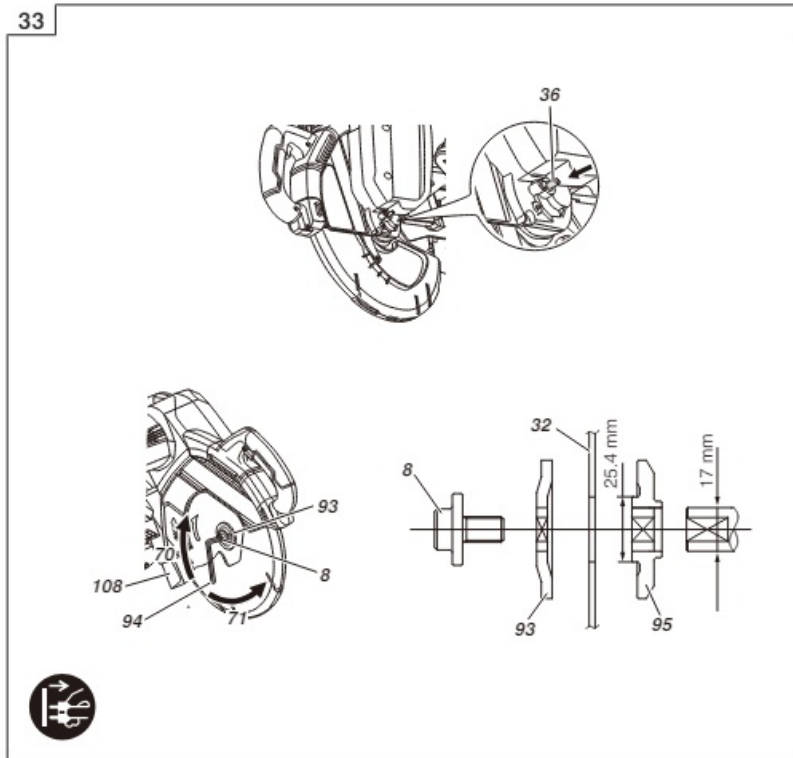

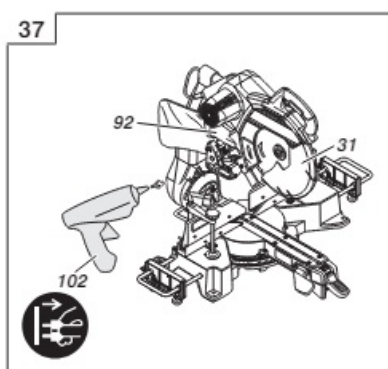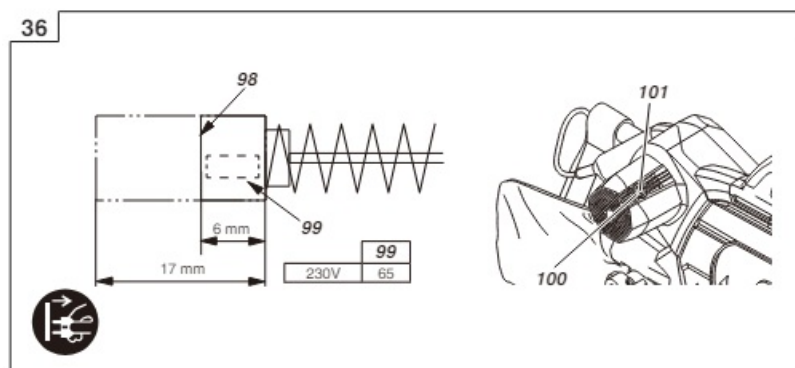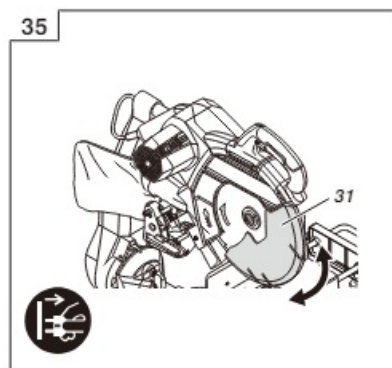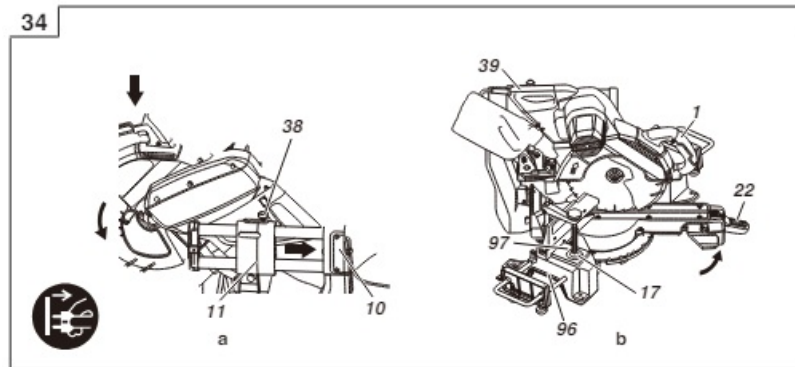

GENERAL POWER TOOL SAFETY WARNINGS

WARNING

Read all safety warnings, instructions, illustrations and specifications provided with this power tool. Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference.

The term “power tool” in the warnings refers to your mains- operated (corded) power tool or battery-operated (cordless) power tool.

1. Work area safety

- a) Keep work area clean and well lit. Cluttered or dark areas invite accidents,
 - b) Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust, Power tools create sparks which may ignite the dust or fumes.
 - c) Keep children and bystanders away while operating a power tool.
- Distractions can cause you to lose control.

2. **Electrical safety**

- a) Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools.
Unmodified plugs and matching outlets will reduce risk of electric shock.
- b) Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators.
There is an increased risk of electric shock if your body is earthed or grounded
- c) Do not expose power tools to rain or wet conditions.
Water entering a power tool will increase the risk of electric shock.
- d) Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool.
Keep cord away from heat, oil, sharp edges or moving parts.
Damaged or entangled cords increase the risk of electric shock.
- e) When operating a power tool outdoors, use an extension cord suitable for outdoor use.
Use of a cord suitable for outdoor use reduces the risk of electric shock.
- f) If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply.
Use of an RCD reduces the risk of electric shock.

3. **Personal safety**

- a) Stay alert, watch what you are doing and use common sense when operating a power tool.
Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.
A moment of inattention while operating power tools may result in serious personal injury.
- b) Use personal protective equipment. Always wear eye protection.
Protective equipment such as a dust mask, non-skid safety shoes, hard hat or hearing protection used for appropriate conditions will reduce personal injuries.
- c) Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool.
Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.
- d) Remove any adjusting key or wrench before turning the power tool on.
A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
- e) Do not overreach. Keep proper footing and balance at all times.
This enables better control of the power tool in unexpected situations.
- f) Dress properly. Do not wear loose clothing or jewellery. Keep your hair and clothing away from moving parts.
Loose clothes, jewellery or long hair can be caught in moving parts.
- g) If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used
Use of dust collection can reduce dust-related hazards.
- h) Do not let familiarity gained from frequent use of tools allow you to become complacent and ignore tool safety principles.

A careless action can cause severe injury within a fraction of a second.

4. Power tool use and care

a) Do not force the power tool. Use the correct power tool for your application.

The correct power tool will do the job better and safer at the rate for which it was designed.

b) Do not use the power tool if the switch does not turn it on and off.

Any power tool that cannot be controlled with the switch is dangerous and must be repaired.

c) Disconnect the plug from the power source and/ or remove the battery pack, if detachable, from the power tool before making any adjustments, changing accessories, or storing power tools.

Such preventive safety measures reduce the risk of starting the power tool accidentally.

d) Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.

Power tools are dangerous in the hands of untrained users.

e) Maintain power tools and accessories. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use.

Many accidents are caused by poorly maintained power tools.

f) Keep cutting tools sharp and clean.

Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.

g) Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed.

Use of the power tool for operations different from those intended could result in a hazardous situation.

h) Keep handles and grasping surfaces dry, clean and free from oil and grease.

Slippery handles and grasping surfaces do not allow for safe handling and control of the tool in unexpected situations.

5. Service

a) Have your power tool serviced by a qualified repair person using only identical replacement parts.

This will ensure that the safety of the power tool is maintained.

PRECAUTION

Keep children and infirm persons away.

When not in use, tools should be stored out of reach of children and infirm persons.

SAFETY INSTRUCTIONS FOR MITER SAW

1. Miter saws are intended to cut wood or wood-like products, they cannot be used with abrasive cut-off wheels for cutting ferrous material such as bars, rods, studs, etc.

Abrasive disc causes moving parts such as the lower guard to jam. Sparks from abrasive cutting will burn the lower guard, the kerf insert and other plastic parts.

2. Use clamps to support the workpiece whenever possible. If supporting the workpiece by hand, you must always keep your hand at least 100 mm from either side of the saw blade. Do not use this saw to cut pieces that are too small to be securely clamped or held by hand.

If your hand is placed too close to the saw blade, there is an increased risk of injury from blade contact.

3. The workpiece must be stationary and clamped or held against both the fence and the table. Do not feed the workpiece into the blade or cut "flesh and" in any way.

Unrestrained or moving workpieces could be thrown at high speeds, causing injury.

4. Push the saw through the workpiece. Do not pull the saw through the workpiece. To make a cut, raise the saw head and pull it out over the workpiece without cutting, start the motor, press the saw head down and push the saw through the workpiece.

Cutting on the pull stroke is likely to cause the saw blade to climb on top of the workpiece and violently throw the blade assembly towards the operator.

5. Never cross your hand over the intended line of cutting either in front or behind the saw blade.
Supporting the workpiece "cross handed" i.e. holding the workpiece to the right of the saw blade with your left hand or vice versa is very dangerous.
6. Do not reach behind the fence with either hand closer than 100 mm from either side of the saw blade, to remove wood scraps, or for any other reason while the blade is spinning.

The proximity of the spinning saw blade to your hand may not be obvious and you may be seriously injured.

7. Inspect your workpiece before cutting. If the workpiece is bowed or warped, clamp it with the outside bowed face toward the fence. Always make certain that there is no gap between the workpiece, fence and table along the line of the cut.

Bent or warped workpieces can twist or shift and may cause binding on the spinning saw blade while cutting. There should be no nails or foreign objects in the workpiece.

8. Do not use the saw until the table is clear of all tools, wood scraps, etc., except for the workpiece.
Small debris or loose pieces of wood or other objects that contact the revolving blade can be thrown with high speed.

9. Cut only one workpiece at a time.

Stacked multiple workpieces cannot be adequately clamped or braced and may bind on the blade or shift during cutting.

10. Ensure the miter saw is mounted or placed on a level, firm work surface before use.

A level and firm work surface reduces the risk of the miter saw becoming unstable.

11. Plan your work. Every time you change the bevel or miter angle setting, make sure the adjustable fence is set correctly to support the workpiece and will not interfere with the blade or the guarding system.

Without turning the tool "ON" and with no workpiece on the table, move the saw blade through a complete simulated cut to assure there will be no interference or danger of cutting the fence.

12. Provide adequate support such as table extensions, saw horses, etc. for a workpiece that is wider or longer than the table top.

Workpieces longer or wider than the miter saw table can tip if not securely supported. If the cut-off piece or workpiece tips, it can hit the lower guard or be thrown by the spinning blade.

13. Do not use another person as a substitute for a table extension or as additional support.

Unstable support for the workpiece can cause the blade to bind or the workpiece to shift during the cutting operation pulling you and the helper into the spinning blade.

14. The cut-off piece must not be jammed or pressed by any means against the spinning saw blade.

If confined, i.e. using length stops, the cut-off piece could get wedged against the blade and thrown violently.

15. Always use a clamp or a fixture designed to properly support round material such as rods or tubing.

Rods have a tendency to roll while being cut, causing the blade to "bite" and pull the work with your hand into the blade.

16. Let the blade reach full speed before contacting the workpiece.

This will reduce the risk of the workpiece being thrown.

17. If the workpiece or blade becomes jammed, turn the miter saw off. Wait for all moving parts to stop and

disconnect the plug from the power source and/or remove the battery pack. Then work to free the jammed material.

Continued sawing with a jammed workpiece could cause loss of control or damage to the miter saw.

18. After finishing the cut, release the switch, hold the saw head down and wait for the blade to stop before removing the cut-off piece.

Reaching with your hand near the coasting blade is dangerous.

19. Hold the handle firmly when making an incomplete cut or when releasing the switch before the saw head is completely in the down position.

The braking action of the saw may cause the saw head to be suddenly pulled downward, causing a risk of injury.

PRECAUTIONS ON USING SLIDE COMPOUND MITER SAW

1. Keep the floor area around the machine level. Well maintained and free of loose materials e.g. chips and cut-offs.
2. Provide adequate general or localized lighting.
3. Do not use power tools for applications other than those specified in the handling instructions.
4. Repairing must be done only by authorized service facility. Manufacturer is not responsible for any damages and injuries due to the repair by the unauthorized persons as well as the mishandling of the tool.
5. To ensure the designed operational integrity of power tools, do not remove installed covers or screws.
6. Do not touch movable parts or accessories unless the power source has been disconnected.
7. Use your tool at lower input than specified on the nameplate; otherwise, the finish may be spoiled and working efficiency reduced due to motor overload.
8. Do not wipe plastic parts with solvent. Solvents such as gasoline, thinner, benzene, carbon tetrachloride, alcohol, may damage and crack plastic parts. Do not wipe them with such solvent. Clean plastic parts with a soft cloth lightly dampened with soapy water.
9. Use only original HiKOKI replacement parts.
10. This tool should only be disassembled for replacement of carbon brushes.
11. Never cut ferrous metals or masonry.
12. Adequate general or localized lighting is provided. Stock and finished workpieces are located close to the operators normal working position.
13. Wear suitable personal protective equipment when necessary, this could include: Hearing protection to reduce the risk of induced hearing loss.
Eye protection to reduce the risk of injuring an eye.
Respiratory protection to reduce the risk of inhalation of harmful dust.
Gloves for handling saw blades (saw blades shall be carried in a holder wherever practicable) and rough material.
14. The operator is adequately trained in the use, adjustment and operation of the machine.
15. Refrain from removing any cut-offs or other parts of the workpiece from the cutting area whilst the machine is running and the saw head is not in the rest position.
16. Never use the slide compound miter saw with its lower guard locked in the open position.
17. Ensure that the lower guard moves smoothly.
18. Do not use the saw without guards in position, in good working order and properly maintained.
19. Use correctly sharpened saw blades. Observe the maximum speed marked on the saw blade.

20. Do not use saw blades which are damaged or deformed.
21. Do not use saw blades manufactured from high speed steel.
22. Use only saw blades recommended by HIKOKI.
23. The saw blades should be 305 mm external diameter.
24. Select the correct saw blade for the material to be cut.
25. Never operate the slide compound miter saw with the saw blade turned upward or to the side.
26. Ensure that the workpiece is free of foreign matter such as nails.
27. Replace the table insert when worn.
28. Do not use the saw to cut other than aluminium, wood or similar materials.
29. Do not use the saw to cut other materials than those recommended by the manufacturer.
30. Blade replacement procedure, including the method for repositioning and a warning that this must be carried out correctly.
31. Connect the slide compound miter saw to a dust collecting device when sawing wood.
32. Take care when slotting.
33. When transporting or carrying the tool, do not grasp the holder. Grasp the handle instead of the holder.
34. Start cutting only after motor revolution reaches maximum speed.
35. Promptly cut OFF the switch when abnormality observed.
36. Shut off power and wait for saw blade to stop before servicing or adjusting tool.
37. During a miter or bevel cut the blade should not be lifted until it has stopped rotation completely.
38. During slide cutting operation, the saw must be pushed and slid away from the operator.
39. Take all the possibility of residual risks in cutting operation into your consideration, such as the inadvertent access to moving parts on slide mechanical parts on machine and so on.
40. Ensure before each cut that the machine is stable.
41. Do not stand in a line with the saw blade in front of the machine. Always stand aside of the saw blade. This protects your body against possible kickback. Keep hands, fingers and arms away from the rotating saw blade. Do not cross your arms when operating the tool arm.
42. If the saw blade should become jammed, switch the machine off and hold the workpiece until the saw blade comes to a complete stop. To prevent kickback, the workpiece may not be moved until after the machine has come to a complete stop.
Correct the cause for the jamming of the saw blade before restarting the machine.
43. When the saw head is in the down position, never release the hand that is gripping the handle.
Doing so could snap the saw head up, forcing the tool to fall and possibly cause injury.
44. Make sure to securely hold the tool during operation.
Failure to do so can result in accidents or injuries. (Fig. 2)
45. Do not look directly into the light. Such actions could result in eye injury.
Wipe off any dirt or grime attached to the lens of the LED light with a soft cloth, being careful not to scratch the lens.
Scratches on the lens of the LED light can result in decreased brightness.

NAMES OF PARTS

The numbers in the list below correspond to Fig. 1-Fig. 37.

1	Switch handle
2	Gear case
3	Switch lock
4	Motor head
5	Name plate
6	Motor ass'y
7	Dust bag
8	Lefthex. 10 mm socket bolt
9	Locking pin
10	Holder (A)
11	Hinge
12	Indicator (For bevel scale)
13	Set pin (A)
14	Subfence (B)
15	Fence (B)
16	Base
17	Vise assembly
18	6 mm machine screw
19	Miter scale
20	Indicator (For miter scale)
21	Bevellock handle
22	Miter lock handle
23	Detent lever
24	Positive stop lever
25	Tumtable
26	5 mm machine screw
27	4 mm screw
28	Table insert
29	Fence (A)
30	Sub fence (A)
31	Lower guard
32	Saw blade
33	Rotation direction

34	LED light
35	Trigger switch
36	Spindle lock
37	Holder
38	Canyhandie
39	LED light switch
40	Siide securing knob
41	Work bench
42	8 mmnut
43	25mm thick work bench
44	8mm bolt
45	6 mm bolt
46	Support bar
47	Dust port
48	Subtable
49	Bmmset screw (For left 45° bevel angle)
50	8 mm set screw (For right angle)
51	8 mm set screw (For ight 45° bevel angle)
52	8 mm depth adjustment bolt
53	5 mm machine screw
54	6 mm wing bol
55	Fence
56	Line
57	Warning sign
58	Knob
59	Screw holder
60	Hex. socket setscrew
61	Vise shaft
62	Workpiece
63	Vise plate
64	Marking (pre-marked)
65	Press down












66	6mm nut
67	Auiliary board
68	6mm flat hd. screw
69	6mm depth adjustment bolt
70	Loosen
71	Tighten
72	6 mm knob bolt (Optional accessory)
73	Holder (Optional accessory)
74	Steel square
75	6mm wing nut (Optional accessory)
76	Height adjustment bolt 6 mm (Optional accessory)
77	Base surface
78	Stopper (Optional accessory)
79	6 mm wing bolt (Optional accessory)
80	Crown molding vise ass'y (Optional accessory)
81	6mm knob bolt
82	Crownmolding stopper (L) (Optional accessory)
83	Crown molding stopper (R) (Optional accessor
84	Crown molding
85	Bottom line of the groove
86	Dust extractor
87	Hose (id 38 mm)
88	Adapter (Dust extractor's standard accessory)
89	Joint (C) (Optional accessory)
90	Dust collection adapter (Optional accessory)
91	Hose band (Optional accessory)
92	Duct
93	Washer (B)
94	8 mmhex. bar wrench
95	Washer (A)
96	Base grip
97	Piece of wood to secure the vise
98	Wear limit line

99	No. of carbon brush
100	Brush cap
101	Groove
102	Air gun
103	Hoder
104	Height adjustment bolt 8 mm
105	6 mm wingbolt
106	6 mm bolt
107	Steel square
108	Dust guide
109	Mounting postion o the sub fence (A)
110	Mounting positon of the sub fence (B)

SYMBOLS

WARNING

The following show symbols used for the machine.
Be sure that you understand their meaning before use.

	C12RSHS: Slide Compound Miter Saw
	To reduce the risk of injury, user must read instruction manual.
	Rated voltage
	Switching ON
	Switching OFF
	Disconnect mains plug from electrical outlet
	Always wear eye protection.
	Always wear hearing protection.
	Do not stare at operating lamp.
	Warning
	Class II tool

STANDARD ACCESSORIES

- 305 mm TCT Saw blade
(mounted on tool).....1
- Dust bag.....1
- 8mm hex. bar wrench 1
- Vise Assembly1
- Holder.....1
- Sub Fence (mounted on tool).....1
- Washer (C) (Only For Australia)1
- Holders2
- Subtable assembly.....2

Standard accessories are subject to change without notice.

APPLICATIONS

Cutting various types of aluminium sash and wood.

SPECIFICATIONS

1. Power tool

Model		C12RSH3	
Voltage (by areas)*1		230 V-	240 V-
Power Input		1520 W	
No-Load Speed		4000 /min	
Saw Blade Dimensions (oD x iD x Thickness)		305 mm x 25.4 mm x 2.3 mm	
Miter Cutting Angle		Right 0°-57°, Left 0°-45°	
Bevel Cutting Angle		Right 0°-45°, Left 0°-45°	
Compound Cutting Angle	Bevel (Left) 0°-45°	Miter (Left) 0°-45°, (Right) 0° -45°	
	Bevel (Right) 0°-45°	Miter (Right) 0°-45°, (Left) 0-45°	
LED light		Yes	
Machine Dimensions (Width x Depth x Height)		655 mm x 873 mm x 724 mm	
Net weight		25.5 kg	

*1 Be sure to check the nameplate on product as it is subject to change by areas.

Table 1: Max. sawing dimension

	Head	Turntable	Max. sawing dimension	
			Max. height	Max. width
Miter	0	0	105 mm	312 mm
		Left 45° or Right 45°	105 mm	220 mm
		Right 57°	105 mm	170 mm
Bevel	Left 45°	0	68 mm	312 mm
	Right 45°	0	43 mm	312 mm
Compound	Left 45°	Left 45°	68 mm	220 mm
		Right 45°	68 mm	220 mm
	Right 45°	Left 45°	43 mm	220 mm
		Right 45°	43 mm	220 mm

PRIOR TO OPERATION

WARNING

Make all necessary adjustments before inserting the plug in the power source.

1. Power source

Ensure that the power source to be utilized conforms to the power requirements specified on the product nameplate.

Do not use with direct current, or transformers such as boosters. Doing so may result in damage or accidents.

2. Power switch

Ensure that the power switch is in the OFF position. If the plug is connected to a receptacle while the trigger switch is in the ON position, the power tool will start operating immediately, inviting serious accident.

3. Extension cord

When the work area is removed from the power source, use an extension cord of sufficient thickness and rated capacity. The extension cord should be kept as short as practicable.

4. Remove all packing materials attached or connected to the tool before attempting to operate it.

5. Installation (Fig. 3)

Ensure that the machine is always fixed to bench.

Attach the power tool to a level, horizontal work bench.

Select 8 mm diameter bolts suitable in length for the thickness of the work bench.

Bolt length should be at least 40 mm plus the thickness of the work bench.

For example, use 8 mm x 65 mm bolts for a 25 mm thick work bench.

6. Base holder adjustment (Fig. 4)

Loosen the 6 mm bolt with the 10 mm box wrench.

Adjust the base holder until its bottom surface contacts the bench or the floor surface.

After adjustment, firmly tighten the 8 mm bolt.

7. Releasing the locking pin (Fig. 5)

When the power tool is prepared for shipping, its main parts are secured by a locking pin.

Press the handle slightly down and pull out the locking pin to disengage the cutting head.

During transport, lock the locking pin into the gear case.

8. Installing the dust bag, sub table assembly, stopper and vises (The stopper is an optional accessory.)

(1) Installing the dust bag (Fig. 6)

Install the dust bag onto the dust port on the miter saw.

Fit the connecting tube of dust bag and the dust port together.

To empty the dust bag, pull out the dust bag assembly from dust port. Open zipper on underside of bag and empty into waste container. Check frequently and empty the dust bag before it gets full.

When bevel angle cutting, adjust the support bar and install the dust bag so that it hangs down vertically.

WARNING

Do not use this saw to cut and/or sand metals. The hot chips or sparks may ignite saw dust from the bag material.

CAUTION

○ Empty the dust bag frequently to prevent the duct and the lower guard from becoming clogged. Sawdust will accumulate more quickly than normal during bevel cutting.

○ After cutting wood, before starting to cut aluminum window sash, discard the chips that are in the dust bag.

(2) Installing the sub table (Fig. 7)

Using an item such as a steel square, match the upper surfaces of the base surface and sub table. Adjust the vertical level of the sub table by turning the 8 mm height adjustment bolt. After the adjustment, secure the holder with the 8 mm bolt on the rear of the base, and secure the 6 mm knob bolt of the subtable.

(Attach the vise assembly as shown in Fig. 1 and also stopper as shown in Fig. 19.)

9. Check the lower guard for proper operation (Fig. 35)

WARNING

NEVER OPERATE THE POWER TOOL if the lower guard does not function smoothly.

Lower guard is designed to protect the operator from coming into contact with the saw blade during operation of the tool.

Always check that the lower guard moves smoothly and covers the saw blade properly.

10. **Oblique angle**

WARNING

When changing the oblique angle, hold down the motor head. If the motor head moves to an oblique angle suddenly, it may result in injury or damage to the main body.

Before the power tool is shipped from the factory, it is adjusted for 0°, right angle, left 45° bevel cutting angle and right 45° bevel cutting angle with the 8 mm set screws.

When changing the adjustment, change the height of the 8 mm set screws by turning them. (Fig. 8-a, Fig. 8-b)

When changing the bevel angle to the left 45°, loosen the 6 mm wing bolt shown in Fig. 12, then slide the sub fence (B) outward and incline the motor head to the left. To change the bevel angle to the right at 45°, move the sub fence (A) outward and loosen the bevel lock handle, then pull out the set pin (A) toward the front, and tilt the motor head to the right. (Fig. 8-b)

When the motor head is straight upright, the set pin (A) is held tightly in place, so tilt the motor head slightly to the left when pulling out the set pin (A) before tilting the motor head to the right.

When adjusting the motor head to 0°, always return the set pin (A) to its initial position as shown in Fig. 8-b.

11. **Checking the saw blade lower limit position**

Check that the saw blade can be lowered 9 mm to 11 mm below the table insert.

When you replace a saw blade with a new one, adjust the lower limit position so that the saw blade will not cut the turntable or complete cutting cannot be done.

To adjust the lower limit position of the saw blade, follow the procedure (1) indicated below. (Fig. 9) Furthermore, when changing the position of a 8 mm depth adjustment bolt that serves as a lower limit position stopper of the saw blade.

(1) Turn the 8 mm depth adjustment bolt, change the height where the bolt head and the hinge contacts, and adjust the lower limit position of the saw blade.

NOTE

Confirm that the saw blade is adjusted so that it will not cut into the turntable.

PRIOR TO CUTTING

1. Positioning the table insert (Fig. 10)

Table inserts are installed on the turntable. When shipping the tool from the factory, the table inserts are so fixed that the saw blade does not contact them. The burr of the bottom surface of the workpiece is remarkably reduced, if the table insert is fixed so that the gap between the side surface of the table insert and the saw blade will be minimum. Before using the tool, eliminate this gap in accordance with the following procedure.

(1) Right angle cutting

Loosen the three 5 mm machine screws, then secure the left side table insert and temporarily tighten the 5 mm machine screws of both ends. Then fix a workpiece (about 200 mm wide) with the vise assembly and cut it off. After aligning the cutting surface with the edge of the table insert, securely tighten the 5 mm machine screws of both ends. Remove the workpiece and securely tighten the 5 mm center machine screw.

Adjust the right hand table insert in the same way.

(2) Left and right bevel angle cutting

Adjust the table insert in the same procedure for right angle cutting.

CAUTION

After adjusting the table insert for right angle cutting, the table insert will be cut to some extent if it is used for bevel angle cutting.

When bevel cutting operation is required, adjust the table insert for bevel angle cutting.

2. Confirmation for use of sub fence (A) (Fig. 11)

WARNING

When right bevel angle cutting, loosen the 6 mm wing bolt, then slide the sub fence (A) outward and remove it. Failure to do so may result in the main body or saw blade coming into contact with the sub fence (A) and causing injury.

This power tool is equipped with a sub fence (A). In the case of direct angle cutting and left bevel angle cutting, use the sub fence (A). Then, you can realize stable cutting of the material with a wide back face.

CAUTION

In the case of direct angle cutting and left bevel angle cutting, slide inward to the position where the sub fence (A) hits, and secure it with 6 mm wing bolt. (as shown in Fig. 1)

3. Confirmation for use of sub fence (B) (Fig. 12)

WARNING

When left bevel angle cutting, loosen the 8 mm wing bolt, then slide the sub fence (B) outward. Failure to do so may result in the main body or saw blade coming into contact with the sub fence (B) and causing injury.

This power tool is equipped with a sub fence (B). In the case of direct angle cutting and right bevel angle

cutting, use the sub fence (B). Then, you can realize stable cutting of the material with a wide back face.

CAUTION

In the case of direct angle cutting and right bevel angle cutting, slide inward to the position where the sub fence (B) hits, and secure it with 6 mm wing bolt. (as shown in Fig. 12)

4. Slide carriage system (Fig. 13)

WARNING

To reduce the risk of injury, return slide carriage to the rear position after each crosscut operation.

For chop cutting operations on small workpieces, slide the cutting head assembly completely toward the rear of the unit and tighten the slide securing knob. To cut wide boards up to 312 mm, the slide securing knob must be loosened to allow the cutting head slide freely.

5. Miter scale adjustment

○ Down the head and insert the locking pin.

Unlock the miter lock handle and swing the turntable until the positive stop locks it at the 0° miter position.

Do not lock the miter lock handle. Place a square against the saw's fence and blade, as shown in Fig. 14.

(Do not touch the tips of the blade teeth with the square.

To do so will cause an inaccurate measurement.)

If the saw blade is not exactly perpendicular to the fence, loosen the 6 mm machine screws (4 pcs.) that hold the miter scale and move the miter lock handle and the scale left or right until the blade is perpendicular to the fence, as measured with the square.

Retighten the 6 mm machine screws (4 pcs.). (Fig. 14) Pay no attention to the reading of the indicator (for miter scale) at this time.

○ Indicator (for miter scale) adjustment

Unlock the miter lock handle to move the turntable to the 0° position. With the miter lock handle unlocked, allow the positive stop to snap into place as you rotate the turntable to 0°.

Observe the indicator (for miter scale) and miter scale as shown in Fig. 14. If the indicator (for miter scale) does not indicate exactly 0° loosen the 4 mm screw holding the indicator (for miter scale). In place reposition the indicator (for miter scale) and tighten the 4 mm screw.

6. Miter angle adjustment

The slide compound miter saw scale can be easily read, showing miter angles from 0° to 45° to the left and right. The miter saw table has nine of the most common angle settings with positive stops at 0°, 15°, 22.5°, 31.6°, and 45°. These positive stops position the blade at the desired angle quickly and accurately. Follow the process below for quickest and most accurate adjustments. (Fig. 15)

Adjusting miter angles:

(1) Push up the miter lock handle to release the turntable.

(2) Push down the positive stop lever until the detent lever catches on it to release the "positive stop".

(3) Rotate the turntable and set the indicator line up with the desired angle of the miter scale. At this time, when using the positive stop function, pull the detent lever in the direction of the arrow near the desired angle as shown in Fig. 15, release the detent lever, and move via the positive stop function. (0°, 15°, 22.5°, 31.6°, and

(4) Push down the miter lock handle to secure the turntable in place.

Detent lever (Fig. 15)

The detent lever allows for the table to be micro adjusted, disengaging the positive detent stops feature. When a required miter angle is close to a positive detent stop, this detent lever prevents the wedge on the positive

stop lever from slipping into that detent slot on the base.

7. LED lighting system (Fig. 16) [XACT CUT LED™] **CAUTION**

Do not stare at operating lamp. Staring into the light beam may result in serious injury or vision loss.

The LED lighting system [XACT CUT LED™] casts the shadow of the blade onto the workpiece. This results in greater accuracy of cuts and requires no adjustments.

To use this feature, turn the LED light switch on.

Bring the motor head down so the blade is approximately 6 mm from the workpiece. The shadow of the blade will be projected onto the workpiece, indicating where the blade teeth will make contact as the cut is made.

PRACTICAL APPLICATIONS

WARNING

- To avoid personal injury, never remove or place a workpiece on the table while the tool is being operated.
- Never place your limbs inside of the line next to warning sign while the tool is being operated (see Fig. 17). This may cause hazardous conditions.

CAUTION

It is dangerous to remove or install the workpiece while the saw blade is turning.

When sawing, clean off the shavings from the turntable.

If the shavings accumulate too much, the saw blade from the cutting material will be exposed. Never subject your hand or anything else to go near the exposed blade.

1. Switch operation

Pull the switch while pressing the switch lock to make the saw blade rotate. (Fig. 18)

After the switch is turned on, even if the switch lock is released, the saw blade continues to rotate as long as the switch is pulled.

When the switch is released, the brake is applied to the saw blade rotation and the saw blade stops.”

2. Turn on the LED light

Press the LED light switch to switch the LED light.

3. Using the Vise Assembly (Standard accessory) (Fig. 19)

WARNING

Always firmly clamp or vise to secure the workpiece to the fence; otherwise the workpiece might be thrust from the table and cause bodily harm.

CAUTION

Always confirm that the motor head does not contact the vise assembly when it is lowered for cutting. If there is any danger that it may do so, move the vise assembly to a position where it will not contact the saw blade.

(1) The vise assembly can be mounted on the base.

(2) Turn the upper knob and securely fix the workpiece in position (Fig. 19).

NOTE

When using the vise, make sure that the tool is free of any excessive contact when the unit is swung or slid.

4. Cutting operation

(1) As shown in Fig. 20 the width of the saw blade is the width of the cut. Therefore, slide the workpiece to the right (viewed from the operator's position) when length (b) is desired, or to the left when length (a) is desired.

Turn the LED light, project the shadow of the blade onto the workpiece, align the left side or right side of shadow of the blade with the mark line on the workpiece.

(2) After turning on the switch and checking that the saw blade is rotating at maximum speed, slowly push down

the handle and bring the saw blade in the vicinity of the material to be cut.

(3) Once the saw blade contacts the workpiece, push the handle down gradually to cut into the workpiece.

(4) After cutting the workpiece to the desired depth, turn the power tool OFF and let the saw blade stop completely before raising the handle from the workpiece to return it to the full retract position.

WARNING

○ Confirm that the trigger switch is turned OFF and the power plug has been removed from the receptacle. whenever the tool is not in use.

○ Always turn the power off and let the saw blade stop completely before raising the handle from the workpiece. If the handle is raised while the saw blade is still rotating, the cut-off piece may become jammed against the saw blade causing fragments to scatter about dangerously.

○ Every time one cutting of deep-cutting operation is finished, turn the switch off, and check that the saw blade has stopped. Then raise the handle, and return it to the full retract position.

○ Be absolutely sure to remove the cut material from the top of the turntable, and then proceed to the next step.

○ Continued cutting operation can result in overload of the motor. Touch the motor and if it's hot, stop your cutting operation at once and rest for 10 minutes or so, and then restart your cutting operation.

CAUTION

○ For maximum dimensions for cutting, refer to "SPECIFICATIONS?" table.

○ Increased pressure on the handle will not increase the cutting speed. On the contrary, too much pressure may result in overload of the motor and/or decreased cutting efficiency.

5. Cutting narrow workpieces (Press cutting) (Fig. 21)

Slide the hinge down to holder (A), then tighten the slide securing knob. Lower the handle to cut the workpiece. Using the power tool this way will permit cutting of workpieces of up to 107 mm square.

6. Cutting large workpieces (Fig. 22)

There may be case when a complete cutting cannot be done depending on the height of workpiece. In this case, mount an auxiliary board with the 6 mm flat head screws and the 6 mm nuts using the 7 mm holes on the fence surface (two holes on each side). Refer to "SPECIFICATIONS?" for the thickness of the auxiliary board.

NOTE

When cutting a workpiece exceeding 107 mm in height in right-angle cutting or 70 mm in left bevel angle cutting or 45 mm in right bevel angle cutting, adjust the lower limit position so that the base of the motor head will not come in contact with the workpiece.

To adjust the lower limit position of the saw blade, follow the procedure (1) shown in Fig. 23.

(1) Lower the motor head, and turn the 6 mm depth adjustment bolt and make adjustments so that there can be a clearance of 2 mm to 3 mm between the lower limit position of the motor head and the top of the workpiece at the saw blade's lower limit position where the head of the 6 mm depth adjustment bolt contacts the hinge.

7. Cutting wide workpieces (Slide cutting) (Fig. 24)

(1) Workpieces up to 107 mm high and 312 mm wide:

Loosen the slide securing knob, grip the handle and slide the saw blade forward. Then press down on the handle and slide the saw blade backward to cut the workpiece.

This facilitates cutting of workpieces of up to 107 mm in height and 312 mm in width.

(2) Workpieces up to 120 mm high and 260 mm wide:

Workpieces of up to 120 mm in height and up to 260 mm in width can be cut in the same manner as described in paragraph 6-(1) above.

WARNING

- Forslide cutting, follow the procedures. Forward slide cutting (toward the operator) is very dangerous because the saw blade could kick upward from the workpiece. Therefore, always slide the handle away from the operator.
- Always return the carriage to the full rear position after each crosscut operation in order to reduce the risk of injury.
- Never put your hand on the miter lock handle during the cutting operation because the saw blade comes close to the miter lock handle when the motor head is lowered.

CAUTION

- When cutting a workpiece of 120 mm height, adjust the lower limit position of the motor head so that the gap between the lower edge of the motor head and the workpiece will be 2 to 3 mm at the lower limit position.
- If the handle is pressed down with excessive or lateral force, the saw blade may vibrate during the cutting operation and cause unwanted cutting marks on the workpiece, thus reducing the quality of the cut. Accordingly, press the handle down gently and carefully.
- Inslide cutting, gently push the handle back (rearwards) in a single, smooth operation. Stopping the handle movement during the cut will cause unwanted cutting marks on the workpiece.

8. Bevel cutting procedures (Fig. 25)

WARNING

When changing the oblique angle, hold down the motor head. If the motor head moves to an oblique angle suddenly, it may result in injury or damage to the main body.

- (1) Loosen the bevel lock handle and bevel the saw blade to the left or to the right.

To change the bevel angle to the right, loosen the bevel lock handle, then pull out the set pin (A) toward the front, and tilt the motor head to the right.

When the motor head is straight upright, the set pin (A) is held tightly in place, so tilt the motor head slightly to the left when pulling out the set pin (A) before tilting the motor head to the right.

- (2) Adjust the bevel angle to the desired setting while watching the bevel angle scale and indicator, then secure the bevel lock handle.

CAUTION

Always check that the bevel lock handle is secured and the motor head is clamped. If you attempt angle cutting without clamping the motor head, then the motor head might shift unexpectedly causing injuries.

WARNING

- When the workpiece is secured on the left or right side of the blade, the short cut-off portion will come to rest on the right or left side of the saw blade. Always turn the power off and let the saw blade stop completely before raising the handle from the workpiece.

- If the handle is raised while the saw blade is still rotating, the cut-off piece may become jammed against the saw blade causing fragments to scatter about dangerously. When stopping the bevel cutting operation halfway, start cutting after pulling back the motor head to the initial position.

Starting from halfway, without pulling back, causes the lower guard to be caught in the cutting groove of the workpiece and to contact the saw blade.

- When right angle cutting, loosen the 6 mm wing bolt, then slide the sub fence (A) outward and remove it.
- When left angle cutting, loosen the 6 mm wing bolt, then slide the sub fence (B) outward.

CAUTION

When cutting a workpiece of 75 mm height in the left 45° bevel cutting position or a workpiece of 50 mm height in the right 45° bevel cutting position, adjust the lower limit position of the motor head so that the gap

between the lower edge of the motor head and the workpiece will be 2 to 3 mm at the lower limit position (refer to "11. Checking the saw blade lower limit position" on page 18).

NOTE

The bevel lock handle adopts a clutch system. When contacting the bevel lock handle and the main body, pull the bevel lock handle in the direction of the arrow mark as illustrated in Fig. 25, and change the direction of the bevel lock handle.

9. Miter cutting procedures (Fig. 26)

- (1) Unlock the miter table by lifting up on the miter lock handle.
- (2) While lightly pressing down on the positive stop lever until it engages the detent lever, grasp the miter lock handle and rotate the table to the desired angle.
- (3) Once the desired miter angle is achieved, press down on the miter lock handle to secure the table into position.
- (4) If the desired miter angle is one of the nine positive stops noted below, please see the Miter detent lever section on Fig. 15.
- (5) Turn the LED light on and position the workpiece on the table for pre-alignment of your cut.

CAUTION

Always check that the miter lock handle is secured and the turntable is clamped.

If you attempt angle cutting without clamping the turntable, then the turntable might shift unexpectedly causing injuries.

NOTE

○ Positive stops are provided at the right and left of the 0° center setting, at 15°, 22.5°, 31.6° and 45° settings.

Check that the miter Scale and the tip of the indicator are properly aligned.

○ Operation of the saw with the miter scale and indicator out of alignment will result in poor cutting precision.

10. Compound cutting procedures

Compound cutting can be performed by following the instructions in 8 and 9 above. For maximum dimensions for compound cutting, refer to "SPECIFICATIONS" table.

CAUTION

Always secure the workpiece with the right or left hand and cut it by sliding the round portion of the saw backwards with the right or left hand.

It is very dangerous to rotate the turntable to the right or left during compound cutting because the saw blade may come into contact with the hand that is securing the workpiece.

In case of compound cutting (angle + bevel) by left bevel, slide the sub-fence (B) outward, and engage in the cutting operation.

In case of compound cutting (angle + bevel) by right bevel, remove the sub-fence (A), and engage in the cutting operation.

11. Cutting long materials

When cutting long materials, use an auxiliary platform which is the same height as the holder (optional accessory) and base of the special auxiliary equipment.

Capacity:

wooden material (W x H x L)

300 mm x 45 mm x 1300 mm, or

180 mm x 25 mm x 2000 mm

12. Installing the holders ... (Optional accessory) The holders help keep longer workpieces stable and in place

during the cutting operation.

(1) As indicated in Fig. 27, use a steel square for aligning the upper edge of the holders with the base surface. Loosen the 6 mm wing nut. Turn a height adjustment bolt 6 mm, and adjust the height of the holder.

(2) After adjustment, firmly tighten the 6 mm wing nut and fasten the holder with the 6 mm knob bolt (optional accessory). If the length of Height Adjustment Bolt 6 mm is insufficient, spread a thin plate beneath. Make sure the end of Height Adjustment Bolt 6 mm does not protrude from the holder.

CAUTION

When transporting or carrying the tool, do not grasp the holder. There is the danger of the holder slipping out of the base. Grasp the handle instead of the holder.

13. Stopper for precision cutting ... (Stopper and holder are optional accessory)

The stopper facilitates continuous precision cutting in lengths of 285 mm to 450 mm. To install the stopper, attach it to the holder with the 6 mm knob bolt as shown in Fig. 28.

14. Confirmation for use Crown molding vise, Crown molding Stopper (L) and (R) (Optional accessory)

(1) Crown molding Stopper (L) and (R) (optional accessories) allow easier cuts of crown molding without tilting the saw blade. Install them in the base both-sides side to be shown in Fig. 29. After inserting tighten the 6 mm knob bolts to secure the Crown molding Stoppers.

(2) The crown molding vise (B) (Optional accessory) can be mounted on either the left fence (Fence (B)) or the right fence (Fence (A)). It can unite with the slope of the crown molding and vice can be pressed down.

Then turn the upper knob, as necessary, to securely attach the crown molding in position. To raise or lower the vise assembly, first loosen the hex. socket set screw.

After adjusting the height, firmly tighten the 6 mm wing bolt; then turn the upper knob, as necessary, to securely attach the crown molding in position (Fig. 30).

Position crown molding with its WALL CONTACT EDGE against the guide fence and its CEILING CONTACT EDGE against the Crown molding Stoppers as shown in Fig. 30. Adjust the Crown molding Stoppers according to the size of the crown molding. Tighten the 6 mm wing bolt to secure the Crown molding Stoppers. Refer to the lower table for the miter angle. Use the sub fence (A) to secure the crown molding more firmly.

WARNING

Always firmly clamp or vise to secure the crown molding to the fence: otherwise the crown molding might be thrust from the table and cause bodily harm.

Do not bevel cutting. The main body or saw blade may contact the sub fence, resulting in an injury.

CAUTION

Always confirm that the motor head does not contact the crown molding vise ass'y when it is lowered for cutting.

If there is any danger that it may do so, loosen the hex.

socket set screw and move the crown molding vise ass'y to a position where it will not contact the saw blade.

15. Groove cutting procedures

Grooves in the workpiece can be cut by adjusting the 6 mm depth adjustment bolt (Fig. 31).

(1) Lower the motor head, and turn the 6 mm depth adjustment bolt by hand. (Where the head of the 6 mm depth adjustment bolt contacts the hinge.)

(2) Adjust to the desired cutting depth by Setting the distance between the saw blade and the surface of the base (Fig. 31).

NOTE

When cutting a single groove at either end of the workpiece, remove the unneeded portion with a chisel.

16. Connecting the dust extractor (Sold separately) (Fig. 32)

Do not inhale the harmful dusts generated in cutting operation.

The dust can endanger the health of yourself and bystanders.

Use of dust extractor can reduce dust related hazards.

By connecting with dust extractor through adapter, joint and dust collection adapter, most of dust can be collected, Connect the dust extractor with adapter.

(1) Connect in order of hose (id 38 mm x 3 mlong) and adapter (Dust extractor's Standard accessory) joint (Optional accessory) and dust collection adapter (Optional accessory) with the duct of power tool.

Connections are done by pressing in the direction of the arrow. (Fig. 32)

The dust collection adapter (Optional accessory) is fixed to the duct by a hose band. (Optional accessory)

MOUNTING AND DISMOUNTING SAW BLADE

WARNING

To prevent an accident or personal injury, always turn off the trigger switch and disconnect the power plug from the receptacle before removing or installing a saw blade.

1. Mounting the saw blade (Fig. 33)

(1) Press in spindle lock and loosen 10 mm bolt with 8 mm hex. bar wrench (standard accessory). Since the 10 mm bolt is left-hand threaded, loosen by turning it to the right.

NOTE

○ If the spindle lock cannot be easily pressed into lock the spindle, turn the 10 mm bolt with 8 mm hex. bar wrench (standard accessory) while applying pressure on the spindle lock.

○ The saw blade spindle is locked when the spindle lock is pressed inward.

(2) Remove the bolt and washer (B)

(3) Lift the lower guard and mount the saw blade.

WARNING

When mounting the saw blade, confirm that the rotation indicator mark on the saw blade and the rotation direction of the gear case (Fig. 1) are properly matched.

(4) Thoroughly clean washer (B) and the 10 mm bolt, and install them onto the saw blade spindle.

(5) Press in the spindle lock and tighten the 10 mm bolt by turning it to the left by 8 mm hex. bar wrench (standard accessory).

WARNING

Tighten the 10 mm bolt so it does not come loose during operation. Confirm the 10 mm bolt has been properly tightened before the power tool is started.

CAUTION

○ A dust guide is installed inside behind the hinge. When removing or installing the saw blade, do not make contact with the dust guide. Contact may break or chip saw blade tips. (Fig. 33)

○ Confirm that the spindle lock has returned to the retract position after installing or removing the saw blade.

2. Dismounting the saw blade

Dismount the saw blade by reversing the mounting procedures.

The saw blade can easily be removed after lifting the lower guard.

CAUTION

Never attempt to install saw blades except 305 mm in diameter.

TRANSPORTATION OF THE MAIN BODY

WARNING

To avoid an accident or personal injury, always confirm that the trigger switch is turned OFF and remove the battery before transportation of the main body.

The vice assembly could be dropped during transportation.

Either remove the assembly or slip a piece of wood between the vice to firmly secure it. (Fig. 34-b)

Down the head and insert the locking pin (see page 17 7. Releasing the locking pin"). Also screw in the slide securing knob so that the hinge is positioned to hit the holder (A) and secure the head. (Fig. 34-a)

Lift up the miter lock handle, turn the turntable as far right as it will go, and secure the turntable by press down the miter lock handle to the fixed position. This will make the main body even more compact. (Fig. 34-b)

When transporting the main body, carry it in your arms, holding the grip located on the base with both hands.

When transporting with two people, each person should use both their hands to hold the carry handle, handle and the base grip.

MAINTENANCE AND INSPECTION

WARNING

To prevent an accident or personal injury, always turn off the trigger switch and disconnect the power plug from the receptacle or remove the battery before doing any inspection or maintenance.

1. Inspecting the saw blade

Always replace the saw blade immediately upon the first sign of deterioration or damage.

A damaged saw blade can cause personal injury and a worn saw blade can cause ineffective operation and possible overload to the motor.

CAUTION

Never use a dull saw blade. When a saw blade is dull, its resistance to the hand pressure applied by the tool handle tends to increase, making it unsafe to operate the power tool.

2. Inspecting the mounting screws

Regularly inspect all mounting screws and ensure that they are properly tightened. Should any of the screws be loose, retighten them immediately. Failure to do so could result in serious hazard,

3. Inspecting the carbon brushes (Fig. 36)

The motor employs carbon brushes which are consumable parts. Since an excessively worn carbon brush can result in motor trouble, replace the carbon brushes with new ones having the same carbon brush No. shown in the figure when it becomes worn to or near the "wear limit". In addition, always keep carbon brushes clean and ensure that they slide freely within the brush holders.

4. Replacing a carbon brushes (Fig. 36)

Disassemble the brush cap with a slotted-head screwdriver. The carbon brushes can then be easily removed.

5. Maintenance of the motor

The motor unit winding is the very "heart" of the power tool. Exercise due care to ensure the winding does not become damaged and/or wet with oil or water.

6. Inspecting the lower guard for proper operation Before each use of the tool, test the lower guard (Fig. 35) to assure that it is in good condition and that it moves smoothly.

○ Never use the tool unless the lower guard operates properly and it is in good mechanical condition.

7. Lubrication

Lubricate the following sliding surfaces once a month to keep the power tool in good operating condition for a long time.

Use of machine oil is recommended.

- Rotary portion of hinge
- Rotary portion of holder (A)
- Rotary portion of vise assembly

8. Cleaning

Clean the machine, duct and lower guard by blowing with dry air from an air gun or other tool. (Fig. 37)

Periodically remove chips and other waste material from the surface of the power tool with a damp, soapy cloth.

To avoid a malfunction of the motor, protect it from contact with oil or water.

If the LED line becomes invisible due to chips and the like adhered onto the window of the LED's light-emitting section, wipe and clean the window with a dry cloth or a soft cloth moistened with soapy water, etc.

9. Storage

After operation of the tool has been completed, check that the following has been performed:

- (1) Trigger switch is in OFF position,
- (2) Power plug has been removed from the receptacle, When the tool is not in use, keep it stored in a dry place out of the reach of children.

SELECTING ACCESSORIES

The accessories of this machine are listed on page 24.

CAUTION

Repair, modification and inspection of HIKOKI Power Tools must be carried out by a HIKOKI Authorized Service Center.

In the operation and maintenance of power tools, the safety regulations and standards prescribed in each country must be observed.



NOTE

Due to HIKOKI's continuing program of research and development, the specifications herein are subject to change without prior notice.

TROUBLESHOOTING

Use the inspections in the table below if the tool does not operate normally. If this does not remedy the problem, consult your dealer or the HIKOKI Authorized Service Center.


Symptom	Possible cause	Remedy
Tool suddenly stopped	Tool was overburdened	Get rid of the problem causing the overburden.
	The motor was automatically stopped to prevent failure of the tool.	This is not a malfunction. The trigger switch was held down for 5 minutes or more. Switch on the power once more.
Cannot be tilted	The bevel lock handle has not been loosened.	Loosen the bevel lock handle and then tilt the tool. After adjusting the loosened component, make sure to tighten it once again.
Cannot be tilted to the right	Set pin (A) has not been pulled out.	Tilt to the right after pulling out set pin (A).
	The bevel lock handle has not been loosened.	Loosen the bevel lock handle and then tilt.
Sawblade is dull	The sawblade is worn down or missing teeth.	Exchange with a new product.
	Bolt is loose.	Tighten the bolt.
	The sawblade has been installed in reverse.	Install the sawblade in the correct direction.
Cannot cut with precision	The operation parts of the tool are not fully fixed.	Fully install the bevel lock handle and miter lock handle.
	Material cannot be fixed in the correct position.	Remove any foreign material from the fence or turntable.
		In some cases, proper position cannot be fixed due to a curve in the material. Try to fix a flat surface with the fence or turntable.
Switch can't be pulled	Switch lock is not pressed in enough.	Press in the switch lock all the way until it strikes the back

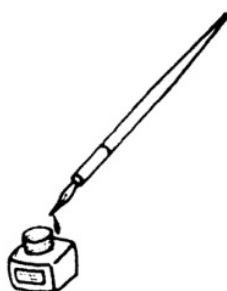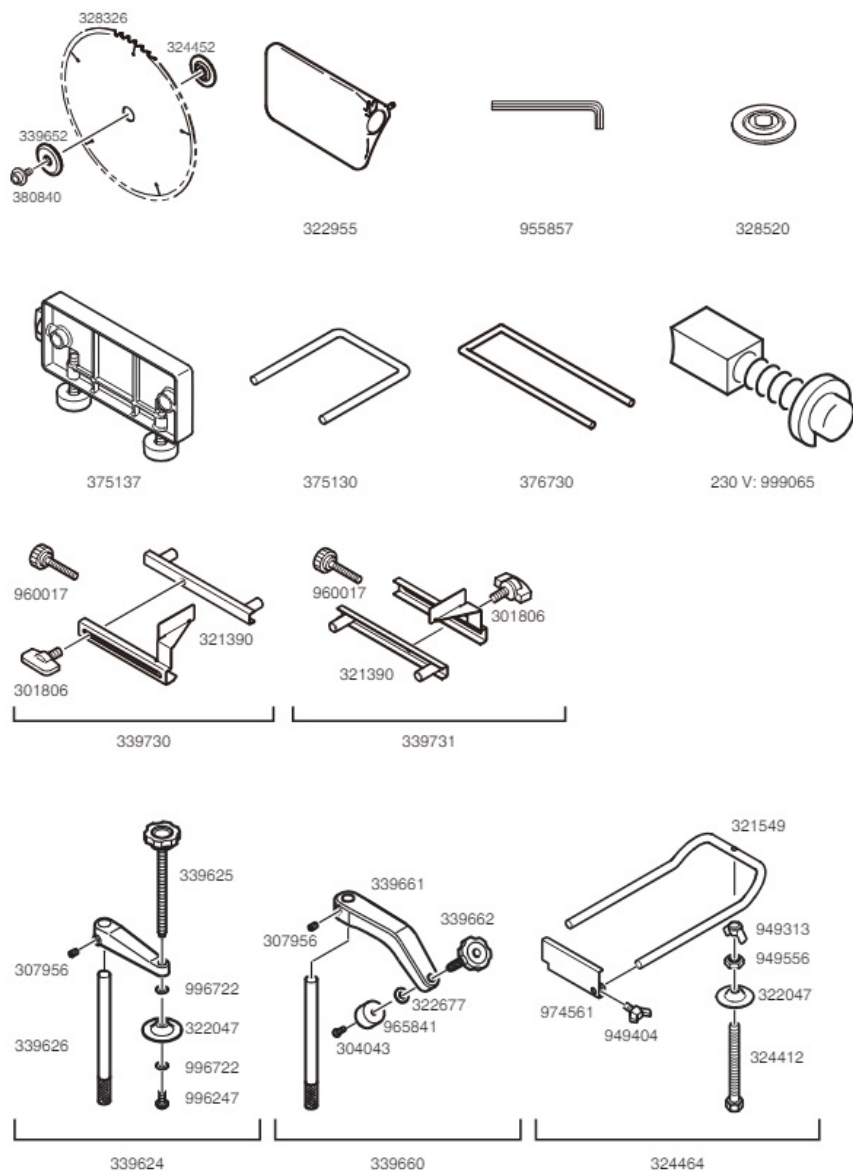

HIKOKI

Koki Holdings Co., Ltd.
 Shinagawa Intercity Tower A, 15-1, Konan 2-chome,
 Minato-ku, Tokyo, Japan
 311
 Code No. C99748211 F
 Printed in China

Documents / Resources

	<p>HIKOKI C 12RSH3 Cordless Circular Saw [pdf] Instruction Manual</p> <p>C 12RSH3, C 12RSH3 Cordless Circular Saw, Cordless Circular Saw, Circular Saw, Saw</p>
---	---

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.