



Honeywell AQUATROL Zone Synchronizing Programmable Relay Boiler Controls AQ25A User Guide

[Home](#) » [Honeywell](#) » Honeywell AQUATROL Zone Synchronizing Programmable Relay Boiler Controls AQ25A User Guide 

Honeywell

AQUATROL Zone Synchronizing
Programmable Relay Boiler Controls
AQ25A



This is a legacy product document supported by Resideo. It is no longer manufactured

Contents

- 1 USER OPERATION AND MAINTENANCE
- 2 FAMILIARIZATION WITH CONTROL
- 3 LCD Display Panel Layout
- 4 LCD Display Navigation
- 5 HOME PAGE DISPLAY
- 6 Programming Instructions
- 7 User Menu Overview
- 8 SYSTEM STATUS
- 9 PREFERENCES/TIME
- 10 TROUBLESHOOTING
- 11 USER MENU STRUCTURE
- 12 Documents / Resources
- 13 Related Posts

USER OPERATION AND MAINTENANCE

APPLICATION

The AQ25A series of AQUATROL™ Boiler Controls provides simplified control of single-temperature, residential hydronic heating systems. The AQ25A easily converts a single zone heating system into a room-by-room comfort control system or upgrades a basic, relay-logic zoning system to intelligent “Zone of Greatest Demand” control with reduced boiler cycling. AQ25A boiler controls can ensure ample supply of water for both space heating and priority generation of domestic hot water for bathing, dishes, and laundry.

When AQ1000 communicating thermostats are used with the AQ25A Zoning Modules, they can use the same wiring as existing thermostats. Night setback operation can be programmed from the AQ25A panel. Thanks to the network communication capability of the AQ25A controls, AQ1000 thermostats in the home can display the actual outdoor temperature when an outdoor sensor is connected to the AQ25A Control Panel.



WARNING

Risk of electrical shock.

Can cause severe injury, property damage, or death.

Only trained, experienced, licensed service technicians should service this Control Panel. The front cover of the AQ25A Control Panel should not be removed, as this will expose the user to potentially dangerous line voltage (120V) electricity.

Congratulations!

The AQUATROL AQ25A installed on your heating system is the most powerful, yet user-friendly hydronic heating control system available on the market for residential and light commercial installations.

This instruction sheet contains all the information you need to program the comfort settings of the AQ25A and to customize its operation for your home or business. For detailed information on the operation of this control, please consult a trained hydronic heating professional that installed the AQ25A control.

This AQUATROL AQ25A Control Panel was installed by a trained hydronic heating contractor.

To service this product, or for any questions relating to its installation, please contact:

Installing contractor: _____

Address: _____

Phone: (_____) _____



69-2120-02

Table 1. AQ25A Models

Model	Function	DHW	Zones	Zone Control
AQ25A42B	Programmable Relay Boiler Control Panel with integrated zoning	Selectable DHW priority , with optional priority override	2 —16, in sets of 4	Line voltage circulators or 2-wire zone valves
AQ25A44B	Programmable Relay Boiler Control Panel with integrated zoning	Selectable DHW priority , with optional priority override	2 —16, in sets of 4	24 Vac zone valves with end switches

AQ25A Approvals and Standards:

Canadian Standards Association: Certified, File No. LR76030

Replacement Parts and Accessories:

AQ1000: non-programmable zone thermostat

AQ15A10B: Replacement Programmable Relay Boiler Control Module

AQ15740B: 4-zone valve expansion module

AQ15540B: 4-zone pump expansion module

AQ10X38: 24 Vac 38 VA transformer

AQ12C10: Replacement sensor, outdoor

AQ12C11: Replacement sensor, supply, and return on boiler loop

AQ12C20: Replacement floor / slab sensor

FAMILIARIZATION WITH CONTROL

User Interface

The AQ25A User Interface consists of an LCD screen (16 m characters by 3 rows) and a 7 button keypad for navigating the menus as illustrated in Fig. 1.

Keypad

The 7- button keypad provides the following functions.

Menu	Press this button to access the User Menu. When pressed while in a sub-menu, the sub-menus values are saved before going up one level in the current menu.
Home	Press this button to leave the User or Installer Menu and return to the Home Page display screen.
OK	Press this button to enter a sub-menu of the active menu item. A menu item is active when the indicator arrow (←) is positioned beside the item.
^ and v	Press these buttons to scroll up/down in the menu items. Pressing one of these buttons automatically exits the edit mode, and the selection moves to the previous or next menu item.
– and +	Press these buttons to decrease/increase the value of a selected menu item, or to scroll through a list of pre-defined options. – If the menu item being modified is a number, the displayed value will decrease/increase by pressing these buttons. When holding the – or + button for more than a second, the values automatically decrease/increase at a faster pace, similar to setting the time on a digital clock radio. – If the menu item is an option, pressing these buttons scrolls through the list of available options one at a time.

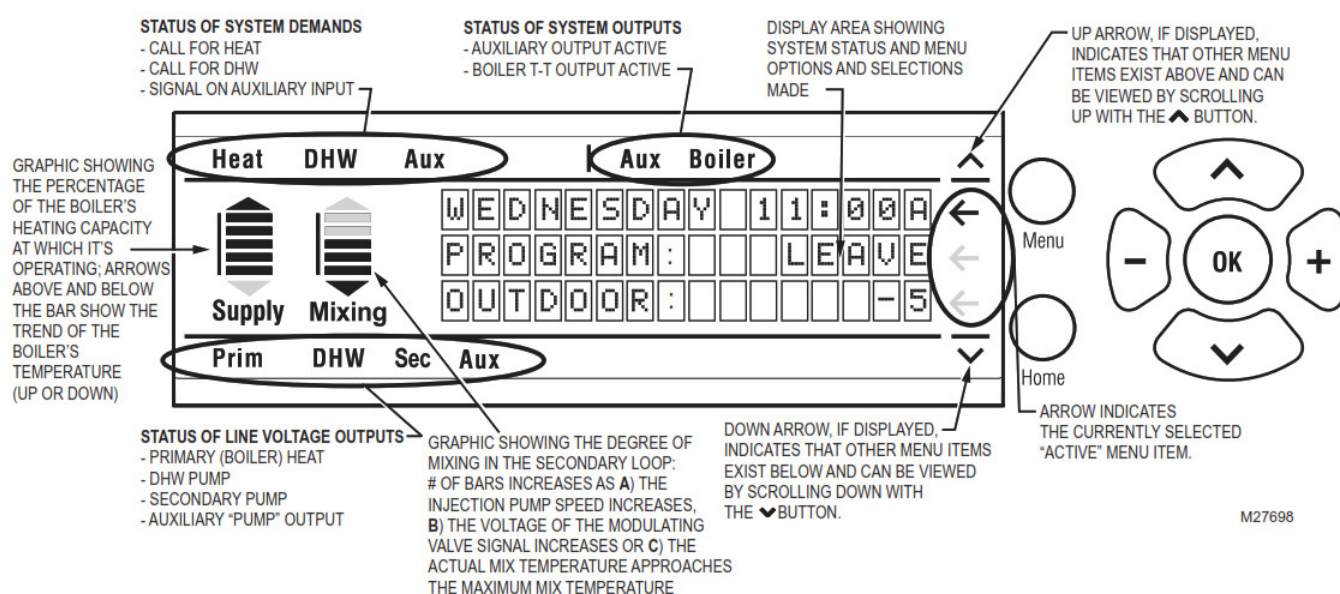


Fig. 1. LCD Dot Matrix Display Layout

LCD Display Panel Layout

The LCD on the AQ25A Control Panel is used to:

- Monitor system status and performance.
- Select and/or modify control settings for the hydronic system.
- Diagnose and troubleshoot system problems.

The layout of the display is logical and simple to navigate. The information displays so that you can see at a glance the system's operating temperatures, as well as the status of the system equipment, such as a call for heat, DHW pump ON, Boiler T-T terminals energized, etc. Fig. 1 on page 2 illustrates the layout and features of the LCD display panel and keypad.

LCD Display Navigation

This section describes how the keypad is used to navigate the LCD display and menus.

- The LCD displays up to three lines of text at a time. For menus with more than three lines, use the up and down buttons (^ or v) to scroll through the menu options.
- As the menu is scrolled up or down, the indicator arrow (←) shows which menu item is active.
- If the active menu item is part of a list of predefined options (e.g., Day of the Week) press the – or + button to scroll through the available options until the preferred option is displayed. The option is automatically saved when the indicator arrow is scrolled away from the value being edited.
- If the active menu item requires you to define a value (e.g., a setpoint), use the – or + button to decrease or increase the value until the desired value is displayed. The selection will be saved when the indicator arrow is scrolled up or down.

NOTES:

1. When setting times for the setback schedule, you must use the – or + button to change the time.
 2. The OK button, when pressed, defaults the time setting to “–:–” (midnight).
- If the active menu item leads to a further sub-menu, pressing the OK button displays the sub-menu options on the LCD. Scroll through this sub-menu to position the indicator arrow (←) beside the desired menu item to input or modify. Choose one of the options provided or input the desired value for the menu item. When satisfied, scroll to another item and your selection will be saved.
 - To define or modify another item within the same menu, scroll the up and down buttons (^ or v) until the indicator arrow (←) is beside the desired option. Use the – or + buttons to set the value for that item.
 - To move back (up) one level within a menu, press the Menu button.
 - To return to the Home Page display, press the Home button.

NOTE: The AQ25A automatically returns to the Home Page display after 60 minutes of inactivity on the keypad.

HOME PAGE DISPLAY

The Home Page is the default view displayed on the AQ25A Control Panel's LCD screen. There are two Home Page views – Simple and Detail.

- Simple view shows 3 lines of text and is a brief description of the system operation.
- Detail view includes the same 3 lines plus 10 lines of additional information.
- Detail view is the factory default. The choice of the Simple or Detail Home Page view is made from the USER MENU > PREFERENCES/TIME menu option.

The Home Page display information for the Simple and Detail views is illustrated in Fig. 2.

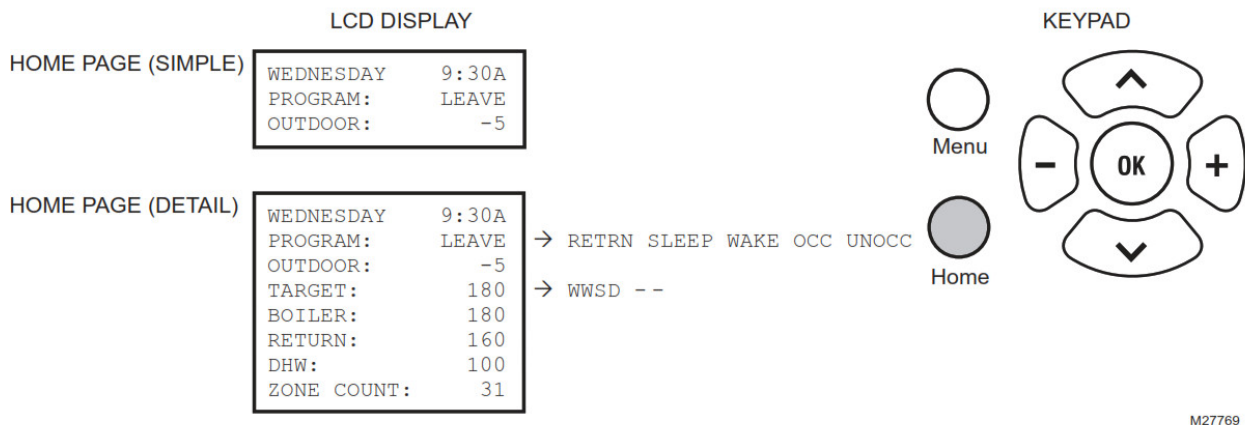


Fig. 2. Home Page displays (Simple and Detail).

Programming Instructions

the AQ25A by using the keypad and LCD display to select parameters from the User Menu. Refer to Fig. 1 on page 2 for an illustration of the LCD screen and keypad.

NOTE: The figures in “User Menu Structure” on page 8 provide a graphical layout of the AQ25A’s User and Installer menus.

When a new AQ2000 component is connected on the AQUATROL network, it will be seamlessly integrated in the system after a few seconds. If one or more components are disconnected or stop providing data to the network, a the message will appear on the System Status display until the fault is corrected.

User Menu Overview

The User Menu is intended for use by the building owner to choose the LCD display preferences, Zone Settings (including setpoint temperatures and setback times for each zone), and temperatures for the WAKE, LEAVE, RETURN (return), and SLEEP programs.

The Home Page and User Menu allow the building owner to:

- View the status of the system.
- Set up preferences for how the system information is displayed.
- Set target temperatures for each zone (requires AQ1000 thermostats).
- Program times of the day when the system will set back the temperatures for all zones (requires AQ1000 thermostats).

NOTE: If there are any problems with the system’s operation, the AQ25A displays error codes on the System Status display of the LCD panel. For details on these, refer to “Troubleshooting” on page 6.

TO ACCESS THE USER MENU:

Press the Menu button on the keypad at any time to access the User Menu. User Menu Settings
The User menu has five sub-menus.

- “System Status”
- “Preferences/Time”
- “Zone Settings (requires aq1000 thermostats)”
- “Program Settings”
- “Statistics” on page 5

To make changes to the parameter settings in the User Menu, refer to “LCD Display Navigation” on page 3.

SYSTEM STATUS

This is a detailed list of activities going on in the heating system (e.g., call for heat, DHW disabled), and provide the building owner with a quick snapshot of the heating system’s operation, primarily for purposes of troubleshooting and system diagnostics.

PREFERENCES/TIME

The preferences that the building owner can change in this sub-menu are:

- The temperature scale for the display (Fahrenheit or Celsius) for both the AQ25A control’s LCD and the zone thermostats.
- The time display in 12 hours (e.g., 7:00 PM) or 24 hours format (e.g., 19:00).
- Date and time of day – allows the building owner to reset day and time of day in the event of a power outage of more than 4 hours (refer to Troubleshooting section).
- The Home Page display view, Simple or Detail. The factory default is Detail.
- The LCD Backlight – illuminated permanently (ON) or set to automatically turn off the backlight after 1 hour (AUTO).

POWER FAILURE

If a power disruption lasts for more than 4 hours, the message PLS SET DAY/TIME displays, and optionally, the AQ25A’s backlight flashes repeatedly. This displayed message continues until the DATE and TIME OF DAY are updated. See “Power Disruption Greater Than 4 Hours” on page 6.

ZONE SETTINGS (REQUIRES AQ1000 THERMOSTATS)

Settings in this sub-menu define:

- The temperature setpoints (target temperatures) for each zone in the heating system
- The temperature setback for each zone in the heating system. This is the desired temperature drop when the heating system enters the setback program SLEEP or LEAVE.
- The maximum and minimum setpoints that can be entered by a user at a thermostat screen for each zone.
- Whether each zone can be set independently by the AQ25A (i.e., some zones can be locked while others are unlocked) depending on whether or not the keyboard on a the thermostat is locked. When locked, no changes can be made to a zone’s setpoint temperature through the thermostat. Changes can still be made through the one Settings menu on the AQ25A control panel.

PROGRAM SETTINGS

Using the Program Settings sub-menu, the building owner can define the time of day when the entire heating system will change programs (e.g., from SLEEP to WAKE).

The AQ25A has provisions for four different schedule periods per day. They are defined as WAKE, LEAVE, RETURN (return), and SLEEP:

WAKE: Period when you awaken and want your home at a comfortable temperature.

LEAVE: Period when you are away from home and want an energy-saving temperature.

RETRN: Period when you return home and want your home back to a comfortable temperature.

SLEEP: Period when you are asleep and want an energy-saving temperature.

There are three modes of operation – Automatic, Occupied and Unoccupied:

AUTO: In AUTO mode, the AQ25A follows the WAKE, LEAVE, RETURN, and SLEEP programs.

OCC: In OCC mode, the AQ25A holds the temperature of OCCUPIED programs (WAKE and RETURN). This might be used if the occupancy pattern of the building changes temporarily, requiring the temperature to be at a comfort level 24 hours/day.

UNOCC: In UNOCC mode, the AQ25A holds the temperature of UNOCCUPIED programs (LEAVE and SLEEP).

This might be used if the building will be unoccupied for an extended period of time, such as a vacation period.

There are two ways to set the scheduled program times for WAKE, LEAVE, RETURN, and SLEEP:

- One day at a time
- All days at the same time

1. One day at a time programming:

- Select EDIT DAILY from the Program Settings submenu.
- A list of four program times per day displays, showing the factory pre-set times for all programs:

MON WAKE	6:00A
MON LEAVE	8:00A
MON RETRN	4:30P
MON SLEEP	10:00P
TUE WAKE	6:00A
TUE LEAVE	8:00A
TUE RETRN	4:30P
TUE SLEEP	10:00P
SAT WAKE	E 6:00A
SAT LEAVE	—:—
SAT RETRN	—:—
SAT SLEEP	10:00P
SUN WAKE	6:00A
SUN LEAVE	—:—
SUN RETRN	—:—
SUN SLEEP	EP 10:00P

- Any of the times can be changed by scrolling to that line and pressing the + or – button until the desired program time is displayed.

2. Programming all days at the same time:

- Select EDIT ALL DAYS from the Program Settings sub-menu.
- A sub-menu displays where you can change the WAKE program time for all days, the LEAVE program time for all days, etc.
- When all four programs have been set, select the COPY TO ALL DAYS option. This displays the prompt: COPY TO ALL DAYS – ARE YOU SURE?.
Select Yes by positioning the indicator arrow at YES and press the OK button.
- Next, the same list of days as EDIT DAILY (described in step 1) displays, except that all days now show the times for the WAKE, LEAVE, RETURN, and SLEEP programs that you set in the EDIT ALL DAYS menu.
- If you do not want all days of the week to have the same program schedule (e.g., weekdays different than weekends), you can now scroll down and change the program times for certain days by positioning the indicator arrow beside the program time to change and using the + or – button to increase or decrease the scheduled program time.

When the program times have been set for all days, press the Home button to leave the programming menus and return to the Home Page display. All settings take effect immediately.

NOTES:

1. Schedule times are in 15-minute intervals.
2. To have the AQ25A ignore a program change
(and therefore keep the previous program's setpoint temperature), position the cursor beside the period to be ignored and press the button. The AQ25A will display “-:-” beside that program and, when operating, will continue with the previous program's setpoint until the next program change.

STATISTICS

This sub-menu provides information about system activity and mix valve cycle counts. See Fig. 3 on page 8 for an illustration of the statistical data that can be displayed.

TROUBLESHOOTING

Power Disruption

The AQ25A's system and thermostat (zone settings) parameters are stored in non-volatile memory and are updated as they change.

When a power disruption or loss of power occurs, the system configuration is retained in memory. When power is restored, the AQ25A Control Panel enters auto-detection mode, reads its previously-stored settings, and initializes all AQUATROL network components according to their saved parameters.

POWER DISRUPTION GREATER THAN 4 HOURS

If a power disruption lasts for more than 4 hours, the AQ25A will have discharged its internal supercapacitor and the DATE and TIME OF DAY settings will need to be reset.

Upon restart, the AQ25A displays its clock settings as: YEAR = 2008, MONTH = JAN, DATE = 1. The message PLS SET DAY/TIME displays. This displayed message continues until the DATE and TIME OF DAY are updated.

NOTE: If the power failure parameter is set to Backlight (USER MENU > PREFERENCES/TIME), the LCD backlight flashes repeatedly, along with the message.

The AQ25A remains permanently in OCCUPIED (or Comfort) mode until the DAY and TIME OF DAY are updated.

System Status and Error Codes

System status alerts and error messages display on the System Status Page. These messages are shown in Table 2.

Table 2. LCD Status Notices and Error Messages.

LCD Display	Parameter	Meaning
NC MIN. OFF TIME	n/a	The NC compressor is disabled because the minimum of time has not yet elapsed.
NC MIN. ON TIME	n/a	The NC compressor is active and the minimum ON time has not yet elapsed.
AUX IN EM. SHUT	n/a	Auxiliary Input's Emergency Shut Down is active.

BOILER:	EM SHUT	Boiler is disabled because the AQ25A is in Emergency Shut Down mode.
	FRZ PROT	Boiler freeze protection activated: ·Communication between Control Module and Zoning Module has been lost for more than 1 minute Or The boiler supply temperature is less than 50°F (10°C)
	HEAT DHW	Boiler is active to serve DHW.
	HEATING	Boiler is active to serve zones.
	IDLE	Boiler is not active.
	INIT	Boiler contacts (terminals 22 and 23) on the AQ1520, which are connected to the boiler's T-T terminals, have been shorted and the boiler is beginning its firing sequence.
	INST PURG	Boiler is active while the AQ25A is conducting the PURGE operation in the Installer Setup.
	INSTALL	Boiler is in ready mode during Installer Setup.
	PMP EXERC	Boiler is disabled while the AQ25A is exercising all pumps and valves connected to the AQUATROL network.
	POST PURGE	Boiler is active with the Post Purge operation and is sending the purged water to the Boiler (Primary) loop.
	PURGE DHW	Boiler is active with the Post Purge operation and is sending the purged water to the DHW tank.
CALL FOR COOL	n/a	At least one zone with a programmable thermostat requires cooling.
CALL FOR DHW	n/a	The DHW requires heat.
CALL FOR HEAT	n/a	At least one zone requires heat.
CWSD ACTIVE	n/a	Zone calls for cooling are not served because CWSD (Cold Weather Shutdown) is in progress.

DHW DISABLE	n/a	DHW call is not served because it is disabled.
LOST ZONE A-1 LO ST ZONE D-16	n/a	Lost communication with a zone (A-1 to A-16, B-1 to B-16, C-1 to C-16, or D-1 to D-16).
NO DHW PROBE	n/a	No DHW sensor is connected or it is defective.
NO OUTDOOR PR OBE	n/a	No outdoor sensor is connected or it is defective.

Table 2. LCD Status Notices and Error Messages. (Continued)


LCD Display	Parameter	Meaning
NO RETURN PROB E	n/a	No return sensor is connected or it is defective.
NO SUPPLY PROB E	n/a	No supply sensor is connected or it is defective.
SHORT CYCLE PR OT	n/a	There is a call for heat, but less than two minutes have elapsed since the la st firing of the boiler (prevents short cycling).
VALVE INIT	n/a	Motorized mixing valve controlling the secondary loop is being initialized an d repositioned (opening or closing) to meet the secondary loop target temp erature.
WATER-READY	n/a	Boiler Supply Water temperature is at or above the target temperature calc ulated by the AQ25A.
WWSD ACTIVE	n/a	Zone calls for heat is not served because WWSD (Warm Weather Shutdow n) is in progress.

When a new AQ2000 component is connected on the AQUATROL network, its settings are communicated to the AQ25A's Boiler Control Module (AQ1520M0) within 10 seconds of being connected. If the component is an AQ1000 thermostat, the setpoints for that zone thermostat can be modified from the Boiler Control Module as soon as it is recognized by the Control Module.

When an AQ thermostat is disconnected from the AQUATROL network, a message displays on the System Status page of the AQ25A indicating "Lost Zone A-xx", where "xx" is the specific identity, or address, of the lost zone. This helps the servicing contractor quickly identify the lost zone and fix its wiring, to re-establish communication with the Control Module.

USER MENU STRUCTURE

Press the Menu button on the keypad to display the User Menu. Fig. 3 illustrates all possible User Menu selections.

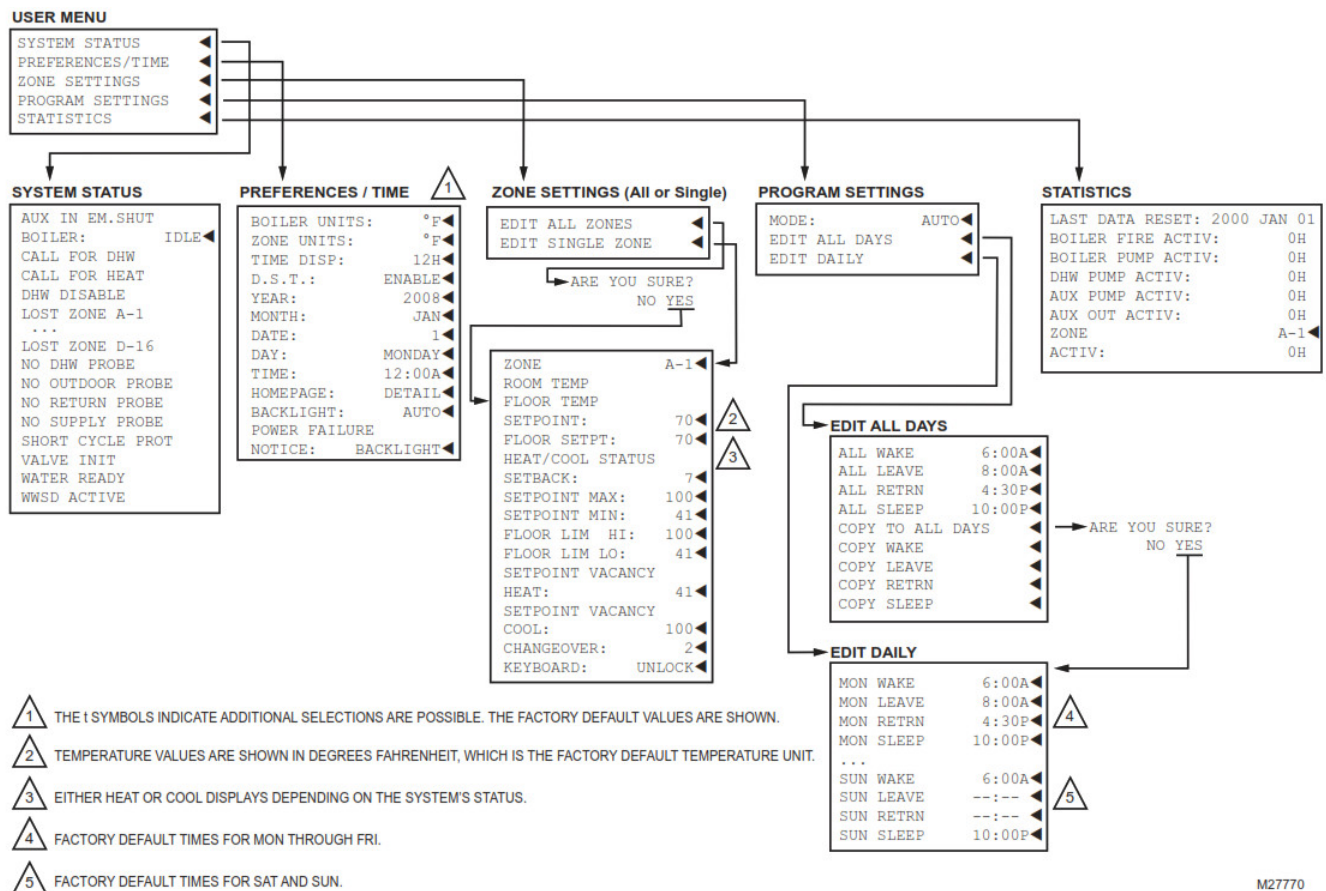

M27770

Fig. 3. User Menu Structure.

AQUATROL® is a registered trademark of Honeywell International Inc. Automation and Control Solutions
Honeywell International Inc.
1985 Douglas Drive North
Golden Valley, MN 55422
customer.honeywell.com

Honeywell Limited-Honeywell Limitée
35 Dynamic Drive
Toronto, Ontario M1V 4Z9

® U.S. Registered Trademark
© 2009 Honeywell International Inc.
69-2120—02 M.S. Rev. 09-09



Printed in U.S.A. on recycled
paper containing at least 10%
post-consumer paper fibers.



[Honeywell AQUATROL Zone Synchronizing Programmable Relay Boiler Controls AQ25A](#)

[pdf] User Guide

AQUATROL, Zone Synchronizing Programmable Relay Boiler Controls, AQ25A