



Hunter MINI-CLIKT Rain Sensor Installation Guide


[Home](#) » [Hunter](#) » Hunter MINI-CLIKT Rain Sensor Installation Guide 

Contents

- [1 Hunter MINI-CLIKT Rain Sensor](#)
- [2 Product Information](#)
- [3 Installation](#)
- [4 Introduction](#)
- [5 Mounting](#)
- [6 Wiring to Your Irrigation System](#)
- [7 Adjustments and Operation](#)
- [8 Maintenance](#)
- [9 Troubleshooting](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)
- [11 Related Posts](#)

Hunter®

Hunter MINI-CLIKT Rain Sensor

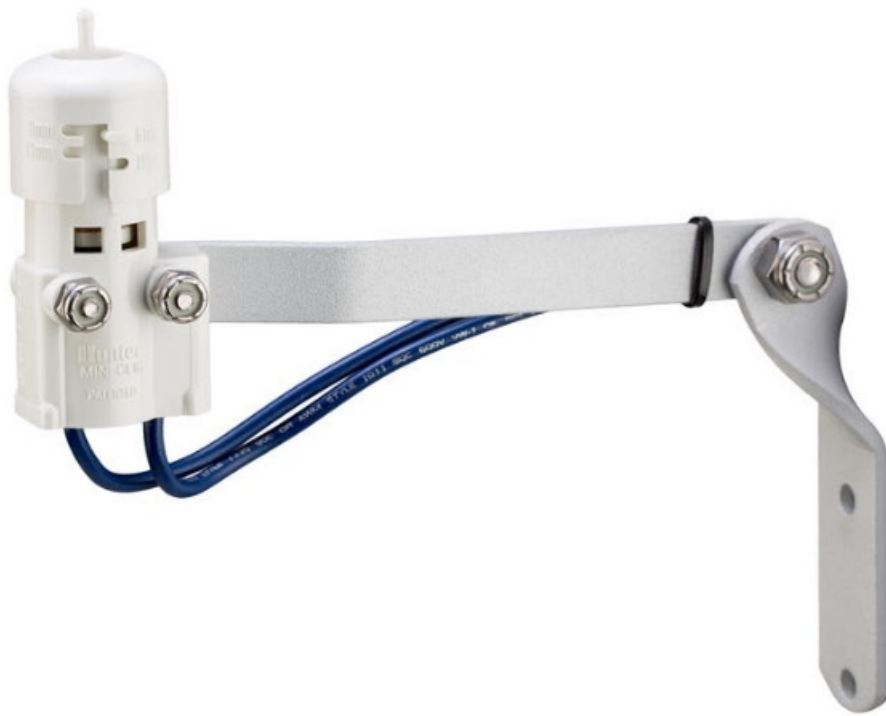

Product Information

In most installations, the Mini-Clik sensor acts as a switch that breaks the circuit to an irrigation system's solenoid valves in response to rain. It has 8 m of cable attached to it which terminates with blue leads. The unit is designed to be installed in conjunction with 24 VAC circuits only.

Installation

1. Mount the Mini-Clik sensor in a suitable location close to the controller. If a compromise must exist, note that the Mini-Clik will still work, but it won't be as accurate in gauging as it could be. Fasten the wire every few feet with wire clips or staples for best results.
2. Wire the Mini-Clik to the controller:
 - For 24-volt solenoid valves only (no booster pump), disconnect the common ground wire of the solenoid valves from the controller. Attach one wire of the Mini-Clik to the common terminal on the controller and attach the other wire of the Mini-Clik to the common wire leading to the valves.
 - The Mini-Clik can be wired anywhere along the common wire line if it is not feasible to interrupt the common wire at the controller.
 - If wiring to 110- or 220-volt irrigation controllers, consult your distributor or factory.
 - All wiring must conform to National Electrical Code or applicable local codes.

Introduction

In most installations, the Mini-Clik sensor acts as a switch that breaks the circuit to an irrigation system's solenoid valves in response to rain. This allows the timer to advance as scheduled, but keeps the valves from opening the water flow. Once the Mini-Clik has dried sufficiently, the switch closes again to allow normal operation. The Mini-Clik has 8 m of cable attached to it. The cable terminates with blue leads. These leads will be wired to the SEN terminals or SEN and SEN COM terminals of the controller. The order in which they are wired does not matter (Figure 1). Remove the jumper from the two SEN terminals.

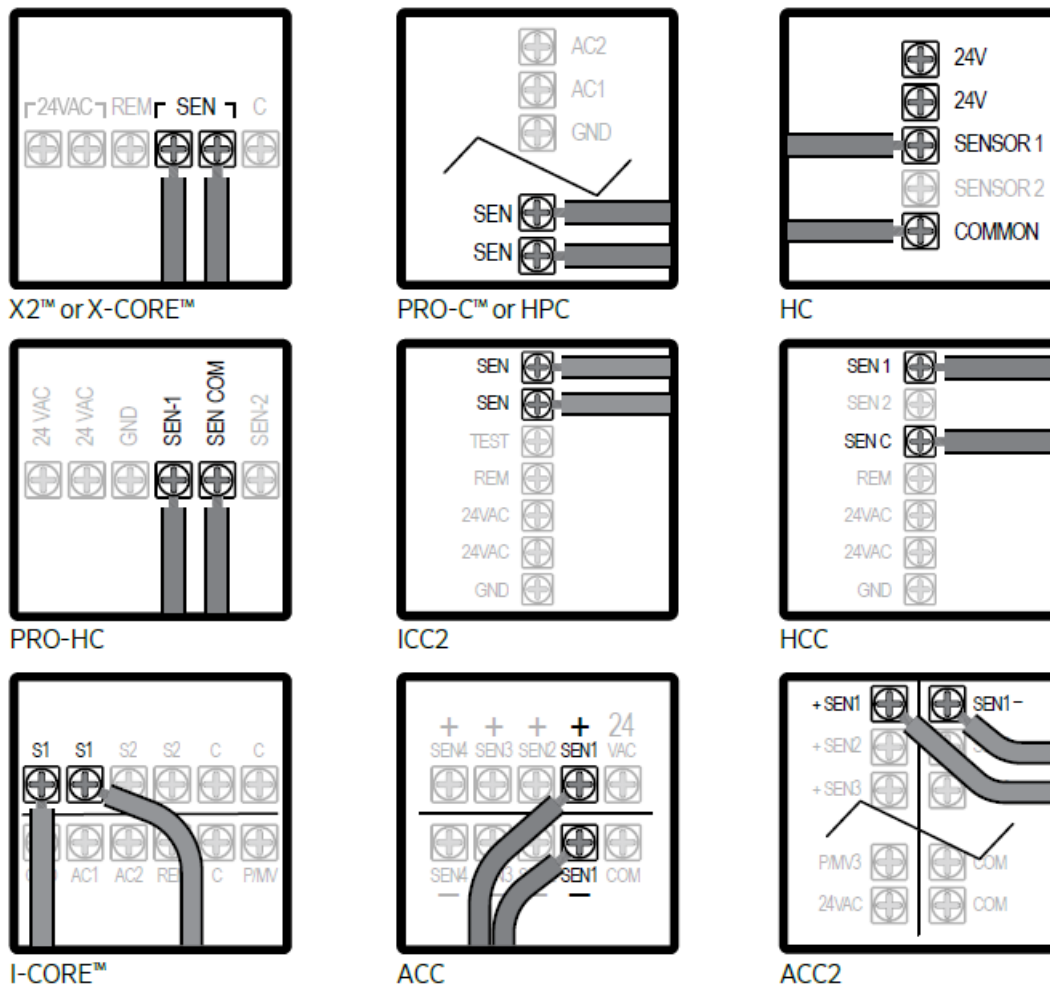


Figure 1

Note: For Hydrowise® controllers, you must complete the installation by configuring the sensor in your Hydrowise account.

For the conduit model, Mini-Clik-C: This rain sensor unit is the same as the standard model, except there is no aluminium mounting bracket and a 1/2" threaded cap that allows for electrical conduit to totally enclose the wires has been added. Unless local code states otherwise, plumbing-grade PVC pipe can be used, as well as electrical-grade conduit.

Mounting

Standard Model

Using the screws provided, mount the Mini-Clik on any surface where it will be exposed to unobstructed rainfall, but not in the path of sprinkler spray. The switch-housing portion must be upright (Figure 2), but the swivel bracket can be moved for mounting on any angled surface. Loosen the locknut and screw before swiveling the bracket, and then re-tighten. For model Mini-Clik-C: The conduit acts as the mounting support for the unit. Therefore, place and mount the conduit to allow for the desired sensor location as described in the main instructions for the standard model. Be sure to support the conduit sufficiently along its various lengths.

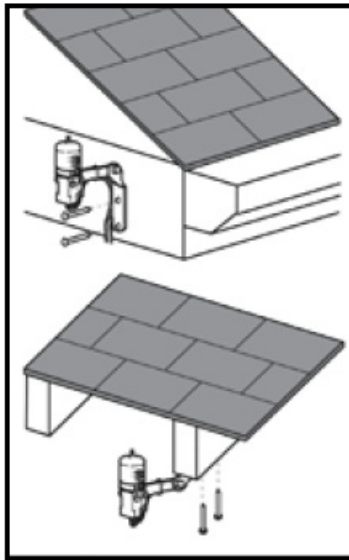


Figure 2

Helpful Hints for Mounting

- **A.** When looking for a suitable location (such as on the side of a building or post), the closer the Mini-Clik is to the controller, the shorter the wire run will be. This will minimise the chance for wire breaks.
- **B.** The ideal location for mounting is not always the most practical location. In the case where a compromise must exist (such as a low location on a side wall rather than a preferred higher location), note that the Mini-Clik will still work because it will always receive some rainfall — it just will not be as accurate in its gauging as it could be.
- **C.** As described in the “Operation” section of this manual, “reset rate” refers to the amount of time it takes the Mini-Clik to dry out sufficiently for the sprinkler system to be allowed to come back on. The mounting location will affect this rate and must be taken into consideration should extreme conditions exist. For example, mounting the Mini-Clik on a very sunny, southern end of a building may cause the Mini-Clik to dry out sooner than desired. Similarly, mounting on the northern end of a building with constant shade may keep the Mini-Clik from drying soon enough. Once the Mini-Clik is mounted, run the wire to the controller. Fasten it every few feet with wire clips or staples for best results. If an extension to the wire provided is needed, use the following table to determine the minimum wire gauge needed:

	15-30 m	>30 m
If the extension needed is: use:	1 mm	1.3 mm

24-Volt Solenoid Valves Only (No Booster Pump) — Figure 3 With the two wires from the Mini-Clik at the controller, locate the “common ground” wire of the solenoid valves. If it is connected to the common terminal on the controller, disconnect it. Attach one wire of the Mini-Clik to the “common” terminal (usually marked “C”) on the controller. Attach the other wire of the Mini-Clik to the common wire leading to the valves.

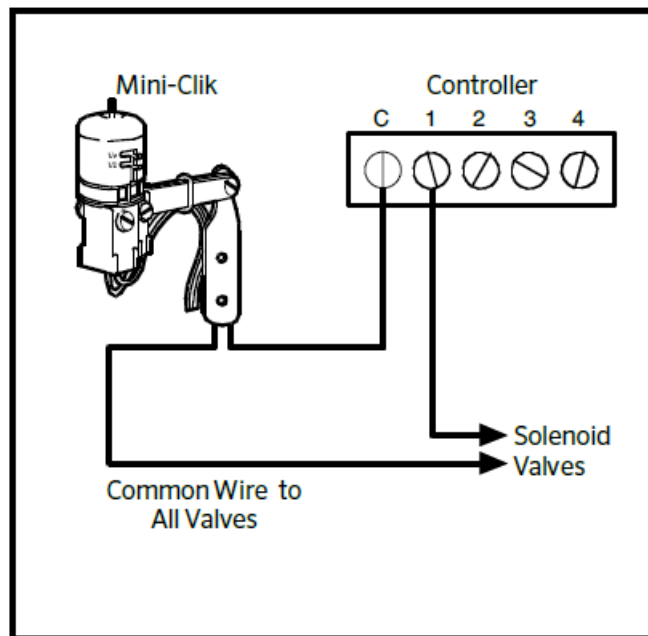


Figure 3

Note: The common wire to the valves does not have to be interrupted at the controller. The Mini-Clik can be wired anywhere along the common wire line (an example would be at the valve box location).

Wiring to Your Irrigation System

IMPORTANT: The standard model Mini-Clik is sold and designed for hooking up to 24-volt irrigation controllers only. For wiring to 110- or 220-volt irrigation controllers, consult your distributor or the factory. All wiring must conform to National Electrical Code or applicable local codes. For model Mini-Clik-C: **WARNING!** This unit is designed to be installed in conjunction with 24 VAC circuits only. Do not use with 110 or 220 VAC circuits.

Other Controllers

The two most common situations are described below. For non-standard wiring situations, consult your distributor or request our non-standard wiring information packet.

Operation Check to Verify Correct Wiring

Turn on one zone of the irrigation system that is visible while you are in reach of the Mini-Clik. Manually depress the spindle at the top of the Mini-Clik until you hear the switch “click” off. The sprinkler zone should stop instantaneously. If it does not, check wiring for correctness. It is not necessary to “wet” test the Mini-Clik, although it will test the operation accurately, if desired.

Adjustments and Operation

The Mini-Clik can keep the irrigation system from starting or continuing after rainfall quantities of 3 mm, 6 mm, 12 mm, and 19 mm. To adjust it to the desired shut-off quantity, rotate the cap on the switch housing so that the pins are located in the proper slots (Figure 4). Do not forcibly twist the cap, as this could break the pins. The time that it takes the Mini-Clik to reset for normal sprinkler operation after the rain has stopped is determined by weather conditions (e.g., wind, sunlight, humidity). These conditions will determine how fast the hygroscopic discs dry out. Since the turf is also experiencing the same conditions, their respective drying rates will roughly parallel each other. This means when the turf needs more water, the Mini-Clik is already reset to allow the sprinkler system to go at the next scheduled cycle. There is an adjustment capability on the Mini-Clik that will slow down the reset rate. By turning the “vent ring” (Figure 4) to completely or partially cover the ventilation holes, the hygroscopic discs will dry more slowly. This adjustment can compensate for an “overly sunny” installation location, or peculiar soil conditions. Experience will best determine the ideal vent setting.

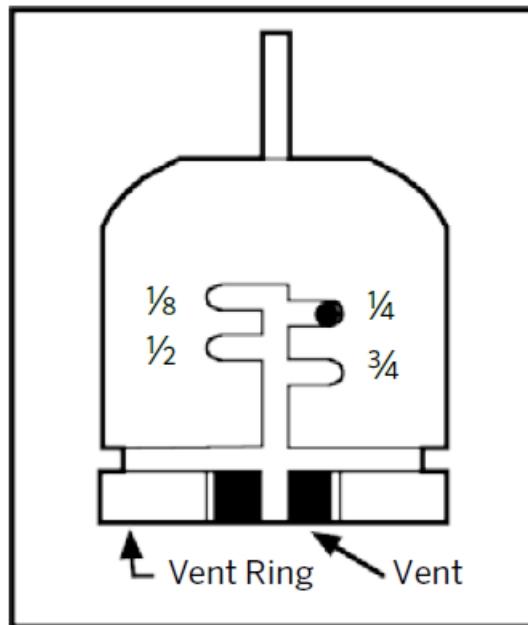


Figure 4

Bypassing the Sensor

On Hunter controllers, move the rain sensor switch to “Bypass.”

Note: Using the “manual” switch on non-Hunter controllers typically will not bypass the sensor.

Maintenance

There is no required maintenance for the unit. The Mini-Clik does not have to be removed or covered for winterising purposes.

Troubleshooting

Follow these simple checks first before assuming the unit is bad and replacing it. If the system will not come on at all

- **A.** First, check to see that the Mini-Clik discs are dry and the switch “clicks” on and off freely by pressing the top of the spindle.
- **B.** Next, look for breaks in the wire leading to the Mini-Clik and check all wire connections.
- **C.** Finally, if the Mini-Clik is dry and the wire leading to it is good, check the Mini-Clik switch by nicking the insulation of the two “outer” wires near the unit to expose copper. Turn one sprinkler zone on, and apply a “jumper wire” across the two exposed wires. If the sprinkler now comes on, the switch is bad. Wrap all nicked wires with electrical tape.

If the System Will Not Shut Off Even After Heavy Rainfall

- **A.** Check wiring for correctness (see “Operation Check to Verify Correct Wiring”).
- **B.** Check the sensitivity setting (move the cap to a more sensitive setting). The Mini-Clik is an accurate rain gauge and can be verified by setting up a tube-type rain gauge in the same vicinity and making periodic readings.

- **C.** Is the rainfall actually hitting the Mini-Clik? Check for obstructions to rainfall (e.g., overhangs, trees, or walls).


All Mini-Clik models are listed by Underwriters Laboratories Inc. (UL). Samples of these devices have been evaluated by UL and meet the applicable UL standards for safety.

Need help? Visit hunter.direct/miniclikhelp



© 2020 Hunter Industries Inc. Hunter, the Hunter logo, and all other trademarks are property of Hunter Industries, registered in the U.S. and other countries. | hunterindustries.com

Documents / Resources

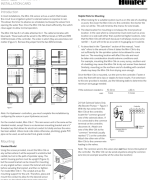	Hunter MINI-CLIKT Rain Sensor [pdf] Installation Guide MINI-CLIKT Rain Sensor, CLIKT Rain Sensor, Rain Sensor, Sensor
------------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------------------------------------------

References

- [📄 Hunter Irrigation Sprinkler Systems | Hunter Industries](#)