



kerlink Wirnet iZeptoCell LoRaWAN Gateway User Guide

[Home](#) » [Kerlink](#) » kerlink Wirnet iZeptoCell LoRaWAN Gateway User Guide 

kerlink
communication is everything
Quick Start Guide
Wirnet TM iZeptoCell Ethernet



Contents

- [1 Wirnet iZeptoCell LoRaWAN Gateway](#)
- [2 Contents](#)
- [3 Installation](#)
- [4 Setting Connections](#)
- [5 Commissioning](#)
- [6 Internet Connections](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)
- [8 Related Posts](#)



Online documents

<https://qrco.de/bcyF7A>







KLK003464_05

Kerlink internal use only



Gateway Identification Card

- Only use the product for its «normal condition of use» and with accessories or spare parts supplied by your reseller.
- The enclosure of the product must not be opened by customer
- Maintenance and repair must be carried out by qualified personnel authorized by the manufacturer

Contents


	x1 Wernet iZeptoCell
	x1 Ethernet cable
	x1 multi-blades power supply (North America, Europe, United Kingdom, Australia)
	x1 USB-A cable extender

Optional accessories:

	x1 PoE Splitter
	x1 USB-A to USB-C cable

Installation

Option 1: Wall Mounting with the oblong hole (4mm diameter screw (M4) with countersunk flat head to be inserted) or with the two non-threaded holes (2,5mm diameter, 6mm depth) for accessories mounting (plastic screws with 3mm outside thread and 2.1mm core thread are recommended).

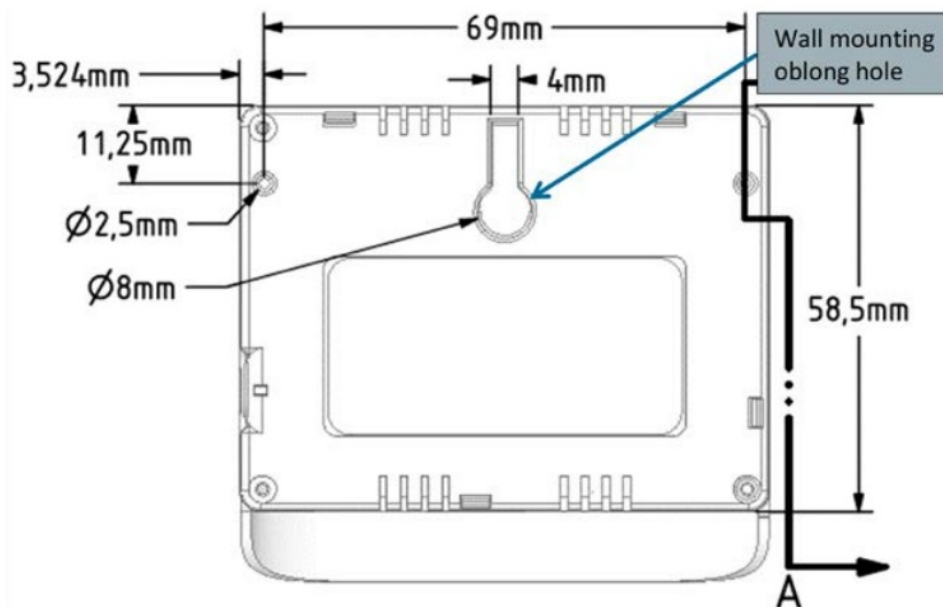

Option2: Double side tape Velcro stripes or double-sided adhesives foams (two parts of 25mm x 17mm are recommended on both side).



Upon specific configuration, the product can be used as a Helium-network compatible hotspot to mine HNT. It need to be clearly mentioned once ordered as it use a cryptographic private key and a dedicated software.

For Helium onboarding, please follow the below QR code to access Kerlink public wiki with the onboarding procedure and troubleshooting information.




You'll have to use the «Gateway Identification Card» and notably the pin code during Helium onboarding.




Wiki Kerlink Helium

<https://qrco.de/bcwU4z>

Setting Connections

Options	Comments
	Power supply via the multi-blade adapter + Ethernet link through Ethernet cable
	Power supply via USB cable + Ethernet link through Ethernet cable
	Power supply and Ethernet link through PoE splitter

Cables installation recommendation to optimize performance

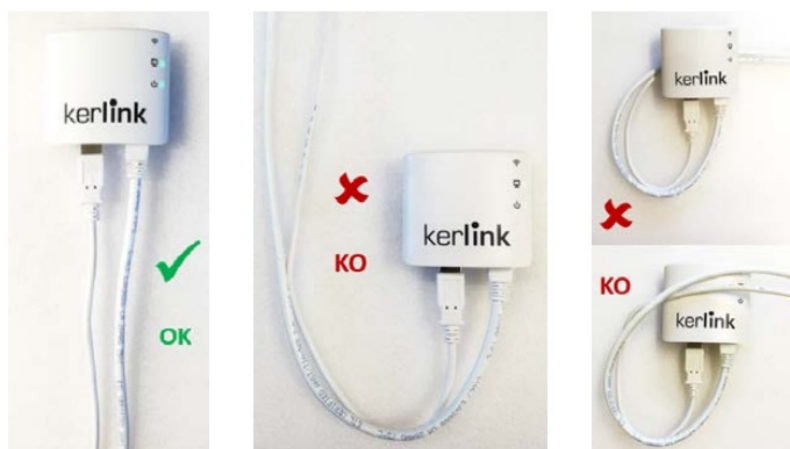

Commissioning

To ensure the Wirnet iZeptoCell is started up, check the behavior of the LED indicators:

LED	Specification
LoRa® RF activity (Uplink, Downlink)	<ul style="list-style-type: none"> • Boot → Red Fix ON • LoRa Data Reception (Uplink) → Green Blink • LoRa Data Emission (Downlink) → Red Blink
Backhaul status	<ul style="list-style-type: none"> • Backhaul is disconnected → Red Fix ON • Backhaul connection → Green Blink • Backhaul is connected → Green Fix ON
Gateway status	<ul style="list-style-type: none"> • Boot → Red Blink • Normal mode → Green Fix ON • Software Halt (Power down sequence) → Red Blink • Software Update → Red Blink

Indicative timings:

- SW reset takes around 1min 30s
- Boot takes around 1min 20s,
- Backhaul connection takes around 10s,



Reset button


Short press the “Reset” button (<5s) to generate a software reset of the product. See LEDs behaviors in the dedicated LEDs table.

Long press the “Reset” button (>5s) to halt the software of the gateway during 2mn. All LEDs are switched off in this state. This action is preconized before removing power supply to avoid any risk to alter memory. The gateway is then reset after 2mn (back to normal functioning).

Internet Connections


Per default, once the Ethernet cable is plugged, the gateway connects to internet.

You can access to a local web interface to perform some actions (Ethernet configuration, Software update, gateway configuration, password modification...).

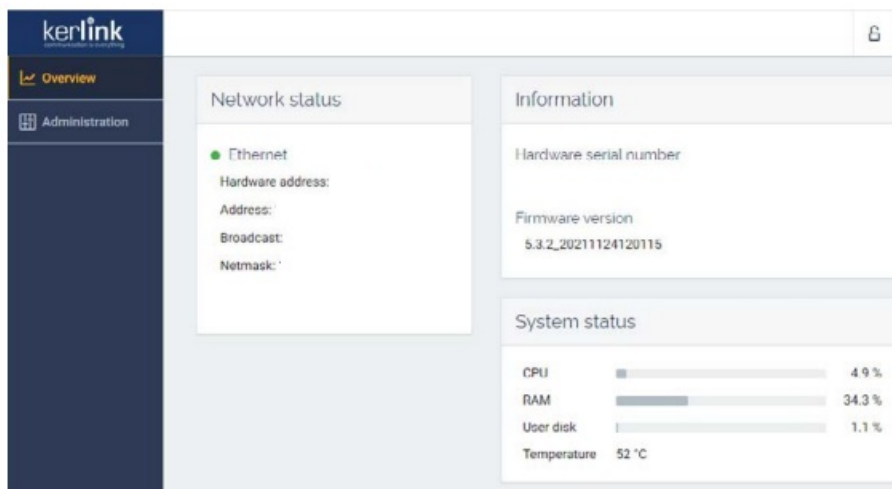

The generic syntax for web interface is `http://klk-zeth-<serial>/`
Serial is the last digits of the gateway EUI (available on the gateway Identification Card)
(ex: if gateway EUI is 7076FFyyzz040001 : `http://klk-zeth-040001/`)
Default public credentials (must be changed for security reasons):
Login : admin
Password: pwd4admin

Documents / Resources



[kerlink Wirnet iZeptoCell LoRaWAN Gateway](#) [pdf] User Guide
Wirnet iZeptoCell LoRaWAN Gateway, iZeptoCell LoRaWAN Gateway, LoRaWAN Gateway, Gateway

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.