



LATCH Building Intercom System Installation Guide

[Home](#) » [LATCH](#) » LATCH Building Intercom System Installation Guide 

Contents

1 Intercom

1.1 Installation Guide

1.2 Things you should know

1.2.1 Included in the Box

1.2.2 Not Included in the Box

1.3 Product Details

1.3.1 Product Details

1.3.2 Minimum wiring recommendations

1.3.3 Wiring

1.3.4 Detail View of Cable

1.3.5 Product Details

1.3.6 Specifications

1.4 Installation

1.4.1 Important Handling Information

1.4.2 Regulatory Compliance

1.4.3 Requirements for Compliance with UL 294 7th Edition

2 Documents / Resources

3 Related Posts

Intercom

Installation Guide

LATCH[®]

Document number 770-00012 V1.2

Revised on 11/30/2021

**Things you
should know**

- Latch Intercom requires a Latch R in order to operate and can only be paired with one R.
- Intercom installation should occur before Latch R installation.
- Only use screws provided. Other screws can cause Latch Intercom to disengage from the mounting plate.
- Configuration requires the iOS Manager App running on an iPhone 5S or newer.
- More resources, including the electronic version of this guide, can be found online at support.latch.com

Included in the Box

Mounting Hardware

- Pan-head screws
- Anchors
- Gel-filled crimps
- Cable sealing components
- RJ45 male connector

Product

- Latch Intercom
- Mounting plate

Not Included in the Box

Mounting Tools

- #2 Phillips head screwdriver
- TR20 Torx security screwdriver
- 1.5" drill bit for cable routing hole

Requirements for Device


- 64 bit iOS device
- Latest version of the Latch Manager App

Product Details

Details and recommendations for power, wiring, and product specifications.

Product Details

Direct Power

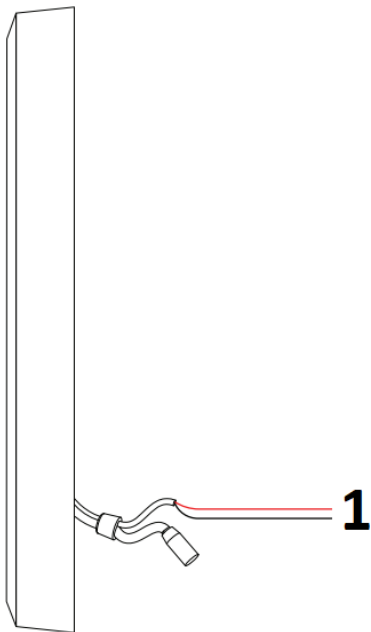

1. 12VDC – 24VDC

50 Watts Supply*

*Class 2 Isolated, UL Listed DC Power Supply

Minimum wiring recommendations


Distance		< 25ft	< 50ft	< 100ft	< 200ft	Draw
Power	12V	22 AWG	18 AWG	16 AWG	–	4A
	24V*	24 AWG	22 AWG	18 AWG	16 AWG	2A

Choice of Ethernet, Wi-Fi, and/or LTE connection is required.

***24V always preferred over 12V when possible.**

Wiring

PoE

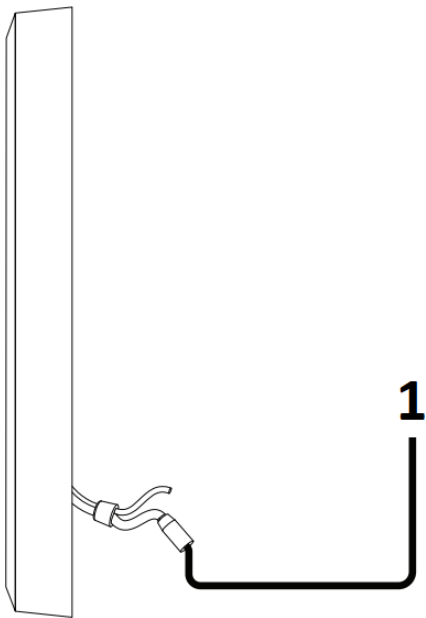

1. PoE++ 802.3bt 50 Watts Supply

Minimum wiring recommendations

PoE Source	PoE++ (50W per port)				
Distance	328ft (100m)				
CAT Type	5e	6	6a	7	8
Shield	Shielded				
AWG	10 – 24 AWG				
PoE Type	PoE++				


Note: PoE and direct power should never be used concurrently. If both are plugged in, ensure that PoE power is disabled on the PoE switch for the Intercom PoE port.


Ethernet cable recommended to meet CMP or CMR rating.

Choice of additional Wi-Fi and/or LTE connection is optional.


Minimum network speed must be at least 2Mbps as tested by a network testing device.

Detail View of Cable

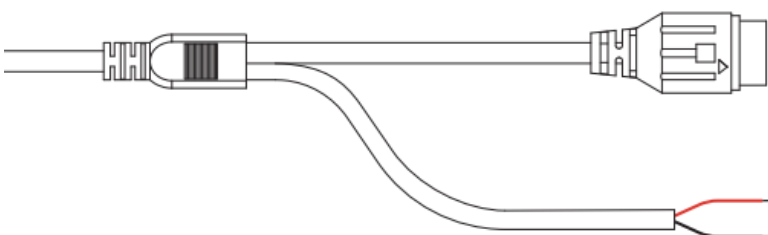

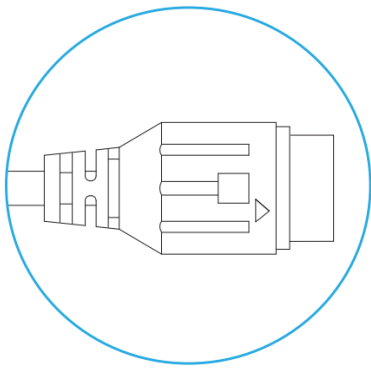


RJ45 Female Type Connector

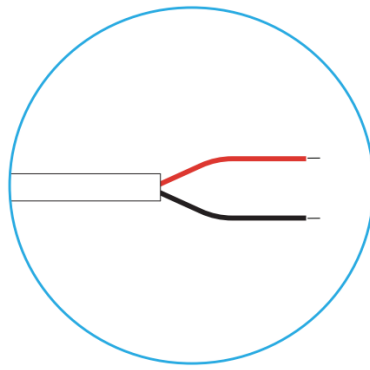

Direct Power Connection


Product Details

Mounting Plate

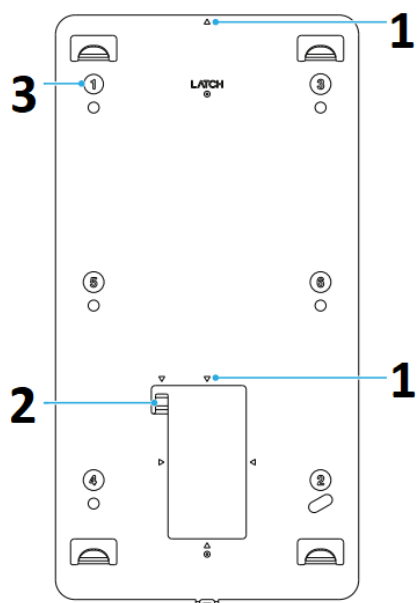

1. Centerline Mark
2. Support Cable Hook
3. Procedural Numbers

Note: Refer to ADA Guidelines on mounting height.

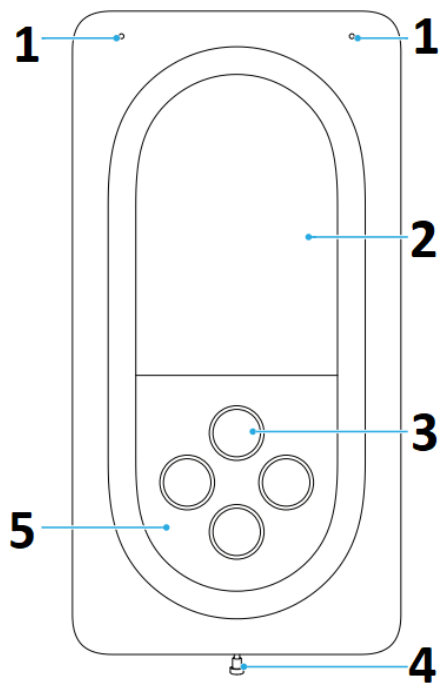

1. Microphone
2. Display
3. Navigational Buttons
4. Security Screw
5. Speaker Mesh

Specifications

Dimensions

- 12.82in (32.6cm) x 6.53in (16.6 cm) x 1.38in (3.5cm)

Network

- Ethernet: 10/100/1000
- Bluetooth: BLE 4.2 (iOS and Android compatible)
- Wi-Fi: 2.4Ghz/5Ghz 802.11 a/b/g/n/ac
- Cellular LTE Cat 1
- DHCP or Static IP

Power

- Class 2 Isolated, UL Listed Power Supply
- 2 Wire Supply Voltage: 12VDC to 24VDC
- Power over Ethernet: 802.3bt (50W+)
- Operating Power: 20W-50W (4A @12VDC, 2A @24VDC)
- For UL 294 installations, the power source must be compliant to one of the following standards: UL 294, UL 603, UL 864, or UL 1481. When powered via PoE, the PoE source must be either UL 294B or UL 294 Ed.7 compliant. For ULC 60839-11-1 installation, the power source must be compliant to one of the following

standards: ULC S304 or ULC S318.

- DC input evaluated for UL294: 12V DC 24V DC

Warranty

- 2-year limited warranty on electronic and mechanical components

Accessibility

- Supports audio instructions and navigation
- Tactile buttons
- Supports TTY/RTT
- Voiceover

Audio

- 90dB output (0.5m, 1kHz)
- Dual microphone
- Echo cancellation and noise reduction

Display

- Brightness: 1000 nits
- Viewing angle: 176 degrees
- 7-inch diagonal Corning® Gorilla® Glass 3 screen
- Anti-reflective and anti-fingerprint coating

Environmental

- Materials: stainless steel, glass fiber reinforced resin, and impact resistant glass
- Temperature: Operating/Storage -22°F to 140°F (-30°C to 60°C)
- Operating Humidity: 93% at 89.6°F (32°C), non-condensing
- IP65 dust and water resistance
- IK07 impact resistance
- Suitable for indoor and outdoor installations

Compliance

US

- FCC Part 15B / 15C / 15E / 24 / 27
- UL 294
- UL 62368-1

Canada


- IC RSS-247 / 133 / 139 / 130
- ICES-003
- ULC 60839-11-1 Grade 1
- CSA 62368-1

PTCRB


Installation

Follow these steps to proceed with installation.

1.

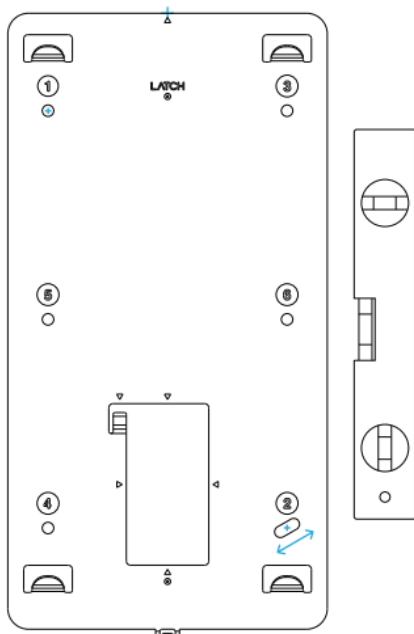


Align the center mark on the mounting plate and center on wall. Level and mark holes 1 and 2. Drill, anchor, and screw in place.

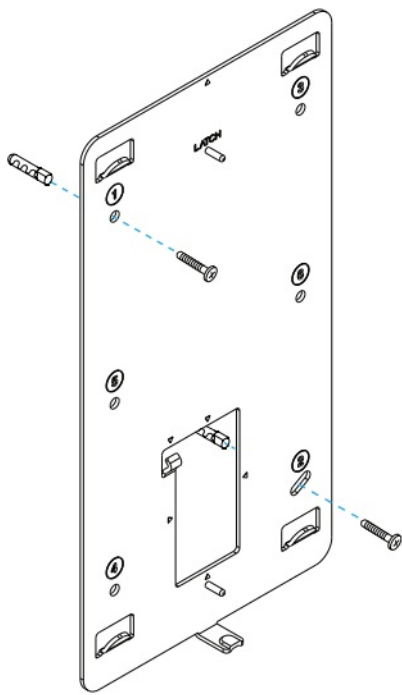


Note: Hole 2 is slotted for adjustments.

2.

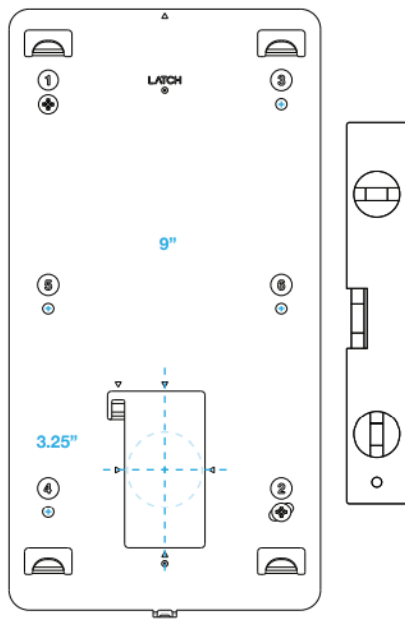


Find the center of the 1.5 inch cable bore hole using marks as a guide. Temporarily remove the mounting plate and drill a 1.5 inch hole.

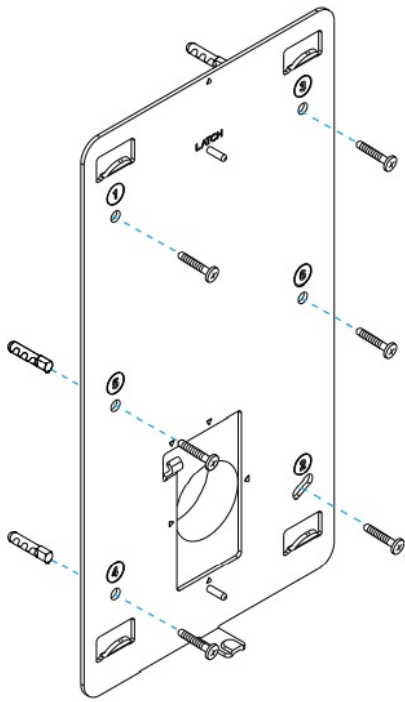


Drill and set anchors for remaining holes 3-6. Reinstall the mounting plate.

3.

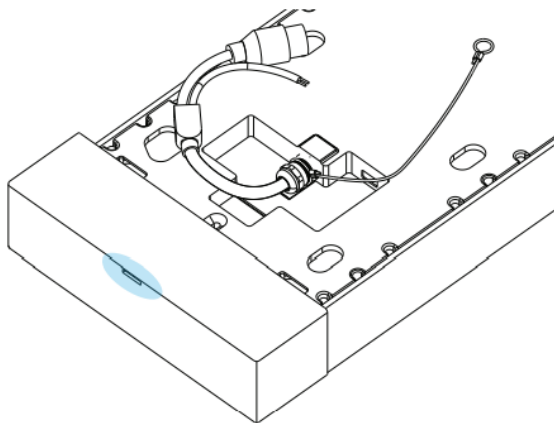


Important: Keep the protective bumpers on.
Using the support cable, hook the Intercom to the mounting plate for easier wiring.

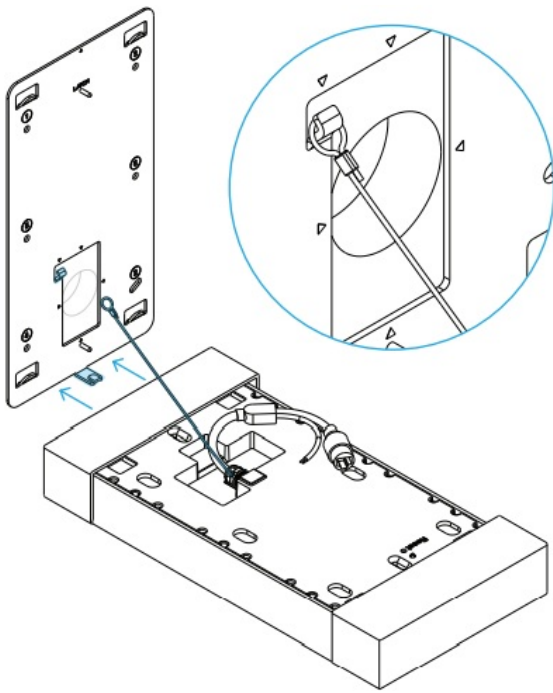


Align pocket in the bumper with the lower mounting plate tab. Place the loop of support cable over hook.

4a.

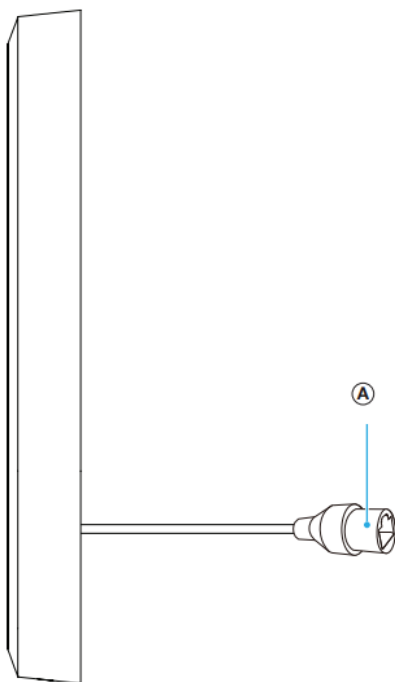

(A) Female RJ45

You may use an Ethernet cable to provide both power and internet to the device. Or you may utilize the direct power wires alongside onboard Wi-Fi or cellular.

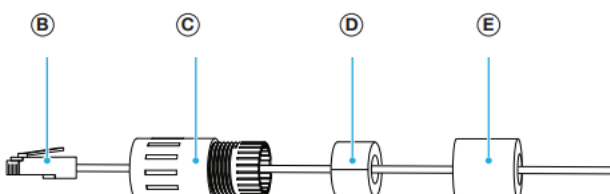

- (B) Male RJ45
- (C) Connector Seal
- (D) Split Gland
- (E) Cable Seal


Step 1: Feed B through C and E

Step 2: Plug B into A

Step 3: Connect A to C by twisting. Add D behind C

Step 4: Screw E into C


4b.

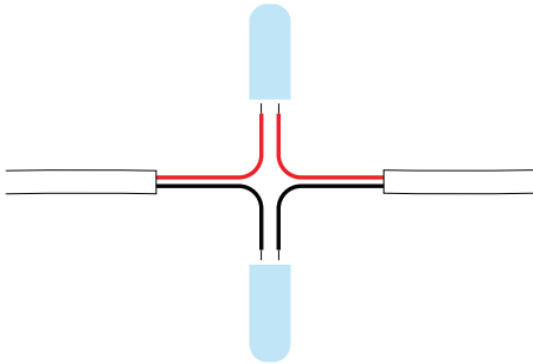


If you're not utilizing PoE, use crimps to connect to direct power.

Important: Ensure cables are dry and free of moisture before connecting.

5.

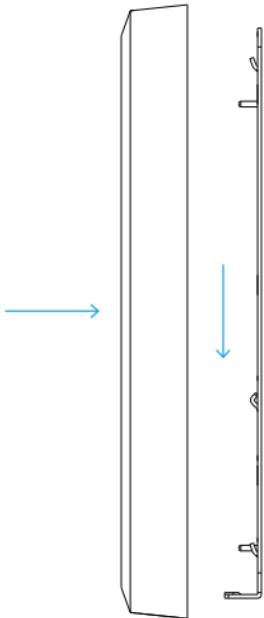

Unhook the support cable, remove bumpers, and feed all wires and cables through the wall. Use the center alignment pins to locate the product. Place the Latch Intercom flush with the mounting plate and slide down until all mounting tabs fit snugly.

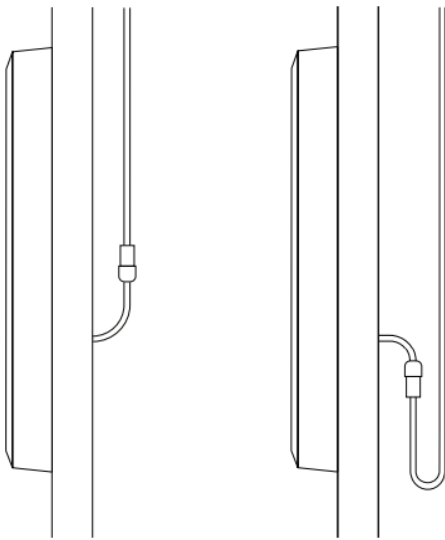


Incorrect

Correct

Note: We recommend forming a drip loop of cables to help avoid moisture condensation on connections or device.

6.

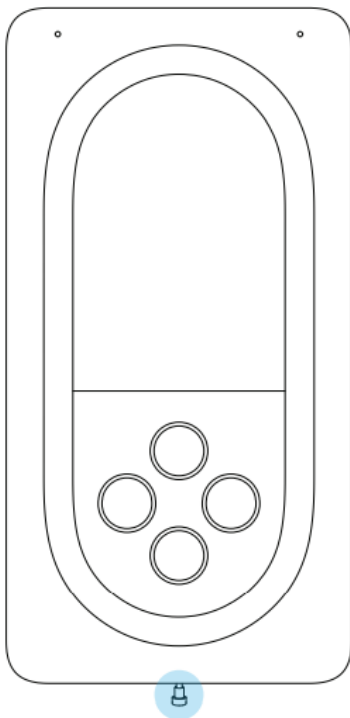

Lock into place with the TR20 security screw.

7.



Download the Latch Manager App and configure.

Important Handling Information

Operating Environment

Device performance may be affected if operated outside these ranges:

Operating and Storage Temperature: -22°F to 140°F (-30°C to 60°C)

Relative Humidity: 0% to 93% (non-condensing)

Cleaning

Although the device is water resistant, do not apply water or liquid directly to the device. Dampen a soft cloth to wipe the exterior of the device. Do not use solvents or abrasives that might damage or discolor the device.

Cleaning the screen: Although the device is water resistant, do not apply water or liquid directly to the screen. Dampen a clean, soft, microfiber cloth with water and then wipe the screen gently.

Cleaning the speaker mesh: To clean out debris from the speaker mesh perforations, use a can of compressed air held 3" from the surface. For particles that are not removed by compressed air, painters tape can be used on the surface to pull out debris.

Water Resistance

Although the device is water resistant, do not apply water or liquid to the device, especially from a pressure washer or hose.

Magnetic Fields

The device may induce magnetic fields near the surface of the device strong enough to affect objects such as credit cards and storage media.

Regulatory Compliance

Federal Communications Commission (FCC) Compliance Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Operations in the 5.15-5.25GHz band are restricted to indoor usage only.

This device meets all the other requirements specified in Part 15E, Section 15.407 of the FCC Rules.

Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 20cm between the radiator & your body.

Industry Canada (IC) Compliance Statement

This device complies with ISSED's licence-exempt RSSs. Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device for operation in the band 5150-5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems.

Radiation Exposure Statement

This equipment complies with ISSED radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with greater than 20cm between the radiator & your body.

Requirements for Compliance with UL 294 7th Edition

This section contains information and instructions required for UL compliance. To make sure the installation is UL compliant, follow the instructions below in addition to the general information and instructions provided throughout this document. In cases where pieces of information contradict each other, the requirements for UL compliance always replace general information and instructions.

Safety Instructions

- This product shall be installed and serviced by certified professionals only
- Locations and wiring methods shall be in accordance with the National Electrical Code, ANSI/NFPA 70
- For PoE connections, Installation must be done in accordance with NFPA 70: Article 725.121, Power Sources for Class 2 and Class 3 Circuits

- There are no replacement parts available for this product
- Outdoor electrical boxes used for mounting are recommended to be NEMA 3 or better
- Correct wiring insulation should be used during installation to prevent the risk of electrical shock

Testing and Maintenance Operation

Prior to installation, ensure that all wiring is secure. Each unit should be checked annually for:

- Loose wiring & loose screws
- Normal operation (attempt to call tenant using interface)

Impaired Operation

Units are designed to operate under adverse environmental conditions.

Under normal circumstances, they will function properly regardless of outside conditions. However, units do not have secondary power sources and cannot function without direct continuous power. If a unit is damaged by natural causes or deliberate vandalism, it may not function properly depending on the level of damage.

Configuration & Commissioning Instructions

Configuration & Commissioning instructions can be found in more detail in the Technical Certification Training as well as on the support website at support.latch.com.

Service Information

Service Information can be found in more detail in the Technical Certification Training as well as on the support website at support.latch.com.

Applicable Products

This installation guide applies to products with the following designators on the label:

- Model: INT1LFCNA1

Troubleshooting

If the Intercom does not operate:

- Ensure the intercom is powered with DC power. Do not use AC power.
- Ensure the input voltage if using 2 wire is between 12 and 24 volts DC with 50W+
- Ensure the input PoE Type if using PoE is 802.3bt 50W+
- Further troubleshooting information is available on the support website at support.latch.com

Software Information

- The Latch Manager app is necessary to configure the Latch Intercom
- Further configuration information can be found on the support website at support.latch.com
- Latch Intercom has been tested for UL294 compliance employing firmware version INT1.3.9
- The current firmware version can be checked by using the Latch Manager app

Normal Product Operation

Condition	Indication/Use
Normal standby	LCD is displaying idle image
Access granted	Access screen displayed on LCD
Access denied	Failure screen displayed on LCD
Keypad operation	4 tactile buttons can be used to navigate the LCD display
Reset switch	Reset switch can be found on the back of the device to reboot the system
Tamper switches	Tamper switches can be found on the back of the device to detect removal from mounting position and removal of the back cover

UL 294 Access Control Performance Ratings:

Feature Level Destructive Attack	Level 1
Line Security	Level 1
Endurance	Level 1
Standby Power	Level 1
Single Point Locking Device with Key Locks	Level 1

Intercom Installation Guide

Version 1.2

LATCH

Documents / Resources

<p>Intercom Installation Guide</p> <p>LATCH</p>	<p>LATCH Building Intercom System [pdf] Installation Guide Building Intercom System, Intercom System, System</p>
--	--

