

LUXUL
XWC-1000
Wireless
Controller



Luxul XWC-1000 Wireless Controller User Manual

[Home](#) » [LUXUL](#) » Luxul XWC-1000 Wireless Controller User Manual 

Contents

- [1 Luxul XWC-1000 Wireless Controller User Manual](#)
- [2 Package Contents](#)
- [3 BEFORE YOU BEGIN INSTALLATION](#)
- [4 Physical Installation \(cont\)](#)
- [5 Preparing for Access](#)
- [6 Getting Connected](#)
- [7 Hardware Operation](#)
- [8 References](#)



Luxul XWC-1000 Wireless Controller User Manual




Package Contents

- XWC-1000 Wireless Controller
- Rack Mount Kit
- Power Cord

BEFORE YOU BEGIN INSTALLATION

- Access Point Firmware: Be sure that the firmware of any APs you intend to manage with the Wireless Controller is v5 or newer. Visit the AP Firmware upgrade page at luxul.com/ap-upgrade for details.
- Controller Setup Sequence: Once you configure the XWC-1000 Wireless Controller, the Controller will automatically configure and manage all compatible APs on the same subnet.
- APs can be added or removed at any time, however. A DHCP server is required on the network.
- Firmware Updates: The XWC-1000 Wireless Controller automatically checks for firmware updates of Controller-compatible APs and the Wireless
- The controller itself requires Internet access to do so. The Wireless
- The controller will still operate without Internet access, but firmware updates will not be available.


Physical Installation

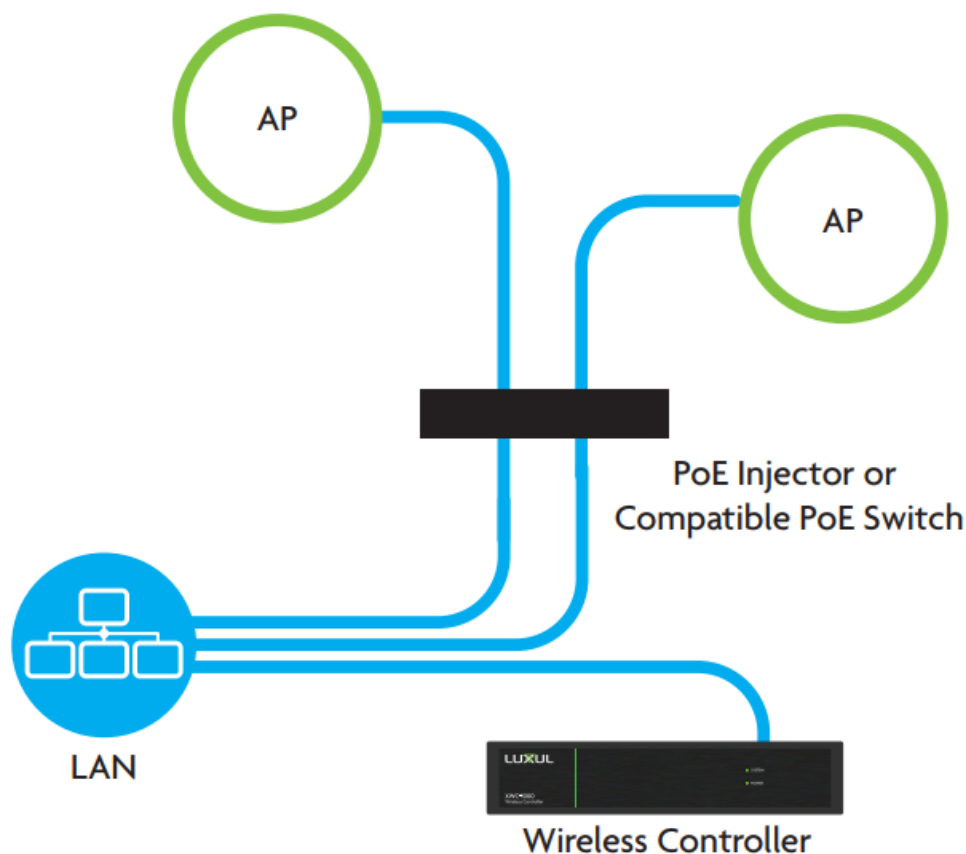

Connecting Devices: The XWC-1000 Wireless Controller simply connects to the network along with any compatible Access Points.

Access Point Placement: Place APs to ensure adequate coverage, but not so far apart that there is no signal overlap. You may have to experiment with AP placement to optimize the roaming experience.

The APs should overlap enough that the client device has a good connection to the AP to which it is currently attached, but also sees the next-nearest AP.

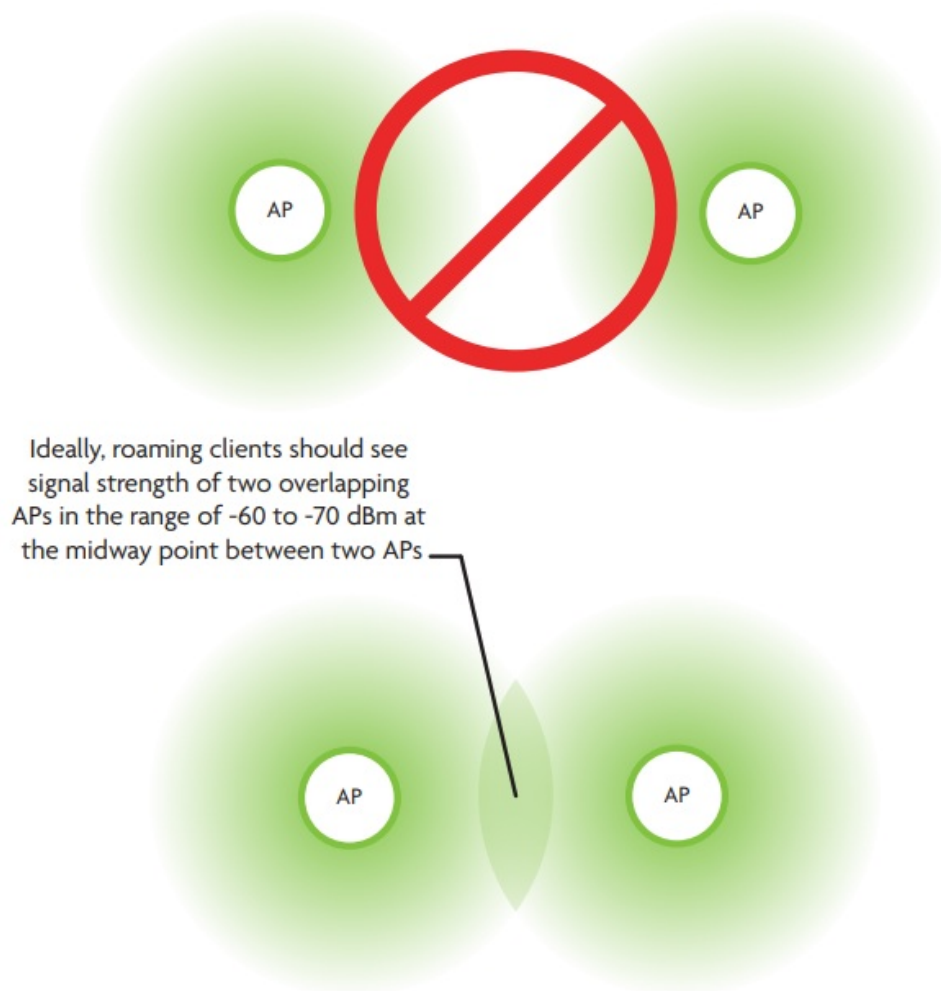

Note: Visit luxul.com/ap-placement for details on how to select and optimize AP placement.

Note: Consider using Ekahau HeatMapper to assist with this process, available from www.ekahau.com. Luxul also offers an informative “How-To” video on HeatMapper at luxul.com/how-to-videos.

Physical Installation (cont)

Connect Ethernet and Power

- Use an Ethernet cable to plug the XWC-1000 Wireless Controller into the network, then connect the Wireless Controller power cable.
- Connect any APs to the network (or ensure they're connected).

Preparing for Access

IP Addressing

If the XWC-1000 is connected to a network with a 192.168.0.X address scheme, and your computer shares a similar address on the same network, you can skip to the next step, Access and Setup.

Note: Be sure a DHCP server is present on the network and that all Luxul APs and the XWC-1000 Wireless Controller will share the same subnet.

Note: If your network uses a 192.168.0.X IP address scheme, you are ready to start the setup process.

If not, you will need to manually change the IP address of your computer to be able to configure the XWC-1000 Wireless Controller so that it is on the same subnet as your network. For help setting the IP address of your particular operating system, visit luxul.com/ip-addressing.

Getting Connected

Access the Setup Wizard by opening your web browser and entering the Wireless Controller's default 192.168.0.19 IP address in the address field. Log in to the Wireless Controller using the default user name and password:

- Default IP: 192.168.0.19
- Username: admin
- Password: admin

Caution

If there is another device on the network already using the 192.168.0.19 address, you'll need to either temporarily disconnect or reconfigure that other device, or manually configure the Wireless Controller with a different address on a separate isolated network.

Wireless Controller Configuration

Follow the built-in Setup Wizard in the Wireless Controller. The Wizard will walk you through creating a configuration profile, then it will automatically configure and manage all available APs on the same network. You may add or remove APs to or from the managed profile at any time. **Smart Tip:** For more information on setup and configuration best practices visit luxul.com/smart-tips.

Hardware Operation

Selecting front-panel LED color

Use the switch on the rear panel of the XWC-1000 Wireless Controller to switch the Power and System LEDs on the front panel between green and blue to best match the equipment in the rack where the Wireless controller is sharing space.

Resetting the Controller

- **Reset/Reboot:** Use a paper clip to briefly press and release the Reset button on the rear panel of the Controller to force it to reboot.
- The front panel LEDs will go dark once the button is released, and then the System LED will blink slowly while the controller reboots.
- **Restore Factory Defaults:** To restore the controller to Factory Default configuration, press and hold the Reset button for at least 5 seconds. The
- The system LED will blink quickly to indicate that the Controller is returning to Factory Default configuration, go dark for a few seconds, and then blink slowly while the controller boots.
- **Normal Operation:** When the controller is operating normally, the System LED will blink like a heartbeat, i.e. blink-blink-dark.

Sales

P: [801-822-5450](tel:801-822-5450)

E: sales@luxul.com

Technical Support

P: [801-822-5450](tel:801-822-5450) Option 3

E: support@luxul.com

Copyright and Trademark Notices

No part of this document may be modified or adapted in any way, for any purpose without permission in writing from Luxul. The material in this document is subject to change without notice. Luxul reserves the right to make changes to any product to improve reliability, function, or design. No license is granted, either expressly or by

implication or otherwise under any Luxul intellectual property rights. An implied license only exists for equipment, circuits, and subsystems contained in this or any Luxul product. © Copyright 2016 Luxul. All rights reserved. The name Luxul, the Luxul logo, the Luxul logo mark and Simply Connected are all trademarks and or registered trademarks of Luxul Wireless, Inc. All other trademarks and registered trademarks are the property of their respective holders.

Download PDF: [Luxul XWC-1000 Wireless Controller User Manual](#)

References

- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.