


Operating Instructions

LightPen3 Software

LightPen3

Windows / Mac OS

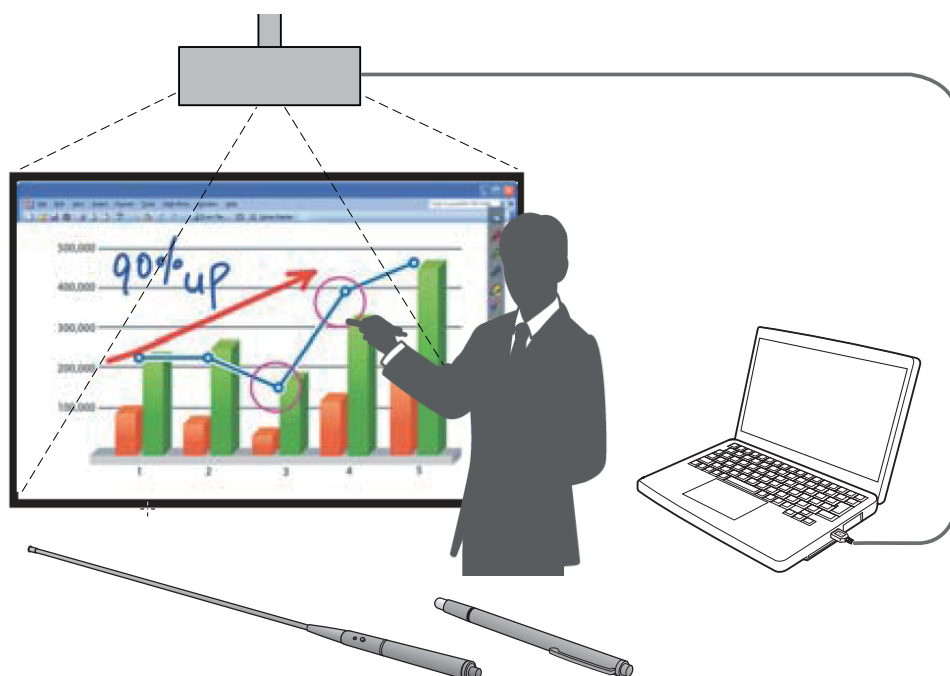

Thank you for purchasing this Panasonic Product.

- This manual is intended for corresponding the following projectors:
PT-TW341R / PT-TW343R / PT-TW351R / PT-TW371R / PT-TW381R
- Before operating this product, please read these instructions carefully.

Contents

Introduction	3
For Windows	4
System requirements	4
Installation of the Driver and Software	4
Interactive functions initial settings	5
How to use the Interactive functions	8
How to use the PowerPoint® Tool	14
To exit the Software and Driver	16
About SPDriver6	16
To uninstall the Software and Driver	16
For Mac OS	17
System requirements	17
Installation of the Driver and Software	17
Interactive function initial settings	18
How to use the Interactive function	20
To exit the Software and Driver	24
About SP6 Driver	25
To uninstall the Software and Driver	25
Troubleshooting	26
Trademarks	28

Note

The illustrations and screenshots in this manual may be different from those on your computer. In addition, the specification of this software is subject to change without notice.

- The icons and explanations in this manual are based on an example of "SPDriver6", but "SPDriver9" may be supported depending on your projector.

Driver file name		SPDriver6	SPDriver9
Driver icon	USB connected		
	USB disconnected		

Page references

- In these instructions, references to pages are indicated as: (➡page 00).

Term


- In these instructions, the "Interactive Pen" and the "Interactive Pointer" accessories are referred to as the "Pen" and "Pointer".

Introduction

These instructions are for "LightPen3" Software of the Interactive function.

■ Features

This software enables you to write or draw on the projection screen under circumstances such as schools, educational events or meetings with the Interactive Pen or the Interactive Pointer.

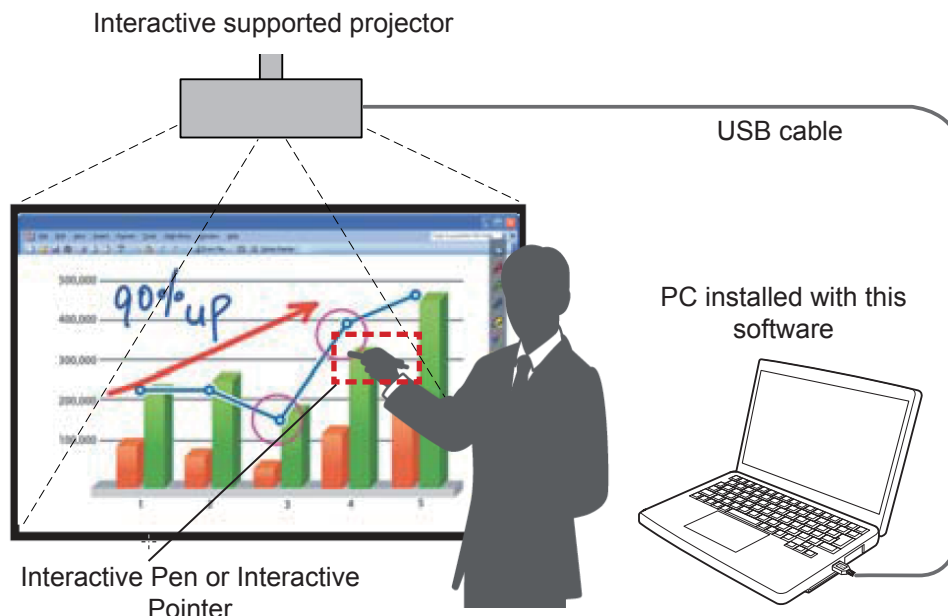

● Mouse function

- You can use the Pen or the Pointer as a PC mouse on the projection screen.

● Pen function

- You can use the Pen or the Pointer to draw directly on the projection screen and save it in the PC.

● Dual Pen function (For Windows only)

- When 2 Pens or 2 Pointers are in use together, you can draw on the projection screens.

● PowerPoint® Tool bar function (For Windows only)

- During the PowerPoint slide show mode, you can use the Pen or the Pointer to draw directly on the projection screen and save it in the PC.

■ Software / SP Driver in the CD-ROM or from the website

Relating to the LightPen3 software in the CD-ROM supplied with the projector, the following are also included besides these instructions.

	SP6 Driver	SP9 Driver	LightPen3 Software
For Windows	×	×	○
For Mac OS	○	○	○

The LightPen3 software and SP Driver are also available from the website (<https://docs.connect.panasonic.com/projector/download/application>).

For Windows

System requirements

In order for the SPDriver6 and the LightPen3 software to work properly, the computer system must meet the following requirements.

OS	Windows 8.1 32/64 bit Windows 10 32/64 bit
CPU	Intel Core 2 Duo 2.0 GHz or more (dedicated GPU is recommended)
Memory	2 GB or more
Free space on the hard disk	100 MB or more

Note


- Please notice that it is not guaranteed of the proper operations for system requirements other than the above mentioned requirements or for the self-made computers.
- If the USB port monitor software is working, other softwares may not work properly. In this case, please exit the monitor software before using other softwares.
- It is recommended to set the output resolution from the computer to the same as the panel resolution of the projector.
- Download the latest versions of "LightPen3" software from the following URL.
<https://docs.connect.panasonic.com/projector>
- The LightPen3 software may not work properly for some computers.

Even all the requirements are met, there is not guaranteed operations for all computers.

Installation of the Driver and Software

Note

- When you connect the computer to the projector via a USB cable, the "SPDriver6" folder is displayed automatically. Double-click the "Setup_SPDriver6.exe" and install it by following the installation instructions on the screen.
Auto play screen display may be displayed depending on the settings of the computer. In this case, please select "Open folder to view files" and double-click the "Setup_SPDriver6.exe."

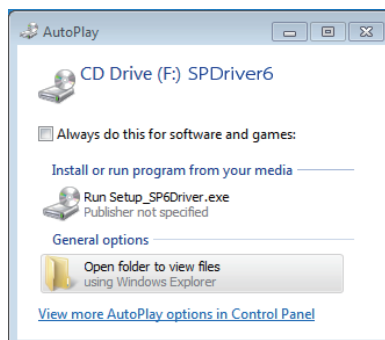

Screen display example


■ Software in the CD-ROM

1) Insert the software recorded CD-ROM into the CD drive.

- The application launcher will launch automatically when the supplied CD-ROM is inserted into the CD drive. If the application launcher does not launch, double-click "Launcher.exe" in the CD-ROM.
- When the auto play screen is displayed, select the relevant option to run "Launcher.exe".

2) Click "Install LightPen3".

- Setup image displays.

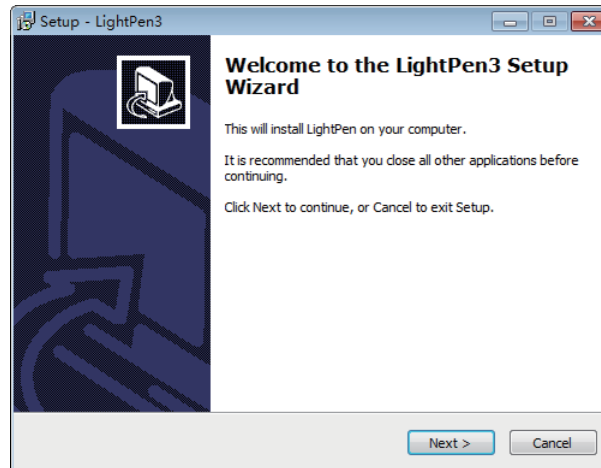

3) Follow the on-screen instructions to install.

- A shortcut icon will be created on the desktop when installation finished.




■ Software from the website

1) Visit the website.

(<https://docs.connect.panasonic.com/projector/download/application>)

2) Download and decompress the software package and double click "Setup.exe".

- Setup image displays.

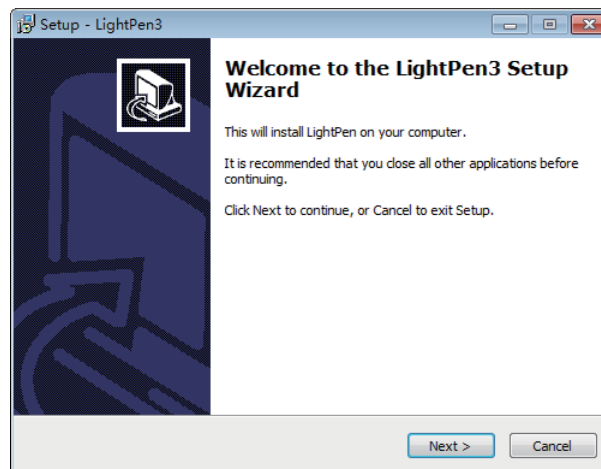

3) Follow the on-screen instructions to install.

- A shortcut icon will be created on the desktop when installation finished.



Interactive functions initial settings


First, carry out the calibration for the projector sensor to accurately recognize the position of the projected screen.

■ Start the Software

1) Connect the computer to the projector via a USB cable.


- The SPdriver6 icon in the taskbar becomes from red to green.

For Windows (continued)

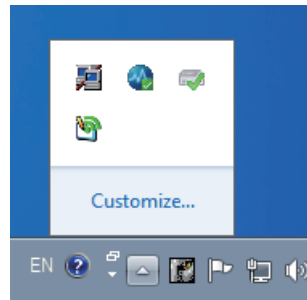

2) Double click the shortcut icon of "LightPen3" on the desktop.


- A tool bar appears on the right of the screen.

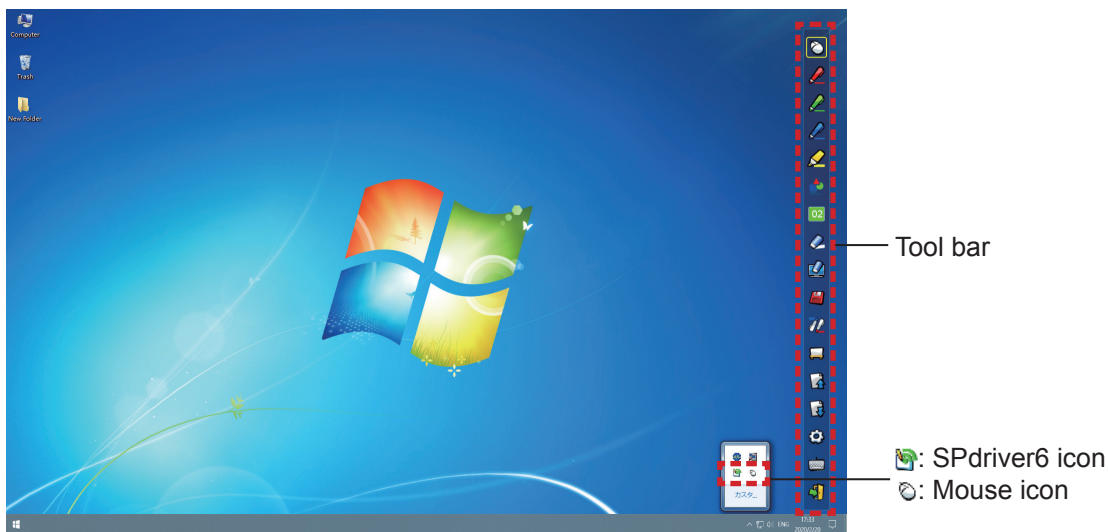

■ Perform the Calibration of the camera

3) Click the SPdriver6 icon on the taskbar and select "Auto" from the pop-up "Calibration".

- Display the auto calibration screen and perform the auto adjustment. During the adjustment, do not block the projection image with any object or figure.

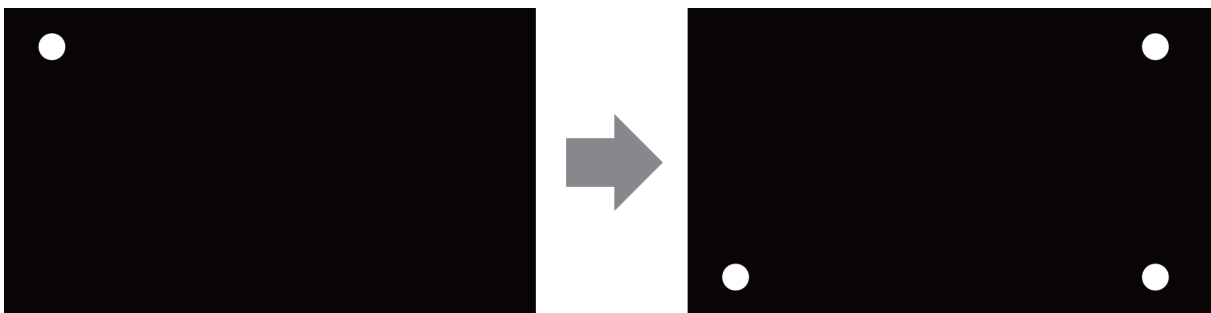


- If the auto calibration fails, the error message will appear. Please perform the auto calibration again.
- Before performing the auto calibration again, please check the following situations.
 1. Turn off the lights to darken the surroundings and reduce the reflection of external light to the projection screen.
 2. Readjust the focus again.
- If the auto calibration fails again, please perform the manual calibration.

Note

- When using the SPdriver9, click the SPdriver9 icon on the taskbar and select "Automatic correction" from the pop-up menu.

- 4) Click the SPdriver6 icon on the taskbar and select "Manual" from the pop-up "Calibration" to display the manual calibration screen.

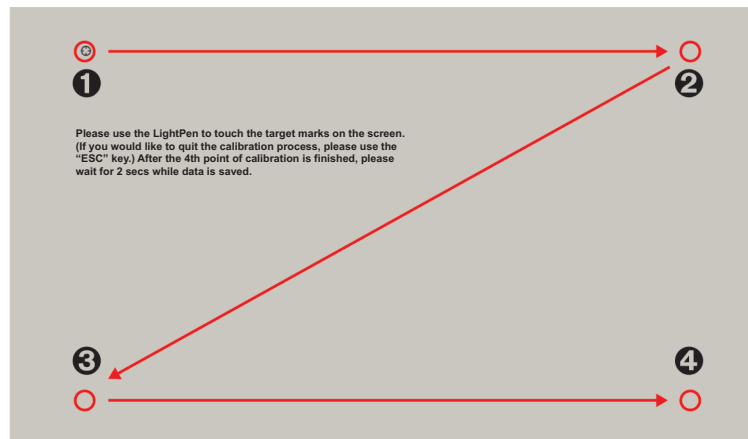

- 5) Press the target mark ① in the screen with the Pen.

- Each time you press the target mark, the moving order is ① → ② → ③ → ④.

- 6) Press the target mark ② → ③ → ④.

- The "Please wait..." message appears, and after completing the process the message will disappear.

Attention

- When carrying out the "Auto", make sure to project image onto a smooth screen.


Note

- When the position of the screen and the projector is fixed, there is no need for calibration again next time if you use the same computer at the same resolution.
- When using the SPdriver9, click the SPdriver9 icon on the taskbar and select "Calibration" from the pop-up menu to display the manual calibration screen.

For Windows (continued)


How to use the Interactive functions

■ Tool bar functions

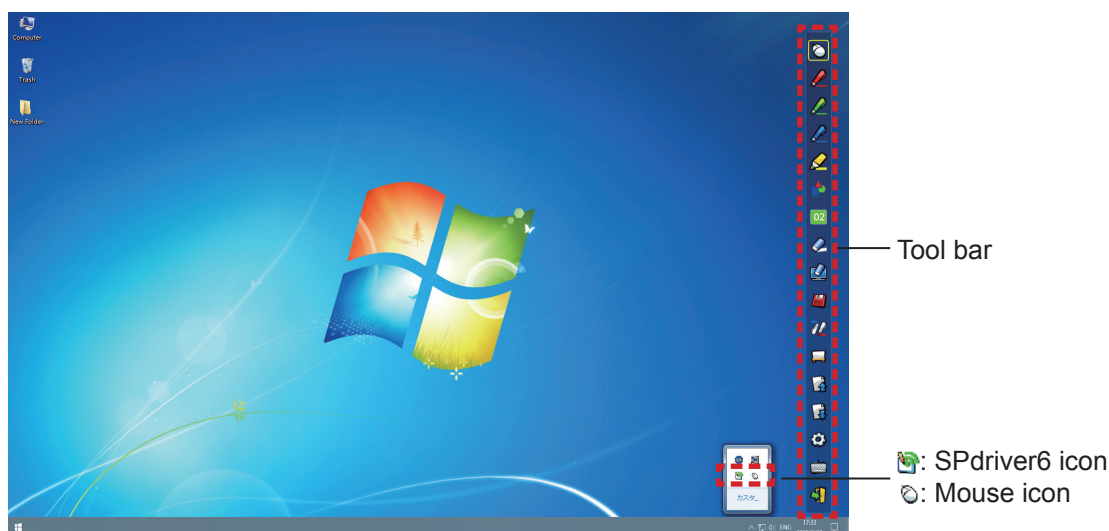

Icon	Name	Description	Page
	Mouse	To perform as a PC mouse.	-
	Red pen	To draw as a red pen.	-
	Green pen	To draw as a green pen.	-
	Blue pen	To draw as a blue pen.	-
	Marker pen	To draw as a half-transparent yellow pen.	-
	Shape tool	To draw a circle, a square, a triangle or a straight line.	10
	Line thickness and color change tool	To change the color and the thickness of the Pen.	10
	Eraser	To partially erase the pictures or lines.	-
	Erase all	To erase all the pictures and lines.	-
	Save	To save the displaying screen to the computer.	-
	Dual Pen	To draw a picture in the "Full-screen mode" or "Divided-screen mode" with the 2 Pens.	10
	Whiteboard tool	To change the background to the whiteboard mode.	12
	Previous page	To return to the previous page.	-
	Next page	To go to the next page.	-
	Editing tool	To edit the drawn pictures or lines.	13
	On-Screen Keyboard	To display the On-Screen Keyboard.	14
	Exit	To exit LightPen3.	16

■ For "Mouse mode" and "Pen mode"

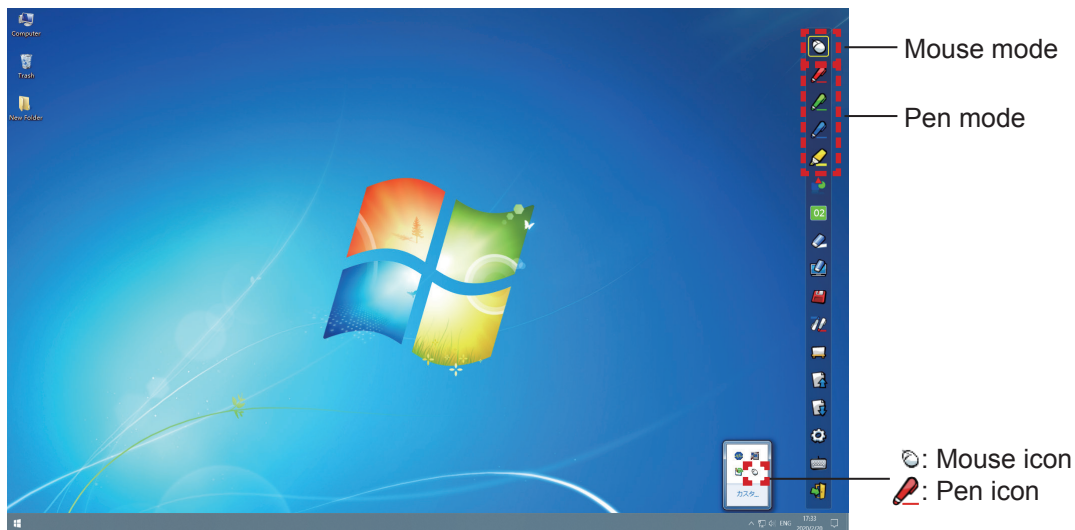

● Mouse mode

The "Mouse mode" is active immediately after Startup. Use a Pen or a Pointer to move the mouse cursor.

- When using the Pen, press the tip of the Pen to the screen as the use of a normal pen.
 - When using the Pointer (Optional accessories), press and hold down the button during use.
- During mouse mode, press and hold the Pointer button or the tip of the Pen for about 2-3 seconds to do right-click.

● Pen mode

Select the Pen icon (Red pen/Green pen/Blue pen/Marker pen) from the tool bar and draw a line with a Pen or a Pointer. You can set the thickness and the color of the line.

- When using the Pen, press the tip of the Pen to the screen to draw a line as the use of a normal pen.
- When using the Pointer, press and hold down the button to draw a line.

Note

- Press the icon on the taskbar to switch the "Mouse mode" or the "Pen mode".

■ Position changing and displaying/hiding of the tool bar




You can change the position of the tool bar, or switch the displaying/hiding of the tool bar.

For Windows (continued)

- If you use the Pen or the Pointer to click a little space left to the projection screen edge, the tool bar will move to the left.
- If you use the Pen or the Pointer to click a little space right to the projection screen edge, the tool bar will move to the right.
- To switch the displaying or hiding of the tool bar, use the Pen or the Pointer to click a little space outside of the projection screen with the tool bar side.


■ Shape tool

Click the "Shape tool" icon  to display the following menu and select the shape you want to draw.

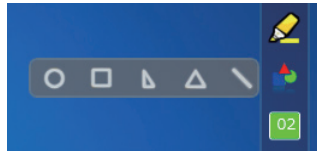

■ Line thickness and color change tool

Click the "Line thickness and color change tool" icon  to display the following menu and choose the thickness or color of the line.

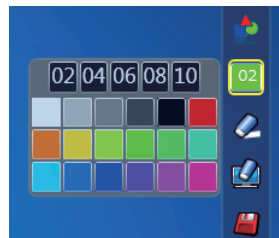

■ Dual Pen tool

Click the "Dual Pen tool" icon  to display the following menu and select the mode you want to draw.



● Functions of Dual Pen

Icon	Name	Description
	Full-screen mode	To draw on the entire screen with two same color Pens.
	Divided-screen mode	To draw on the equally-divided screen with two same or different color Pens.

For Windows (continued)


Note

- You can draw with a combination of the color and thickness of the Pen. In the tool bar, the background of the color and thickness of the selected Pen displays bright.

Whiteboard tool

Select the "Whiteboard tool"  icon to make the wallpaper of the PC screen white. The  (previous page) and the  (next page) icons are replaced by the  (wallpaper selection) and the  (white wallpaper) icons.

- (1) Select the  icon to open the following window where you can choose the wallpaper that you want to use.

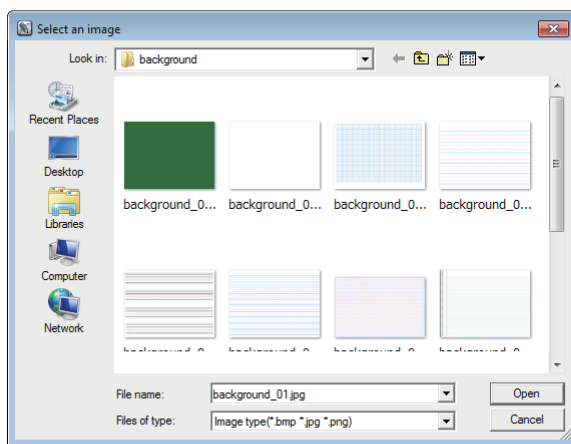

Related
whiteboard tools



- (2) Select the  icon to change the wallpaper to white.
- (3) To exit the Whiteboard mode, select the  icon.


■ Editing tool

Select the  icon to display the following "Editing tool" bar and select the necessary functions of the editing work.

● Functions of Editing bar

Icon	Name	Description
	Object selecting, moving, scaling	To select, to move, to scale the object that you draw.
	Object rotating	To rotate the object that you draw.
	Print	To print the screen you drew.
	Undo	To return to the last action.
	Undo canceling	To cancel the returning of the last action.
	Spotlight	To display the part you want to emphasize.
	Curtain	To cover the part you want to hide.
	Vertical and horizontal shifting	To array the tool bar vertically or horizontally.
	Left and right shifting	To move the tool bar left or right.

Editing tool bar

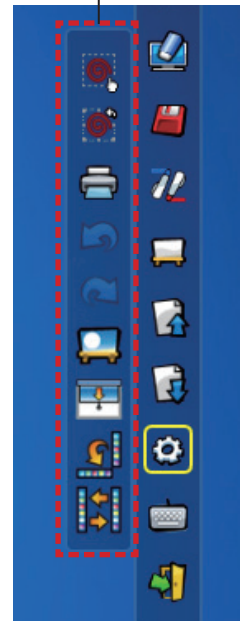


Note

- Select the drawn object first and start to rotate with the "Object rotation" function. If you do not select the object, a message "Select the picture first" will display.

● Spotlight mode

Select the  icon to display the below spotlight image.

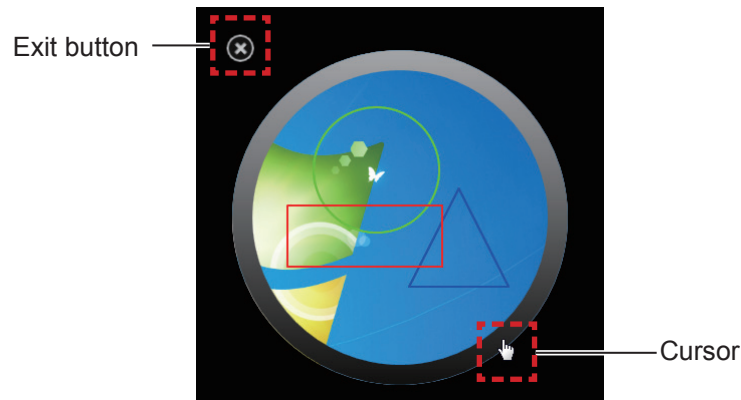


When the cursor becomes a cross, you can change the position of the spotlight and drag.
 When the cursor becomes a hand, you can change the size of the spotlight and drag.
 When you finish viewing the spotlight, press the exit button on the top left to exit.

For Windows (continued)

● Curtain mode

Select the  icon to change the entire screen to black.

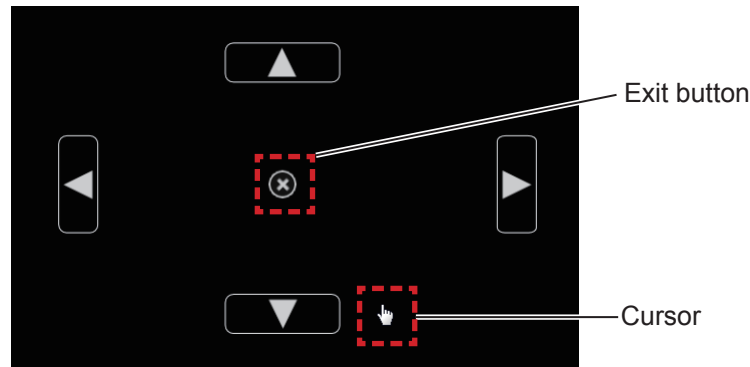


Place the cursor on the up, down, left or right button and the cursor will change to an arrow, drag the arrows to adjust the black curtain size.

When the cursor become a hand, you can drag it to move the black curtain.

When you finish viewing the curtain, press the button in the center to exit.


■ On-screen keyboard

Select the  icon to display the below On-Screen Keyboard. You can write text to a document via the "Mouse mode".

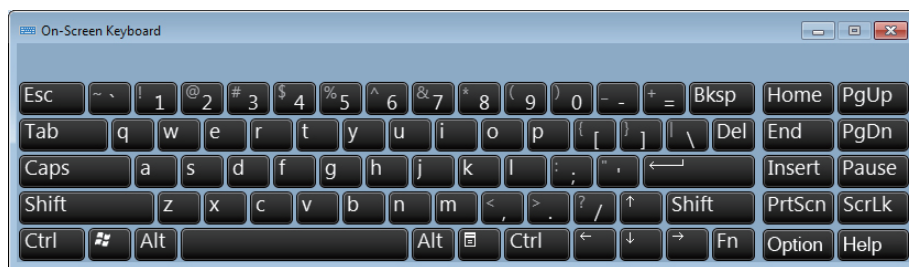

How to use the PowerPoint® Tool

1) Click the mouse icon in the taskbar and set the "PowerPoint® Tool setting" to [On].

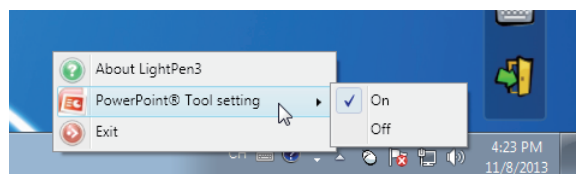


2) Start projection of the PowerPoint file with the "Slide Show Mode".

- The PowerPoint® Tool appears on the right side of the screen and you can draw during the slide.

Note

- From Office 2013 onward, the PowerPoint tool bar may not be displayed. In such a case, do the following:
 - Select [Display Setting] → [Duplicate slide show]. (Required every time)
 - Unselect [Use Presenter View] under [SLIDE SHOW].

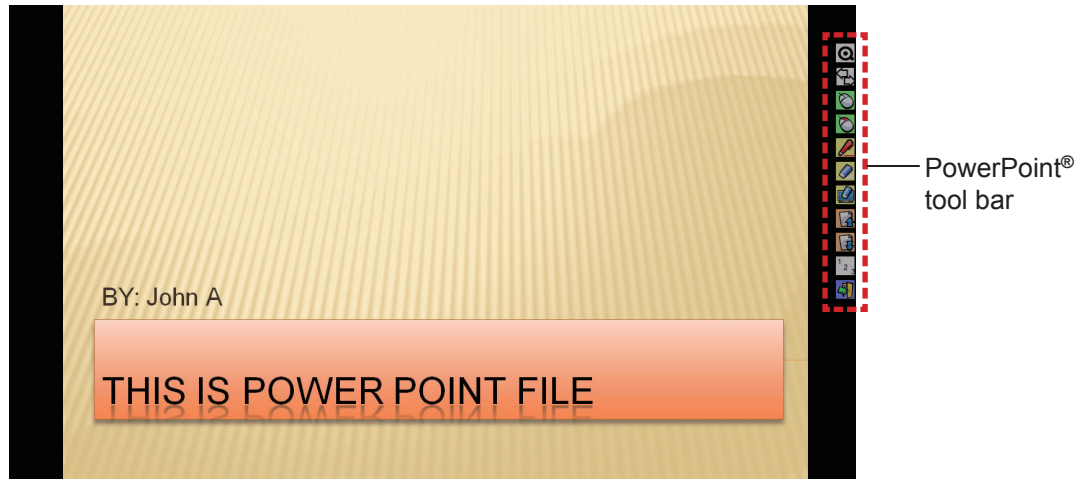

● Functions of the PowerPoint® Tool bar

Icon	Name	Description
	Tool bar minimize	To switch displaying / hiding of the other icons.
	Tool bar position change	To move the tool bar to the left or right.
	Mouse	To perform the mouse mode.
	Mouse right button	To perform as the right button of the mouse.
	Red Pen	To draw with a red pen.
	Eraser	To partially erase the pictures or lines.
	Erase all	To erase all the pictures or lines.
	Previous page	To return to the previous page.
	Next page	To go to the next page.
	Page selecting	To select the page you want to project from the list of slide show page.
	Exit	To exit the slide show mode.

Note

- When you exit "Slide show mode", the PowerPoint® Tool will automatically disappear.
- The LightPen3 PowerPoint® Tool will work when PowerPoint 2010 or PowerPoint 2013 is installed in your computer.

For Windows (continued)

To exit the Software and Driver

■ If you want to exit the LightPen3 from the tool bar

Select the  icon (exit icon) from the tool bar.

■ If you want to exit the LightPen3 from the taskbar

Click the  icon (Mouse icon) from the taskbar and select  Exit .

About SPDriver6

It is no need to exit the SPDriver6 under normal use.

■ To exit SPDriver6

Click the  icon (SPdriver6 icon) from the taskbar and select  Exit .

■ To restart SPDriver6

Windows 8.1

Press [Q] while holding down the Windows logo key on the keyboard, enter "SPDriver6" and then select [SPDriver6].

Windows 10

Select [Start] → [All Apps] → [LightPen] → [SPDriver6] → [SPDriver6].

To uninstall the Software and Driver

Perform the uninstallation as follows.

Windows 8.1

- 1) Press [X] while holding down the Windows logo key on the keyboard, select [Control Panel] → [Uninstall a program] → [LightPen3], and click [Uninstall].
- 2) Perform the uninstallation according to the on-screen instructions.
- 3) Press [X] while holding down the Windows logo on the keyboard, select [Control Panel] → [Uninstall a program] → [SPDriver6], and click [Uninstall].
- 4) Perform the uninstallation according to the on-screen instructions.

Windows 10

- 1) Select the Start  button, then select Settings  → Apps.
- 2) Choose [LightPen3], click [Uninstall] and follow the directions on the screen.
- 3) Select the Start  button, then select Settings  → Apps.
- 4) Choose [SPDriver6], click [Uninstall] and follow the directions on the screen.

For Mac OS

System requirements

In order for the SP6 Driver and the LightPen3 software to work properly, the computer system must meet the following requirements.

OS	macOS High Sierra, macOS Mojave, macOS Catalina
CPU	Intel processor
Memory	2 GB or more
Free space on the hard disk	100 MB or more

Note

- Please notice that it is not guaranteed of the proper operations for system requirements other than the above mentioned requirements or for the self-made computers.
- The LightPen3 software may not work properly depending on the Mac OS version.

Even all the requirements are met, there is not guaranteed operations for all computers.

Installation of the Driver and Software

■ Driver and Software in the CD-ROM

- 1) Insert the software recorded CD-ROM into the CD drive.
- 2) Open the "MAC" folder, copy the "SP6 Driver.app" and "LightPen3.app" onto your desktop.
 - The "SP6 Driver.app" and the "LightPen3.app" icons appear on the desktop as shown below.



- 3) Take the CD-ROM out from the CD drive.
- 4) Double click the "SP6 Driver.app".
 - SP6 Driver icon (red) will appear in the menu bar.



Attention

- Please do not start the software directly from the CD-ROM.

Note

- Download the latest versions of "LightPen3" software from the following URL.
<https://docs.connect.panasonic.com/projector>

■ Driver and Software from the website

- 1) Visit the website.
(<https://docs.connect.panasonic.com/projector/download/application>)
- 2) Download the software and the appropriate driver to your desktop.
 - The "SP6 Driver.app" and the "LightPen3.app" icons appear on the desktop as shown below.



For Mac OS (continued)

3) Double click the "SP6 Driver.app".

- SP6 Driver icon (red) will appear in the menu bar.



Interactive function initial settings

First, carry out the calibration for the projector sensor to accurately recognize the position of the projected screen.


■ Start the Software

1) Connect the computer and the projector via a USB cable.

- The SP6 Driver icon in the menu bar turns from red into green.


2) Double click the "LightPen3.app" on the desktop.

- Tool bar appears at the right of the screen.

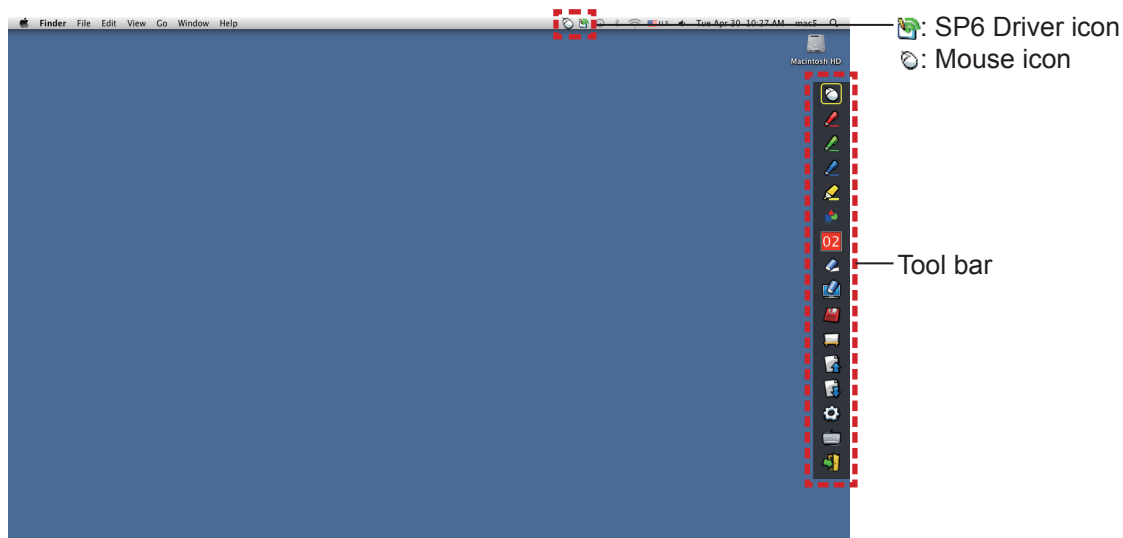


■ Perform the Calibration of the camera

3) Click the SP6 Driver icon on the menu bar.

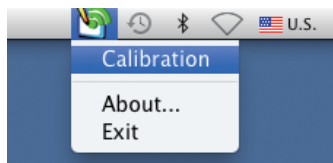

4) Select the pop-up "Calibration".

- Manual calibration screen displays.

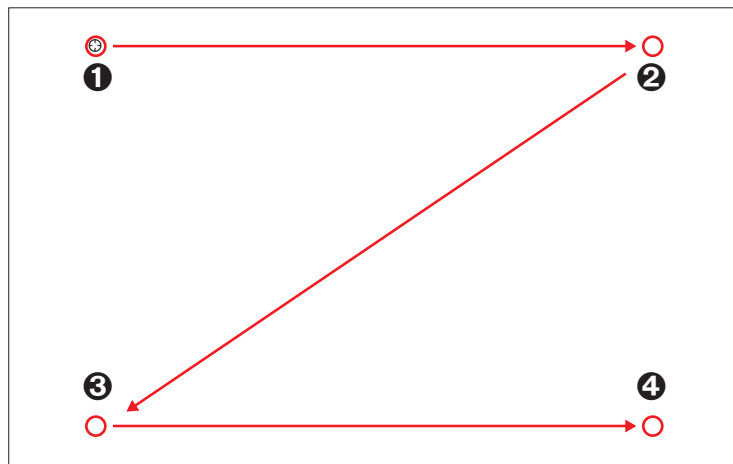

5) Press the target mark ❶ in the screen with the Pen.

- Each time you press the target mark, the moving order is ❶ → ❷ → ❸ → ❹.

6) Press the target mark ❷ → ❸ → ❹.

- The "Please wait..." message appears, and after completing the process the message will disappear.


Note

- When the position of the screen and the projector is fixed, there is no need for calibration again next time if you use the same computer at the same resolution.

For Mac OS (continued)


How to use the Interactive function

■ Tool bar functions

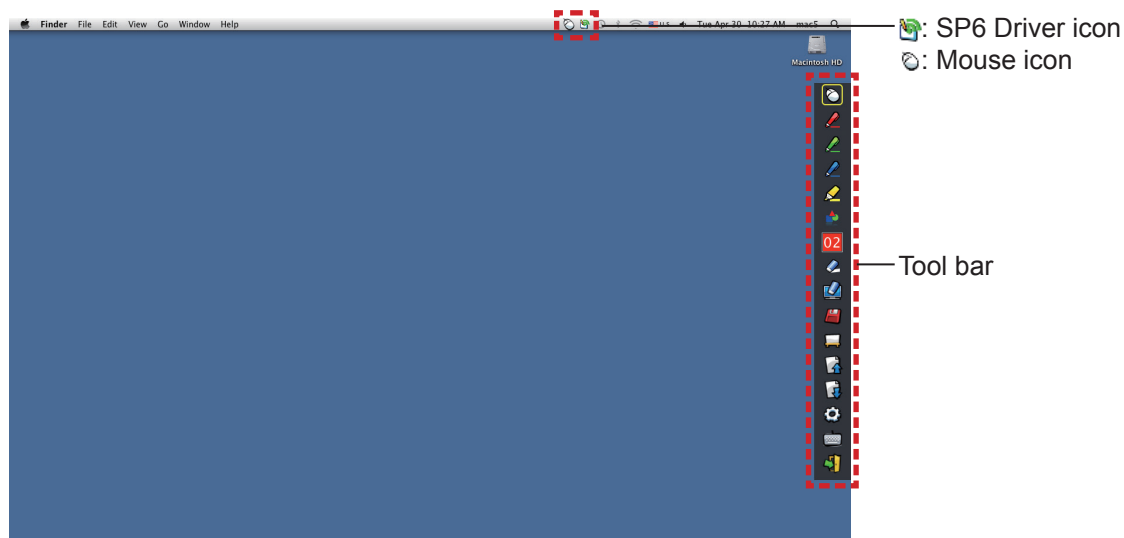

Icon	Name	Description	Page
	Mouse	To perform as a PC mouse.	-
	Red pen	To draw as a red pen.	-
	Green pen	To draw as a green pen.	-
	Blue pen	To draw as a blue pen.	-
	Marker pen	To draw as a half-transparent yellow pen.	-
	Shape tool	To draw a circle, a square, a triangle or a straight line.	22
	Line thickness and color change tool	To change the color and the thickness of the Pen.	22
	Eraser	To partially erase the pictures or lines.	-
	Erase all	To erase all the pictures or lines.	-
	Save	To save the displaying screen to the computer.	-
	Whiteboard tool	To change the background to the whiteboard mode.	23
	Previous page	To return to the previous page.	-
	Next page	To go to the next page.	-
	Editing tool	To edit the drawn pictures or lines.	24
	On-Screen Keyboard	To display the On-Screen Keyboard.	24
	Exit	To exit LightPen3.	24

■ For "Mouse mode" and "Pen mode"

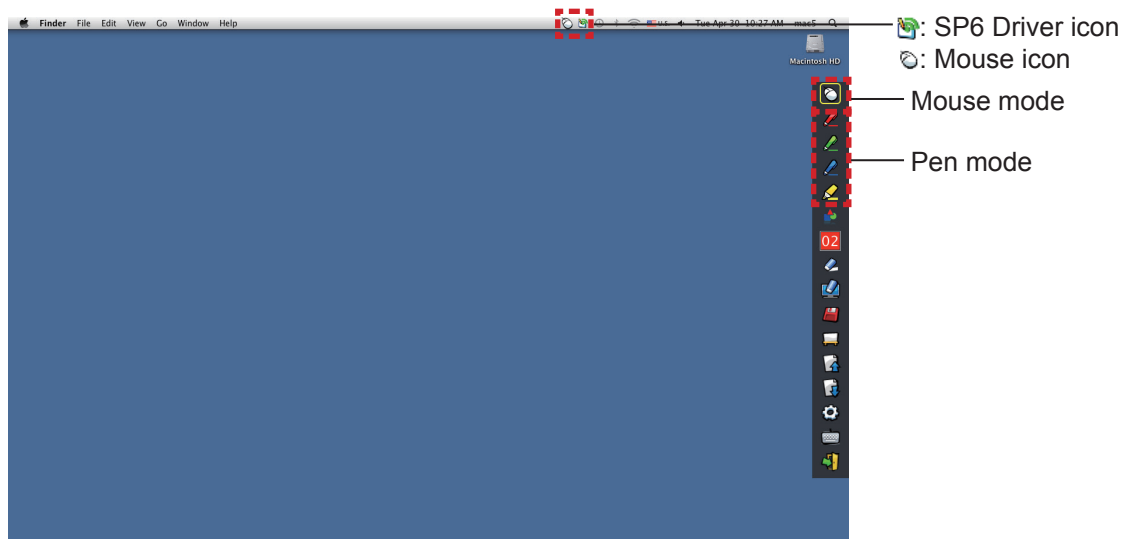

● Mouse mode

The "Mouse mode" is active immediately after Startup. Use a Pen or a Pointer to move the mouse cursor.

- When using the Pen, press the tip of the Pen to the screen as the use of a normal pen.
- When using the Pointer (Optional accessories), press and hold down the button during use.

During mouse mode, press and hold the Pointer button or the tip of the Pen for about 2-3 seconds to do right-click.

● Pen mode


Select the Pen icon (Red pen/Green pen/Blue pen/Marker pen) from the tool bar and draw a line with a Pen or a Pointer. You can set the thickness and the color of the line.

- When using the Pen, press the tip of the Pen to the screen to draw a line as the use of a normal pen.
- When using the Pointer, press and hold down the button to draw a line.

Note

- Press the icon on the menu bar to switch the "Mouse mode" or the "Pen mode".

● Quick switch of the "Mouse mode" or the "Pen mode".

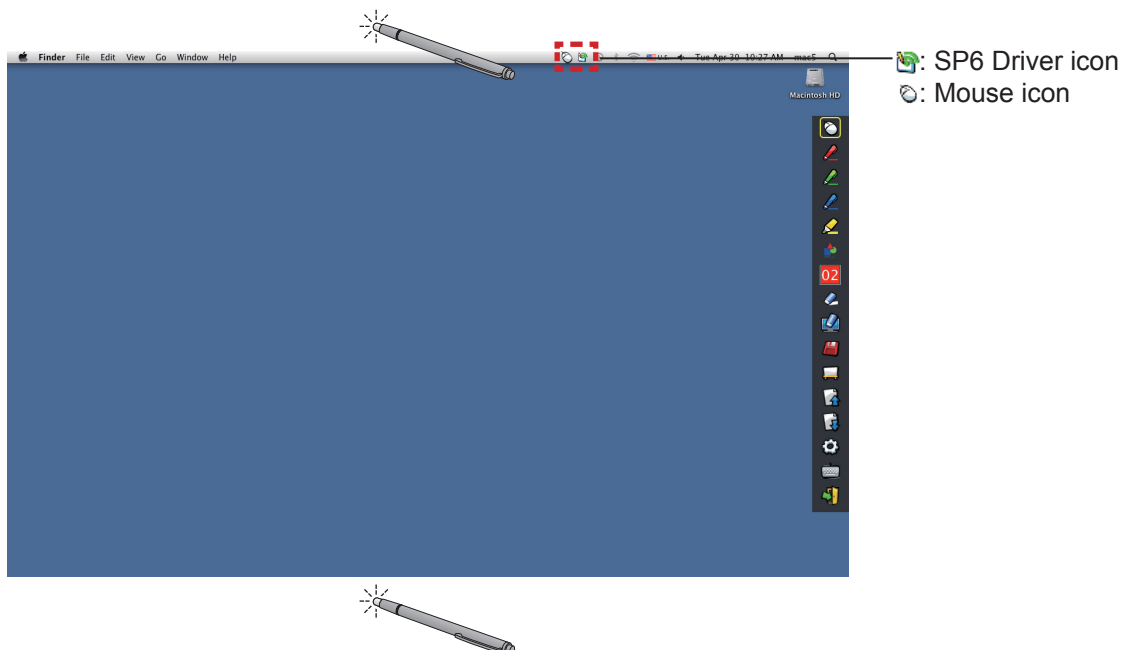

For Mac OS (continued)

You can switch the "Mouse mode" or the "Pen mode" (Red pen/Green pen/Blue pen/Marker pen) function by simply using the Pen or the Pointer to click a little space up above or below the projection screen edge.

- The Pen color was the last selected color when using "Pen mode".

■ Position changing and displaying/hiding of the tool bar




You can change the position of the tool bar or switch to display or hide of the tool bar.

- If you use the Pen or the Pointer to click a little space left to the projection screen edge, the tool bar will move to the left. To move the tool bar to the right, use the Pen or the Pointer to click a little space right to the projection screen edge.
- To switch the displaying or hiding of the tool bar, use the Pen or the Pointer to click a little space outside of the projection screen with the tool bar side.


■ Shape tool

Click the "Shape tool" icon  to display the following menu and select the shape you want to draw.

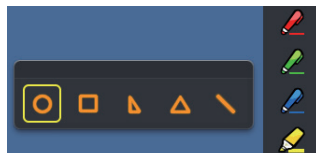


■ Line thickness and color change tool

Click the "Line thickness and color change tool" icon  to display the following menu and choose the thickness or color of the line.

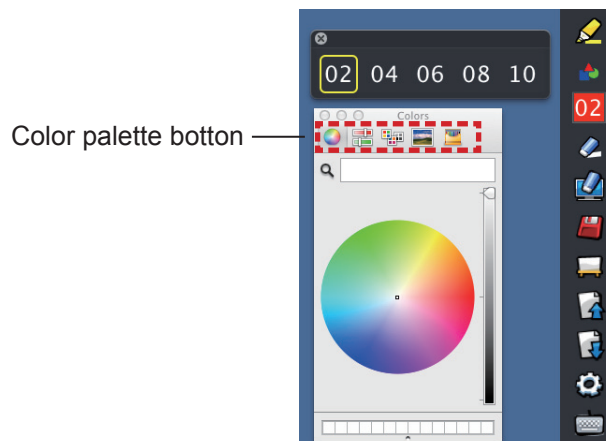


You can select rich color palette from the following picture in the Mac OS system.

- Set the switching of the 5 types of color palette button.

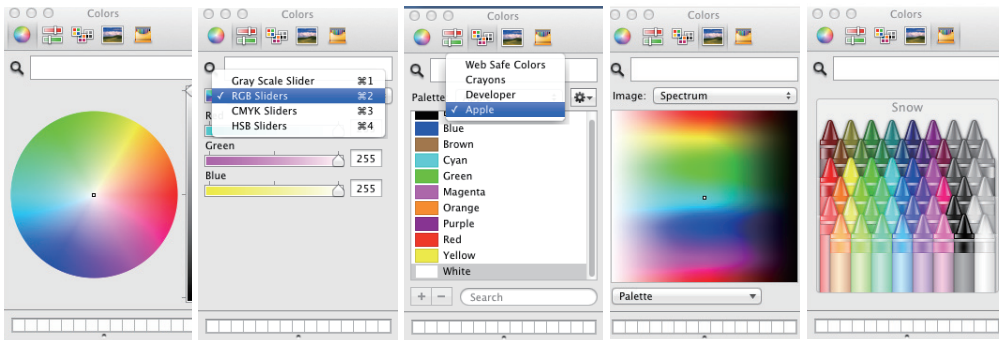


Editing tool bar

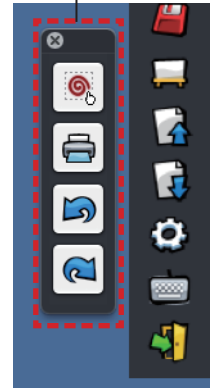

■ Whiteboard tool

Click the "Whiteboard tool"  icon to make the wallpaper of the PC screen white. The  (previous page) and the  (next page) icons are replaced by the  (wallpaper selection) and the  (white wallpaper) icons.

- (1) Click the  icon to open the following window where you can choose the wallpaper that you want to use.

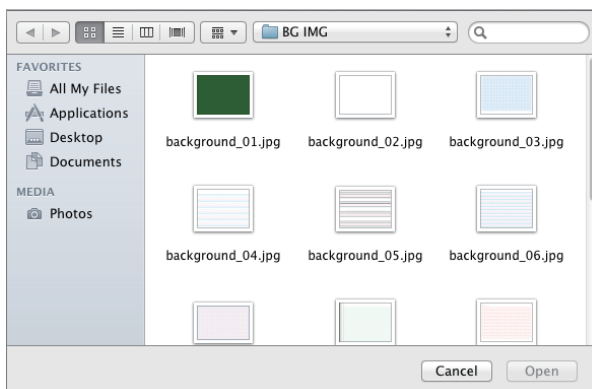

Related whiteboard tools



- (2) Click the  icon to change the wallpaper to white.
- (3) To exit the Whiteboard mode, click the  icon.

For Mac OS (continued)

■ Editing tool

Select the  icon to display the following "Editing tool" bar and select the necessary functions of the editing work.

● Functions of Editing bar

Icon	Name	Description
	Object selecting, moving, scaling, rotating	To select, to move, to scale or to rotate the object that you draw.
	Print	To print the screen that you drew.
	Undo	To return to the last action.
	Undo canceling	To cancel the returning of the last action.

■ On-screen keyboard


Click the  icon to display the on-screen keyboard below. You can write text to a document via the "Mouse mode".



To exit the Software and Driver

■ If you want to exit the LightPen3 from the tool bar

- 1) Click the  icon (exit icon) from the tool bar.
- 2) The confirmation screen displays and press "OK" to select.

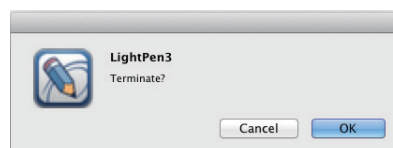


■ If you want to exit the LightPen3 from the menu bar

- 1) Click the  icon (Mouse icon) from the task bar and select **Exit**.
- 2) The confirmation screen displays and press "OK" to select.

About SP6 Driver

It is no need to exit the SP6 Driver under normal use.

■ To exit SP6 Driver

Click the  icon (SP6 Driver icon) from the menu bar and select .

■ To restart SP6 Driver

Double-click the "SP6 Driver.app" on the desktop.

To uninstall the Software and Driver


- 1) Drag or drop the "SP6 Driver.app" and the "LightPen3.app" from the desktop to the recycle bin.
- 2) Select the "Empty trash" for the "Finder" menu.

Troubleshooting


"Can't find SP driver" message displays.

In this case, please check the followings.

- (1) Confirm that the USB cable is connected securely and that the USB port is functioning properly.
 - If the following warning appears, connect the projector and the computer using the supplied USB cable, and then restart the program.

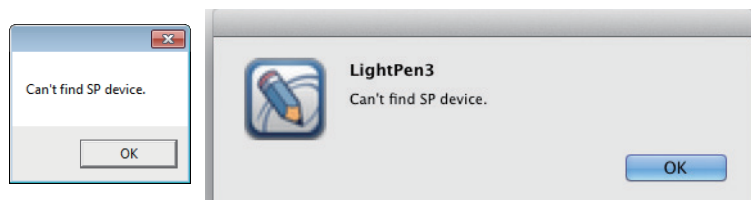

If the SPdriver6/SP6 Driver icon appears in red as figures (A)/(C), the USB function is not working. In this case, confirm that the USB cable is connected securely and that the USB port is functioning properly. The USB function performs normally when the SPdriver6/SP6 Driver icon becomes green as figures (B)/(D).

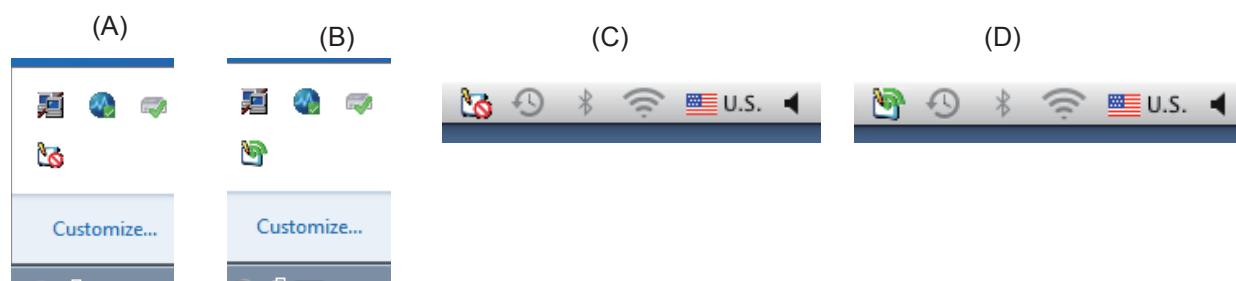

Attention:

Some antivirus softwares may disable the USB ports. Set such software to support the USB ports.

- (2) Use the supplied USB cable together with the projector. If a longer USB cable is needed, contact your dealer for details.
- (3) Confirm the USB port is functioning normally. Consult a qualified technician when it does not work.

Note:

When using a notebook computer, reduced battery capacity can result in USB ports not working. If this should occur, use AC power. Moreover, some notebook computers are unable to supply the standard current level of 500 mA from USB ports. In addition, some USB converters will not work properly. In such cases, use the supplied USB cable.

When the computer is restarted from standby mode, LightPen3 does not work.

When a computer is put into standby mode, its USB ports might be shut down. Quit the LightPen3 program once and then restart it.

The tip of the Pointer and the mouse cursor position are not the same.

This may be caused by one of the followings.

- (1) Calibration was not conducted accurately.
 - (2) After calibration, the projector or screen was moved.
 - (3) The computer resolution was changed.
- Recalibrate in any of these cases.

The mouse cursor jumps around regardless of the movement of the Pointer tip.


This may be caused by one of the followings.

- (1) There might be interference from a strong light nearby. Block nearby light from reaching the screen.
- (2) Since the use of remote control and infrared instruments can cause malfunction, do not use the remote control or infrared instruments when using the interactive functions within the projection range.

Under manual calibration, you can not proceed to next step even by clicking the cross mark.

(1) Check the followings.

- Is the Pen or Pointer have enough battery charge?
- Is the tip of the Pointer or Pen in shadow on the screen? If the sensor cannot detect the LED in the tip of the Pointer or Pen, it will not function.

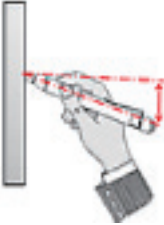Do not put the Pen tip in shadow.	The recommended angle is 25°.
	

(2) The surrounding light might be too bright. Move light sources further away from the projector and screen.
It often happens in the following cases.

- Sunlight is entering through a window near the screen
- There is a light source near the sensor or screen

"The ambient light is too bright to run the light pen system properly." message displays.

The surrounding light is too strong. Therefore, try to move the light source or change the location of the screen or turn off the light, also try to make use of the curtain.

The SPdriver6/SP6 Driver icon does not change from red to green when using a USB cable to connect the computer to the projector.

- (1) It maybe due to the poor connection. Please unplug the USB cable and do the connection again.
- (2) It maybe due to the abnormal operation of the SPdriver6/SP6 Driver. Please restart the computer.

Dual pen does not work.

If the SPDriver () or the SPDriver5 () icon appears on the task bar of your computer, the dual pen function cannot work.

In this case, click the SPDriver or the SPDriver5 icon and select "Exit" to perform the dual pen function.

Trademarks

- Microsoft®, Windows® and PowerPoint® are registered trademarks or trademarks of Microsoft Corporation in the United States and other countries.
- Intel, Pentium, Intel® Core™ 2 Duo are trademarks or registered trademarks of Intel Corporation and its subsidiaries in the United States and other countries.
- Mac and macOS are the trademarks of Apple Inc. registered in the United States and other countries.
- Other company names, product names or other names noted in this manual are trademarks or registered trademarks of the respective companies. Note that ® and ™ marks are not indicated in the text of this manual.

Note

- Unauthorized use or reproduction of part or all of this product software and manuals is strictly prohibited.
- Panasonic Projector & Display Corporation cannot be held liable for any effects resulting from the use of this product software and manuals.
- Panasonic Projector & Display Corporation reserves the right to revise this product software specifications and manual contents without notice.

Panasonic Projector & Display Corporation