





VEO 3T Tripod Series


User Manual

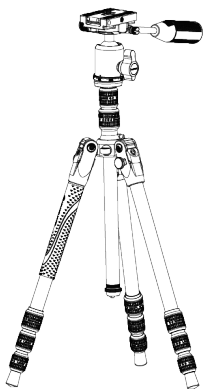


VEO 3T 204ABP
VEO 3T 204CBP

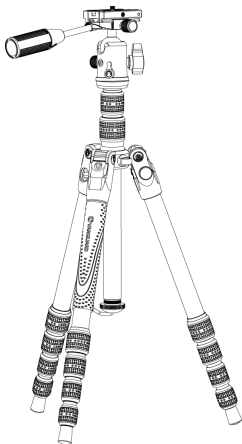

VEO 3T 235ABP
VEO 3T 235CBP

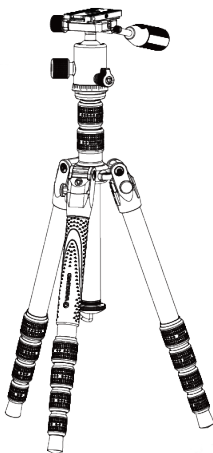


VEO 3T 265HABP
VEO 3T 265HCBP

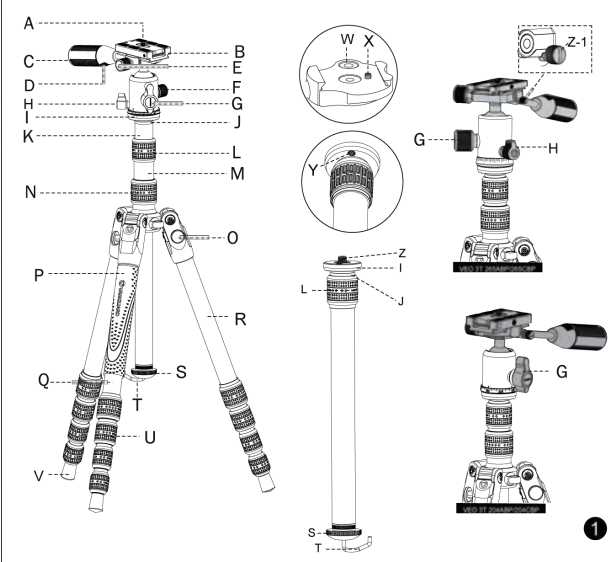


Thank you for purchasing a Vanguard VEO 3T Tripod. Crafted for the photographer who loves to travel, the VEO 3T Tripod offers a new breed of super lightweight, and compact usability. The VEO 3T tripod's patented, unique & innovative rapid column rotation feature allows it to fold into one of the smallest tripods making it the ideal companion for photographers looking to minimize luggage and maximize impact. Learn more and make the best use of your tripod by carefully reading the instructions below. Enjoy Photography with Vanguard!

① PART DESCRIPTION

- | | |
|--|--|
| A: 1/4" Camera Screw | U: Twist Lock |
| B: Quick Shoe | V: Rubber Feet |
| C: Removable Telescopic Handle | W: Bubble Level |
| D: Telescopic Handle Release Button | X: Quick Shoe Safety Pin |
| E: Quick Shoe Lock Knob | Y: Locking Set Screw M6 |
| F: Friction Control Knob | Z: Central Column Reversible Head/Camera Screw Adaptor |
| G: Central Ball Head Lock Knob | Z-1: Handle Locking Screw |
| H: Panning Locking Knob | Z-2: Handle Holder Cap |
| I: Central Column Plate | Z-3: Washer |
| J: Anti-Shock Rubber Ring | A1: Smartphone Holding Arm |
| K: Second Section Central Column | B2: Upper Smartphone Clamp |
| L: Second Section Central Column Lock Knob | C3: Smartphone Holding Arm Apart |
| M: First Section Central Column | D4: 1/4" Camera Screw Hole |
| N: First Section Central Column Lock Knob | E5: Power Light |
| O: Leg Angle Adjustment Button | F6: iOS Button |
| P: Rubber Grip Handle | G7: Android Button |
| Q: Monopod | H8: Power Switch |
| R: Legs | I9: Battery-CR2032 |
| S: Central Column Stop Cap | J10: Battery Lid |
| T: Retractable Hook | |

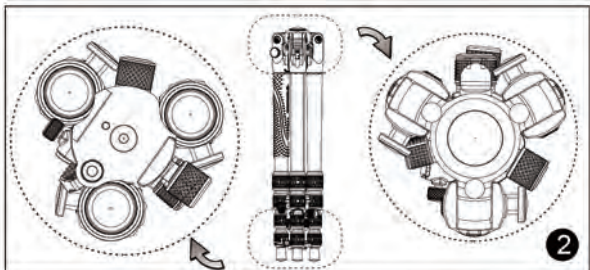


② To ensure perfect compactness and folding position of your tripod, please pay attention to the position of the head (as shown in figure 2).

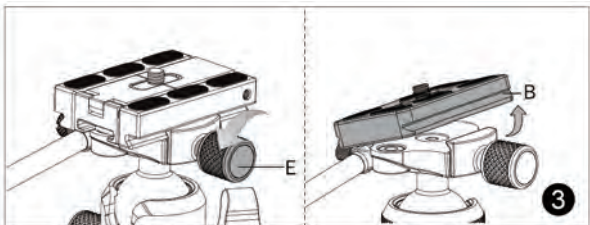

③ REMOVING THE QUICK SHOE


Turn the quick shoe lock knob (E) counterclockwise as shown until the quick shoe is unlocked and removed, as shown in fig. 3.

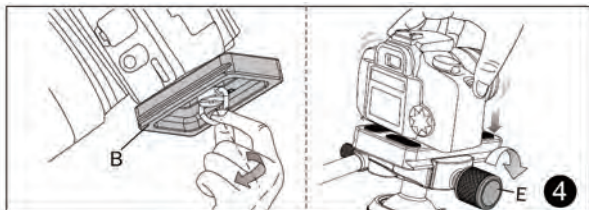

④ ATTACH THE QUICK SHOE TO YOUR CAMERA



Line up the camera screw with your camera and insert. The quick shoe is fitted with a D-ring screw. Turn the D-ring clockwise until fully tightened, then place the quick shoe (B) on the head as shown in figure 4.

Note: In order to make the best use of the bubble level, we recommend it faces the camera screen when mounting on the head, as shown in figure 4.

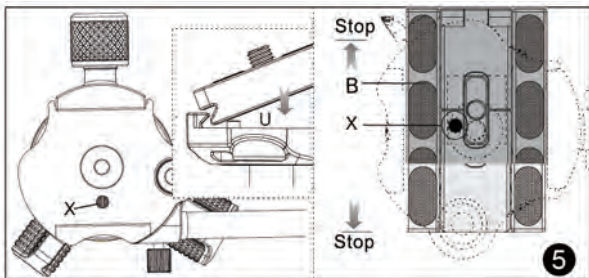

⑤ SAFETY PIN

The safety pin helps to prevent your camera or equipment from accidentally falling when it is being adjusted.

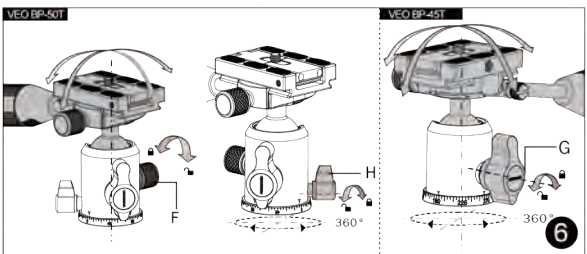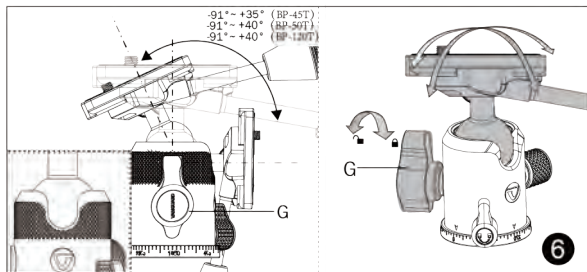


⑥ BALL HEAD MOVEMENT & LOCKED POSITION

To tilt the ball head, unlock the central locking knob on the ball head for camera positioning by turning (G) counterclockwise. Position the camera at the desired angle. Lock (G) by turning clockwise.

Note: tilting angle of VEO BP-45T is $-91^{\circ}(\pm 1)$ to $+35^{\circ}(\pm 1)$, VEO BP-50T is $-91^{\circ}(\pm 1)$ to $+40^{\circ}(\pm 1)$ and VEO BP-120T is $-91^{\circ}(\pm 1)$ to $+40^{\circ}(\pm 1)$.

Unlock the panning locking knob (H) by turning it counterclockwise. When paired with the ball head's bubble level, this panning function works well for 360° panoramic and VR Imaging.

If you need to increase ball head friction (VEO BP-50T only), turn the friction control knob (F) clockwise; decrease ball head friction by turning counterclockwise.

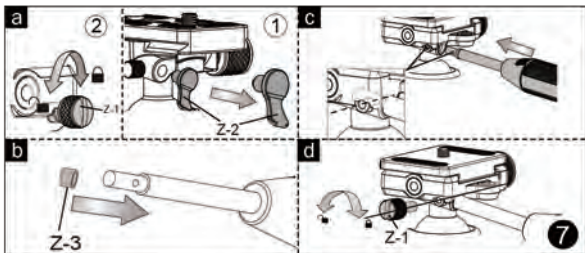

⑦ ASSEMBLING THE HANDLE

This unique ball head offers an option to connect a pan handle for smooth motion-controlled use with camera or sporting optics.

Step 1) Remove the handle holder cap (Z-2).


Step 2) Release the handle locking screw (Z-1) by turning counterclockwise as shown in fig.7a.

Step 3) Fix the washer (Z-3) to the handlebar to set position as shown in fig.7b.

Step 4) Line up the hole of the handle bar and the handle locking screw hole, insert the handle into corresponding socket to set position as shown in fig.7c.

Step 5) Screw the locking screw (Z-1) tighten to lock the handle in place as shown in fig.7d.


PLEASE ensure the handle locking screw is well fixed to the hole. The handle can not be moved and pulled out when the screw is tightened.

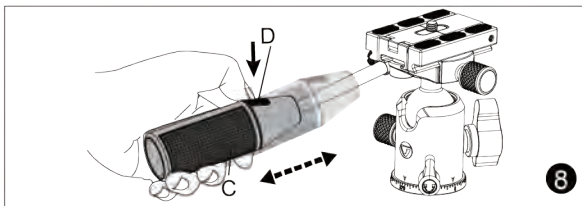

⑧ TELESCOPIC HANDLE

To extend the length of the handle, press handle release button (D) and pull handle out until stop position.

To contract the handle length to the minimum, press handle release button (D) and push back until stop position.

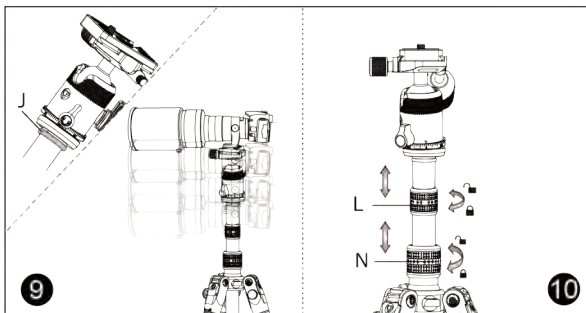


⑨ ANTI-SHOCK RUBBER RING

The Anti-shock rubber ring (J) helps to protect your equipment from potential damage when the central column is lowered too quickly.

⑩ CENTRAL COLUMN ADJUSTMENT

The center column of the tripod can be elevated to achieve the specific desired height for your equipment. Release the first section center column lock knob (L) by turning counterclockwise to elevate the first section of the center column, lock by turning clockwise until it is fully tightened. If required, turn the second section center column lock knob (N) counterclockwise to release the second section of the center column, lock until tightened by turning clockwise.

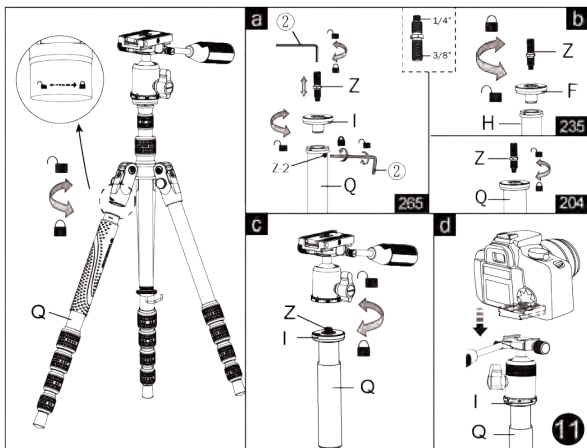

⑪ MONOPOD

To use the monopod, grip the leg with the rubber grip and turn clockwise, the leg tube can be separated from just below the leg angle selector.

To release the central column plate:

Use the hex wrench ② to release the stop screw (Y) by turning counterclockwise. Separate the plate of the central column from the central column tube by turning counterclockwise.


The plate of the central column with a dual side 1/4"- 3/8" Head/Camera Screw Adaptor (Z) is used with the leg to create the monopod.

PLEASE NOTE: Some people like to use a monopod with and without the ball head. The choice is yours. Confirm the desired size 1/4"-20 or 3/8"-16. If you do not use the ball head you will most likely need to remove the QS from your camera and attach directly to the monopod. Double check the end of the dual side camera screw adapter you need before going to the next step.

a: Connect the plate to the monopod by turning clockwise.

b: Line up the plate camera screw (Z) with the ball head and connect the ball head onto the plate (I).


c: Line up the 1/4"-20 camera screw with your camera and insert. Then place the quick shoe (B) on the ball head and tighten the lock knob.

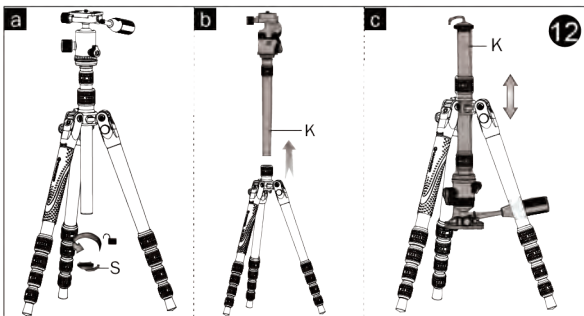

12 USE CENTRAL COLUMN TO EXTEND MONOPOD HEIGHT


When converting to Monopod the central column can be utilized to extend the height.

- a: Separate the monopod tube as specified in figure 12; Loosen the central column end cap (S) by turning clockwise;
- b: Release the central column locking knob (L) and pull up the central column (K);
- c: Connect the central column to the monopod tube by turning clockwise.

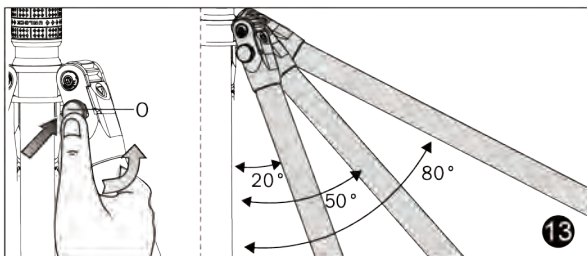

13 LEG ANGLE ADJUSTMENT

Press leg angle adjustment button (O) to adjust legs to any of the three preset angles (20, 50 and 80 degrees). Legs can be adjusted individually for uneven terrain and can be set to have a more customized position.

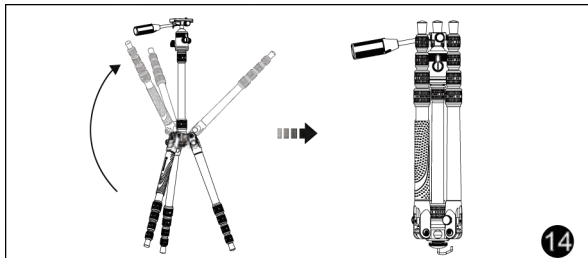

⑭ TO USE THE TRIPOD IN MACRO MODE WITH THE CENTRAL COLUMN

Step 1) Remove your camera from the top of the tripod. (You can keep your QS plate on your camera if desired at all times)


Step 2) Unlock the central column by turning the central column lock knob (L) counterclockwise.

Step 3) Pull up the center column (K) and bring to the top of the tripod.

Step 4) Invert the central column (K) 180°, push upwards and then lock the center column using the central column lock knob (L) by turning in a clockwise position.

Step 5) Attach your camera to the ball head while the column is inverted. See Fig. 2 Step 4.

Warning: When using the QFCC system for Macro photography, please remove your camera to prevent any potential damage to your equipment.

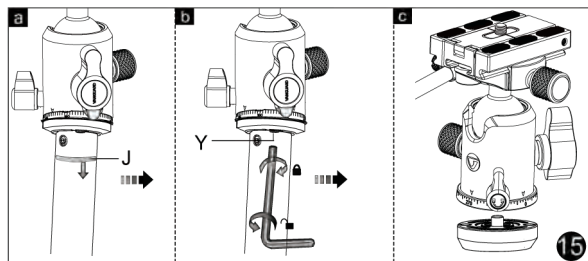

⑮ BALL HEAD REMOVAL OR ATTACHING TO TRIPOD


Removing the ball head:

a: Use the hex wrench ② to release set screw (Y) by turning counterclockwise.

b: Confirm panning locking knob (H) is locked, then turn the head counterclockwise.

Attention: Before you remove the ball head, please remove the camera or equipment first to prevent potential damage to your equipment.

When attaching the ball head, connect the ball head onto the tripod firmly first, and tighten the set screw (Y) with the hex wrench ②.

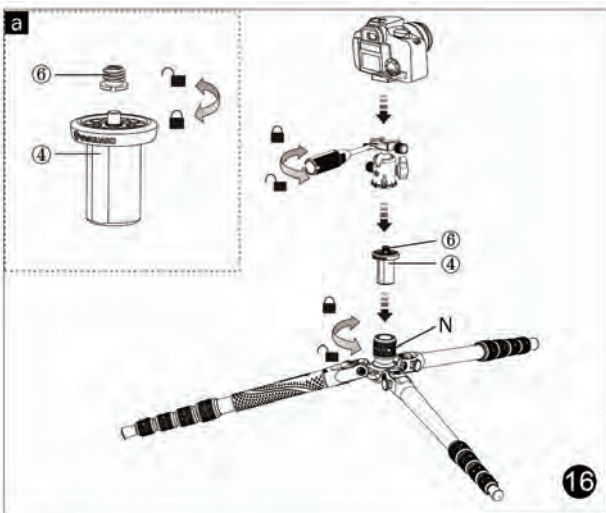

16 USING THE LOW ANGLE ADAPTOR (LAA)

Macro photography & low angle shoots will be very easy to do thanks to the low angle adaptor ④ (included).

a: Loosen the central column end cap (S) by turning clockwise.

b: Release the central column locking knob (N) and pull up the central column (K).



c: Attach the 3/8" screw adaptor ⑥ to the low angle adaptor ④.

Take the low angle adaptor ④, remove ball head from the central column and connect to the LAA.

NOTE: You may want to connect directly to the LAA and attach your camera directly on it. PLEASE be aware your camera movements will be limited.

d: Position the low angle adaptor into the central column hole on the canopy and tighten firmly by turning (N).

Warning: Use low angle adaptor ④ above canopy only, do not use in reverse position as shown in fig 16.

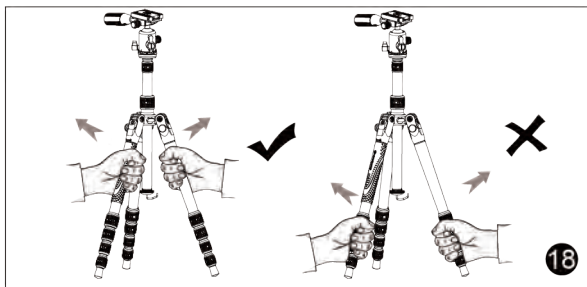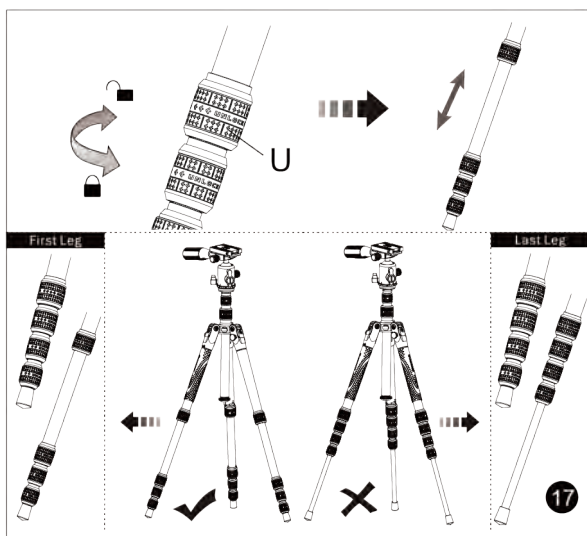

⑪ ⑫ LEG EXTENSION ADJUSTMENT

To adjust the height of the legs, each one has telescopic sections that can be extended by releasing the lock (U).


Step 1) Open the legs.

Step 2) Release the leg sections successively by unlocking (U) clockwise. Always start from top down (thinnest section last) to reach the desired height. Using the larger leg section first will make your tripod more stable (as shown in figure 17).

Step 3) Lock (U) by turning counterclockwise until fully tightened.

Step 4) Proceed the same way for the two other legs and make sure all locks (U) are perfectly tightened to avoid the tripod from falling.


Attention: The correct grip position for using and moving the tripod can be seen in figure 18.

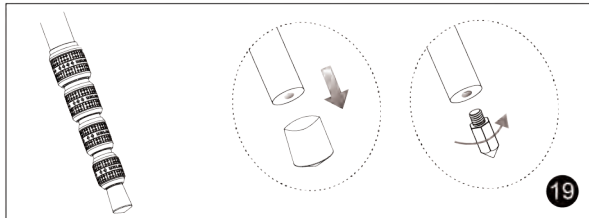

①⑨ RUBBER FEET TO SPIKED FEET


The rubber feet can be converted to spiked feet for using on different types of terrain (See fig. 19).

Spiked feet are included.

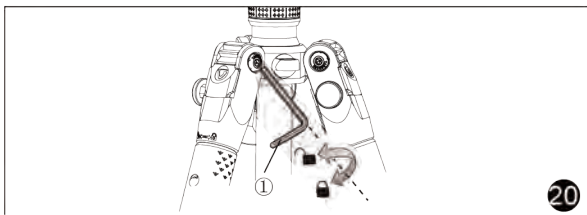

②⑩ LOOSE LEG


If by chance or over time a leg becomes loose, use an Allen wrench to tighten the bolts near the top of the spider cast (canopy). (Fig. 20) (4mm Allen Wrench ① included).

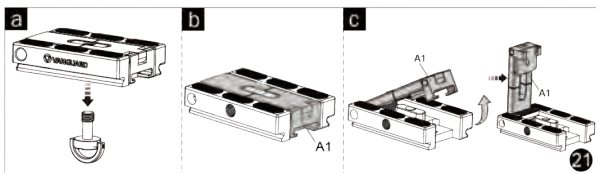

②⑪ How to use QS-72T


Remove the camera screw to prevent scratching the smartphone.

Raise the smartphone holding arm (A1) to a vertical position.

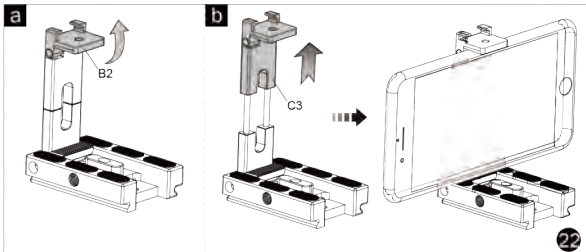


22 Open the upper smartphone clamp (B2), then pull the smartphone holding arm apart (C3), and insert the smartphone into the clamp.




Note: when installing the mobile phone, the smartphone controls (such as volume and power) should not be caught in the clamp or base.

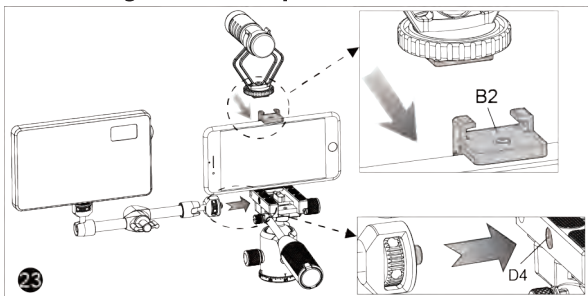

23 a. The upper smartphone clamp (B2) includes a cold shoe mount that allows a suitable accessory, such as an LED light or a microphone, to be attached.

b. There is a 1/4" camera screw hole on the side of the quick shoe (D4) to mount a small support arm.

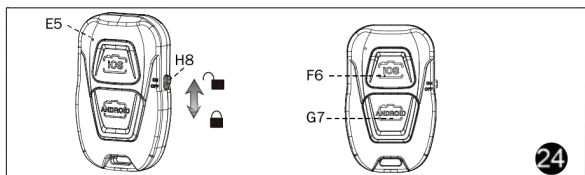

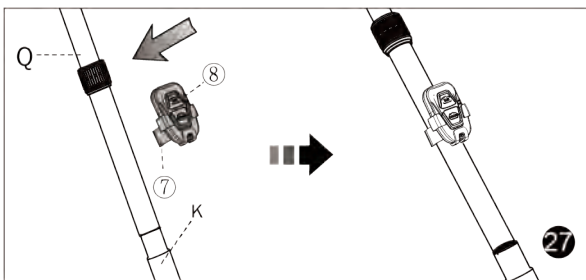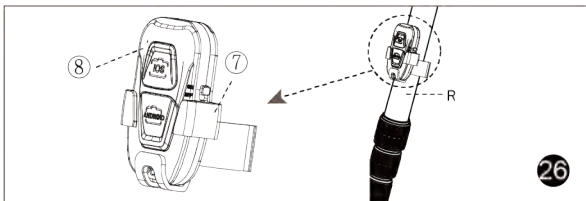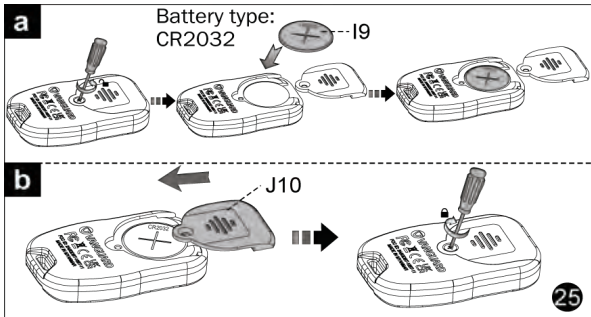

(24)(25)(26)(27) **BLUETOOTH REMOTE CONTROL**

Easy to Set Up, Easy to Use

Pairing your device:

Step 1) Turn on Phone Bluetooth Function.

Step 2) Turn On the bluetooth remote control (H8) by pushing the power switch to "ON". Select the "AB Shutter3" device in the phone to be connected, in few seconds it should be ready to use!

Step 3) When the mobile device is in photo or video shooting mode, press the shutter button to shoot.

Battery installation:

As shown in picture 25.

Mounting on tripod or monopod:

The remote control can be used with your tripod or monopod through the clamp, as shown in picture 26 and 27.

Monopod setting up is specified in picture 11 and 12.

Accessories



Accessories

VEO 3T series accessories include:

- ① Allen Wrench (used in tightening the loose leg)
- ② Allen Wrench (used in assembling / removing the ball head)
- ③ Tripod Bag
- ④ Low Angle Adaptor
- ⑤ Spiked feet (X3)
- ⑥ 3/8" Screw Adaptor
- ⑦ Remote Control Clamp
- ⑧ Bluetooth Remote Control

Battery warning:

Important Note: The Bluetooth remote control includes a CR2032 battery which can be dangerous, especially if swallowed. **KEEP OUT OF REACH OF CHILDREN.** Swallowing can lead to chemical burns, perforation of soft tissue, and death. Severe burns can occur within 2 hours of ingestion. **Seek medical attention immediately.**



Notes before use:

1. Following the set-up of the tripod, confirm all legs are open and locked before mounting the camera. Failure to do so may cause the tripod to fall and the equipment to be damaged.
2. Always comply with the weight restrictions. Going over the maximum load capacity may cause damage to equipment or personal injury.
3. Ensure all individual knobs and locks are tight to avoid movement, as movement may result in equipment damage or personal injury.
4. Carefully hold camera equipment stable when removing it from the tripod.
5. Carrying your tripod:
 - a) After use, remove the camera; fold the tripod completely; and ensure the tripod handle faces out when folding.
 - b) DO NOT carry the tripod when the camera is still mounted.
6. Cleaning your tripod:
 - a) When necessary, wipe tripod with a soft cloth and mild detergent.
 - b) When used around salt water, first flush with clean water, then wipe with a dry soft cloth.



VANGUARD



www.vanguardworld.com