
For Your Safety: Read all instructions carefully Save this manual for future reference

MS1060 OWNER'S MANUAL




10 INCH COMPOUND MITER SAW

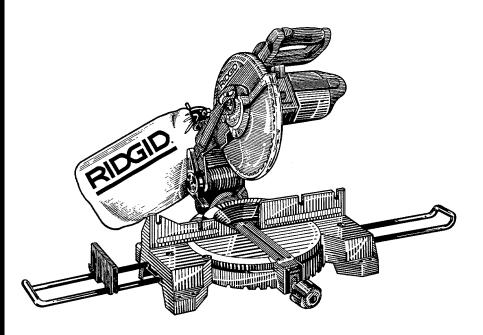

Part No. SP6402 Printed in U.S.A.

Parts List for RIDGID 10" Compound Miter Saw Model No. MS10600

RIDGID parts are available on-line at www.ridgidparts.com Figure 1

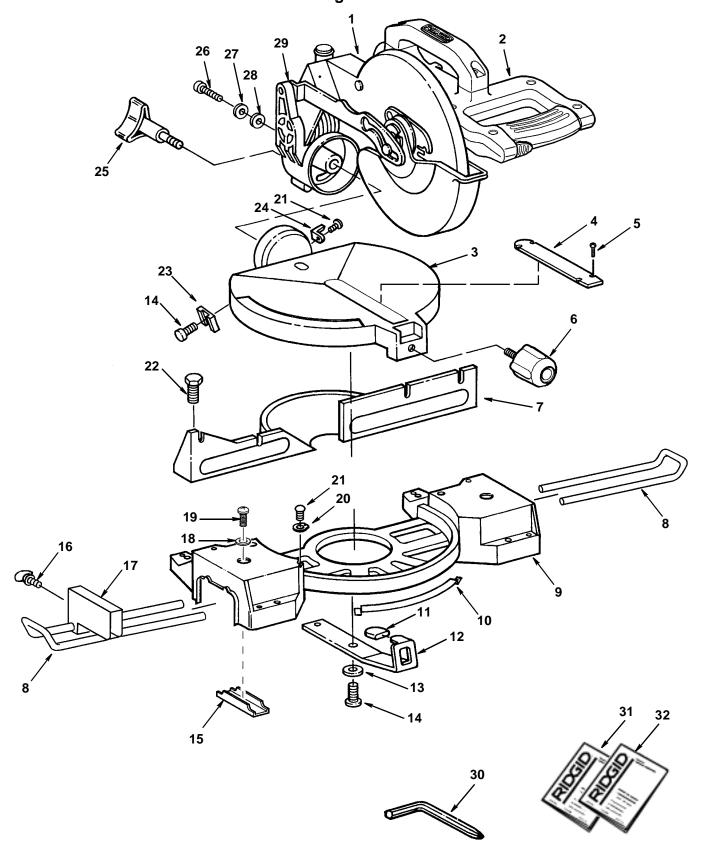

Parts List for RIDGID 10" Compound Miter Saw Model No. MS10600

RIDGID parts are available on-line at www.ridgidparts.com Figure 1

Always order by Part Number - Not by Key Number

Key No.	Part No.	Description
1	See Fig. 3	Blade Guard Assembly
2	See Fig. 2	Motor Assembly
3	828647	Table
4	828343	Plate Throat
5	808275-4	Screw Pan Cr 8-32 x 3/8
6	826055-1	▲ Knob Miter
7	828648	Fence Asm
8	817791	Arm Extension
9	828501	Base
10	827588	Shim Table
11	826163	Cap Grip
12	823297-1	Spring Index
13	805553-24	▲ Washer 11/32 x 7/8 x 1/16
14	9421621	⚠ Scr Soc Cap 5/16-18 x 5/8
15	823612	Clamp Extension
16	702204-1	* Screw Thumb 1/4-20 x 1/2


Key No.	Part No.	Description
17	817793	Stop Block
18	805553-6	Washer 21/64 x 5/8 x 1/16
19	813056-2	* Screw Pan Hd. 5/16-18 x 1-1/4
20	826057	Pointer
21	809169-3	* Screw Pan Hd. Type "T" 8-32 x 3/8
22	9416630	* Screw Hex Type "T" 5/16-18 x 1
23	823326	Stop Bevel
24	826068	Indicator Bevel
25	828253	Knob Bevel
26	9416187	* Screw Hex Type "T" 5/16-18 x 3/4
27	805553-4	▲ Washer 21/64 x 9/16 x 1/16
28	821421-6	O-Ring
29	See Fig. 3	Pivot Asm.
30	823314	Wrench Combination
31	SP6402	Owners Manual - English/Spanish
32	SP6402F	Owners Manual - French

^{*} Standard hardware item - may be purchased locally.

A WARNING: These items are important to the safety of this tool. Do not substitute common parts.

Parts List For RIDGID 10" Compound Miter Saw Model No. MS10600

RIDGID parts are available on-line at www.ridgidparts.com
Figure 2 - Motor Assembly

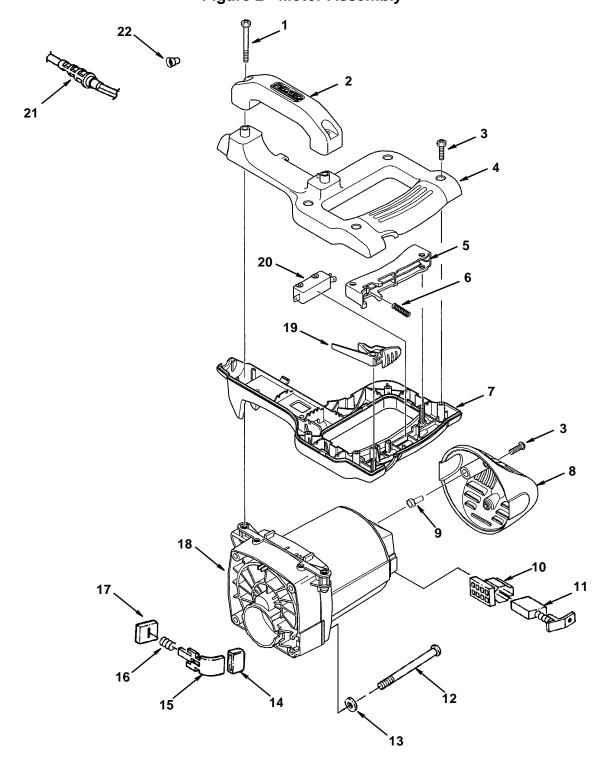

Parts List For RIDGID 10" Compound Miter Saw Model No. MS10600

RIDGID parts are available on-line at www.ridgidparts.com

Figure 2 - Motor Assembly

WARNING: For your safety, this miter saw is specially insulated. To reduce the risk of electrical shock, fire or injury, use only parts identical to those identified in the parts list. Reassemble exactly as originally assembled.

Always order by Part Number — Not by Key Number

Key No.	Part No.	Description
1	828736	Screw Pan Cr Pt K60 x 75mm
2	828720	Handle Carry
3	808380-5	* Screw Pan Cr #8 Plastite
4	828718	Handle Upper
5	828717	Actuator Switch
6	826053	▲Spring Compression
7	828719	Handle Lower
8	826064	Cap Motor Housing
9	354653	Bumper
10	826017	▲Holder Brush
11	826016	▲ Brush

Key No.	Part No.	Description
12	826453	Screw Pn Hd 10-32 x 2-1/4
13	805549-22	* Washer 13/64 x 3/8 x 1/32
14	826163	Cap Grip
15	826062	Lock Arbor
16	823322	Spring Arbor Lock
17	823417	Seal
18	829512	▲ Motor Asm
19	828716	▲ Button Lock
20	826066	▲ • Switch SPDT
21	828735	▲ • Cord w/Plug
22	803709-1	▲ Connector Wire

▲ WARNING: These items are important to the safety of this tool. Do not substitute common parts.


 WARNING: Any attempt to repair or replace electrical parts on this unit may create a hazard unless repair is done by a qualified service technician. Repair service is available from authorized RIDGID Service Center.

^{*} Standard hardware - may be purchased locally

Parts List For RIDGID 10" Compound Miter Saw Model No. MS10600

RIDGID parts are available on-line at www.ridgidparts.com

Figure 3 - Blade Guard Assembly

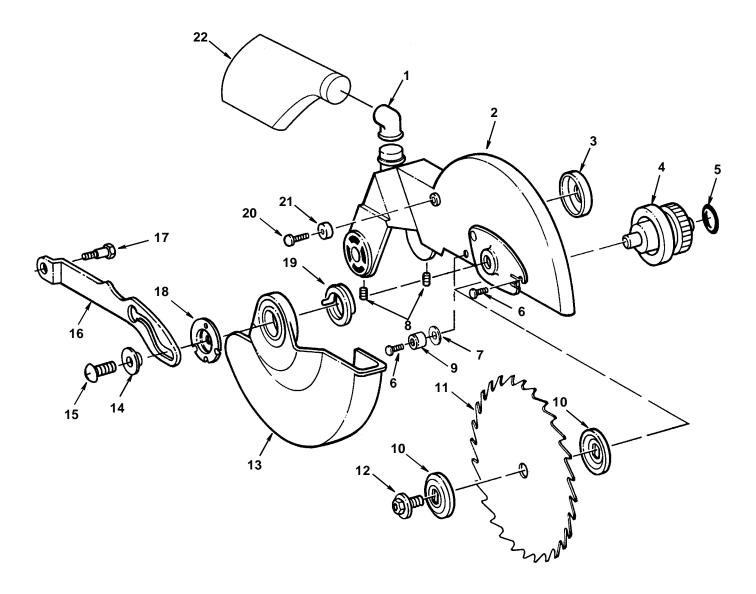

Parts List For RIDGID 10" Compound Miter Saw Model No. MS10600

RIDGID parts are available on-line at www.ridgidparts.com

Figure 3 - Blade Guard Assembly

Always order by Part Number — Not by Key Number

Key No.	Part No.	Description
1	37429	Dust Elbow
2	826487-1	Arm/Guard Asm
3	823300-1	Washer Cup
4	823316-1	Arbor Asm
5	821421-3	Ring "O"
6	9416390	* Screw Pan Cr Ty "T" 10-32 x 5/8
7	9416712	Washer 3/16 x 5/8 x 1/16 Bl. Ox.
8	826481	Screw Lock Set 1/4-20 x 3/8
9	829503	Bumper
10	823303	▲ Collar Blade
11	827413	Blade Saw Carbide
12	823304	Screw Blade

Key No.	Part No.	Description
13	826039	‡ Guard Lower
14	826765	Retainer Bearing
15	820219-1	▲ Screw Pan Cr Ty "TT"
		1/4-20 x 3/8
16	826026	Link Actuator
17	821521-1	▲ Screw Shoulder
18	823840-3	Retainer Guard Asm
19	823292	•‡ Spring Guard
20	821521	Screw Shoulder
21	823306-1	Bearing Cam
22	828364	Bag Dust

▲ WARNING: These items are important to the safety of this tool. Do not substitute common parts.

‡ CAUTION: See mechanical assembly caution below.

 WARNING: Uncontrolled spring release or misinstallation of these parts may create a hazard unless repair is done by a qualified service technician. Repair service is available from authorized RIDGID Service Center.

CAUTION: Mechanical Assembly, to qualified service technician.


- 1. Wear approved eye protection when working with coil spring including spring, arbor lock 823322.
- 2. Incorrect reassembly of torsion spring 823328 can cause an unsafe condition because cutting head fails to rise fully to stop, or because spring fails through over-stress.
- 3. Improper reassembly of mechanisms controlling movement of lower guard 826039 can cause an unsafe condition because guard fails to operate freely as cutting head is moved up and down.

^{*} Standard hardware - may be purchased locally

Parts List For RIDGID 10" Compound Miter Saw Model No. MS10600

RIDGID parts are available on-line at www.ridgidparts.com

Figure 4 - Pivot Assembly

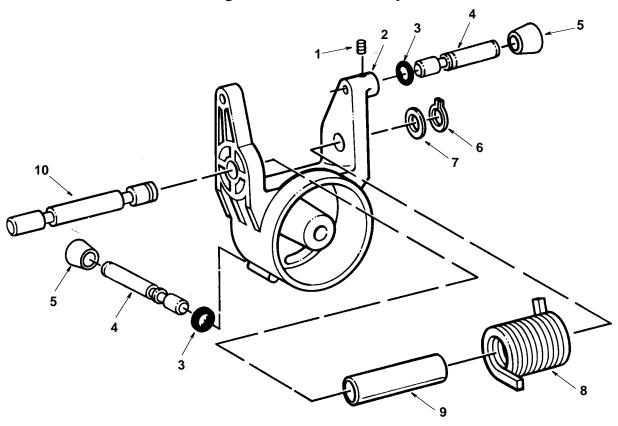

Always order by Part Number — Not by Key Number

Key No.	Part No.	Description
1	803309-2	Screw Set Hex Soc. Locking 10-32 x 3/8
2	828504	Pivot
3	821421-2	O-Ring
4	826058	Shaft Stop
5	826357	Knob
6	805606	Ring Retaining
7	803899-5	Washer Thrust
8	823328	▲ • ‡ Spring Torsion
9	823298-1	Spacer Spring
10	823301	Shaft Pivot


^{*} Standard hardware - may be purchased locally

▲ WARNING: These items are important to the safety of this tool. Do not substitute common parts.

‡ CAUTION: See mechanical assembly caution on page 33.

 WARNING: Uncontrolled spring release or misinstallation of these parts may create a hazard unless repair is done by a qualified service technician. Repair service is available from authorized RIDGID Service Center.


Wiring Diagram

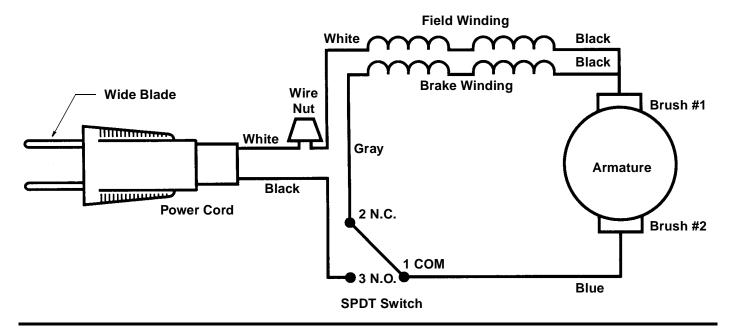

Troubleshooting Of Brake By Qualified Service Person Only

- 1. Check commutation at no load. If there is a heavy sparking which follows the curvature of the commutator replace the armature.
- 2. To continue trouble shooting, now unplug the power cord.
- 3. Install new brushes, especially if delayed come-in of brake has been noticed before failure.
- 4. Check brake circuit for continuity: Remove motor cap and brushes. Use ohmmeter to check continuity from brush terminal to brush terminal. If open, locate exact place using ohmmeter. As indicated by test, tighten connection, replace field assembly, or replace switch.
- 5. After repair, check direction of blade rotation vs. guard arrow.

Motor Parts List for RIDGID 10 Inch Miter Saw Model Nos. MS10600

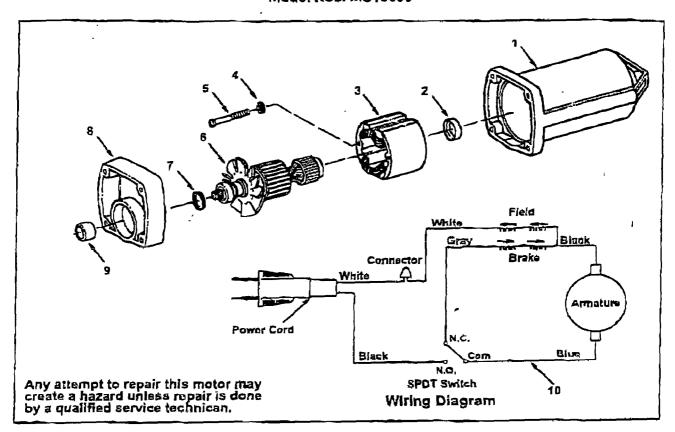

When ordering repair parts, always give the following information as shown in this list:

- 1. The part number
- 2. The part name

- The model no.
 The name of item

Always order by part number - Not by key number

Motor Number 829512-1

Key No.	Part No.	Description
7	829691	Housing Motor
2	326023	Sleeve
3	824988-5	Field
4	114603	Lockwasher Ext #10
5	808380-13	Scrow Pan Hd. #8 x 2-1/4
6	824986-8	Armature Asm w/Bearings
7	821421-5	Ring "O"
8	828724	Housing Gear
9	818682	Bearing Needle HK0910
10	823264-8	Lead Blue
_	509241	Greese (Not Illustrated)

^{*} Standard Hardware Item - May be Purchased Locally