




LIVE THE BRAAI LIFE

## CITI CHEF 50

MODEL No: 20162

28/37/50 mbar

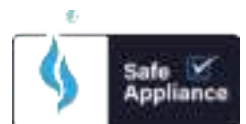

# USER INSTRUCTIONS

GB DE DK ES FR IT NL NO PL SE SI



NOTE! PRODUCT MAY VARY FROM ILLUSTRATIONS

503-0623 LEV14

**CAUTION**  
For Outdoor use only!



This appliance may not be used in an exterior enclosed balcony, porch or entertainment area!

**IMPORTANT**

Read these instructions for use carefully so as to familiarize yourself with the appliance before connecting it to its gas container. Keep these instructions for future reference.

## 1. Introduction

- This appliance has been designed to be used for outdoor cooking, specifically on a patio.
- Various food types can be prepared on this appliance. The Citi Chef 50 is designed to utilize various cooking surfaces.
- Gas is supplied to the unit via a hose and regulator. The hose and regulator can be connected to a gas cylinder (Not supplied with the appliance).
- The unit is easy to switch on, and to operate (Described below in section 6) and the user can control the heat input with an adjustable valve.

## 2. General information

- This appliance complies with EN 498:2012, EN 484:2019 and SANS 1539:2017.
- This appliance may only be used with an approved hose and regulator (A 2.8kPa hose and regulator supplied with this unit in South Africa)
- **Warning:** Accessible parts may be very hot. Keep young children away.
- Gas appliances require ventilation for efficient performance and to ensure the safety of users and other persons in close proximity, therefore do not use the appliance in an unventilated area. It is intended for use outdoors only.
- Only to be used with a gas cylinder that does not exceed 500mm in height and 350mm in width (including the regulator).
- Read the instructions before using the appliance.
- **Use outdoors only!**

| Country of Use        | BE, CH, CY, CZ, ES, FR, GB, GR, IE, IT, LT, LU, LV, PT, SK & SI |             | PL                                       | BE, CY, DK, EE, FR, FI, HU, IT, LT, NL, NO, SE, SI, SK, RO, HR, TR, BG, IS, LU, MT, & ZA | AT, CH, DE & SK        |
|-----------------------|-----------------------------------------------------------------|-------------|------------------------------------------|------------------------------------------------------------------------------------------|------------------------|
| Appliance Categories  | I <sub>3+</sub> (28-30/37)                                      |             | I <sub>3B/P</sub> (37)                   | I <sub>3B/P</sub> (30)                                                                   | I <sub>3B/P</sub> (50) |
| Allowable gasses      | Butane-G30                                                      | Propane-G31 | Butane-G30, Propane-G31 or their mixture |                                                                                          |                        |
| Gas Pressure          | 28~30 mBar                                                      | 37 mbar     | 37 mbar                                  | 28~30 mbar<br>(2.8 kPa for South Africa)                                                 | 50 mbar                |
| Jet Number (mm)       | 0.95                                                            |             | 0.91                                     | 0.95                                                                                     | 0.85                   |
| Nominal Usage         | 270 g/h                                                         |             |                                          |                                                                                          |                        |
| Gross nom. heat input | 3.7 kW                                                          |             |                                          |                                                                                          |                        |

| Gas Supply Sources | An approved hose and regulator connected to a refillable gas container not exceeding 9kg and complying with local regulation in force |
|--------------------|---------------------------------------------------------------------------------------------------------------------------------------|
|--------------------|---------------------------------------------------------------------------------------------------------------------------------------|

| Country Name and Abbreviations |                     |                  |                   |                  |
|--------------------------------|---------------------|------------------|-------------------|------------------|
| AE = United Arab Emirates      | AL = Albania        | AT = Austria     | BE = Belgium      | CH = Switzerland |
| CZ = Czech Republic            | DE = Germany        | DK = Denmark     | ES = Spain        | FI = Finland     |
| FR = France                    | GB = United Kingdom | GR = Greece      | HR = Croatia      | IT = Italy       |
| JP = Japan                     | KR = Korea          | NL = Netherlands | NO = Norway       | PL = Poland      |
| PT = Portugal                  | RO = Romania        | RU = Russia      | RS = Serbia       | SI = Slovenia    |
| SK = Slovakia                  | SE = Sweden         | TR = Turkey      | ZA = South Africa |                  |

### 3. Safety Information

#### Hose

- **This appliance may only be used outdoors.**
- A hose and regulator is supplied with this appliance (South Africa Only)
- The hose must be checked for wear or damage before every use and before connecting to the gas container.

- Do not use the appliance if it has a damaged or worn hose. Replace the hose.
- Do not use the appliance if it is leaking, damaged or which does not operate properly.

#### Gas Container

- Only use a cylinder that is approved by your countries regulations.
- Ensure that the gas container is fitted or changed in a well-ventilated location, preferably outdoors, away from any sources of ignition such as naked flames, pilots, electric fires and away from other people.
- Keep gas containers away from heat and flame. Do not place on a stove or any other hot surface.
- Gas cartridges/refillable cylinders are to be used only in the upright position so as to ensure proper fuel withdrawal. Failure to adhere to this may cause liquid discharge from the gas container resulting in a dangerous operating condition.
- Do not try to remove the cylinder whilst the unit is in operation.
- The gas cylinder must be disconnected from the appliance after use or when in storage.

#### Assembly and use

- Use only on a firm level surface.
- Do not move the appliance during use.
- Should the Heat Shield, Fat Pan or Burner Pan become damaged in such a way that permanent contact between the Heat Shield and the Fat Pan occurs during use, do not use the appliance. Return it to your Cadac stockist for repair.

- Ensure the appliance is used away from flammable materials. Minimum safe distances are: Above the appliance 1.2m. At the rear and sides 600mm. (See Fig. 2)

- **Caution:** When using the appliance, we recommend the use of protective gloves when removing and applying the dome, as the dome handle may become hot.

- **Caution:** Accessible parts may become very hot, the use of protective gloves is recommended.

- Keep young children away from the appliance.

#### Use Outdoors Only

- **NOTE!** If the appliance is used in windy conditions, the dome must be used as a wind shield, and placed in position as shown in Fig. 4.

- Do not modify the appliance. Modifying the appliance may be dangerous.

- **Warning:** Any cylinder not connected for use should not be stored within the appliance at any time.

- Turn off the gas supply at the gas cylinder after use.

#### Light back

- In the event of light back (where the flame burns back and ignites inside the burner or venturi housing), immediately turn off the gas supply by firstly closing the control valve on the gas container and then the appliance valve. After the flame is extinguished, remove the regulator and check the condition of the seal; replace the seal if in doubt. Re-light the appliance as described in Section 6 below. Should the flame persistently light back, return the product to your authorised CADAC repair agent.

#### Leaks

- If there is a leak on your appliance (smell of gas), immediately close the control knob on the gas cylinder. If you wish to check for leaks on your appliance, do it outside. Do not try to detect leaks using a flame; use soapy water.
- The correct way is to smear the joints with soapy water. If a bubble or bubbles form then there is a gas leak. Immediately turn off the gas supply firstly by closing the control valve on the gas container and then the appliance valve. Check that all the connections are properly fitted. Re-check with soapy water. If a gas leak persists, return the product to your CADAC dealer for inspection / repair.
- Check for leaks on the tailpiece by the valve and on the cylinder regulator fitting with gas open on cylinder but not open or switched on by the appliance control knob.



Fig. 1

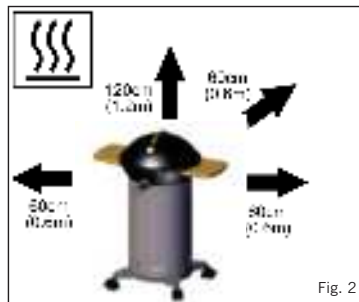


Fig. 2

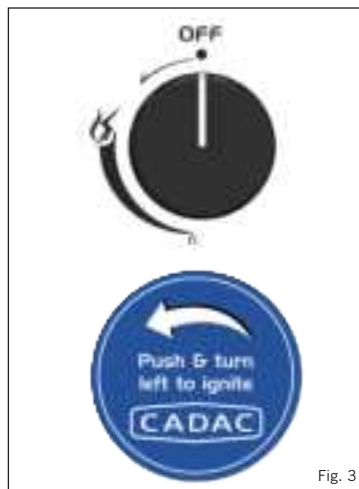


Fig. 3



Fig. 4



#### Flame visibility check

- It is important to check that the flame is still burning once you have lit your appliance.
- To check for flame visibility, there is a visual slot on the BBQ grid. Flame visibility can also be viewed through the grid slots.
- For easy visibility, place the visual slot at the front (as shown).

## 4. Combos

### Citi Chef 50 BBQ Combo (Product Code: 20162-20)

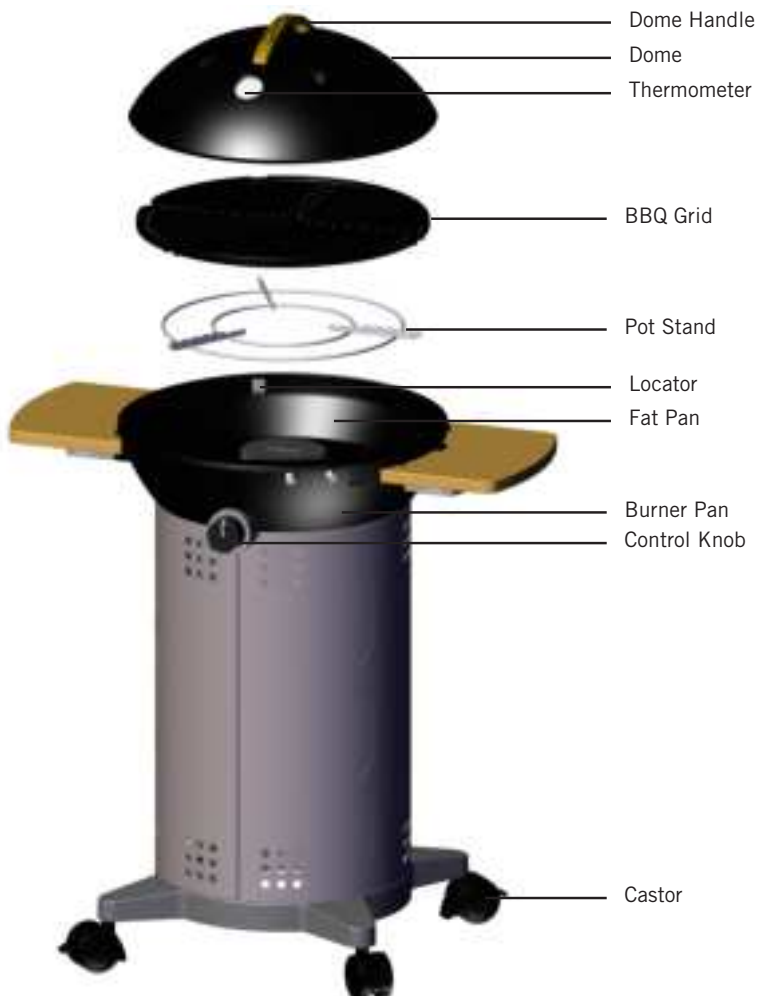


Fig. 6a

## 5. Fitting and Changing the Hose and Gas Cylinder

- **NOTE!** When installing the tailpiece, ensure it is held straight while tightening the tailpiece nut, in order to prevent a possible gas leak. Tighten with a suitable spanner. (Fig. 10)
- I 3B/P (30), I 3B/P (37) and I 3+ (28-30/37) Appliance categories: Fit the valve tailpiece onto the valve by screwing it on in an anti-clockwise direction. Push an approved hose onto the valve tailpiece until it is properly seated. On the other end, attach a suitable low pressure regulator (I3B/P (30) : 30 mbar G30/G31 configurations regulator; I3+(28-30/37): 28–30 mbar G30 regulator or 37 mbar G31 regulator); I3B/P(37): 37 mbar G30/G31 configurations regulators). Again making sure that the hose is well seated. The type of hose used shall comply with the relevant EN standard and local requirement. In South Africa the regulator used must comply with SANS 1537.
- I 3B/P (50) Appliance category: Screw a Hose with the correct threaded fittings on each end, onto the left hand ¼" BSP thread of the Valve. Attach a suitable 50 mbar G30/G31 low-pressure regulator on the other end of the hose. The hose used must comply with DIN 4815 part 2 or equivalent.
- The hose length should be no less than 800mm and shall not exceed 1.5m. Check the manufacture date on the hose and replace when necessary or when national regulations require it.
- Do not twist or pinch hose. Ensure the hose does not come into contact with any surfaces that would become hot during use.
- Before fitting the regulator to a gas container, ensure that the seal on the regulator is in position and in good condition. This should be done with every connection and before every use.
- Before fitting your gas cylinder, ensure that the valves are all in the "OFF" position by turning the control knob clockwise to its stop.
- Ensure that the gas container is fitted or changed in a well-ventilated location, preferably outdoors, away from any source of ignition such as naked flames or electric fires and away from other people.
- Making sure that the gas container is kept upright, screw the regulator onto the container until it is fully engaged. Hand-tighten only.
- If there is a leak on your appliance (smell of gas), close the cylinder valve immediately and follow the procedure to detect and stop a leak under Section 3. If you wish to check for leaks on your appliance, do it outside using soapy water only, which is applied to the joints. A formation of bubbles will indicate the gas leak.
- Check that all the connections are securely fitted and re-check with soapy water. If you cannot rectify the gas leak, do not use the appliance. Contact your local CADAC stockist for assistance.
- When changing a gas container, firstly close the container valve (if fitted) and then turn the control knob clockwise to its stop position.
- Ensuring that the flame is extinguished, unscrew the regulator. Refit a full container following the same precautions as described above.



Fig. 10

## 6. Lighting the appliance

### Precautions to observe before lighting.

- After prolonged storage, inspect the air holes in the valve cover for insects, which may affect gas flow. Inspect the inlet of the venturi for insects. After checking, refit all components into the prescribed position.

- **Use this appliance only on a firm level surface.**

### Using the control knob

The control knob is fitted with two positive stop positions, one at low, and one at Ignite / High. This limits the adjustment of the flame to between these two points.

### Lighting up using the Piezo Igniter

- To light up the appliance using the piezo igniter, push in and turn the control knob in an anti-clockwise direction until you hear a click. If the gas does not ignite on the first spark, push in, and turn the control knob fully clockwise. Try again, by pushing in and turning the control knob anti-clockwise until you hear a click. If the gas has not ignited in the first two to three seconds you should close the control valve by pushing in the control knob, and turning it fully clockwise. Wait approximately thirty seconds to let any accumulated gas within the burner pan assembly escape. Repeat the above process if necessary until the flame ignites. The flame should normally light up within the first one or two seconds.

### Lighting up using a BBQ lighter

- When starting cold, the appliance may be lit from the top prior to fitting the desired cooking surface onto the fat pan. When lighting up a hot appliance however, it is recommended that this be done by sticking barbecue lighter through one of the Vent Holes underneath the Burner, until it is in line with the burner (DO NOT place the BBQ lighter through the large hole directly underneath the burner). Ignite the BBQ lighter. Whilst the BBQ lighter is lit, push in and turn the control knob anti-clockwise to light the burner.

### General

- Once the appliance is lit, the flame intensity may be adjusted by turning the valve knob anti-clockwise to reduce the flame, or clockwise to increase the flame.
- The fully closed position is at the furthest clockwise position. To rotate the valve from the fully closed position it is necessary to first depress the knob just enough to move out of the lock mechanism. While holding the knob in, turn it in an anti-clockwise direction. Once the spindle has moved out of the lock position it is no longer necessary to keep the control knob depressed and it can be rotated freely to the desired flame setting.
- When cooking food with a high fat content, flaring may occur if the selected heat setting is too high. Should this happen, turn the heat down until the flaring ceases.

- Do not move the appliance when in use as, apart from being an unsafe practice, to move the appliance whilst lit, may cause flaring.
- After use, first close the valve on the gas container (where applicable). When the flame has extinguished, close the valve on the appliance by pushing in and turning the control knob fully clockwise.

## 7. Using the Appliance and its cooking surfaces

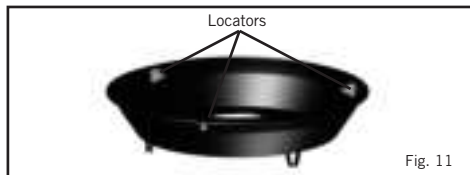


Fig. 11



8910-101

Fig. 13

### **BBQ Grid** (Fig. 13)

- The BBQ grid locates on three die-cast locators in the fat pan (Fig. 11).
- Available as an additional accessory and spare
- Ceramic non-Stick coated cooking surface
- Do not use metal cooking utensils as this will cause damage to the ceramic non-stick coating.
- Ideal for grilling meat, fish, chicken and vegetables
- A convenient carry bag is included with this cooking surface.
- **WARNING:** We recommend the use of gloves when handling the BBQ Grid.



8910-102

Fig. 15

### **Chef Pan** (Fig. 15)

- The Chef Pan locates on three die-cast locators in the fat pan (Fig. 11).
- Available as an additional accessory and spare (not included)
- Ceramic non-Stick coated cooking surface.
- Do not use metal cooking utensils as this will cause damage to the ceramic non-stick coating.
- **WARNING:** When pre-heating, do not use the Chef Pan on a high flame setting with the dome for more than 15 minutes as this can damage the non-stick coating and the Pan .
- **WARNING:** We recommend the use of gloves when handling the Chef Pan.



8910-108

Fig. 16

### **BBQ @ Plancha** (Fig. 16)

- The BBQ Plancha gives maximum versatility with open grill BBQ on one side and flat grill pan on the other.
- Available as an additional accessory and spare (not included)
- The ceramic coated top is easy to use and clean.
- A convenient carry bag is included.
- **WARNING:** We recommend the use of gloves when handling the BBQ Plancha.



8910-105

Fig. 17

### **Enamel Roast Pan** (Fig. 17)

- Available as an additional accessory and spare (not included)
- Porcelain enamel-coated cooking surface
- Ideal for preparing roast chicken, lamb, vegetables, etc.
- Porcelain enamel-coated cooking surface
- **WARNING:** We recommend the use of gloves when handling the Roast Pan.



8910-110

Fig. 18

### **Pizza Stone** (Fig. 18)

- Available as an additional accessory and spare (not included)
- 10mm thick baking stone that can withstand temperatures of up to 500°C
- Includes nickel-plated wire holder.
- **WARNING:** We recommend the use of gloves when handling the baking Stone. Please read pizza stone manual carefully before use.



8910-SP003

Fig. 19

### **Pot Stand** (Fig. 19)

- Nickel-plated pot stand, to support most standard size pots.
- Available as an additional accessory and spare.
- **WARNING:** We recommend the use of gloves when handling the Pot Stand.



### Grill2Braai (Fig. 19.1)

- Available as an additional accessory and spare (not included).
- The Grill2Braai locates on three die-cast locators in the fat pan (Fig. 11).
- Ceramic non-Stick coated cooking surface.
- Do not use metal cooking utensils as this will cause damage to the ceramic non-stick coating.
- The flat half is ideal for cooking fish, breakfasts, and pancakes, whilst the ribbed half is ideal for grilling meat, fish, chicken, and vegetables.
- A convenient carry bag is included with this cooking surface.
- **WARNING:** We recommend the use of gloves when handling the Grill2Braai.

**IMPORTANT!** To ensure validity of your warranty, use only dedicated CADAC cooking surfaces

**NOTE!** Always use the wind shield if you use the appliance in windy conditions

## 8. General Maintenance

- The onus of maintaining this appliance solely rests on the consumer from date of purchase. This appliance does not require scheduled maintenance.
- Replacing a Blocked Jet:
- Your Citi Chef is fitted with a specific size jet to regulate the correct amount of gas.
- Should the hole in the jet become blocked, this may result in a small flame or no flame at all. Do not attempt to clean the jet with a pin or other such device as this may damage the orifice, which could make the appliance unsafe.
- **To replace the jet:** Pull the back panel out using the handle (Fig 20) Remove the dome, BBQ grid, pot stand and any other loose items from the appliance. Now unscrew the 3 screws from underneath the appliance as shown in Fig 21, this will loosen the burner. Now remove the burner gently by lifting it out (Fig22), NOTE that it is attached to the piezo ignition wire. DO NOT yank the burner out otherwise you risk snapping the piezo ignition wire from your appliance. Gently lay the burner to the side, this will reveal the jet (Fig 23). The jet can now be removed using a suitable spanner. Do not use pliers on the jet as this may damage the jet, making it unusable or impossible to remove. Screw the new jet into the valve. Do not over tighten as this may damage the jet.
- Reverse the above procedure to re-assemble the unit.
- Replacing the Hose:
- The fitting of a hose is described in Section 4 - Fitting and replacing the hose and gas cylinder.

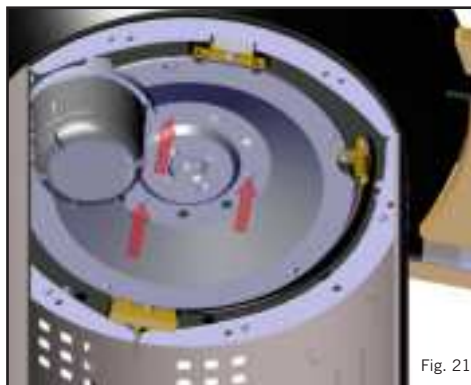




Fig. 22



Fig. 23

## 9. Cleaning

- **Note:** For Parts Reference (See Section 7)
- **BBQ:** Remove the fat from the moat at the bottom of the Fat Pan. Wash the grid in warm water with non-abrasive detergent after wiping off any excess fat left after cooking.
- **BBQ Lid:** Wash the BBQ Lid in warm water using a suitable non-abrasive detergent. Do not use sharp metal objects or abrasive detergents, as this will damage the surface coating.
- **Note:** For stubborn stains, oven cleaner may be used.
- Care of Ceramic non-Stick Cooking surfaces:
- The ceramic non-stick cooking surfaces are coated with a ceramic non-stick coating that has been used with great success on some of the best cookware in the world. Nevertheless, taking care of it can help you to enjoy extra years of healthy, easy, ceramic non-stick cooking.
- Use only low or medium heat settings to help retain the valuable nutrients in the food and maintain the ceramic non-stick cooking surface.
- The ceramic non-stick coating can easily be damaged by the use of metal cooking utensils.
- **Important! It is recommended that only plastic or wooden utensils be used when cooking.**
- Do not overheat the ceramic non-stick cooking surfaces and always add a little cooking oil to the surface before use.
- **Always allow the ceramic non-stick surfaces to cool before immersing it in water.**
- The ceramic non-stick coating is perfectly safe in the dishwasher, but the ceramic non-stick surface is so easy to clean that a quick hand-wash does the trick. **The use of abrasive detergents is not recommended, as this will permanently damage the ceramic non-stick surface.**
- After cleaning recondition the surface with a light wipe of vegetable oil.
- After every use, remove the fat from the fat pan and clean as described for the BBQ above.

## 10. Storing and Carrying


- BBQ Lid fits on the rear of the bag with the support straps that are provided.
- Should the appliance operate abnormally after storage and all checks referred to in Sections 5 & 8 have not isolated any problem, the Venturi may be blocked. A blocked Venturi would be indicated by a weaker yellowish flame or no flame at all in extreme cases. Under these circumstances it will be necessary to remove the burner as described under Section 8 - general maintenance, and to check and thoroughly clean out any foreign matter which may have gathered in the venturi.

## 11. Returning the appliance for repair or service.

- Do not modify the appliance, as this could be dangerous.
- If you cannot rectify a fault by following these instructions, contact your local CADAC distributor for details on how to return the product for attention.
- Your CADAC Citi Chef is guaranteed by CADAC for a period of 5 years against factory fault.

## 12. Spares and Accessories

- Always use genuine CADAC spares as they have been designed to give optimum performance.

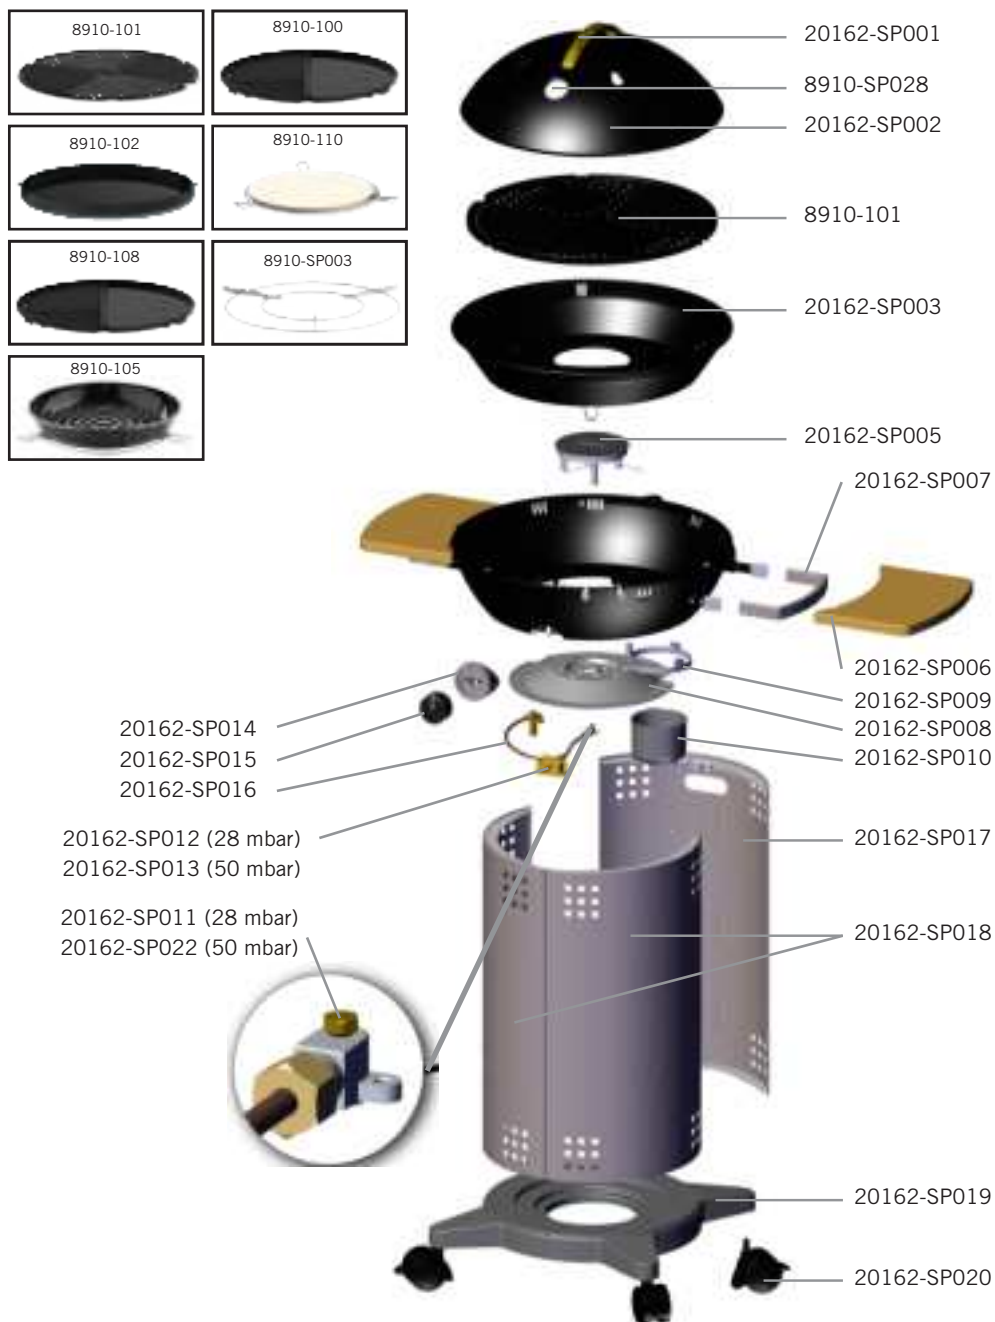



LIVE THE BRAAI LIFE

**CADAC INTERNATIONAL**

P.O. Box 43196,  
Industria, 2042 South Africa  
Tel: +27 11 470 6600  
Email: info@cadac.co.za  
www.cadacinternational.com

**CADAC UK**

1 Open Barn  
Backridge Farm Business Centre  
Twitter Lane, Bashall Eaves  
Clitheroe, BB7 3LQ, UK  
Tel: +44 333 200 0363  
Email: info@cadacuk.com  
www.cadacinternational.com

**CADAC NEW ZEALAND**

Riverlea Group (Pty) Ltd  
2A Maui Street, Pukete,  
Hamilton 3200, New Zealand  
Tel: +64 7 847 0204  
Email: sales@riverleagroup.co.nz  
www.riverleagroup.co.nz

**CADAC IRAN**

Robin Bazarganan Carin Co.  
Unit D, 6th Floor, Negin Zafar  
Building, No.1327,  
Shariati Street, Tehran, Iran  
Tel: +98 21 276 00 781  
Mail: info@cadac.ir

**CADAC MALAYSIA**

Katrin BJ SDN BHD (90816-M)  
No 12, Jalan TP2, Taman  
Perindustrian SIME UEP,  
47600 Subang Jaya, Selangor  
Darul, Ehsan, Malaysia.  
Tel (603) 8023 3939  
info@katrinbj.com

**CADAC MOZAMBIQUE**

Exclusive Brands Africa  
492 Avenida Namaacha  
Maputo, Mozambique  
Tel: +258 21 406254  
www.cadac.co.mz

**CADAC MONTENEGRO**

Cetinjski put bb,novi City  
kvart,zg.1,lokal 6  
81101 Podgorica, Monte Negro  
Tel: +38269020063  
Email: coca@t-com.me

**CADAC EUROPE**

Ratio 26, 6921 RW Duiven  
The Netherlands  
Tel: +31 26 319 7740  
Email: info@cadaceurope.com  
www.cadacinternational.com

**CADAC SCANDINAVIA**

Millarco International A/S  
Rokhøj 26  
8520 Lystrup, Denmark  
Phone: +45 87 43 42 00  
millarco@millarco.dk  
www.millarco.com

**CADAC AUSTRALIA**

CADAC-BBQ Pty Ltd, Australia  
Tel: +61 420 503 967  
Customer Care: 1300 135 011  
Email: info@cadacbbq.com.au  
www.cadacbbq.com.au

**CADAC DENMARK**

Camper Fritid  
Industrivej 11  
6640 Lunderskov, Denmark  
Tel.: +45 7558 5255  
Email: info@camper.dk  
www.camper.dk

**CADAC CHINA**

Room 807, Huayue International  
Building, No.255 Tiangao Road,  
South  
Yinzhou business district,  
Ningbo, China  
Tel: +86 574 87723937  
Email: info@cadac.com.cn

**CADAC U.A.E.**

Supreme Impex General Trading  
LLC Office No. 1801-7 Latifa  
Tower Sheikh Zayed Road  
Dubai, UAE

**CADAC HONG KONG**

Everything Under The Sun  
902 Horizon Plaza, 2 Lee Wing Street,  
Ap Lei Chau, HK  
Tel: +852 2554 9088  
Email: info@everythingunderthesun.com.hk  
www.everythingunderthesun.com.hk

**CADAC GERMANY**

Ratio 26, 6921 RW Duiven  
The Netherlands  
Tel: +31 26 319 7740  
Email: info@cadaceurope.com  
www.cadacinternational.com

**CADAC SOUTH EAST EUROPE**

Bulevar oslobodjenja 285  
Tel: +381 11 339 2700  
Email: sinisaj@cadac.rs  
www.cadac.rs

**CADAC ISRAEL**

Chagim  
PO.Box 8122819  
Hayarden 13, Yavne, Israel  
Tel: +972-73-2595666  
Email: grill@i-berman.co.il

**CADAC SAUDI ARABIA**

Noble Ventures  
34 Ibn Saad Al Kathib Street,  
Khalidiya,  
Jeddah, 21435,  
Kingdom of Saudi Arabia  
info@nobleventures.com

**CADAC ZIMBABWE**

Exclusive Brands Africa  
Unit 8 Birkenhead Park  
43 Josiah Chinamano Street  
Belmont, Bulawayo  
Tel: +263 971 740 (Bul)  
Tel: +263 479 2564 (Har)  
www.cadac.co.zw

**CADAC SWEDEN & NORWAY**

KAMA FRITID AB  
0046 36 353700  
info@kamafritid.se

**CADAC FRANCE**

Le Viallon, 42520 Veranne  
France  
Tel: +33 4 74 78 13 65  
Email: info@cadaceurope.com  
www.cadacinternational.com

**CADAC USA**

50 Mountain View Road  
Warren, NJ, 07059  
Tel: 908 604 0677  
Email: cadacusa@yahoo.com

**CADAC KOREA**

Suite 502 Pika Bldg.  
Hogye-Dong, Anyang-Si,  
Gyeonggi-Do, South Korea  
Tel: +82 31 427 5466  
cadackorea@gmail.com

**CADAC ITALY**

Brunner SRL/GMBH  
via Buozzi, 8  
39100 Bolzano (Italy)  
Tel: +39 0471 542900  
Email: info@brunner.it  
www.brunnerinternational.com

**CADAC ZAMBIA**

Exclusive Brands Africa Limited  
7225A Kachidza Road  
Light Industrial Area  
Lusaka, Zambia  
Tel: +260 211 842015  
Tel: +260977 345034  
Email: info@ebagrp.com

**CADAC FINLAND**

OY KAMA  
00358 207920 310  
info@kamafritid.fi