



# Denon DJ LC6000 Prime Quick-Start Guide



# Setup

## Installation, Firmware and Setup

The Denon DJ LC6000 Prime is a class compliant “Serato Official Accessory”, for Mac & Windows.

Each Denon DJ LC6000 Prime media player used with Serato DJ Pro in Internal mode, requires a USB cable, a spare USB port, and must be connected alongside Serato DJ primary hardware.

If you don’t have enough USB ports available to you, you may be able to connect your LC6000 to a powered USB hub. It is important to always connect your Serato DJ primary hardware directly to your computer, where possible.


It’s also important to ensure you have the latest firmware installed for your Denon DJ LC6000 Prime, which can be found on Denon’s website, [here](#).

**Please ensure you have the latest version of Serato DJ Pro installed:**


[Click here to download Serato DJ Pro](#)

1. Connect your Serato DJ hardware as per normal into an available USB port on your computer
2. Connect the LC6000 to your computer via USB cable or USB hub.
3. Open Serato DJ Pro
4. Press the DECK SELECT (SHIFT + SLIP), after which the LC6000 Performance Pads light up to show the available decks for connection.
5. Press the Performance Pad that corresponds to the deck you’d like to assign (either 1 / 2 / 3 / 4).
6. Set the virtual deck in Serato DJ Pro to INT (Internal) mode.

## Overview

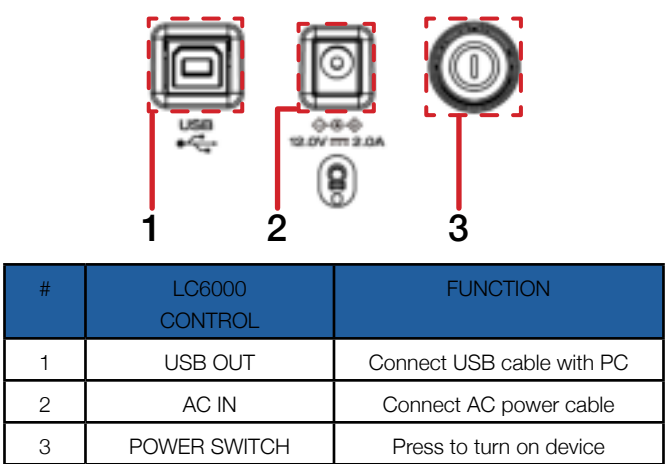

# Overview

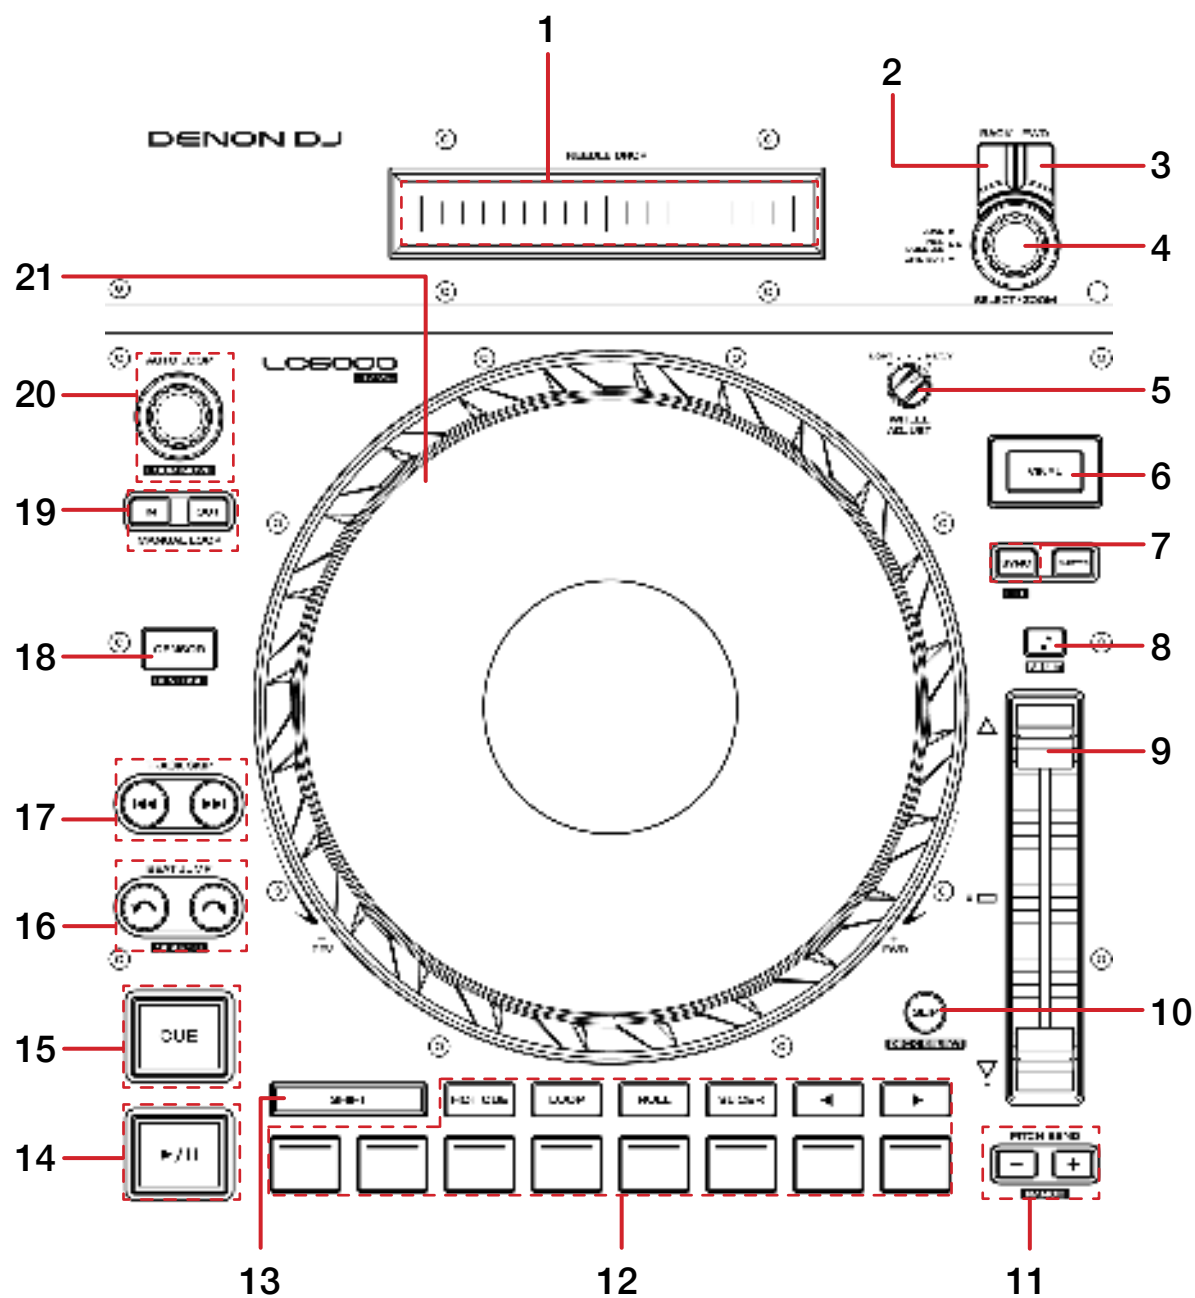


# Overview

#	LC6000 CONTROL	FUNCTION	SHIFT FUNCTION
1	NEEDLE DROP	Jump to the desired position in the track loaded to the deck	-
2	BACK	Press BACK to navigate back through crate/library panels	-
3	FWD	Press FWD to navigate forward through crate/library panels	-
4	BROWSE	Turn to scroll library list, press in to load selected track to deck	Fast library scroll, double press for Instant Double
5	WHEEL ADJUST	Adjust between light & heavy wheel resistance	-
6	VINYL	Toggle between vinyl and CDJ platter mode	-
7	SYNC	Press to turn Sync On for controlled deck	Press to turn Sync Off
8	KEYLOCK	Toggle Keylock on/off	Reset key
9	TEMPO FADER	Adjust Tempo	Ignore Tempo adjustment
10	SLIP	Toggle Slip mode On / Off	Deck Select
11	PITCH BEND	Bend pitch up (+) or down (-)	Toggle pitch range up (+) or down (-) with options 8/16/50
12	PERFORMANCE PADS	<a href="#">SEE PERFORMANCE PADS SECTION FOR MORE INFORMATION</a>	-
13	SHIFT	Shift modifier	-
14	PLAY / PAUSE	Toggle Play / Pause on selected deck	Stutter Play
15	CUE	Set/Recall temp cue	Load previous track
16	BEAT JUMP	Beat Jump backwards (left) / Beat Jump forwards (right)	Half Beat Jump backwards (left) / Double Beat Jump forwards (right)
17	TRACK SKIP	Load previous track (left) / Load next track (right)	Hold to rewind (left) / or Fast forward (right) loaded track
18	CENSOR	Toggle Censor	Toggle reverse track playback
19	LOOP IN / OUT	Set Loop In point / Set Loop Out point (press either again to edit respective parameters)	4 Beat Autoloop / 8 Beat Autoloop
20	AUTO LOOP	Press to activate Autoloop, turn left to halve loop length, turn right to double loop length	Turn left to shift loop left, turn right to shift loop right
21	JOG WHEEL / PLATTER	Adjust/Scratch or Jog	Fast waveform skip

# Performance Pads

The Denon DJ LC6000 has 9 performance pads which can be used in nine different modes.

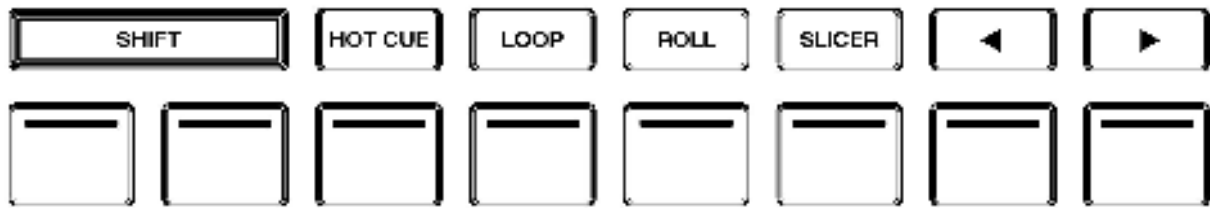

**HOT CUE mode:** In this mode, pads 1-8 add or trigger existing Serato DJ Pro Cue Points. Holding shift and pressing pads 1-8 will delete the Cue Points. If no Cue point is present on that slot/pad, pressing that pad will set a Cue point. Holding SHIFT while pressing a pad will clear the Cue point from that pad/slot.

*If Serato Flip is enabled:* The LEFT and RIGHT pads perform the following functions - Flip Record / Flip Start. With SHIFT - Flip Loop / Flip On/Off.

**CUE LOOP mode:** Press Hot Cue twice to enable Cue Loop mode. Triggering a Cue in this mode will also activate a loop. Loop size can be changed with the LEFT and RIGHT pads. Press SHIFT while triggering a Cue allows you to reloop.

**PITCH PLAY mode:** Hold SHIFT while pressing Hot Cue mode to enable Pitch Play mode. Press pads 1-8 to play Cue points over variable pitch ranges. See the 'Pitch Play' section for more information

**LOOP mode:** In this mode pads 1-8 trigger an Autoloop of varying sizes. Press the pad for a second time to exit an Auto Loop. Use the LEFT and RIGHT pads to halve or double loop size. Hold SHIFT + LEFT or RIGHT button to shift the loop either direction.

**SAVED LOOP mode:** Press the Loop mode button twice to access Saved Loop mode. Press pads 1-8 to select and trigger the respective Saved Loop slots or save a new Loop (if slot is empty). Holding SHIFT while pressing pads 1-8 will retrigger the Saved Loop. Press the LEFT and RIGHT holding pads 1-4 activates a saved loop or if the slot is empty saves the current loop. Press the LEFT and RIGHT pads to decrease Saved Loop size.

**ROLL mode:** Holding pads 1-8 will activate a Loop Roll of different sizes. Release the pad to disengage the Loop Roll. Press the LEFT and RIGHT pads to halve or double the loop roll size.

**SAMPLER mode:** Press SHIFT and Roll mode to access Sampler mode. Pads 1-8 to trigger samples loaded into the Serato DJ Pro Sampler. Hold SHIFT while pressing a pad to stop the sample playback once triggered, or load a sample to the respective Sampler slot if no sample is loaded. Use LEFT and RIGHT pads to cycle forward and backwards through the Sampler Output options

**SLICER mode:** In this mode a specified range (or domain) is divided into eight equal sections, and these eight sliced sections are assigned to the respective performance pads (1-8), and can be triggered by pressing them. The domain shifts as the track duration elapses. Use the Parameter left & right buttons to decrease or increase the quantize size, or hold SHIFT while pressing them to decrease or increase the domain size.

**SLICER LOOP mode:** Press Slicer mode twice to enter Slicer Loop mode. This is a fixed Slicer Domain or 'loop'. Pads 1-8 will trigger the slices. Use LEFT and RIGHT pads to change the quantize size, using SHIFT while doing so will change domain size.

# Pitch Play

Holding SHIFT and pressing the SAMPLER performance pad mode button on the Denon LC6000 will enable Pitch Play mode. In this mode you can play Cue Points over variable pitch ranges.

There are 3 key ranges to choose from. The following tables show pitched key ranges (in Semitones) while using the 8 performance pads in Pitch Play mode. To toggle between key ranges press the Parameter left & right buttons.

The root key pad (0) is always lit white, which will play the cue point at its regular pitch.

Pressing Parameter left & right while holding SHIFT will shift up or down a single semitone. In Pitch Play mode, pressing a pad will pitch the currently selected cue point up or down the following ranges:

## Up Range: (Up 7 Semitones)

+4	+5	+6	+7
0	+1	+2	+3

## Middle Range: (Up 3/Down 4 Semitones)

0	+1	+2	+3
-4	-3	-2	-1

## Down Range: (Down 7 Semitones)

-3	-2	-1	0
-7	-6	-5	-4

When Pitch Play mode is first enabled, the middle range is selected. If a new track is loaded, key mode will default to middle range.

PITCH PLAY can only pitch one Cue point at a time. To change the selected Cue, hold the SHIFT button and press a performance pad where the cue point you want to select would be (as shown in the CUES performance pad mode). While holding SHIFT, press the corresponding performance pad for:

Cue 1	Cue 2	Cue 3	Cue 4
Cue 5	Cue 6	Cue 7	Cue 8

The selected cue point defaults to Cue Point 1 on track load, even if instant doubled. If a pad with no cue point is selected, then a new cue point will be created. Deleting a cue point however, is not possible in PITCH PLAY mode. Range is remembered if you choose another pad mode, then go back. If a new track is loaded, the mode will default to middle range.

**NOTE:** Pitch Play mode is available once the Pitch 'n Time DJ Expansion Pack has been activated by signing into Serato DJ Pro. Make sure "Enable Pitch 'n Time DJ" is checked in the Expansion Pack tab of the SETUP screen.

# Beat Jump

To activate Beat Jump, open the Setup screen and under the DJ preferences tab turn on “Show Beat Jump Controls”.



When you close the Setup screen you will see Beat Jump controls underneath the existing Auto Loop values on each deck. Checking this box will turn on Beat Jump features in the deck area and let you control Beat Jump from on your supported Serato DJ Pro hardware.



When the Beat Jump option is enabled, the LOOP ROLL performance pad mode will use the bottom row of 4 pads (pads 5-8) as Beat Jump controls. This is designed to mirror the change in deck Auto Loop area (from 8 Auto Loop sizes to 4 Auto Loop sizes + Beat Jump controls).

## MIDI

The MIDI feature in Serato DJ Pro provides the ability to remap Serato DJ Pro software functions to your primary Serato controller, interface or mixer. You can also assign controls to a secondary MIDI controller to further enhance your performance.

**[For more information on MIDI mapping with Serato DJ Pro click here](#)**

To remap your supported Serato device, open the SETUP screen and click the MIDI tab. If your Serato device supports hardware remapping, it will show up in the MIDI Devices list at the top.

Select your connected device from the MIDI Devices list and make sure the “Allow Serato Hardware Remapping” option is checked.





Once checked, the MIDI assign button at the top of the screen will become available for you to start remapping.

You can save, edit or delete MIDI presets in the MIDI tab of the SETUP screen. Clicking ‘Restore Defaults’ will erase any custom mappings for all connected devices and revert their functions back to default.





# Help

## Show Tooltips





Click on the  button in the upper right-hand corner of Serato DJ Pro, then  to enable tooltips. Tool tips provide a handy way to learn the various features of Serato DJ Pro.

Move the mouse over a section of the screen to bring up a context sensitive tool tip.

## Watch Tutorials

Click on the  button in the upper right-hand corner of Serato DJ Pro, then  to launch your default internet browser and watch tutorials, to help you get familiar with Serato DJ Pro.

## Get Support

Click on the  button in the upper right-hand corner of Serato DJ Pro, then  to launch your default internet browser and navigate to the Serato DJ Pro knowledge base, where you can find helpful articles and guides on Serato DJ Pro. Alternatively, type in the   box, with keywords, to search the Serato DJ Pro knowledge base for specific, related topics.