

User Guide

Monitoring unit
Type **PR-OCTO**

IoT Enabler for remote control and tracking of refrigeration equipment



Content	
1. Introduction.....	2
2. Layout	2
3. Compatibility.....	4
4. Connections and wires	4
5. Choosing the position in the cooler	5
6. Installation in the coolers	7
7. Prosa mandatory settings.....	8
8. Technical specification.....	8
9. Dimensions	9
10. Warnings.....	10

1. Introduction

The PR-OCTO device is an IoT Enabler specifically designed for cooling applications like bottle coolers, ice cream cabinets and other refrigeration type of equipment. This Enabler allows connectivity and access to the Alsense™ Cloud solutions from Danfoss.

Electronic thermostats, in general, by monitoring the temperatures and states related to the equipment, control the compressor and fan relays and generate warnings and alarms. By means of a wired connection, PR-OCTO can obtain from the thermostats diagnostic and alarm data relating to the equipment, or create new ones. Thanks to the presence of a modem and an M2M SIM on board, PR-OCTO communicates with the Alsense™ monitoring platform through the mobile network, transmitting the collected data. PR-OCTO also scans the mobile network and nearby WiFi HotSpots to determine its position and transmit it to Alsense™.


If in Alsense™ the refrigeration system is located in a position other than that transmitted by PR-OCTO, an alarm is notified on the monitoring platform. Authorized personnel can access Alsense™ to view active alarms and decide if PR-OCTO has to lock the operation of the refrigeration system.

Danfoss guarantees a continuous after-sales maintenance of the PR-OCTO devices as they can be updated remotely (FOTA) or on site via the mobile app.

2. Layout

Figure 1 and Figure 2 illustrate the layout of the PR-OCTO device.

Fig. 1: Side A

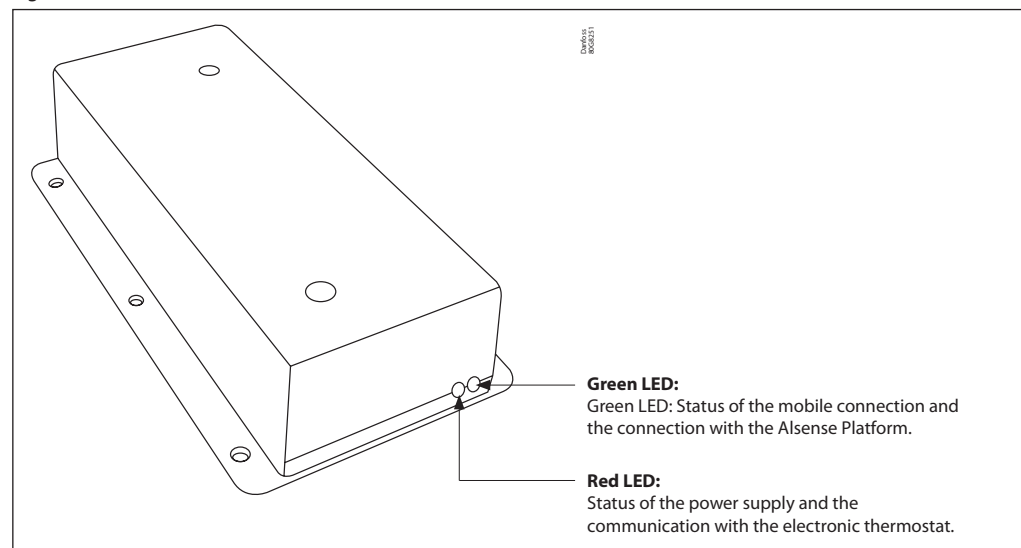

See Table 1 for details on the operation.

Fig. 2: Side B

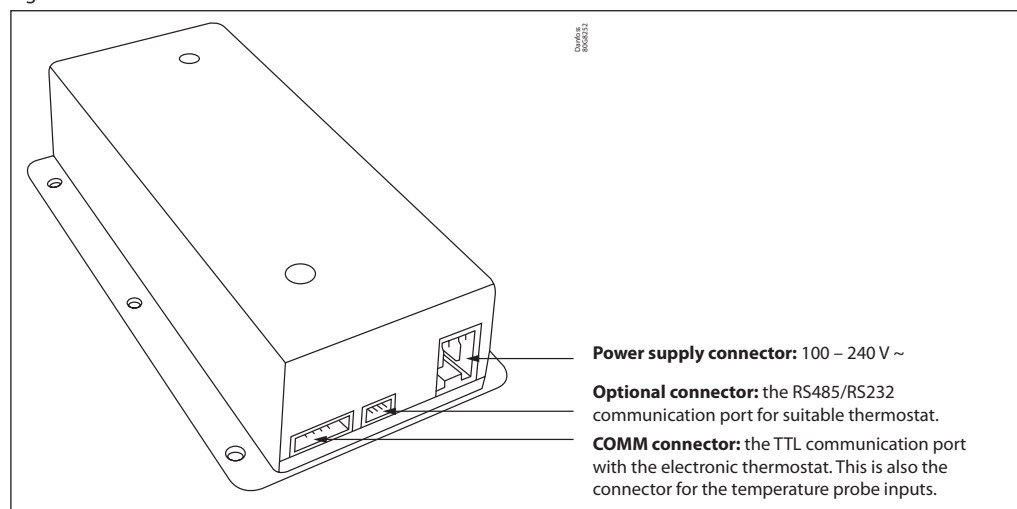


Table 1: LED operation details

RED LED OFF	The device is not correctly powered.
RED LED blinking	The device is powered and the communication with the electronic thermostat is not established yet.
RED LED ON	The device is powered and the communication with the electronic thermostat is correctly established.
RED LED fast blinking	The device is powered while the communication with the electronic thermostat has been interrupted.
GREEN LED OFF	The modem is not running
GREEN LED fast blinking	The modem is not registered to the network
GREEN LED blinking	The modem is registered to the network

3. Compatibility

The PR-OCTO device gives the possibility to execute the lock command and to collect the diagnostic information only in conjunction with an electronic thermostat.


The current version of the PR-OCTO includes the compatibility with the thermostats listed in Table 2.

Table 2: Compatible electronic thermostats

Manufacturer	Models
Danfoss	ERC111, ERC112, EETa
Eliwell	EWPLUS400, EWPLUS961, EWPLUS974, EWPLUS974 Smart, EWPLUS978
Carel	PJP4C0HG00 (PYUG3R05R3, PYKM1Z051P), PZPU family (es. PZPUCOMB03K, PZPUCOMB06K), PYHB1R055S (PYFZ1Z056M), PZHBC0H00V, PYHB1R057F (PYHB1R05E9), PJP7C0HG00

4. Connections and wires

Fig. 3: Wiring details

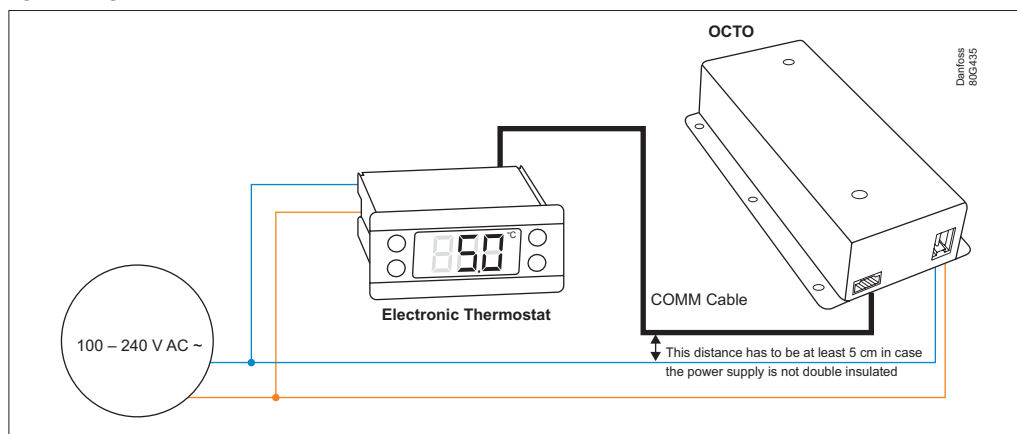

The PR-OCTO requires two connections, one for the power supply, the other with the electronic thermostat.


The power supply must be shared with the electronic thermostat: the PR-OCTO must be powered on only when the thermostat is also powered on. If the PR-OCTO is powered on when the thermostat is off, a "Controller communication failure" alarm is raised after 60 minutes.

Note: Neither the cables nor the connectors are included in the PR-OCTO package.

For the POWER SUPPLY connector of the PR-OCTO, either two standard fast-on connectors or one connector with screw terminal can be used. In Fig 4, illustrates the Lumberg 3611 02 K1, an easy plug connector with lift clamp and protection against misplacing and fast assembling. Neither the easy plug connector nor the standard fast-on connectors are included in the PR-OCTO package.

Note: If the power supply cable is not double insulated, it must be physically separated from the COMM cable.

Fig. 4: Two possible OCTO terminations for the power supply cable.
The one on the right is the Lumberg 3611 02 K1.

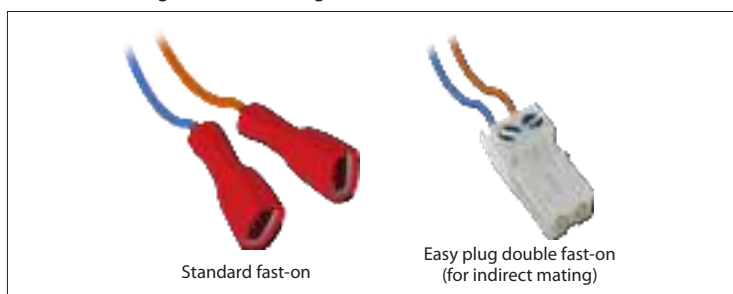

Concerning the COMM Cable (the communication cable between the PR-OCTO and the electronic thermostat) a specified cable must be used depending on the specified thermostat.

The COMM Cable could be either assembled by the cooler manufacturer or could be purchased from Danfoss (see COMM table for details).

Table 3: COMM cables for Danfoss controllers

Controller	Length	Code no.
ERC11x	0.6 m	080G3396
ERC11x	2 m	080G3388
ERC11x	4 m	080G3389
EETa	2 m	080N0330
EETa	4 m	080N0331

For other options on cabling and connection to different controllers, please contact Danfoss.

5. Choosing the position in the cooler

The most important requirement for the OCTO installation is to find the location inside the cooler where the mobile network signal is stronger and the device protected. The diagram below suggests the recommended positions for coolers:



On standard visi coolers the best area is inside the canopy, since the canopy usually does not have metal plates that could decrease the mobile network signal.
On lean cooler, since the lack of the canopy and the presence of metallic plates all around the cooler, the OCTO can only be installed outside the cooler, in the back area, next to the top.

Note: In case of installation on the back side of the cooler, the OCTO has to be protected with an additional box to protect people from electric shock.

Mobile application (recommended)

Danfoss has developed a mobile application for Android and iOS that can be used also for check the best position where to install the OCTO in the cooler. This is the suggested way to check the best position to install the PR-OCTO into the cooler.

You can find more details at: [User Guide for ProsaLink mobile app](#)

PC application

Danfoss has developed a specific PC software to help discovering the right position of the OCTO in the cooler. To exploit such software, follow these steps:

- Step 1: Download the VBCTKSignalTester application from this URL: http://area.riservata.it/vbctksignaltester-1.0.0-setup-x86_32.exe
- Step 2: Install the VBCTKSignalTester application in a Windows PC.
- Step 3: Connect the 'Test Cable' (see Fig. 5) to the PC and to the OCTO.
- Step 4: Power on the OCTO (see Section 4 for the power supply cable).
- Step 5: Run VBCTKSignalTester and select the appropriate Serial COM port to which the 'Test Cable' is connected, as shown in Fig. 6a.
- Step 6: If the program shows "No Connection" as in Fig. 6b, try to change the COM port listed in the combo or check the cable connection.
- Step 7: When the system is finally connected to the device, it starts to display the Antenna Signal Level of the OCTO's internal antenna. Such level could be low (like in Fig. 6e), medium intensity (like in Fig. 6f) or almost the best signal level (like in Fig. 6d).
- Step 8: Try to change the position of the OCTO in the cooler in order to discover the highest possible Antenna Signal Level.
- Step 9: Power off the OCTO and disconnect the PC 'test cable'.

Fig. 5: PC Test Cable for monitoring the OCTO GPRS transmission signal level.

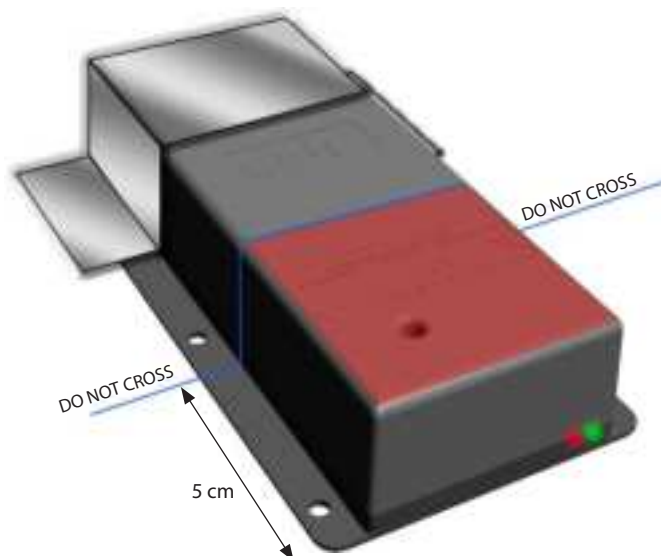


Fig. 6: VBCTKSignalTester application screenshots.



Once discovered the best position with respect to the Antenna Signal Level, it is possible to decide if it is the case to protect the Side B (the one with the connectors) of the OCTO. To this aim, it can be adopted the same approach that the cooler manufacturer uses to protect the connector side of the electronic thermostat, hence a piece of plastic with an appropriate shape can be used. If a piece of plastic is not available, a metallic plate can be used but the covered area of the OCTO has to be as small as possible (the limit should be 5 cm from the front of the OCTO, as illustrated in Fig. 7).

Fig 7: In case of metallic protection, do not cross the indicated line otherwise the signal of the internal antenna results corrupted.



6. Installation in the coolers

During the industrial production of the coolers, there should be a phase in which the electronic thermostat is installed. In the same phase, also the OCTO device has to be installed. The following pre-conditions have to be satisfied:

- Pre-condition 1: The installation position has to be determined during the analysis performed as described in Section 5.
- Pre-condition 2: One COMM CABLE for each cooler has been correctly assembled for the corresponding thermostat model with the appropriate length with respect to the position of both the OCTO and the electronic thermostat.
- Pre-condition 3: A power supply cable has been prepared using one of the connectors illustrated in Fig. 4.
- Pre-condition 4: If a metal protection is provided, this must not cover the antenna of the device (see Fig. 7).
- Pre-condition 5: the controller has to be programmed in order to properly manage all the sensors. Thus, for example, if a door sensor is installed, even if it is not needed for the cooler management (i.e. no need to switch off the fan), the controller must be programmed in order to properly detect and manage the door sensor itself. For any clarification, ask to your local Danfoss agent.

For the installation, the following steps have to be performed:

- Step 1: While the cooler is off, put the OCTO unplugged inside the cooler in the appropriate position.
- Step 2: Connect the COMM cable to the thermostat and to the OCTO.
- Step 3: Connect the power supply cable to the OCTO while such cable is not powered, as illustrated in Fig. 3.
- Step 4: Install the protection, if any.
- Step 5: Power on the cooler (and consequently the OCTO). The red led of the OCTO starts blinking. Wait until the red led stops blinking. If it results always on, then the device is powered and the communication with the electronic thermostat is correctly established.
- Step 6: Wait until the green led remains always on.
- Step 7: In case of success in STEP 6, and only in such case, the cooler code and the OCTO code have to be associated. This association is illustrated in Fig. 8. Both the cooler serial number and the OCTO Device Code have to be read using a bar code reader and to be traced in a special document where the cooler model, the cooler serial number and the OCTO device code must be written.

Note: In case STEP 7 is not properly executed, the future owner of the cooler will not recognize the cooler through the Prosa infrastructure.

Fig. 8: Association between OCTO device and the specific cooler.



7. Prosa mandatory settings

This section is to highlight the fundamental importance of the STEP 7 listed in Section 6.

The association between the equipment and the PR-OCTO can be done:

- [Using the mobile app](#)
- [With the Alsense Portal](#)
- or other modalities previously agreed with Danfoss (contact via e-mail: support.prosa@danfoss.com).

The association must be done before to ship the equipment to the final customer. Any shipment to the final customer must be notified with an e-mail containing the equipment codes and the customer's warehouse address to support.prosa@danfoss.com.

8. Technical specification

The technical specification can be found on the following datasheets:

- [PR-OCTO](#)
- [PR-OCTO Lean](#)

9. Dimensions

Fig. 9: Left and right view

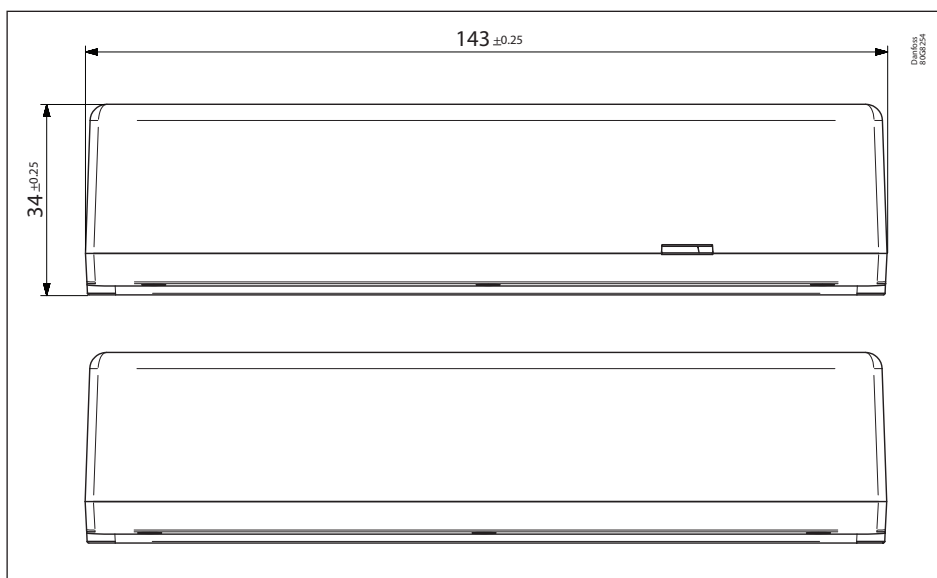


Fig. 10: Top view


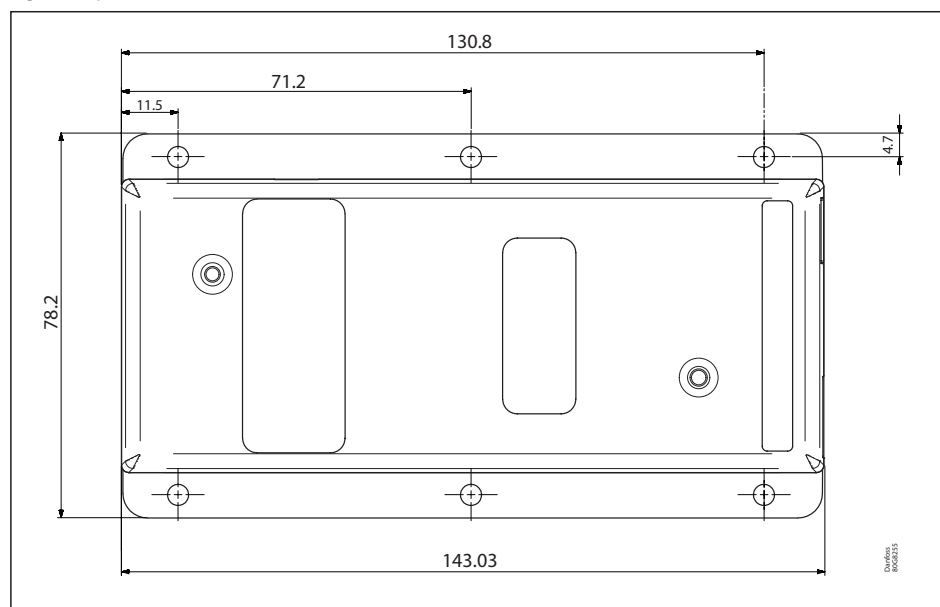


Fig. 11: Rear view

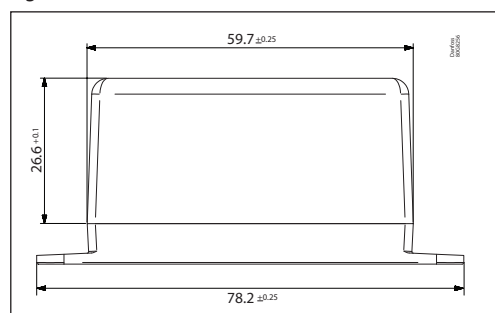

10. Warnings

- The installation of the PR-OCTO has to be performed only and exclusively by qualified and skilled technicians.
- The installation of the PR-OCTO should be performed while the cooler is switched-off.
- Inside the device there is a GPRS antenna. For this reason, while the PR-OCTO is working it must be at the minimum distance of 9.5 cm (4") from the people. The installation must be done to ensure this distance.
- The PR-OCTO has to be installed in a protected position. The PR-OCTO has to be embedded in the cooler and not accessible. In case of installation on the back side of the cooler, the PR-OCTO has to be protected with an additional box to protect people from electric shock.
- If the power supply cable of the PR-OCTO is not double insulated, it has to be physically separated from the COMM cable (the communication cable with the thermostat).
- The PR-OCTO input power supply is protected by over-currents by the F002 device, with this characteristics: delayed fuse 250 V 400 mA.
- Any document related to the conformity declaration of the PR-OCTO can be downloaded from www.danfoss.com.
- This equipment is not suitable for use in locations where children are likely to be present.

Danfoss A/S

Climate Solutions • danfoss.com • +45 7488 2222

Any information, including, but not limited to information on selection of product, its application or use, product design, weight, dimensions, capacity or any other technical data in product manuals, catalogues descriptions, advertisements, etc. and whether made available in writing, orally, electronically, online or via download, shall be considered informative, and is only binding if and to the extent, explicit reference is made in a quotation or order confirmation. Danfoss cannot accept any responsibility for possible errors in catalogues, brochures, videos and other material. Danfoss reserves the right to alter its products without notice. This also applies to products ordered but not delivered provided that such alterations can be made without changes to form, fit or function of the product.

All trademarks in this material are property of Danfoss A/S or Danfoss group companies. Danfoss and the Danfoss logo are trademarks of Danfoss A/S. All rights reserved.