

FISHER & PAYKEL

CONVECTION SPEED OVEN

PROFESSIONAL

OM76NPX1 models

INSTALLATION GUIDE

NZ AU

Installation

⚠ WARNING!**Electrical Shock Hazard**

Before carrying out any work on the electrical section of the appliance, it must be disconnected from the mains electricity supply. Connection to a good earth wiring system is absolutely essential and mandatory.

Alterations to the domestic wiring system must only be made by a qualified electrician. Failure to follow this advice may result in electrical shock or death.

⚠ WARNING!**Fire Hazard**


Do not use adapters, reducers, or branching devices to connect this appliance to the mains power supply. Failure to follow this advice may result in overheating, burning, or fire.

⚠ WARNING!**Cut Hazard**

Take care – some edges are sharp. Failure to use caution could result in injury or cuts.

IMPORTANT!

The oven's identification plate is accessible when the appliance is installed. This identification plate, which is visible when you open the door, shows all the information you will need when requesting replacement parts for the appliance.

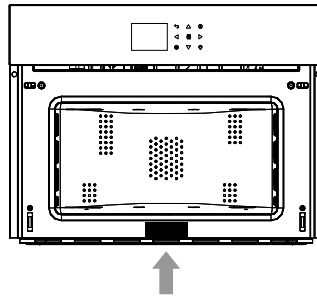**IMPORTANT!**

SAVE THESE INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS!

To avoid hazard, follow these instructions carefully before installing or using this appliance.

- Save these instructions for the local inspectors use.
- Please make this information available to the person installing the appliance – doing so could reduce your installation costs.
- This oven is to be installed and connected to the electricity supply only by an authorised person.
- If the installation requires alterations to the domestic electrical system, call a qualified electrician. The electrician should also check that the socket cable section is suitable for the electricity drawn by the oven.
- The oven must be earthed.
- Installation must comply with your local building and electricity regulations.
- This appliance must be installed and connected to the mains power supply only by a suitably qualified person according to these installation instructions and in compliance with any applicable local building and electricity regulations. Failure to install the appliance correctly could invalidate any warranty or liability claims.
- If the power supply cable is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard.
- A circuit breaker is recommended.
- Do not use adaptors, reducers or branching devices to connect the oven to the mains electricity supply, as they can cause overheating and burning.
- Do not allow children and animals to stop or linger near the appliance when it is pulled out of the cabinet.

Electrical requirements

- Connect oven with copper wire only.
- Do not cut the conduit.
- A U.L. listed conduit connector must be provided at the junction box.
- Do not earth to a gas pipe.
- Do not have a fuse in the earthed or neutral circuit.
- Fuse both sides of the line.
- A time delay fuse or circuit breaker is recommended. If using a time delay fuse, then fuse both sides of the line.
- Flexible armored cable from the appliance should be connected directly to the junction box.
- Connect directly to the fused disconnect (or circuit breaker box) through flexible, armored or non-metallic sheathed, copper cable (with earthed wire).
- If codes permit and a separate earthed wire is used, it is recommended that a qualified electrician determine that the earthed path and wire gauge are in accordance with local codes.

INSTALLATION CONSIDERATIONS

PRIOR TO INSTALLATION

Prior to installing your oven, ensure the following:

- The countertop and oven cavity are square and level, and are the required dimensions.
- The installation will comply with all clearance requirements and applicable standards and regulations.
- The isolating switch will be easily accessible to the customer with the oven installed.
- The electrician provides sufficient free length of power supply cable to reach from the bottom rear of the cavity to at least 1.5m in front of the bottom edge of the opening.
- The cable may enter the cavity from the side, top or bottom, but top entry must be at the rear of the cavity.
- The oven connection socket (if fitted) is outside the cavity if the oven is flush to the rear wall.
- The oven will rest on a surface that can support its weight.
- The height from the floor suits the customer.
- You consult local building authorities and by-laws if in doubt regarding installation.

WARNING!

Some environmental factors and cooking habits can cause condensation in and around the oven during use. To protect surrounding cabinetry from possible damage caused by frequent or excessive condensation, we recommend moisture-proofing the oven cavity.

DURING INSTALLATION

During installation, please ensure the following:

- The oven door(s) can open fully without obstruction.
- The power supply cable does not touch any hot metal parts.
- The isolating switch is easily accessible to the customer with the oven installed.
- You complete the 'Final checklist' at the end of the installation.
- If, after following the instructions given, correct performance cannot be achieved, please contact your nearest Fisher & Paykel Service Centre, Customer Care, or contact us through our local website listed at the end of this document.

WARNING!

Take extra care not to damage the lower trim of the oven during installation. The trim is important for correct air circulation and allows the door to open and close without obstruction.

The manufacturer does not accept any responsibility for damage resulting from incorrect installation.

- The oven can be installed under a cooktop, in a column, or combined with the companion warmer drawer or coffee maker.
- The cabinet material must be able to withstand heat.
- The oven must be centered within the walls of the cabinet and fixed with the screws that are provided.

COMPONENTS REQUIRED

PARTS SUPPLIED

- Keep all packing materials until the unit has been inspected.
- Inspect the product to ensure there is no shipping damage. If any damage is detected contact the dealer or retailer you bought the product from to report the damage.
- Fisher & Paykel is not responsible for shipping damage.


Supplied



Mounting screws (2)



Mounting washers (2)

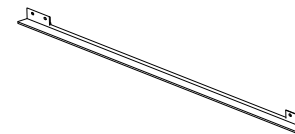


Lower trim (1)



Lower trim screws (4)

TOOLS REQUIRED


Not supplied



Crosshead screwdriver




Power drill

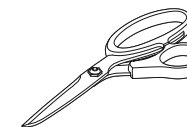


Scissors


PRODUCT DIMENSIONS

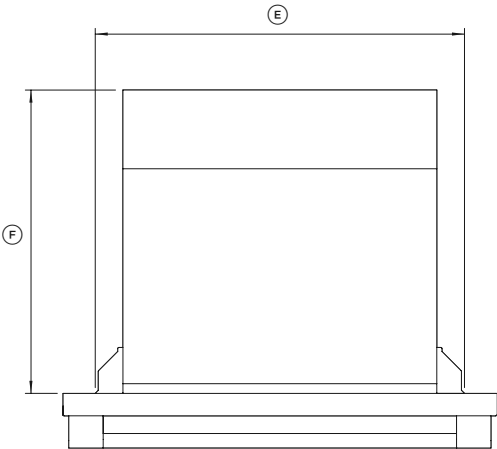


PLAN

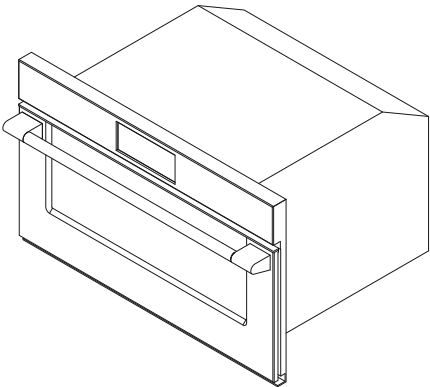

ISOMETRIC

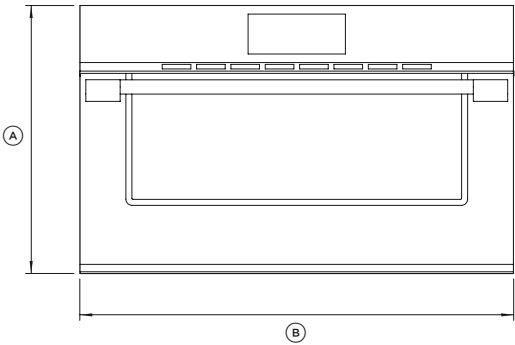

FRONT

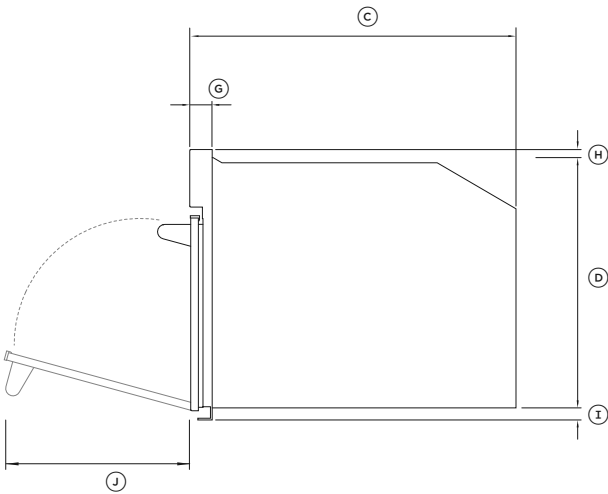


PROFILE


PRODUCT DIMENSIONS	OM76 MODELS
	MM
Ⓐ Overall height	470
Ⓑ Overall width	757
Ⓒ Overall depth (excluding handles and dials)	567
Ⓓ Height of chassis	446
Ⓔ Width of chassis	645
Ⓕ Depth of chassis	528
Ⓖ Depth of oven frame and control panel (distance between front of chassis and front of oven door, excl. handle)	39
Ⓗ Height of stepdown from top of control panel to top of chassis	14
Ⓘ Height of stepdown from bottom of chassis to bottom of lower trim	10
Ⓙ Depth of oven door when fully opened (measured from front of control panel)	308

Actual product dimensions may vary by + 2mm.

CABINETRY DIMENSIONS (FLUSH INSTALL)


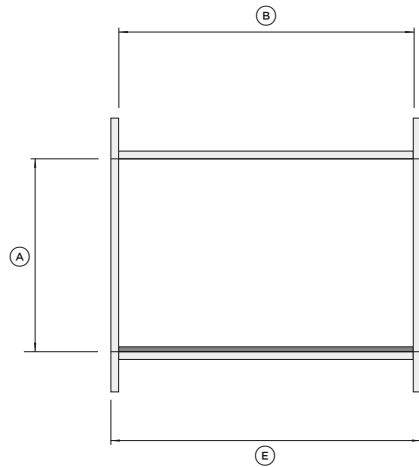


FRONT ELEVATION
without front panels

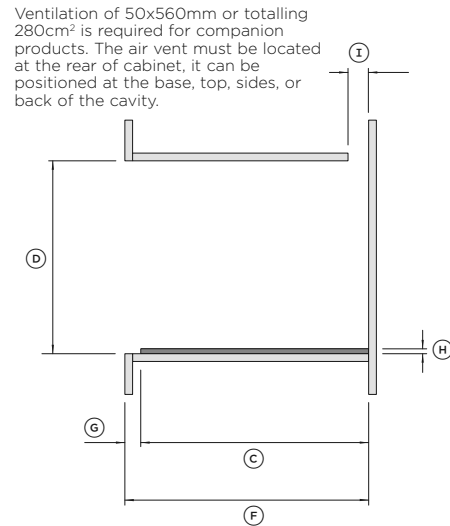

SIDE ELEVATION
with front panels

Ventilation of 50x560mm or totalling 280cm² is required for companion products. The air vent must be located at the rear of cabinet; it can be positioned at the base, top, sides, or back of the cavity.

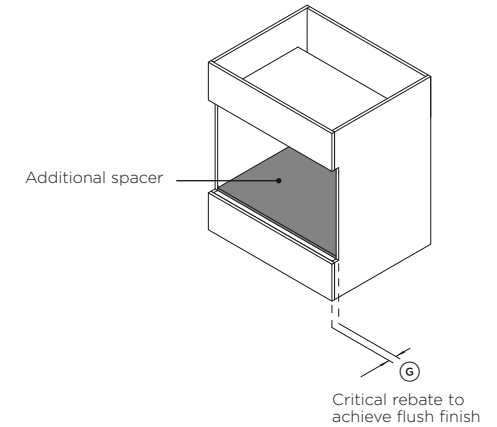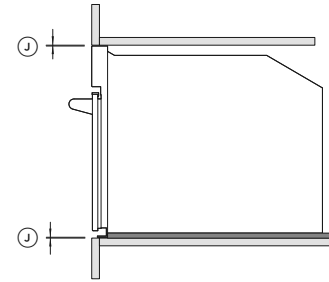

CAVITY DIMENSIONS


(A)	Minimum inside height of cavity
(B)	Minimum inside width of cavity
(C)	Minimum inside depth of cavity (from front of rebate)
(D)	Minimum height between cabinetry front panels
(E)	Overall width of cabinetry
(F)	Minimum overall depth of cavity (incl. front panel)
(G)	Rebate depth for flush install (incl. front panel)
(H)	Overall height of spacer in base of cavity
(I)	Ventilation gap
(J)	Minimum clearance to adjacent cabinetry or other appliances

OM76 MODELS


MM

474
645
560
474
762
600
39
12
50
2


DETAIL - PLAN VIEW

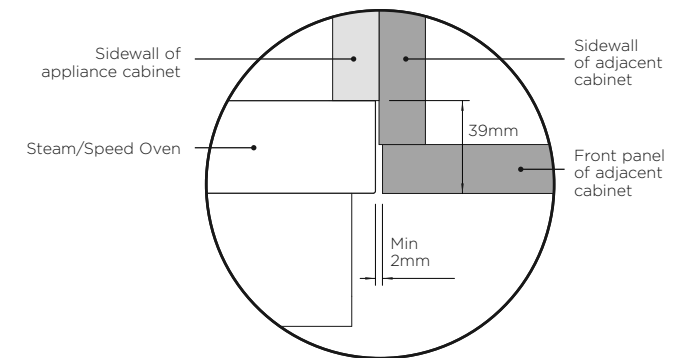



CABINETY DIMENSIONS (PROUD INSTALL)

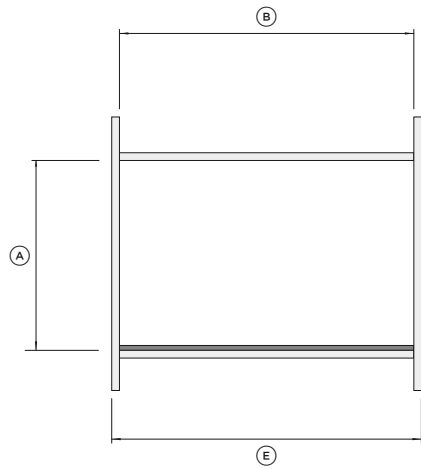

FRONT ELEVATION
without front panels

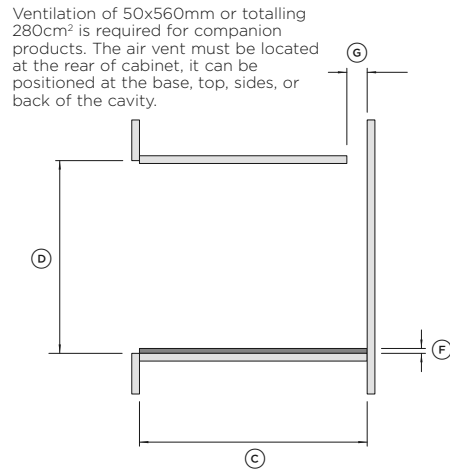


SIDE ELEVATION
with front panels

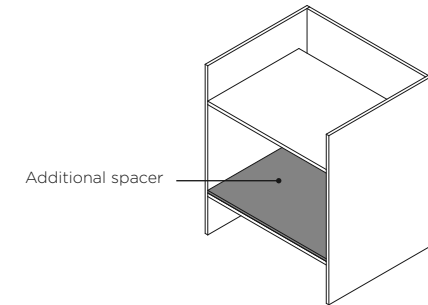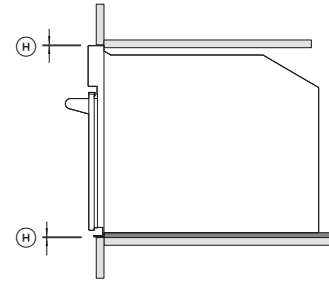

CAVITY DIMENSIONS	OM76 MODELS
	MM
(A) Minimum inside height of cavity	467
(B) Minimum inside width of cavity	645
(C) Minimum inside depth of cavity	560
(D) Minimum height between cabinetry front panels	474
(E) Overall width of cabinetry	762
(F) Overall height of spacer in base of cavity	12
(G) Ventilation gap	50
(H) Minimum clearance to adjacent cabinetry or other appliances	2

DETAIL - PLAN VIEW

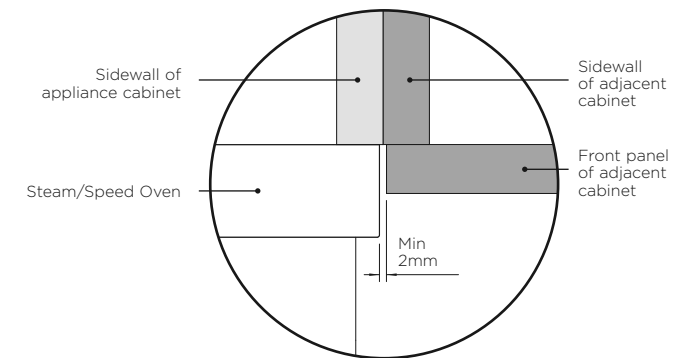

ELECTRICAL CONNECTION

Before connecting the oven to the mains power supply, check that:

- specifications of the electrical system match with what is detailed on this section.
- system has an effective ground connection compliant with current standards and laws.


The ground connection is required by law. The cable must not, at any point, reach a temperature greater than 50°C above room temperature.

This oven must be connected to the electricity through a power supply cable and plug that is compatible with the outlet of the electrical system that powers this oven. If a fixed appliance does not have a power cord and plug, or another device that ensures disconnection from the mains, with an opening distance of the contacts that allows complete disconnection, such disconnection devices must be provided in the power supply mains conforming to the installation rules.


The omnipolar socket or switch must be easy to reach when the appliance is installed.

Note: The manufacturer declines all liability if the usual accident prevention standards and the above instructions are not followed.

MAX POWER (W)	HZ	VOLTAGE (V)	AMPS (A)
3200	50 Hz	220 - 240V	15A

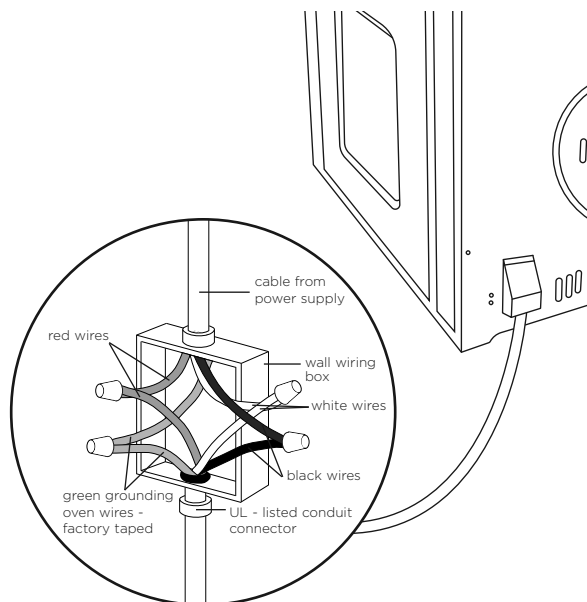

SECURE THE OVEN TO THE CABINETY

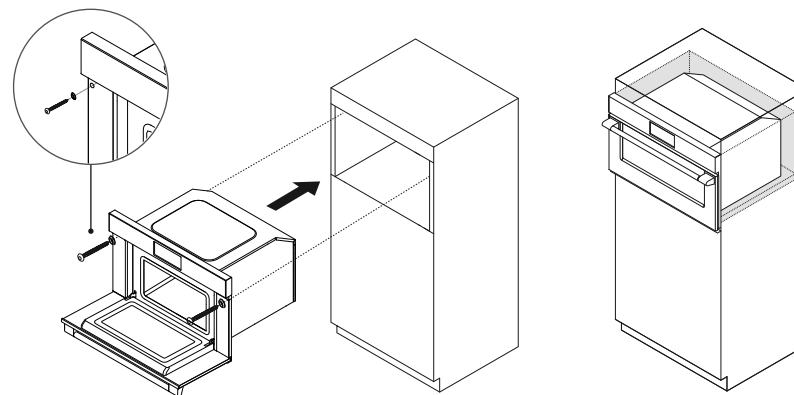


- Do not lift the oven by the door handle.
- Do not over-tighten the screws.
- Do not seal the oven into the cabinetry with silicone or glue. This makes future servicing difficult. Fisher & Paykel will not cover the costs of removing the oven, or of damage caused by this removal.
- Take care not to bend the tabs for the lower trim while installing the oven.

- ① Position the oven in the prepared cavity. Make sure the oven is centered and level.
- ② Open the oven door fully.
- ③ Mark and pre-drill the screw holes.
- ④ Place the supplied washers onto the mounting screws, then use to secure the oven to the cabinetry.

ATTACH THE LOWER TRIM TO THE OVEN


Attach the lower trim to the oven after installing the oven in the cabinetry.

1

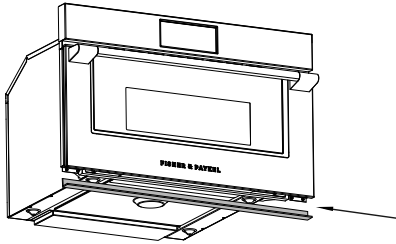

Align the lower trim with the tabs on the base of the oven.

2

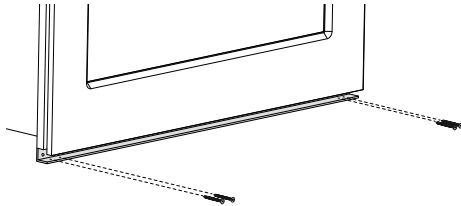

Use the supplied screws to attach the lower trim to the tabs.
Take care not to bend the tabs while installing.
Do not over-tighten the screws.

INSTALLER CHECKLIST

TO BE COMPLETED BY THE INSTALLER

- | | |
|---|--|
| ☐ Make sure the oven is level and securely fitted to the cabinetry. | ☐ Turn the power to the oven on. The display should turn on.. |
| ☐ Check the lower trim is correctly attached and undamaged. | ☐ Have you demonstrated basic operation to the customer? |
| ☐ Ensure the oven door opens fully without obstruction. | |
| ☐ Open the oven door slowly until it is fully open and check there is adequate clearance between the bottom of the door and the lower trim. This is to ensure correct air circulation. | |
| ☐ Make sure any cable ties and internal packaging have been removed from the oven cavity. | |
| ☐ Make sure all oven vents and openings are clear and free of any obstruction or damage. Failure to make sure all oven vents are clear may result in poor product performance. | |
| ☐ Make sure the isolating switch is accessible by the customer. | |

Complete and keep for safe reference:

Model	_____
Serial No.	_____
Purchase Date	_____
Purchaser	_____
Dealer Address	_____
Installer's Name	_____
Installer's Signature	_____
Installation Company	_____
Installation Date	_____

FISHERPAYKEL.COM

© Fisher & Paykel Appliances 2021. All rights reserved.

The models shown in this guide may not be available in all markets
and are subject to change at any time.

The product specifications in this guide apply to the specific products and
models described at the date of issue. Under our policy of continuous product
improvement, these specifications may change at any time.

For current details about model and specification availability in your country,
please go to our website or contact your local Fisher & Paykel dealer.

592830A 12.21