

Intel® NUC 13 Pro Kit NUC13ANHv7
Intel® NUC 13 Pro Kit NUC13ANHi7
Intel® NUC 13 Pro Kit NUC13ANHv5
Intel® NUC 13 Pro Kit NUC13ANHi5
Intel® NUC 13 Pro Kit NUC13ANHi3
Intel® NUC 13 Pro Kit NUC13L3Hv7
Intel® NUC 13 Pro Kit NUC13L3Hi7
Intel® NUC 13 Pro Kit NUC13L3Hv5
Intel® NUC 13 Pro Kit NUC13L3Hi5
Intel® NUC 13 Pro Kit NUC13L3Hi3

[User Guide](#)

May 2023



You may not use or facilitate the use of this document in connection with any infringement or other legal analysis concerning Intel products described herein. You agree to grant Intel a non-exclusive, royalty-free license to any patent claim thereafter drafted which includes subject matter disclosed herein.

No license (express or implied, by estoppel or otherwise) to any intellectual property rights is granted by this document.

All information provided here is subject to change without notice. Contact your Intel representative to obtain the latest Intel product specifications and roadmaps.

The products described may contain design defects or errors known as errata which may cause the product to deviate from published specifications. Current characterized errata are available on request.

Copies of documents which have an order number and are referenced in this document may be obtained by calling 1-800-548-4725 or by visiting: <http://www.intel.com/design/literature.htm>.

Intel technologies' features and benefits depend on system configuration and may require enabled hardware, software or service activation. Performance varies depending on system configuration. No computer system can be absolutely secure.

Intel and the Intel logo are trademarks of Intel Corporation or its subsidiaries in the U.S. and/or other countries.

*Other names and brands may be claimed as the property of others.

Copyright © 2023, Intel Corporation. All rights reserved.

Contents

1.0	Introduction.....	5
1.1	Before You Begin	5
1.2	Installation Precautions.....	6
1.3	Observe Safety and Regulatory Requirements.....	6
2.0	Open the Chassis.....	7
3.0	Install and Remove System Memory	8
3.1	Install SO-DIMMs.....	8
3.2	Remove SO-DIMMs	9
4.0	Install an M.2 SSD	10
5.0	Install a 2.5-inch SSD or Hard Drive.....	12
6.0	Close the Chassis.....	14
7.0	Use the VESA Bracket (Optional)	15
8.0	Connect Power.....	17
9.0	Install an Operating System	19
10.0	Install the Latest Device Drivers and Software.....	20

Revision History

Date	Revision	Description
March 2023	1.0	Initial release.
May 2023	2.0	Added NUC13LCH products.

1.0 Introduction

This User Guide provides step-by-step installation instructions for these products:

- Intel® NUC 13 Pro Kit NUC13ANHv7
- Intel® NUC 13 Pro Kit NUC13ANHi7
- Intel® NUC 13 Pro Kit NUC13ANHv5
- Intel® NUC 13 Pro Kit NUC13ANHi5
- Intel® NUC 13 Pro Kit NUC13ANHi3
- Intel® NUC 13 Pro Kit NUC13L3Hv7
- Intel® NUC 13 Pro Kit NUC13L3Hi7
- Intel® NUC 13 Pro Kit NUC13L3Hv5
- Intel® NUC 13 Pro Kit NUC13L3Hi5
- Intel® NUC 13 Pro Kit NUC13L3Hi3

1.1 Before You Begin



CAUTIONS

The steps in this guide assume you're familiar with computer terminology and with the safety practices and regulatory compliance required for using and modifying computer equipment.

Disconnect the computer from its power source and from any network before performing any of the steps described in this guide.

Failure to disconnect power, telecommunications links, or networks before you open the computer or perform any procedures can result in personal injury or equipment damage. Some circuitry on the board can continue to operate even though the front panel power button is off.

Follow these guidelines before you begin:

- Always follow the steps in each procedure in the correct order.
- Create a log to record information about your computer, such as model, serial numbers, installed options, and configuration information.
- Electrostatic discharge (ESD) can damage components. Perform the procedures described in this chapter only at an ESD workstation using an antistatic wrist strap and a conductive foam pad. If such a station isn't available, you can provide some ESD protection by wearing an antistatic wrist

strap and attaching it to a metal part of the computer chassis.

1.2 Installation Precautions

When you install and test the Intel NUC, observe all warnings and cautions in the installation instructions.

To avoid injury, be careful of:

- Sharp pins on connectors
- Sharp pins on circuit boards
- Rough edges and sharp corners on the chassis
- Hot components (such as SSDs, processors, voltage regulators, and heat sinks)
- Damage to wires that could cause a short circuit


Observe all warnings and cautions that instruct you to refer computer servicing to qualified technical personnel.

1.3 Observe Safety and Regulatory Requirements

If you don't follow these instructions, you increase your safety risk and the possibility of noncompliance with regional laws and regulations.

2.0 *Open the Chassis*

Unscrew the four corner screws on the bottom of the chassis and lift the cover.

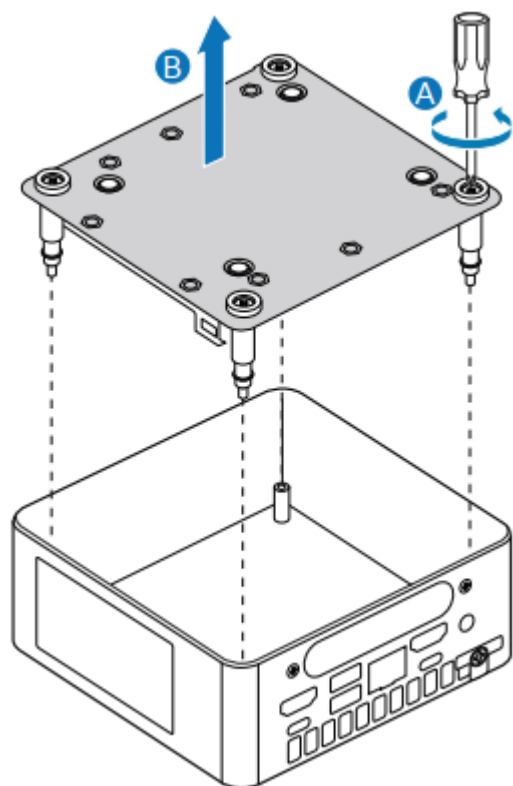

3.0 *Install and Remove System Memory*

Intel® NUC 13 Pro Kit NUC13ANH has two 260-pin DDR4 SO-DIMM memory slots

Memory requirements:

- 1.2V low voltage memory
- 2400/2666/3200 MHz SO-DIMMs
- Non-ECC
- Up to 64GB of system memory supported with 2 SO-DIMMs using 32GB memory modules

Find compatible system memory modules at the Intel® Product Compatibility Tool:


- [Intel® NUC 13 Pro Kit NUC13ANHv7](#)
- [Intel® NUC 13 Pro Kit NUC13ANHi7](#)
- [Intel® NUC 13 Pro Kit NUC13ANHv5](#)
- [Intel® NUC 13 Pro Kit NUC13ANHi5](#)
- [Intel® NUC 13 Pro Kit NUC13ANHi3](#)
- [Intel® NUC 13 Pro Kit NUC13L3Hv7](#)
- [Intel® NUC 13 Pro Kit NUC13L3Hi7](#)
- [Intel® NUC 13 Pro Kit NUC13L3Hv5](#)
- [Intel® NUC 13 Pro Kit NUC13L3Hi5](#)
- [Intel® NUC 13 Pro Kit NUC13L3Hi3](#)

3.1 **Install SO-DIMMs**

If you plan to install just one SO-DIMM, install it in the lower memory socket.

To install the SO-DIMMs, follow these steps:

1. Observe the precautions in "Before You Begin" in Section 1.1.
2. Turn off all peripheral devices connected to the computer. Turn off the computer and disconnect the AC power cord.

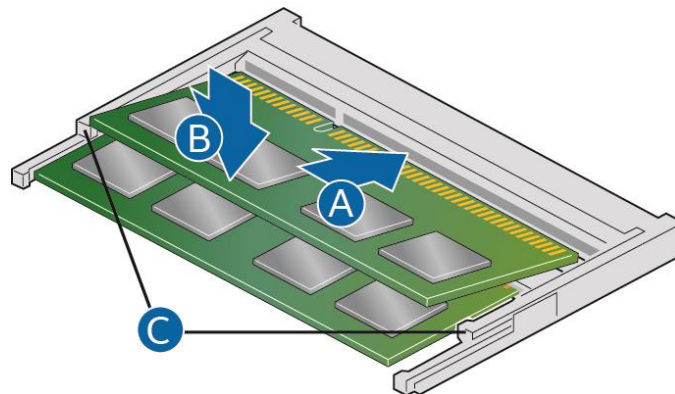

3. Align the small notch at the bottom edge of the SO-DIMM with the key in the socket.
4. Insert the bottom edge of the SO-DIMM into the socket.
5. When the SO-DIMM is inserted, push down on the outer edge of the SO-DIMM until the retaining clips snap into place. Make sure the clips are firmly in place.

3.2 Remove SO-DIMMs

To remove a SO-DIMM, follow these steps:

1. Observe the precautions in "Before You Begin" in Section 1.1.
2. Turn off all peripheral devices connected to the computer. Turn off the computer.
3. Remove the AC power cord from the computer.
4. Remove the computer's cover.
5. Gently spread the retaining clips at each end of the SO-DIMM socket. The SO-DIMM pops out of the socket.
6. Hold the SO-DIMM by the edges, lift it away from the socket, and store it in an anti-static package.
7. Reinstall and reconnect any parts you removed or disconnected to reach the SO-DIMM sockets.
8. Replace the computer's cover and reconnect the AC power cord.

4.0 *Install an M.2 SSD*

Intel® NUC 13 Pro Kit NUC13ANH contains


- one 80mm connector supporting NVMe and
- one 42mm connector supporting SATA SSD

Find compatible M.2 SSDs at the Intel® Product Compatibility Tool:

- [Intel® NUC 13 Pro Kit NUC13ANHv7](#)
- [Intel® NUC 13 Pro Kit NUC13ANHi7](#)
- [Intel® NUC 13 Pro Kit NUC13ANHv5](#)
- [Intel® NUC 13 Pro Kit NUC13ANHi5](#)
- [Intel® NUC 13 Pro Kit NUC13ANHi3](#)
- [Intel® NUC 13 Pro Kit NUC13L3Hv7](#)
- [Intel® NUC 13 Pro Kit NUC13L3Hi7](#)
- [Intel® NUC 13 Pro Kit NUC13L3Hv5](#)
- [Intel® NUC 13 Pro Kit NUC13L3Hi5](#)
- [Intel® NUC 13 Pro Kit NUC13L3Hi3](#)


If you're installing an 80mm M.2 SSD:

1. Remove the small silver screw from the 80mm metal standoff on the motherboard (A).
2. Align the small notch at the bottom edge of the M.2 card with the key in the connector.
3. Insert the bottom edge of the M.2 card into the connector (B).
4. Secure the card to the standoff with the small silver screw (C).

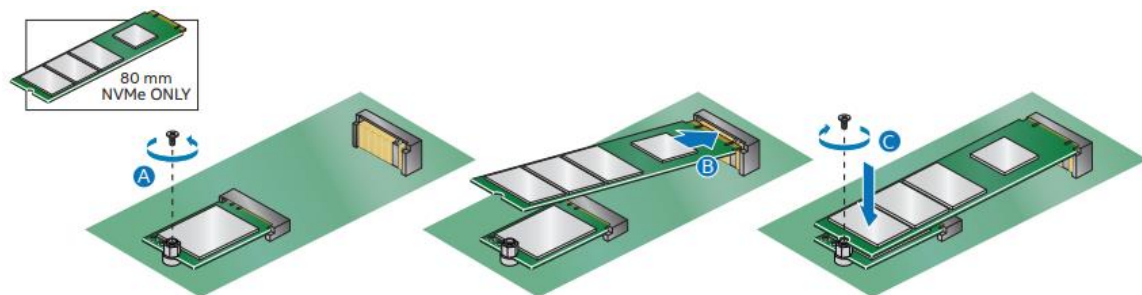

If you're installing a 42mm M.2 SSD:

1. Remove the small silver screw from the metal standoff on the motherboard (A).
2. Move the standoff (B) from the 80mm position to the 42mm position (C).
3. Align the small notch at the bottom edge of the M.2 card with the key in the connector.
4. Insert the bottom edge of the M.2 card into the connector (D).
5. Secure the card to the standoff with the small silver screw (E).

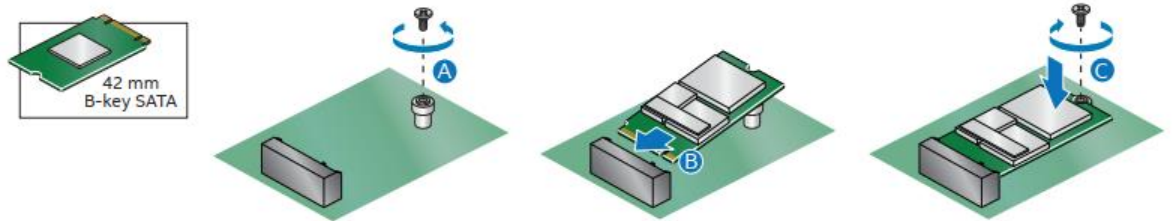


5.0 *Install a 2.5-inch SSD or Hard Drive*

Intel® NUC 13 Pro Kit NUC13ANH supports an additional 2.5" SATA Solid State Drive (SSD) or Hard Disk Drive (HDD).

Find compatible 2.5-inch SSDs at the Intel® Product Compatibility Tool:

- [Intel® NUC 13 Pro Kit NUC13ANHv7](#)
- [Intel® NUC 13 Pro Kit NUC13ANHi7](#)
- [Intel® NUC 13 Pro Kit NUC13ANHv5](#)
- [Intel® NUC 13 Pro Kit NUC13ANHi5](#)
- [Intel® NUC 13 Pro Kit NUC13ANHi3](#)
- [Intel® NUC 13 Pro Kit NUC13L3Hv7](#)
- [Intel® NUC 13 Pro Kit NUC13L3Hi7](#)
- [Intel® NUC 13 Pro Kit NUC13L3Hv5](#)
- [Intel® NUC 13 Pro Kit NUC13L3Hi5](#)
- [Intel® NUC 13 Pro Kit NUC13L3Hi3](#)

1. Slide the new 2.5" drive (B) into the drive bay, ensuring the SATA connectors are fully seated into the connectors of the SATA daughter card (C).

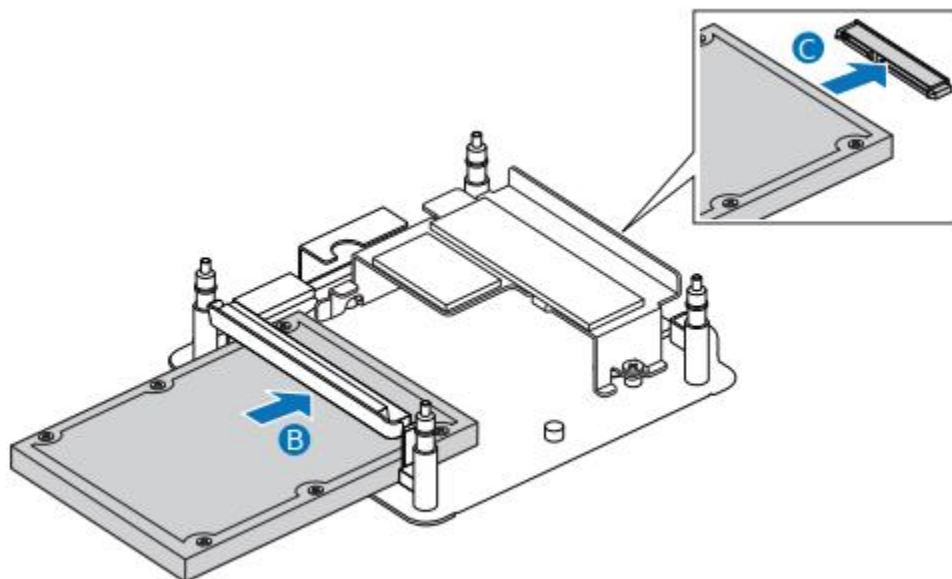




2. Secure the drive into the drive bay with the two small silver screws that were included in the box. Set the drive bay bracket down inside the chassis.

6.0 Close the Chassis


After all components have been installed, close the Intel NUC chassis. Intel recommends this be done by hand with a screwdriver to avoid over-tightening and possibly damaging the screws.

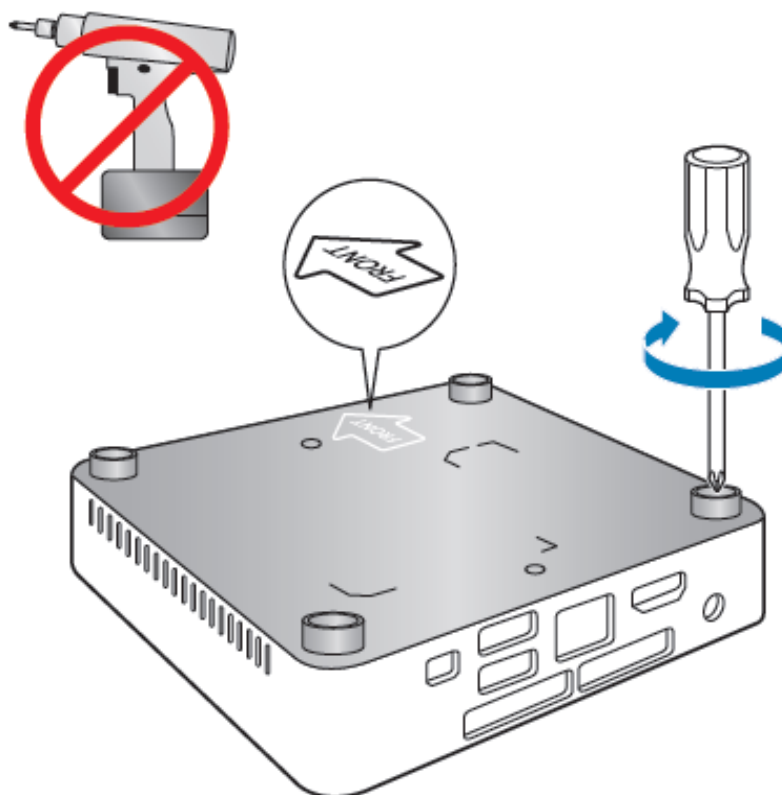


7.0 *Use the VESA Bracket (Optional)*

Follow these instructions to attach and use the VESA mount bracket:


1. Using the four small black screws that were included in the box, attach the VESA bracket to the back of the monitor or TV.

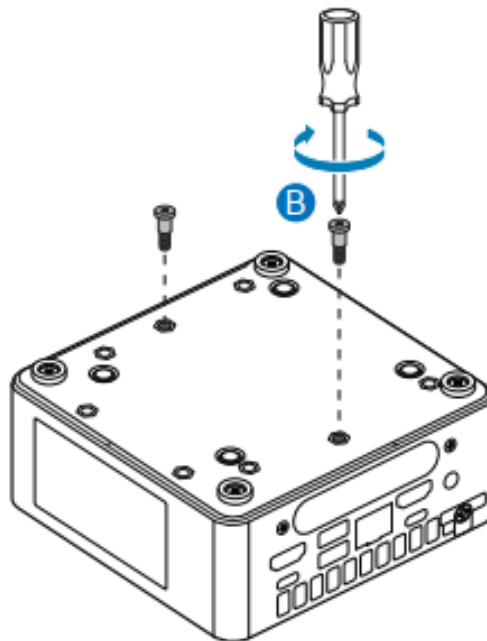

2. Attach the two slightly larger black screws to the bottom chassis cover of the Intel NUC.

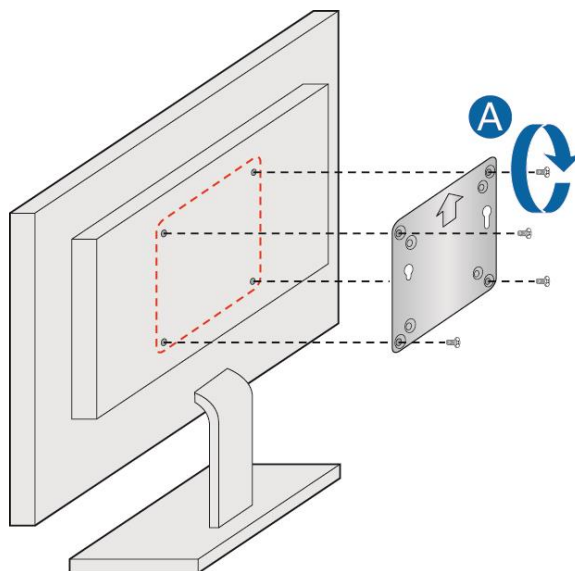

3. Slide the Intel NUC onto the VESA mount bracket.

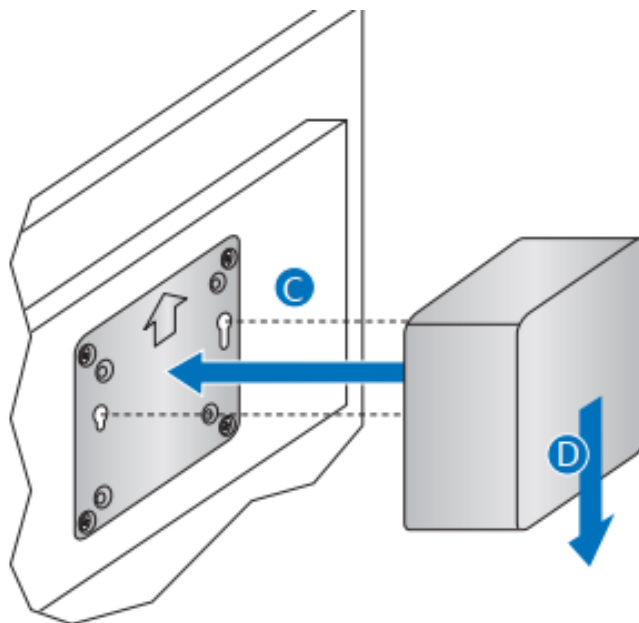

8.0 Connect Power

Each Intel NUC model includes either a region-specific AC power cord or no AC power cord (only the power adapter).

Product codes	Power cord type
RNUC13ANHV70000 RNUC13ANHI70000 RNUC13ANHV50000 RNUC13ANHI50000 RNUC13ANHI30000 RNUC13L3HV70000 RNUC13L3HI70000 RNUC13L3HV50000 RNUC13L3HI50000 RNUC13L3HI30000	No power cord included. An AC power cord needs to be purchased separately. Power cords are available at many Internet sites for use in multiple countries. The connector on the power adapter is a C5 type connector. 
RNUC13ANHV70001 RNUC13ANHI70001 RNUC13ANHV50001 RNUC13ANHI50001 RNUC13ANHI30001 RNUC13L3HV70001 RNUC13L3HI70001 RNUC13L3HV50001 RNUC13L3HI50001 RNUC13L3HI30001 RNUC13L3HV7000U RNUC13L3HI7000U RNUC13L3HV5000U RNUC13L3HI5000U RNUC13L3HI3000U	US power cord included.
RNUC13ANHV70002 RNUC13ANHI70002 RNUC13ANHV50002 RNUC13ANHI50002 RNUC13ANHI30002 RNUC13L3HV70002 RNUC13L3HI70002	EU power cord included.

RNUC13L3HV50002 RNUC13L3HI50002 RNUC13L3HI30002	
RNUC13ANHV70003 RNUC13ANHI70003 RNUC13ANHV50003 RNUC13ANHI50003 RNUC13ANHI30003 RNUC13L3HV70003 RNUC13L3HI70003 RNUC13L3HV50003 RNUC13L3HI50003 RNUC13L3HI30003	UK power cord included.
RNUC13ANHI70006 RNUC13ANHI50006 RNUC13ANHI30006	China power cord included.

9.0 *Install an Operating System*

See [Supported Operating Systems](#) for a list of Intel-validated operating systems.

Refer to [Operating System Installation](#) for system requirements and installation steps.

10.0 *Install the Latest Device Drivers and Software*

Here are the options for keeping device drivers current:

- Allow the [Intel® Driver & Support Assistant \(Intel® DSA\)](#) to detect out-of-date drivers
- Manually download drivers, BIOS, and software from Download Center:
 - [Intel® NUC 13 Pro Kit NUC13ANHv7](#)
 - [Intel® NUC 13 Pro Kit NUC13ANHi7](#)
 - [Intel® NUC 13 Pro Kit NUC13ANHv5](#)
 - [Intel® NUC 13 Pro Kit NUC13ANHi5](#)
 - [Intel® NUC 13 Pro Kit NUC13ANHi3](#)
 - [Intel® NUC 13 Pro Kit NUC13L3Hv7](#)
 - [Intel® NUC 13 Pro Kit NUC13L3Hi7](#)
 - [Intel® NUC 13 Pro Kit NUC13L3Hv5](#)
 - [Intel® NUC 13 Pro Kit NUC13L3Hi5](#)
 - [Intel® NUC 13 Pro Kit NUC13L3Hi3](#)