



NAVAL



COMMERCIAL
FISHING




COMMERCIAL
SHIPPING



SUPERYACHT



WORK BOAT

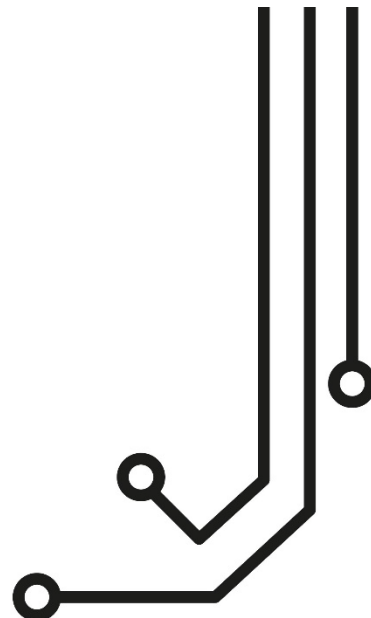

❗ IMPORTANT NOTE

When correctly inserted, the 4 pin power connector will stand slightly proud of the 5GXtream's front panel. Use of excessive force to push the power cable into the connector, should be avoided. Gently insert the power cable and push until the retaining lever clips in to place.

5GXtream 5G/4G ROUTER

Installation and Instruction Manual



1. Introduction

Congratulations on the purchase of your 5GXtream 5G/4G Router. This unit is designed for permanent installation on board a sail or motor boat. The 5GXtream comprises of the following parts;

- 5GXtream Router/Modem unit
- 2x internal Wi-Fi antennas
- 2x External 4G LTE antennas, 7m Cables and Mounts
- 1x External dual 5G LTE antenna and 7m Cables
- 1x GPS Antenna
- 1x Power Cable
- User Manual

i Before operating 5GXtream you should familiarise yourself with this User Manual and the manuals for any other equipment you wish to connect to it.

2. Before you start

The 5GXtream is configured and controlled via its built-in web interface. In order to access this, you will need a wireless device such as a PC/Mac, Tablet or Smart Phone running a modern web browser such as Chrome, Safari, Edge or Firefox. No special drivers or software are required to make the 5GXtream work.

i Do not plug in the 5GXtream to the Ethernet port of your computer whilst the 5GXtream is powered up and always ensure that the 5GXtream antennas are connected before powering up the 5GXtream.

3. Installation

The 5GXtream is designed to be mounted below deck. When deciding on the best location, a central location will give best Wi-Fi reception in all areas of the boat. You should also consider the 7m coax cable length of the external 5G and 4G Antennas, which should not be extended. It is better to locate the 5GXtream unit within the 7m limit of the supplied 5G and 4G antenna cables, and then use a wireless repeater if Wi-Fi reception is poor in some areas of the vessel.

If the 5G and 4G antenna cable run is a problem, Digital Deep Sea can supply 10m or 20m antenna cables, but these are larger and more expensive LMR400 cables (10.5mm Diameter) which must be purchased separately.

The power cable can be easily extended, as can the LAN/WAN Ethernet cables.

i The default settings of the 5GXtream have been chosen for optimum performance and we do not recommend users make any changes to them, except to change the default wireless network name (SSID) and wireless password.

3.1 Mounting the 5GXtream

The 5GXtream should be mounted in position using M4 screws or other fixings appropriate to the mounting location. It can be mounted in any orientation, as the Wi-Fi antennas can be rotated and bent for best reception, although we recommend mounting the 5GXtream vertically with the antennas pointing upwards, to avoid stress on the cables and to ensure any moisture/condensation falls away from the connectors.

On the next page (Fig.1) is a dimensioned drawing of the 5GXtream. When rotating the supplied Wi-Fi antennas, always rotate them clockwise to avoid loosening them. Make sure you allow suitable space around the top and bottom of the unit, to comfortably route the cables (avoiding tight bends) and to secure them so that the weight of the cables is not just being taken by the cable connectors.



Dimensioned Drawing

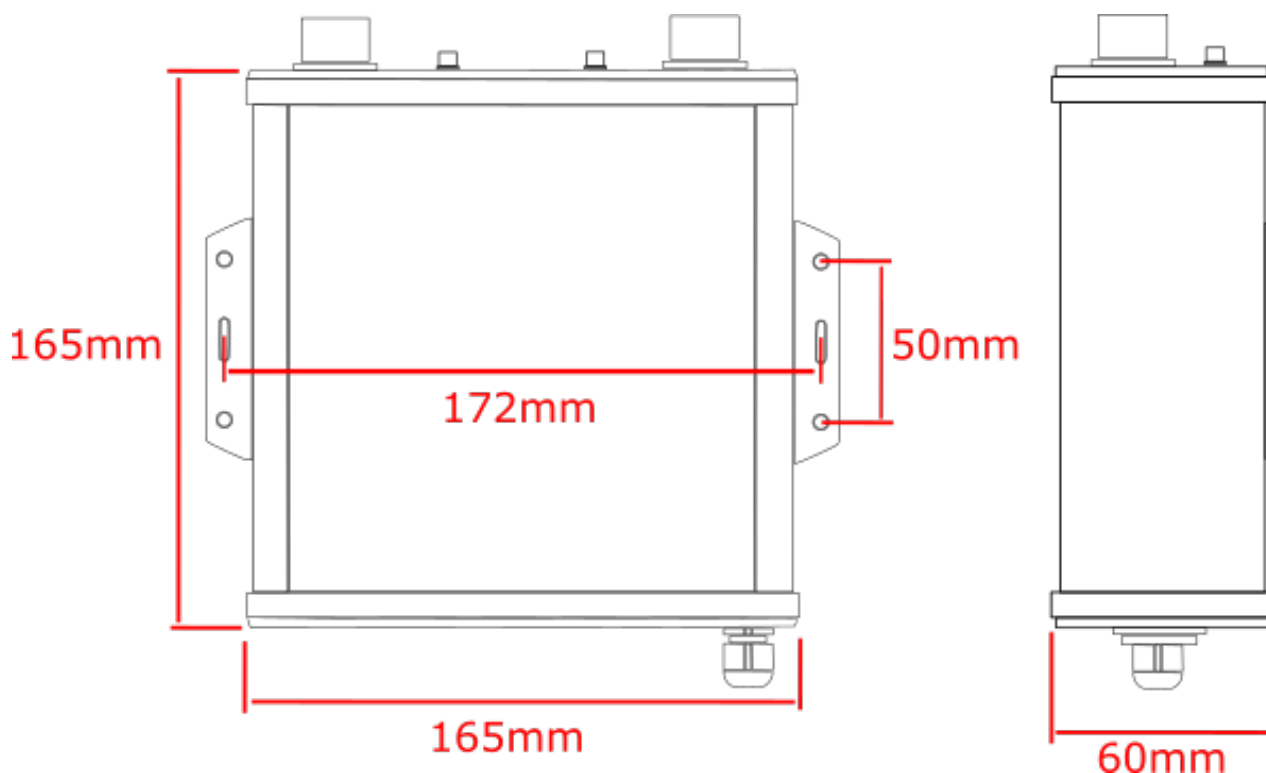


Figure 1 - Dimensions



Figure 2 - Connector Positions

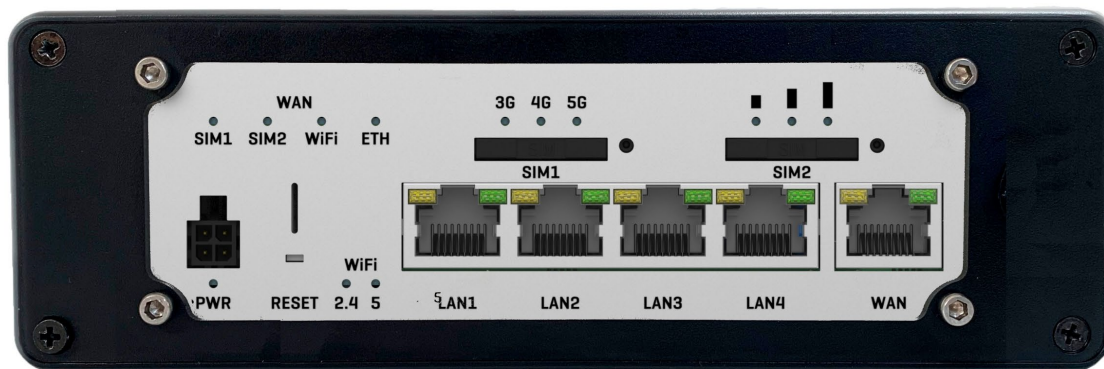


Figure 3 - Network Connectors + LEDs



3.2 Mounting the 4G LTE Antennas

The 5GXtream is supplied with two high gain 4G LTE antennas, two base mounts and two 7m lengths of LMR200 coax cables.

Installation and siting of the external LTE antennas is very important for maximum range, so take your time in working out the best location for these two antennas.

The 7m LMR200 cables should not be extended and it is better to move the 5GXtream Router/Modem unit closer to the antennas than extend the cables. The high frequency 4G/5G signals will be attenuated by 0.3dB per each additional meter of cable, so if you must have a longer coax cable run, contact Digital Yacht about swapping these cables for thicker LMR400 cables.

The two LTE antennas should ideally be mounted at least 40cm apart (1 wavelength) to maximise the positive effect of the MIMO technology that the 5GXtream uses. It should be noted that there are no significant additional gains to be made in making the antennas even further apart.

Avoid the antennas being blocked by metal objects and do not place them close to other high-power transmitting antennas like VHF, HF or SSB antennas. To avoid the LTE transmissions affecting other devices; GPS, TV, etc. try to mount them at least 1m away from other antennas.

The external LTE antennas have a 1.25" Pipe Thread and are supplied with two mounts. These mounts, designed for securing to a horizontal platform, are fine for most installations, but should you wish to use another type of mount such as those designed for VHF/GPS antennas, then you will need a 1" x 14TPI to 1.25" Pipe Thread adaptor, which are available from Digital Yacht (P/No.ZCELN280S).

Once a suitable location has been found for the two external LTE antennas, secure the base mounts, attach the N-Type connectors to the base of each antenna and then route the LMR200 cables through to the Router/Modem unit.

Screw the N-Type connectors from the two LMR200 antenna cables, to the 5GXtream – it does not matter which LTE antenna goes to which LTE connector.



3.3 Mounting the 5G LTE Dual Antenna

The external 5G LTE antenna (see Fig 4) is actually two high gain antennas in one compact enclosure. The two 7m coax cables that exit at the base of the unit, are terminated in SMA connectors that screw in to the two matching connectors on the 5GXtream main unit – they can be connected either way round.

The external LTE antenna can either be flush mounted to a bulkhead (horizontal or vertical), pole mounted or screwed on to a standard 1"x14TPI mount such as those used for VHF/GPS antennas.

If you wish to flush mount the antenna (NOTE - bulkhead must be no thicker than 12.5mm) then it is necessary to cut a Ø28mm diameter hole in the bulkhead. The antenna is supplied with a mounting nut and rubber gasket (see Fig 5) and once the cables are inserted through the bulkhead (and through the mounting nut), tighten the mounting nut to hold the antenna in place (do not over tighten the nut – torque must be <6Nm).

The antenna is also supplied with a plastic pole mount adaptor and stainless 1"x14TPI thread mount adaptor (see Fig 6). The pole mount adaptor screws on to the base of the antenna, in place of the mounting nut and can be used to mount the antenna on a 42mm outside diameter pole. Once the antenna is fitted to the pole, secure it using the two grub screws.

If you wish to mount the external LTE antenna on a standard 1"x14TPI VHF/GPS mount (not supplied), fully insert the stainless adaptor in to the plastic pole mount adaptor and secure it with the two grub screws. Now screw the antenna on to the mount.



Figure 4


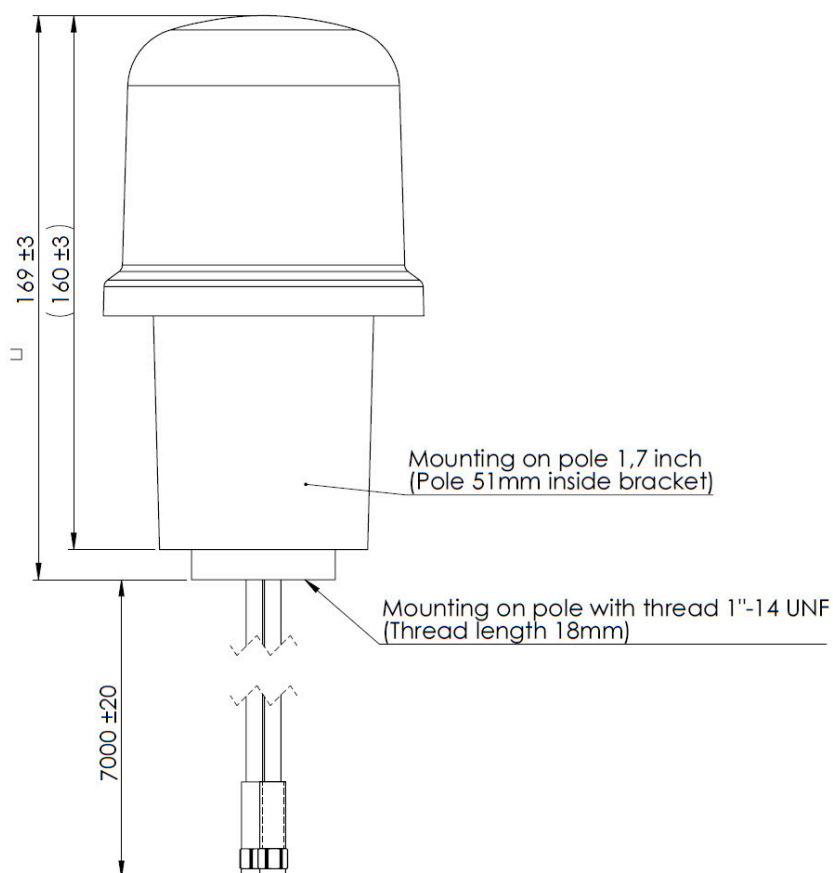


Figure 5



Figure 6

Dimensioned Drawing

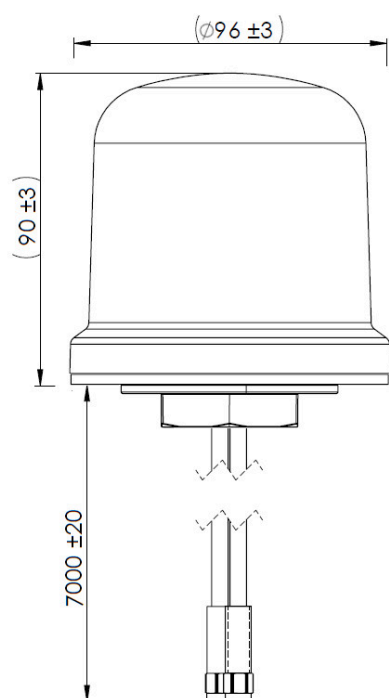



3.4 Mounting the 5GXtream GPS Antenna

The 5GXtream has a powerful GNSS (GPS+GLONASS+GAILEO) receiver, which can provide position and timing data for logging and geo-fencing. It is also possible to configure it to send this data to the NMEA 2000 interface, but this is not enabled by default.

A small passive, adhesive backed, GPS antenna is supplied with 3m of cable. It is designed for discrete mounting, inside the boat and should be mounted close to a window or where there is just glass or GRP between the antenna and the sky.



The SMA connector should be screwed into the GPS connector on the 5GXtream.

For installations that require an external GPS sensor, Digital Yacht can supply the MA800 antenna (Part/No X500.391) which comes with 10m of cable and can be fitted on a standard 1"x14TPI thread VHF/GPS mounting bracket.

3.5 Power Requirements

The unit is designed to work on vessels with a 12V or 24V DC system (9-30V DC Input voltage). It should be wired to a 1 Amp fused or circuit breaker protected circuit and if connected to a higher amperage circuit, then a 1A in-line fuse should be used to protect the 5GXtream wiring.

The 5GXtream has a two-core power cable with a Red (+) and Black (-) wire. Be very careful to ensure that the correct supply voltage polarity is connected to the 5GXtream, as reverse polarity will damage the unit. Once connected to the vessel's 12v/24v DC system, do not apply power but continue with the installation steps below.

3.6 Network Connections

The 5GXtream has five RJ45 Ethernet connectors; 4x LAN and 1x WAN. If you wish to connect additional wired devices to the 5GXtream's local area network (LAN) such as a Smart TV, fixed mount computer, VOIP Phone, etc. then use a conventional network cable to connect the devices to any of the 4x LAN sockets of the 5GXtream.

If you wish to connect another Ethernet based internet connection, such as StarLink, then this should be connected to the 5GXtream's WAN socket using a conventional network cable.

If you are regularly visiting marinas with good Wi-Fi hotspots, then you may wish to add [Digital Yacht's Long Range WiFi Kit](#) which can allow one of the 5GXtream's wireless interfaces to connect to either a 2.4GHz or 5GHz wireless hotspot and use that as its connection to the internet, rather than its own mobile 4G/5G connection.

The 5GXtream can be instructed to use its mobile connection, a wired WAN connection or a WiFi connection to access the internet, via the units web interface, which is covered later in this manual.

3.7 Inserting a 5G/4G data SIM card

To connect to the internet, the 5GXtream must have a 5G/4G data SIM inserted which is registered to a valid mobile operator account. Any mobile operator's SIM can be used that is the Standard SIM (15 x 25mm) size.

The 5GXtream has two standard SIM slots and it is possible to fit two SIMs from two different network operators. You can set SIM switching rules to decide which SIM is given preference i.e. No network, weak signal, data limit reached, etc.

To insert a SIM (Fig 7), remove the SIM extractor tool (1) and gently press the end of the tool into the hole to the right of the SIM tray you wish to use. The tray will partially eject, and you can then pull the SIM tray out completely. Place the



SIM, gold contacts up, into the tray. Finally re-insert the SIM tray ensuring it lines up with the slot and not going in at an angle. Don't forget to replace the SIM extractor tool back into its slot for future use.

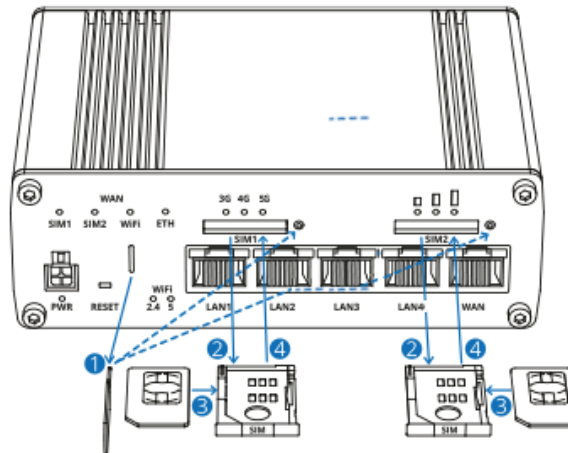


Figure 7

3.8 Powering Up

Double check that all power and Ethernet connections are correctly made and then apply power for the first time. A series of external LED indicators on the 5GXtream which illuminate to show the status of the unit as detailed below....

WiFi band LEDs

The WiFi band LEDs are located at the bottom of the front panel of the device, to the left of the Ethernet ports. They display whether a WiFi Access Point (AP) is active on a specific band.

State	Description
2.4 LED turned on.	At least one 2.4 GHz Access Point is running.
2.4 LED turned off	No 2.4 GHz Access Points are running.
5 LED turned on	At least one 5 GHz Access Point is running.
5 LED turned off	No 5 GHz Access Points are running.

WAN type LEDs

The WAN type LEDs are located at the top-right of the front panel. They indicate which Internet connection is active.

State	Description
SIM1 LED on	A mobile data connection on SIM1 is active.
SIM1 LED off	A mobile data connection on SIM1 is inactive.
SIM2 LED on	A mobile data connection on SIM2 is active.
SIM2 LED off	A mobile data connection on SIM2 is inactive.
WiFi LED on	A WiFi data connection (WiFi WAN) is active.
WiFi LED off	A WiFi data connection (WiFi WAN) is inactive.
ETH LED on	An Ethernet data connection (wired WAN) is active.
ETH LED off	An Ethernet data connection (wired WAN) is inactive.

Ethernet port LEDs

There are two LEDs located at the top of each Ethernet port. They provide information on the current states of the Ethernet ports. Each port has two LEDs:



Orange - 10/100 Mbps connection

Green - 1000 Mbps connection

Below is an explanation of the behaviour of the green and orange LEDs.

State	Description
LED on	A data connection on the port is operational (cable plugged in, end device visible, no data is being transferred).
LED off	No data connection on the port is operational (no cable, bad cable or end device not visible for some other reason (such as damaged network card)).
LED blinking	Connection established and data is being transferred over this port.

Mobile network type LEDs

The mobile network type LEDs are located near the SIM card slot. They display which type of Internet connection is active.

Action	Description
3G LED turned on	Device is connected to a 3G network.
4G LED turned on	Device is connected to a 4G network.
3G blinking	Device is connected to a 3G network but hasn't received an IP address.
4G blinking	Device is connected to a 4G network but hasn't received an IP address.
3G & 4G LEDs blinking at the same time every 500 ms	No SIM card or incorrect PIN.
3G & 4G LEDs turns on and off in a sequence one after the other	The device is attempting to connect to a mobile network operator.

Mobile signal strength indication LEDs

The mobile signal strength indication LEDs are located near the SIM card slot. The number of lit up LEDs represents a different mobile signal strength (RSSI) value in dBm.

No. of lit up LEDs	Signal strength
0	≤ -111 dBm
1	-110 dBm to -97 dBm
2	-96 dBm to -82 dBm
3	-81 dBm -67 dBm
4	-66 dBm to -52 dBm
5	≥ -51 dBm

In many cases the 5GXtream will be installed behind a bulkhead or inside a locker, making it difficult to see the status of the unit. However, under normal circumstances after power is applied, the "5GXtream" wireless network (SSID) should appear within 50-60 seconds.

If after 60 seconds, you scan for wireless networks and cannot see "5GXtream", it will be necessary to gain access to the unit to check the status LEDs and to contact Digital Yacht support by email support@digitalyacht.co.uk



4. Configuration

Assuming your wireless device sees the “5GXtream” network, join it using the default wireless password, shown below. Once connected, your device should automatically get an IP address, via DHCP, in the 192.168.1.xxx range.

Wireless Password = 5GXtream

Many operating systems, including iOS and Android, will complain about the connection saying “No Internet Connection”. This is perfectly normal and indicates that the 4G/5G connection is not setup yet. As soon as the SIM card is inserted and configured (if necessary) this warning should disappear.

In addition, Apple have recently started warning about “Weak Security” on WPA and WPA2 encrypted wireless networks. However, 5GXtream supports the latest WPA3 encryption and by default we enable “WPA2 and WPA3 Mixed Mode” so that new devices that support WPA3 and older devices that only support WPA2 can both join the same network.

You should now be able to type either <http://5GXtream.lan> or <http://192.168.1.1> in to the address bar of your browser and see the 5GXtream login page appear (see Fig 8). Make sure you use the **http://** pre-fix or your browser may try to do a web search.

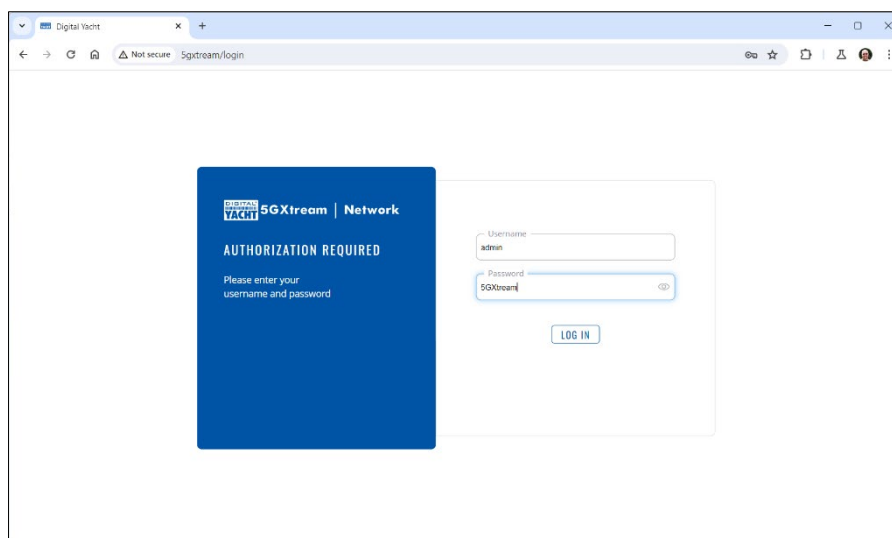


Figure 8

Now login to the 5GXtream by entering the default login password as below...

Username = admin

Password = 5GXtream

Once logged in you will be taken to the main Overview Page as shown in Fig.6.

This page provides a “Dashboard” showing the status of the 5GXtream’s network connections and settings. From this page, you can access the main menu bar down the left side of the page which will take you to various status, configuration, tools and services menus. The default 5GXtream settings have been carefully chosen to work well in most situations/installations, commonly found on marine vessels.

 **Digital Yacht strongly recommend that you do not change any settings except those specifically mentioned in this manual and we cannot support or warranty repair any 5GXtream that fails due to wrong settings**



We do not generally recommend changing the Admin password of the router, as this can be difficult to reset when forgotten. Also, this can only be used by someone wirelessly connected to the 5GXstream, so make sure your wireless security is good and that you trust the people you allow to connect to the network and there should be no need to change the default Admin password.

If you do decide to change the Admin password, make sure you record the new password somewhere you can easily refer to in the future, as resetting this involves a full factory reset.

The key setting that all customers must set are the Wireless Network settings. This secures your 5GXstream and ensures only you and the people you want to connect, can join the 5GXstream wireless network.

4.1 Changing the APN Settings

Every data SIM network provider has different Access Point Name (APN) settings that allow the 5GXstream to register and connect to the mobile data network. These settings can usually be found online (Google “APN settings for Vodaphone”) or requested from the network provider. By default, the 5GXstream will query the SIM that is installed and automatically select the APN settings from its internal database.

However, we have found that due to recent changes in services, some new SIMs are not included in the database and it maybe necessary to manually enter some “custom” SIM settings. In the following example, we show the default “Auto APN” mode and also how to manually enter a “custom” APN, using the recommended Vodaphone settings for monthly contract SIMs. If the Auto APN settings do not work and you cannot get online, you will need to enter the correct details for the SIM network provider you are using.

To check or change the APN settings, login to the 5GXstream web interface and click on the *Network>WAN* menu option. You should see the page in Fig.9.

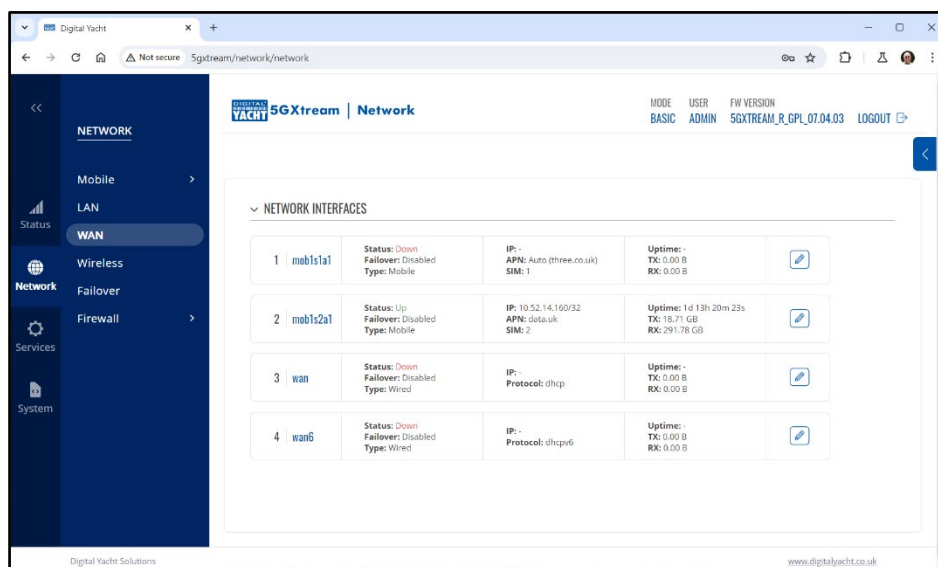


Figure 9

Click on the “Pencil” icon of the MOB1S1A1 (SIM 1) or MOB1S2A1 (SIM 2) row, depending upon which SIM card slot you wish to setup, to edit the settings and you will see the page shown in Fig.10 which shows the default “Auto APN” mode.

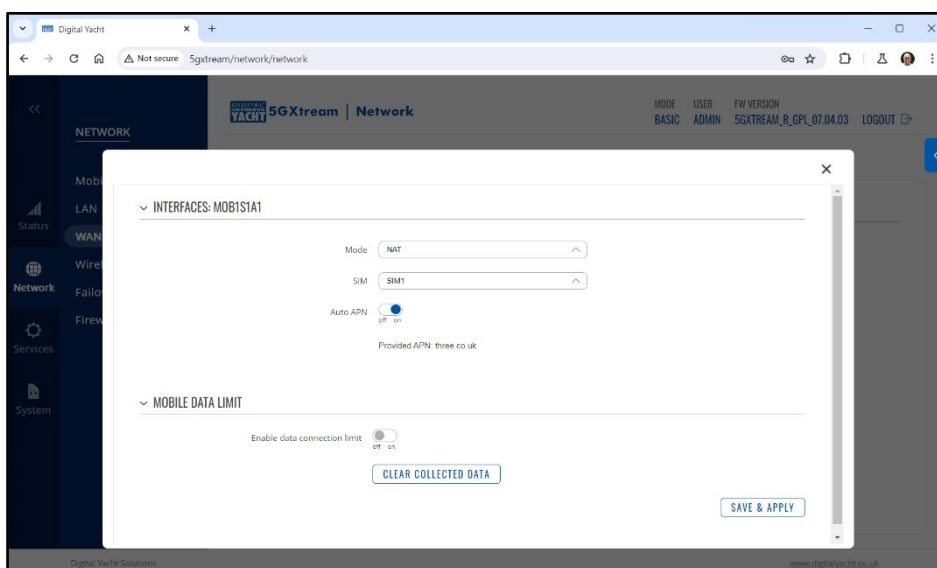


Figure 10

If the automatic APN settings do not work for your data SIM, turn the “Auto APN” mode to OFF and then some extra entry boxes will appear as shown in Fig.11.

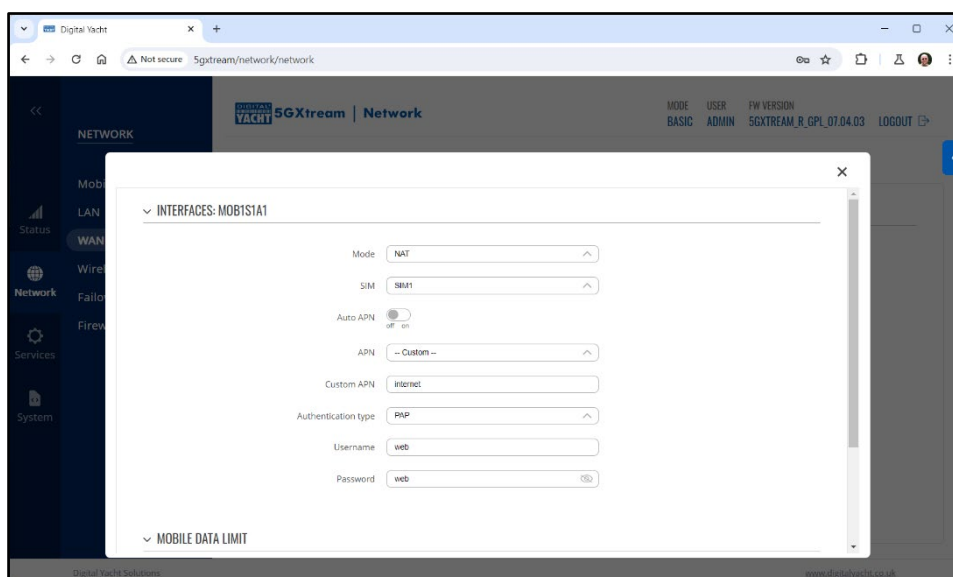


Figure 11

Select “Custom” from the APN drop down menu and then type the APN name, authentication type and the Username and Password that are applicable for your network operator’s data SIM. You will either need to search for this information online or contact your network operator.

Once all of the APN settings are entered, scroll to the bottom of the page and click the “Save & Apply” button. It will take 10-20 seconds for the modem to restart with the new settings and register on the mobile network

To check that the 4G/5G mobile connection is working, go to *Status>Network>Mobile* page. It should say Data Connection “Connected”, State “Registered” with the network operator shown, SIM Card Info “Ready” and the Bytes Received/Sent should be counting up, as shown in Fig.12.

If everything is OK, you will now be connected to the internet.

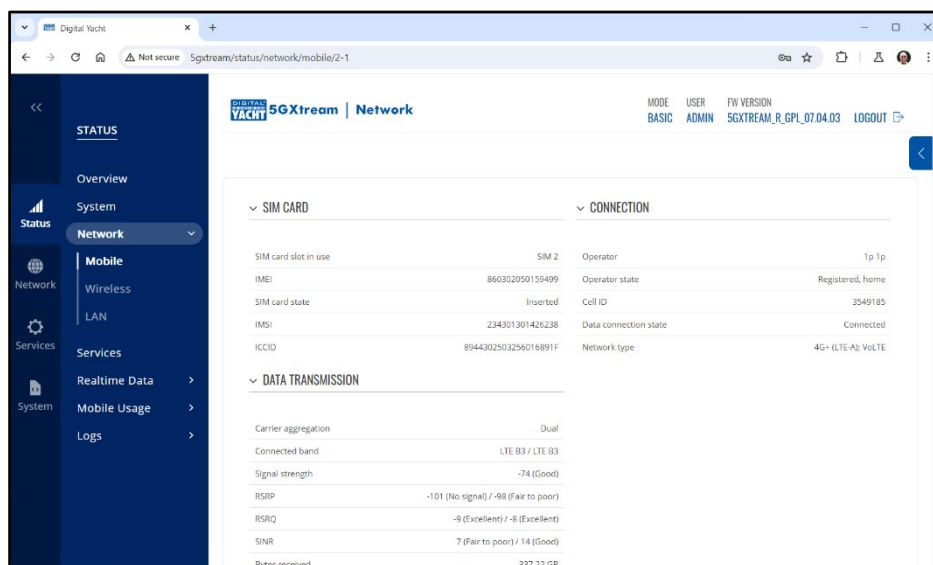


Figure 12

4.2 Changing the Wireless Network Settings

It is very important that you “lock down” your wireless network, with your own network name (SSID) and wireless password. This ensures that only people that you give the network information to, can connect, stopping other less trustworthy individuals from connecting to your network and using your internet connection.

To change the default wireless network name and password of your 5GXtream, login to the web interface and click on the **Network>Wireless** menu options, which will take you to the page shown in Fig 13.

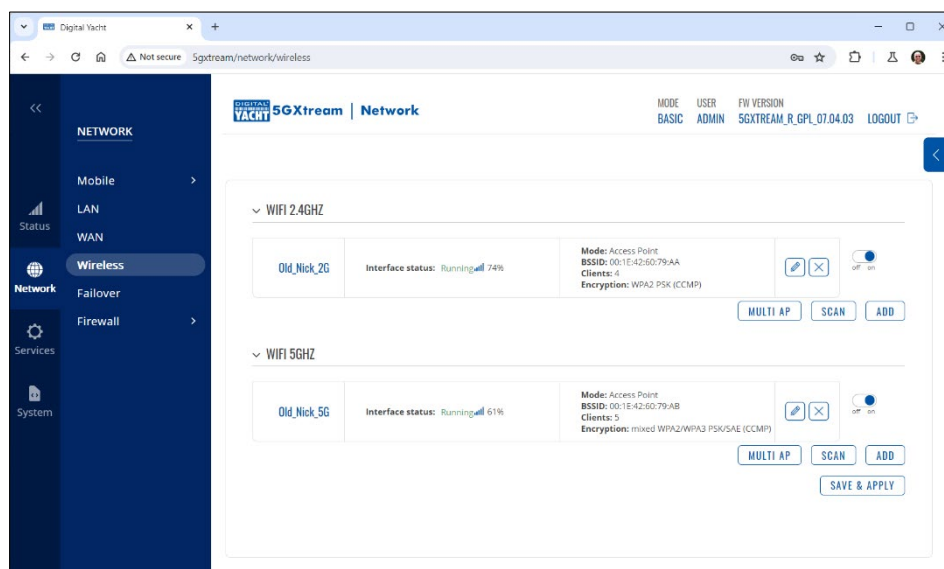


Figure 13

As you can see, the 5GXtream creates both a 2.4GHz and a 5GHz wireless network. Both wireless networks are enabled by default and devices joining either wireless network are bridged together so they are on the same Local Area Network (LAN). The 5GHz network will provide optimum speed but may not reach as far around the boat as the 2.4GHz network.

You can set different SSIDs (Wireless Network Names) and Passwords for the 2.4GHz and 5GHz networks. We recommend including the number 2 or 5 in the network name, to identify the 2.4GHz or 5GHz network. To change the wireless network



settings, click on the “Edit” icon (Pencil) in either the 2.4GHz or 5GHz network’s row. Now you will be taken to the screen shown in Fig 14, where you can enter the SSID (Wireless Network Name) that you wish to use.

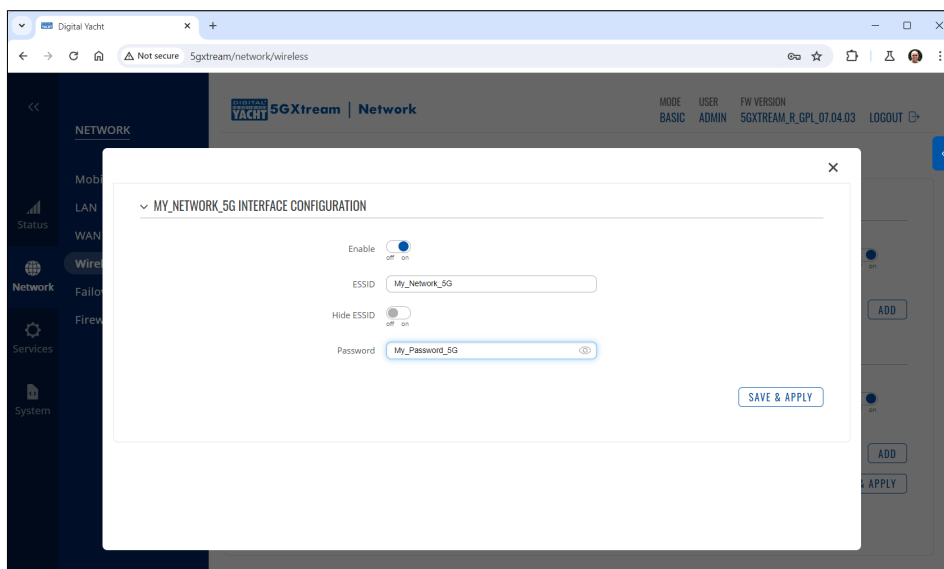


Figure 14

When choosing network names, it is best to avoid spaces and special characters (such as apostrophes) in the SSID or password. Instead of using a space, use the underscore character, i.e. for “My Network” use “My_Network”. Once you have changed your network’s SSID, now change the Password (must be more than 8 characters).

Try to use a strong password with at least one capital letter and a mix of numbers and letters. As with the SSID, it is best to avoid special characters and spaces. Make sure to record your password somewhere secure but easy for you to access, as resetting a wireless password requires a wired connection to the 5GXtream or a factory reset, both of which are not always easy or practical.

Once the Network Name and Password have been entered, click the “Save & Apply” button and the 5GXtream will apply the new settings and reboot. Due to the network name change, your wireless device will be dis-connected, so wait for the new wireless network name to appear in your Wi-Fi scan list (50-60 secs) and connect to it using the new password.

4.3 Changing the Internet (WAN) Connection

The 5GXtream can connect to the internet in the following ways:

- 1) Using the mobile network of the inserted SIM card(s)
- 2) Via another internet connection device, for example Starlink, connected to its wired WAN socket
- 3) By using one of its two wireless adaptors to connect to a wireless hotspot

By default the 5GXtream is designed to use the mobile network of the SIM in slot “SIM1” which in the web interface is referred to as MOB1S1A1. It also has a SIM2 slot (MOB1S2A1) which can have a second SIM card, from another mobile network operator, inserted. You will need to setup the Auto or Manual APN settings for each of SIM card, see section 4.1 for details, making sure to enter the correct APN settings for the right SIM card.

If you are using two SIMs, you will need to select the SIM card, whose mobile network you would like to use. This is done by going to NETWORK>MOBILE>GENERAL and you will see the settings for SIM1 appear (see Fig 15). The “Default SIM” switch will be ON and if you wish to switch to use SIM2, click on the SIM2 tab and turn ON the “Default SIM” switch. Now click the SAVE & APPLY button and the modem will restart using the SIM2 network. Whichever SIM you set as the default, the “Default SIM” switch of the other SIM will switch OFF automatically – you do not have to turn it OFF.

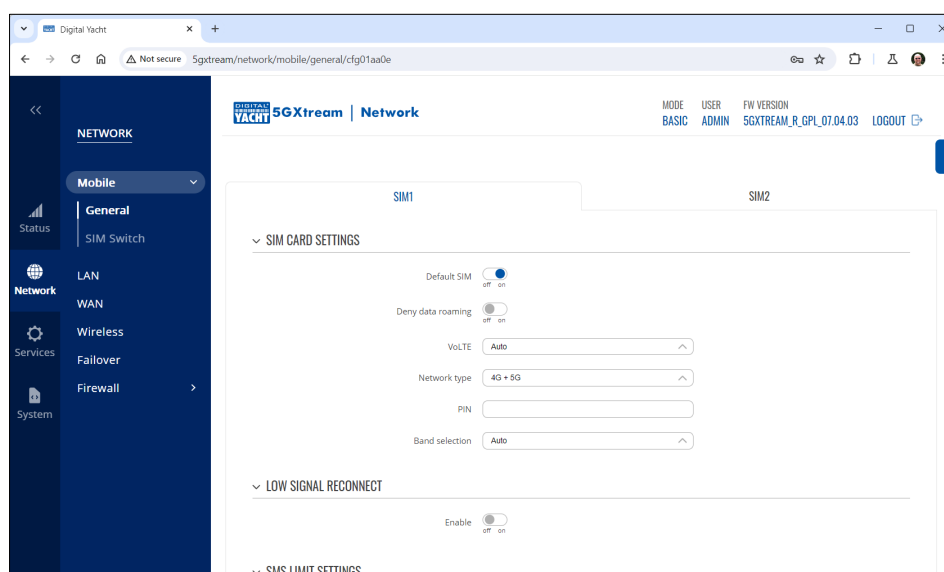


Figure 15

There is also a “SIM Switch” feature that will make the 5GXtream automatically switch between the two SIMs, based on whatever connection conditions you choose, i.e. No Signal, Data Limit reached, etc. To enable this feature, go to NETWORK>MOBILE>SIM SWITCH and for each of the SIMs, set the switching condition that you wish to trigger a change of SIM card (mobile network).

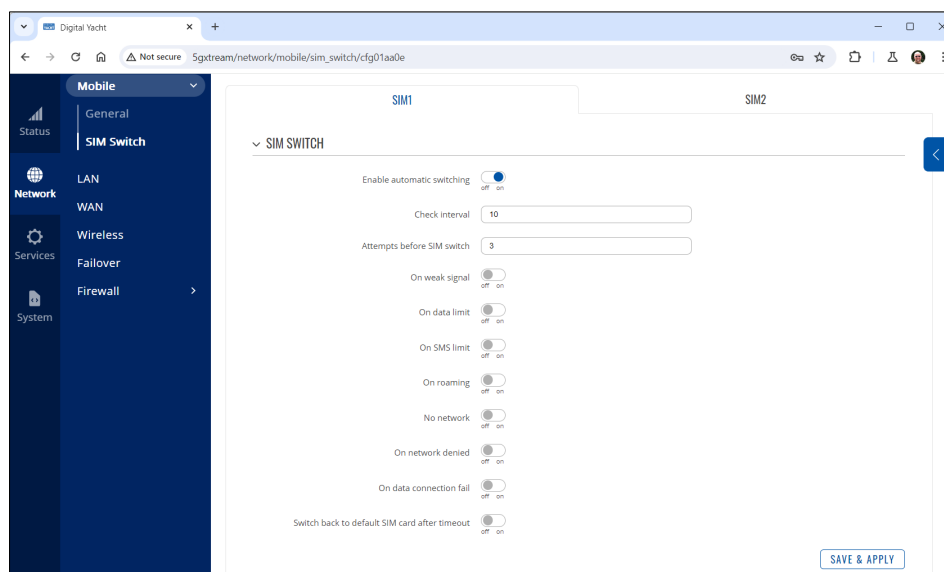


Figure 16

Once you have setup the conditions for one SIM card, click the SAVE & APPLY button, wait for the new settings to be applied and then repeat the operation for the second SIM card.

The 5GXtream's wired WAN socket can be used to interface to other devices that can connect to the internet using different technologies, such as Starlink, Iridium, VSat or Inmarsat. By default, the 5GXtream's WAN socket expects to receive an IP address from the system it is connecting to (via DHCP). Please ensure that the system you are connecting to is using a different network IP address range than 5GXtream which by default uses 192.168.1.1/24

Unless you are experienced in computer networking, we strongly recommend that you find a local marine electronics engineer with computer networking experience, to connect and configure the two systems, as Digital Yacht cannot provide technical support on custom IT networking.



It is also possible to use one of the 5GXstream's wireless interfaces as an Internet connection, by switching it to STATION mode and connecting it to a public hotspot such as you find in marinas.

We recommend our optional [Long Range WiFi kit](#) which can be connected in place of one of the two internal WiFi antennas and which increases the range of the WiFi signal.

5. Normal Operation

The 5GXstream will always create its own wireless network within 50-60 seconds of being powered up and any wireless device should be able to scan for wireless networks, select the 5GXstream and connect to it.

Assuming you are within 5G/4G coverage, then any device connected to the 5GXstream wireless network, or wired to one of the LAN sockets should be able to access the internet. If you are using a "Pay As You Go" SIM or "Pay Monthly" SIM with a monthly data limit (recommended), please ensure you have not used up all of your data allowance.

To check that you have a good 5G/4G mobile data connection to the internet, go to the main Status>Overview page and look at the "Internal Modem" panel where you should have a good signal strength shown on the Bar meter and Data Connection should say "Connected".

If you have good signal strength, the Data Connection says "Connected", then you should be online and be able to browse the internet, get email, stream movies, etc.

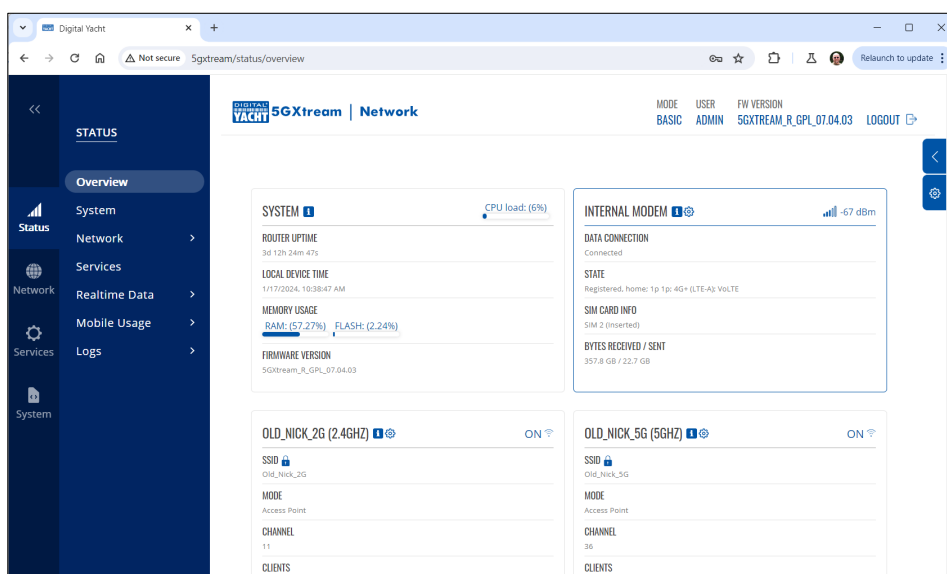


Figure 17

Sometimes, it is useful to know what devices are on the network and what their IP address is. You can view a list of all devices that have received an IP Address from the 5GXstream via DHCP.

To access the DHCP Client List, go to Status>Network>LAN and you will see the page shown in Figure 18. Please note that this 5GXstream was using a different 192.168.42.xxx IP address range, than the default 5GXstream range which is 192.168.1.xxx.

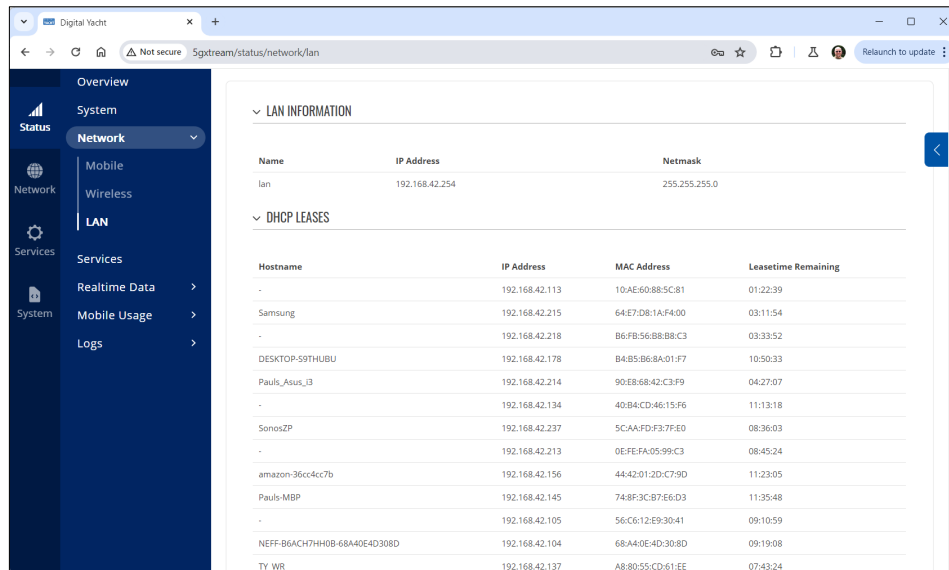


Figure 18

If you want to monitor the performance of the 5GXtream, go to **Status>Realtime Data** and you will see the page shown in Fig 19 or if you want to monitor how much data you are using go to **Status>Mobile Usage**. Make sure to select SIM1 or SIM2, depending on which SIM card you have been using.

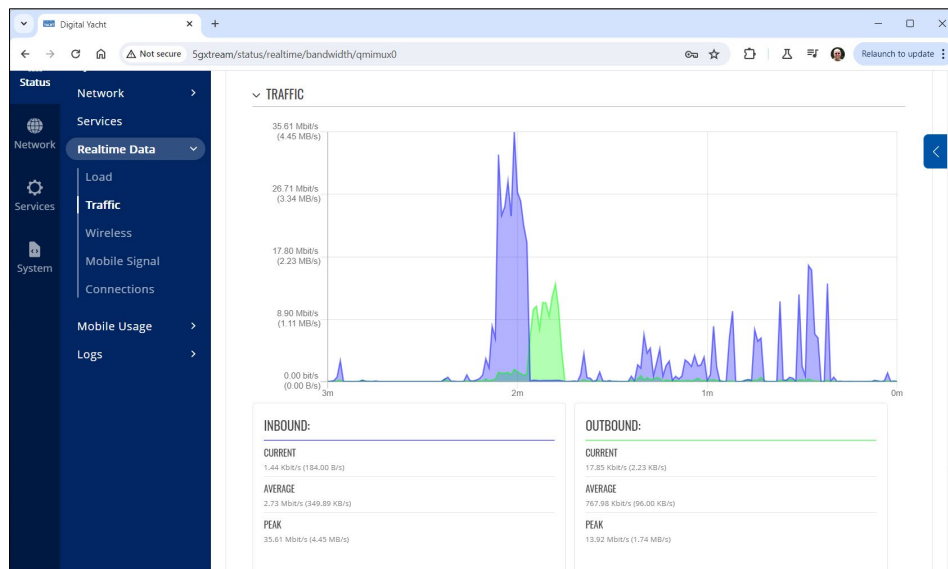


Figure 19