

J-Web User Guide for SRX Series Firewalls

Published
2023-12-18

Juniper Networks, Inc.
1133 Innovation Way
Sunnyvale, California 94089
USA
408-745-2000
www.juniper.net

Juniper Networks, the Juniper Networks logo, Juniper, and Junos are registered trademarks of Juniper Networks, Inc. in the United States and other countries. All other trademarks, service marks, registered marks, or registered service marks are the property of their respective owners.

Juniper Networks assumes no responsibility for any inaccuracies in this document. Juniper Networks reserves the right to change, modify, transfer, or otherwise revise this publication without notice.

J-Web User Guide for SRX Series Firewalls

Copyright © 2023 Juniper Networks, Inc. All rights reserved.

The information in this document is current as of the date on the title page.

YEAR 2000 NOTICE

Juniper Networks hardware and software products are Year 2000 compliant. Junos OS has no known time-related limitations through the year 2038. However, the NTP application is known to have some difficulty in the year 2036.

END USER LICENSE AGREEMENT

The Juniper Networks product that is the subject of this technical documentation consists of (or is intended for use with) Juniper Networks software. Use of such software is subject to the terms and conditions of the End User License Agreement ("EULA") posted at <https://support.juniper.net/support/eula/>. By downloading, installing or using such software, you agree to the terms and conditions of that EULA.

Table of Contents

About This Guide | xxviii

1

Juniper Web Device Manager

Getting Started | 2

Juniper Web Device Manager Overview | 2

What is J-Web? | 2

Benefits of J-Web | 3

Access the J-Web User Interface | 3

Prerequisites for Using J-Web | 3

Log in to J-Web | 4

The J-Web Setup Wizard | 8

Configure SRX Series Firewalls Using the J-Web Setup Wizard | 8

Example: J-Web Wizard for Standalone Mode | 10

J-Web Setup Wizard Parameters | 22

Explore J-Web | 39

J-Web: A First Look | 40

J-Web Launch Pad | 40

J-Web Top Pane | 42

J-Web Side Pane | 44

J-Web Main Pane | 47

J-Web Workflow Wizards | 49

Summary | 50

2

Add SRX Series Firewall to Security Director Cloud

Add an SRX Series Firewall to Juniper Security Director Cloud | 52

3

Dashboard

J-Web Dashboard | 55

Dashboard Overview | 55

What is J-Web Dashboard | 55

Work with Widgets | 56

4

Monitor**Network | 62**

Monitor Interfaces | 62

Monitor DHCP Server Bindings | 63

Monitor IPsec VPN | 65

Logs | 69

Monitor Session | 69

Monitor Threats | 75

Monitor Web Filtering | 81

Monitor ATP | 85

Monitor VPN | 90

Monitor All Events | 93

Monitor System | 101

Monitor Alarms | 103

Maps and Charts | 105

Monitor Traffic Map | 105

Monitor Threats Map | 108

Monitor Applications | 115

Monitor Users | 118

Statistics | 120

Monitor Threat Prevention | 120

Monitor VPN Phase I | 122

Monitor VPN Phase II | 123

Monitor DNS Security | 125

Monitor Encrypted Traffic Insights | 127

Reports | 129

About Reports Page | 129**Overview | 130****Threat Assessment Report | 135****Application and User Usage | 135****Top Talkers | 136****IPS Threat Environment | 136****Viruses Blocked | 136****URL Report | 137****Virus: Top Blocked | 137****Top Firewall Events | 137****Top Firewall Deny Destinations | 137****Top Firewall Denies | 137****Top IPS Events | 137****Top Anti-spam Detected | 138****Top Screen Attackers | 138****Top Screen Victims | 138****Top Screen Hits | 138****Top Firewall Rules | 138****Top Firewall Deny Sources | 138****Top IPS Attack Sources | 138****Top IPS Attack Destinations | 138****Top IPS Rules | 138****Top Web Apps | 139****Top Applications Blocked | 139****Top URLs by User | 139****Top Source Zone by Volume | 139****Top Applications by User | 139****Top Botnet Threats By Source Address via IDP Logs | 139****Top Botnet Threats by Destination Address via IDP Logs | 139****Top Botnet Threats by Threat Severity via IDP Logs | 140****Top Malware Threats by Source Address via IDP Logs | 140****Top Malware Threats by Destination Address via IDP Logs | 140****Top Malware Threats by Threat Severity via IDP Logs | 140****Top Blocked Applications via Webfilter Logs | 140****Top Permitted Application Subcategories by Volume via Webfilter Logs | 141****Top Permitted Application Subcategories by Count via Webfilter Logs | 141**

Device Administration

Basic Settings | 144

Configure Basic Settings | 144

Cluster Management | 164

Configure Cluster (HA) Setup | 164

About the Cluster Configuration Page | 179

Edit Node Settings | 182

Add an HA Cluster Interface | 183

Edit an HA Cluster Interface | 185

Delete an HA Cluster Interface | 185

Add a Redundancy Group | 186

Edit a Redundancy Group | 188

Delete a Redundancy Group | 189

User & Roles | 190

About the Users Page | 190

Create a User | 192

Edit a User | 197

Delete a User | 198

About the Roles Page | 198

Create a Role | 202

Edit a Role | 204

Delete a User | 204

Multi Tenancy—Resource Profiles | 206

About the Resource Profiles Page | 206

Global Settings | 208

Add a Resource Profile | 209

Edit a Resource Profile | 213

Delete a Resource Profile | 213

Multi Tenancy—Interconnect Ports | 215

About the Interconnect Ports Page | 215

Add a LT Logical Interface | 217

Edit a LT Logical Interface | 224

Delete a Logical Interface | 224

Search for Text in an Interconnect Ports Table | 224

Multi Tenancy—Logical Systems | 226

About the Logical Systems Page | 226

Add a Logical System | 228

Edit a Logical System | 239

Delete a Logical System | 240

Search Text in Logical Systems Table | 240

Multi Tenancy—Tenants | 241

About the Tenants Page | 241

Add a Tenant | 243

Edit a Tenant | 251

Delete a Tenant | 251

Search Text in Tenants Table | 252

Certificates Management—Certificates | 253

About the Certificates page | 253

Create a Device Certificate | 255

Create Device Certificate (Let's Encrypt) | 256

Create Device Certificate (Local Self-Signed) | 257

Create Device Certificate (SCEP) | 260

Create Device Certificate (ACME) | 262

Create Device Certificate (CMPv2) | 264

- Create Device Certificate (CSR) | 266
- Load Signed Device Certificate (Externally Generated) | 269

Add a Certificate Authority (CA) | 270

- Add CA Certificate | 270

Export a Device Certificate | 274

Edit a CA Certificate | 275

Delete a Certificate | 275

Search Text in the Certificates Table | 276

Re-Enroll a Device Certificate | 276

Load CA Certificate | 277

Reload CA Certificate | 279

Certificate Management—Certificate Authority Group | 281

About the Certificate Authority Group Page | 281

Import a Trusted CA Group | 282

Add a CA Group | 283

Edit a CA Group | 284

Delete a CA Group | 285

Search Text in the Certificate Authority Group Table | 285

License Management | 287

Manage Your Licenses | 287

- About License Management Page | 287
- Add License | 288
- Delete Installed Licenses | 289
- Update Installed Licenses | 289
- Update Trial Licenses | 289
- Display License Keys | 289
- Download License Keys | 290
- Software Feature Licenses | 290

Security Package Management | 291

About the Security Package Management Page | 291

Install or Upload IPS Signatures Package | 295

IPS Signatures Settings | 297

Install Application Signatures Package | 299

Application Signatures Settings | 299

Manage URL Categorization | 301

Check URL Recategorization Status | 302

Install URL Category Package | 302

URL Categories Settings | 303

ATP Management | 306

Enroll Your Device with Juniper ATP Cloud | 306

About the Diagnostics Page | 309

Operations | 312

Maintain Files | 312

About Files Page | 312

Clean Up Files | 312

Download and Delete Files | 313

Maintain Reboot Schedule | 315

Maintain System Snapshots | 317

Software Management | 319

Upload Software Packages | 319

Install Software Packages | 320

Rollback Software Package Version | 321

Configuration Management | 323

Manage Upload Configuration Files | 323

Manage Configuration History | 324

Manage Rescue Configuration | 328

Alarm Management | 329

Monitor Chassis Alarm | 329

- About Chassis Alarm Page | 329
- Create Chassis Alarm Definition | 329
- Edit Chassis Alarm Definition | 334

Monitor System Alarm | 335

- About System Alarm Page | 335
- Create System Alarm Configuration | 335
- Edit System Alarm Configuration | 339

RPM | 340

Setup RPM | 340

View RPM | 349

Tools | 355

Troubleshoot Ping Host | 355

- About Ping Host Page | 355

Troubleshoot Ping MPLS | 359

- About Ping MPLS Page | 360

Troubleshoot Traceroute | 365

- About Traceroute Page | 365

Control Plane Packet Capture | 368

- About the Control Plane Packet Capture Page | 368

About the Data Plane Packet Capture Page | 375

Access CLI | 379

- About CLI Terminal Page | 379

View CLI Configuration | 381

- About CLI Viewer Page | 381

Edit CLI Configuration | 382

- About CLI Editor Page | 382

Point and Click CLI | 383

| About Point and Click CLI Page | 383

Reset Configuration | 390

Reset Configuration and Rerun Setup Wizard | 390

Network

Connectivity—Interfaces | 393

About the Interfaces Page | 393

Add a Logical Interface | 397

Edit an Interface | 404

Delete a Logical Interface | 405

Connectivity—VLAN | 406

About the VLAN Page | 406

Add a VLAN | 408

Edit a VLAN | 410

Delete a VLAN | 411

Assign an Interface to VLAN | 411

Connectivity—Link Aggregation | 413

About the Link Aggregation Page | 413

Link Aggregation Global Settings | 415

Add a Logical Interface to Link Aggregation | 416

Add a Link Aggregation | 417

Edit an Aggregated Interface | 419

Delete Link Aggregation | 420

Search for Text in the Link Aggregation Table | 420

Connectivity—PPPoE | 422

Configure PPPoE | 422

Connectivity—Wireless LAN | 424

About the Settings Page | 424

Create an Access Point | 426

Edit an Access Point | 427

Delete an Access Point | 428

Create an Access Point Radio Setting | 428

Edit an Access Point Radio Setting | 432

Delete an Access Point Radio Settings | 432

DHCP Client | 434

About the DHCP Client Page | 434

Add DHCP Client Information | 435

Delete DHCP Client Information | 437

DHCP Server | 438

About the DHCP Server Page | 438

Add a DHCP Pool | 440

Edit a DHCP Pool | 444

Delete a DHCP Pool | 445

DHCP Groups Global Settings | 445

Add a DHCP Group | 446

Edit a DHCP Group | 446

Delete a DHCP Group | 447

Firewall Filters—IPv4 | 448

About the IPv4 Page | 448

Add IPv4 Firewall Filters | 449

Firewall Filters—IPv6 | 466

About the IPv6 Page | 466

Add IPv6 Firewall Filters | 467

Firewall Filters—Assign to Interfaces | 482

About the Assign to Interfaces Page | 482

NAT Policies | 484

About the NAT Policies Page | 484

Create a Source NAT | 486

Edit a Source NAT | 492

Delete a Source NAT | 492

NAT Pools | 493

About the NAT Pools Page | 493

Global Options | 495

Create a Source NAT Pool | 496

Edit a Source NAT Pool | 500

Delete a Source NAT Pool | 501

Add a Destination NAT Pool | 501

Edit a Destination NAT Pool | 503

Delete a Destination NAT Pool | 503

Destination NAT | 504

About the Destination Page | 504

Add a Destination Rule Set | 506

Edit a Destination Rule Set | 509

Delete a Destination Rule Set | 509

Static NAT | 510

About the Static Page | 510

Add a Static Rule Set | 512

Edit a Static Rule Set | 516

Delete a Static Rule Set | 516

NAT Proxy ARP/ND | 518

About the Proxy ARP/ND Page | 518

Add a Proxy ARP | 519

Edit a Proxy ARP | 521

Delete a Proxy ARP | 521

Add a Proxy ND | 522

Edit a Proxy ND | 523

Delete a Proxy ND | 523

Static Routing | 525

About the Static Routing Page | 525

Add a Static Route | 526

Edit a Static Route | 528

Delete a Static Route | 528

RIP Routing | 529

About the RIP Page | 529

Add a RIP Instance | 531

Edit a RIP Instance | 533

Delete a RIP Instance | 533

Edit RIP Global Settings | 533

Delete RIP Global Settings | 537

OSPF Routing | 538

About the OSPF Page | 538

Add an OSPF | 540

Edit an OSPF | 549

Delete an OSPF | 549

BGP Routing | 551

About the BGP Page | 551

[Add a BGP Group | 555](#)

[Edit a BGP Group | 560](#)

[Delete a BGP Group | 561](#)

[Edit Global Information | 561](#)

[Routing Instances | 567](#)

[About the Routing Instances Page | 567](#)

[Add a Routing Instance | 569](#)

[Edit a Routing Instance | 570](#)

[Delete a Routing Instance | 571](#)

[Routing—Policies | 572](#)

[About the Policies Page | 572](#)

[Global Options | 574](#)

[Add a Policy | 575](#)

[Clone a Policy | 587](#)

[Edit a Policy | 587](#)

[Delete a Policy | 587](#)

[Test a Policy | 588](#)

[Routing—Forwarding Mode | 589](#)

[About the Forwarding Mode Page | 589](#)

[CoS—Value Aliases | 591](#)

[About the Value Aliases Page | 591](#)

[Add a Code Point Alias | 592](#)

[Edit a Code Point Alias | 593](#)

[Delete a Code Point Alias | 594](#)

[CoS—Forwarding Classes | 595](#)

[About the Forwarding Classes Page | 595](#)

Add a Forwarding Class | 596

Edit a Forwarding Class | 597

Delete a Forwarding Class | 597

CoS Classifiers | 599

About the Classifiers Page | 599

Add a Classifier | 601

Edit a Classifier | 602

Delete a Classifier | 603

CoS—Rewrite Rules | 604

About the Rewrite Rules Page | 604

Add a Rewrite Rule | 605

Edit a Rewrite Rule | 607

Delete a Rewrite Rule | 607

CoS—Schedulers | 609

About the Schedulers Page | 609

Add a Scheduler | 610

Edit a Scheduler | 612

Delete a Scheduler | 613

CoS—Scheduler Maps | 614

About the Scheduler Maps Page | 614

Add a Scheduler Map | 615

Edit a Scheduler Map | 616

Delete a Scheduler Map | 617

CoS—Drop Profile | 618

About the Drop Profile Page | 618

Add a Drop Profile | 619

Edit a Drop Profile | 621

Delete a Drop Profile | 621

CoS—Virtual Channel Groups | 622

About the Virtual Channel Groups Page | 622

Add a Virtual Channel | 623

Edit a Virtual Channel | 624

Delete a Virtual Channel | 625

CoS—Assign To Interface | 626

About the Assign To Interface Page | 626

Edit a Port | 628

Add a Logical Interface | 628

Edit a Logical Interface | 630

Delete a Logical Interface | 631

Application QoS | 632

About the Application QoS Page | 632

Add an Application QoS Profile | 635

Edit an Application QoS Profile | 637

Clone an Application QoS Profile | 637

Delete an Application QoS Profile | 638

Add a Rate Limiter Profile | 638

Edit a Rate Limiter Profile | 639

Clone a Rate Limiter Profile | 640

Delete a Rate Limiter Profile | 640

IPsec VPN | 642

About the IPsec VPN Page | 642

IPsec VPN Global Settings | 645

Create a Site-to-Site VPN | 649

Create a Remote Access VPN—Juniper Secure Connect | 666

Create a Remote Access VPN—NCP Exclusive Client | 689

Edit an IPsec VPN | 702

Delete an IPsec VPN | 703

Dynamic VPN | 704

About the Dynamic VPN Page | 704

Global Settings | 706

IPsec Template | 708

Add a Dynamic VPN | 709

Edit a Dynamic VPN | 710

Delete a Dynamic VPN | 711

Compliance | 712

About the Compliance Page | 712

Create Pre-Logon Compliance | 714

Edit Pre-Logon Compliance | 720

Delete Pre-Logon Compliance | 720

Security Policies and Objects

Security Policies | 723

About the Security Policies Page | 723

Global Options | 728

Add a Rule to a Security Policy | 731

Clone a Security Policy Rule | 748

Edit a Security Policy Rule | 749

Delete a Security Policy Rule | 749

Configure Captive Portal for Web Authentication and Firewall User Authentication | 750

Overview | 750

Workflow | 751

Step 1: Create a Logical Interface and Enable Web Authentication | 753

Step 2: Create an Access Profile | 759

Step 3: Configure Web Authentication Settings | 760

Step 4: Create Security Zones and Assign Interfaces to the Zones | 762

Step 5: Enable Web or Firewall User Authentication for Captive Portal in the Security Policy | 766

Step 6: Verify the Web Authentication and User Authentication Configuration | 773

Metadata Streaming Policy | 777

About the Metadata Streaming Policy Page | 777

Create a Metadata Streaming Policy | 779

Edit a Metadata Streaming Policy | 780

Delete a Metadata Streaming Policy | 781

Zones/Screens | 782

About the Zones/Screens Page | 782

Add a Zone | 784

Edit a Zone | 787

Delete a Zone | 787

Add a Screen | 787

Edit a Screen | 798

Delete a Screen | 799

Zone Addresses | 800

About the Zone Addresses Page | 800

Add Zone Addresses | 802

Clone Zone Addresses | 804

Edit Zone Addresses | 805

Delete Zone Addresses | 805

Search Text in a Zone Addresses Table | 805

Global Addresses | 807

About the Global Addresses Page | 807

Add an Address Book | 808

Edit an Address Book | 812

Delete an Address Book | 812

Services | 813

About the Services Page | 813

Add a Custom Application | 815

Edit a Custom Application | 818

Delete Custom Application | 818

Add an Application Group | 819

Edit an Application Group | 820

Delete an Application Group | 821

Dynamic Applications | 822

About the Dynamic Applications Page | 822

Global Settings | 825

Add Application Signatures | 828

Clone Application Signatures | 833

Add Application Signatures Group | 834

Edit Application Signatures | 835

Delete Application Signatures | 835

Search Text in an Application Signatures Table | 836

Application Tracking | 837

About the Application Tracking Page | 837

Schedules | 839

About the Schedules Page | 839

Add a Schedule | 841

Clone a Schedule | 843

Edit a Schedule | 843

Delete a Schedule | 844

Search Text in Schedules Table | 844

Proxy Profiles | 845

About the Proxy Profiles Page | 845

Add a Proxy Profile | 847

Edit a Proxy Profile | 848

Delete a Proxy Profile | 848

8

Security Services

Content Security Default Configuration | 851

About the Default Configuration Page | 851

Edit a Default Configuration | 853

Delete a Default Configuration | 853

Content Security Antivirus Profiles | 855

About the Antivirus Profiles Page | 855

Add an Antivirus Profile | 857

Clone an Antivirus Profile | 863

Edit an Antivirus Profile | 863

Delete an Antivirus Profile | 864

Prevent Virus Attacks by Using J-Web Content Security Antivirus | 864

Content Security Antivirus Overview | 865

Benefits of Content Security Antivirus | 866

Antivirus Workflow | 867

Step 1: Update Default Configuration for Antivirus | 869

Step 2: Configure Antivirus Custom Object | 871

Step 2a: Configure a URL Pattern List That You Want to Bypass | 871

Step 2b: Categorize the URLs That You Want to Allow | 873

Step 3: Create Antivirus Profile | 875

Step 4: Apply the Antivirus Profile to a Content Security Policy | 877

Step 5: Assign the Content Security Policy to a Security Firewall Policy | 878

Step 6: Verify That Content Security Antivirus Is Working | 881

What's Next? | 883

Sample Configuration Output | 883

Content Security Web Filtering Profiles | 886

About the Web Filtering Profiles Page | 886

Add a Web Filtering Profile | 889

Clone a Web Filtering Profile | 895

Edit a Web Filtering Profile | 896

Delete a Web Filtering Profile | 897

Allow or Block Websites by Using J-Web Integrated Content Security Web Filtering | 897

Content Security URL Filtering Overview | 898

Benefits of Content Security Web Filtering | 899

Web Filtering Workflow | 899

Step 1: List URLs That You Want to Allow or Block | 901

Step 2: Categorize the URLs That You Want to Allow or Block | 903

Step 3: Add a Web Filtering Profile | 905

Step 4: Reference a Web Filtering Profile in a Content Security Policy | 906

Step 5: Assign a Content Security Policy to a Security Policy | 909

Step 6: Verify That the URLs Are Allowed or Blocked from the Server | 912

What's Next | 913

Sample Configuration Output | 913

Content Security Antispam Profiles | 916

About the Antispam Profiles Page | 916

Add an Antispam Profile | 918

Clone an Antispam Profile | 919

Edit an Antispam Profile | 920

Delete an Antispam Profile | 921

Content Security Content Filtering Profiles | 922

About the Content Filtering Profiles Page | 922

Add a Content Filtering Profile | 924

Clone a Content Filtering Profile | 928

Edit a Content Filtering Profile | 929

Delete a Content Filtering Profile | 930

Content Security Custom Objects | 931

About the Custom Objects Page | 931

Add a MIME Pattern List | 934

Add a File Extension List | 936

Add a Protocol Command List | 936

Add a URL Pattern List | 937

Add a URL Category List | 938

Add a Custom Message List | 940

Clone Custom Objects | 941

Edit Custom Objects | 941

Delete Custom Objects | 942

Content Security Policies | 944

About the Content Security Policies Page | 944

Create a Content Security Policy | 946

Clone a Content Security Policy | 949

Edit a Content Security Policy | 950

Delete a Content Security Policy | 950

IPS Policies | 952

About the IPS Policies Page | 952

Import IPS Predefined Policies | 954

Add an IPS Policy | 955

[Clone an IPS Policy | 955](#)

[Edit an IPS Policy | 956](#)

[Delete an IPS Policy | 957](#)

[Add Rules to an IPS Policy | 957](#)

[Edit an IPS Policy Rule | 967](#)

[Delete an IPS Policy Rule | 968](#)

IPS Signatures | 969

[About the IPS Signatures Page | 969](#)

[Import Snort Rules | 974](#)

[Create a Custom IPS Signature | 975](#)

[Create IPS Signature Static Groups | 991](#)

[Create IPS Signature Dynamic Group | 994](#)

[Clone an IPS Signature | 999](#)

[Edit an IPS Signature | 1000](#)

[Delete an IPS Signature | 1001](#)

IPS Sensor | 1003

[About the Sensor Page | 1003](#)

ALG | 1011

[About the ALG Page | 1011](#)

Metadata Streaming Profile | 1022

[About the Metadata Streaming Profile Page | 1022](#)

[Configure DNS Filter | 1024](#)

[Create a Metadata Streaming Profile | 1025](#)

[Edit a Metadata Streaming Profile | 1028](#)

[Delete a Metadata Streaming Profile | 1028](#)

ATP Anti-malware | 1029

About the Anti-malware Page | 1029

Create an Anti-malware Profile | 1031

Edit an Anti-malware Profile | 1037

Delete an Anti-malware Profile | 1038

ATP SecIntel Profiles | 1039

About the SecIntel Profiles Page | 1039

Configure DNS Sinkhole | 1042

Create a Command and Control Profile | 1043

Edit a Command and Control Profile | 1046

Delete a Command and Control Profile | 1046

Create a DNS Profile | 1047

Edit a DNS Profile | 1048

Delete a DNS Profile | 1049

Create an Infected Hosts Profile | 1050

Edit an Infected Hosts Profile | 1052

Delete an Infected Hosts Profile | 1053

ATP SecIntel Profile Groups | 1054

About the SecIntel Profile Groups Page | 1054

Create a SecIntel Profile Group | 1056

Edit a SecIntel Profile Group | 1058

Delete a SecIntel Profile Group | 1058

SSL Initiation Profiles | 1059

About the SSL Initiation Profile Page | 1059

Add an SSL Initiation Profile | 1061

Edit an SSL Initiation Profile | 1064

Delete SSL Initiation Profile | 1065

SSL Proxy Profiles | 1066

About the SSL Proxy Page | 1066

Add an SSL Proxy Profile | 1069

Clone an SSL Proxy Profile | 1075

Edit an SSL Proxy Profile | 1076

Delete a SSL Proxy Profile | 1076

Firewall Authentication—Access Profile | 1078

About the Access Profile Page | 1078

Add an Access Profile | 1080

Edit an Access Profile | 1087

Delete an Access Profile | 1088

Firewall Authentication—Address Pools | 1089

About the Address Pools Page | 1089

Add an Address Pool | 1091

Edit an Address Pool | 1094

Delete Address Pool | 1095

Search for Text in an Address Pools Table | 1095

Firewall Authentication Settings | 1097

About the Authentication Settings Page | 1097

Firewall Authentication—UAC Settings | 1100

About the UAC Settings Page | 1100

Firewall Authentication—Active Directory | 1104

About the Active Directory Page | 1104

Firewall Authentication—Local Authentication | 1110

About the Local Authentication Page | 1110

Add a Local Authentication Entry | 1111

Delete a Local Authentication Entry | 1112

Firewall Authentication—Authentication Priority | 1113

About the Authentication Priority Page | 1113

Firewall Authentication—JIMS | 1115

About the Juniper Identity Management Service Page | 1115

Add a Juniper Identity Management Service Profile | 1116

Edit a Juniper Identity Management Service Profile | 1120

Delete a Juniper Identity Management Service Profile | 1121

ICAP Redirect | 1122

About the ICAP Redirect Profile Page | 1122

Add an ICAP Redirect Profile | 1124

Edit an ICAP Redirect Profile | 1127

Delete ICAP Redirect Profile | 1127

About This Guide

Use this guide to understand the Junos Web Device Manager, its capabilities, and features.

1

PART

Juniper Web Device Manager

[Getting Started](#) | 2

CHAPTER 1

Getting Started

IN THIS CHAPTER

- [Juniper Web Device Manager Overview | 2](#)
- [Access the J-Web User Interface | 3](#)
- [The J-Web Setup Wizard | 8](#)
- [Explore J-Web | 39](#)

Juniper Web Device Manager Overview

IN THIS SECTION

- [What is J-Web? | 2](#)
- [Benefits of J-Web | 3](#)

What is J-Web?

Juniper Networks SRX Series Firewalls are shipped with the Juniper Networks Junos operating system (Junos OS) preinstalled.

Junos OS has the following primary user interfaces:

- Juniper Web Device Manager (J-Web) GUI
- Junos OS CLI

The J-Web interface allows you to monitor, configure, troubleshoot, and manage your device by means of a Web browser enabled with HTTP over Secure Sockets Layer (HTTPS) by default.

Benefits of J-Web

- Provides a simple user interface that enables new users to quickly become proficient.
- Enables effective threat management while producing detailed data access and user activity reports. An action-oriented design enables the network administrator to detect threats across the network as they occur, quickly block the traffic going to or coming from a specific region, and apply immediate remedial action with a single click.
- Enables administrators to assess the effectiveness of each firewall rule and quickly identify the unused rules, which results in better management of the firewall environment.

RELATED DOCUMENTATION

[Access the J-Web User Interface | 3](#)

[Explore J-Web | 39](#)

Access the J-Web User Interface

IN THIS SECTION

- [Prerequisites for Using J-Web | 3](#)
- [Log in to J-Web | 4](#)

Prerequisites for Using J-Web

To access the J-Web interface for all SRX Series Firewalls, your management device requires the following software:

- Supported browsers—Mozilla Firefox and Google Chrome.

NOTE: By default, you establish a J-Web session through an HTTPS-enabled Web browser. Microsoft ended Internet Explorer support in June 2022. Therefore, starting with Junos OS Release 22.4R1 or later, J-Web UI is not supported in Internet Explorer.

- Language support— English-version browsers.

Log in to J-Web

NOTE: This document assumes that you are accessing the device to launch J-Web for the first time using a factory default configuration. If your SRX Series Firewall is already configured with a management IP address, you simply point your browser to the device's management address to access J-Web.

The factory default settings vary between SRX Series Firewalls. In addition, some SRX Series Firewalls have interface while others use a revenue (network interface) port for Ethernet based management. When running a factory default configuration SRX 300 and 500 Series devices typically provide DHCP services on specific network interface ports that are enabled for host management access.

On SRX Series Firewalls with a dedicated management interface, DHCP services may or may not be present in the factory default. Some devices provide DHCP server functions on the dedicated management interface (fxp0). When using a device that does not offer DHCP services, for example an SRX5400, you must ensure the management device has a compatible IP address. This address can be manually assigned or be allocated by an external DHCP server on the management network.

[Table 1 on page 4](#) provides the factory defaults relating to J-Web access for SRX Series Firewalls. If your SRX Series Firewall is not listed, refer to the corresponding hardware guide for details on the factory defaults.

Table 1: SRX Series Firewall Factory Defaults Relating to J-Web Access

SRX Series Firewall	Management Interface	DHCP Server Ports	DHCP Subnet	J-Web Server IP
SRX300, SRX320	ge-0/0/1 through ge-0/0/6	ge-0/0/1 through ge-0/0/6	192.168.1.0/24	192.168.1.1
SRX340, SRX345	MGMT/fxp0	fxp0	192.168.1.0/24	192.168.1.1
		ge-0/0/1 through ge-0/0/14	192.168.2.0/24	192.168.2.1
SRX380	MGMT/fxp0	fxp0	192.168.1.0/24	192.168.1.1
		ge-0/0/1 through ge-0/0/18	192.168.2.0/24	192.168.2.1

Table 1: SRX Series Firewall Factory Defaults Relating to J-Web Access (Continued)

SRX Series Firewall	Management Interface	DHCP Server Ports	DHCP Subnet	J-Web Server IP
SRX550 HM	ge-0/0/1 through ge-0/0/5	ge-0/0/1 through ge-0/0/5	192.168.1.0/24 through 192.168.5.0/24	192.168.1.1 through 192.168.5.1
SRX1500	MGMT/fxp0	ge-0/0/1	192.168.2.0/24	192.168.1.1 192.168.2.1, 192.168.3.1, or 192.168.4.1
SRX1600	MGMT/fxp0	ge-0/0/1	192.168.2.0/24	192.168.1.1 or 192.168.2.1
SRX2300	MGMT/fxp0	mge-0/0/1	192.168.2.0/24	192.168.1.1 or 192.168.2.1
SRX4100, SRX4200	MGMT/fxp0	NA	NA	192.168.1.1
SRX4600	MGMT/fxp0	xe-1/1/1	NA (no DHCP address pool in the default configuration)	192.168.1.1
SRX5400, SRX5600, SRX5800	MGMT/fxp0	NA	NA	192.168.1.1
vSRX Virtual Firewall	fxp0	NA	NA	NA

To log into the J-Web interface on a new device:

1. Connect the appropriate Ethernet network port on your device to the Ethernet port on the management device (laptop or PC), using an RJ-45 cable. See [Table 1 on page 4](#).
2. If you are using an SRX Series Firewall that provides DHCP services for the management device, confirm that the management device successfully acquires an IP address from the SRX Series Firewall. When using an SRX Series Firewall that does not provide DHCP services for the

management device, you must manually configure the management device with a compatible IP address. See [Table 1 on page 4](#).

3. Open a browser and enter **https:// <IP address>** in the address bar.

Where, <IP address> is the IP address of the SRX Series Firewall.

NOTE: In a factory default configuration, a self-signed certificate is used to support the HTTPS connection. You can safely accept the security exception to perform initial configuration.

As the device is running a factory default configuration, the J-Web Setup Wizard screen opens. See [Figure 1 on page 6](#).

Figure 1: J-Web Setup Wizard Page



Two examples are given to better illustrate the use of the information in [Table 1 on page 4](#):

- a. You have an SRX380 device:
 - i. You connect your management PC, which is configured for DHCP address assignment, to the **fxp0** port, or to port **ge-0/0/1** through **ge-0/0/18**.
 - ii. If connected to the fxp0 port, you access J-Web at **https://192.168.1.1**.
 - iii. If connected to ge-0/0/1 through ge-0/0/18, you access J-Web at **https://192.168.2.1**.

- b. You have an SRX5400 device:
 - i. You connect your management PC, which is statically configured with an IP address from 192.168.1.0/24 subnet, to the **fxp0** port.

NOTE: The static IP address assignment cannot use 192.168.1.1 for fxp0 on the management subnet as the SRX Series Firewall uses this IP address.

- ii. You access J-Web at **https://192.168.1.1**.

After a successful user login, J-Web opens the **Basic settings** page.

- 4. Optional. If you do not want to perform the initial configuration, then:

- a. Click **Skip Setup**.

The J-Web Device Password screen appears. See [Figure 2 on page 7](#).

Figure 2: Device Password

Device Password

With super user permissions for your root account, you can change any of the system settings. Please set your root password before you commit any configuration changes.

Username root

Password* ? Show

Cancel OK

- b. Enter the root password.
- c. Click **OK**.

The password is committed to the device and the J-Web login page appears.

- d. Enter the username and password again and click **Log In**.

The J-Web application window appears.

NOTE: You can choose **Device Administration > Reset Configuration** through the J-Web menu to reset and reconfigure the SRX Series Firewall.

Congratulations! Now that you have access to the J-Web interface, you are ready to use J-Web to configure, manage, and monitor your SRX device.

- Get a quick overview of the J-Web user interface: ["Explore J-Web" on page 39](#)
- Use the setup wizard for initial configuration: ["The J-Web Setup Wizard" on page 8](#)
- Access the device dashboard: ["Dashboard Overview" on page 55](#)
- Monitor device traffic: ["Monitor Traffic Map" on page 105](#)
- Configure your device: ["Configure Basic Settings" on page 144](#)
- Watch a Learning Bytes video showing J-Web usage on a vSRX Virtual Firewall: [SRX J-Web Access](#)

The J-Web Setup Wizard

IN THIS SECTION

- [Configure SRX Series Firewalls Using the J-Web Setup Wizard | 8](#)
- [Example: J-Web Wizard for Standalone Mode | 10](#)
- [J-Web Setup Wizard Parameters | 22](#)

Configure SRX Series Firewalls Using the J-Web Setup Wizard

Using the Setup wizard, you can perform step-by-step configuration of a services gateway that can securely pass traffic.

For information on how to start and access the J-Web user interface, see ["Access the J-Web User Interface" on page 3](#).

You can choose one of the following setup modes to configure the services gateway:

- Standalone mode—Configure your SRX Series Firewall to operate in a standalone mode. In this mode, you can configure basic settings such as device credentials, time, management interface, zones and interfaces, and DNS servers and default gateways.
- Cluster (HA) mode—Configure your SRX Series Firewall to operate in a cluster (HA) mode. In the cluster mode, a pair of devices are connected together and configured to operate like a single node, providing device, interface, and service level redundancy.

NOTE: You cannot configure Standalone or Passive mode when your device is in the HA mode.

- Passive (Tap) mode—Configure your SRX Series Firewall to operate in a TAP mode. TAP mode allows you to passively monitor traffic flows across a network. If IPS is enabled, then the TAP mode inspects the incoming and outgoing traffic to detect the number of threats.

NOTE:

- SRX5000 line of devices, SRX4600, and vSRX Virtual Firewall devices do not support the passive mode configuration.
- Starting in Junos OS Release 23.4R1, J-Web supports SRX1600 and SRX2300 Firewalls.

To help guide you through the process, the wizard:

- Determines which configuration tasks to present to you based on your selections.
- Flags any missing required configuration when you attempt to leave a page.

To configure SRX Series Firewalls using the J-Web Setup wizard:

1. Select the configuration mode that you want to setup and click **Start**.

The Setup Wizard page appears.

2. For standalone and passive (Tap) modes, complete the configuration according to the guidelines provided in [Table 3 on page 22](#).

If you select Cluster (HA) Mode, for the configuration information see "[Configure Cluster \(HA\) Setup](#)" on page 164.

NOTE: The root password is mandatory in the setup wizard. All other options are optional. In the passive mode, configuration of the management interface, Tap interface, and services are mandatory.

3. Review the configuration details. If you want to change the configuration, click **Edit Configuration**, else click **Finish**.

Wait till the configuration is committed. A successful message is displayed once the entire configuration is committed to the device.

- NOTE:**
- If the commit fails, J-Web displays you the error message received from CLI and you remain on the wizard's last page. Check over your configuration and make changes as necessary so that the commit succeeds.
 - For SRX300 line of devices and SRX550M devices in passive mode, an additional message is displayed about the device reboot if you have enabled Juniper ATP Cloud or Security Intelligence services. For other SRX Series Firewalls, the device will not reboot.

4. Read if any instructions are available and then click **Open J-Web Login Page**.

The J-Web Login page appears.

5. Enter the root username and password and click **Log In**.

Launch Pad screen appears until the J-Web UI is loaded. See ["J-Web: A First Look" on page 40](#).

Example: J-Web Wizard for Standalone Mode

In this section, we'll show you a typical J-Web setup wizard workflow for standalone mode operation. The J-Web interface is updated and modified over time. The below example is representative of the typical workflow. This specific example is based on the Junos 21.3R1 release.

[Table 2 on page 10](#) provide details on the configuration parameters used for initial setup.

Table 2: Standalone Setup Wizard Parameters

Configuration Parameter	Example Value
Root Password	<i>"Sample_psswd_for_doc-only!"</i>

Table 2: Standalone Setup Wizard Parameters (*Continued*)

Configuration Parameter	Example Value
Hostname	SRX-300
Management interface	ge-0/0/1
Management IP and CIDR	10.102.70.79/24
Access Protocols	HTTPS, SSH, Ping
Static route for management	10.0.0.0/8, next hop 10.102.70.254
NTP and DNS	• NTP: north-america.pool.ntp.org • DNS: 8.8.8.8 and 8.8.4.4 • Time zone: PST/Los Angeles
Remote access	SSH with root login allowed
Non root user (Admin/super user account)	user "lab", password <i>"Sample_psswd_for_doc-only!"</i>
Security Policy	Default

Refer to ["Access the J-Web User Interface" on page 3](#) for information on how to access the J-Web interface. This example is based on an SRX300. Based on the information in [Table 1 on page 4](#), the management device is set for DHCP is and is attached to the ge-0/0/1 interface. When running a factory default configuration, the ge-0/0/1 interface is configured as a DHCP server and assigns an address to the PC from the 192.168.1.0/24 subnet. To access J-Web in this scenario, you point the browser to https://192.168.1.1.

1. We begin at the J-Web setup wizard screen. You click on the option for **Standalone Mode** and then on the **Start button**.

Figure 3: J-Web Setup Wizard Modes



2. Configure the device name, root user, and non-root (administrator) user login information on the Device Credentials page.

NOTE: Enable **SSH** for root user.

Figure 4: J-Web Setup Wizard Device Credentials

The screenshot shows the 'Setup Wizard' interface with a progress bar at the top. The progress bar has five steps: 'Device Credentials' (active, highlighted in blue), 'Time', 'Management Network', 'Links & Hardware', and '200 Network & Device Settings'. Below the progress bar, the 'Device Credentials' section is displayed. It includes three main sections: 'System Identity' with a 'Device name' field containing 'SRX-300'; 'Root Account' with a 'Username' field containing 'root', a 'Password' field with masked characters and a 'Show' link, and a toggle switch for 'SSH for root user' which is turned on; and 'Admin Account' with a 'Username' field containing 'admin' and a 'Password' field with masked characters and a 'Show' link. At the bottom of the form, there are 'Cancel' and 'Next' buttons.

Setup Wizard

Device Credentials Time Management Network Links & Hardware 200 Network & Device Settings

System Identity

Device name (?) SRX-300

Root Account

It is recommended to use the Admin account to manage SRX devices.

Username root

Password (?) ***** Show

SSH for root user (?) ☒

Admin Account

Username admin

Password (?) ***** Show

Cancel Next

3. Click **Next**.

The **Time** page opens.

4. Configure the timezone, time source, and in the case of NTP, the desired server(s).

Figure 5: J-Web Setup Wizard Time Servers

The screenshot shows the 'Setup Wizard' interface with a progress bar at the top indicating the current step is 'Time'. The main configuration area is titled 'Time' and includes the following elements:

- Time zone:** A dropdown menu set to 'America/Los_Angeles'.
- Time source (1):** Three tabs: 'NTP Server' (selected), 'Computer Time', and 'Manual'.
- NTP servers* (1):** A selection interface showing:
 - Available:** A list of 6 NTP servers: 'NTP Servers', 'afrika.pool.ntp.org', 'antarctica.pool.ntp.org', 'asia.pool.ntp.org', 'Europe.pool.ntp.org', and 'oceania.pool.ntp.org'.
 - Selected:** A list containing 'NTP Servers' and 'north-america.pool.ntp.org'.

At the bottom of the page, there are three buttons: 'Cancel', 'Back', and 'Next'.

5. Click **Next**.

The **Management Interface** page opens.

6. Again, this setup example is based on a SRX 300 series device. This SRX Series Firewall does not have a dedicated management interface. In many cases, their role in branch offices results in their being managed remotely through the WAN interface (ge-0/0/0). On larger SRX Series Firewalls, a dedicated management interface (fxp0) is provided for attachment to an out-of-band (OOB) management network. In this example, you configure the ge-0/0/1 interface as a dedicated OOB management interface.

Figure 6: J-Web Setup Wizard Management Interface

Setup Wizard

Device Credentials Time **Management Interface** Config & Interfaces Post-Setup & Troubleshooting

Management Interface

Management interface ⓘ ge-0/0/1 ▼

IPv4 IPv6 Access Protocols

Management address ⓘ 10.102.70.79 / 24
The updated address is required to access J-Web after the setup is complete. Note this address or add it to self.

Management subnet mask ⓘ 255.255.255.0

Static route ⓘ 10.0.0.0 / 8

Static route subnet mask ⓘ 255.0.0.0

Next-hop gateway ⓘ 10.102.70.254

Cancel Back Next

Before continuing, you click on the **Access Protocols** tab to confirm that HTTPS, SSH, and Ping (ICMP echo) are permitted on the management interface.

Figure 7: J-Web Setup Wizard Access Protocols

Setup Wizard

Device Credentials Time **Management Interface** Zones & Interfaces DNS Servers & Default Gateways

Management Interface

Management interface ⓘ ge-0/0/1 ▼

IPv4 IPv6 **Access Protocols**

HTTPS ⓘ	☒
SSH ⓘ	☒
Ping ⓘ	☒
DHCP ⓘ	☐
NETCONF ⓘ	☐

[Cancel](#) [Back](#) [Next](#)

7. Click **Next**.

The **Zones & Interfaces** page opens.

8. In this example you maintain the factory default security policy. Recall, you can always use J-Web to later modify all aspects of the configuration, to include security, after you complete the initial setup.

Figure 8: J-Web Setup Wizard Security Zones

Setup Wizard

Device Credentials **Next** Management Interface **Trusts & Interfaces** DNS Servers & Default Gateways

Trust Zone Interfaces Zone Level Settings + - ? Q

☐	Interfaces	Description	IP Address	VLAN	System Services	Protocols
☐	eth 0	—	192.168.1.1/24	wan-trust	—	—

1 items

Untrust Zone Interfaces Zone Level Settings + - ? Q

☐	Interfaces	Description	IP Address	Address Mode	System Services	Protocols
☐ +	ge-0/0/0.0	—	—	DHCP client	dhcp 4.7.25	—
☐ +	ge-0/0/7.0	—	—	DHCP client	dhcp 4.7.17	—

2 items

Cancel Back Next

9. Click **Next**.

The **DNS Servers & Default Gateways** page opens.

10. Configure a public DNS server IP and leave the default gateway fields blank. If desired, you can add default routes to access other networks that should be reachable over the management interface.

Figure 9: J-Web Setup Wizard DNS and Default Gateways

The screenshot shows the 'Setup Wizard' interface with a progress bar at the top. The progress bar has five steps: 'Device Credentials', 'Time', 'Management Interface', 'Zones & Interfaces', and 'DNS Servers & Default Gateways'. The fifth step is currently active and highlighted in blue. Below the progress bar, the main content area is titled 'DNS Servers' and 'Default Gateway'. Under 'DNS Servers', there are two input fields: 'DNS server 1' with the value '8.8.8.8' and 'DNS server 2' with the value '8.8.4.4'. Under 'Default Gateway', there are two empty input fields: 'Default gateway (IPv4)' and 'Default gateway (IPv6)'. At the bottom of the page, there are three buttons: 'Cancel', 'Back', and 'Next'. The 'Next' button is highlighted in blue.

Setup Wizard

Device Credentials Time Management Interface Zones & Interfaces DNS Servers & Default Gateways

DNS Servers

DNS server 1 ⓘ 8.8.8.8

DNS server 2 ⓘ 8.8.4.4

Default Gateway

Default gateway (IPv4) ⓘ

Default gateway (IPv6) ⓘ

Cancel Back Next

11. Click **Next**.

The **Setup Wizard** opens. This page summarizes your configuration. If desired, you use the **Edit Configuration** option to make changes.

Figure 10: J-Web Setup Wizard Summary

Setup Wizard

Device Credentials		Edit Configuration
Device Name	SRX-300	
SSH for root user	Enabled	
Time		Edit Configuration
NTP servers	north-america.pool.ntp.org	
Management Interface		Edit Configuration
Management interface	ge-0/0/0	
Management address	10.102.70.79/24	
Access protocols	HTTPS, SSH, Ping	
Zones & Interfaces		Edit Configuration
Trust	int.0	
Untrust	ge-0/0/0.0, ge-0/0/7.0	
DNS Servers & Default Gateways		Edit Configuration
DNS servers	8.8.8.8, 8.8.4.4	

[Back](#)
[Finish](#)


- When satisfied with the configuration, click on **Finish**. The Setup Wizard displays a status page to indicate the initial configuration is being pushed to the SRX Series Firewalls.

Figure 11: J-Web Setup Wizard Configuration Push



In a few moments, the **Setup Successful** page is displayed. Congratulations! Your SRX Series Firewall is remotely accessible and is ready for ongoing management using the J-Web interface.

Figure 12: J-Web Setup Wizard Successful

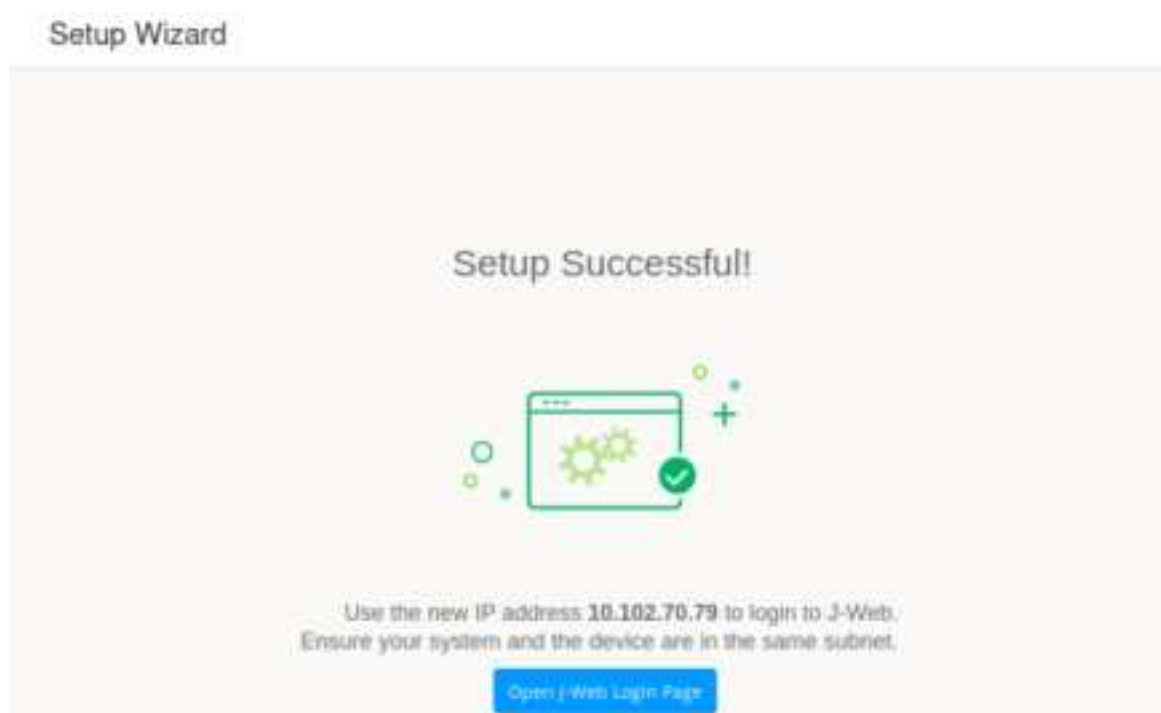

NOTE: Recall that in this SRX-300 based example the management device is directly connected to the SRX on the ge-0/0/1 port. You performed initial configuration using a 192.168.1.0/24 address that was assigned by the SRX Series Firewall using DHCP. Using the setup wizard, you configured the ge-0/0/1 interface as a dedicated management interface and assigned a static IP address of 10.102.70.89/24. As a result, the ge-0/0/1 interface no longer functions as a DHCP server.

Once the new configuration is activated, you must ensure the management device is configured with a compatible IP address if it remains directly connected to the ge-0/0/1 interface. You log in back into J-Web using <https://10.102.70.89>.

Congratulations! You have completed initial setup using J-Web. Keep going by visiting the below links:

- Get a quick overview of the J-Web user interface: ["Explore J-Web" on page 39](#)
- Access the device dashboard: ["Dashboard Overview" on page 55](#)
- Monitor device traffic: ["Monitor Traffic Map" on page 105](#)
- Configure your device: ["Configure Basic Settings" on page 144](#)
- Use the Getting Started panel: [Security J-Web Getting Started](#)

J-Web Setup Wizard Parameters

This section serves as a reference for the mode specific parameters that you can configure using the J-Web Setup Wizard. [Table 3 on page 22](#) provide details of the parameters that can be configured in the standalone and passive (Tap) modes. For details on parameters supported in cluster (HA) mode, see ["Configure Cluster \(HA\) Setup" on page 164](#).

Table 3: Setup Wizard Configuration

Field	Action
Device Credentials	
System Identity	
Device name	Enter a hostname. You can use alphanumeric characters, special characters such as the underscore (_), the hyphen (-), or the period (.); the maximum length is 255 characters.
Root Account	
Username	Displays the root user. NOTE: We recommend that you do not use root user account as a best practice to manage your devices.
Password	Enter a password. You can use alphanumeric characters and special characters; the minimum length is six characters.
SSH for root user	Enable this option to allow the root login (to the device) using SSH.
Admin Account	
Username	Enter the admin username to manage the device.
Password	Enter the admin password.

Table 3: Setup Wizard Configuration (*Continued*)

Field	Action
Time Configuration	
Time	
Time zone	Select a time zone from the list.
Time source	Select either NTP server, computer time, or Manual to configure the system time: • NTP Server > NTP servers—Select the NTP server in the Available column and move to the selected column using the right arrow. Once the system is connected to the network, the system time is synced with the NTP server time. In addition, to add a new NTP server, click + and enter a hostname or IP address of the NTP server and click OK. NOTE: If you want to add more NTP servers, go to Device Administration > Basic Settings > Date & Time Details through the J-Web menu. • Computer Time > Computer time—Device automatically synchronizes with your computer time only during the setup. • Manual > Date and time—Select the date and time (in MM-DD-YYYY and HH:MM:SS 24-hour format) to configure the system time manually.
Management Interface Configuration	
Management Interface	
NOTE: If you change the management IP address and click Next, a warning message appears on the Management Interface page that you need to use the new management IP address to log in to J-Web because you may lose the connectivity to J-Web.	

Table 3: Setup Wizard Configuration (Continued)

Field	Action
Management interface	Select an interface from the list. If fxp0 port is your device's management port, then the fxp0 port is displayed. You can change it as required or you can select None and proceed to the next page. NOTE: - You can choose the revenue port as management port if your device does not support the fxp0 port. Revenue ports are all ports except fxp0 and em0. - If you are in the Standalone mode, you can choose None for the management interface and click Next to proceed to the next screen. - If you are in the Passive (Tap) mode, it is mandatory to configure a management port. J-Web needs a management port for viewing generated report.

IPv4

NOTE: Click **email to self** to get the newly configured IPv4 or IPv6 address to your inbox. This is useful if you lose connectivity when you change the management IP address to another network.

Management address	Enter a valid IPv4 address for the management interface. NOTE: If fxp0 port is your device's management port, then the fxp0 port's default IP address is displayed. You can change it if required.
Management subnet mask	Enter a subnet mask for the IPv4 address. If you have changed the management address, use the new IP address to access J-Web.
Static route	Enter an IPv4 address for the static route to route to the other network devices.
Static route subnet mask	Enter a subnet mask for the static route IPv4 address.

Table 3: Setup Wizard Configuration (Continued)

Field	Action
Next hop gateway	Enter a valid IPv4 address for the next hop.
IPv6	
Management access	Enter a valid IPv6 address for the management interface.
Management subnet prefix	Enter a subnet prefix length for the IPv6 address.
Static route	Enter an IPv6 address for the static route if required to reach the device through the management interface.
Static route subnet prefix	Enter a subnet prefix length for the static route IPv6 address.
Next hop gateway	Enter a valid IPv6 address for the next hop.
Access Protocols	
NOTE: This option is available for all the ports except fxp0.	
HTTPS	This option is enabled by default.
SSH	This option is enabled by default.
Ping	Enable this option for ping service.
DHCP	Enable this option for DHCP service.
NETCONF	Enable this option for NETCONF service.
Zones & Interfaces	

Table 3: Setup Wizard Configuration (*Continued*)

Field	Action

Security Policy

NOTE: This option is available only for the Standalone mode. For the Passive (Tap) mode, this option is available under Tap Settings.

From Zone	Name of the source zone. In the standalone mode, permits all traffic from the trust zone.
To Zone	Name of the destination zone. In standalone mode, permits all traffic from the trust zone to the untrust zone.
Source	Name of the source address (not the IP address) of a policy.
Destination	Name of the destination address.
Application	Name of a preconfigured or custom application of the policy match.
Action	Action taken when a match occurs as specified in the policy.

Zones

—Displays the available trust and untrust zones configuration.

Trust Zone Interfaces

NOTE: This option is available only for the Standalone mode.

Add Trust Zone Interface	Click + to add trust zone interface. For more information on the fields, see Table 4 on page 32 .
Edit Trust Zone Interface	Select an interface and click the pencil icon at the right corner of the table to modify the configuration.

Table 3: Setup Wizard Configuration (*Continued*)

Field	Action
Delete Trust Zone Interface	Select an interface and click the delete icon at the upper-right corner of the table. A confirmation window appears. Click Yes to delete the selected interface or click No to discard.
Search Trust Zone Interface	Click the search icon at the right corner of the table to quickly locate a zone or an interface.
Detailed View Trust Zone Interface	Hover over the interface name and click the Detailed View icon to view the zone and interface details.
Trust Zone Interfaces—Zone Level Settings	
Zone name	View the trust zone name populated from your device factory default settings. NOTE: For standalone mode, trust and untrust zones are created by default even if these zones are not available in the factory default settings.
Description	Enter the description for trust zone.
System services	Enable this option for the types of traffic that can reach the device on a particular interface. By default, this option is enabled. You can disable if required.
Protocols	Enable this option to configure the device to perform stateful network traffic filtering on network packets using network traffic protocols (for example, TCP and UDP). By default, this option is enabled. You can disable if required.
Application tracking	Enable this option to collect byte, packet, and duration statistics for application flows in the specified zone.

Table 3: Setup Wizard Configuration (*Continued*)

Field	Action
Source identity log	Enable this option for the device to log the user identity information based on the source zone configured in the security policy.
Untrust Zone Interfaces	
Add Untrust Zone Interface	Click + to add untrust zone interface. For more information on the fields, see Table 5 on page 38 .
Edit Untrust Zone Interface	Select an interface and click the pencil icon at the right corner of the table to modify the configuration.
Delete Untrust Zone Interface	Select an interface and click the delete icon at the upper-right corner of the table. A confirmation window appears. Click Yes to delete the selected interface or click No to discard.
Search Untrust Zone Interface	Click the search icon at the upper-right corner of the table to quickly locate a zone or an interface.
Detailed View Untrust Zone Interface	Hover over the interface name and click the Detailed View icon to view the zone and interface details.
Untrust Zone Interfaces—Zone Level Settings	
Zone name	View the untrust zone name populated from your device factory default settings. NOTE: For standalone mode, trust and untrust zones are created by default even if these zones are not available in the factory default settings.
Description	Enter the description for untrust zone.

Table 3: Setup Wizard Configuration (*Continued*)

Field	Action
Application tracking	Enable this option to collect byte, packet, and duration statistics for application flows in the specified zone.
Source identity log	Enable this option for the device to log the user identity information based on the source zone configured in the security policy.
DNS Servers & Default Gateways	
DNS Servers	
DNS server 1	Enter the IPv4 or IPv6 address of the primary DNS.
DNS server 2	Enter the IPv4 or IPv6 address of the secondary DNS.
Default Gateway	
Default gateway (IPv4)	Enter the IPv4 address of the next possible destination for any network.
Default gateway (IPv6)	Enter the IPv6 address of the next possible destination for any network.
Tap Settings	
NOTE: This option is available only for the Passive (Tap) mode.	
Tap Settings	
Tap interface	Select the interface from the list.
IP-IP tunnel inspection	Enable this option for the SRX Series Firewall to inspect pass through traffic over an IP-IP tunnel.

Table 3: Setup Wizard Configuration (*Continued*)

Field	Action
GRE tunnel inspection	Enable this option for the SRX Series Firewall to inspect pass through traffic over a GRE tunnel.

Security Policy & Advanced Services

NOTE: Your device must have internet connectivity to use IPS, Web filtering, Juniper ATP Cloud, and Security threat intelligence services.

From Zone	Name of the source zone. In the Tap mode, permits all traffic from the tap zone.
To Zone	Name of the destination zone. In the Tap mode, permits all traffic from the TAP zone to the TAP zone.
Source	Name of the source address (not the IP address) of a policy.
Destination	Name of the destination address.
Application	Name of a preconfigured or custom application of the policy match.
Action	Action taken when a match occurs as specified in the policy.

Content Security

Content Security	Enable this option for configuring Content Security services.
License	Enter Content Security license key and click Install License to add a new license. NOTE: • Use a blank line to separate multiple license keys. • To use Content Security services, your device must have internet connectivity from a revenue interface.

Table 3: Setup Wizard Configuration (*Continued*)

Field	Action
Content Security type	Select an option to configure Content Security features: • Web Filtering • Antivirus • Antispam
Web filtering type	Select an option: • Enhanced—Specifies that the Juniper Enhanced Web filtering intercepts the HTTP and the HTTPS requests and sends the HTTP URL or the HTTPS source IP to the Websense ThreatSeeker Cloud (TSC). • Local—Specifies the local profile type.
IPS	
IPS	Enable this option to install the IPS signatures.
License	Enter the license key and click Install License to add a new license. NOTE: The installation process may take few minutes.
IPS signature	Click Browse to navigate to the IPS signature package folder and select it. Click Install to install the selected IPS signature package. NOTE: You can download the IPS signature offline package at https://support.juniper.net/support/downloads/.
ATP Cloud	

Table 3: Setup Wizard Configuration (*Continued*)

Field	Action
ATP Cloud	Enable this option to use Juniper ATP Cloud services. NOTE: After the Juniper ATP Cloud configuration is pushed, only the SRX300 line of devices and SRX550M devices are rebooted. Your device must have internet connectivity to enable Juniper ATP Cloud enrollment process through J-Web.
Security Intelligence	
Security intelligence	Enable this option to use Security intelligence services. NOTE: After the Security Intelligence configuration is pushed, only the SRX300 line of devices and SRX550M devices are rebooted. Your device must have internet connectivity to enable Juniper ATP Cloud enrollment process through J-Web.
User Firewall	
User Firewall	Enable this option to use user firewall services.
Domain name	Enter a domain name for Active Directory.
Domain controller	Enter domain controller IP address.
Username	Enter a username for administrator privilege.
Password	Enter a password for administrator privilege.

Table 4: Add Trust Zone

Field	Action
General	

Table 4: Add Trust Zone *(Continued)*

Field	Action
Type (family)	- Select Switching. Fields for switching interface are: NOTE: This option will be available for only SRX300 Series Firewalls, SRX550M, and SRX1500, and SRX1600 Firewalls. For SRX2300, SRX4100, SRX4200, SRX4600, SRX5000 Series Firewalls, and vSRX Virtual Firewalls, the Type (family) field is not available. IRB interface Unit—Enter the IRB unit. Description—Enter the description for the interface. - Select Routing. Fields for routing interface are: For SRX5000 Series Firewalls, SRX4100, SRX4200, SRX4600, and vSRX Virtual Firewalls, the Type (family) field is not available. Interface—Select an option from list. Interface unit—Enter the Inet unit. NOTE: VLAN tagging is enabled automatically if the interface unit is higher than zero. Description—Enter the description for the interface. VLAN ID—Enter the VLAN ID. NOTE: VLAN ID is mandatory if the interface unit is higher than zero.
Interfaces	Select an interface from the Available column and move it to the Selected column. NOTE: This option is available only for the Switching family type.
VLAN NOTE: This option is available only for the Switching family type.	
Name	Enter a unique name for the VLAN.
VLAN ID	Enter the VLAN ID.

Table 4: Add Trust Zone *(Continued)*

Field	Action
IPv4	
IPv4 address	Enter a valid IPv4 address for the switching or the routing interface.
Subnet mask	Enter a subnet mask for the IPv4 address.
IPv6	
IPv6 address	Enter a valid IPv6 address for the switching or the routing interface.
Subnet prefix	Enter a subnet prefix for the IPv6 address.
DHCP Local Server	
DHCP local server	Enable this option to configure the switch to function as an extended DHCP local server.
Pool name	Enter the DHCP pool name.
Pool start address	Enter the starting IPv4 address of the DHCP server pool address range. This address must be within the IPv4 network.
Pool end address	Enter the ending IPv4 address of the DHCP server pool address range. This address must be within the IPv4 network. NOTE: This address must be greater than the address specified in Pool start address.
Propagate settings from	Select an option from the list. Propagation of TCP/IP settings (such as, DNS and gateway address) received on the device interface acting as DHCP client.
Services & Protocols	

Table 4: Add Trust Zone *(Continued)*

Field	Action
System Services	Select system services from the list in the Available column and then click the right arrow to move it to the Selected column. The available options are: • all—Specify all system services. • any-service—Specify services on entire port range. • appqoe—Specify the APPQOE active probe service. • bootp—Specify the Bootp and dhcp relay agent service. • dhcp—Specify the Dynamic Host Configuration Protocol. • dhcpv6—Enable Dynamic Host Configuration Protocol for IPV6. • dns—Specify the DNS service. • finger—Specify the finger service. • ftp—Specify the FTP protocol. • http—Specify the Web management using HTTP. • https—Specify the Web management using HTTP secured by SSL. • ident-reset—Specify the send back TCP RST IDENT request for port 113. • ike—Specify the Internet key exchange. • lsping—Specify the Label Switched Path ping service. • netconf—Specify the NETCONF Service. • ntp—Specify the network time protocol. • ping—Specify the internet control message protocol. • r2cp—Enable Radio-Router Control Protocol. • reverse-ssh—Specify the reverse SSH Service.

Table 4: Add Trust Zone *(Continued)*

Field	Action
	• reverse-telnet—Specify the reverse telnet Service. • rlogin—Specify the Rlogin service • rpm—Specify the Real-time performance monitoring. • rsh—Specify the Rsh service. • snmp—Specify the Simple Network Management Protocol. • snmp-trap—Specify the Simple Network Management Protocol trap. • ssh—Specify the SSH service. • tcp-encap—Specify the TCP encapsulation service. • telnet—Specify the Telnet service. • tftp—Specify the TFTP • traceroute—Specify the traceroute service. • webapi-clear-text—Specify the Webapi service using http. • webapi-ssl—Specify the Webapi service using HTTP secured by SSL. • xnm-clear-text—Specify the JUNOScript API for unencrypted traffic over TCP. • xnm-ssl—Specify the JUNOScript API Service over SSL.

Table 4: Add Trust Zone *(Continued)*

Field	Action
Protocols	Select protocols from the list in the Available column and then click the right arrow to move it to the Selected column. The available options are: • all—Specifies all protocol. • bfd—Bidirectional Forwarding Detection. • bgp—Border Gateway Protocol. • dvmrp—Distance Vector Multicast Routing Protocol. • igmp—Internet Group Management Protocol. • ldp—Label Distribution Protocol. • msdp—Multicast Source Discovery Protocol. • nhrp—Next Hop Resolution Protocol. • ospf—Open shortest path first. • ospf3—Open shortest path first version 3. • pgm—Pragmatic General Multicast. • pim—Protocol Independent Multicast. • rip—Routing Information Protocol. • ripng—Routing Information Protocol next generation. • router-discovery—Router Discovery. • rsvp—Resource Reservation Protocol. • sap—Session Announcement Protocol. • vrrp—Virtual Router Redundancy Protocol.

Table 5: Add Untrust Zone

Field	Action
General	
Interface	Select an interface from the list.
Interface unit	Enter the interface unit value.
VLAN ID	Enter the VLAN ID. NOTE: VLAN ID is mandatory if the interface unit is higher than zero.
Description	Enter the description for the interface.
Address Mode	Select an address mode for the interface. The available options are DHCP Client, PPPoE (PAP), PPPoE (CHAP) and Static IP. NOTE: PPPoE (PAP) and PPPoE (CHAP) are not supported for SRX5000 Series Firewalls and if any of the devices are in passive mode.
Username	Enter a username for PPPoE (PAP) or PPPoE (CHAP) authentication.
Password	Enter a password for PPPoE (PAP) or PPPoE (CHAP) authentication.
IPv4	
NOTE: This option is available only for the Static IP address mode.	
IPv4 Address	Enter a valid IPv4 address for the interface.
Subnet Mask	Enter a subnet mask for the IPv4 address.

Table 5: Add Untrust Zone *(Continued)*

Field	Action
IPv6	
NOTE: This option is available only for the Static IP address mode.	
IPv6 Address	Enter a valid IPv6 address for the interface.
Subnet Prefix	Enter a subnet prefix for the IPv6 address.
Services & Protocols	
System Services	Select system services from the list in the Available column and then click the right arrow to move it to the Selected column.
Protocols	Select protocols from the list in the Available column and then click the right arrow to move it to the Selected column.

SEE ALSO

| [Explore J-Web](#) | 39

Explore J-Web

IN THIS SECTION

- [J-Web: A First Look](#) | 40
- [J-Web Launch Pad](#) | 40
- [J-Web Top Pane](#) | 42
- [J-Web Side Pane](#) | 44

- J-Web Main Pane | 47
- J-Web Workflow Wizards | 49
- Summary | 50

J-Web: A First Look

Each page of the J-Web interface is divided into the following panes (see [Figure 13 on page 40](#)):

- Launch pad—Displays high level details of the system identification, active users, and interface status. See [Figure 14 on page 41](#).
- Top pane—Displays identifying information and links.
- Side pane—Displays subtasks of the Dashboard, Monitor, Device Administration, Network, Security Policies and Objects, and Security Services tasks currently displayed in the main pane. Click an item to access it in the main pane.
- Main pane—Location where you monitor, configure, view or generate reports, and administrate the Juniper Networks device by entering information in text boxes, making selections, and clicking buttons.

NOTE: Starting in Junos OS Release 23.4R1, J-Web supports SRX1600 and SRX2300 Firewalls.

Figure 13: J-Web First Look



J-Web Launch Pad

After you successfully login to J-Web GUI, J-Web launch pad appears.

The launch pad provides a quick view of:

- Device information such as model number, serial number, hostname, software version, system time, and system up time.
- Number of active users using the device.
- State of the device physical interfaces: Up or Down.

The launch pad closes automatically once the application is loaded in the background. You do not have the option to manually close or refresh the launch pad.

NOTE:

- Launch pad is not displayed in the factory default settings.
- Launch pad is displayed for all users.

Figure 14 on page 41 shows the launch pad screen and its elements.

Figure 14: J-Web launch Pad Screen



J-Web Top Pane

For a more personal, helpful, and user experience, Juniper Networks has provided some aids within the J-Web GUI. [Table 6 on page 42](#) provides the details of the J-Web top pane elements.

Table 6: J-Web Top Pane Elements


Element	Description
Banner 	Location—The gray bar at the top of the screen. You can access device details, feedback button, commit options, a profile management access menu, and a help button.
Add Device to Juniper Security Cloud 	Location—To the upper-right corner of the banner.
Device details 	Location—To the right of the Add Device to Juniper Security Director Cloud icon. Provides details of the device you have accessed.
Commit Configuration Menu 	Location—To the right of the device details icon. Provides options to: • Commit your configurations • View configuration changes • Commit the changes with autorollback • Discard your configuration • Commit the changes in your preferred way

Table 6: J-Web Top Pane Elements (Continued)



Element	Description
Feedback Button 	Location—To the right of the Commit menu. You can provide feedback (mailto:jweb-feedback@juniper.net) if you are having an issue with the product.
User Functions Menu 	Location—To the right of the Feedback icon. A head-and-shoulders icon and a field showing the logged in user type. Clicking your username or the down arrow button, logs you out of J-Web interface.
Help Button 	Location—To the right of the User Functions menu. Access to the online Help center and the Getting Started Guide are available by clicking the right-most icon on the banner, shaped like a question mark. The help center includes access to a list of supported web browsers, user interface assistance, as well as links to technical support and full J-Web documentation.
Mode 	Location—To the right of the device details. Provides the setup mode details whether your device is in the standard, chassis cluster (HA), or passive mode.

Table 6: J-Web Top Pane Elements *(Continued)*

Element	Description
Tenant & LSYS 	Location—To the right of the Feedback icon. NOTE: This menu is only available for root-logical-system context and devices that support tenant and logical system. Starting in Junos OS 23.1R1 Release, you can view the name and number of available tenant or logical system. For example, Tenant (5). Select the name from the list to enter a root-logical-system user as a tenant or logical system. Use the search box to enter as a specific tenant or logical system, To go back to the root-logical-system user context, click the down arrow on the selected tenant or logical system menu and choose Exit Tenant or Exit Logical System respectively. NOTE: Once the configuration cache synchronizes, the updated tenant or logical system data will be shown. If no tenant or logical system data is available, go to Device Administration > Multi Tenancy and create a new tenant or logical system from the respective menus.

J-Web Side Pane

J-Web presents you a security-focused administrator with a tabbed interface.

The following tabs across the side pane of the J-Web GUI provide workspaces in which an administrator can perform specific tasks:


- **Dashboard**—The Dashboard is the main page for J-Web. You can customize the workspace in your Dashboard by adding widgets from the carousel. The placement of, and settings within, widgets are

saved so that anything from device information to firewall event information or from top blocked viruses to live threat maps can be unique for each user. Once you decide on the widgets that you want to see, you can minimize the carousel to regain some screen space.

NOTE: By default, the selected widgets are displayed every time you login to J-Web.

Figure 15 on page 45 shows an example of the J-Web Dashboard tab.

Figure 15: J-Web Dashboard Tab

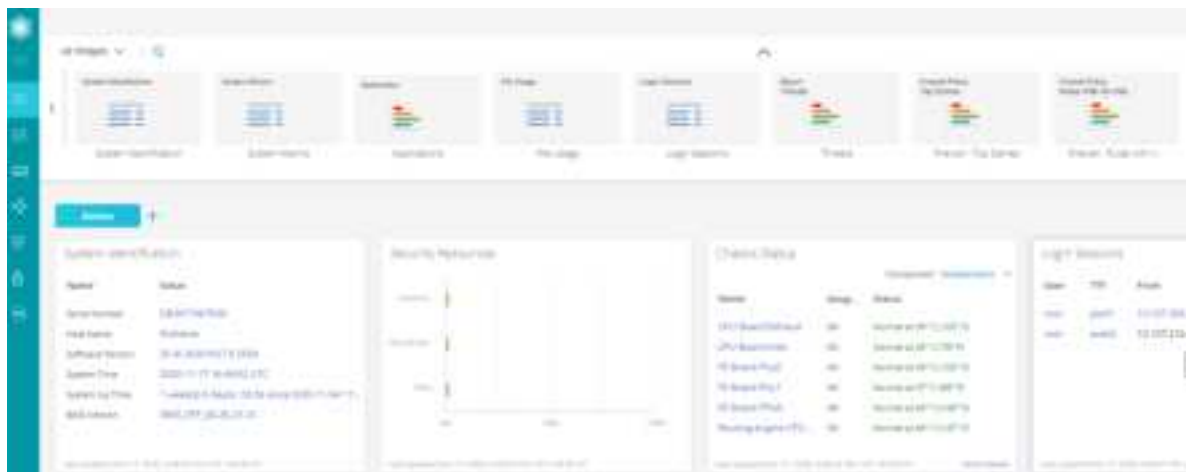

- **Monitor**—The Monitor tab provides a workspace in which graphical representations of network traffic, firewall events, live threats, and network user data are available. There is also detailed data for alerts and alarms information. In this workspace, you can review the detailed information needed to understand what is happening to the managed security devices and traffic in your network.

Figure 16 on page 46 shows an example of the J-Web Monitor tab.

Figure 16: J-Web Monitor Tab




Interface	Name	Status	Address	Action
ge-0/0/0	ge-0/0/0	Up		
ge-0/0/1	ge-0/0/1	Up		
ge-0/0/2	ge-0/0/2	Up		
ge-0/0/3	ge-0/0/3	Up		
ge-0/0/4	ge-0/0/4	Up		
ge-0/0/5	ge-0/0/5	Up		
ge-0/0/6	ge-0/0/6	Up		
ge-0/0/7	ge-0/0/7	Up		
ge-0/0/8	ge-0/0/8	Up		
ge-0/0/9	ge-0/0/9	Up		

- **Configure**—The highlighted workspace in [Figure 17 on page 47](#) is where all of the SRX Series Firewall configuration happens. You can configure the following features for managing your network security:
 - **Device Administration**—Such as basic settings, user management, certificate management, license management, security package management, ATP management, operations, software management, configuration management, alarm management, RPM, tools, and reset configuration.
 - **Network**—Such as connectivity, DHCP, firewall filters, NAT, routing, Class of Services (CoS), Application QoS, IPsec VPN, and dynamic VPN.
 - **Security policies and objects**—Such as security policies, zones/screens, zone and global addresses, services, dynamic applications, application tracking, schedules, and proxy profiles.
 - **Security services**—Such as Content Security, IPS, ALG, ATP, SSL profiles, firewall authentication, and ICAP redirect.

[Figure 17 on page 47](#) shows an example of the J-Web configuration menus.

Figure 17: J-Web Configure Menus

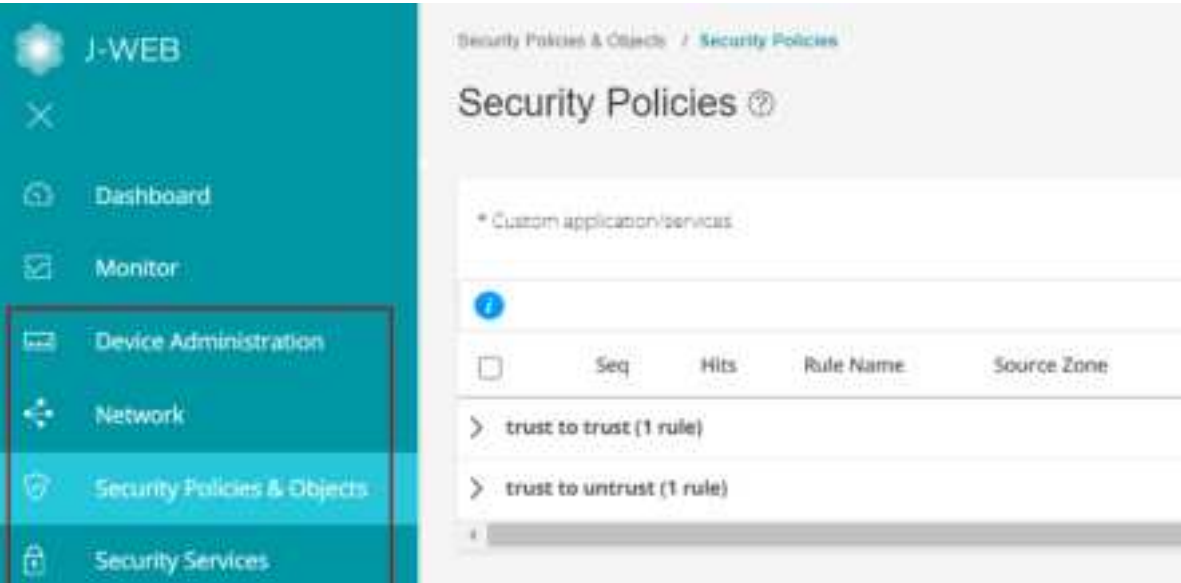

J-Web Main Pane

The main workspace of J-Web takes up the remainder of the browser window just below the Banner and next to the side pane. [Table 7 on page 47](#) shows a sample of navigation, customization, and help icons in the main pane of the J-Web GUI.

Table 7: J-Web Main Pane Elements

Element	Description
Breadcrumbs Device Administration / Certificate Management / Device Certificates	Location—Upper left part of main screen. Not visible on the Dashboard. Trace your location in the GUI. The breadcrumbs provide a path back to one of the five tabs: Dashboard, Monitor, Configure, Reports, and Administration.
Info Tips	Location—Various places around the GUI. Hover your mouse over any available question mark icon for quick pop-up guidance.

Table 7: J-Web Main Pane Elements (*Continued*)

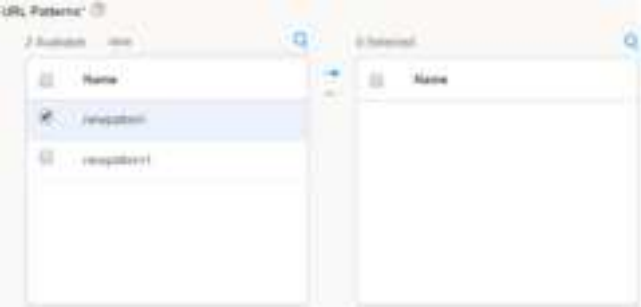
Element	Description
Show/Hide Columns 	Location—Upper right corner of some tabular display windows such as the Address Pools tab, Rules tab, and so on. In tabular displays, you can choose which columns are visible by clicking the icon and then selecting the check boxes on the menu.
Table Search 	Location—Upper right corner of tabular views. You can click the magnifying glass icon, within large tabular views, to search for specific text within any of the visible fields in the display.
Item Selector Search 	Location—Within the fields. You can use a search text box to select items for inclusion in a rule or policy.
Advanced Search 	Location—Above the table grid. The search includes the logical operators as part of the filter string. In the search text box, when you hover over the icon, it displays an example filter condition. When you start entering the search string, the icon indicates whether the filter string is valid or not. NOTE: Press Spacebar to add an AND operator or OR operator to the search string. Press backspace at any point of time while entering a search criteria, only one character is deleted.

Table 7: J-Web Main Pane Elements *(Continued)*

Element	Description
Filter 	Location—Upper right corner of tabular views. You can click the filter icon to select any value from a list for category and subcategory columns. The grid is reloaded with the filtered category and subcategory.
Success message 	Location—At the top of the main pane. A message is displayed with this icon to state that your task is successful.
Information message 	Location—At the top of the main pane. A message is displayed with this icon to state you have some pending actions, but you can continue with the task.
Alert message 	Location—At the top of the main pane. A message is displayed with this icon to state you have some pending actions which you must complete to proceed with the required task.
Warning message 	Location—At the top of the main pane. A message is displayed with this icon to state you have some pending actions which you must complete else you cannot proceed with the required task.

J-Web Workflow Wizards

J-Web contains assisting workflow wizards that guide you through some of its security functions. These include Setup wizard, Chassis Cluster wizard, PPPoE wizard, and NAT wizard. These wizards help you with a guided setup and helps you in performing step-by-step configuration of a services gateway that can securely pass traffic.

NOTE: PPPoE and NAT Wizards are available only in the SRX300 line of devices and SRX550M devices.

Summary

J-Web is a GUI approach that aims to provide a graphical framework to help you visualize and manage your SRX Series Firewalls more easily.

SEE ALSO

| [Add an SRX Series Firewall to Juniper Security Director Cloud](#) | 52

2

PART

Add SRX Series Firewall to Security Director Cloud

Add an SRX Series Firewall to Juniper Security Director Cloud | 52

Add an SRX Series Firewall to Juniper Security Director Cloud

You can add your SRX Series Firewall to Juniper Security Director Cloud from J-Web. After you add the SRX Series Firewall to the Juniper Security Director Cloud, you can manage your network security using these devices.

NOTE: Starting in Junos OS Release 23.4R1, J-Web supports SRX1600 and SRX2300 Firewalls.

In order for your device to be managed by Juniper Security Director Cloud, ensure the following:

- Your device must have Internet connectivity and access to the Juniper Security Director Cloud portal.
- Before adding, you must open the following ports of your device so that it communicates with Juniper Security Director Cloud:
 - TCP/443 (HTTPS) for [Juniper Security Director Cloud portal](#) and [Redirect server](#)
 - TCP/7804 (NETCONF) for SRX Series Firewall outbound access to Juniper Security Director Cloud portal
 - TCP/6514 (TLS syslog)
 - TCP/53 (DNS) - (IP: 8.8.8.8)
 - UDP/53 (DNS) - (IP: 8.8.4.4)

Here's how you can add your device to Juniper Security Director Cloud from J-Web:

1. Login to J-Web.
2. Click **Add Device to Juniper Security Director Cloud** located on the upper-right corner of the J-Web GUI to open the Add Device to Juniper Security Director Cloud page.
3. Select your location from the list and then enter your Juniper Security Director Cloud account email and password. Then, click **Next**.
4. Select your organization account name (with administrator permissions) and click **Proceed**.
The status progress bar is shown until your device is successfully added. During this process, your device gets added to the Juniper Security Director Cloud and commits the received configuration from the Cloud API.

A success message is displayed and your device is added to Juniper Security Director Cloud. The label next to the icon changes from **Add Device to Juniper Security Director Cloud** to **Managed by Juniper Security Director Cloud** and the changed label is grayed out.

NOTE:

- When you have logged into the J-Web and remove your device from Juniper Security Director Cloud, J-Web still displays the status as **Manged by Juniper Security Director Cloud**. Log in to J-Web again to see the label changed to **Add Device to Juniper Security Director Cloud**.
- If there are any network issues between the SRX Series Firewall and Juniper Security Director Cloud, J-Web still displays the status as **Manged by Juniper Security Director Cloud**.

Once added, you can see your device on the **Device Management > Devices** page when you log into the Juniper Security Director Cloud portal. You can only delete your device from Juniper Security Director Cloud and not from the J-Web GUI. To remove the device, select your device on the Devices page and click the delete icon.

RELATED DOCUMENTATION

[Dashboard Overview](#) | 55

3

PART

Dashboard

J-Web Dashboard | 55

CHAPTER 2

J-Web Dashboard

IN THIS CHAPTER

- [Dashboard Overview | 55](#)

Dashboard Overview

IN THIS SECTION

- [What is J-Web Dashboard | 55](#)
- [Work with Widgets | 56](#)


What is J-Web Dashboard

The J-Web dashboard provides a unified overview of the system and network status retrieved from SRX Series Firewalls.

To use the dashboard at the top-level menu, select **Dashboard**. By default, the Dashboard page displays all the widget thumbnails.

[Figure 18 on page 56](#) shows an example of the Dashboard page of SRX345 Firewall.

Figure 18: SRX345 Dashboard

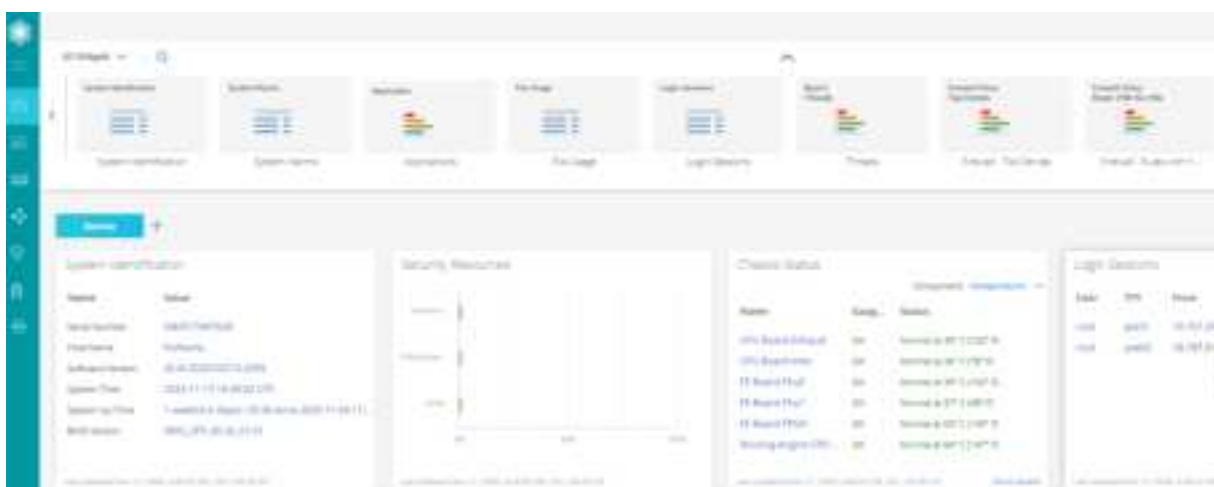

Work with Widgets

Each widget pane acts as a separate frame. You can click + icon to add separate dashboard and name it as per your ease. You can refresh the display of the Dashboard page by clicking the refresh icon at the upper-right corner above the widget pane.

You can choose any one of the categories to view widgets on your device:

- All Widgets—Displays all the supported widgets
- Applications—Displays only the supported application related widgets
- Devices—Displays only the supported device related widgets
- Security—Displays only the supported security related widgets

NOTE:

- Starting in Junos OS Release 21.4R1, on-box reports related widgets are removed to speed up the J-Web UI loading process.
- The Threat Activity pane is not available on SRX5400, SRX5600, and SRX5800 devices.
- For SRX Series Firewalls configured for logical systems, the Logical System Identification and Logical System Profile panes are displayed when you log in as a user logical system administrator. These are the only logical system panes available in Dashboard Preferences.

- If the rescue configuration is not set, the set rescue configuration link directs you to the Device Administration > Configuration Management > Rescue page to set the rescue configuration.
- Starting in Junos OS Release 23.4R1, J-Web supports SRX1600 and SRX2300 Firewalls.
For the other SRX Series Firewalls, you can create only one domain.

To use a widget on the Dashboard:

1. Drag the widgets from the palette or thumbnail container to your dashboard.

When you add more widgets on the J-Web Dashboard, you can observe high CPU usage on the Routing Engine for a short span of time on every refresh. We recommend that you use four widgets for lower CPU consumption.

2. Mouse over the top of each widget to minimize, refresh, and close by using the respective icons.

NOTE: The dashlet data is refreshed every minute by default. You cannot manually configure the refresh interval of the dashlet. If the data is not aged in the cache, data loads from the cache during the dashlet refresh. If the data is aged, it is retrieved from the device during the next refresh interval cycle.

Table 8 on page 57 provides the dashboard widgets options based on the selected device.

Table 8: Dashboard Widgets Options

Field	Description
System Alarms	Provides the received time, severity, description of the alarms and the action to be taken.
System Identification	Provides system details such as serial number of the software, hostname, software version, BIOS version, system uptime, and system time.
Login Sessions	Provides the user credentials, login time, idle time, and host.

Table 8: Dashboard Widgets Options *(Continued)*

Field	Description
File Usage	Provides current space requirements for log, temporary, crash, and database files. Click Maintain to download or delete some or all of these files. NOTE: File Usage widget supports RE3 line cards for SRX5000 line of devices.
Resource Utilization	Provides a graphical representation of the CPU, memory, and storage used for both the data and the control planes. The CPU control also shows the load average value for 1 minute when you mouse over CPU Control. NOTE: Resource Utilization widget supports RE3 line cards for SRX5000 line of devices.
Signal Strength	Displays the signal strength of the device.
Interface: Most Dropped Packets	Displays top 5 interfaces based on the CLI response; top-count will increase to 10.
Security Resources	Provides the maximum, configured, and activated number of sessions, firewall/VPN policies, and IPsec VPNs.
Storage Usage	Displays used and available storage and usage information about other system components.
Logical System Identification	Provides the logical system name, the security profile assigned to the logical system, the software version, and the system time.
Logical System Profile	Displays the types of resources that are allocated to the user logical system, the number of resources used and reserved, and the maximum number of resources allowed.
NAT - Top Source Translation Hits	Displays the top 10 source translation hits. Click More Details to view source NAT logs at Monitor > Logs > All Events.

Table 8: Dashboard Widgets Options *(Continued)*

Field	Description
NAT - Top Destination Translation Hits	Displays the top 10 destination translation hits. Click More Details to view destination NAT logs at Monitor > Logs > All Events.
IPsec VPNs (IKE Peers)	Displays status count of IPsec VPN topologies, such as ADVPN Hub and Spoke, Remote Access, and Site-to-Site/Hub & Spoke. Click More Details to redirect to the Monitor > Network > IPsec VPN page.
VPN Monitoring	Displays the total number of IPsec VPNs (Total VPNs for All VPNs and total remote users for Remote Access). All VPNs option includes Site to Site, Hub & Spoke, ADVPN Hub, and ADVPN spoke. Remote Access includes Juniper Secure Connect and NCP Exclusive Entry Client. Widget pane also displays the VPNs status with a color code: - Up (Green)—IKE and IPsec SA are up. - Down (Red)—IKE and IPsec are not operationally up. - Partially Up (Amber)—Either IKE or IPsec SA is up or one or few traffic selectors are up. Click More Details available on the widget pane to redirect to the Monitor > Network > IPsec VPN page. On the widget pane, for the All VPNs option, each configured IPsec VPN is represented as an individual tunnel icon or box. On the widget pane, for the Remote Access option, each IKE SAs corresponding to the configured IPsec VPN is represented as an individual tunnel icon or box. If there are no IKE SAs for the VPN, then a single box is shown as down. When you hover over the box, widget displays VPN tunnel details such as Remote gateway, VPN name, IKE status, IPsec status, local IP, and remote IP. Click More Details to redirect to the Monitor > Network > IPsec VPN page with the VPN name filtered.
Zones: Most Bandwidth By Bytes	Displays zones with maximum throughput rate in bytes, sorted by incoming and outgoing bytes.

Table 8: Dashboard Widgets Options *(Continued)*

Field	Description
Zones: Most Dropped Packets	Displays firewall zones with maximum number of packet drops, sorted by count.
Top Scanned File Categories	Displays top scanned files for malware. These files can be executable files, archived files, or libraries.

4

PART

Monitor

[Network](#) | 62

[Logs](#) | 69

[Maps and Charts](#) | 105

[Statistics](#) | 120

[Reports](#) | 129

Network

IN THIS CHAPTER

- [Monitor Interfaces | 62](#)
- [Monitor DHCP Server Bindings | 63](#)
- [Monitor IPsec VPN | 65](#)

Monitor Interfaces

You are here: **Monitor** > **Network** > **Interfaces**.

Use this page to view general information about all physical and logical interfaces for a device.

NOTE: Starting in Junos OS Release 23.4R1, J-Web supports SRX1600 and SRX2300 Firewalls.

[Table 9 on page 62](#) describes the fields on the Interfaces page.

Table 9: Fields on the Interfaces Page

Field	Description
Show Interfaces	Select All or any particular slot to show the interface details.
View Details	Displays extensive statistics about the selected interface, including its general status, traffic information, IP address, I/O errors, class-of-service data, and statistics.
Clear Statistics	Clears the statistics for the selected interface.

Table 9: Fields on the Interfaces Page (*Continued*)

Field	Description
Auto Refresh Frequency	Indicates the duration of time after which you want the data on the page to be refreshed automatically.
Interface	Displays the interface name.
Link Status	Displays whether the interface is linked (Up) or not linked (Down).
Address	Displays the IP address of the interface.
Zone	Displays whether the zone is an untrust zone or a trust zone.
Host Inbound Traffic	Displays the following: • Services that are enabled on the device, such as HTTPS and SSH. • Protocols that are enabled on the device, such as BGP and IGMP.

RELATED DOCUMENTATION

[Monitor Session](#) | 69

Monitor DHCP Server Bindings

You are here: **Monitor** > **Network** > **DHCP Server Bindings**.

Use this page to view information about dynamic and static DHCP leases, conflicts, pools, and statistics.

[Table 10 on page 64](#) describes the fields on the DHCP Server Bindings page.

Table 10: Fields on the DHCP Server Bindings Page

Field	Description
Routing Instance	Select the routing instance name.
DHCP Interface Details	Displays the interface on which the DHCP server is configured.
Clear	Clears all or selected binding information.
Client IP Address	Displays the IP address of the DHCP client.
MAC Address	Displays the MAC address of the DHCP server.
State	State of the address binding table on the extended DHCP local server: • BOUND—Client has an active IP address lease. • FORCE RENEW—Client has received the FORCE RENEW message from the server. • INIT—Initial state. • RELEASE—Client is releasing the IP address lease. • RENEWING—Client is sending a request to renew the IP address lease. • REQUESTING—Client is requesting a DHCP server. • SELECTING—Client is receiving offers from DHCP servers.
Lease Time Remaining	Displays the time (in hours and minutes) at which the lease expires.
DHCP Interface	Displays the interface on which the request was received.
Session ID	Displays the Session ID of the subscriber session.

RELATED DOCUMENTATION

| [About Reports Page](#) | 129

Monitor IPsec VPN

You are here: **Monitor** > **Network** > **IPsec VPN**.

Use the monitoring functionality to view information of IKE, IPsec configuration, Security Associations (SA), and Statistics in a tabular format that includes sortable columns. A VPN provides a means by which remote computers communicate securely across a public WAN such as the Internet. IPsec VPN is a protocol that consist set of standards used to establish a VPN connection.

[Table 11 on page 65](#) describes the fields on the IPsec VPN page.

Table 11: Fields on the IPsec VPN Page

Field	Description
IPsec Statistics list menu	Displays summary of the global IPsec VPN or selected IPsec VPN statistics.
Clear SA list menu	Displays the options Clear All SAs or Clear Selected SA to clear SAs. If you choose Clear All SAs, then you can select Clear All IKE SAs, Clear All IPsec SAs, or Clear All IKE & IPsec SAs. If you choose Clear Selected SAs, then you can select Clear Selected IKE SA, Clear Selected IPsec SA, or Clear Selected IKE & IPsec SA.
Refresh icon	Click refresh icon to get latest operational data. NOTE: The configuration data is fetched from cache. Any changes to the CLI will be fetched only after you commit it and click Monitor > Network > IPsec VPN to refresh the page and get the latest configuration data.
Search	You can search and filter either the remote gateway or the VPN name.
Remote Gateway	Displays gateway name of the remote system.
IKE Status	Displays if IKE is up or down.

Table 11: Fields on the IPsec VPN Page *(Continued)*

Field	Description
Local IP	Displays the external interface, IP address, and port of the local peer so that its remote peer can communicate with it.
Remote IP	Displays the IP address and port of the remote peer. NOTE: The remote IP displays only when the IKE is up.
VPN Name	Displays IPsec VPN name.
TS/Proxy ID Status	Displays information and status (up or down) of the traffic selector or the proxy ID that are negotiated between the peers.
Connection Profile	Displays the connection profile in the FQDN or FQDN/realm format if configured. If not configured, the field displays as external-IP/VPN-Name.
IPsec Soft Life	Displays the soft lifetime (in seconds) which indicates that the IPsec key management system that the SA is about to expire.
IKE Index	Displays index number for a particular IKE SA.
IPsec Index	Displays index number for a particular IPsec SA.
Topology	Displays the topology deployment for an IPsec VPN. For example: Site to Site/Hub & Spoke or Remote Access VPN.
IKE Proposal	Lists algorithms negotiated with the remote peer.
IPsec Proposal	Lists protocols and algorithms negotiated with the remote peer.

Table 11: Fields on the IPsec VPN Page *(Continued)*

Field	Description
Authentication Type	Display if the preshared key or certificate based is used by the Virtual Private network (VPN).
DPD	Displays dead peer detection (DPD) method used by devices to verify the current existence and availability of IPsec peers.
Role	Displays whether the device is an initiator or a responder.
IKE Initiator Cookie	Random number, called a cookie, which is sent to the remote node when the IKE negotiation is triggered.
IKE Responder Cookie	Random number generated by the remote node and sent back to the initiator as a verification that the packets are received.
IKE Life	Lifetime (in seconds) of an IKE SA. Range: 180 through 86,400. Default is 3600.
Mode	Negotiation method agreed upon by the two IPsec endpoints, or peers, used to exchange information. Each exchange type determines the number of messages and the payload types that each message contains. The modes or exchange types are: • Main—The exchange is done with six messages. This mode, or exchange type, encrypts the payload, protecting the identity of the neighbor. Displays the authentication method used: preshared keys or certificate. • Aggressive—The exchange is done with three messages. This mode, or exchange type, does not encrypt the payload, leaving the identity of the neighbor unprotected.

Table 11: Fields on the IPsec VPN Page *(Continued)*

Field	Description
Peer IKE-ID	Displays the IKE IDs for the local or remote devices.
Remote Access	Displays the remote access URL. NOTE: This option is applicable only for the remote access VPN with Juniper Secure Connect (JSC).
Remote User	Displays the remote IKE identity to exchange with the destination peer to establish communication.
DNS	Displays the IP addresses for a primary and a secondary DNS servers.
WINS	Displays the IP addresses for a primary and a secondary WINS servers.
Inbound SPI	Displays security parameter index (SPI) value to authenticate incoming traffic coming from the peer.
Outbound SPI	Displays algorithms, keys, or SPI values to decrypt and to authenticate outbound traffic to the peer.
IPsec Hard Life	Displays number of seconds until the SA expires.
IPsec Lifesize	Displays the lifesize remaining specifies the usage limits in kilobytes. If no lifesize is specified, it shows unlimited.

RELATED DOCUMENTATION

Logs

IN THIS CHAPTER

- [Monitor Session | 69](#)
- [Monitor Threats | 75](#)
- [Monitor Web Filtering | 81](#)
- [Monitor ATP | 85](#)
- [Monitor VPN | 90](#)
- [Monitor All Events | 93](#)
- [Monitor System | 101](#)
- [Monitor Alarms | 103](#)

Monitor Session

You are here: **Monitor** > **Logs** > **Session**.

Use the monitoring functionality to view the firewall events or sessions that occurred during the time period specified.

NOTE: Session page is available on all the SRX Series Firewalls except the SRX5000 line of devices.

[Table 12 on page 70](#) describes the fields on the Session page.

Table 12: Fields on the Session Page

Field	Description
Last	Select the time from the list to view the activity that you are most interested in. Once you select the time, all the data presented in your view refreshes automatically. You can also use Customize to set a custom date and click Apply to view the specified session logs.
More	• View PCAP Counters—View packet capture (PCAP) counter statistics for unknown application traffic. Click Clear Counters to reset all the packet capture counters value of the unknown application traffic to zero. • Delete PCAP Files—Select this option to permanently delete all the available PCAP files on your device.
Refresh	Click the refresh icon to get the latest session information.
Show Hide Columns	The three vertical dots represents this icon. Enables you to show or hide a column in the grid.
Export to CSV	You can export the session data to a comma-separated value (.csv) file. Select the three vertical dots on the right-side of the page and then click Export to CSV. The CSV file is downloaded to your local machine. You can download only maximum of 100 sessions data.

Table 12: Fields on the Session Page (*Continued*)

Field	Description
Filter Criteria	Use the filter text box present above the table grid. The search includes the logical operators as part of the filter string. NOTE: Starting in Junos OS 23.1R1 Release, J-Web supports the following operators: • = (equal to) • AND • != (not equal to) • >= (greater than or equal to) • <= (less than or equal to) • Nested and/or J-Web also supports Netmask when searching for IP addresses. In the filter text box, when you hover over the icon, it displays an example filter condition. When you start entering the search string, the icon indicates whether the filter string is valid or not. The following filters are available: • Source IP • Destination IP • Session ID • Log type • User • Application • Source Zone • Destination Zone • Source Country • Destination Country

Table 12: Fields on the Session Page *(Continued)*

Field	Description
	• Source Port • Destination Port • Protocol
X	Click X to clear your search filter.
Save Filter	Click Save Filter to save filters after you specify the filtering criteria. To save a filter: 1. Enter the filter criteria you are looking for in the advanced search box. 2. Click Save Filter. 3. Enter a name for the filter and click the tick icon to save it.
Load Filter	Displays the saved filters list. Hover over the saved filter name to view the query expression. You can delete the saved filter using the delete icon.
View Details	When you hover over the PCAP file, a Detailed View icon appears before the PCAP file. Click the icon to view the log details on the Detailed Log View page. Click on the download icon in the Detailed Log View page to download the packet capture file of an unknown application traffic. The session ID available in the file name identifies the PCAP file. NOTE: If the files are not available, the download fails and you will receive an error message.
PCAP	Click on the download icon to download the packet capture (PCAP) file of an unknown application traffic. The download icon appears only if a packet captured for the session log type close. The session ID available in the file name identifies the PCAP file. NOTE: If the files are not available, the download fails and you will receive an error message.

Table 12: Fields on the Session Page (Continued)

Field	Description
Time	Displays the time when the log was received.
Log Type	Displays the log type.
Source Zone	Displays the source zone of the session.
Source IP	Displays the source IP address from where the session occurred.
User	Displays the username from whom the session log is generated.
Destination Zone	Displays the destination zone of the session.
Destination IP	Displays the destination IP of the session occurred.
Destination Port	Displays the destination port of the session.
Application	Displays the application name from which the session logs are generated.
Action	Displays the action taken for the event: warning, allow, and block.
Policy	Displays the destination country of the log.
Bandwidth	Displays the bandwidth utilization for the session.
NAT Source IP	Displays the translated (or natted) source IP address. It can contain an IPv4 or an IPv6 addresses.
NAT Source Port	Displays the translated source port.
NAT Destination IP	Displays the translated (also called natted) destination IP address.

Table 12: Fields on the Session Page (Continued)

Field	Description
NAT Destination Port	Displays the translated destination port.
Protocol ID	Displays the protocol ID in the log.
Session ID	Displays the traffic session ID of the log.
Interface	Displays the interface of the session.
Closure Reason	Displays the reason for the log generation. For example, a connection tear down may have an associated reason such as authentication failed.
Packets From Client	Displays the number of packets received from the client.
Bytes From Client	Displays the number of bytes received from the client.
Packets From Server	Displays the number of packets received from the server.
Bytes From Server	Displays the number of bytes received from the server.
Elapsed Time	Displays the time elapsed since the last time interval began.
Source Port	Displays the port number of the source.

RELATED DOCUMENTATION
[Monitor Threats | 75](#)

Monitor Threats

You are here: **Monitor** > **Logs** > **Threats**.

Use the monitoring functionality to view the security threats. Threats are defined as any IPS, screen, security intelligence, antivirus, content filtering, or antispam.

NOTE: Threat page is available on all the SRX Series Firewalls except the SRX5000 line of devices.

Table 13 on page 75 describes the fields on the Threats page.

Table 13: Fields on the Threats Page

Field	Description
Last	Select the time from the list to view the activity that you are most interested in. Once the time is selected, all of the data presented in your view is refreshed automatically. You can also use Customize to set a custom date and click Apply to view the specified threats.
Refresh	Click the refresh icon to get the latest threat information.
Show Hide Columns	This icon is represented by three vertical dots. Enables you to show or hide a column in the grid.
Export to CSV	You can export the threats data to a comma-separated value (.csv) file. Select the three vertical dots on the right-side of the page and click Export to CSV . The CSV file is downloaded to your local machine. You can download only maximum of 100 sessions data.

Table 13: Fields on the Threats Page (*Continued*)

Field	Description
Filter Criteria	Use the filter text box present above the table grid. The search includes the logical operators as part of the filter string. NOTE: Starting in Junos OS 23.1R1 Release, J-Web supports the following operators: • = (equal to) • AND • != (not equal to) • >= (greater than or equal to) • <= (less than or equal to) • Nested and/or J-web also supports Netmask when searching for IP addresses. In the filter text box, when you hover over the icon, it displays an example filter condition. When you start entering the search string, the icon indicates whether the filter string is valid or not. The following filters are available: • Source IP • Destination IP • Session ID • Log type • User • Application • Source Zone • Destination Zone • Source Country • Destination Country

Table 13: Fields on the Threats Page (*Continued*)

Field	Description
	• Source Port • Destination Port • Protocol
X	Click X to clear your search filter.
Save Filter	Click Save Filter to save filters after you specify the filtering criteria. To save a filter: 1. Enter the filter criteria you are looking for in the advanced search box. 2. Click Save Filter. 3. Enter a name for the filter and click the tick icon to save it.
Load Filter	Displays the saved filters list. Hover over the saved filter name to view the query expression. You can delete the saved filter using the delete icon.

Table 13: Fields on the Threats Page *(Continued)*

Field	Description
View Details	When you hover over the PCAP file, a Detailed View icon appears before the PCAP file. Click the icon to view the log details on the Detailed Log View page. Click on the download icon on the Detailed Log View page to download the packet capture file. If the files are not available, the download fails and you will receive an error message. NOTE: The download icon will only be available for the IPS attack logs. To view the packet capture data on the Threats page, ensure that attack logging notification is enabled. If not: 1. Go to Security Services > IPS > Policy. 2. Click the add icon (+) on the upper right side of the Policy page. The Add IDP Policy page appears. 3. Enter the name of the IPS policy and then click +. The Add IPS Rule page appears. 4. Click Advanced and select the check box to configure Enable Attack Logging under Notification.
PCAP	Click on the download icon to download the packet capture (PCAP) file of IPS attacks. NOTE: The download icon appears only for the IPS attack logs. The PCAP file will be downloaded to your system from the <code>/var/log/pcap/</code> folder. If the files are not available, the download fails and you will receive an error message.
Time	Displays the time when the threats log was received.
Log Type	Displays the threats log type. For example, IPS, Antivirus, Antispam, and so on.
Name	Displays the name of the event.
Severity	Displays the severity of the threat.
Source Zone	Displays the source zone of the threats.

Table 13: Fields on the Threats Page (Continued)

Field	Description
Source IP	Displays the source IP address from where the threats log occurred.
Source Port	Displays the port number of the source.
User	Displays the username from whom the threat log is generated.
Destination Zone	Displays the destination zone of the threats.
Destination IP	Displays the destination IP of the threats occurred.
Destination Port	Displays the port number of the destination.
Application	Displays the nested application or application name from which the threats are generated.
Action	Displays the action taken from the threats.
Session ID	Displays the traffic session ID of the threats.
Closure Reason	Displays the reason for the session closure.
Profile	Displays the threat profile name.
Category	Displays the threat category.
URL	Displays the accessed URL name that triggered the event.
Object	Displays the object name of the threats.
Destination Interface	Displays the interface name of the destination.

Table 13: Fields on the Threats Page (Continued)

Field	Description
Source Interface	Displays the interface name of the source.
Policy	Displays the policy name that triggered the threats log.
Rule	Displays the rule name of the threats log.
Protocol	Displays the protocol ID in the threats log.
CVE-ID	Displays the Common Vulnerabilities and Exposures (CVE) identifiers information for the threat.
Elapsed Time	Displays the time elapsed since the last time interval began.
Packet Log ID	Displays the packets ID received before and after the attack for further offline analysis of attacker behavior.
XFF	Displays X-Forwarded-For (XFF) header added to packets by a proxy server that includes the real IP address of the client making the request.
File Name	Displays the filename of the threats log.
Argument	Displays the arguments that are passed to an event when it is invoked from the threats log.
Source Name	Displays the name of the source from where threat is originated.
Feed Name	Displays the feed name of the threat detected.
Count	Displays the number of threats count.
Message Type	Displays the message type for the threat detected.

Table 13: Fields on the Threats Page (*Continued*)

Field	Description
HTTP Host	Displays the host URL for the threat.

RELATED DOCUMENTATION

[Monitor Web Filtering](#) | 81

Monitor Web Filtering

You are here: **Monitor** > **Logs** > **Web Filtering**.

Use this page to view information about the Web filtering events based on web filtering policies, filter options, and grid elements of Web filtering events.

NOTE: Web Filtering page is available on all the SRX Series Firewalls except the SRX5000 line of devices.

[Table 14 on page 81](#) describes the fields on the Web Filtering page.

Table 14: Fields on the Web Filtering Page

Field	Description
Last	Select the time from the list to view the activity that you are most interested in. Once the time is selected, all of the data presented in your view is refreshed automatically. You can also use Customize to set a custom date and click Apply to view the specified Web filtering event logs.
Refresh	Click the refresh icon to get the latest Web filtering event information.

Table 14: Fields on the Web Filtering Page *(Continued)*

Field	Description
Show Hide Columns	This icon is represented by three vertical dots. Enables you to show or hide a column in the grid.
Export to CSV	You can export the Web filtering event data to a comma-separated value (.csv) file. Select the three vertical dots on the right-side of the page and click Export to CSV. The CSV file is downloaded to your local machine. You can download only maximum of 100 sessions data.

Table 14: Fields on the Web Filtering Page *(Continued)*

Field	Description
Filter Criteria	Use the filter text box present above the table grid. The search includes the logical operators as part of the filter string. NOTE: Starting in Junos OS 23.1R1 Release, J-Web supports the following operators: • = (equal to) • AND • != (not equal to) • >= (greater than or equal to) • <= (less than or equal to) • Nested and/or J-Web also supports Netmask when searching for IP addresses. In the filter text box, when you hover over the icon, it displays an example filter condition. When you start entering the search string, the icon indicates whether the filter string is valid or not. The following filters are available: • Source IP • Destination IP • Session ID • Log type • User • Application • Source Zone • Destination Zone • Source Country • Destination Country

Table 14: Fields on the Web Filtering Page *(Continued)*

Field	Description
	• Source Port • Destination Port
X	Click X to clear your search filter.
Save Filter	Click Save Filter to save filters after you specify the filtering criteria. To save a filter: 1. Enter the filter criteria you are looking for in the advanced search box. 2. Click Save Filter. 3. Enter a name for the filter and click the tick icon to save it.
Load Filter	Displays the saved filters list. Hover over the saved filter name to view the query expression. You can delete the saved filter using the delete icon.
Time	Displays the time when the Web filtering event log was received.
Log Type	Displays the Web filtering event log type.
Source Zone	Displays the source zone of the Web filtering event.
Source IP	Displays the source IP address from where the Web filtering event occurred.
User	Displays the username from whom the Web filtering event log is generated.
Destination Zone	Displays the destination zone of the Web filtering event.
Destination IP	Displays the destination IP of the Web filtering event occurred.

Table 14: Fields on the Web Filtering Page *(Continued)*

Field	Description
Destination Port	Displays the destination port of the Web filtering event.
Application	Displays the application name for which the Web filtering event logs are generated.
Action	Displays the action taken for the event: deny, permit, or redirect.
Session ID	Displays the traffic session ID of the Web filtering event log.
Closure Reason	Displays the reason for the Web filtering event log generation closure.
URL Category Risk	Displays the Web filtering URL risk level.
Profile	Displays the Web filtering profile name.
Category	Displays the Web filtering URL category.
URL	Displays the accessed URL name that triggered the event.
Obj	Displays the object name of the Web filtering event log.

RELATED DOCUMENTATION

[Monitor ATP](#) | 85

Monitor ATP

You are here: **Monitor** > **Logs** > **ATP**.

Use the monitoring functionality to view the ATP page. Analyzing the Juniper ATP logs yields information such as malware name, action taken, infected host, source of an attack, and destination of an attack.

NOTE: ATP page is available on all the SRX Series Firewalls except the SRX5000 line of devices.

Table 15 on page 86 describes the fields on the ATP page.

Table 15: Fields on the ATP Page

Field	Description
Last	Select the time from the list to view the activity that you are most interested in. Once the time is selected, all of the data presented in your view is refreshed automatically. You can also use Customize to set a custom date and click Apply to view the specified ATP logs.
Refresh	Click the refresh icon to get the latest ATP log information.
Show Hide Columns	This icon is represented by three vertical dots. Enables you to show or hide a column in the grid.
Export to CSV	You can export the ATP log data to a comma-separated value (.csv) file. Select the three vertical dots on the right-side of the page and click Export to CSV. The CSV file is downloaded to your local machine. You can download only maximum of 100 ATP log data.

Table 15: Fields on the ATP Page *(Continued)*

Field	Description
Filter Criteria	Use the filter text box present above the table grid. The search includes the logical operators as part of the filter string. NOTE: Starting in Junos OS 23.1R1 Release, J-Web supports the following operators: • = (equal to) • AND • != (not equal to) • >= (greater than or equal to) • <= (less than or equal to) • Nested and/or J-Web also supports Netmask when searching for IP addresses. In the filter text box, when you hover over the icon, it displays an example filter condition. When you start entering the search string, the icon indicates whether the filter string is valid or not. The following filters are available: • Source IP • Destination IP • Session ID • Log type • User • Application • Source Zone • Destination Zone • Source Country • Destination Country

Table 15: Fields on the ATP Page *(Continued)*

Field	Description
	• Source Port • Destination Port • Protocol
X	Click X to clear your search filters.
Save Filter	Click Save Filter to save filters after you specify the filtering criteria. To save a filter: 1. Enter the filter criteria you are looking for in the advanced search box. 2. Click Save Filter. 3. Enter a name for the filter and click the tick icon to save it.
Load Filter	Displays the saved filters list. Hover over the saved filter name to view the query expression. You can delete the saved filter using the delete icon.
Time	Displays the time when the ATP log was received.
Log Type	Displays the ATP log type: Action, Malware event, SMTP action, and IMAP action.
Source Zone	Displays the source zone of the ATP log.
Source IP	Displays the source IP address from where the ATP log occurred.
Source Port	Displays the port number of the source.
User	Displays the username who downloaded the possible malware.
Destination Zone	Displays the destination zone of the ATP log.

Table 15: Fields on the ATP Page (Continued)

Field	Description
Destination IP	Displays the destination IP of the ATP log occurred.
Destination Port	Displays the destination port of the ATP log.
Application	Displays the application name from which the ATP logs are generated.
Action	Displays the action taken from the event: log, permit, and log and permit.
Session ID	Displays the session ID of the ATP log.
Policy	Displays the name of policy that enforced this action.
List Hit	Displays the number of times the C&C server has attempted to contact hosts on your network.
URL	Displays the accessed URL name that triggered the event.
Sample SHA256	Displays the SHA-256 hash value of the downloaded file.
File Hash Lookup	Displays the hash of the file sent for matching against known malware.
File Name	Displays the name of the file, including the extension.
Protocol	Displays the protocol that the C&C server used to attempt communication.
File Category	Displays the type of file. Examples: PDF, executable, document.
Hostname	Displays the hostname of device that downloaded the possible malware.
Verdict Number	Displays the a score or threat level for a file.

Table 15: Fields on the ATP Page *(Continued)*

Field	Description
Malware Info	Displays the malware name or brief description.
Send To	Displays the email address.
Send From	Displays the email address.
Tenant ID	Displays the internal unique identifier.

RELATED DOCUMENTATION

| [Monitor VPN](#) | 90

Monitor VPN

You are here: **Monitor** > **Logs** > **VPN**.

Use the monitoring functionality to view comprehensive stream log details of VPN in a tabular format that includes sortable columns. A VPN provides a means by which remote computers communicate securely across a public WAN such as the Internet.

NOTE: VPN page is available on all the SRX Series Firewalls except the SRX5000 line of devices.

[Table 16 on page 91](#) describes the fields on the VPN page.

Table 16: Fields on the VPN Page

Field	Description
Last	Select the time from the list to view the activity that you are most interested in. Once the time is selected, all of the data presented in your view is refreshed automatically. You can also use Customize to set a custom date and click Apply to view the specified VPN events.
Refresh	Click the refresh icon at the upper-right corner to display the fresh content.
Show Hide Columns	This icon is represented by three vertical dots. Enables you to show or hide a column in the grid.
Export to CSV	You can export the VPN data to a comma-separated value (.csv) file. Select the three vertical dots on the right-side of the page and click Export to CSV. The CSV file is downloaded to your local machine. You can download only maximum of 100 VPN data.
Filter Criteria	Use the filter text box present above the table grid. The search includes the logical operators as part of the filter string. NOTE: Starting in Junos OS 23.1R1 Release, J-Web supports the following operators: • = (equal to) • AND • != (not equal to) • >= (greater than or equal to) • <= (less than or equal to) • Nested and/or J-Web also supports Netmask when searching for IP addresses. In the filter text box, when you hover over the icon, it displays an example filter condition. When you start entering the search string, the icon indicates whether the filter string is valid or not. The available filter option is Log type.

Table 16: Fields on the VPN Page *(Continued)*

Field	Description
X	Click X to clear your search filter.
Save Filter	Click Save Filter to save filters after you specify the filtering criteria. To save a filter: 1. Enter the filter criteria you are looking for in the advanced search box. 2. Click Save Filter. 3. Enter a name for the filter and click the tick icon to save it.
Load Filter	Displays the saved filters list. Hover over the saved filter name to view the query expression. You can delete the saved filter using the delete icon.
Time	Displays the time when the VPN log was received.
Log Type	Displays the VPN log type: • Bad SPI • Replay • PV decryption • PV encryption • PV sm keygen • PV replay • Decrypt bad pad • AUTH fail • D3P ERR
Interface Name	Displays the external interface name for the VPN.

Table 16: Fields on the VPN Page (Continued)

Field	Description
Tunnel ID	Displays the VPN tunnel ID.
Source IP	Displays the source IP address from where the VPN connection is established.
Destination IP	Displays the destination IP to where the VPN connection is established.
Length	Displays the total packet length in Bytes.
Type	Displays the VPN type: ESP or AH protocol.
Index	Displays the index number of the IKE SA.
Sequence Number	Displays the sequence number of the packets sent for the VPN event.
Message	Displays the error message for the VPN event.

RELATED DOCUMENTATION

| [Monitor All Events](#) | 93

Monitor All Events

You are here: **Monitor** > **Logs** > **All Events**.

Use this page to view event details associated with session, content filtering, antispyam, antivirus, IPS, screen, security intelligence, Web filtering, ATP, and VPN.

NOTE: All Events page is available on all the SRX Series Firewalls except the SRX5000 line of devices.

Table 17 on page 94 describes the fields on the All Events page.

Table 17: Fields on the All Events Page

Field	Description
Last	Select the time from the list to view the activity that you are most interested in. Once the time is selected, all of the data presented in your view is refreshed automatically. You can also use Customize to set a custom date and click Apply to view the specified event logs.
Refresh	Click the refresh icon to get the latest event information.
Show Hide Columns	This icon is represented by three vertical dots. Enables you to show or hide a column in the grid.
Export to CSV	You can export the event data to a comma-separated value (.csv) file. Select the three vertical dots on the right-side of the page and click Export to CSV. The CSV file is downloaded to your local machine. You can download only maximum of 100 event data.

Table 17: Fields on the All Events Page (*Continued*)

Field	Description
Filter Criteria	Use the filter text box present above the table grid. The search includes the logical operators as part of the filter string. NOTE: Starting in Junos OS 23.1R1 Release, J-Web supports the following operators: • = (equal to) • AND • != (not equal to) • >= (greater than or equal to) • <= (less than or equal to) • Nested and/or J-Web also supports Netmask when searching for IP addresses. In the filter text box, when you hover over the icon, it displays an example filter condition. When you start entering the search string, the icon indicates whether the filter string is valid or not. The following filters are available: • Source IP • Destination IP • Session ID • Log type • User • Application • Source Zone • Destination Zone • Source Country • Destination Country

Table 17: Fields on the All Events Page *(Continued)*

Field	Description
	• Source Port • Destination Port • Protocol
X	Click X to clear your search filter.
Save Filter	Click Save Filter to save filters after you specify the filtering criteria. To save a filter: 1. Enter the filter criteria you are looking for in the advanced search box. 2. Click Save Filter. 3. Enter a name for the filter and click the tick icon to save it.
Load Filter	Displays the saved filters list. Hover over the saved filter name to view the query expression. You can delete the saved filter using the delete icon.
View Details	When you hover over the PCAP file, a Detailed View icon appears before the PCAP file. Click the icon to view the log details on the Detailed Log View page. Click on the download icon on the Detailed Log View page to download the packet capture file. If the files are not available, the download fails and you will receive an error message. NOTE: The download icon will only be available for the IPS attack logs and session close logs.
PCAP	Click the download icon to download the packet capture file. The PCAP file will be downloaded to your system from the <code>/var/log/pcap/</code> folder. If the files are not available, the download fails and you will receive an error message. NOTE: The download icon will only be available for the IPS attack logs and session close logs.

Table 17: Fields on the All Events Page (Continued)

Field	Description
Time	Displays the time when the event log was received.
Log Type	Displays the event log type.
Source Zone	Displays the source zone of the event.
Source IP	Displays the source IP address from where the event occurred.
Destination Zone	Displays the destination zone of the event.
Destination IP	Displays the destination IP of the event occurred.
Destination Port	Displays the destination port of the event.
Application	Displays the application name for which the event logs are generated.
Action	Displays the action taken for the event: warning, allow, and block.
Policy	Displays the destination country of the event log.
NAT Source IP	Displays the translated (or natted) source IP address. It can contain IPv4 or IPv6 addresses.
NAT Source Port	Displays the translated source port.
NAT Destination IP	Displays the translated (also called natted) destination IP address.
NAT Destination Port	Displays the translated destination port.
Protocol	Displays the protocol ID in the event log.

Table 17: Fields on the All Events Page (Continued)

Field	Description
Session ID	Displays the traffic session ID of the event log.
User	Displays the username from whom the event log is generated.
Source Interface	Displays the source interface of the event log.
Destination Interface	Displays the destination interface of the event log.
Closure Reason	Displays the reason for the log generation. For example, a connection tear down may have an associated reason such as authentication failed.
Packets From Client	Displays the number of packets received from the client.
Bytes From Client	Displays the number of bytes received from the client.
Packets From Server	Displays the number of packets received from the server.
Bytes From Server	Displays the number of bytes received from the server.
Elapsed Time	Displays the time elapsed since the last time interval began.
Source Port	Displays the port number of the source.
Sequence Number	Displays the sequence number of the packets sent.
Message Type	Displays the message type for the event detected.
Count	Displays the number of events count.
Severity	Displays the severity of the threat.

Table 17: Fields on the All Events Page *(Continued)*

Field	Description
CVE-ID	Displays the Common Vulnerabilities and Exposures (CVE) identifiers information.
Packet log ID	Displays the packets ID received before and after the attack for further offline analysis of attacker behavior.
XFF	Displays the X-Forwarded-For (XFF) header added to packets by a proxy server that includes the real IP address of the client making the request.
Profile	Displays the event profile name.
File Name	Displays the filename of the event log.
Argument	Displays the arguments that are passed from the event log.
Message	Displays the message ID for negotiation.
Bandwidth	Displays the bandwidth utilization for the event log.
Malware Info	Displays the malware name or brief description.
Hostname	Displays the hostname of device that downloaded the possible malware.
File Category	Displays the type of file. Examples: PDF, executable, document.
Verdict Number	Displays the a score or threat level for a file.
List Hit	Displays the number of times the C&C server has attempted to contact hosts on your network.
File Hash Lookup	Displays the hash of the file sent for matching against known malware.

Table 17: Fields on the All Events Page (Continued)

Field	Description
Sample SHA256	Displays the SHA-256 hash value of the downloaded file.
File Name	Displays the name of the file, including the extension.
URL	Displays the accessed URL name that triggered the event.
Send To	Displays the email address.
Send From	Displays the email address.
Category	Displays the threat/event category.
Object	Displays the object name of the event log.
URL Category Risk	Displays the Web filtering URL category risk level.
Virus Name	Displays the detected virus name.
Source Name	Displays the name of the source from where event is originated.
Feed Name	Displays the feed name of the event detected.
Rule	Displays the rule name of the threats/events log.
Length	Displays the total packet length in Bytes
Type	Displays the event type.
Index	Displays the index number of the IKE SA.

RELATED DOCUMENTATION

Monitor Alarms | 103

Monitor System

You are here: **Monitor** > **Logs** > **System**.

NOTE: Starting in Junos OS Release 23.2R1, J-Web supports new **System** sub-menu under **Monitor** menu. This sub-menu is not supported for SRX300 line of Firewalls and SRX550HM Firewall.

Use this page to view information about system events such as routine operations, failure and error conditions, and emergency or critical conditions.

[Table 18 on page 101](#) describes the fields on the System page.

Table 18: Fields on the System Page

Field	Description
Show logs of file	Select the system log file name to view logs. NOTE: You cannot configure system log message file options using J-Web. To configure the device to log system messages, use the CLI configuration: set system syslog.
Duration	Select the time from the list to view the activity that you are most interested in. Once you select the time, all the data presented in your view refreshes automatically. You can also use Customize to set a custom date and click Apply to view the specified system log. By default, grid will show last one hour data from selected syslog file.

Table 18: Fields on the System Page *(Continued)*

Field	Description
Refresh	Click the refresh icon to get the latest system logs information.
Filter Criteria	In the filter text box, when you hover over the icon, it displays an example filter condition. When you start entering the search string, the icon indicates whether the filter string is valid or not. NOTE: Only =(equal to) operator is supported in the filter queries. The following filters are available: • Event • Message Click X to clear the search entries.
Time	Displays the date and time when the log was received.
Event	Displays the name of the event for the log.
Message	Displays the message for the log.
Process	Displays the process which generates the log. By default, this option is hidden.
Detailed View	When you hover over the selected system log file, a Detailed View icon appears before the system log file. Click the icon to view the log details on the System Log Details page.

RELATED DOCUMENTATION

[Monitor All Events](#) | 93

Monitor Alarms

You are here: **Monitor** > **Logs** > **Alarms**.

Use this page to view the alarms details such as time, severity, type, and descriptions of the alarm.

[Table 19 on page 103](#) describes the fields on the Alarms page.

Table 19: Fields on the Alarms Page

Field	Description
Show Hide Columns icon	Enables you to show or hide a column in the grid.
Filter Criteria	Enter or select the criteria or parameter on which you want to construct the filter statement. • Type—Type of alarm: System, Chassis, or All. • Severity—Severity class of the alarm: Minor or Major. • Description—Description of the alarm. Click X to clear the search entries.
Time	Displays the date and time that the alarm was registered.
Type	Specifies the type of alarm to monitor: • System—System alarms include FRU detection alarms (power supplies removed, for instance). • Chassis—Chassis alarms indicate environmental alarms such as temperature. • All—Indicates to display all the types of alarms.

Table 19: Fields on the Alarms Page *(Continued)*

Field	Description
Severity	Specifies the alarm severity that you want to monitor • Major—A major (red) alarm condition requires immediate action. • Minor—A minor (yellow) condition requires monitoring and maintenance. • All—Indicates to display all the severities.
Description	Displays the brief synopsis of the alarms you want to monitor.

RELATED DOCUMENTATION

Monitor Traffic Map | 105

CHAPTER 5

Maps and Charts

IN THIS CHAPTER

- [Monitor Traffic Map | 105](#)
- [Monitor Threats Map | 108](#)
- [Monitor Applications | 115](#)
- [Monitor Users | 118](#)

Monitor Traffic Map

IN THIS SECTION

- [Field Descriptions | 106](#)
- [Tasks You Can Perform | 108](#)

You are here: **Monitor > Maps and Charts > Traffic Map.**

NOTE: Traffic Map page is available on all the SRX Series Firewalls except the SRX5000 line of devices.

J-Web supports monitoring traffic through a map. Use this page to visualize inbound and outbound traffic between geographic regions. You can click or hover over the bubble to view more details on the inbound or outbound traffic. The size of the bubble indicates the session count or the bandwidth utilization for a traffic. Traffic with unknown geographical IP addresses and private IP addresses are displayed as question mark icon and lock icon, respectively.

NOTE: To view the data on the Traffic Map page, ensure that security logging is enabled. If not, go to **Device Administration > Basic Settings > Security Logging** and enable **Stream mode Logging** and **On-box reporting**.

Application Risk Category

The color code of the bubble indicates the risk associated with the application. [Table 20 on page 106](#) shows the application risk categories and the risk values.

Table 20: Application Risk Category and Risk Value

Application Risk Category	Risk Value
Critical	≥ 5
High	≥ 4 and < 5
Unsafe	≥ 3 and < 4
Moderate	≥ 2 and < 3
Low	≥ 0 and < 2

You can calculate the average risk value using the following formula:

Average risk value for a country = *Application risk total / Session count total*

Field Descriptions

[Table 21 on page 107](#) displays the fields of the Traffic Map page.

Table 21: Fields on the Traffic Map Page

Field	Description
By Volume	Displays the bandwidth utilization. This is the default value.
By Session	Displays the total number of traffic sessions.
Inbound Traffic	Displays the traffic coming through the device from the source countries.
Outbound Traffic	Displays the traffic goes through the device to the destination countries. This is the default value.
Top Sources	Displays the top 10, 20 (default value), or 50 source countries with the following details: • Country—Displays the country name. • Risk level—Displays the risk level category. For example, low, critical, unsafe. • Avg. risk—Displays the average risk count. • Sessions or Bandwidth—Displays the session count or bandwidth utilization.
Top Destinations	Displays the top 10, 20 (default value), or 50 destination countries with the following details: • Country—Displays the country name. • Risk level—Displays the risk level category. For example, low, critical, unsafe. • Avg. risk—Displays the average risk count. • Sessions or Bandwidth—Displays the session count or bandwidth utilization.
View Data	Displays the traffic data for the defined time interval. By default, traffic data for the last five minutes is displayed. You can select the predefined time interval or click Customize to customize the time interval by entering date and time. NOTE: Starting in Junos OS Release 21.4R1, the default duration is changed from Last 1 hour to Last 5 minutes to speed up the J-Web UI loading process.

Table 21: Fields on the Traffic Map Page *(Continued)*

Field	Description
Search	Enter the country name for which you want to view the data and click the search icon. You can view the country flags before the country names. Click on the country name to view its data.

Tasks You Can Perform

You can perform the following tasks from this page:

- Zoom in and out of the page—Click the zoom in (+) and zoom out (–) icons to zoom in and out of the page.
- Refresh the data on the page—Click the refresh icon available below the zoom out icon.
- Pan the page—Click and drag the mouse to pan the page.
- View country-specific details—Hover over the bubble to view the country specific details.

RELATED DOCUMENTATION

| [Monitor Threats Map](#) | 108

Monitor Threats Map

IN THIS SECTION

- [Field Descriptions](#) | 109
- [Threat Types](#) | 110
- [Tasks You Can Perform](#) | 112

You are here: **Monitor** > **Maps and Charts** > **Threats Map**.

NOTE: Threats Map page is available on all the SRX Series Firewalls except the SRX5000 line of devices.

Use this page to visualize incoming and outgoing threats between geographic regions. You can view blocked and allowed threat events based on feeds from intrusion prevention systems (IPS), antivirus, antispam engines, Juniper ATP Cloud, and screen options. You can also click a specific geographical location to view the event count and the top five inbound and outbound IP addresses.

NOTE: To view the data on the Threats Map (Live) page, ensure that:

- Security logging is enabled. If not, go to **Device Administration > Basic Settings > Security Logging** and enable **Stream mode Logging**.
- Required firewall policy is configured on the device.
- Required licenses are configured for IPS and antivirus.
- Your device is enrolled to the Juniper ATP Cloud server.

The threat data is displayed starting from 12:00 AM (midnight) up to the current time (in your time zone) on that day and is updated every 30 seconds. The current date and time are displayed at the upper right and a legend is displayed at the lower left of the page.

If a threat occurs when you are viewing the page, an animation shows the country from which the threat originated (source) and the country in which the threat occurred (destination).

NOTE: Threats with unknown geographical IP addresses and private IP addresses are displayed as UNKNOWN_COUNTRY.

Field Descriptions

Table 22 on page 110 displays the fields of the Threats Map (Live) page.

Table 22: Fields on the Threats Map (Live) Page

Field	Description
Total Threats Blocked & Allowed	Displays the total number of threats blocked and allowed. Click the hyperlinked number to go to the All Events (Monitor > Logs > All Events) page (filtered view of the Grid View tab), where you can view more information about the IPS, virus, spam, Juniper ATP Cloud, and screen events.
Threats Blocked & Allowed	Displays the total number of threats blocked and allowed by the following categories: • IPS Threats • Virus • Spam • Screen • Juniper ATP Cloud
Top Destination Countries	Displays the top five destination countries and the number of threats per country.
Top Source Countries	Displays the top five source countries and the number of threats per country.

Threat Types

The Threats Map page displays blocked and allowed threat events based on feeds from IPS, antivirus, antispam engines, Juniper ATP Cloud, and screen options. [Table 23 on page 111](#) describes different types of threats blocked and allowed.

Table 23: Types of Threats

Attack	Description
IPS threat events	Intrusion detection and prevention (IDP) attacks detected by the IDP module. The information reported about the attack (displayed on the IPS (Monitor > Logs > Threats page) includes information about: • Specific events names • Specific event names with either source or destination country
Virus	Virus attacks detected by the antivirus engine. The information reported about the attack (displayed on the Antivirus (Monitor > Logs > Threats page) includes information about: • Specific events names • Specific event names with either source or destination country
Spam	E-mail spam that is detected based on the blacklist spam e-mails. The information reported about the attack (displayed on the Antispam (Monitor > Logs > Threats page) includes information about: • Specific events names • Specific event names with source country
Juniper ATP Cloud	Events that are detected based on Juniper ATP Cloud policies. The information reported about the attack (displayed on the Screen (Monitor > Logs > ATP page) includes information about: • Specific events names • Specific event names with either source or destination country

Table 23: Types of Threats *(Continued)*

Attack	Description
Screen	Events that are detected based on screen options. The information reported about the attack (displayed on the Screen (Monitor > Logs > Threats page) includes information about: • Specific events names • Specific event names with either source or destination country

Tasks You Can Perform

You can perform the following tasks from this page:

- Toggle between updating the data and allowing live updates—Click the **Pause** icon to stop the page from updating the threat map data and to stop animations. Click the **Play** icon to update the page data and resume animations.
- Zoom in and out of the page—Click the zoom in (+) and zoom out (–) icons to zoom in and out of the page.
- Pan the page—Click and drag the mouse to pan the page.
- View country-specific details:
 - Click a country on the threat map to view threat information specific to that country. A *Country-Name* pop-up appears displaying country-specific information.
 - Click **View Details** in the *Country-Name* pop-up to view additional details. The *Country-Name (Details)* panel appears.

[Table 24 on page 112](#) provides more details on the country-specific threat information.

Table 24: Country-Specific Threat Information

Field	Description
Displayed in Country-Name pop-up	

Table 24: Country-Specific Threat Information (*Continued*)

Field	Description
<i>Number of threat events</i> Threat Events since 12:00 am	Displays the total number of threat events (inbound and outbound) since midnight for that country.
Inbound (<i>Number of threat events</i>)	Displays the total number of inbound threats for the country and the IP address and the number of events for that IP address for the top five inbound events. Click View All to view all the destination IP address with threat events count.
Outbound (<i>Number of threat events</i>)	Displays the total number of outbound threats for the country and the IP address and the number of events for that IP address for the top five outbound events. Click View All to view all the source IP address with threat events count.

View Details—Displayed in Country-Name (Details) panel

<i>Number of threat events</i> Threat Events since 12:00 am	Displays the total number of threat events (inbound and outbound) since midnight for that country.

Table 24: Country-Specific Threat Information *(Continued)*

Field	Description
Number of Inbound Events	Displays the total number of inbound threats for the country and the number of inbound threat events for each of the following categories: • IPS Threats • Virus • Spam • Screen • Juniper ATP Cloud Click Top 5 IP Addresses (Inbound) to view the IP address and the number of events for that IP address for the top five inbound events. Click View All IP Addresses to view all the destination IP addresses and number of events for that IP address. NOTE: You can view or select View All IP Addresses only after you click Top 5 IP Addresses (Inbound).
Number of Outbound Events	Displays the total number of outbound threats for the country and the number of outbound threat events for each of the following categories: • IPS Threats • Virus • Spam • Screen • Juniper ATP Cloud Click Top 5 IP Addresses (Outbound) to view the IP address and the number of events for that IP address for the top five outbound events. Click View All IP Addresses to view all the source IP addresses and number of events for that IP address. NOTE: You can view or select View All IP Addresses only after you click Top 5 IP Addresses (Outbound).

RELATED DOCUMENTATION

Monitor Applications | 115

Monitor Applications

You are here: **Monitor** > **Maps and Charts** > **Applications**.

Use this page to view information about bandwidth consumption, session establishment, and risks associated with your applications. Analyzing your network applications yields useful security management information, such as abnormal applications that can lead to data loss, bandwidth hogging, time-consuming applications, and personal applications that can elevate business risks.

NOTE: Applications page is available on all the SRX Series Firewalls except the SRX5000 line of devices.

NOTE: To view the data on the Applications page, ensure that:

- On-box traffic logging and reporting is enabled. If not, go to **Device Administration** > **Basic Settings** > **Security Logging**, enable **Stream mode Logging** and **On-box Reporting**.
- Logging is enabled for a matching traffic firewall policy. If not, go to **Security Policies & Objects** > **Security Policies** and enable **Logging** options under Rule Options.
- Application tracking is enabled for a security zone. If not, go to **Security Policies & Objects** > **Zones/Screens** and enable **Application Tracking** in the Add Zone page.

You can select either the Grid View tab or the Chart View tab to view your data:

- **Grid View**—View the comprehensive details of applications in a tabular format that includes sortable columns. You can group the applications using Top users by volume, Top apps by volume, timespan, username, and so on. The table includes information such as the application name, volume, users and so on. [Table 25 on page 116](#) describes the fields on the Grid View page.
- **Chart View**—View a brief summary of all the applications. It shows the top 50 applications consuming maximum bandwidth in your network. The data is presented graphically as a bubble graph, heat map, or zoomable bubble graph. [Table 26 on page 117](#) describes the widgets on the Chart View page.

Table 25: Applications—Fields on the Grid View Page

Field	Description
Top Users By Volume	Top users of the application; sorted by bandwidth consumption.
Top Apps By Volume	Top applications, such as Amazon, Facebook, and so on of the network traffic; sorted by bandwidth consumption.
Top Category By Volume	Top category, such as web, infrastructure, and so on of the application; sorted by bandwidth consumption.
Top Characteristics By Volume	Top behavioral characteristics, such as prone to misuse, bandwidth consumer, and so on of the application.
Sessions By Risk	Number of events/sessions received; grouped by risk.
Time Span	Allows you to select a time period. Click Custom to select a preferred date.
View App Logs	Enables you to view the application logs.
Search	Enables you to search a particular content from the data.
Application Name	Name of the application, such as Amazon, Facebook, and so on.
Risk Level	Risk associated with the application: critical, high, unsafe, moderate, low, and unknown.
Users	Total number of users accessing the application.
Volume	Bandwidth used by the application.
Total Sessions	Total number of application sessions.
Category	Category of the application, such as web, infrastructure, and so on.

Table 25: Applications—Fields on the Grid View Page *(Continued)*

Field	Description
Sub-Category	Subcategory of the application. For example, social networking, news, and advertisements. NOTE: There can be many sub-categories for a single category. For example, if the Category is Multimedia, it can have sub-categories as Video-streaming and Audio-streaming and so on.
Characteristics	Characteristics of the application. For example, prone to misuse, bandwidth consumer, capable of tunneling. NOTE: There can be many characteristics displayed by a comma separator. For example, characteristics can be displayed as Support File Transfer, Loss of Productivity, Bandwidth.

Table 26: Applications—Widgets on the Chart View Page

Field	Description
Top 50 Applications	Displays the top 50 application consuming maximum bandwidth in your network. The data is presented graphically as a bubble graph, heat map, or zoomable bubble graph.
Show By	Allows you to reorder the bubble graph by bandwidth or by number of sessions from the drop down. If Bandwidth is selected, the size of the bubble depends on the bandwidth used. Whereas, if Number of Session is selected, the size of the bubble depends upon the number of sessions.
Time Span	Allows you to select a time. Click Custom to select a preferred date.
Group By	Allows you to group the bubble graph by bandwidth or by number of sessions from the drop down based on risk or categories.

RELATED DOCUMENTATION

[Monitor Users](#) | 118

Monitor Users

You are here: **Monitor** > **Maps and Charts** > **Users**.

Use this page to view information about top users accessing high bandwidth-consuming applications and establishing higher number of sessions on your network. Based on this information, network administrators can control the user by rate-limit a device that is accessing applications which consume large bandwidth or create maximum traffic.

NOTE: Users page is available on all the SRX Series Firewalls except the SRX5000 line of devices.

You can select either the Grid View tab or the Chart View tab to view your data:

- **Grid View**—View the comprehensive details of users in a tabular format that includes sortable columns. You can group the users using Top users by volume, Top apps by volume, timespan, username etc. The table includes information such as the username, volume, top users by volume and so on. [Table 27 on page 118](#) describes the fields on the Grid View page.
- **Chart View**—View a brief summary of all the users. It shows the top 50 users consuming maximum bandwidth in your network. The data is presented graphically as a bubble graph, heat map, or zoomable bubble graph. [Table 28 on page 119](#) describes the widgets on the Chart View page.

Table 27: Users—Fields on the Grid View Page

Field	Description
Top Users By Volume	Top users of the application; sorted by bandwidth consumption.
Top Apps By Volume	Top applications, such as Amazon, Facebook, and so on of the network traffic; sorted by bandwidth consumption.
Time Span	Allows you to select a time period. Click Custom to select a preferred date.
Username	Name of a user.

Table 27: Users—Fields on the Grid View Page (Continued)

Field	Description
Volume	Bandwidth consumption of the user.
Total Sessions	Total number of user sessions.
Applications	All the applications used by a user for the time range.
Search	Enables you to search a particular content from the data.

Table 28: Users—Widgets on the Chart View Page

Field	Description
Top 50 Users	Displays the top 50 users consuming maximum bandwidth in your network. The data is presented graphically as a bubble graph, heat map, or zoomable bubble graph.
Show By	Allows you to reorder the bubble graph by bandwidth or by number of sessions from the drop down. If Bandwidth is selected, the size of the bubble depends on the bandwidth used. Whereas, if Number of Session is selected, the size of the bubble depends upon the number of sessions.
Time Span	Allows you to select a time. Click Custom to select a preferred date.

RELATED DOCUMENTATION

| [Monitor Threat Prevention](#) | 120

Statistics

IN THIS CHAPTER

- Monitor Threat Prevention | 120
- Monitor VPN Phase I | 122
- Monitor VPN Phase II | 123
- Monitor DNS Security | 125
- Monitor Encrypted Traffic Insights | 127

Monitor Threat Prevention

You are here: **Monitor** > **Statistics** > **Threat Prevention**.

Use this page to verify the statistics of advanced-anti-malware sessions and security Intelligence sessions.

[Table 29 on page 120](#) describes the fields on the Threat Prevention page.

Table 29: Fields on the Threat Prevention Page

Field	Description
Advanced Anti Malware Session Statistics	

Table 29: Fields on the Threat Prevention Page *(Continued)*

Field	Description
Sessions	The following options are available: • TOTAL—Specify the TOTAL Session. • HTTP—Specify the HTTP Session. • HTTPS—Specify the HTTP Session. • SMTP—Specify the simple mail transfer protocol session. • SMTPS—Specify SMTPS session.
Clear Statistics	Clear the statistics.
Graph	Shows the anti-malware session statistics.
Security Intelligence Session Statistics	
Profiles	Select a profile from the list.
Sessions	The following options are available: • TOTAL—Displays the identification number of the Services Processing Unit. • PERMIT—Specify the permitted session. • BLOCK-DROP—Specify the block drop. • BLOCK-CLOSE—Specify the block close. • CLOSE-REDIRECT—Specify the closure of the redirect session.
Clear Statistics	Clear the statistics.

RELATED DOCUMENTATION

Monitor VPN Phase I

You are here: **Monitor** > **Statistics** > **Phase I**.

Use this page to view information related to IKE security associations.

[Table 30 on page 122](#) describes the fields on the Phase I page.

Table 30: Fields on the Phase I Page

Field	Description
IKE Security Associations	
Refresh Interval (sec)	Indicates the duration of time after which you want the data on the page to be refreshed.
Refresh	Click the refresh icon at the upper-right corner to display the fresh content.
Clear IKE SA	Clears all the IKE SA numbers on the display.
SA Index	Index number of a SA.
Remote Address	IP address of the destination peer with which the local peer communicates.
State	State of the IKE security associations: - DOWN—SA has not been negotiated with the peer. - UP—SA has been negotiated with the peer.
Initiator Cookie	Random number, called a cookie, which is sent to the remote node when the IKE negotiation is triggered.
Responder Cookie	Random number generated by the remote node and sent back to the initiator as a verification that the packets were received. NOTE: A cookie is aimed at protecting the computing resources from attack without spending excessive CPU resources to determine the cookie's authenticity.

Table 30: Fields on the Phase I Page *(Continued)*

Field	Description
Mode	Negotiation method agreed upon by the two IPsec endpoints, or peers, used to exchange information. Each exchange type determines the number of messages and the payload types that are contained in each message. The modes, or exchange types, are: • Main—The exchange is done with six messages. This mode, or exchange type, encrypts the payload, protecting the identity of the neighbor. The authentication method used is displayed: preshared keys or certificate. • Aggressive—The exchange is done with three messages. This mode, or exchange type, does not encrypt the payload, leaving the identity of the neighbor unprotected.

RELATED DOCUMENTATION

[Monitor VPN Phase II](#) | 123

Monitor VPN Phase II

You are here: **Monitor** > **Statistics** > **Phase II**.

Use this page to view IPsec statistics and information related to IPsec security associations.

[Table 31 on page 123](#) describes the fields on the Phase II page.

Table 31: Fields on the Phase II Page

Field	Description
Statistics	
Refresh interval (sec)	Indicates the duration of time after which you want the data on the page to be refreshed.
Refresh	Click the refresh icon at the upper-right corner to display the fresh content.

Table 31: Fields on the Phase II Page *(Continued)*

Field	Description
Clear	Clears all the data on the display page.
IPsec Statistics	
—Provides details of the IPsec statistics.	
Counter	Displays the ESP (encrypted and decrypted bytes), AH (input and output), and errors statistics.
Value	Displays the values for the respective statistics.
IPsec SA	
IPsec Security Associations	
ID	Index number of the SA.
Gateway/Port	IP address of the remote gateway/port.
Algorithm	Cryptography scheme used to secure exchanges between peers during the IKE Phase II negotiations: An authentication algorithm used to authenticate exchanges between the peers. Options are hmac-md5-95 or hmac-sha1-96.
SPI	Security parameter index (SPI) identifier. A SA is uniquely identified by an SPI. Each entry includes the name of the VPN, the remote gateway address, the SPIs for each direction, the encryption and authentication algorithms, and keys. The peer gateways each have two SAs, one resulting from each of the two phases of negotiation: Phase I and Phase II.
Life	The lifetime of the SA, after which it expires, expressed either in seconds or kilobytes.
Monitoring	Specifies if VPN-Liveliness Monitoring has been enabled/disabled. Enabled - 'U', Disabled- '—'

Table 31: Fields on the Phase II Page *(Continued)*

Field	Description
Vsys	Specifies the root system.

RELATED DOCUMENTATION

| [Monitor DHCP Server Bindings](#) | 63

Monitor DNS Security

You are here: **Monitor** > **Statistics** > **DNS Security**.

Domain Name System (DNS) Domain Generation Algorithm (DGA) generates seemingly random domain names that are used as rendezvous points with potential Command & Control (C&C) servers. DNS DGA detection uses machine learning models and known pre-computed DGA domain names to provide domain verdicts, which helps in-line DNS query blocking and sinkholing on SRX Series Firewalls.

Use this page to verify the statistics of DNS sessions, submissions, and ATP latency.

[Table 32 on page 125](#) describes the fields on the DNS Security page.

Table 32: Fields on the DNS Security Page

Field	Description
DNS Sessions	
Cache Hits	Displays the number of cache hits (domain is present in the cache).
Cache Misses	Displays the number of cache misses (domain is not present in the cache).
Permitted C2 Sessions	Displays the number of permitted C&C (C2) sessions.

Table 32: Fields on the DNS Security Page *(Continued)*

Field	Description
Dropped C2 Sessions	Displays the number of dropped C2 sessions.
Sinkholes C2 Sessions	Displays the number of sinkholed C2 sessions.
DNS Submissions	
Successful Domain Submission	Displays the number of successful domain submissions.
Failed Domain Submission	Displays the number of failed domain submissions.
Received Safe Verdicts	Displays the number of safe verdicts received by Juniper ATP cloud.
Received C2 Verdicts	Displays the number of C2 verdicts received by Juniper ATP cloud.
Detected DNS Tunnels	Displays the number of DNS tunnels detected.
ATP Latency	
Average Latency	Displays the average response time (in milliseconds) that Juniper ATP Cloud takes to provide a verdict to the SRX Series Firewall.
Maximum Latency	Displays the maximum response time (in milliseconds) that Juniper ATP Cloud takes to provide a verdict to the SRX Series Firewall.
Minimum Latency	Displays the minimum response time (in millisecond) that Juniper ATP Cloud takes to provide a verdict to the SRX Series Firewall.

RELATED DOCUMENTATION

| [Monitor Encrypted Traffic Insights](#) | 127

Monitor Encrypted Traffic Insights

You are here: **Monitor** > **Statistics** > **ETI**.

Encrypted Traffic Insights (ETI) detects malicious threats that are hidden in encrypted traffic without intercepting and decrypting the traffic.

Benefits of Encrypted Traffic Insights

- Monitors network traffic for threats without breaking the encryption of the traffic, thereby adhering to data privacy laws.
- Erases the need for additional hardware or network changes to set up and manage the network.
- Adds an additional layer of protection beyond traditional information security solutions to help organizations reduce and manage risk.
- Ensures no latency as we do not decrypt the traffic.

Use this page to verify the statistics of ETI sessions and submissions.

[Table 33 on page 127](#) describes the fields on the ETI page.

Table 33: Fields on the ETI Page

Field	Description
ETI Sessions	
Session Inspected	Displays the number of HTTPS sessions inspected.
Session Allowlisted	Displays the number of HTTPS sessions allowlisted for encrypted traffic analysis.
Session Detected	Displays the number of HTTPS sessions detected as potentially malicious.

Table 33: Fields on the ETI Page *(Continued)*

Field	Description
ETI Submissions	
Success	Displays the number of HTTPS record submissions that were successfully submitted to Juniper ATP Cloud.
Failure	Displays the number of HTTPS record submissions that failed while submitting to Juniper ATP Cloud.

RELATED DOCUMENTATION[Monitor DNS Security | 125](#)

CHAPTER 7

Reports

IN THIS CHAPTER

- [About Reports Page | 129](#)

About Reports Page

IN THIS SECTION

- [Overview | 130](#)
- [Threat Assessment Report | 135](#)
- [Application and User Usage | 135](#)
- [Top Talkers | 136](#)
- [IPS Threat Environment | 136](#)
- [Viruses Blocked | 136](#)
- [URL Report | 137](#)
- [Virus: Top Blocked | 137](#)
- [Top Firewall Events | 137](#)
- [Top Firewall Deny Destinations | 137](#)
- [Top Firewall Denies | 137](#)
- [Top IPS Events | 137](#)
- [Top Anti-spam Detected | 138](#)
- [Top Screen Attackers | 138](#)
- [Top Screen Victims | 138](#)
- [Top Screen Hits | 138](#)
- [Top Firewall Rules | 138](#)
- [Top Firewall Deny Sources | 138](#)

- [Top IPS Attack Sources | 138](#)
- [Top IPS Attack Destinations | 138](#)
- [Top IPS Rules | 138](#)
- [Top Web Apps | 139](#)
- [Top Applications Blocked | 139](#)
- [Top URLs by User | 139](#)
- [Top Source Zone by Volume | 139](#)
- [Top Applications by User | 139](#)
- [Top Botnet Threats By Source Address via IDP Logs | 139](#)
- [Top Botnet Threats by Destination Address via IDP Logs | 139](#)
- [Top Botnet Threats by Threat Severity via IDP Logs | 140](#)
- [Top Malware Threats by Source Address via IDP Logs | 140](#)
- [Top Malware Threats by Destination Address via IDP Logs | 140](#)
- [Top Malware Threats by Threat Severity via IDP Logs | 140](#)
- [Top Blocked Applications via Webfilter Logs | 140](#)
- [Top Permitted Application Subcategories by Volume via Webfilter Logs | 141](#)
- [Top Permitted Application Subcategories by Count via Webfilter Logs | 141](#)

Overview

IN THIS SECTION

- [Generate Reports | 133](#)

You are here: **Monitor** > **Reports**.

Use the Reports menu to generate reports on demand. There are several predefined reports listed in this page, see [Table 34 on page 131](#). The generated report is displayed in HTML format. You can group multiple reports and generate a consolidated report.

NOTE: Reports page is available on all the SRX Series Firewalls except the SRX5000 line of devices.

Logical system and tenant support the reports listed in [Table 34 on page 131](#) only for SRX1500, SRX1600, SRX2300, SRX4100, SRX4200, and SRX4600.

Table 34: Predefined Group Reports and Supported Users

Report Name	Root	Logical System Users	Tenant Users Support
Threat Assessment Report	Yes	Yes	Yes
Application and User Usage	Yes	Yes	Yes
Top Talkers	Yes	Yes	Yes
IPS Threat Environment	Yes	Yes	No
URL Report	Yes	Yes	Yes
Viruses Blocked	Yes	Yes	No
Virus: Top Blocked	Yes	Yes	No
Top Firewall Events	Yes	Yes	Yes
Top Firewall Deny Destinations	Yes	Yes	Yes
Top Firewall Denies	Yes	Yes	Yes
Top IPS Events	Yes	Yes	No
Top Anti-spam Detected	Yes	Yes	No

Table 34: Predefined Group Reports and Supported Users (Continued)

Report Name	Root	Logical System Users	Tenant Users Support
Top Screen Attackers	Yes	Yes	Yes
Top Screen Victims	Yes	Yes	Yes
Top Screen Hits	Yes	Yes	Yes
Top Firewall Rules	Yes	Yes	Yes
Top Firewall Deny Sources	Yes	Yes	Yes
Top IPS Attack Sources	Yes	Yes	Yes
Top IPS Attack Destinations	Yes	Yes	No
Top IPS Rules	Yes	Yes	No
Top Web Apps	Yes	Yes	No
Top Applications Blocked	Yes	Yes	No
Top URLs by User	Yes	Yes	No
Top Source Zone by Volume	Yes	Yes	Yes
Top Applications by User	Yes	Yes	Yes
Top Botnet Threats By Source Address via IDP Logs	Yes	Yes	No
Top Botnet Threats by Destination Address via IDP Logs	Yes	Yes	No

Table 34: Predefined Group Reports and Supported Users (Continued)

Report Name	Root	Logical System Users	Tenant Users Support
Top Botnet Threats by Threat Severity via IDP Logs	Yes	Yes	No
Top Malware Threats by Source Address via IDP Logs	Yes	Yes	No
Top Malware Threats by Destination Address via IDP Logs	Yes	Yes	No
Top Malware Threats by Threat Severity via IDP Logs	Yes	Yes	No
Top Blocked Applications via Webfilter Logs	Yes	Yes	No
Top Permitted Application Subcategories by Volume via Webfilter Logs	Yes	Yes	No
Top Permitted Application Subcategories by Count via Webfilter Logs	Yes	Yes	No

Generate Reports

To generate a report:

1. Click **Reports**.
2. Select the predefined report name and click **Generate Report**.

The Report Title window appears.

NOTE: You can select single or multiple report names or all the predefined report names and generate a consolidated report. But you cannot generate group and individual reports at the same time.

3. Complete the configuration according to the guidelines provided in [Table 35 on page 134](#).
4. Click **Save** to save the generated report in the desired location.

A report is generated. The report includes, the time when it was generated, the table of contents, and the result (a bar graph, a tabular format, and so on). If there is no data available, the report shows, No data to display.

Table 35: Generate Report Settings

Field	Action
Name	Enter a name of the report. Maximum 60 characters.
Customer Name	Enter a customer name. Default value is Juniper.
Description	Enter a description of the report.
Show Top	Use the up and down arrow to select the number of records to display in the report.
Show Details	Select an option from the list: • Top Selected—Displays only the top selected details in the report. • All—Displays all the details in the report. NOTE: It may take a while to generate reports, depending on the device data size.
Time Span	Select a predefined time span from the list for the report.
From	Specify a start date and time (in MM/DD/YYYY and HH:MM:SS 12-hour or AM/PM formats) to start the report generation. NOTE: This option is available when you choose Custom for Time Span.
To	Specify a start date and time (in MM/DD/YYYY and HH:MM:SS 12-hour or AM/PM formats) to stop the report generation. NOTE: This option is available when you choose Custom for Time Span.
Sorting Options	

Table 35: Generate Report Settings (Continued)

Field	Action
Show Details	Click the arrow next to Sorting Options and select one of the options from the list: • Largest To Smallest—Display reports from largest to smallest details. • Smallest To Largest—Display reports from smallest to largest details.

Threat Assessment Report

Threat Assessment report contains the following content:

- Executive Summary
- Application Risk Assessment
- Threat & Malware Assessment
- User and Web Access Assessment

The Threat Assessment report displays a new Filename column in the Malware downloaded by User table. This column helps to identify the malware filename.

Application and User Usage

Application and User Usage report contains the following content:

- Top High Risk Applications by Bandwidth
- Top High Risk Applications By Count
- Top Categories By Bandwidth
- Top Applications By Bandwidth
- Top Categories By Count
- Top Applications By Count
- Top Users Of High Risk Applications By Bandwidth
- Top Users By Bandwidth
- High Risk Applications Allowed Per User
- High Risk Applications Blocked Per User

Top Talkers

Top Talkers report contains the following content:

- Top Source IPs by Bandwidth
- Top Destination IPs by Bandwidth
- Top Source IPs by Session
- Top Destination IPs by Session
- Top Users By Bandwidth
- Top Users By Count

IPS Threat Environment

IPS Threat Environment report contains the following content:

- IPS Attacks by Severity Over Time
- Total IPS Attacks by Severity
- Top IPS Categories Blocked
- Top IPS Attacks Blocked
- Top Targeted Hosts by IP
- Top Targeted Hosts by User

NOTE: IPS Threat Environment report is not supported for tenant users.

Viruses Blocked

Viruses Blocked report contains the following content:

- Total Viruses Blocked Over Time
- Top Viruses Blocked

NOTE: Viruses Blocked is not supported for tenant users.

URL Report

URL Report contains the following content:

- Top URLs by Bandwidth
- Top URLs by Count
- Top URL Categories by Bandwidth
- Top URL Categories by Count
- Total URLs Blocked Over Time
- Top Blocked URLs
- Top Blocked URL Categories by Count
- Users With Most Blocked URLs

Virus: Top Blocked

Virus: Top Blocked report contains Virus: Top Blocked content.

NOTE: Virus: Top Blocked is not supported for tenant users.

Top Firewall Events

Top Firewall Events report contains Top Firewall Events.

Top Firewall Deny Destinations

Top Firewall Deny Destinations report contains Top Firewall Deny Destinations.

Top Firewall Denies

Top Firewall Denies report contains Top Firewall Denies.

Top IPS Events

Top IPS Events report contains Top IPS Events.

NOTE: Top IPS Events is not supported for tenant users.

Top Anti-spam Detected

Top Anti-Spam Detected report Top Anti-spam Detected.

NOTE: Top Anti-spam Detected is not supported for tenant users.

Top Screen Attackers

Top Screen Attackers report contains Top Screen Attackers.

Top Screen Victims

Top Screen Victims report contains Top Screen Victims.

Top Screen Hits

Top Screen Hits report contains Top Screen Hits.

Top Firewall Rules

Top Firewall Rules report contains Top Firewall Rules.

Top Firewall Deny Sources

Top Firewall Deny Sources report contains Top Firewall Deny Sources.

Top IPS Attack Sources

Top IPS Attack Sources report contains Top IPS Attack Sources.

Top IPS Attack Destinations

Top IPS Attack Destinations report contains Top IPS Attack Destinations.

NOTE: Top IPS Attack Destinations is not supported for tenant users.

Top IPS Rules

Top IPS Rules report contains Top IPS Rules.

NOTE: Top IPS Rules is not supported for tenant users.

Top Web Apps

Top Web Apps report contains Top Web Apps.

NOTE: Top Web Apps is not supported for tenant users.

Top Applications Blocked

Top Applications Blocked report contains Top Applications Blocked.

NOTE: Top Applications Blocked is not supported for tenant users.

Top URLs by User

Top URLs by User report contains Top URLs by User.

NOTE: Top URLs by User is not supported for tenant users.

Top Source Zone by Volume

Top Source Zone by Volume report contains Top Source Zone by Volume.

Top Applications by User

Top Applications by User report contains Top Applications by User.

Top Botnet Threats By Source Address via IDP Logs

Top Botnet Threats By Source Address via IDP Logs report contains Top Botnet Threats By Source Address via IDP Logs.

NOTE: Top Botnet Threats By Source Address via IDP Logs is not supported for tenant users.

Top Botnet Threats by Destination Address via IDP Logs

Top Botnet Threats by Destination Address via IDP Logs report contains Top Botnet Threats by Destination Address via IDP Logs.

NOTE: Top Botnet Threats by Destination Address via IDP Logs is not supported for tenant users.

Top Botnet Threats by Threat Severity via IDP Logs

Top Botnet Threats by Threat Severity via IDP Logs report contains Top Botnet Threats by Threat Severity via IDP Logs.

NOTE: Top Botnet Threats by Threat Severity via IDP Logs is not supported for tenant users.

Top Malware Threats by Source Address via IDP Logs

Top Malware Threats by Source Address via IDP Logs report contains Top Malware Threats by Source Address via IDP Logs.

NOTE: Top Malware Threats by Source Address via IDP Logs is not supported for tenant users.

Top Malware Threats by Destination Address via IDP Logs

Top Malware Threats by Destination Address via IDP Logs report contains Top Malware Threats by Destination Address via IDP Logs.

NOTE: Top Malware Threats by Destination Address via IDP Logs is not supported for tenant users.

Top Malware Threats by Threat Severity via IDP Logs

Top Malware Threats by Threat Severity via IDP Logs report contains Top Malware Threats by Threat Severity via IDP Logs.

NOTE: Top Malware Threats by Threat Severity via IDP Logs is not supported for tenant users.

Top Blocked Applications via Webfilter Logs

Top Blocked Applications via Webfilter Logs report contains Top Blocked Applications via Webfilter Logs.

NOTE: Top Blocked Applications via Webfilter Logs is not supported for tenant users.

Top Permitted Application Subcategories by Volume via Webfilter Logs

Top Permitted Application Subcategories by Volume via Webfilter Logs report contains Top Permitted Application Subcategories by Volume via Webfilter Logs.

NOTE: Top Permitted Application Subcategories by Volume via Webfilter Logs is not supported for tenant users.

Top Permitted Application Subcategories by Count via Webfilter Logs

Top Permitted Application Subcategories by Count via Webfilter Logs report contains Top Permitted Application Subcategories by Count via Webfilter Logs.

NOTE: Top Permitted Application Subcategories by Count via Webfilter Logs is not supported for tenant users.

5

PART

Device Administration

[Basic Settings | 144](#)

[Cluster Management | 164](#)

[User & Roles | 190](#)

[Multi Tenancy—Resource Profiles | 206](#)

[Multi Tenancy—Interconnect Ports | 215](#)

[Multi Tenancy—Logical Systems | 226](#)

[Multi Tenancy—Tenants | 241](#)

[Certificates Management—Certificates | 253](#)

[Certificate Management—Certificate Authority Group | 281](#)

[License Management | 287](#)

[Security Package Management | 291](#)

[ATP Management | 306](#)

[Operations | 312](#)

[Software Management | 319](#)

[Configuration Management | 323](#)

[Alarm Management | 329](#)

[RPM | 340](#)

[Tools | 355](#)

[Reset Configuration | 390](#)

Basic Settings

IN THIS CHAPTER

- [Configure Basic Settings](#) | 144

Configure Basic Settings

You are here: **Device Administration** > **Basic Settings**.

Use this page to configure your device basic settings.

You can do the following:

- **Save**—Saves all the basic settings configuration and returns to the main configuration page.

NOTE: For all the configuration options under Basic Settings:

- Tool tip on the right-side represents different icons for notifications, validation errors, and successful configuration.
- When you make a configuration change and navigate to a different page without saving it, a pop-up message is displayed to save the configuration.
- Starting in Junos OS Release 23.4R1, J-Web supports SRX1600 and SRX2300 Firewalls.

- **Cancel**—Cancels all your entries and returns to the main configuration page.
- **Commit**—Commits all the basic settings configuration and returns to the main configuration page.
- **Expand all**—Click the arrow pointing outwards icon to expand all the options.
- **Collapse all**—Click the arrow pointing inwards to collapse or hide all the options.

[Table 36 on page 145](#) describes the fields on the Basic Settings page.

Table 36: Fields on the Basic Settings Page

Field	Action
System Identity	
Hostname	Enter a hostname for the device.
Domain name	Enter a domain name to specify the network or subnetwork to which the device belongs.
Root password	Enter a password for the root user. NOTE: After you have defined a root password, that password is required when you log in to the J-Web or the CLI.
Confirm root password	Re-enter the password to confirm.

Table 36: Fields on the Basic Settings Page *(Continued)*

Field	Action
DNS servers	Select an option to specify the DNS server settings: • To specify a server that the device can use to resolve hostnames into addresses: 1. Click + at the upper-right corner of the DNS Servers table. 2. Enter an IPv4 address of the server. 3. Click the tick mark to save the changes. Else, click the cancel (X) icon to discard the changes. • To edit an existing DNS server hostname: 1. Select a DNS server hostname that you want to edit. 2. Click the pencil icon at the upper-right corner of the DNS Servers table or right-click on the hostname and edit the IPv4 address. 3. Click the tick mark to save the changes. Else, click the cancel (X) icon to discard the changes. • To remove an existing DNS server hostname, select it and click the delete icon at the upper-right corner of the DNS Servers table or right-click on the hostname and delete it.

Table 36: Fields on the Basic Settings Page *(Continued)*

Field	Action
Domain search	Select an option: - To add a domain name: - Click + at the upper-right corner of the Domain Search table. - Enter a domain name. The string must contain an alphanumeric character and can include underscores, hyphen, slash and dot. No spaces allowed. - Click the tick mark to save the changes. Else, click the cancel (X) icon to discard the changes. - To edit an existing domain name: - Select a domain name that you want to edit. - Click the pencil icon at the upper-right corner of the Domain Search table or right-click on the domain name and edit the name. - Click the tick mark to save the changes. Else, click the cancel (X) icon to discard the changes. - To remove an existing domain name, select it and click the delete icon at the upper-right corner of the Domain Search table or right-click on the name and delete it.
Time	
Time zone	Select the time zone from the list in which the router resides.
Time source	Select an option from the list to set the system time:

Table 36: Fields on the Basic Settings Page *(Continued)*

Field	Action
	NTP Servers—Synchronizes the system time with the NTP server that you select. Click one of the following options: • Add—Click + to add an NTP server. Then, enter the NTP server name, key, and Routing Instance. Select an option from the list for Version and Prefer. • Edit—Select an existing NTP server that you want to edit and click the pencil icon available at the upper right of the NTP Server table. You can also right-click on the NTP server and click Edit Row. Then, edit the key and version and click the tick mark. • Delete—Select an existing NTP server that you want to delete and click the delete icon available at the upper right of the NTP Server table. You can also right-click on the NTP server and click Delete Row. Click Yes to delete the selected server.
	Computer—Uses the computer that you are currently logged into to determine the system time for the device. NOTE: When you select this option, the PC time that will be used is displayed in the Current Date & Time field.
	Manual—Enables you to manually select the date and time for the device. Set the date and time using the calendar pick tool and time fields. NOTE: After you configure the time manually, the session will expire. Log in to J-Web.
Device date & time	Displays the device date and time.
Current date & time	Displays the current date and time.

Table 36: Fields on the Basic Settings Page *(Continued)*

Field	Action
Management and Loopback Address	
Management address	Enter IPv4 address for the device.
Subnet	Enter subnet of the IPv4 address.
Loopback address	Enter IP address and subnet for the loopback address. NOTE: If the SRX Series Firewall does not have a dedicated management port (fxp0), then Loopback Address and Subnet are the only options available for the management access configuration.
Subnet	Enter the address, for example, 255.255.255.0. You can also specify the address prefix. Specifies the range of logical addresses within the address space that is assigned to an organization.
Default gateway	Enter the default gateway address for IPv4.
System Services	
Telnet	Select this option to enable telnet.
SSH	Select this option to enable SSH connections.
FTP	Select this option to enable FTP for secure file transfer.
NETCONF	Select this option to enable NETCONF connections.
Junoscript over SSL	Select this option to enable Junoscript connections over SSL.

Table 36: Fields on the Basic Settings Page *(Continued)*

Field	Action
Junoscript certificate	Select the local certificate for SSL from the list.
Interface	Select the interface in order of your preference and click on the left arrow/right arrow to add.
HTTPS	Select this option to enable HTTPS connection settings.
Interface	Select the interface in order of your preference and click on the left arrow/right arrow to add.
HTTPS certificate	Specifies the certificate that you want to use to secure the connection from the HTTPS certificates list when you enable HTTPS. Select the HTTPS certificate from the list.
PKI certificate	Select the PKI certificate for HTTPS from the list. NOTE: This option is available only if you select pki-local-certificate in the HTTPS Certificate options.
Local certificate	Select the local certificate for HTTPS from the list. NOTE: This option is available only if you select local-certificate in the HTTPS Certificate options.
HTTPS port	Click up or down arrow to select the TCP ports for incoming HTTP connections.

Table 36: Fields on the Basic Settings Page *(Continued)*

Field	Action
Virtual domain certificates	Device certificate configured for a domain which can be used for J-Web access. - To add a virtual domain certificate: - Click + at the upper-right corner of the Virtual Domain Certificates table. - Enter a virtual domain name and select a device certificate from the list. NOTE: The domain name string must contain an alphanumeric character and can include underscores, hyphen, and dot. No spaces allowed. - Click the tick mark to save the changes. Else, click the cancel (X) icon to discard the changes.
Management URL	Enter the URL path for web management access.
Session	Enable to configure the web management session parameters.
Idle timeout	Enter a value or click the up or down arrow to set default timeout of web management sessions.
Maximum session	Click the up or down arrow to set maximum number of web management sessions allowed.
Web API	Select to enable Web API configuration.
Client	Select to enable client for the Web API.

Table 36: Fields on the Basic Settings Page *(Continued)*

Field	Action
Hostname	Provides the address of permitted HTTP/HTTPS request originators. To add, click + and enter the IPv4 address of the permitted HTTP/HTTPS request originator and click tick mark to save the changes. To delete, select the hostname and click the delete icon. Then, click Yes to delete it.
HTTP	Select to enable unencrypted HTTP connection settings.
HTTP port	Click top or bottom arrows to select the TCP ports for incoming HTTP connections.
HTTPS	Select to enable encrypted HTTPS connection settings.
HTTPS port	Click top or bottom arrows to select the TCP ports for incoming HTTP connections.

Table 36: Fields on the Basic Settings Page *(Continued)*

Field	Action
Certificate type	Select to specify the certificate that you want to use to secure the connection from the HTTPS certificates list when you enable HTTPs for Web API: • Default—Selects the default system generated certificate. • PKI Certificate—Select a PKI certificate from the list for HTTPS of Web API. • File Path: • File Path—Click Browse and select a certificate from your desired location. Or click Upload and upload the selected certificate. • Certificate—Displays the file path of the uploaded certificate. • Certificate Key: • Browse—Click and select the certificate key from your desired location. • Upload—Click and upload the selected certificate key. • Certificate Key—Displays the file path of the uploaded certificate key.
User	Select this option to enable user credentials.
Name	Enter a username.
Password	Enter the user password.
REST API	Enable this option to allow RPC execution over HTTP(S) connection.

Table 36: Fields on the Basic Settings Page *(Continued)*

Field	Action
Explorer	Select this option to enable REST API explorer.
Control	Select this option to enable control the REST API process.
Allowed sources	Provides the source IP address. Click + and enter the IPv4 address of the source. Then, click tick mark. To delete, select an existing address and click the delete icon. Then, click Yes to delete it.
Connection limit	Click top or bottom arrows to select the number of simultaneous connections.
HTTP	Select to enable unencrypted HTTP connections for REST API.
Address	Click + and enter the IPv4 address for the incoming connections for HTTP of REST API. Then, click tick mark to add it. To delete, select an existing address and click the delete icon. Then, click Yes to delete it.
Port	Click top or bottom arrows to select the HTTP port to accept HTTP connections for REST API. NOTE: The default port for HTTP of REST API is 3000.
HTTPS	Select to enable encrypted HTTPS connections for REST API.

Table 36: Fields on the Basic Settings Page *(Continued)*

Field	Action
Address	Click + and enter the IPv4 address for the incoming connections for HTTPS of REST API. Then, click tick mark to add it. To delete, select an existing address and click the delete icon. Then, click Yes to delete it.
Cipher list	Select the Cipher suites in order of your preference and click on the left arrow or right arrow to add.
Port	Click top or bottom arrows to select the HTTPS port to accept the HTTPS connection of REST API. NOTE: The default port for HTTPS of REST API is 3443.
Server certificate	Select server certificate from the list. See No Link Title to import a device certificate.

Table 36: Fields on the Basic Settings Page *(Continued)*

Field	Action
CA Profile	Select the certificate authority profile for HTTPS of REST API from the list. To create Certificate Authority inline: • Click Create Certificate Authority Profile. • Enter the following details: • CA Profile *—Enter the CA profile name. • CA Identifier *—Enter the CA identifier. • File Path on Device for Certificate: • Browse—Click and select the certificate from your desired location. • Upload—Click and upload the selected certificate. • File Path on Device for Certificate—Displays the file path of the selected certificate. • Click OK.
Security Logging	
Stream mode logging	Select this option to enable logging. NOTE: The Enable Traffic Logs option is available for user logical system and tenants.
UTC timestamp	Select this option to enable UTC Timestamp for security log timestamps.

Table 36: Fields on the Basic Settings Page *(Continued)*

Field	Action
Log on	Select one of the log on types for logging. • Source Address—Select this option to enter the source IP address. • Source Interface—Select this option to select a source interface from the list.
IP address	Enter the source IP address. NOTE: This option is available if you select the log on type as Source Address.
Format	Specifies the format in which the logs are stored. Select a format in which the logs are stored from the list. • binary—Binary encoded text to conserve resources. • SD-Syslog—Structured system log file. • Syslog—Traditional system log file. By default, None logging format is selected.
Transport protocol	Select an option from the list to specify the type of logging transport protocol: • TCP—Select this option to set the transport protocol to TCP. • UDP—Select this option to set the transport protocol to UDP. • TLS—Select this option to set the transport protocol to TLS. By default, None is selected.

Table 36: Fields on the Basic Settings Page *(Continued)*

Field	Action
Connections	Select the TCP or TLS connections for logging using up and down arrows. NOTE: This option is available if you select the transport protocol option as TCP or TLS.
TLS profile	Select a TLS profile from the list. NOTE: This option is available if you select the transport protocol option as TLS.

Table 36: Fields on the Basic Settings Page *(Continued)*

Field	Action
Syslog server	Enables you to configure syslog servers. You can configure a maximum of three syslog servers. Perform one of the following tasks: 1. To create syslog server, click +, enter the following details and then click OK. • Name—Enter the name of the new stream configuration. • Save At—Select the location from the list to save the stream. • Type—Select a format in which the logs are stored from the list. The log types are: • Structure • Standard • Web • Host—Enter the IP address for the stream host name. 2. To edit an existing syslog server, select it and click the pencil icon. Then, edit the saving mode, streaming type, and host in the Edit Syslog page and click OK. 3. To delete an existing syslog server, select it and click the delete icon.
On-box reporting	Enable this option to generate on-box reports. NOTE: We recommend you use Stream mode logging to syslog server.
SNMP	

Table 36: Fields on the Basic Settings Page *(Continued)*

Field	Action
Contact information	Enter any contact information for the administrator of the system (such as name and phone number).
System description	Enter any information that describes the system.
Local engine ID	Enter the MAC address of Ethernet management port 0. Specifies the administratively unique identifier of an SNMPv3 engine for system identification. The local engine ID contains a prefix and a suffix. The prefix is formatted according to specifications defined in RFC 3411. The suffix is defined by the local engine ID. Generally, the local engine ID suffix is the MAC address of Ethernet management port 0.
System location	Enter any location information for the system (lab name or rack name, for example).
System name override	Specifies the option to override the system hostname. Enter the name of the system.
Community	Specifies the name and authorization for the SNMP community. • Click +. • Enter the name of the community being added. • Select the desired authorization (either read-only or read-write) from the list. Click tick mark.
Trap groups	

Table 36: Fields on the Basic Settings Page *(Continued)*

Field	Action
Name	Click + to add a trap group. Enter the SNMP trap group being configured.
Categories	Select trap categories to add to the trap group being configured. The options available are: • Authentication • Chassis • Configuration • Link • Remote operations • RMON alarm • Routing • Startup • CRRP events
Targets	Specifies one or more IP addresses that specify the systems to receive SNMP traps that are generated by the trap group being configured. Click +, enter the target IP address for SNMP trap group, and click tick mark.

Table 36: Fields on the Basic Settings Page *(Continued)*

Field	Action
Health monitoring	Enable the option to check the SNMP health monitor on the device. The health monitor periodically checks the following key indicators of device health: • Percentage of file storage used • Percentage of Routing Engine CPU used • Percentage of Routing Engine memory used • Percentage of memory used for each system process • Percentage of CPU used by the forwarding process • Percentage of memory used for temporary storage by the forwarding process
Interval	Specifies the sampling frequency interval, in seconds, over which the key health indicators are sampled and compared with the rising and falling thresholds. For example, if you configure the interval as 100 seconds, the values are checked every 100 seconds. Select a value from 1 through 24855. The default value is 300 seconds.
Rising threshold	Specifies the value at which you want SNMP to generate an event (trap and system log message) when the value of a sampled indicator is increasing. For example, if the rising threshold is 90, SNMP generates an event when the value of any key indicator reaches or exceeds 90 seconds. Select a value from 1 through 100. The default value is 90 seconds.

Table 36: Fields on the Basic Settings Page *(Continued)*

Field	Action
Falling threshold	Specifies a value at which you want SNMP to generate an event (trap and system log message) when the value of a sampled indicator is decreasing. For example, if the falling threshold is 80, SNMP generates an event when the value of any key indicator falls back to 80 seconds or less. Select a value 0 through 100. The default value is 80 seconds.
Redundant PSU NOTE: SRX380 devices support power supply redundancy for power management.	
Power Supply 0	Displays if the power supply is present or not.
Power Supply 1	Displays if the redundant power supply is present or not.
PSU Redundancy	Enable this option to manage power on the SRX380 device. NOTE: This option is available only when the device is in the standalone mode.

RELATED DOCUMENTATION

[Reset Configuration and Rerun Setup Wizard](#) | 390

Cluster Management

IN THIS CHAPTER

- [Configure Cluster \(HA\) Setup | 164](#)
- [About the Cluster Configuration Page | 179](#)
- [Edit Node Settings | 182](#)
- [Add an HA Cluster Interface | 183](#)
- [Edit an HA Cluster Interface | 185](#)
- [Delete an HA Cluster Interface | 185](#)
- [Add a Redundancy Group | 186](#)
- [Edit a Redundancy Group | 188](#)
- [Delete a Redundancy Group | 189](#)

Configure Cluster (HA) Setup

Before you begin:

- Establish a chassis cluster connection between the two units, ensure that you have physical access to both the devices.
- You must configure the two devices separately.
- Your other unit must be on the same hardware and software version as the current unit.
- Note that both units are erased and rebooted, after which all existing data is irretrievable. You have the option to save a backup copy of your configuration before rebooting.

You are here: **Device Administration > Cluster Management > Cluster Configuration.**

The Junos OS provides high availability on SRX Series Firewall by using chassis clustering. SRX Series Firewalls can be configured to operate in cluster mode, where a pair of devices can be connected together and configured to operate like a single node, providing device, interface, and service level redundancy.

NOTE: Starting in Junos OS Release 23.4R1, J-Web supports SRX1600 and SRX2300 Firewalls.

A chassis cluster can be configured in the following modes:

- **Active/passive mode:** In active/passive mode, transit traffic passes through the primary node while the backup node is used only in the event of a failure. When a failure occurs, the backup device becomes primary and takes over all forwarding tasks.
- **Active/active mode:** In active/active mode, has transit traffic passing through both nodes of the cluster all of the time.

NOTE: In the J-Web cluster (HA) setup, you can only configure active/passive mode (RG1).

You can set up chassis cluster using a simplified Cluster (HA) Mode wizard when the standalone SRX Series Firewalls are in factory default. You can also create HA using the same wizard from Device Administration > Reset Configuration when the devices are already in the network.

NOTE: In the factory default settings, a warning message is displayed in SRX300, SRX320, SRX320-POE, SRX340, SRX345, and SRX380 devices to disconnect the ports between the two nodes. This is to avoid displaying the details of the other nodes.

Device Administration > Cluster Management > Cluster Configuration

To set up cluster (HA):

1. Select **Cluster (HA) Setup**.

NOTE: For the secondary node to be set up or if the primary and secondary nodes are not already connected, click **Proceed**. If you want to set up the primary node, then disconnect back to back connected ports between the two nodes and click **Refresh** to reload the browser.

The Setup Chassis Cluster wizard page appears. This wizard guides you through configuring chassis cluster on a two-unit cluster.

Select the unit

The welcome page shows the possible chassis cluster connections that you can configure for your SRX Series Firewall. It shows a graphical representation for primary unit (Node 0) and secondary unit (Node 1) and guides you to first configure the primary unit (node 0).

2. Select **Yes, this is the primary unit (Node 0)**, to select the unit.

NOTE: If you have already configured the primary node settings, then select **No, this is the secondary unit (Node 1)** and follow the instructions from Step 8.

3. Click **Next**.
4. To configure the primary unit, complete the configuration according to the guidelines provided in [Table 37 on page 166](#).

Table 37: Primary Unit Configuration

Field	Description	Action
System Identity		
Node 0 Cluster ID	Specifies the number by which a cluster is identified.	Enter a number from 1 through 255. By default, 1 is assigned.
Node 0 Priority	Specifies the device priority for being elected to be the primary device in the VRRP group.	Enter a number from 1 through 255. By default, 200 is assigned.
Node 1 Priority	Specifies the device priority for being elected to be the primary device in the VRRP group.	Enter a number from 1 through 255. By default, 100 is assigned.
Node 0 Host Name	Specifies the device host name of the node 0.	By default, host name is assigned. For example, SRX1500-01.
Node 1 Host Name	Specifies the device host name of the node 1.	By default, host name is assigned. For example, SRX1500-02.
Allow root user SSH login	Allows users to log in to the device as root through SSH.	Enable this option.
Management Interface		

Table 37: Primary Unit Configuration (Continued)

Field	Description	Action
IPv4 Address		
NOTE: Make a note of the IPv4 address as you need it to access the settings after you commit the configuration.		
Node 0 Management IPv4	Specifies the management IPv4 address of node 0.	Enter a valid IPv4 address for the management interface.
Node 0 Subnet Mask	Specifies subnet mask for IPv4 address.	Enter a subnet mask for the IPv4 address.
Node 1 Management IPv4	Specifies the management IPv4 address of node 1.	Enter a valid IPv4 address for the management interface.
Node 1 Subnet Mask	Specifies subnet mask for IPv4 address.	Enter a subnet mask for the IPv4 address.
Static Route IP	Defines how to route to the other network devices.	Enter an IPv4 address for the static route.
Static Route Subnet	Specifies the subnet for the static route IPv4 address.	Enter a subnet mask for the static route IPv4 address.
Next Hop IPv4	Specifies next hop gateway for the IPv4 address.	Enter a valid IPv4 address for the next hop.
IPv6 Address (Optional)		
Node 0 Management IPv6	Specifies the management IPv6 address of node 0.	Enter a valid IPv6 address for the management interface.
Node 0 Subnet Prefix	Specifies subnet prefix for IPv6 address.	Enter a subnet prefix for the IPv6 address.

Table 37: Primary Unit Configuration (Continued)

Field	Description	Action
Node 1 Management IPv6	Specifies the management IPv6 address of node 1.	Enter a valid IPv6 address for the management interface.
Node 1 Subnet Prefix	Specifies subnet prefix for IPv6 address.	Enter a subnet prefix for the IPv6 address.
Static Route IPv6	Defines how to route to the other network devices.	Enter an IPv6 address for the static route.
Static Route Subnet Prefix	Specifies the subnet prefix for the static route IPv6 address.	Enter a subnet prefix for the static route IPv6 address.
Next Hop IPv6	Specifies next hop gateway for the IPv6 address.	Enter a valid IPv6 address for the next hop.

Device Password

Root Password	Specifies root password of the device.	Enter root password if not already configured for the device.
Re-Enter Password	-	Reenter the root password.

Control Ports

NOTE: This option is available only for SRX5600 and SRX5800 devices.

Table 37: Primary Unit Configuration (*Continued*)

Field	Description	Action
Dual Link	Provides redundant link for failover.	By default, this option is disabled. Once you enable this option, the following fields appear: • Link 1 • Node 0 FPC—Select an option from the list. • Node 0 Port—Select an option from the list. • Node 1 FPC. • Node 1 Port. • Link 2 (Optional) • Node 0 FPC—Select an option from the list. • Node 0 Port—Select an option from the list. • Node 1 FPC. • Node 1 Port.
Node 0 FPC	Specifies FPC slot number on which to configure the control port.	Select an option from the list.
Node 0 Port	Specifies port number on which to configure the control port.	Select an option from the list.
Node 1 FPC	Optional. Specifies FPC slot number on which to configure the control port.	Select an option from the list.

Table 37: Primary Unit Configuration (Continued)

Field	Description	Action
Node 1 Port	Optional. Specifies port number on which to configure the control port.	Select an option from the list.
Save Backup (Optional)		
Save Backup (to client)	Saves backup of the current configuration to the client local machine. NOTE: When restarting the primary unit, J-Web deletes the existing configuration to configure chassis cluster. Therefore, it is recommended that you save a backup file of your current settings before committing the new configuration.	Enable the option to save the backup file of your settings.

5. Click **Reboot and Continue** to restart the primary unit to configure chassis cluster.
6. After rebooting the primary unit (node 0), connect to the management port of the secondary unit to switch to the secondary unit.
7. Click **Refresh** if the management IP address of the secondary unit is same as the existing device default IP address. If not, open a new browser with the new secondary device IP address.
8. To configure the secondary unit, complete the configuration according to the guidelines provided in [Table 38 on page 170](#).

Table 38: Secondary Unit Configuration

Field	Description	Action
Secondary Unit Information		

Table 38: Secondary Unit Configuration (Continued)

Field	Description	Action
Cluster ID	Specifies the number by which a cluster is identified. NOTE: Cluster ID must be same for both primary and secondary units.	Enter a number from 1 through 255. By default, 1 is assigned.

Device Password

Root Password	Specifies root password of the device.	Enter new root password.
Re-Enter Password	-	Reenter the root password.

Control Ports

NOTE: This option is available only for SRX5600 and SRX5800 devices.

Table 38: Secondary Unit Configuration (*Continued*)

Field	Description	Action
Dual Link	Provides redundant link for failover.	By default, this option is disabled. Once you enable dual link option, the following fields appear: • Link 1 • Node 0 FPC—Select an option from the list. • Node 0 Port—Select an option from the list. • Node 1 FPC. • Node 1 Port. • Link 2 (Optional) • Node 0 FPC—Select an option from the list. • Node 0 Port—Select an option from the list. • Node 1 FPC. • Node 1 Port.
Node 0 FPC	Specifies FPC slot number on which to configure the control port.	Select an option from the list.
Node 0 Port	Specifies port number on which to configure the control port.	Select an option from the list.
Node 1 FPC	Optional. Specifies FPC slot number on which to configure the control port.	Select an option from the list.

Table 38: Secondary Unit Configuration (Continued)

Field	Description	Action
Node 1 Port	Optional. Specifies port number on which to configure the control port.	Select an option from the list.
Save Backup (Optional)		
Save Backup (to client)	Saves backup of the current configuration to the client local machine. NOTE: When restarting the secondary unit, J-Web deletes the existing configuration to configure chassis cluster. Therefore, it is recommended that you save a backup file of your current settings before committing the new configuration.	Enable the option to save the backup file of your settings.

9. Click **Reboot and Continue** to restart the secondary unit to configure chassis cluster.
10. After rebooting the secondary unit (node 1), launch the J-Web UI using primary unit management IP address.
11. Navigate to **Cluster Management > Cluster (HA) Setup**.

The Cluster Wizard page will open and displays the Cluster Status step.

NOTE:

- J-Web uses show chassis cluster status to verify control link status. Number on the link signifies if it is single (1) or dual links (2).

The control and fabric link status colors are as follows:

- Green—Indicates that the links are up.
- Red—Indicates that the links are down.

- Orange—Indicates that one of the dual links is up.
- Grey—Indicates that the fabric link is not configured.
- If chassis cluster is not connected, then the connection is failed and all possible failure reasons will be displayed. For information on troubleshooting tips, see [Juniper Knowledge Search](#).
- You can configure fabric link only after the chassis cluster is formed. For the first time configuration, the chassis status displays as The fabric ports links is not yet configured.

12. To configure fabric link, complete the configuration according to the guidelines provided in [Table 39 on page 174](#).

Table 39: Fabric Link Configuration

Field	Description	Action
Fabric Link Details		
Dual Link	Provides redundant link for failover.	Enable this option.
Link 1		
Fabric 0	Specifies the fabric port link for node 0.	Select an interface from the list.
Fabric 1	Specifies the fabric port link for node 1.	-
Link 2 (Optional)		
Fabric 0	Specifies the secondary fabric port link for node 0.	Select an interface from the list.
Fabric 1	Specifies the secondary fabric port link for node 1.	-

13. Click **Configure Link**.

14. Click **Next**.

15. To add redundant Ethernet (reth) interface, click + and complete the configuration according to the guidelines provided in [Table 40 on page 175](#).

NOTE: You can also use the pencil icon to edit the reth interface and delete icon to delete the reth interfaces.

Table 40: Add Reth Interface

Field	Description	Action
RETH Name	Specifies the reth interface name.	Enter a name for reth interface.
Node 0 Interfaces	Specifies the list of Node 0 interfaces.	Select an interface from the Available column and move it to the Selected column.
Node 1	Specifies the Node 1 interfaces based on the node 0 interfaces.	-
Advance Settings		
LACP Configuration	Optional. Configure Link Aggregation Control Protocol (LACP).	-
LACP Mode	Optional. Specifies the LACP mode. Available options are: • active—Initiate transmission of LACP packets. • passive—Respond to LACP packets. • periodic—Interval for periodic transmission of LACP packets.	Select an option from the list.

Table 40: Add Reth Interface (Continued)

Field	Description	Action
Periodicity	Optional. Specifies the interval at which the interfaces on the remote side of the link transmit link aggregation control protocol data units (PDUs). Available options are: - fast—Transmit link aggregation control PDUs every second. - slow—Transmit link aggregation control PDUs every 30 seconds.	Select an option from the list.
Description	Optional. Specifies the description for LACP.	Enter a description.
VLAN Tagging	Optional. Specifies whether or not to enable VLAN tagging.	Enable this option.
Redundancy Group	Specifies the number of the redundancy group that the reth interface belongs to.	-

16. Click *Save*.

Virtual reth interface is created.

17. To add a logical interface to the new virtual reth interfaces, complete the configuration according to the guidelines provided in [Table 41 on page 176](#).**Table 41: Add Reth Logical Interface**

Field	Description	Action
General		
Reth Interface Name	Specifies the name of the reth interface.	Enter a name for the reth interface.
Logical Interface Unit	Specifies the logical interface unit.	Enter the logical interface unit.

Table 41: Add Reth Logical Interface (Continued)

Field	Description	Action
Description	Specifies the description of the reth interface.	Enter the description.
VLAN ID	Optional. Specifies the VLAN ID.	Enter the VLAN ID.
IPv4 Address		
IPv4 Address	Specifies the IPv4 address.	Click + and enter a valid IP address.
Subnet Mask	Specifies the subnet mask for IPv4 address.	Enter a valid subnet mask.
IPv6 Address (Optional)		
IPv6 Address	Specifies the IPv6 address.	Enter a valid IP address.
Prefix Length	Specifies the number of bits set in the subnet mask.	Enter the prefix length.

18. Click **OK**.

19. To configure zones, complete the configuration according to the guidelines provided in [Table 42 on page 178](#).

NOTE:

- With factory default configuration, trust and untrust zones are displayed by default.
- You can edit the security zone, add new zones, and delete the newly added zones. You will receive an error message while committing if you try to delete a default zone. This is because, the default zones are referenced in the security policies.
- You can also edit zone description, application tracking, source identity log, interfaces, system services, protocols, and traffic control options.

Table 42: Create Zones

Field	Description	Action
General Information		
Name	Specifies the name of the zone.	Enter a name for the zone.
Description	Specifies a description for the zone.	Enter a description for the zone.
Application Tracking	Enables application tracking (AppTrack) to collect statistics for the application usage on the device, and when the session closes	Enable this option.
Source Identity Log	Specifies the source-identity-log parameter as part of the configuration for a zone to enable it to trigger user identity logging when that zone is used as the source zone (from-zone) in a security policy.	Enable this option.
Interfaces		
Interfaces	Specifies the list of reth interfaces available.	Select an interface from the Available column and move it to the Selected column.
System Services		
Except	Drops the selected services.	Enable this option if you want to drop the selected services.
Services	Specify the types of incoming system service traffic that can reach the device for all interfaces in a zone.	Select a service from the Available column and move it to the Selected column.
Protocols		
Except	Drops the selected protocols.	Enable this option if you want to drop the selected protocols.

Table 42: Create Zones *(Continued)*

Field	Description	Action
Protocols	Specify the types of routing protocol traffic that can reach the device on a per-interface basis.	Select a protocol from the Available column and move it to the Selected column.
Traffic Control Options		
TCP Reset	Specifies the device to send a TCP segment with the RST (reset) flag set to 1 (one) in response to a TCP segment with any flag other than SYN set and that does not belong to an existing session.	Enable this option.

20. Click **OK**.

21. Click **Finish**.

A cluster setup success message appears.

If you click the Cluster (HA) Setup menu again, a cluster setup success message appears, and you can click **Cluster Configuration** to view and edit the chassis cluster configuration.

NOTE: If the chassis cluster configuration fails after you click **Finish**, then edit the configuration as required and commit the changes again.

RELATED DOCUMENTATION

[About the Cluster Configuration Page](#) | 179

About the Cluster Configuration Page

IN THIS SECTION

● [Tasks You Can Perform](#) | 180

You are here: **Device Administration > Cluster Configuration.**

Use this page to add, edit, or delete chassis cluster configuration.

Tasks You Can Perform

You can perform the following tasks from this page:

- Edit Node settings. See ["Edit Node Settings" on page 182.](#)
- Add an HA cluster interface. See ["Add an HA Cluster Interface" on page 183.](#)
- Edit an HA cluster interface. See ["Edit an HA Cluster Interface" on page 185.](#)
- Delete HA cluster interface. See ["Delete an HA Cluster Interface" on page 185.](#)
- Add a redundancy group. See ["Add a Redundancy Group" on page 186.](#)
- Edit a redundancy group. See ["Edit a Redundancy Group" on page 188.](#)
- Delete redundancy group. See ["Delete a Redundancy Group" on page 189.](#)

Field Descriptions

[Table 43 on page 180](#) and [Table 44 on page 181](#) describes the fields on the Cluster Configuration page.

Table 43: Fields on the Node Settings Page

Field	Description
Node ID	Displays the node ID.
Cluster ID	Displays the cluster ID configured for the node.
Host Name	Displays the name of the node.

Table 43: Fields on the Node Settings Page *(Continued)*

Field	Description
Backup Router	Displays the IP address used while booting.
Management Interface	Displays the management interface of the node.
IP Address	Displays the management IP address of the node.
Status	Displays the state of the redundancy group. • Primary—Redundancy group is active. • Secondary—Redundancy group is passive.

Table 44: Fields on the HA Cluster Settings Page

Field	Action
Interfaces	
Global Settings	To configure the global settings: 1. Click Global Settings at the upper-right corner of the Interfaces table. The Global Settings window appears. 2. Enter the number of redundant Ethernet (reth) interfaces allowed. Range is 1 through 128. 3. Click OK to save the changes. If you want to discard your changes, click Cancel.
Name	Displays the physical interface name.
Member Interfaces/IP Address	Displays the member interface name or IP address configured for an interface.
Redundancy Group	Displays the redundancy group.

Table 44: Fields on the HA Cluster Settings Page *(Continued)*

Field	Action
Redundancy Group	
Group	Displays the redundancy group identification number.
Preempt	Displays the selected Preempt option. • True—Primary role can be preempted based on priority. • False—Primary role cannot be preempt based on priority.
Gratuitous ARP Count	Displays the number of gratuitous ARP requests that a newly elected primary device in a chassis cluster sends out to announce its presence to the other network devices.
Node Priority	Displays the assigned priority for the redundancy group on that node. The eligible node with the highest priority is elected as primary for the redundant group.

Edit Node Settings

You are here: **Device Administration** > **Cluster Configuration**.

To edit node settings:

1. Select a node setting that you want to edit on the Cluster Configuration page.
2. Click the pencil icon available on the upper-right corner of the page.

The Edit Node Settings page appears with editable fields.

Table 45: Fields on the Edit Node Settings Page

Field	Description
Node Settings	
Host Name	Enter the name of the host.

Table 45: Fields on the Edit Node Settings Page (*Continued*)

Field	Description
Backup Router	Enter the backup router address to be used during failover.
Destination	
IP	Enter the destination IP address. Click + to add the destination IP address or select an existing IP address and click X to delete it.
Interface	
Interface	Select an interface available for the router from the list. NOTE: You can add and edit two interfaces for each fabric link.
IP	Enter the interface IP address.
Add	Click + to add the interface.
Delete	Select one or more existing interfaces and click X to delete it.

RELATED DOCUMENTATION

[About the Cluster Configuration Page](#) | 179

Add an HA Cluster Interface

You are here: **Device Administration** > **Cluster Configuration**.

To add an HA cluster interface:

1. Click + on the upper-right corner of the Cluster Configuration page.
The Add HA Cluster Interface page appears.
2. Complete the configuration according to the guidelines provided in [Table 46 on page 184](#).

3. Click **OK** to save the changes. If you want to discard your changes, click **Cancel**.

Table 46: Fields on the Add HA Cluster Interface Page

Field	Action
Fabric Link	
Fabric Link 0 (fab0)	
Interface	Enter the interface IP address for fabric link 0 and click + to add it. Select an existing interface and click X to delete the interface.
Fabric Link 1 (fab1)	
Interface	Enter the interface IP address for fabric link 1 and click + to add it. Select an existing interface and click X to delete the interface.
Redundant Ethernet	
Interface	Enter the logical interface. This specifies a logical interface consisting of two physical Ethernet interfaces, one on each chassis.
IP	Enter redundant Ethernet IP address.
Redundancy Group	Select one of the redundancy group from the list. Else, enter a redundancy group.
lacp	Select an option from list: • active—Initiate transmission of LACP packets. • passive—Respond to LACP packets.
periodic	Select an option from list for periodic transmission of LACP packets. The options are fast or slow.
+	Click + to add the redundant Ethernet configuration.

Table 46: Fields on the Add HA Cluster Interface Page (*Continued*)

Field	Action
X	Select one or more existing redundant Ethernet configurations and click X to delete it.

RELATED DOCUMENTATION

[Edit an HA Cluster Interface | 185](#)

[Delete an HA Cluster Interface | 185](#)

[Add a Redundancy Group | 186](#)

Edit an HA Cluster Interface

You are here: **Device Administration** > **Cluster Configuration**.

To edit a HA cluster interface:

1. Select an existing HA cluster interface that you want to edit on the Cluster Configuration page.
2. Click the pencil icon available on the upper-right corner of the page.

The Edit HA Cluster Interface page appears with editable fields. For more information on the options, see "[Add an HA Cluster Interface](#)" on page 183.

3. Click **Save** to save the changes or click **Cancel** to discard the changes.

RELATED DOCUMENTATION

[About the Cluster Configuration Page | 179](#)

[Delete an HA Cluster Interface | 185](#)

Delete an HA Cluster Interface

You are here: **Device Administration** > **Cluster Configuration**.

To delete HA cluster interface(s):

1. Select one or more existing HA cluster interfaces that you want to edit on the Cluster Configuration page.
2. Click the delete icon available on the upper-right corner of the page.
3. Click **Yes** to delete or click **No** to retain the HA cluster interface.

RELATED DOCUMENTATION

[Add an HA Cluster Interface](#) | 183

[Edit an HA Cluster Interface](#) | 185

Add a Redundancy Group

You are here: **Device Administration** > **Cluster Configuration**.

To add a redundancy group:

1. Click **+** on the upper-right corner of the Cluster Configuration page.
The Add Redundancy Group page appears.
2. Complete the configuration according to the guidelines provided in [Table 47 on page 186](#).
3. Click **OK** to save the changes. If you want to discard your changes, click **Cancel**.

Table 47: Fields on the Add Redundancy Group Page

Field	Action
Redundancy Group	Enter the redundancy group name.
Allow preemption of primaryship	Select the check box to allow a node with a better priority to initiate a failover for a redundancy group. NOTE: By default, this feature is disabled. When disabled, a node with a better priority does not initiate a redundancy group failover (unless some other factor, such as faulty network connectivity identified for monitored interfaces, causes a failover).

Table 47: Fields on the Add Redundancy Group Page (*Continued*)

Field	Action
Gratuitous ARP Count	Enter a value. The range is 1 through 16. The default is 4. This specifies the number of gratuitous Address Resolution Protocol requests that a newly elected primary sends out on the active redundant Ethernet interface child links to notify network devices of a change in primary role on the redundant Ethernet interface links.
node0 priority	Enter the node priority number for a redundancy group. Range: 1 through 254.
node1 priority	Enter the node priority number as 1 for a redundancy group.
Interface Monitor	
Interface	Select an interface from the list.
Weight	Enter a value to specify the weight for the interface to be monitored. The range is from 1 through 125.
+	Click + to add the interface monitor configuration.
X	Select one or more existing interfaces and click X to delete them.
IP Monitoring	
Weight	Enter a value to specify the weight for IP monitoring. The range is 0 through 225.
Threshold	Enter a value to specify the global threshold for IP monitoring. The range is 0 through 225.
Retry Count	Enter a value to specify the number of retries needed to declare reachability failure. The range is 5 through 15.

Table 47: Fields on the Add Redundancy Group Page (*Continued*)

Field	Action
Retry Interval	Enter a value to specify the time interval in seconds between retries. The range is 1 through 30.
IPv4 Addresses to be monitored	
IP	Enter an IPv4 address to be monitored for reachability. You select an existing IP address and can click X to delete it.
Weight	Enter a value to specify the weight for the redundancy group interface to be monitored.
Interface	Enter a value to specify the logical interface to monitor this IP address
Secondary IP Address	Enter the secondary IP address for monitoring packets on a secondary link.
+	Click + to add the IPv4 Addresses to be monitored configuration.

RELATED DOCUMENTATION

[Edit a Redundancy Group | 188](#)

[Delete a Redundancy Group | 189](#)

[About the Cluster Configuration Page | 179](#)

Edit a Redundancy Group

You are here: **Device Administration** > **Cluster Configuration**.

To edit a redundancy group:

1. Select an existing redundancy group that you want to edit on the Cluster Configuration page.
2. Click the pencil icon available on the upper-right corner of the page.

The Edit Redundancy Group page appears with editable fields. For more information on the options, see ["Add a Redundancy Group" on page 186](#).

3. Click **Save** to save the changes or click **Cancel** to discard the changes.

RELATED DOCUMENTATION

[Delete a Redundancy Group | 189](#)

[About the Cluster Configuration Page | 179](#)

Delete a Redundancy Group

You are here: **Device Administration** > **Cluster Configuration**.

To delete redundancy group(s):

1. Select one or more existing redundancy groups that you want to edit on the Cluster Configuration page.
2. Click the delete icon available on the upper-right corner of the page.
3. Click **Yes** to delete or click **No** to retain the redundancy group.

RELATED DOCUMENTATION

[Add a Redundancy Group | 186](#)

[Edit a Redundancy Group | 188](#)

CHAPTER 10

User & Roles

IN THIS CHAPTER

- [About the Users Page | 190](#)
- [Create a User | 192](#)
- [Edit a User | 197](#)
- [Delete a User | 198](#)
- [About the Roles Page | 198](#)
- [Create a Role | 202](#)
- [Edit a Role | 204](#)
- [Delete a User | 204](#)

About the Users Page

IN THIS SECTION

- [Tasks You Can Perform | 190](#)
- [Field Descriptions | 191](#)

You are here: **Device Administration > Users & Roles > Users.**

Using this page, you can configure user details, authentication methods, and passwords.

Tasks You Can Perform

You can perform the following tasks from this page:

- **Save**—Saves all the users configuration.

- Cancel—Cancels all your entries.
- Add a user. See ["Create a User" on page 192](#).
- Edit a user. See ["Edit a User" on page 197](#).
- Delete a user. See ["Delete a User" on page 198](#).

Field Descriptions

[Table 48 on page 191](#) describes the fields on the Users page.

Table 48: Fields on the Users Page

Field	Description
User Details	
User Details	Provides the users details to the device's local database. The options available are: • Add • Edit • Delete
Authentication Methods	
Authentication Method And Order	Enable authentication methods and drag and drop to change the authentication order. The options available are: • Password • RADIUS Servers • TACACS+Servers
RADIUS Servers	
RADIUS Servers	Displays the RADIUS server details. Click Configure to add a new RADIUS server.

Table 48: Fields on the Users Page *(Continued)*

Field	Description
TACACS	
TACACS Servers	Displays the TACACS server details. Click Configure to add a new TACACS server.
Password Settings	
NOTE: J-Web interface does not support configuring the number of characters by which the new password should be different from the existing password.	
Minimum Reuse	Displays the number of old passwords which should not match the new password. Range: 1 through 20
Maximum Lifetime	Displays the duration of a password (in days), where the password expires after the maximum duration is reached. Range: 30 through 365
Minimum Lifetime	Displays the duration of a password (in days) before the password can be changed. Range: 1 through 30

RELATED DOCUMENTATION[Create a User | 192](#)[Edit a User | 197](#)[Delete a User | 198](#)**Create a User**You are here: **Device Administration>Users & Roles>Users.**

To add a user:

1. Click **+** on the upper-right corner of the User Details table.
The Create User page appears.
2. Complete the configuration according to the guidelines provided in [Table 49 on page 193](#).
3. Click **OK** to return to the Users page. If you want to discard your changes, click **Cancel**.
4. Click **Save** to save the newly added user configurations. If you want to discard your changes, click **Cancel**.

Table 49: Fields on the Create User Page

Field	Description
Username	Enter a unique name for the user. Do not include spaces, colons, or commas in the username.
Login ID	Enter a unique ID for the user. Range: 100 through 64000.
Full Name	Enter the user's full name. If the full name contains spaces, enclose it in quotation marks. Do not include colons or commas.
Password	Enter a login password for the user. The login password must meet the following criteria: • The password must be at least 6 characters long. • You can include most character classes in a password (alphabetic, numeric, and special characters), except control characters.
Confirm password	Reenter the password for the user.

Table 49: Fields on the Create User Page *(Continued)*

Field	Description
Role Scope	NOTE: This option is only available on the SRX Series Firewalls that support multi-tenancy. Select one of the role scopes to assign to the user: • Default—Assigns the role to root logical systems user. • Tenant—Assigns the role to tenant user. • Logical System—Assigns the role to logical system user.
Tenant	Select the tenant profile from the list for which you want to assign the role. NOTE: This option is only available if you select Tenant in the Role scope field.
Logical System	Select the logical system profile from the list for which you want to assign the role. NOTE: This option is only available if you select Logical System in the Role scope field.
Role	Select the user's role from the list.
Authentication Methods	
Authentication Method And Order	Enable authentication methods and drag and drop to change the authentication order. The options available are: • Password • RADIUS Servers • TACACS+Servers
RADIUS Servers	

Table 49: Fields on the Create User Page *(Continued)*

Field	Description
RADIUS Servers	Specifies the details of RADIUS servers. To add a new RADIUS server: 1. Click Configure. The RADIUS Servers page appears. 2. Click + and enter the following details: • IP Address—Enter the server’s 32-bit IP address. • Password—Enter the secret password for the server. • Confirm Password—Re-enter the secret password for the server. • Server Port—Enter an appropriate port. • Source IP Address—Enter the source IP address of the server. • Retry Attempts—Specify the number of times that the server should try to verify the user’s credentials. 3. Click OK to save the changes. To delete an existing RADIUS server, select it and click the Delete icon.
TACACS	

Table 49: Fields on the Create User Page *(Continued)*

Field	Description
TACACS Servers	Specifies the details of TACACS servers. To add a new TACACS server: 1. Click Configure. The TACACS Servers page appears. 2. Click + and enter the following details: • IP Address—Enter the server's 32-bit IP address. • Password—Enter the secret password for the server. • Confirm Password—Re-enter the secret password for the server. • Server Port—Enter an appropriate port. • Source IP Address—Enter the source IP address of the server. • Timeout—Specify the amount of time (in seconds) the device should wait for a response from the server. 3. Click OK to save the changes. To delete an existing TACACS server, select it and click the Delete icon.
Password Settings NOTE: J-Web interface does not support configuring the number of characters by which the new password should be different from the existing password.	
Minimum Reuse	Click up or down arrow to specify the number of old passwords which should not match the new password. Range: 1 through 20
Maximum Lifetime	Click up or down arrow to specify the duration of a password (in days), where the password expires after the maximum duration is reached. Range: 30 through 365

Table 49: Fields on the Create User Page *(Continued)*

Field	Description
Minimum Lifetime	Click up or down arrow to specify the duration of a password (in days) before the password can be changed. Range: 1 through 30

RELATED DOCUMENTATION

About the Users Page 190
Edit a User 197
Delete a User 198

Edit a User

You are here: **Device Administration>Users & Roles>Users.**

To edit a user:

1. Select an existing user profile that you want to edit on the Users page.
2. Click the pencil icon available on the upper-right corner of the page.
The Edit User page appears with editable fields. For more information on the options, see "[Create a User](#)" on page 192.
3. Click **OK** to save the changes or click **Cancel** to discard the changes.

RELATED DOCUMENTATION

About the Users Page 190
Create a User 192
Edit a User 197

Delete a User

You are here: **Device Administration>Users & Roles>Users.**

To delete user(s):

1. Select one or more users that you want to delete from the Users page.
2. Click the delete icon available on the upper-right corner of the page.
3. Click **Yes** to delete or click **No** to retain the user.

RELATED DOCUMENTATION

[About the Users Page | 190](#)

[Create a User | 192](#)

[Edit a User | 197](#)

About the Roles Page

IN THIS SECTION

- [Tasks You Can Perform | 200](#)
- [Field Descriptions | 201](#)

You are here: **Device Administration > Users & Roles > Roles.**

J-Web supports users' authentication and authorization based on their roles. When root, tenant, or logical-system users log in to J-Web, their roles and access permissions determine the J-Web menus they can access and the tasks they can perform. For logical system and tenant users, the J-Web UI does not display menus for the restricted features.

[Table 50 on page 199](#) lists the details of the user role type, role scope, and access privileges.

Table 50: User Role Type, Role Scope, and Access Privileges

User Details	Description
Role Type	
Predefined roles	System-defined roles with a set of predefined access privileges assigned to a user to perform tasks within the J-Web UI. During Junos OS installation, predefined roles (super-user) are generated in the system. NOTE: A device-read-only role is a J-Web specific read-only predefined role. User with this role assigned can only view all the device details in the J-Web UI.
Custom roles	Customized (user-defined) roles with a set of access privileges assigned to a user to perform tasks within the J-Web UI. This includes the J-Web UI main menu and first-level sub-menu items (for example, Monitor, Device Administration, and Commit Configuration). NOTE: • Users can only create roles if they are user administrators or super administrators, or if they have the create role permission. • You can only create, edit, or delete a customized role but not the predefined roles. • To view the CLI configuration changes before you commit the newly created role, select the role on the Roles page and click Commit> View Configuration Changes. The View Configuration Changes window displays which menus are read-only and hidden, allowed and denied configurations, and for which you have permissions.
Role Scope—A role scope defines the capabilities of the user. NOTE: The role scope option is only available on the SRX Series Firewalls that support multi-tenancy.	
Default	Users who are assigned with this role scope can view, configure, and manage root logical systems.

Table 50: User Role Type, Role Scope, and Access Privileges (*Continued*)

User Details	Description
Tenant	Users who are assigned with this role scope view, configure, and manage tenant system.
Logical System	Users who are assigned with this role scope view, configure, and manage logical system.
Access Privileges —A user role can be assigned with the access privileges and actions to access J-Web UI menus and sub-menus.	
Full access	Users can perform all the menu actions.
Read-only access	Users have view-only permissions for the respective menus.
No access	Users do not have permission to perform the action.

Tasks You Can Perform

You can perform the following tasks from the Roles page:

- Associate a role to users. To do this, click **Users** link available below the Roles page title to directly navigate to the Users page. Then, click **+** to add a new user with a role or select the existing user and click the pencil icon to modify the role. For more information, see ["Create a User" on page 192](#).
- View the details of a role. To do this, select an existing role and follow the available options:
 - Click **More** and select **Detailed View**.
 - Right-click on the selected role and select **Detailed View**.
 - Hover over to the left of the selected role name and click the **Detailed View** icon.
- Create a role. See ["Create a Role" on page 202](#).
- Edit a role. See ["Edit a Role" on page 204](#).
- Delete a role. See No Link Title.

- Show or hide columns in the Roles table. To do this, click the Show Hide Columns icon in the top right corner of the Roles table. Then, select the options you want to view or clear the options you want to hide on the page.
- Advance search for roles. To do this, use the search text box present above the table grid. The search includes the logical operators as part of the filter string. In the search text box, when you hover over the icon, it displays an example filter condition. When you start entering the search string, the icon indicates whether the filter string is valid or not.

NOTE: You can search only by role name.

For an advanced search:

1. Enter the search string in the text box.
2. Select a value from the list and then select a valid operator based on which you want to perform the advanced search operation.

NOTE: Press Spacebar to add an AND operator or OR operator to the search string. Press backspace at any point of time while entering a search criteria, only one character is deleted.

3. Press Enter to display the search results in the grid.

Field Descriptions

Table 51 on page 201 describes the fields on the Roles page.

Table 51: Fields on the Roles Page

Field	Action
Name	Displays the name of the role.
Role Scope	Displays the role scope. For example, Default, Tenant: <i><tenant-name></i>, and Logical System: <i><logical-system name></i>. NOTE: This option is only available on the SRX Series Firewalls that support multi-tenancy.

Table 51: Fields on the Roles Page *(Continued)*

Field	Action
Predefined/Custom	Displays whether the role is a predefined role or a custom role.

RELATED DOCUMENTATION

| [About the Users Page](#) | 190

Create a Role

You are here: **Device Administration** > **Users & Roles** > **Roles**.

To create a role:

1. Click the add icon (+) on the upper right side of the Roles page.
The Create Role page appears.
2. Complete the configuration according to the guidelines provided in [Table 52 on page 202](#).
3. Click **OK** to save the newly added role. If you want to discard your changes, click **Cancel**.
After you create roles, go to **Device Administration** > **Users & Roles** > **Users** and assign them to users.

Table 52: Fields on the Create Role Page

Field	Action
Name	Enter a unique string that consists of alphanumeric characters, hyphens, and underscores; 64-character maximum.

Table 52: Fields on the Create Role Page (*Continued*)

Field	Action
Role scope	NOTE: This option is only available on the SRX Series Firewalls that support multi-tenancy. Select the scope of the role: • Default—Creates the role to root logical systems. • Tenant—Creates the role to tenant profiles. • Logical System—Creates the role to logical system profiles.
Tenant	Select the tenant profile from the list for which you want to assign the role. NOTE: This option is only available if you select Tenant in the Role scope.
Logical System	Select the logical system profile from the list for which you want to assign the role. NOTE: This option is only available if you select Logical System in the Role scope.
Access Privileges	Select one or more privilege types (Full Access, Read-Only Access, or No Access) to assign the role for the specified actions and menus. A role must have at least one access privilege. NOTE: By default, Full Access privilege is selected. You can select: • Read-Only Access if you want to assign the access permissions as read-only. • No Access if you do not want to assign any access permissions.

RELATED DOCUMENTATION

[About the Roles Page | 198](#)

[Edit a Role | 204](#)

No Link Title

Edit a Role

You are here: **Device Administration** > **Users & Roles** > **Roles**.

To edit a role:

1. Select an existing role that you want to edit on the Roles page.

NOTE: Alternatively, you can right-click on the selected role and select **Edit**.

2. Click the pencil icon available on the upper right side of the page.

The Edit Role page appears with editable fields. For more information on the options, see "[Create a Role](#)" on page 202.

3. Click **OK** to save the changes or click **Cancel** to discard the changes.

RELATED DOCUMENTATION

[About the Roles Page | 198](#)

No Link Title

Delete a User

You are here: **Device Administration**>**Users & Roles**>**Users**.

To delete user(s):

1. Select one or more users that you want to delete from the Users page.
2. Click the delete icon available on the upper-right corner of the page.
3. Click **Yes** to delete or click **No** to retain the user.

RELATED DOCUMENTATION

About the Users Page	190
Create a User	192
Edit a User	197

Multi Tenancy—Resource Profiles

IN THIS CHAPTER

- [About the Resource Profiles Page | 206](#)
- [Global Settings | 208](#)
- [Add a Resource Profile | 209](#)
- [Edit a Resource Profile | 213](#)
- [Delete a Resource Profile | 213](#)

About the Resource Profiles Page

IN THIS SECTION

- [Tasks You Can Perform | 206](#)
- [Field Descriptions | 208](#)

You are here: **Device Administration** > **Multi Tenancy** > **Resource Profiles**.

NOTE: This menu is supported for only SRX4000 Series Firewalls, SRX5000 Series Firewalls, SRX1500, SRX1600, and SRX2300 Firewalls.

You can view Resource profile for logical systems. Resource profiles are mandatory for creating logical systems.

Tasks You Can Perform

You can perform the following tasks from this page:

- Global Settings. See ["Global Settings" on page 208](#).
- Create a resource profile. See ["Add a Resource Profile" on page 209](#).
- Edit a resource profile. See ["Edit a Resource Profile" on page 213](#).
- Delete a resource profile. See ["Delete a Resource Profile" on page 213](#).
- View the details of a resource profile—To do this, select the resource profile for which you want to view the details and follow the available options:
 - Click **More** and select **Detailed View**.
 - Right-click on the selected resource profile and select **Detailed View**.
 - Mouse over to the left of the selected resource profile and click **Detailed View**.
- Filter the resource profiles based on select criteria. To do this, select the filter icon at the upper-right corner of the Resource Profiles table. The columns in the grid change to accept filter options. Type the filter options; the table displays only the data that fits the filtering criteria.
- Show or hide columns in the resource profiles table. To do this, click the Show Hide Columns icon in the upper-right corner of the Resource Profiles table and select the options you want to view or deselect the options you want to hide on the page.
- Advance search for resource profiles. To do this, use the search text box present above the table grid. The search includes the logical operators as part of the filter string. In the search text box, when you hover over the icon, it displays an example filter condition. When you start entering the search string, the icon indicates whether the filter string is valid or not.

NOTE: You can search only the resource profile name.

For an advanced search:

1. Enter the search string in the text box.

Based on your input, a list of items from the filter context menu appears.

2. Select a value from the list and then select a valid operator based on which you want to perform the advanced search operation.

NOTE: Press Spacebar to add an AND operator or OR operator to the search string. Press backspace at any point of time while entering a search criteria, only one character is deleted.

- 3. Press Enter to display the search results in the grid.

Field Descriptions

Table 53 on page 208 describes the fields on the Resource Profiles page.

Table 53: Fields on the Resource Profiles Page

Field	Description
Profile Name	Displays the resource (security) profile names.
Configured Resource	Displays the configured resource(s).
Logical Systems/Tenants	Displays the logical system or tenants created.

RELATED DOCUMENTATION

Global Settings 208
Add a Resource Profile 209
Edit a Resource Profile 213
Delete a Resource Profile 213

Global Settings

You are here: **Device Administration** > **Multi Tenancy** > **Resource Profiles**.

To add global settings:

- 1. Click the **Global Settings** on the upper-right corner of the Resource Profiles page.
The Global Settings page appears.
- 2. Complete the configuration according to the guidelines provided in [Table 54 on page 209](#).
- 3. Click **OK** to save the changes. If you want to discard your changes, click **Cancel**.

Table 54: Fields on the Global Settings page

Field	Action
Enable CPU limit	Enable or disable the CPU limit.
CPU Target	Specify the targeted CPU utilization allowed for the whole system (0 through 100 percent). Set a CPU target. You can enable disable this option to set the value. This will be applicable to all the logical system resource profiles. If you set 50 % here, then none of the profile(s) can have a value more than this and all the profiles should share this 50% of the CPU.

RELATED DOCUMENTATION

[About the Resource Profiles Page | 206](#)

[Add a Resource Profile | 209](#)

[Edit a Resource Profile | 213](#)

[Delete a Resource Profile | 213](#)

Add a Resource Profile

You are here: **Device Administration** > **Multi Tenancy** > **Resource Profiles**.

To add a resource profile:

1. Click **+** available on the upper-right corner of the Resource Profile page.
The Add Resource Profile page appears.
2. Complete the configuration according to the guidelines provided in [Table 55 on page 209](#).
3. Click **OK** to save the changes. If you want to discard your changes, click **Cancel**.

Table 55: Fields on the Add Resource Profile Page

Field	Description
General	

Table 55: Fields on the Add Resource Profile Page *(Continued)*

Field	Description
Profile Name	Enter a name of the security profile. The string must contain an alphanumeric character and can include underscores; no spaces allowed; 31 characters maximum.
IPS Policy	Select the IPS policy from the list.
Resource Allocation	
nat-pat-portnum	Specify the maximum quantity and the reserved quantity of ports for the logical system as part of its security profile.
dslite-softwire-initiator	Specify the number of IPv6 dual-stack lite (DS-Lite) softwire initiators that can connect to the softwire concentrator configured in either a user logical system or the primary logical system.
cpu	Specify the percentage of CPU utilization that is always available to a logical system.
appfw-rule	Specify the number of application firewall rule configurations that a primary administrator can configure for a primary logical system or user logical system when the security profile is bound to the logical systems.
nat-interface-port-ol	Specify the number of application firewall rule set configurations that a primary administrator can configure for a primary logical system or user logical system when the security profile is bound to the logical systems.
nat-rule-referenced-prefix	Specify the security NAT interface port overloading the quota of a logical system.
nat-port-ol-ipnumber	Specify the number of NAT port overloading IP number configurations that user logical system administrators and primary logical system administrators can configure for their logical systems if the security profile is bound to the logical systems.

Table 55: Fields on the Add Resource Profile Page *(Continued)*

Field	Description
nat-cone-binding	Specify the number of NAT cone binding configurations that user logical system administrators and primary logical system administrators can configure for their logical systems if the security profile is bound to the logical systems.
nat-static-rule	Specify the number of NAT static rule configurations that user logical system administrators and primary logical system administrators can configure for their logical systems if the security profile is bound to the logical systems.
nat-destination-rule	Specify the number of NAT destination rule configurations that user logical system administrators and primary logical system administrators can configure for their logical systems if the security profile is bound to the logical systems.
nat-source-rule	Specify the NAT source rule configurations that user logical system administrators and primary logical system administrators can configure for their logical systems if the security profile is bound to the logical systems.
nat-nopat-address	Specify the number of NAT without port address translation configurations that user logical system administrators and primary logical system administrators can configure for their logical systems if the security profile is bound to the logical systems.
nat-pat-address	Specify the number of NAT with port address translation (PAT) configurations that user logical system administrators and primary logical system administrators can configure for their logical systems if the security profile is bound to the logical systems.
nat-destination-pool	Specify the number of NAT destination pool configurations that user logical system administrators and primary logical system administrators can configure for their logical systems if the security profile is bound to the logical systems.
nat-source-pool	Specify the NAT source pool configurations that user logical system administrators and primary logical system administrators can configure for their logical systems if the security profile is bound to the logical systems.
flow-gate	Specify the number of flow gates, also known as pinholes that user logical system administrators and primary logical system administrators can configure for their logical systems if the security profile is bound to the logical systems.

Table 55: Fields on the Add Resource Profile Page *(Continued)*

Field	Description
flow-session	Specify the number of flow sessions that user logical system administrators and primary logical system administrators can configure for their logical systems if the security profile is bound to the logical systems.
policy	Specify the number of security policies with a count that user logical system administrators and primary logical system administrators can configure for their logical systems if the security profile is bound to the logical systems.
security-log-stream-number	Specify the security log stream number.
scheduler	Specify the number of schedulers that user logical system administrators and primary logical system administrators can configure for their logical systems if the security profile is bound to the logical systems.
zone	Specify the zones that user logical system administrators and primary logical system administrators can configure for their logical systems if the security profile is bound to the logical systems.
auth-entry	Specify the number of firewall authentication entries that user logical system administrators and primary logical system administrators can configure for their logical systems if the security profile is bound to the logical systems.
address-book	Specify the application firewall profile quota of a logical system.
Reserved	A reserved quota that guarantees that the resource amount specified is always available to the logical system.
Maximum	A maximum allowed quota.
Range	The minimum and maximum range permitted for each corresponding resource name.

RELATED DOCUMENTATION

[About the Resource Profiles Page | 206](#)

[Global Settings | 208](#)

[Edit a Resource Profile | 213](#)

[Delete a Resource Profile | 213](#)

Edit a Resource Profile

You are here: **Device Administration** > **Multi Tenancy** > **Resource Profiles**.

To edit a resource profile:

1. Select the existing resource profiles that you want to edit on the Resource Profiles page.
2. Click the pencil icon available on the upper-right corner of the page.

The Edit Resource Profiles page appears with editable fields. For more information on the options, see ["Add a Resource Profile" on page 209](#).

3. Click **OK** to save the changes.

RELATED DOCUMENTATION

[About the Resource Profiles Page | 206](#)

[Global Settings | 208](#)

[Add a Resource Profile | 209](#)

[Delete a Resource Profile | 213](#)

Delete a Resource Profile

You are here: **Device Administration** > **Multi Tenancy** > **Resource Profile**.

To delete Resource Profile(s):

1. Select the resource profiles that you want to delete on the Resource Profiles page.
2. Click the delete icon available on the upper-right corner of the page.
3. Click **Yes** to delete or click **No** to retain the profile.

RELATED DOCUMENTATION

About the Resource Profiles Page 206
Global Settings 208
Add a Resource Profile 209
Edit a Resource Profile 213

Multi Tenancy—Interconnect Ports

IN THIS CHAPTER

- [About the Interconnect Ports Page | 215](#)
- [Add a LT Logical Interface | 217](#)
- [Edit a LT Logical Interface | 224](#)
- [Delete a Logical Interface | 224](#)
- [Search for Text in an Interconnect Ports Table | 224](#)

About the Interconnect Ports Page

IN THIS SECTION

- [Tasks You Can Perform | 215](#)
- [Field Descriptions | 216](#)

You are here: **Device Administration** > **Multi Tenancy** > **Interconnect Ports**.

On SRX Series Firewalls, the logical tunnel interface is used to interconnect logical systems. Use this page to interconnect logical system that serves as an internal virtual private LAN service (VPLS) switch connecting one logical system on the device to another.

NOTE: This menu is available only for SRX4000 line of devices and SRX5000 line of devices.

Tasks You Can Perform

You can perform the following tasks from this page:

- Create a LT Logical Interface. See ["Add a LT Logical Interface" on page 217.](#)
- Edit a LT Logical Interface. See ["Edit a LT Logical Interface" on page 224.](#)
- Delete an Interconnect Interface. See ["Delete a Logical Interface" on page 224.](#)
- Search for Text in an Interconnect Ports table. See ["Search for Text in an Interconnect Ports Table" on page 224.](#)

Field Descriptions

[Table 56 on page 216](#) describes the fields on the Interconnect ports page.

Table 56: Fields on the Interconnect Ports Page

Field	Description
Interface	Displays the interface name. Logical interfaces configured under this interface appear in a collapsible list under the physical interface.
Link Status	Displays the operational status of the link. Status can be either Up or Down.
IP Addresses	Displays the configured IP addresses. Multiple IP addresses configured on one logical interface are displayed in a collapsible list under the logical interface.
Encapsulation	Displays the mode of encapsulation. Encapsulation is the process of taking data from one protocol and translating it into another protocol, so the data can continue across a network. It can from the following points: • Ethernet • Frame Relay • Ethernet VPLS Ethernet and Frame Relay are used if logical tunnel interfaces connected between two logical systems. Ethernet VPLS will be used on logical tunnel interface which is connecting VPLS switch to logical system.
LSYS/Tenant/VPLS Switch	Displays the name of the logical system or the name of VPLS Switch.

Table 56: Fields on the Interconnect Ports Page *(Continued)*

Field	Description
Peer Interface	Displays the peer details.
Peer Encapsulation	Displays the peer encapsulation mode.
Peer LSYS/VPLS Switch	Displays the name of the peer logical system and VPLS Switch.
Type	Displays the type for logical interface—Logical System, Tenant, or VPLS Switch.

RELATED DOCUMENTATION

[Add a LT Logical Interface](#) | 217

Add a LT Logical Interface

You are here: **Device Administration** > **Multi Tenancy** > **Interconnect Ports**.

To add a LT logical interface:

1. Click **+** available on the upper-right corner of the Interconnect Ports page.
The Create LT Logical Interface page appears.
2. Complete the configuration according to the guidelines provided in [Table 57 on page 217](#).
3. Click **OK** to save the changes. If you want to discard your changes, click **Cancel**.
If you click **OK**, a new LT logical interface with the provided configuration is created.

[Table 57 on page 217](#) provides guidelines on using the fields on the Create LT Logical Interface page.

Table 57: Fields on the Create LT Logical Interface Page

Field	Description
Local Details	

Table 57: Fields on the Create LT Logical Interface Page (*Continued*)

Field	Description
Unit	Enter the Logical unit number for interface.
Type	Select a logical interface type from the list. The options available are Logical System, Tenant, and VPLS Switch.
Logical System	This option is available when you select the logical interface type as Logical System. Select a logical system from the list. If not present in the list, then we need to create a logical system. NOTE: Starting from Junos OS 19.1R1, the user interface will auto complete the logical system names when you type the partial name.
Tenant	This option is available when you select the logical interface type as Tenant. Select a tenant from the list. NOTE: Starting from Junos OS 19.1R1, the user interface will auto complete the tenant names when you type the partial name.
VPLS Switch	This option is not available if the logical interface type is VPLS Switch. Select a VPLS switch from the list.
Description	Enter description for the interface.

Table 57: Fields on the Create LT Logical Interface Page (*Continued*)

Field	Description
IPv4 Address	NOTE: This option is not available if the logical interface type is VPLS Switch. Specify the IPv4 address. To add an IPv4 address: 1. Click + at the upper right of the IPv4 Address table. 2. Enter the following details: • IPv4 address—Enter an IPv4 address. IP Addresses added here would be used as interconnect IP. • Prefix Length—Enter the prefix length. This specifies the number of bits set in the subnet mask. 3. Click the tick mark to add the IPv4 address or click X to discard the changes. To edit an IPv4 address: 1. Select an existing IPv4 address and click the pencil icon at the upper right of the IPv4 Address table. 2. Edit the IPv4 address and prefix length. 3. Click the tick mark to add the IPv4 address or click X to discard the changes. To delete an IPv4 address: 1. Select one or more existing IPv4 addresses and click the delete icon at the upper right of the IPv4 Address table. 2. Click OK to delete the IPv4 address. If you want to discard the changes, click Cancel.

Table 57: Fields on the Create LT Logical Interface Page (*Continued*)

Field	Description
IPv6 Address	NOTE: This option is not available if the logical interface type is VPLS Switch. Specify the IPv6 address. To add an IPv6 address: 1. Click + at the upper right of the IPv6 Address table. 2. Enter the following details: • IPv6 address—Enter an IPv6 address. IP Addresses added here would be used as interconnect IP. • Prefix Length—Enter the prefix length. This specifies the number of bits set in the subnet mask. 3. Click the tick mark to add the IPv6 address or click X to discard the changes. To edit an IPv6 address: 1. Select an existing IPv6 address and click the pencil icon at the upper right of the IPv6 Address table. 2. Edit the IPv6 address and prefix length. 3. Click the tick mark to add the IPv6 address or click X to discard the changes. To delete an IPv6 address: 1. Select one or more existing IPv6 addresses and click the delete icon at the upper right of the IPv6 Address table. 2. Click OK to delete the IPv6 address. If you want to discard the changes, click Cancel.
Peer Details	
Type	Select any one of the connection types from the list: • Logical system • Tenant • VPLS Switch

Table 57: Fields on the Create LT Logical Interface Page (*Continued*)

Field	Description
Logical System	This option is available when you select the connection type as Logical System. Select a logical system from the list. If not present in the list, then we need to create a logical system.
Tenant	This option is available when you select the connection type as Tenant. Select a tenant from the list.
VPLS Switch	This option is available when you select the connection type as VPLS Switch. Select a VPLS switch from the list.
Unit	Enter the peering logical system unit number.
Description	Specify the interface description. Enter description for the interface.

Table 57: Fields on the Create LT Logical Interface Page (*Continued*)

Field	Description
IPv4 Address	NOTE: This option is not available if the logical interface type is VPLS Switch. Specify the IPv4 address. To add an IPv4 address: 1. Click + at the upper right of the IPv4 Address table. 2. Enter the following details: • IPv4 address—Enter an IPv4 address. IP Addresses added here would be used as interconnect IP. • Prefix Length—Enter the prefix length. This specifies the number of bits set in the subnet mask. 3. Click the tick mark to add the IPv4 address or click X to discard the changes. To edit an IPv4 address: 1. Select an existing IPv4 address and click the pencil icon at the upper right of the IPv4 Address table. 2. Edit the IPv4 address and prefix length. 3. Click the tick mark to add the IPv4 address or click X to discard the changes. To delete an IPv4 address: 1. Select one or more existing IPv4 addresses and click the delete icon at the upper right of the IPv4 Address table. 2. Click OK to delete the IPv4 address. If you want to discard the changes, click Cancel.

Table 57: Fields on the Create LT Logical Interface Page (*Continued*)

Field	Description
IPv6 Address	NOTE: This option is not available if the logical interface type is VPLS Switch. Specify the IPv6 address. To add an IPv6 address: 1. Click + at the upper right of the IPv6 Address table. 2. Enter the following details: • IPv6 address—Enter an IPv6 address. IP Addresses added here would be used as interconnect IP. • Prefix Length—Enter the prefix length. This specifies the number of bits set in the subnet mask. 3. Click the tick mark to add the IPv6 address or click X to discard the changes. To edit an IPv6 address: 1. Select an existing IPv6 address and click the pencil icon at the upper right of the IPv6 Address table. 2. Edit the IPv6 address and prefix length. 3. Click the tick mark to add the IPv6 address or click X to discard the changes. To delete an IPv6 address: 1. Select one or more existing IPv6 addresses and click the delete icon at the upper right of the IPv6 Address table. 2. Click OK to delete the IPv6 address. If you want to discard the changes, click Cancel.

RELATED DOCUMENTATION

[Edit a LT Logical Interface](#) | 224

Edit a LT Logical Interface

You are here: **Device Administration** > **Multi Tenancy** > **Interconnect Ports**.

To edit a LT logical interface:

1. Select an existing logical interface that you want to edit on the Interconnect Ports page.
2. Click the pencil icon available on the upper-right corner of the page.

The Edit LT Logical Interface page appears with editable fields. For more information on the fields, see ["Add a LT Logical Interface" on page 217](#).

3. Click **OK** to save the changes or click **Cancel** to discard the changes.

RELATED DOCUMENTATION

| [Delete a Logical Interface](#) | 224

Delete a Logical Interface

You are here: **Device Administration** > **Multi Tenancy** > **Interconnect Ports**.

To delete logical interface(s):

1. Select one or more the logical interfaces that you want to delete on the Interconnect Ports page.
2. Click the delete icon available on the upper-right corner of the page.
3. Click **Yes** to delete or click **No** to retain the logical interface.

RELATED DOCUMENTATION

| [Search for Text in an Interconnect Ports Table](#) | 224

Search for Text in an Interconnect Ports Table

You are here: **Device Administration** > **Multi Tenancy** > **Interconnect Ports**.

You can use the search icon in the upper-right corner of the Interconnect Ports page to search for text containing letters and special characters on that page.

To search for text:

1. Click the search icon and enter partial text or full text of the keyword in the search bar.
The search results are displayed.
2. Click **X** next to a search keyword or click **Clear All** to clear the search results.

RELATED DOCUMENTATION

| [About the Interconnect Ports Page](#) | 215

Multi Tenancy—Logical Systems

IN THIS CHAPTER

- [About the Logical Systems Page | 226](#)
- [Add a Logical System | 228](#)
- [Edit a Logical System | 239](#)
- [Delete a Logical System | 240](#)
- [Search Text in Logical Systems Table | 240](#)

About the Logical Systems Page

IN THIS SECTION

- [Tasks You Can Perform | 226](#)
- [Field Descriptions | 227](#)

You are here: **Device Administration** > **Multi Tenancy** > **Logical Systems**.

NOTE: This menu is supported for only SRX4000 Series Firewalls, SRX5000 Series Firewalls, SRX1500, SRX1600, and SRX2300 Firwalls.

Use this page to view, add, and delete Logical System.

Tasks You Can Perform

You can perform the following tasks from this page:

- Create a logical system. See ["Add a Logical System" on page 228](#).
- Edit a logical system. See ["Edit a Logical System" on page 239](#).
- Delete a logical system. See ["Delete a Logical System" on page 240](#).
- Search for Text in a logical system table. See ["Search Text in Logical Systems Table" on page 240](#).
- View the details of the logical systems—To do this, select the logical systems for which you want to view the details and follow the available options:
 - Click **More** and select **Detailed View**.
 - Right-click on the selected tenant and select **Detailed View**.
 - Mouse over to the left of the selected tenant and click **Detailed View**.
- Filter the logical systems based on select criteria. To do this, select the filter icon at the upper-right corner of the logical systems table. The columns in the grid change to accept filter options. Type the filter options; the table displays only the data that fits the filtering criteria.
- Show or hide columns in the logical systems table. To do this, click the Show Hide Columns icon in the upper-right corner of the logical systems table and select the options you want to view or deselect the options you want to hide on the page.
- Root users can switch to Logical system context. To do this, click **Enter LSYS** on the upper right of the table. See [Table 59 on page 228](#).

Field Descriptions

[Table 58 on page 227](#) describes the fields on the Logical Systems page.

Table 58: Fields on the Logical Systems Page

Field	Description
Name	Displays the name of the logical system.
Resource Profile	Displays the name of the resource profile.
Users	Displays the logical system admin and users.
Assigned Interfaces	Displays the assigned logical interfaces.

Table 58: Fields on the Logical Systems Page *(Continued)*

Field	Description
Zone	Displays the zone of the resource profile.

Table 59 on page 228 describes the options on the LSYS page.

Table 59: Enter LSYS Page Options

Field	Description
Select Widget	Specifies the following widgets: • Logical System Profile. • Logical System CPU Profile. • Logical System FW No Hits. Drag and drop a widget to add it to your dashboard. Once widgets are added to the dashboard, they can be edited, refreshed, or removed by hovering over the widget header and selecting the option. The manual refresh option must be used to refresh the widget data.
Add Tabs	Click + to add a dashboard.

RELATED DOCUMENTATION

[Add a Logical System | 228](#)

[Edit a Logical System | 239](#)

[Delete a Logical System | 240](#)

[Search Text in Logical Systems Table | 240](#)

Add a Logical System

You are here: **Device Administration > Multi Tenancy > Logical Systems.**

To add a logical system:

1. Click **+** available on the upper-right corner of the Logical Systems page.
The Create Logical Systems page appears.
2. Complete the configuration according to the guidelines provided in [Table 60 on page 229](#).
3. Click **Finish** to save the changes. If you want to discard your changes, click **Cancel**.

Table 60: Fields on the Add Logical Systems Page

Field	Description
General Details	
Name	Enter a logical system name of a selected Resource Profile. Only one Resource Profile can be selected, per logical system. The string must contain alphanumeric characters, colons, periods, dashes, and underscores. No spaces are allowed; maximum length is 63 characters.
Logical System Resource Profile	
Click one: • Add icon (+)—Adds Resource Profiles. • Edit icon (/)—Edits the selected Resource Profiles. • Delete icon (X)—Deletes the selected Resource Profiles. • Search icon—Enables you to search a Resource Profile in the grid. • Filter icon —Enables you to filter the selected option in the grid. • Show Hide Column Filter icon—Enables you to show or hide a column in the grid.	
Profile Name	Enter a name of the security profile. The string must contain an alphanumeric character and can include underscores; no spaces allowed; 31 characters maximum.
IPS Policy	Select an IPS policy from the list.
Resource Allocation	

Table 60: Fields on the Add Logical Systems Page *(Continued)*

Field	Description
Resource Name	Displays the resource name. • nat-pat-portnum—Specify the maximum quantity and the reserved quantity of ports for the logical system as part of its security profile. • dslite-softwire-initiator—Specify the number of IPv6 dual-stack lite (DS-Lite) softwire initiators that can connect to the softwire concentrator configured in either a user logical system or the primary logical system. • cpu—Specify the percentage of CPU utilization that is always available to a logical system. • appfw-rule—Specify the number of application firewall rule configurations that a primary administrator can configure for a primary logical system or user logical system when the security profile is bound to the logical systems. • nat-interface-port-ol—Specify the number of application firewall rule set configurations that a primary administrator can configure for a primary logical system or user logical system when the security profile is bound to the logical systems. • nat-rule-referenced-prefix—Specify the security NAT interface port overloading the quota of a logical system. • nat-port-ol-ipnumber—Specify the number of NAT port overloading IP number configurations that user logical system administrators and primary logical system administrators can configure for their logical systems if the security profile is bound to the logical systems. • nat-cone-binding—Specify the number of NAT cone binding configurations that user logical system administrators and primary logical system administrators can configure for their logical systems if the security profile is bound to the logical systems. • nat-static-rule—Specify the number of NAT static rule configurations that user logical system administrators and primary logical system administrators can configure for their logical systems if the security profile is bound to the logical systems. • nat-destination-rule—Specify the number of NAT destination rule configurations that user logical system administrators and primary logical system administrators

Table 60: Fields on the Add Logical Systems Page (Continued)

Field	Description
	can configure for their logical systems if the security profile is bound to the logical systems. • nat-source-rule—Specify the NAT source rule configurations that user logical system administrators and primary logical system administrators can configure for their logical systems if the security profile is bound to the logical systems. • nat-nopat-address—Specify the number of NAT without port address translation configurations that user logical system administrators and primary logical system administrators can configure for their logical systems if the security profile is bound to the logical systems. • nat-pat-address—Specify the number of NAT with port address translation (PAT) configurations that user logical system administrators and primary logical system administrators can configure for their logical systems if the security profile is bound to the logical systems. • nat-destination-pool—Specify the number of NAT destination pool configurations that user logical system administrators and primary logical system administrators can configure for their logical systems if the security profile is bound to the logical systems. • nat-source-pool—Specify the NAT source pool configurations that user logical system administrators and primary logical system administrators can configure for their logical systems if the security profile is bound to the logical systems. • flow-gate—Specify the number of flow gates, also known as pinholes that user logical system administrators and primary logical system administrators can configure for their logical systems if the security profile is bound to the logical systems. • flow-session—Specify the number of flow sessions that user logical system administrators and primary logical system administrators can configure for their logical systems if the security profile is bound to the logical systems. • policy—Specify the number of security policies with a count that user logical system administrators and primary logical system administrators can configure for their logical systems if the security profile is bound to the logical systems. • security-log-stream-number—Specify the Security log stream number quota of a logical system.

Table 60: Fields on the Add Logical Systems Page *(Continued)*

Field	Description
	• scheduler—Specify the number of schedulers that user logical system administrators and primary logical system administrators can configure for their logical systems if the security profile is bound to the logical systems. • zone—Specify the zones that user logical system administrators and primary logical system administrators can configure for their logical systems if the security profile is bound to the logical systems. • auth-entry—Specify the number of firewall authentication entries that user logical system administrators and primary logical system administrators can configure for their logical systems if the security profile is bound to the logical systems. • address-book—Specify the entries in the address book. Address book entries can include any combination of IPv4 addresses, IPv6 addresses, DNS names, wildcard addresses, and address range.
Range	Display range for each resource.
Edit	Select a resource and click on the pencil icon to edit Reserved and Maximum fields.
Reserved	Specify reserved quota that guarantees that the resource amount specified is always available to the logical system.
Maximum	Specify the maximum allowed quota.
IPS Max Sessions	Enter maximum number of sessions. Use up and down arrow keys to increase or decrease the number.

Users

Click one:

- Add icon (+)—Create users.
- Edit icon (/)—Edit the selected users.
- Delete icon (X)—Delete the selected users.

Table 60: Fields on the Add Logical Systems Page *(Continued)*

Field	Description
Create-Edit users	
Username	Enter a username. Maximum length is 64 characters.
Role	- Logical System Administrator - Read only Access User NOTE: LSYS Read Only user can only view the options but cannot modify them.
Password	Enter a password for the user which is more than 6 characters but less than 128 characters.
Confirm Password	Re-enter the new password to confirm.
Interfaces	
Click One:	
Enable/Disable –Enable or disable the physical interface. - Add icon (+)—Add logical interfaces. - Edit icon (/)—Edit the selected users. - Delete icon (X)—Delete the selected users.	
Create-Edit logical interfaces	
General	
Physical Interface Name	Displays the name of the Physical Interface.
Logical Interface Unit	Enter the logical Interface Unit

Table 60: Fields on the Add Logical Systems Page *(Continued)*

Field	Description
Description	Enter the description.
VLAN ID	Enter the VLAN ID. VLAN ID is mandatory.
IPv4 Address	
IPv4 Address	Click + and enter a valid IP address.
Subnet Mask	Enter a valid subnet mask.
Delete	Select the IPv4 address and click the delete icon to delete the address.
IPv6 Address	
IPv6 Address	Enter a valid IP address.
Subnet Mask	Enter a valid subnet mask.
Delete	Select the IPv6 address and click the delete icon to delete the address.
Zones	
Click One:	
• Add icon (+)—Create security zones. • Edit icon (/)—Edit the selected security zones. • Delete icon (X)—Delete the selected security zone. • Search icon—Search for a security zone.	
Create-Edit Security Zones	
General	

Table 60: Fields on the Add Logical Systems Page *(Continued)*

Field	Description
Name	Enter a valid name of the zone.
Description	Enter a description of the zone.
Application Tracking	Enables the application tracking support.
Source Identity Log	Enable source identity log for this zone.
Interfaces	Select an interface from the Available column and move it to Selected column.
Selected interfaces	Displays the selected interfaces.

Table 60: Fields on the Add Logical Systems Page (*Continued*)

Field	Description
System Services	Select system services from the following options: NOTE: Select the Except check box to allow services other than the selected services. • all—Specify all system services. • any-service—Specify services on entire port range. • appqoe—Specify the APPQOE active probe service. • bootp—Specify the Bootp and dhcp relay agent service. • dhcp—Specify the Dynamic Host Configuration Protocol. • dhcpv6—Enable Dynamic Host Configuration Protocol for IPV6. • dns—Specify the DNS service. • finger—Specify the finger service. • ftp—Specify the FTP protocol. • http—Specify the web management using HTTP. • https—Specify the web management using HTTP secured by SSL. • ident-reset—Specify the send back TCP RST IDENT request for port 113. • ike—Specify the Internet key exchange. • lsping—Specify the Label Switched Path ping service. • netconf—Specify the NETCONF Service. • ntp—Specify the network time protocol service. • ping—Specify the internet control message protocol. • r2cp—Enable Radio-Router Control Protocol service. • reverse-ssh—Specify the reverse SSH Service. • reverse-telnet—Specify the reverse telnet Service.

Table 60: Fields on the Add Logical Systems Page *(Continued)*

Field	Description
	• rlogin—Specify the Rlogin service • rpm—Specify the Real-time performance monitoring. • rsh—Specify the Rsh service. • snmp—Specify the Simple Network Management Protocol Service. • snmp-trap—Specify the Simple Network Management Protocol trap. • ssh—Specify the SSH service. • tcp-encap—Specify the TCP encapsulation service. • telnet—Specify the Telnet service. • tftp—Specify the TFTP • traceroute—Specify the traceroute service. • webapi-clear-text—Specify the Webapi service using http. • webapi-ssl—Specify the Webapi service using HTTP secured by SSL. • xnm-clear-text—Specify the JUNOScript API for unencrypted traffic over TCP. • xnm-ssl—Specify the JUNOScript API Service over SSL.

Table 60: Fields on the Add Logical Systems Page (*Continued*)

Field	Description
Protocols	Select a protocol from the following options: NOTE: Select the Except check box to allow protocols other than the selected protocols. • bfd—Bidirectional Forwarding Detection. • bgp—Broder Gateway protocol. • dvmrp—Distance Vector Multicast Routing Protocol. • igmp—Internet group management protocol. • ldp— label Distribution Protocol. • msdp—Multicast source discovery protocol. • nhrp—Next Hop Resolution Protocol. • ospf—Open shortest path first. • ospf3—Open shortest path first version 3. • pgm—Pragmatic General Multicast. • pim—Protocol independent multicast. • rip—Routing information protocol. • ripng—Routing information protocol next generation. • router-discovery—Router Discovery. • rsvp—Resource reservation protocol. • sap—Session Announcement Protocol. • vrrp—Virtual Router redundancy protocol.
Traffic Control Options	Enable this option to send RST for NON-SYN packet not matching TCP session.

RELATED DOCUMENTATION

About the Logical Systems Page 226
Add a Logical System 228
Edit a Logical System 239
Delete a Logical System 240
Search Text in Logical Systems Table 240

Edit a Logical System

You are here: **Device Administration** > **Multi Tenancy** > **Logical Systems**.

To edit a logical system profile:

1. Select the existing logical system profile that you want to edit on the Logical System Profile page.
2. Click the pencil icon available on the upper-right corner of the page.

The Edit a Logical System Profile page appears with editable fields. For more information on the options, see ["Add a Logical System" on page 228](#).

NOTE: Starting in Junos OS 22.3R1 release, you can assign the customized user role to the logical systems users. To do that:

- a. Select an existing logical system profile and click the pencil icon.
- b. Expand User Details and click +.
The Create User page appears.
- c. Select the logical systems customized role from the list in the Role field.
- d. Click **OK**.

3. Click **OK** to save the changes.

RELATED DOCUMENTATION

About the Logical Systems Page 226
Add a Logical System 228
Delete a Logical System 240
Search Text in Logical Systems Table 240

Delete a Logical System

You are here: **Device Administration** > **Multi Tenancy** > **Logical Systems**.

To delete a logical system:

1. Select the logical system that you want to delete on the Logical System page.
2. Click the delete icon available on the upper-right corner of the page.
3. Click **Yes** to delete or click **No** to retain the profile.

RELATED DOCUMENTATION

[About the Logical Systems Page | 226](#)

[Add a Logical System | 228](#)

[Edit a Logical System | 239](#)

[Search Text in Logical Systems Table | 240](#)

Search Text in Logical Systems Table

You are here: **Device Administration** > **Multi Tenancy** > **Logical Systems**.

You can use the search icon in the upper-right corner of a page to search for text containing letters and special characters on that page.

To search for text:

1. Click the search icon and enter a partial text or full text of the keyword in the search bar and execute.
The search results are displayed.
2. Click **X** next to a search keyword or click **Clear All** to clear the search results.

RELATED DOCUMENTATION

[About the Logical Systems Page | 226](#)

[Add a Logical System | 228](#)

[Edit a Logical System | 239](#)

[Delete a Logical System | 240](#)

Multi Tenancy—Tenants

IN THIS CHAPTER

- [About the Tenants Page | 241](#)
- [Add a Tenant | 243](#)
- [Edit a Tenant | 251](#)
- [Delete a Tenant | 251](#)
- [Search Text in Tenants Table | 252](#)

About the Tenants Page

IN THIS SECTION

- [Tasks You Can Perform | 241](#)
- [Field Descriptions | 242](#)

You are here: **Device Administration** > **Multi Tenancy** > **Tenants**.

You can use this page to add, view, and delete Tenants.

NOTE: This menu is supported for only SRX4000 Series Firewalls, SRX5000 Series Firewalls, SRX1500, SRX1600, and SRX2300 Firewalls.

Tasks You Can Perform

You can perform the following tasks from this page:

- Create a tenant. See ["Add a Tenant" on page 243](#).

- Edit a tenant. See ["Edit a Tenant" on page 251.](#)
- Delete a tenant. See ["Delete a Tenant" on page 251.](#)
- Search for Text in a tenants table. See ["Search Text in Tenants Table" on page 252.](#)
- View the details of the tenants—To do this, select the tenant for which you want to view the details and follow the available options:
 - Click **More** and select **Detailed View**.
 - Right-click on the selected tenant and select **Detailed View**.
 - Mouse over to the left of the selected tenant and click **Detailed View**.
- Filter the tenant based on select criteria. To do this, select the filter icon at the upper-right corner of the tenant table. The columns in the grid change to accept filter options. Type the filter options; the table displays only the data that fits the filtering criteria.
- Show or hide columns in the tenant table. To do this, click the Show Hide Columns icon in the upper-right corner of the tenant table and select the options you want to view or deselect the options you want to hide on the page.

Field Descriptions

[Table 61 on page 242](#) describes the fields on the Tenants page.

Table 61: Fields on the Tenants Page

Field	Description
Name	Displays the name of the tenant system.
Resource Profile	Displays the name of the resource profile.
Users	Displays the tenant system admin and users, and its associated permissions.
Assigned Interfaces	Displays the assigned logical interfaces.
Zones	Displays the zones for the tenant.
Routing Instance	Displays the routing instance that is explicitly assigned to the tenant system.

RELATED DOCUMENTATION

Add a Tenant 243
Edit a Tenant 251
Delete a Tenant 251
Search Text in Tenants Table 252

Add a Tenant

You are here: **Device Administration** > **Multi Tenancy** > **Tenants**.

To add a tenant:

1. Click **+** available on the upper-right corner of the Tenants page.
The Create Tenant page appears.
2. Complete the configuration according to the guidelines provided in [Table 62 on page 243](#).
3. Click **OK** to save the changes. If you want to discard your changes, click **Cancel**.

Table 62: Fields on the Create Tenant Page

Field	Description
General Details	
Name	Enter a name for the tenant. Enter a unique string of alphanumeric characters, colons, periods, dashes, and underscores. No spaces are allowed; maximum length is 63 characters.
Routing Instance	By default, the tenant name is taken as the routing instance name.
Tenant Resource Profile	
Profile Name	Displays the name of the resource profile.
Configured Resources	Displays the resources and its reserved or maximum quantity assigned for this resource profile.

Table 62: Fields on the Create Tenant Page *(Continued)*

Field	Description
Logical Systems/Tenants	Displays other logical systems and/or tenants using this resource profile.

Click one:

- Add icon (+)—Adds resource profiles.
- Edit icon (/)—Edits the selected resource profiles.
- Search icon—Enables you to search a resource profile in the grid.
- Filter icon—Enables you to filter the selected option in the grid.
- Show Hide Column Filter icon—Enables you to show or hide a column in the grid.

Create-Edit Tenant Resource Profile

See ["Add a Resource Profile" on page 209](#) for details on creating and editing resource profile.

User Details

You can define tenant administrators and users.

Click one:

- Add icon (+)—Create users.
- Edit icon (/)—Edit the selected users.
- Delete icon—Delete the selected users.

Create-Edit users

Username	Enter a username. Maximum length is 64 characters.

Table 62: Fields on the Create Tenant Page (*Continued*)

Field	Description
Role	Select an option from the list to specify the role of the user: • Tenant Administrator • Read only Access User NOTE: Logical system or tenant Read Only user can only view the options but cannot modify them.
Password	Specify the password for the user.
Confirm Password	Confirm the password.

Assign Interfaces

Only one logical interface can be part of one tenant, whereas a tenant can have multiple logical interfaces.

Click One:

- **Enable/Disable** —Enable or disable the physical interface.
- Add icon (+)—Add logical interfaces.
- Edit icon (/)—Edit the selected users.
- Delete icon—Delete the selected users.

Create-Edit logical interfaces**General**

Physical Interface Name	Displays the name of the Physical Interface.
Logical Interface Unit	Enter the logical interface unit.
Description	Enter the description.
VLAN ID	Enter the VLAN ID. VLAN ID is mandatory.

Table 62: Fields on the Create Tenant Page *(Continued)*

Field	Description
IPv4 Address	
IPv4 Address	Click + and enter a valid IP address.
Subnet Mask	Enter a valid subnet mask.
Delete	Select the IPv4 address and click the delete icon to delete the address.
IPv6 Address	
IPv6 Address	Enter a valid IP address.
Subnet Mask	Enter a valid subnet mask.
Delete	Select the IPv6 address and click the delete icon to delete the address.
Zone Configuration	
Click One:	
• Add icon (+) – Create security zones. • Edit icon (/) –Edit the selected security zones. • Delete icon (X)–Delete the selected security zone. • Search - Search for a security zone.	
Create-Edit Security Zones	
General	
Name	Enter a valid name of the zone.
Description	Enter a description of the zone.

Table 62: Fields on the Create Tenant Page *(Continued)*

Field	Description
Application Tracking	Enables the application tracking support.
Source Identity Log	Enable source identity log for this zone.
Interfaces	Select an interface from the Available column and move it to Selected column.
Selected interfaces	Displays the selected interfaces.

Table 62: Fields on the Create Tenant Page (*Continued*)

Field	Description
System Services Options	Select system services from the following options: NOTE: Select the Except check box to allow services other than the selected services. • all—Specify all system services. • any-service—Specify services on entire port range. • appqoe—Specify the APPQOE active probe service. • bootp—Specify the Bootp and dhcp relay agent service. • dhcp—Specify the Dynamic Host Configuration Protocol. • dhcpv6—Enable Dynamic Host Configuration Protocol for IPV6. • dns—Specify the DNS service. • finger—Specify the finger service. • ftp—Specify the FTP protocol. • http—Specify the web management using HTTP. • https—Specify the web management using HTTP secured by SSL. • ident-reset—Specify the send back TCP RST IDENT request for port 113. • ike—Specify the Internet key exchange. • lsping—Specify the Label Switched Path ping service. • netconf—Specify the NETCONF Service. • ntp—Specify the network time protocol service. • ping—Specify the internet control message protocol. • r2cp—Enable Radio-Router Control Protocol service. • reverse-ssh—Specify the reverse SSH Service. • reverse-telnet—Specify the reverse telnet Service.

Table 62: Fields on the Create Tenant Page (*Continued*)

Field	Description
	• rlogin—Specify the Rlogin service • rpm—Specify the Real-time performance monitoring. • rsh—Specify the Rsh service. • snmp—Specify the Simple Network Management Protocol Service. • snmp-trap—Specify the Simple Network Management Protocol trap. • ssh—Specify the SSH service. • tcp-encap—Specify the TCP encapsulation service. • telnet—Specify the Telnet service. • tftp—Specify the TFTP • traceroute—Specify the traceroute service. • webapi-clear-text—Specify the Webapi service using http. • webapi-ssl—Specify the Webapi service using HTTP secured by SSL. • xnm-clear-text—Specify the JUNOScript API for unencrypted traffic over TCP. • xnm-ssl—Specify the JUNOScript API Service over SSL.

Table 62: Fields on the Create Tenant Page (*Continued*)

Field	Description
Protocols	Select a protocol from the following options: NOTE: Select the Except check box to allow protocols other than the selected protocols. • bfd—Bidirectional Forwarding Detection. • bgp—Broder Gateway protocol. • dvmrp—Distance Vector Multicast Routing Protocol. • igmp—Internet group management protocol. • ldp—label Distribution Protocol. • msdp—Multicast source discovery protocol. • nhrp—Next Hop Resolution Protocol. • ospf—Open shortest path first. • ospf3—Open shortest path first version 3. • pgm—Pragmatic General Multicast. • pim—Protocol independent multicast. • rip—Routing information protocol. • ripng—Routing information protocol next generation. • router-discovery—Router Discovery. • rsvp—Resource reservation protocol. • sap—Session Announcement Protocol. • vrrp—Virtual Router redundancy protocol.
Traffic Control Options	Enable this option to send RST for NON-SYN packet not matching TCP session.

RELATED DOCUMENTATION

About the Tenants Page 241
Edit a Tenant 251
Delete a Tenant 251
Search Text in Tenants Table 252

Edit a Tenant

You are here: **Device Administration** > **Multi Tenancy** > **Tenants**.

To edit a tenant:

1. Select the existing tenant that you want to edit on the Tenants page.
2. Click the pencil icon available on the upper-right corner of the page.

The Edit a Tenant page appears with editable fields. For more information on the options, see ["Add a Tenant" on page 243](#).

3. Click **OK** to save the changes.

RELATED DOCUMENTATION

About the Tenants Page 241
Add a Tenant 243
Delete a Tenant 251
Search Text in Tenants Table 252

Delete a Tenant

You are here: **Device Administration** > **Multi Tenancy** > **Tenants**.

To delete tenant(s):

1. Select one or more existing tenants that you want to delete on the Tenants page.
2. Click the delete icon available on the upper-right corner of the page.
3. Click **Yes** to delete or click **No** to retain the profile.

RELATED DOCUMENTATION

About the Tenants Page 241
Add a Tenant 243
Edit a Tenant 251
Search Text in Tenants Table 252

Search Text in Tenants Table

You are here: **Device Administration** > **Multi Tenancy** > **Tenants**.

You can use the search icon in the upper-right corner of a page to search for text containing letters and special characters on that page.

To search for text:

1. Click the search icon and enter a partial text or full text of the keyword in the search bar and execute.
The search results are displayed.
2. Click **X** next to a search keyword or click **Clear All** to clear the search results.

RELATED DOCUMENTATION

About the Tenants Page 241
Add a Tenant 243
Edit a Tenant 251
Delete a Tenant 251

Certificates Management—Certificates

IN THIS CHAPTER

- About the Certificates page | 253
- Create a Device Certificate | 255
- Add a Certificate Authority (CA) | 270
- Export a Device Certificate | 274
- Edit a CA Certificate | 275
- Delete a Certificate | 275
- Search Text in the Certificates Table | 276
- Re-Enroll a Device Certificate | 276
- Load CA Certificate | 277
- Reload CA Certificate | 279

About the Certificates page

You are here: **Device Administration** > **Certificate Management** > **Certificates**.

SSL forward proxy ensures secure transmission of data between a client and a server. Before establishing a secure connection, SSL forward proxy checks certificate authority (CA) certificates to verify signatures on server certificates. For this reason, a reasonable list of trusted CA certificates is required to effectively authenticate servers.

You can perform the following tasks:

- View the page by device certificates, certificate authorities (CA), or all.
- Export a device certificate or CSR from the default location to a specific location in your local machine. See Export a Device Certificate ["Export a Device Certificate" on page 274](#).
- Create a device certificate or a CA. Click **Create** available on the upper-right corner of the Certificates page and select **Device Certificates** or **Certificate Authority**.

For more information, see ["Create a Device Certificate" on page 255](#) and ["Add a Certificate Authority \(CA\)" on page 270](#).

- View the details of a certificate. View the details of a certificate—To do this, select the certificate of which you want to view the details and follow the available options:
 - Click **More** and select **Detailed View**.
 - Right-click on the selected certificate and select **Detailed View**.
 - Mouse over to the left of the selected certificate and click **Detailed View**.
- Edit a CA certificate. See ["Edit a CA Certificate" on page 275](#).
- Delete a certificate. See ["Delete a Certificate" on page 275](#).
- Refresh the Certificates page.
- Search for text in a certificate table. See ["Search Text in the Certificates Table" on page 276](#).
- Filter the certificates information based on select criteria. To do this, select the filter icon at the upper-right corner of the table. The columns in the grid change to accept filter options. Type the filter options; the table displays only the data that fits the filtering criteria.
- Show or hide columns in the Certificates table. To do this, use the **Show Hide Columns** icon in the upper-right corner of the page and select the options you want to show or deselect to hide options on the page.

[Table 63 on page 254](#) provides the details of the fields on the Certificates page.

Table 63: Fields on the Certificates Page

Field	Action
Name	Displays the certificate name.
Certificate Chain	Displays an ordered list of certificates, containing a certificate chain name. For example, ROOT CA. This enables receiver to verify that the sender and all CA's are trustworthy.
Type	Displays the certificate type.
Issuer Organization	Displays the details of the authority that issued the certificate.

Table 63: Fields on the Certificates Page *(Continued)*

Field	Action
Status	Displays whether the status of the certificate is valid, expired, and so on. You can also: 1. Renew a Local Self-Signed device certificate. 2. Re-enroll an already enrolled device certificate. See "Re-Enroll a Device Certificate" on page 276. 3. Load a CA certificate. See "Load CA Certificate" on page 277. 4. Re-load a CA certificate. See "Reload CA Certificate" on page 279.
Expiry Date	Displays certificate expiry date.
Digital Signature	Displays the digital signature associated with the certificate.

Create a Device Certificate

IN THIS SECTION

- [Create Device Certificate \(Let's Encrypt\) | 256](#)
- [Create Device Certificate \(Local Self-Signed\) | 257](#)
- [Create Device Certificate \(SCEP\) | 260](#)
- [Create Device Certificate \(ACME\) | 262](#)
- [Create Device Certificate \(CMPv2\) | 264](#)
- [Create Device Certificate \(CSR\) | 266](#)
- [Load Signed Device Certificate \(Externally Generated\) | 269](#)

You are here: **Device Administration** > **Certificate Management** > **Certificates**.

The device certificate options available are:

- Let's Encrypt. See ["Create Device Certificate \(Let's Encrypt\)" on page 256.](#)
- Local Self-Signed. See ["Create Device Certificate \(Local Self-Signed\)" on page 257.](#)
- SCEP. See ["Create Device Certificate \(SCEP\)" on page 260.](#)
- ACME. See ["Create Device Certificate \(ACME\)" on page 262.](#)
- CMPv2. See ["Create Device Certificate \(CMPv2\)" on page 264.](#)
- CSR. See ["Create Device Certificate \(CSR\)" on page 266.](#)
- Externally Generated. See ["Load Signed Device Certificate \(Externally Generated\)" on page 269.](#)

Create Device Certificate (Let's Encrypt)

You are here: **Device Administration** > **Certificate Management** > **Certificates**.

To create a let's encrypt device certificate:

1. Click **Create** available on the upper-right corner of the Certificates page.
2. Click **Device Certificate** and select **Let's Encrypt**.
The Create Device Certificate (Let's Encrypt) page appears.
3. Select **I agree to the Let's encrypt subscriber terms and conditions**.
4. Complete the configuration according to the guidelines provided in [Table 64 on page 256.](#)
5. Click **OK** to save the changes. If you want to discard your changes, click **Cancel** instead.

If you click **OK**, a new device certificate with the provided configuration is created.

Table 64: Fields on the Create Device Certificate (Let's Encrypt) page

Field	Action
CA certificate name	Select one of the CA certificate names from the list or click Add CA certificate to add a new CA Certificate. For details on adding a CA certificate, see "Add CA Certificate" on page 270.
Digital signature	Select a digital signature from the list. That is, RSA-1024, RSA-2048, or RSA-4096. By default, RSA-2048 is selected.
Name	Enter a certificate name.

Table 64: Fields on the Create Device Certificate (Let's Encrypt) page *(Continued)*

Field	Action
Contact email	Enter contact email address.
Auto re-enrollment	
Trigger time	Set the auto re-enrollment trigger time (in days). Default is 65 days and maximum trigger time of 85 days is allowed.
Re-generate key pair	Enable this option to automatically generate a new key pair when a device certificate is automatically re-enrolled.
Subject Alt Name	
Domain names	Click + to add new domain name that you want to associate with the certificate. This can be an FQDN that resolves to an SRX Series Firewall external IP address. Maximum of domain names allowed is five.

RELATED DOCUMENTATION

[About the Certificates page | 253](#)

[Add CA Certificate | 270](#)

[Create Device Certificate \(Local Self-Signed\) | 257](#)

Create Device Certificate (Local Self-Signed)

You are here: **Device Administration** > **Certificate Management** > **Certificates**.

To create a local self-signed device certificate:

1. Click **Create** available on the upper-right corner of the Certificates page.
2. Click **Device Certificate** and select **Local Self-Signed**.

The Create Device Certificate (Local Self-Signed) page appears.

3. Complete the configuration according to the guidelines provided in [Table 65 on page 258](#).

4. Click **OK** to save the changes. If you want to discard your changes, click **Cancel** instead.

If you click **OK**, a new CA certificate with the provided configuration is created.

Table 65: Fields on the Create Device Certificate (Local Self-Signed) page

Field	Action
Digital signature	Select one of the digital signatures from the list. That is, RSA, DSA, ECDSA, and so on. By default, RSA-2048 is selected.
Name	Enter a certificate name.
Subject (Minimum of one field required)	
Domain component	Enter the domain component that you want to associate with the certificate.
Common name	Enter a common name for the certificate.
Organizational unit name	Enter the name of the organizational unit that you want to associate with the certificate.
Organizational name	Enter the name of the organization that you want to associate with this certificate.
Serial number	Device serial number is autopopulated.
Locality	Enter the origin locality name.
State	Enter the origin state name.
Country	Enter the origin country name.

Table 65: Fields on the Create Device Certificate (Local Self-Signed) page (*Continued*)

Field	Action
Subject Alt Name NOTE: For a local certificate, any one field is mandatory.	
Domain name	Enter a domain name that you want to associate with the certificate.
Email	Enter an email address of the entity owning the certificate.
IPv4 address	Enter the IPv4 address of the device.
IPv6 address	This option is available for a local certificate. Enter the IPv6 address of the device.
Advanced	
Digest	Select the digest from the list that you want to associate with the local certificate. For local self-signed certificate (RSA/DSA/ECDSA) options are: SHA-1 digests or SHA-256 digests.
Signing certificate	Enable or disable to sign other certificates.

RELATED DOCUMENTATION

[About the Certificates page](#) | 253

[Add CA Certificate](#) | 270

[Create Device Certificate \(Let's Encrypt\)](#) | 256

[Create Device Certificate \(SCEP\)](#) | 260

Create Device Certificate (SCEP)

You are here: **Device Administration** > **Certificate Management** > **Certificates**.

To create an SCEP certificate:

1. Click **Create** available on the upper-right corner of the Certificates page.
2. Click **Device Certificate** and select **SCEP**.
The Create Device Certificate (SCEP) page appears.
3. Complete the configuration according to the guidelines provided in [Table 66 on page 260](#).
4. Click **OK** to save the changes. If you want to discard your changes, click **Cancel** instead.
If you click **OK**, a new CA certificate with the provided configuration is created.

Table 66: Fields on the Create Device Certificate (SCEP) page

Field	Action
CA certificate name	Select one of the CA certificate names from the list or click Add CA certificate to add a new CA Certificate. For details on adding a CA certificate, see "Add CA Certificate" on page 270 .
Digital signature	Select a digital signature from the list. That is, RSA-1024, RSA-2048, or RSA-4096. By default, RSA-2048 is selected.
Name	Enter a device certificate name.
Enrollment Parameters	
Challenge password	Enter the CA challenge password for certificate enrollment and revocation. This challenge password must be the same used when the certificate was originally configured.
Digest	Select the digest from the list that you want to associate with the certificate. The options are: MD-5 Digests or SHA-1 digests.

Table 66: Fields on the Create Device Certificate (SCEP) page *(Continued)*

Field	Action
Encryption	Select the encryption method from the list for the CA certificate. The options are: DES Encryption or DES-3 Encryption.
Auto re-enrollment	Enable this option to request that the issuing CA replace a certificate before its specified expiration date.
Renew trigger time	Set the renew trigger time (in days). Default is 65 days and maximum is 85 days.
Re-generate key pair	Enable this option to automatically generate a new key pair when a device certificate is automatically re-enrolled.
Subject (Minimum of one field required)	
Domain component	Enter the domain component that you want to associate with the certificate.
Common name	Enter a common name for the certificate.
Organizational unit name	Enter the name of the organizational unit that you want to associate with the certificate.
Organizational name	Enter the name of the organization that you want to associate with this certificate.
Serial number	Device serial number is autopopulated.
Locality	Enter the origin locality name.
State	Enter the origin state name.

Table 66: Fields on the Create Device Certificate (SCEP) page *(Continued)*

Field	Action
Country	Enter the origin country name.
Subject Alt Name	
Domain name	Enter a domain name that you want to associate with the certificate.
Email	Enter an email address of the entity owning the certificate.
IPv4 address	Enter the IPv4 address of the device.
IPv6 address	Enter the IPv6 address of the device.
Advanced	
Digest	Select the digest from the list. The options are: SHA-1 digests or SHA-256 digests.

RELATED DOCUMENTATION

[About the Certificates page | 253](#)

[Add CA Certificate | 270](#)

[Create Device Certificate \(Local Self-Signed\) | 257](#)

[Create Device Certificate \(ACME\) | 262](#)

Create Device Certificate (ACME)

You are here: **Device Administration** > **Certificate Management** > **Certificates**.

To add an ACME certificate:

1. Click **Create** available on the upper-right corner of the Certificates page.

2. Click **Device Certificate** and select **ACME**.

The Create Device Certificate (ACME) page appears.

3. Complete the configuration according to the guidelines provided in [Table 67 on page 263](#).

4. Click **OK** to save the changes. If you want to discard your changes, click **Cancel** instead.

If you click **OK**, a new CA certificate with the provided configuration is created.

Table 67: Fields on the Create Device Certificate (ACME) page

Field	Action
CA certificate name	Select a CA certificate name from the list or click Add CA certificate to add a CA Certificate. For details on adding a CA certificate, see "Add CA Certificate" on page 270 .
Digital signature	Select a digital signature from the list. That is, RSA-1024, RSA-2048, or RSA-4096. By default, RSA-2048 is selected.
Name	Enter a device certificate name.
Contact email	Enter contact email address.
Auto Re-enrollment	
Trigger time	Set the auto re-enrollment trigger time (in days). Default is 65 days and maximum trigger time is 85 days.
Re-generate key pair	Enable to automatically generate a new key pair when a device certificate is automatically re-enrolled.
Domain names	Click + to add new domain name that you want to associate with the certificate. This can be an FQDN that resolves to an SRX Series Firewall external IP address. Maximum of domain names allowed is five.

RELATED DOCUMENTATION

About the Certificates page 253
Add CA Certificate 270
Create Device Certificate (SCEP) 260
Create Device Certificate (CMPv2) 264

Create Device Certificate (CMPv2)

You are here: **Device Administration** > **Certificate Management** > **Certificates**.

To create a CMPv2 device certificate:

1. Click **Create** available on the upper-right corner of the Certificates page.
2. Click **Device Certificate** and select **CMPv2**.
The Create Device Certificate (CMPv2) page appears.
3. Complete the configuration according to the guidelines provided in [Table 68 on page 264](#).
4. Click **OK** to save the changes. If you want to discard your changes, click **Cancel** instead.
If you click **OK**, a new CA certificate with the provided configuration is created.

Table 68: Fields on the Create Device Certificate (CMPv2) page

Field	Action
CA certificate name	Select a CA certificate name from the list or click Add CA certificate to add a CA Certificate. For details on adding a CA certificate, see "Add CA Certificate" on page 270 .
Digital signature	Select a digital signature from the list. That is, RSA, DSA, ECDSA, and so on. By default, RSA-2048 is selected.
Name	Enter a device certificate name.
Enrollment Parameters	
CA secret	Enter the out-of-band secret value received from the CA server.

Table 68: Fields on the Create Device Certificate (CMPv2) page (*Continued*)

Field	Action
CA reference	Enter the out-of-band reference value received from the CA server.
CA Dn	Enter the distinguished name (DN) of the CA enrolling the EE certificate. NOTE: This option is mandatory if the CA certificate is not already enrolled. If the CA certificate is already enrolled, the subject DN is extracted from the CA certificate.
Auto re-enrollment	Enable this option to request that the issuing CA replace a certificate before its specified expiration date.
Renew trigger time	Set the renew trigger time (in days). Default is 65 days and maximum is 85 days.
Regenerate key pair	Enable this option to automatically generate a new key pair when a device certificate is automatically re-enrolled.
Subject (Minimum of one field required)	
Domain component	Enter the domain component that you want to associate with the certificate.
Common name	Enter a common name for the certificate.
Organizational unit name	Enter the name of the organizational unit that you want to associate with the certificate.
Organizational name	Enter the name of the organization that you want to associate with this certificate.

Table 68: Fields on the Create Device Certificate (CMPv2) page *(Continued)*

Field	Action
Serial number	Device serial number is autopopulated.
Locality	Enter the origin locality name.
State	Enter the origin state name.
Country	Enter the origin country name.
Subject Alt Name	
Domain name	Enter a domain name that you want to associate with the certificate.
Email	Enter an email address of the entity owning the certificate.
IPv4 address	Enter the IPv4 address of the device.
IPv6 address	Enter the IPv6 address of the device.

RELATED DOCUMENTATION

[About the Certificates page | 253](#)

[Add CA Certificate | 270](#)

[Create Device Certificate \(ACME\) | 262](#)

[Create Device Certificate \(CSR\) | 266](#)

Create Device Certificate (CSR)

You are here: **Device Administration** > **Certificate Management** > **Certificates**.

To create a CSR device certificate:

1. Click **Create** available on the upper-right corner of the Certificates page.

2. Click **Device Certificate** and select **CSR**.

The Create Device Certificate (CSR) page appears.

3. Complete the configuration according to the guidelines provided in [Table 69 on page 267](#).

4. Click **OK** to save the changes. If you want to discard your changes, click **Cancel** instead.

If you click **OK**, a new certificate with the provided configuration is created with status as **Pending Signing**.

5. Click **Load Certificate**.

The Load Certificate window appears.

6. Click **Browse** to upload the signed certificate and click **OK**.

7. Once you upload the certificate, status changes from **Pending Signing** to **Valid** and type changes from **CSR** to **Device Certificate**.

Table 69: Fields on the Create Device Certificate (CSR) page

Field	Action
Digital signature	Select a digital signature from the list. That is, RSA, DSA, ECDSA, and so on. By default, RSA-2048 is selected.
Name	Enter a device certificate name.
Subject (Minimum of one field required)	
Domain component	Enter the domain component that you want to associate with the certificate.
Common name	Enter a common name for the certificate.
Organizational unit name	Enter the name of the organizational unit that you want to associate with the certificate.
Organizational name	Enter the name of the organization that you want to associate with this certificate.
Serial number	Device serial number is autopopulated.

Table 69: Fields on the Create Device Certificate (CSR) page *(Continued)*

Field	Action
Locality	Enter the origin locality name.
State	Enter the origin state name.
Country	Enter the origin country name.
Subject Alt Name	
Domain name	Enter a domain name that you want to associate with the certificate.
Email	Enter an email address of the entity owning the certificate.
IPv4 address	Enter the IPv4 address of the device.
IPv6 address	Enter the IPv6 address of the device.
Advanced	
Digest	Select the digest from the list. The options are: SHA-1 digests or SHA-256 digests.

RELATED DOCUMENTATION

[About the Certificates page | 253](#)

[Add CA Certificate | 270](#)

[Create Device Certificate \(CMPv2\) | 264](#)

[Load Signed Device Certificate \(Externally Generated\) | 269](#)

Load Signed Device Certificate (Externally Generated)

You are here: **Device Administration** > **Certificate Management** > **Certificates**.

To upload a signed device certificate for an externally generated certificate:

1. Click **Create** available on the upper-right corner of the Certificates page.
2. Click **Device Certificate** and select **Externally Generated**.
The Load Signed Device Certificate (Externally Generated) page appears.
3. Complete the configuration according to the guidelines provided in [Table 70 on page 269](#).
4. Click **OK** to save the changes. If you want to discard your changes, click **Cancel** instead.
If you click **OK**, a signed device certificate with the provided configuration is loaded.

Table 70: Fields on the Load Signed Device Certificate (Externally Generated) page

Field	Action
Certificate ID	Enter the certificate ID of the externally generated certificate.
Upload device certificate	Browse and upload the device certificate that is stored. Recommended file formats are .crt, .pem, .der, and .cert.
Upload private key	Browse and upload the device certificate that is stored. Recommended file formats are .crt, .pem, .der, and .cert.
Password	Enter a password.

RELATED DOCUMENTATION

[About the Certificates page](#) | 253

[Add CA Certificate](#) | 270

[Create Device Certificate \(CSR\)](#) | 266

Add a Certificate Authority (CA)

IN THIS SECTION

- [Add CA Certificate | 270](#)

You are here: **Device Administration** > **Certificate Management** > **Certificates**.

The CA options available are:

- CA Certificate. See ["Add CA Certificate" on page 270](#).
- Juniper Bundle. Loads default CA certificates with prefix juniper_bundle_ and suffixed with an auto incremented value from 1 to 255.

NOTE: In J-Web UI, you cannot edit Juniper Bundle CA certificates.

Add CA Certificate

You are here: **Device Administration** > **Certificate Management** > **Certificates**.

To add a CA certificate:

1. Click **Create** available on the upper-right corner of the Certificates page.
2. Click **Certificate Authority** and select **CA Certificate**.
The Add CA Certificate page appears.
3. Complete the configuration according to the guidelines provided in [Table 71 on page 270](#).
4. Click **OK** to save the changes. If you want to discard your changes, click **Cancel** instead.
If you click **OK**, a new CA certificate with the provided configuration is created.

Table 71: Fields on the Add CA Certificate Page

Field	Action
Name	Enter a CA certificate name.

Table 71: Fields on the Add CA Certificate Page *(Continued)*

Field	Action
Revocation check	Select an option from the list: • Disable—Disables verification of status of digital certificates. • OCSP—Online Certificate Status Protocol (OCSP) checks the revocation status of a certificate. • CRL—A CRL is a time-stamped list identifying revoked certificates, which is signed by a CA and made available to the participating IPsec peers on a regular periodic basis.
URL	For OCSP, enter HTTP addresses for OCSP responders. For CRL, enter the name of the location from which to retrieve the CRL through HTTP or Lightweight Directory Access Protocol (LDAP).
On connection failure	Enable this option to skip the revocation check if the OCSP responder is not reachable. NOTE: This option is applicable only for OCSP.
Disable responder revocation check	Enable this option to disable revocation check for the CA certificate received in an OCSP response. NOTE: This option is applicable only for OCSP.
Accept unknown status	When set to enable, accepts the certificate with unknown status. NOTE: This option is applicable only for OCSP.

Table 71: Fields on the Add CA Certificate Page *(Continued)*

Field	Action
Nonce payload	Disable the option—Explicitly disable the sending of a nonce payload. Enable the option—Enable the sending of a nonce payload. This is the default. NOTE: This option is applicable only for OCSP.
CRL refresh interval	Enter the time interval (in hours) between CRL updates. Range: 0 through 8784 hours. NOTE: This option is applicable only for CRL.
Disable on download failure	Enable this option to override the default behavior and permit certificate verification even if the CRL fails to download. NOTE: This option is applicable only for CRL.
Load CA certificate	Select an option whether you want to load the CA certificate manually or automatically.
Upload CA certificate	Click Browse to upload the CA certificate that is stored. NOTE: This option is only available if you choose to load the CA certificate manually.
Enrollment URL	Enter the enrollment URL. NOTE: Enrollment URL is optional for manual upload and mandatory for automatic upload.
Advanced	
Administrator email	Enter an administrator email address.

Table 71: Fields on the Add CA Certificate Page *(Continued)*

Field	Action
Routing instance	Select an option from the list of configured routing instances.
Source address	Enter a source IPv4 or IPv6 address to be used instead of the IP address of the egress interface for communications with external servers.
Proxy profile	Select an option from the list. Or to create a new proxy profile inline: - Click Create. Create Proxy Profile page appears. - Enter the following details: - Profile Name—Enter a unique proxy profile name. - Connection Type: - Server IP—Enter the IP address of the server. - Host Name—Enter the host name. - Port Number—Select the port number by using top or down arrow. Range: 0 through 65535 - Click OK.

RELATED DOCUMENTATION

[About the Certificates page | 253](#)

[Load Signed Device Certificate \(Externally Generated\) | 269](#)

[Load CA Certificate | 277](#)

Export a Device Certificate

You are here: **Device Administration** > **Certificate Management** > **Certificates**.

To export a device certificate:

1. Click **Export** on the Certificates page.

The Export page appears.

NOTE: Once you click Export, CSR certificate gets downloaded automatically on your local system.

2. Complete the configuration according to the guidelines provided in [Table 72 on page 274](#).
3. Click **OK** to export the certificate.

Once you save or download the exported file(s), a confirmation message is displayed; if not, an error message is displayed.

Table 72: Fields on the Export Device Certificate page

Field	Action
Format	Select an option from the list to specify whether the exporting certificate format is Privacy-Enhanced Mail (PEM) or Distinguished Encoding Rules (DER).
Key pair	Enable or disable exporting key pair of a certificate.
Password	Enter password. NOTE: This option is available only when you enable key pair.

RELATED DOCUMENTATION

[About the Certificates page | 253](#)

[Add CA Certificate | 270](#)

[Edit a CA Certificate | 275](#)

Edit a CA Certificate

You are here: **Device Administration** > **Certificate Management** > **Certificates**.

To edit a CA certificate:

1. Select a CA certificate you want to edit on the Certificates page.
2. Click the edit icon available on the upper-right corner of the Certificates page.

The Edit CA Certificate page appears with editable fields. For more information on the options, see [Table 71 on page 270](#)

3. Click **OK** to save the changes or click **Cancel** to discard the changes.

RELATED DOCUMENTATION

[About the Certificates page | 253](#)

[Export a Device Certificate | 274](#)

[Delete a Certificate | 275](#)

Delete a Certificate

You are here: **Device Administration** > **Certificate Management** > **Certificates**.

To delete a certificate:

1. Select the certificate you want to delete on the Certificates page.
2. Click the delete icon available on the upper-right corner of the Certificates page.

A confirmation window appears.

3. Click **Yes** to delete.

RELATED DOCUMENTATION

[About the Certificates page | 253](#)

[Edit a CA Certificate | 275](#)

[Search Text in the Certificates Table | 276](#)

Search Text in the Certificates Table

You are here: **Device Administration** > **Certificate Management** > **Certificates**.

To search for text:

1. Click the search icon in the upper-right corner of the Certificates page.
2. Enter partial text or full text of the keyword in the search bar and click the search icon.
The search results are displayed.
3. Click **X** next to a search keyword or click **Clear All** to clear the search results.

RELATED DOCUMENTATION

[About the Certificates page | 253](#)

[Delete a Certificate | 275](#)

[Re-Enroll a Device Certificate | 276](#)

Re-Enroll a Device Certificate

You are here: **Device Administration** > **Certificate Management** > **Certificates**.

To re-enroll a device certificate with protocols (SCEP/ACME/CMPv2/Let's Encrypt):

1. Click **Re-enroll** available in the status column of the Certificates table.
The Re-enroll Device Certificate page appears.
2. Complete the configuration according to the guidelines provided in [Table 73 on page 276](#).
3. Click **OK** to save the changes. If you want to discard your changes, click **Cancel** instead.

Table 73: Fields on the Re-enroll Device Certificate page

Field	Action
Name	Displays the certificate ID.
CA certificate name	Select the CA certificate name from the list that you want to add.

Table 73: Fields on the Re-enroll Device Certificate page (*Continued*)

Field	Action
Protocol	Select the protocol that you want to associate with the certificate.
Password	Enter password. NOTE: This option is available only when you select SCEP protocol.
Digest	Select the digest from the list that you want to associate with the certificate. NOTE: This option is available only when you select SCEP protocol.
Encryption	Select an encryption method from the list for the CA certificate. NOTE: This option is available only when you select SCEP protocol.
Re-generate key pair	Enable to automatically re-generate a key pair.

RELATED DOCUMENTATION

[About the Certificates page | 253](#)

[Search Text in the Certificates Table | 276](#)

[Load CA Certificate | 277](#)

Load CA Certificate

You are here: **Device Administration > Certificate Management > Certificates.**

To load a CA certificate:

1. Click **Load Certificate** available in the status column of the Certificates table.
The Load CA Certificate page appears.
2. Complete the configuration according to the guidelines provided in [Table 74 on page 278](#).
3. Click **OK** to save the changes. If you want to discard your changes, click **Cancel** instead.

Table 74: Fields on the Load CA Certificate page

Field	Action
Name	Displays the certificate ID.
Load CA certificate	Select how you want to load the certificate. That is, manual upload or automatic.
Manual Upload Fields	
Upload CA certificate	Click Browse to upload the CA certificate that is stored on your local machine.
Upload CRL	Click Browse to upload the CRL certificate that is stored on your local machine.
Automatic Upload Fields NOTE: Automatic is enabled only if the enrollment URL is configured for the CA certificate.	
Protocol	Select the protocol from the list that you want to associate with the CA certificate.
Device certificate	Device certificate is generated based on the enrollment protocol specified. NOTE: This option is available when you select Let's Encrypt, CMPv2, or ACME protocol.

RELATED DOCUMENTATION

[About the Certificates page](#) | 253

Reload CA Certificate

You are here: **Device Administration** > **Certificate Management** > **Certificates**.

To reload a CA certificate:

1. Click **Reload Certificate** available in the status column of the Certificates table.
The Reload CA Certificate page appears.
2. Complete the configuration according to the guidelines provided in [Table 75 on page 279](#).
3. Click **OK** to save the changes. If you want to discard your changes, click **Cancel** instead.

Table 75: Fields on the Reload CA Certificate page

Field	Action
Name	Displays the certificate ID.
Load CA certificate	Select how you want to load the certificate. That is, manual upload or automatic.
Manual Upload Fields	
Upload CA certificate	Click Browse to upload the CA certificate that is stored on your local machine.
Upload CRL	Click Browse to upload the CRL certificate that is stored on your local machine.
Automatic Upload Fields NOTE: Automatic is enabled only if the enrollment URL is configured for the CA Certificate.	
Protocol	Select the protocol from the list that you want to associate with the CA certificate.

Table 75: Fields on the Reload CA Certificate page *(Continued)*

Field	Action
Device certificate	Device certificate is generated based on the enrollment protocol specified. NOTE: This option is available when you select Let's Encrypt, CMPv2, or ACME protocol.

RELATED DOCUMENTATION

About the Certificates page 253
Add CA Certificate 270
Load CA Certificate 277

Certificate Management—Certificate Authority Group

IN THIS CHAPTER

- [About the Certificate Authority Group Page | 281](#)
- [Import a Trusted CA Group | 282](#)
- [Add a CA Group | 283](#)
- [Edit a CA Group | 284](#)
- [Delete a CA Group | 285](#)
- [Search Text in the Certificate Authority Group Table | 285](#)

About the Certificate Authority Group Page

You are here: **Device Administration** > **Certificate Management** > **Trusted Certificate Authority**.

Multiple CA profiles can be grouped in one trusted CA group for a given topology. The CA group can be used either in SSL or IPsec.

SSL forward proxy ensures secure transmission of data between a client and a server. Before establishing a secure connection, SSL forward proxy checks certificate authority (CA) certificates to verify signatures on server certificates. For this reason, a reasonable list of trusted CA certificates is required to effectively authenticate servers.

You can perform the following tasks:

- Import a CA group to manually load the CA group. See ["Import a Trusted CA Group" on page 282](#).
- Add a CA group. See ["Add a CA Group" on page 283](#).

NOTE: You can group up to maximum of 20 CA profiles in a single trusted CA group. A minimum of one CA profile is a must to create a trusted CA group.

- Edit a CA group. See ["Edit a CA Group" on page 284](#).
- Delete a CA group. See ["Delete a CA Group" on page 285](#).
- Search for text in a CA group table. See ["Search Text in the Certificate Authority Group Table" on page 285](#).
- Filter the CA group information based on select criteria. To do this, select the filter icon at the upper-right corner of the table. The columns in the grid change to accept filter options. Type the filter options; the table displays only the data that fits the filtering criteria.
- Show or hide columns in the CA group table. To do this, use the Show Hide Columns icon in the upper-right corner of the page and select the options you want to show or deselect to hide options on the page.

[Table 76 on page 282](#) provides the details of the fields of the Certificate Authority Group Page.

Table 76: Fields on Certificate Authority Group Page

Field	Description
Group Name	Displays a Name for the CA profile group.
CA Profiles	Displays the name of CA profiles.
Used For	Displays whether the CA profile group is used for IPsec VPN or for SSL proxy.

Import a Trusted CA Group

You are here: **Device Administration** > **Certificate Management** > **Trusted Certificate Authority**.

To import a trusted CA group:

1. Click **Import**.

The Import Trusted CA Group page appears.

2. Complete the configuration according to the guidelines provided in [Table 77 on page 283](#).

3. Click **OK** to import the CA group.

You are taken to the Certificate Authority Group page. If the CA group content that you imported is validated successfully, a confirmation message is displayed; if not, an error message is displayed.

After importing a CA profile group, you can use it when you create an SSL proxy.

Table 77: Fields on the Import Trusted CA Group Page

Field	Action
CA Group Name	Enter the name of a CA group.
File path for CA Group	Click Browse to navigate to the path from where you want to import the CA group. NOTE: Only .pem format is supported.

RELATED DOCUMENTATION

- [About the Certificate Authority Group Page | 281](#)
- [Add a CA Group | 283](#)
- [Edit a CA Group | 284](#)
- [Delete a CA Group | 285](#)
- [Search Text in the Certificate Authority Group Table | 285](#)

Add a CA Group

You are here: **Device Administration** > **Certificate Management** > **Trusted Certificate Authority**.

To add a CA group:

1. Click **+**.
The Add CA Group page appears.
2. Complete the configuration according to the guidelines provided in [Table 78 on page 284](#).
3. Click **OK** to save the changes. If you want to discard your changes, click **Cancel** instead.
If you click **OK**, a new CA group with the provided configuration is created.

After added a CA group, you can use it for IPsec VPN.

Table 78: Fields on the Add CA Group Page

Field	Action
CA Group Name	Enter a unique CA group name.
CA Profiles	Select a CA profile name from the list in the Available column and then click the right arrow to move it to the Selected column. NOTE: You can add up to maximum of 20 CA profiles per trusted CA group.

RELATED DOCUMENTATION

[About the Certificate Authority Group Page | 281](#)

[Import a Trusted CA Group | 282](#)

[Edit a CA Group | 284](#)

[Delete a CA Group | 285](#)

[Search Text in the Certificate Authority Group Table | 285](#)

Edit a CA Group

You are here: **Device Administration** > **Certificate Management** > **Trusted Certificate Authority**.

To edit a CA group:

1. Select a CA group.
2. Click the pencil icon available on the upper-right corner of the Certificate Authority Group page.
See ["Add a CA Group" on page 283](#) for the options available for editing on the Edit CA Group page.
3. Click **OK**

RELATED DOCUMENTATION

[About the Certificate Authority Group Page | 281](#)

[Import a Trusted CA Group | 282](#)

[Add a CA Group | 283](#)

[Delete a CA Group | 285](#)

[Search Text in the Certificate Authority Group Table | 285](#)

Delete a CA Group

You are here: **Device Administration** > **Certificate Management** > **Trusted Certificate Authority**.

To delete a CA group:

1. Select a CA group.
2. Click the delete icon available on the upper-right corner of the Certificate Authority Group page.
A confirmation window appears.
3. Click **Yes** to delete.

RELATED DOCUMENTATION

[About the Certificate Authority Group Page | 281](#)

[Import a Trusted CA Group | 282](#)

[Add a CA Group | 283](#)

[Edit a CA Group | 284](#)

[Search Text in the Certificate Authority Group Table | 285](#)

Search Text in the Certificate Authority Group Table

You are here: **Device Administration** > **Certificate Management** > **Trusted Certificate Authority**.

You can use the search icon in the upper-right corner of a page to search for text containing letters and special characters on that page.

To search for text:

1. Enter partial text or full text of the keyword in the search bar and click the search icon.
The search results are displayed.
2. Click **X** next to a search keyword or click **Clear All** to clear the search results.

RELATED DOCUMENTATION

About the Certificate Authority Group Page 281
Import a Trusted CA Group 282
Add a CA Group 283
Edit a CA Group 284
Delete a CA Group 285

License Management

IN THIS CHAPTER

- [Manage Your Licenses | 287](#)

Manage Your Licenses

IN THIS SECTION

- [About License Management Page | 287](#)
- [Add License | 288](#)
- [Delete Installed Licenses | 289](#)
- [Update Installed Licenses | 289](#)
- [Update Trial Licenses | 289](#)
- [Display License Keys | 289](#)
- [Download License Keys | 290](#)
- [Software Feature Licenses | 290](#)

About License Management Page

You are here: **Device Administration** > **License Management**.

You can add a new license key, delete one or more license keys, update, or download license keys.

[Table 79 on page 288](#) describes the fields on the License Management page.

Table 79: Fields on the License Maintenance Page

Field	Function
Feature	Displays the name of the licensed feature.
Licenses Used	Displays the number of licenses currently being used on the device. Usage is determined by the configuration on the device. If a feature license exists and that feature is configured, the license is considered used.
Licensed Installed	Displays the number of licenses installed on the device for the particular feature.
Licenses Needed	Displays the number of licenses required for legal use of the feature. Usage is determined by the configuration on the device. If a feature is configured and the license for that feature is not installed, a single license is needed.
License Expires on	Displays the expiry details on the license feature.

Add License

To add a new license key with the J-Web license manager:

1. Perform one of the following:

- **License File URL**—Enter the full URL to the destination file containing the license key.

NOTE: Use this option to send a subscription-based license key entitlement (such as Content Security) to the Juniper Networks licensing server for authorization. If authorized, the server downloads the license to the device and activates it.

- **License Key**—Paste the license key text, in plain-text format, for the license.

Use a blank line to separate multiple license keys.

NOTE: Use this option to activate a perpetual license directly on the device. (Most feature licenses are perpetual.)

2. Click **OK** to add the license key or click **Cancel** to return to the License Management page.

Delete Installed Licenses

To delete one or more license keys with the J-Web license manager:

1. Select the check box of the license or licenses you want to delete.
2. Click **Delete**.

NOTE: If you have deleted the SRX100 Memory Upgrade license, the device reboots immediately and comes back up as a low-memory device.

3. Click **OK** to delete the selected license or licenses or click **Cancel** to return to the License Management page.

Update Installed Licenses

To send license update to the License Management Server (LMS):

1. Click **Update**.
The Update Licenses page appears.
2. Click **OK** to send license update to LMS.

Update Trial Licenses

To send license update to the LMS and to update the trial licenses:

1. Click **Update Trial**.
The Update Trial Licenses page appears.
2. Click **OK** to update the trial licenses.

Display License Keys

To display the license keys installed on the device with the J-Web license manager:

1. Click **Display Keys** to view all of the license keys installed on the device.
2. Click **Back** to return to the License Management page.

Download License Keys

Downloads the license keys installed on the device with the J-Web license manager.

1. Click **Download Keys** to download all of the license keys installed on the device to a single file.
2. Select **Save it to disk** and specify the file to which the license keys are to be written.

Software Feature Licenses

Each feature license is tied to exactly one software feature, and that license is valid for exactly one device. Each license allows you to run the specified advanced software features on a single device. Platform support depends on the Junos OS release in your installation. For more information on the software feature licenses for SRX Series Firewalls, see [Licenses for SRX Series](#).

RELATED DOCUMENTATION

| [Enroll Your Device with Juniper ATP Cloud](#) | 306

CHAPTER 18

Security Package Management

IN THIS CHAPTER

- [About the Security Package Management Page | 291](#)
- [Install or Upload IPS Signatures Package | 295](#)
- [IPS Signatures Settings | 297](#)
- [Install Application Signatures Package | 299](#)
- [Application Signatures Settings | 299](#)
- [Manage URL Categorization | 301](#)
- [Check URL Recategorization Status | 302](#)
- [Install URL Category Package | 302](#)
- [URL Categories Settings | 303](#)

About the Security Package Management Page

IN THIS SECTION

- [Field Descriptions | 292](#)

You are here: **Device Administration** > **Security Package Management**

Use this page to configure the SRX Series Firewall to install, upload, and automatically download the updated security packages from the specified URL.

You can perform the following tasks from this page:

- IPS signatures:
 - Install and upload IPS signatures package. See ["Install or Upload IPS Signatures Package" on page 295](#).

- Configure IPS signatures settings. See ["IPS Signatures Settings" on page 297](#).
- Application signatures:
 - Install an application signature package. See ["Install Application Signatures Package" on page 299](#).
 - Configure application signature package install settings. See ["Application Signatures Settings" on page 299](#).
- URL categories:
 - Manage URL categorization. See ["Manage URL Categorization" on page 301](#).
 - Check URL recategorization status. See ["Check URL Recategorization Status" on page 302](#).
 - Install an URL category package. See ["Install URL Category Package" on page 302](#).
 - Configure URL category package install settings. See ["URL Categories Settings" on page 303](#).

Field Descriptions

[Table 80 on page 292](#) to [Table 82 on page 294](#) describes the fields on the Security Package Management page.

Table 80: Fields on the IPS Signatures Page

Field	Description
Installed IPS Signature Package	
Version	Displays the security package version that is currently installed on the device.
Status	Displays the following statuses of the security package installation: • <i><Version number></i> installation in progress • Installed successfully • Failed
Published Date	Displays the security package released date and time.
Detector	Displays the detector version number that is currently installed on the device.

Table 80: Fields on the IPS Signatures Page (*Continued*)

Field	Description
Rollback Action	Displays the previously installed security package version on the system. Click the version number to rollback to the previous version.
Latest IPS Signature Package	
Version	Displays the ten latest security package versions.
View Details	Click View Details to learn more about the security package version.
Install	You can choose either of the options: • Install package—Installs the selected security package version on the device. • Upload package—Uploads a selected package version to install it on the device.
Settings	You can configure a proxy server to download and install security package. You can also schedule an automatic installation of security packages for a later date and time.

Table 81: Fields on the Application Signatures Page

Field	Description
Installed Application Signature Package	
Version	Displays the security package version that is currently installed on the device.
Status	Displays the following statuses of the security package installation: • <i><Version number></i> installation in progress • Installed successfully • Failed

Table 81: Fields on the Application Signatures Page (Continued)

Field	Description
Published Date	Displays the security package released date and time.
Rollback Action	Displays the previously installed security package version on the system. Click the version number to roll back to the previous version.

Latest Application Signature Package

Version	Displays the ten latest security package versions.
View Details	Click View Details to learn more about the security package version.
Install	You can choose to install the selected security package version on the device.
Install Settings	You can configure a proxy server to download and install security package. You can also schedule an automatic installation of security packages for a later date and time.

Table 82: Fields on the URL Categories Page

Field	Description
URL Category Package	
Version	Displays the Enhanced Web Filtering (EWF) or Juniper NextGen categories package version that is currently installed on the device.
Status	Displays the following statuses of the security package installation: • <i><Version number></i> installation in progress • Installed successfully • Failed

Table 82: Fields on the URL Categories Page (Continued)

Field	Description
Base Filter	Click the base filter name (ng-default-filter or ewf-default-filter) to view the available URL categories.
URL Categorization	You can manage URL categorization or check URL categorization status.
Install	Installs the latest EWF or Juniper NextGen category package on the device.
Install Settings	You can configure a proxy server to download and install EWF or Juniper NextGen categories package. You can also schedule an automatic installation of EWF or Juniper NextGen categories package for a later date and time.

RELATED DOCUMENTATION

[Install or Upload IPS Signatures Package | 295](#)

[Install Application Signatures Package | 299](#)

[Install URL Category Package | 302](#)

[IPS Signatures Settings | 297](#)

[Application Signatures Settings | 299](#)

[URL Categories Settings | 303](#)

Install or Upload IPS Signatures Package

You are here: **Device Administration** > **Security Package Management**.

You can choose to install the selected security package version or upload a selected package version to install it on the device.

NOTE: When using either of the installation methods, you can continue to configure the other features while the installation is in progress. Once the installation is complete, you will see a notification on the UI.

To install the security packages:

1. Select a security package version you want to install and then click **Install** available at the upper-right corner of the Latest IPS Signature Package table.
2. Click **Install package** to install the selected security package version.

The installation status is shown in the Status column of the Installed IPS Signature Package table.

To upload the security packages (offline security packages installation):

1. Click **Install** available at the upper-right corner of the Latest IPS Signature Package table. Then, select **Upload package**.
2. Click **Browse** to upload a downloaded security package version and then click **OK**.

The installation starts automatically and the status is shown in the Status column of the Installed IPS Signature Package table.

To download the security package on the host machine:

- a. Go to <https://support.juniper.net/support/downloads/>.
- b. Select **All Products** from the list and enter the *SRX Series model*. For example, SRX300.
- c. Press **Enter** or click **Find a Product**.
- d. Scroll down and go to **Related Software** section.
- e. Click **+** and click on the Offline Signature Files.

You are directed to the Download Results page.

- f. Click **+** to choose any one of the following:
 - Offline APPID Sigpack Files—This includes only the App ID files.
 - Offline Sigpack Files—This includes both IPS and App ID files.
- g. Click the **gz** link of the package you want to download from the Downloads column.

You are directed to the Web download site.

- h. Log in with your username and password.

- i. Select **I agree** for the EULA information and click **Proceed**.
- j. On the Download Software page that appears, the following options are available:
 - If you want to download the package on your host machine, click the **CLICK HERE** link and save the file to your machine.
 - If you want to download the package on your device, copy the URL and install it on the device using the CLI commands.

RELATED DOCUMENTATION

About the Security Package Management Page 291
Install Application Signatures Package 299
Install URL Category Package 302

IPS Signatures Settings

You are here: **Device Administration** > **Security Package Management**

You can configure a proxy server to download and install security package. You can also schedule an automatic installation of security packages for a later date and time.

To configure the security package installation settings:

1. Click the Settings icon available at the upper-right corner of the Latest IPS Signature Package table. The Settings page appears.
2. Complete the configuration according to the guidelines provided in [Table 83 on page 297](#).
3. Click **OK**.
The security package will automatically install in the scheduled interval. The installation status is shown in the Status column of the Installed IPS Signature Package table.

Table 83: Fields on the Settings Page

Field	Action
Security Package URL	Displays the URL from where the security package is downloaded. Default URL is https://signatures.juniper.net/cgi-bin/index.cgi .

Table 83: Fields on the Settings Page *(Continued)*

Field	Action
Routing Instance	Select a routing instance from the list to reach the proxy server. To create a new routing instance, click Create New. For more information on the fields, see "Add a Routing Instance" on page 569.
Proxy profile	This is optional. Select a proxy profile from the list. The proxy profile acts as a proxy server to download the security package. To create a new proxy profile, click Create New. For more information on the fields, see "Add a Proxy Profile" on page 847.
Schedule Install	
Schedule	Enable the option to schedule automatic download and installation of security package at a specific date, time, and interval. NOTE: The package also includes application signatures. If you've set up a separate schedule for installing application signatures, then this schedule will take precedence.
Start Time	Select a time to start automatic download and to install the updated security package from the specified URL. Format: YYYY-MM-DD.hh:mm (24 hours).
Interval	Amount of time (in hours) that the device waits before updating the security package. Range: 1 through 336

RELATED DOCUMENTATION

[About the Security Package Management Page | 291](#)

[Install Application Signatures Package | 299](#)

[Install Application Signatures Package | 299](#)

[Install URL Category Package | 302](#)

Install Application Signatures Package

You are here: **Device Administration** > **Security Package Management**.

You can choose to install the selected security package version on the device.

To install the security packages:

1. Select a security package version you want to install and then click **Install** available at the upper-right corner of the Latest Application Signature Package table.
2. Click **Install package** to install the selected security package version.

The installation status is shown in the Status column of the Installed Application Signature Package table.

RELATED DOCUMENTATION

[About the Security Package Management Page | 291](#)

[Install or Upload IPS Signatures Package | 295](#)

[Install URL Category Package | 302](#)

Application Signatures Settings

You are here: **Device Administration** > **Security Package Management**

You can configure a proxy server to download and install security package. You can also schedule an automatic installation of security packages for a later date and time.

To configure the security package installation settings:

1. Click the Settings icon available at the upper-right corner of the Latest Application Signature Package table.
The Install Settings page appears.

2. Complete the configuration according to the guidelines provided in [Table 84 on page 300](#).
3. Click **OK**.
The security package will automatically install in the scheduled interval. The installation status is shown in the Status column of the Installed Application Signature Package table.

Table 84: Fields on the Install Settings Page

Field	Action
Security Package URL	Displays the URL from where the security package is downloaded. Default URL is https://signatures.juniper.net/cgi-bin/index.cgi .
Proxy profile	This is optional. Select a proxy profile from the list. The proxy profile acts as a proxy server to download the security package. To create a new proxy profile, click Create New. For more information on the fields, see "Add a Proxy Profile" on page 847.
Schedule Install	
Schedule	Enable the option to schedule automatic download and installation of security package at a specific date, time, and interval. NOTE: If IPS signatures package installation is already scheduled, then it also includes application signatures package. If you want to set up a separate schedule for installing application signatures, then disable the Schedule option for IPS signatures.
Start Time	Select a time to start automatic download and to install the updated security package from the specified URL. Format: YYYY-MM-DD.hh:mm (24 hours).
Interval	Amount of time (in hours) that the device waits before updating the security package. Range: 1 through 336

RELATED DOCUMENTATION

About the Security Package Management Page 291
Install or Upload IPS Signatures Package 295
Install Application Signatures Package 299
Install URL Category Package 302

Manage URL Categorization

You are here: **Device Administration** > **Security Package Management**.

Use this page to add a new URL to a category or change the category of an existing URL.

To manage the URL categorization:

1. Click the **URL CATEGORIES** tab.
2. Click the **URL Categorization** option available at the upper-right corner of the URL Category Package table and click **Manage URL Categorization**.
The Manage URL Categorization page appears.
3. Complete the configuration according to the guidelines provided in [Table 85 on page 301](#).
4. Click **OK**.

Table 85: Fields on the Manage URL Categorization page

Field	Action
Action	Select one of the following options. • Update the category for an existing URL • Add a new URL to a category
URL	Enter the URL domain name or IP address. For example, www.abc.com.
Category	Select the application or IPS signature category to which you want to add the URL. NOTE: Leave this field blank if you are unsure what to choose.

RELATED DOCUMENTATION

[About the Security Package Management Page | 291](#)

[URL Categories Settings | 303](#)

[Check URL Recategorization Status | 302](#)

Check URL Recategorization Status

You are here: **Device Administration** > **Security Package Management**.

Use this page to check the URL recategorization status. To do this:

1. Click the **URL CATEGORIES** tab.
2. Click the **URL Categorization** option available at the upper-right corner of the URL Category Package table and click **Check URL Recategorization Status**.
The Check URL Recategorization Status page appears.
3. Enter a valid URL and click **Check Status**.
'The URL category is updated' message is displayed if the recategorization for the URL you entered is successful.

NOTE: Once the request is submitted, the status shows as 'Your request is being processed'.
The request undergo review and update the corresponding status.
Contact Juniper customer support if the URL category change request is rejected.

4. Click **Close**.

RELATED DOCUMENTATION

[About the Security Package Management Page | 291](#)

[URL Categories Settings | 303](#)

[Manage URL Categorization | 301](#)

Install URL Category Package

You are here: **Device Administration** > **Security Package Management**.

You can choose to install the latest URL category package version to install it on the device.

To install the latest URL category package:

1. Click **Install** available at the upper-right corner of the URL Category Package table.
2. Click **Install package** to install the latest URL category package version.

The installation status is shown in the Status column of the URL Category Package table.

RELATED DOCUMENTATION

[About the Security Package Management Page | 291](#)

[Install or Upload IPS Signatures Package | 295](#)

[Install Application Signatures Package | 299](#)

[URL Categories Settings | 303](#)

URL Categories Settings

You are here: **Device Administration > Security Package Management**

You can configure a proxy server to download and install EWF or Juniper NextGen categories package. You can also schedule an automatic installation of EWF or Juniper NextGen categories package for a later date and time.

To configure the EWF or Juniper NextGen categories package installation settings:

1. Click the Settings icon available at the upper-right corner of the URL Category Package table.
The Install Settings page appears.
2. Complete the configuration according to the guidelines provided in [Table 86 on page 303](#).
3. Click **OK**.
The EWF or Juniper NextGen categories package will automatically install in the scheduled interval.
The installation status is shown in the Status column of the URL Category Package table.

Table 86: Fields on the Install Settings Page

Field	Action
Security Package URL	Displays the URL from where the EWF or Juniper NextGen categories package is downloaded. Default URL is https://signatures.juniper.net/ .

Table 86: Fields on the Install Settings Page *(Continued)*

Field	Action
Routing Instance	Select a routing instance from the list to reach the proxy server. To create a new routing instance, click Create New. For more information on the fields, see "Add a Routing Instance" on page 569.
Proxy profile	This is optional. Select a proxy profile from the list. The proxy profile acts as a proxy server to download the EWF or Juniper NextGen categories package. To create a new proxy profile, click Create New. For more information on the fields, see "Add a Proxy Profile" on page 847.
Schedule Install	
Schedule	Enable the option to schedule automatic download and installation of EWF or Juniper NextGen categories package at a specific date, time, and interval.
Start Time	Select a time to start automatic download and to install the updated EWF or Juniper NextGen categories package from the specified URL. Format: YYYY-MM-DD.hh:mm (24 hours).
Interval	Amount of time (in hours) that the device waits before updating the EWF or Juniper NextGen categories package. Range: 1 through 336

RELATED DOCUMENTATION

[About the Security Package Management Page](#) | 291

[Install or Upload IPS Signatures Package](#) | 295

ATP Management

IN THIS CHAPTER

- [Enroll Your Device with Juniper ATP Cloud | 306](#)
- [About the Diagnostics Page | 309](#)

Enroll Your Device with Juniper ATP Cloud

Before enrolling a device:

- Ensure that you have a Juniper ATP Cloud account with an associated license (free, basic, or premium) to configure a Juniper ATP Cloud realm. The license controls the features of the Juniper ATP Cloud. For more information on the Juniper ATP Cloud account, see [Registering a Juniper Advanced Threat Prevention Cloud Account](#).
- Decide which region the realm you create will cover because you must select a region when you configure a realm.
- Ensure the device is registered in the ATP cloud portal.
- In the CLI mode, configure `set security forwarding-process enhanced-services-mode` on your SRX300, SRX320, SRX340, SRX345, and SRX550M devices to open ports and get the device ready to communicate with ATP cloud.
- ATP cloud requires that both your Routing Engine (control plane) and Packet Forwarding Engine (data plane) can connect to the Internet.
- ATP cloud requires the following ports to be open on the SRX Series Firewall: 80, 8080, and 443.

You are here: **Device Administration > ATP Management > Enrollment.**

Use this page to enroll your SRX Series Firewall with Juniper Advanced Threat Prevention Cloud (Juniper ATP Cloud).

Juniper ATP Cloud is a cloud-based threat identification and prevention solution. It protects your device from malware and sophisticated cyber threats by inspecting e-mail and web traffic for advanced threats.

Juniper ATP Cloud integrates with the SRX Series Firewalls to simplify its deployment and enhance the anti-threat capabilities of the SRX Series Firewalls.

ATP uses a Junos OS operation (op) script to help you configure your SRX Series Firewall to connect to the ATP cloud service.

The Junos OS operation (op) script performs the following tasks:

- Downloads and installs certificate authority (CAs) licenses onto your SRX Series Firewall.
- Creates local certificates and enrolls them with the cloud server.
- Performs basic ATP cloud configuration on the SRX Series Firewall.
- Establishes a secure connection to the cloud server.

To enroll your device with Juniper ATP Cloud from J-Web:

1. Proxy Profile Configuration (Optional)

- a. Select an option in the Proxy Profile list and proceed with Step 2.

NOTE:

- The list displays the existing proxy profiles that you have created using the Proxy Profile page (Security Policies & Objects > Proxy Profiles).
- The SRX Series Firewall and Juniper ATP Cloud communicates through the proxy server if a proxy profile is configured. Otherwise, they directly communicate with each other.

- b. Or click **Create Proxy** to create a proxy profile.

The Create Proxy Profile page appears.

- c. Complete the configuration by using the guidelines in [Table 87 on page 308](#).

- d. Click **OK**.

A new proxy profile is created.

- e. Click **Apply Proxy**.

Applying proxy enables the SRX Series Firewall and Juniper ATP Cloud to communicate through the proxy server.

Table 87: Fields on the Create Proxy Profile Page

Field	Action
Profile Name	Enter a name for the proxy profile.
Connection Type	Select the connection type server from the list that proxy profile uses: • Server IP—Enter the IP address of the proxy server. • Host Name—Enter the name of the proxy server.
Port Number	Select a port number for the proxy profile. Range is 0 to 65535.

2. *Enroll SRX Series Firewall with ATP Cloud*

a. Click **Enroll**.

The ATP Cloud Enrollment page appears.

NOTE: If there are any existing configuration changes, a message appears for you to commit the changes and then to proceed with the enrollment process.

b. Complete the configuration by using the guidelines in [Table 88 on page 309](#).

c. Click **OK**.

The SRX Series Firewall enrollment progress, successful message, or any errors will be shown at the end of the ATP Cloud Enrollment page.

NOTE:

- A new realm is created if you have enabled **Create New Realm** and then the SRX Series Firewall is enrolled to Juniper ATP Cloud. If there is any existing enrollment for the same SRX Series Firewall, CLI sends the data to Juniper ATP Cloud portal to do the duplicate validation during the enrollment process. You cannot check for the duplicate validation through J-Web.
- Click **Diagnostics** to troubleshoot any enrollment errors.

- Click **UnEnroll** if you wish to disenroll your device from ATP

Table 88: Fields on the ATP Cloud Enrollment Page

Field	Description
Create New Realm	By default, this option will be disabled if you have an ATP Cloud account with an associated license. Enable this option to add a new realm if you do not have an ATP Cloud account with an associated license.
Location	Select a region of the world from the list.
Email	Enter your E-mail address.
Password	Enter a unique string at least eight characters long. It must include both uppercase letters, lowercase letters, and at least one number. It can also include special characters. No spaces are allowed and you cannot use the same sequence of characters that are in your e-mail address.
Confirm Password	Reenter the password.
Company Name	Enter a company name to enroll into the realm. A company name can only contain alphanumeric characters, special characters (underscore and dash).
Realm	Enter a name for the security realm. This should be a name that is meaningful to your organization. A realm name can only contain alphanumeric characters and the dash symbol. Once created, this name cannot be changed.

About the Diagnostics Page

You are here: **Device Administration** > **ATP Management** > **Diagnostics**.

Use this page to diagnose and verify threat prevention.

Table 89 on page 310 describes the fields on the Diagnostics page.

Table 89: Fields on the Diagnostics Page

Field	Description
Diagnostics	
ATP Diagnostics	Select an option from the list to diagnose.
Diagnostics Logs	Displays the diagnostic logs for the selected option.
Run Diagnostics	Enables you to see the diagnostics of a certain region.
Check Connectivity	
Check	Click Check to verify the connectivity.
Server Details	
Server hostname	Specify the host name of the server.
Server realm	Specifies the name of a server realm.
Server port	Specify the server port number.
Connection Plane	
Connection time	Specify the connection time of the server.
Connection Status	Specify the connection status.
Service Plane	
Card Info	Specify the card number.
Connection Active Number	Specify the connection active numbers.

Table 89: Fields on the Diagnostics Page *(Continued)*

Field	Description
Connection Relay statistics	Specify the connection relay statistics.
Other Details	
Configured Proxy Server	Specify the configured proxy server.
Port Number	Specify the port number of the proxy server.

RELATED DOCUMENTATION

| [Monitor Threat Prevention](#) | 120

Operations

IN THIS CHAPTER

- [Maintain Files | 312](#)
- [Maintain Reboot Schedule | 315](#)
- [Maintain System Snapshots | 317](#)

Maintain Files

IN THIS SECTION

- [About Files Page | 312](#)
- [Clean Up Files | 312](#)
- [Download and Delete Files | 313](#)

About Files Page

You are here: **Device Administration** > **Operations** > **Files**.

You can clean up files, download, or delete files.

Clean Up Files

To maintain files:

1. Click **Clean Up Files**.

The device will perform the following tasks:

- Rotates log files—Indicates all information in the current log files is archived and fresh log files are created.

- Deletes log files in **/var/log**—Indicates any files that are not currently being written to are deleted.
- Deletes temporary files in **/var/tmp**—Indicates any files that have not been accessed within two days are deleted.
- Deletes all crash files in **/var/crash**—Indicates any core files that the device has written during an error are deleted.
- Deletes all software images (*.tgz files) in **/var/sw/pkg**—Indicates any software image copied to this directory during software upgrades are deleted.

The J-Web interface displays the files that you can delete and the amount of space that will be freed on the file system.

2. Click one:

- **OK**—Deletes the files and returns to the Files page.
- **Cancel**—Cancels your entries and returns to the Files page.

Download and Delete Files

[Table 90 on page 313](#) provides the maintenance options to download and delete files.

Table 90: Download and Delete Files Maintenance Options

File Type	Function
Log Files	Lists the log files located in the /var/log directory on the device. Select an option: • Delete—Deletes files. • Download—Downloads files.
Temporary Files	Lists the temporary files located in the /var/tmp directory on the device. Select an option: • Delete—Deletes files. • Download—Downloads files.

Table 90: Download and Delete Files Maintenance Options (*Continued*)

File Type	Function
Jailed Temporary Files	Lists the jailed temporary files located in the /var/jail/tmp directory on the device. Select an option: • Delete—Deletes files. • Download—Downloads files.
Old JUNOS Software	Lists the software images located in the /var/sw/pkg (*.tgz files) directory on the device. Select an option: • Delete—Deletes files. • Download—Downloads files.
Crash (Core) File	Lists the core files located in the /var/crash directory on the device. Select an option: • Delete—Deletes files. • Download—Downloads files.
Database Files	Lists the database files located in the /var/db directory on the device. Select an option: • Delete—Deletes files. • Download—Downloads files.

SEE ALSO
[Maintain Reboot Schedule | 315](#)

Maintain Reboot Schedule

You are here: **Device Administration** > **Operations** > **Reboot**.

You can schedule reboot or halt the system using options such as reboot Immediately, reboot in, reboot with the system time, or halt immediately.

NOTE: A halted system can only be accessed from the system console port.

To reboot or halt the system:

1. Complete the configuration according to the guidelines provided in [Table 91 on page 315](#).

Table 91: Reboot Schedule Maintenance Options

Field	Action
Reboot Immediately	Select this option to reboot the device immediately.
Reboot in <i>number of minutes</i>	Select this option to reboot the device after the specified number of minutes from the current time.
Reboot when the system time is <i>hour:minute</i>	Select this option to reboot the device at the absolute time that you specify, on the current day. Select a two-digit hour in 24-hour format and a two-digit minute.
Halt Immediately NOTE: This option is not available in SRX4600 device.	Select this option to stop the device immediately. After the software has stopped, you can access the device through the console port only.

Table 91: Reboot Schedule Maintenance Options (*Continued*)

Field	Action
Reboot From Media NOTE: This option is not available in SRX4600 device.	Choose the boot device from the Reboot From Media list: • internal—Reboots from the internal media (default). • usb—Reboots from the USB storage device.
Message	Type a message to be displayed to the user on the device before the reboot occurs.

2. Click **Schedule**.

Schedules a reboot based on the scheduled configuration.

3. The J-Web interface requests confirmation to perform the reboot or to halt.

Click **OK** to confirm to reboot or alt the system or click **Cancel** to return to the Reboot page.

NOTE:

- If the reboot is scheduled to occur immediately, the device reboots. You cannot access J-Web until the device has restarted and the boot sequence is complete. After the reboot is complete, refresh the browser window to display the J-Web login page.
- If the reboot is scheduled to occur in the future, the Reboot page displays the time until reboot. You have the option to cancel the request by clicking **Cancel Reboot** on the J-Web interface Reboot page.
- If the device is halted, all software processes stop and you can access the device through the console port only. Reboot the device by pressing any key on the keyboard.
- If you cannot connect to the device through the console port, shut down the device by pressing and holding the power button on the front panel until the POWER LED turns off. After the device has shut down, you can power on the device by pressing the power button again. The POWER LED lights during startup and remains steadily green when the device is operating normally.

RELATED DOCUMENTATION

Maintain System Snapshots | 317

Maintain System Snapshots

You are here: **Device Administration** > **Operations** > **Snapshot**.

You can configure boot devices to replace primary boot device or to act as a backup boot device.

The snapshot process copies the current system software, along with the current and rescue configurations, to alternate media. Optionally, you can copy only the factory and rescue configurations.

To maintain the system snapshots, you create a snapshot of the running system software and save the snapshot to an alternate media.

1. Complete the configuration according to the guidelines provided in [Table 92 on page 317](#).
2. Click **Snapshot**.
Creates a boot device on an alternate media.
3. Click **OK** to perform the system snapshot to a media or click **Cancel** to return to the Snapshot page.

Table 92: Snapshot Maintenance Options

Field	Function
Target Media	Specifies the boot device to copy the snapshot to. NOTE: You cannot copy software to the active boot device. Select an option for a boot device that is not the active boot device: • internal—Copies software to the internal media. • usb—Copies software to the device connected to the USB port.
Partition	Partitions the media. This process is usually necessary for boot devices that do not already have software installed on them. Select the check box.

Table 92: Snapshot Maintenance Options *(Continued)*

Field	Function
Factory	Copies only the default files that were loaded on the internal media when it was shipped from the factory, plus the rescue configuration if one has been set. Select the check box. NOTE: After a boot device is created with the default factory configuration, it can operate only in an internal media slot.

RELATED DOCUMENTATION

Upload Software Packages 319
Install Software Packages 320
Rollback Software Package Version 321

Software Management

IN THIS CHAPTER

- Upload Software Packages | 319
- Install Software Packages | 320
- Rollback Software Package Version | 321

Upload Software Packages

You are here: **Device Administration** > **Software Management** > **Upload Package**.

You can upload a software package file to the device for installation.

To upload software packages:

1. Complete the configuration according to the guidelines provided in [Table 93 on page 319](#).

Table 93: Upload Package Maintenance Options

Field	Action
File to Upload	Enter the location of the software package on the local system or click Choose File to navigate to the location.
Reboot If Required	Select the check box to automatically reboot when the upgrade is complete.
Do not save backup	Select the check box so that backup copy of the current Junos OS package is not saved.

Table 93: Upload Package Maintenance Options *(Continued)*

Field	Action
Format and re-partition the media before installation NOTE: This option is not available for SRX4600 devices.	Select the check box to format the internal media with dual-root partitioning.

2. Click **Upload and Install Package**.

The software is activated after the device has rebooted.

RELATED DOCUMENTATION

[Install Software Packages | 320](#)

[Rollback Software Package Version | 321](#)

Install Software Packages

You are here: **Device Administration** > **Software Management** > **Install Package**.

You can install a software package from a remote server.

To install software packages:

1. Complete the configuration according to the guidelines provided in [Table 94 on page 320](#).

Table 94: Install Package Maintenance Options

Field	Action
Package Location	Enter the full address of the software package location on the FTP or HTTP server. For example, use one of the following formats: <i>ftp://hostname/pathname/package-name</i> <i>http://hostname/pathname/package-name</i>

Table 94: Install Package Maintenance Options *(Continued)*

Field	Action
User	Enter the username to use on a remote server.
Password	Enter the password to use on a remote server.
Reboot If Required	Select the check box to automatically reboot when the upgrade is complete.
Do not save backup	Select the check box so that backup copy of the current Junos OS package is not saved.
Format and re-partition the media before installation	Select the check box to format the internal media with dual-root partitioning.

2. Click **Fetch and Install Package**.

The software is activated after the device reboots.

RELATED DOCUMENTATION

[Rollback Software Package Version | 321](#)

Rollback Software Package Version

You are here: **Device Administration** > **Software Management** > **Rollback**.

You can rollback to the previously installed version of the device software.

To rollback software package version:

1. Click **Rollback** to rollback to the previous version of the software.

NOTE: You cannot stop the process once the rollback operation is requested.

2. Reboot the device when the rollback process is complete and for the new software to take effect. To reboot, perform the steps in ["Maintain Reboot Schedule" on page 315](#).

NOTE: To rollback to an earlier version, follow the procedure for upgrading, using the software image labeled with the appropriate release.

RELATED DOCUMENTATION

[Upload Software Packages](#) | 319

[Install Software Packages](#) | 320

Configuration Management

IN THIS CHAPTER

- [Manage Upload Configuration Files | 323](#)
- [Manage Configuration History | 324](#)
- [Manage Rescue Configuration | 328](#)

Manage Upload Configuration Files

You are here: **Device Administration** > **Configuration Management** > **Upload**.

You can compare two configuration files, download a configuration file to your local system, or roll back the configuration to any of the previous versions stored on the device.

To manage upload configuration files:

1. Enter the absolute path and filename in the **File to Upload** box.

NOTE: You can also click **Browse** to navigate to the file location and select it.

2. Click **Upload and Commit** to upload and commit the configuration.

The device checks the configuration for the correct syntax before committing it.

NOTE: The file configuration replaces the existing configuration and continues the upload and commit process. If any errors occur when the file is loading or committing, J-Web displays the error and restores the previous configuration.

RELATED DOCUMENTATION

[Manage Configuration History | 324](#)

Manage Configuration History

You are here: **Device Administration** > **Configuration Management** > **History**.

You can view configuration history and database information about users editing the configuration database.

To manage configuration history:

1. Complete the configuration according to the guidelines provided in [Table 95 on page 324](#).

Table 95: History Maintenance Options

Field	Function
Number	Indicates the version of the configuration file. To view a configuration, click the version number .
Date/Time	Indicates the date and time the configuration was committed.
User	Indicates the name of the user who committed the configuration.

Table 95: History Maintenance Options *(Continued)*

Field	Function
Client	Indicates the method by which the configuration was committed. The available options are: • cli—A user entered a Junos OS CLI command. • junoscript—A Junos XML management protocol client performed the operation. Commit operations performed by users through the J-Web interface are identified in this way. • snmp—An SNMP set request started the operation. • button—The CONFIG button on the router was pressed to commit the rescue configuration (if set) or to clear all configurations except the factory configuration. • autoinstall—Autoinstallation is performed. • other—Another method was used to commit the configuration.
Comment	Indicates comments.

Table 95: History Maintenance Options (*Continued*)

Field	Function
Log Message	Indicates the method used to edit the configuration. • Imported via paste—Configuration was edited and loaded with the Device Administration > Tools > CLI Editor option. • Imported upload [filename]—Configuration was uploaded with the Device Administration > Configuration Management > Upload option. • Modified via quick-configuration—Configuration was modified with the specified version of the J-Web user interface. • Rolled back via user-interface—Configuration was rolled back to a previous version through the user interface specified by <i>user-interface</i>, which can be Web Interface or CLI.

Table 95: History Maintenance Options *(Continued)*

Field	Function
Action	Indicates action to perform with the configuration file. Select any one of the following available options: • Download—Downloads a configuration file to your local system. Select the options on your Web browser to save the configuration file to a target directory on your local system. The file is saved as an ASCII file. • Rollback—Rolls back the configuration to any of the previous versions stored on the device. The History page displays the results of the rollback operation. NOTE: Click Rollback to load the device and download the selected configuration. This behavior is different from entering the rollback configuration mode command from the CLI, where the configuration is loaded, but not committed.

2. To compare configurations files:

- a. Select any two configuration files you want to compare.
- b. Click **Compare**.

The History page displays the differences between the two configuration files at each hierarchy level as follows:

- Lines that have changed are highlighted side by side in green.
- Lines that exist only in the most recent configuration file are displayed in red on the left.
- Lines that exist only in the least recent configuration file are displayed in blue on the right.

RELATED DOCUMENTATION

[Manage Rescue Configuration | 328](#)

[Manage Upload Configuration Files | 323](#)

Manage Rescue Configuration

You are here: **Device Administration** > **Configuration Management** > **Rescue**.

If you inadvertently commit a configuration that denies management access, the only recourse may be to connect the console. Alternatively, you can rescue configuration that allows the management access to the device.

To load and commit the rescue configuration, press and immediately release the **Config** button on the chassis.

You can set or delete the rescue configuration.

To set or delete rescue configuration:

Click one:

- **View rescue configuration**—Displays the current rescue configuration (if it exists).
- **Set rescue configuration**—Sets the current running configuration as the rescue configuration. Click **OK** to confirm or **Cancel** to return to the Rescue page.
- **Delete rescue configuration**—Deletes the current rescue configuration. Click **OK** to confirm or **Cancel** to return to the Rescue page.

RELATED DOCUMENTATION

[Manage Your Licenses | 287](#)

[Manage Device Certificates](#)

Alarm Management

IN THIS CHAPTER

- [Monitor Chassis Alarm | 329](#)
- [Monitor System Alarm | 335](#)

Monitor Chassis Alarm

IN THIS SECTION

- [About Chassis Alarm Page | 329](#)
- [Create Chassis Alarm Definition | 329](#)
- [Edit Chassis Alarm Definition | 334](#)

About Chassis Alarm Page

You are here: **Device Administration** > **Alarm Management** > **Chassis Alarm**.

You can create a chassis alarm definition by selecting various options such as DS1, Ethernet, and integrated service, and so on.

Create Chassis Alarm Definition

To create Chassis Alarm Definition:

1. Enter the information specified in [Table 96 on page 330](#) to create Chassis Alarm Definition.

Table 96: Chassis Alarm Definition Options

Chassis Component	Alarm Configuration Option
DS1	Alarm indicator signal (ais) Yellow alarm (ylw) Select an alarm condition from the list for DS1: • Ignore • Red • Yellow • None
Ethernet	Link is down (link-down) Select an alarm condition from the list for Ethernet: • Ignore • Red • Yellow • None
Integrated Services	Hardware or software failure (failure) Select an alarm condition from the list for Integrated Services: • Ignore • Red • Yellow • None

Table 96: Chassis Alarm Definition Options *(Continued)*

Chassis Component	Alarm Configuration Option
Management Ethernet	Link is down (link-down) Select an alarm condition from the list for Management Ethernet: • Ignore • Red • Yellow • None
Optical Transport Network Optical channel Data Unit (OTN ODU)	Backward defect indication (odu-bdi) Payload type mismatch (odu-ptim) Trail trace identifier mismatch (odu-ttim) Select an alarm condition from the list for OTN ODU: • Ignore • Red • Yellow • None

Table 96: Chassis Alarm Definition Options *(Continued)*

Chassis Component	Alarm Configuration Option
Optical Transport Network Optical channel Transport Unit (OTN OTU)	Loss of frame (oc-lof) Loss of multiframe (oc-lom) Loss of signal (oc-los) Backward defect indication (oc-bdi) Forward error correction excessive FEC errors (out-fec-excessive-errs) Incoming alignment error (out-iae) Trail trace identifier mismatch (out-ttim) Wavelength-Lock (Wavelength Lock) Select a alarm condition from the list for OTN OTU: • Ignore • Red • Yellow • None
Serial	Clear-to-send (CTS) signal absent (cts-absent) Data carrier detect (DCD) signal absent (dcd-absent) Data set ready (DSR) signal absent (dsr absent) Loss of receive clock (loss-of-rx-clock) Loss of transmit clock (loss-of-tx-clock) Select an alarm condition from the list for Serial: • Ignore • Red • Yellow • None

Table 96: Chassis Alarm Definition Options *(Continued)*

Chassis Component	Alarm Configuration Option
Services	Services module hardware down (hw-down)
	Services link down (linkdown)
	Services module held in reset (pic-hold-reset)
	Services module reset (pic-reset)
	Receive errors (rx-errors)
	Services module software down (sw-down)
	Transmit errors (tx-errors)
	Select an alarm condition from the list for Services:
	• Ignore
	• Red
	• Yellow
	• None

Table 96: Chassis Alarm Definition Options *(Continued)*

Chassis Component	Alarm Configuration Option
DS3	Alarm indication signal (ais)
	Excessive number of zeros (exz)
	Far-end receive failure (ferf)
	Idle alarm (idle)
	Line code violation (lcv)
	Loss of frame (lof)
	Loss of signal (los)
	Phase-locked loop out of lock (pll)
	Yellow alarm (ylw)
	Select an alarm condition from the list for DS3:
	• Ignore • Red • Yellow • None

2. Click **OK** to create Chassis Alarm Definition.

The Chassis Alarm Definition page appears.

3. Click **Cancel** to cancel your entries and returns to the Chassis Alarm Definition page.

Edit Chassis Alarm Definition

To edit Chassis Alarm Definition:

1. Click the pencil icon available on the upper-right corner of the Chassis Alarm Definition page.
See [Table 96 on page 330](#) for the options available for editing the Chassis Alarm Definition page.
2. Click **OK**.

RELATED DOCUMENTATION

Monitor System Alarm

IN THIS SECTION

- About System Alarm Page | 335
- Create System Alarm Configuration | 335
- Edit System Alarm Configuration | 339

About System Alarm Page

You are here: **Device Administration** > **Alarm Management** > **System Alarm**.

You can enable system login alarm login classes. The configured Login Classes will display system alarms while logging in.

Create System Alarm Configuration

To create System Alarm Configuration:

1. Enter the information specified in [Table 97 on page 335](#) to create System Alarm Configuration.

Table 97: RPM Information Troubleshooting Options

Field	Function
Currently Running Tests	
Graph	Click the Graph link to display the graph (if it is not already displayed) or to update the graph for a particular test.
Owner	Configured owner name of the RPM test.
Test Name	Configured name of the RPM test.

Table 97: RPM Information Troubleshooting Options *(Continued)*

Field	Function
Probe Type	Type of RPM probe configured for the specified test. Following are valid probe types: • http-get • http-get-metadata • icmp-ping • icmp-ping-timestamp • tcp-ping • udp-ping
Target Address	IP address or URL of the remote server that is being probed by the RPM test.
Source Address	Explicitly configured source address that is included in the probe packet headers. If no source address is configured, the RPM probe packets use the outgoing interface as the source address, and the Source Address field is empty.
Minimum RTT	Shortest round-trip time from the J Series device to the remote server, as measured over the course of the test.
Maximum RTT	Longest round-trip time from the J Series device to the remote server, as measured over the course of the test.
Average RTT	Average round-trip time from the J Series device to the remote server, as measured over the course of the test.
Standard Deviation RTT	Standard deviation of round-trip times from the J Series device to the remote server, as measured over the course of the test.

Table 97: RPM Information Troubleshooting Options *(Continued)*

Field	Function
Probes Sent	Total number of probes sent over the course of the test.
Loss Percentage	Percentage of probes sent for which a response was not received.
Round-Trip Time for a Probe	
Samples	Total number of probes used for the data set. The J Series device maintains records of the most recent 50 probes for each configured test. These 50 probes are used to generate RPM statistics for a particular test.
Earliest Sample	System time when the first probe in the sample was received.
Latest Sample	System time when the last probe in the sample was received.
Mean Value	Average round-trip time for the 50-probe sample.
Standard Deviation	Standard deviation of the round-trip times for the 50-probe sample.
Lowest Value	Shortest round-trip time from the device to the remote server, as measured over the 50-probe sample.
Time of Lowest Sample	System time when the lowest value in the 50-probe sample was received.
Highest Value	Longest round-trip time from the J Series device to the remote server, as measured over the 50-probe sample.

Table 97: RPM Information Troubleshooting Options (*Continued*)

Field	Function
Time of Highest Sample	System time when the highest value in the 50-probe sample was received.
Cumulative Jitter for a Probe	
Samples	Total number of probes used for the data set. The J Series device maintains records of the most recent 50 probes for each configured test. These 50 probes are used to generate RPM statistics for a particular test.
Earliest Sample	System time when the first probe in the sample was received.
Latest Sample	System time when the last probe in the sample was received.
Mean Value	Average jitter for the 50-probe sample.
Standard Deviation	Standard deviation of the jitter values for the 50-probe sample.
Lowest Value	Smallest jitter value, as measured over the 50-probe sample.
Time of Lowest Sample	System time when the lowest value in the 50-probe sample was received.
Highest Value	Highest jitter value, as measured over the 50-probe sample.
Time of Highest Sample	System time when the highest jitter value in the 50-probe sample was received.

2. Click **OK** to create System Alarm Configuration.

System Alarm Configuration page appears.

3. Click **Cancel** to cancel your entries and returns to the System Alarm Configuration page.

Edit System Alarm Configuration

To edit System Alarm Configuration:

1. Click the pencil icon available on the upper-right corner of the System Alarm Configuration page.
See [Table 97 on page 335](#) for the options available for editing the System Alarm Configuration page.
2. Click **OK**.

SEE ALSO

| [Monitor Chassis Alarm | 329](#)

CHAPTER 24

RPM

IN THIS CHAPTER

- Setup RPM | 340
- View RPM | 349

Setup RPM

IN THIS SECTION

- Problem | 340
- Solution | 340

Problem

Description

You are here: **Device Administration** > **RPM** > **Setup RPM**.

You can configure RPM parameters to monitor real-time performance through the J-Web interface. You can specify an RPM owner, request information related to probe, hardware timestamp, generates Traps, and specify a probe server.

Solution

To configure RPM parameters:

1. Enter the information specified in [Table 98 on page 341](#) to troubleshoot the issue.
2. From the main RPM configuration page, click one:

- **Apply**—Applies the configuration and stays on the RPM configuration page.
- **OK**—Applies the configuration and returns to the RPM configuration page.
- **Cancel**—Cancels your entries and returns to the RPM configuration page.

Table 98: RPM Setup Troubleshooting Options

Field	Function
Probe Owners	
Identification	
Owner Name	Specifies an RPM owner for which one or more RPM tests are configured. In most implementations, the owner name identifies a network on which a set of tests is being run (a particular customer, for example). Type the name of the RPM owner.
Performance Probe Tests	
Identification	
Test name	Specifies a unique name to identify the RPM test. Type the name of the RPM test.
Target (Address or URL)	Specifies an IP address or a URL of a probe target. Type the IP address, in dotted decimal notation, or the URL of the probe target. If the target is a URL, type a fully formed URL that includes http://.
Source Address	Specifies an IP address to be used as the probe source address. Type the source address to be used for the probe. If the source IP address is not one of the device's assigned addresses, the packet uses the outgoing interface's address as its source.

Table 98: RPM Setup Troubleshooting Options (*Continued*)

Field	Function
Routing Instance	Specifies a routing instance over which the probe is sent. Type the routing instance name. The routing instance applies only to probes of type <code>icmp</code> and icmp-timestamp. The default routing instance is inet.0.
History Size	Specifies the number of probe results saved in the probe history. Type a number between 0 and 255. The default history size is 50 probes.
Request Information	
Probe Type	Specifies the type of probe to send as part of the test. Select the desired probe type from the list: • http-get • http-get-metadata • icmp-ping • icmp-ping-timestamp • tcp-ping • udp-ping
Interval	Specifies the wait time (in seconds) between each probe transmission. Type a number between 1 and 255 (seconds).
Test Interval	Specifies the wait time (in seconds) between tests. Type a number between 0 and 86400 (seconds).

Table 98: RPM Setup Troubleshooting Options (*Continued*)

Field	Function
Probe Count	Specifies the total number of probes to be sent for each test. Type a number between 1 and 15.
Moving Average Size	Specifies the number of samples used for a moving average. Type a number between 0 and 225.
Destination Port	Specifies the TCP or UDP port to which probes are sent. To use TCP or UDP probes, you must configure the remote server as a probe receiver. Both the probe server and the remote server must be Juniper Networks devices configured to receive and transmit RPM probes on the same TCP or UDP port. Type the number 7—a standard TCP or UDP port number—or a port number from 49152 through 65535.
DSCP Bits	Specifies the Differentiated Services code point (DSCP) bits. This value must be a valid 6-bit pattern. The default is 000000. Type a valid 6-bit pattern.
Data Size	Specifies the size of the data portion of the ICMP probes. Type a size (in bytes) between 0 and 65507.
Data Fill	Specifies the contents of the data portion of the ICMP probes. Type a hexadecimal value between 1 and 800h to use as the contents of the ICMP probe data.
Hardware Timestamp	

Table 98: RPM Setup Troubleshooting Options (*Continued*)

Field	Function
One Way Hardware Timestamp	Specifies the hardware timestamps for one-way measurements. To enable one-way timestamping, select the check box.
Hardware Timestamp	Specifies timestamping of RPM probe messages. You can timestamp the following RPM probes to improve the measurement of latency or jitter: • ICMP ping • ICMP ping timestamp • UDP ping—destination port UDP-ECHO (port 7) only • UDP ping timestamp—destination port UDP-ECHO (port 7) only To enable timestamping, select the check box.
Destination Interface	Specifies the name of an output interface for probes. Select the interface from the list.
Maximum Probe Thresholds	
Successive Lost Probes	Specifies the total number of probes that must be lost successively to trigger a probe failure and generate a system log message. Type a number between 0 and 15.
Lost Probes	Specifies the total number of probes that must be lost to trigger a probe failure and generate a system log message. Type a number between 0 and 15.

Table 98: RPM Setup Troubleshooting Options *(Continued)*

Field	Function
Round Trip Time	Specifies the total round-trip time (in microseconds), from the device to the remote server, that triggers a probe failure and generates a system log message. Type a number between 0 and 60,000,000 (microseconds).
Jitter	Specifies the total jitter (in microseconds) for a test that triggers a probe failure and generates a system log message. Type a number between 0 and 60,000,000 (microseconds).
Standard Deviation	Specifies the maximum allowable standard deviation (in microseconds) for a test, which, if exceeded, triggers a probe failure and generates a system log message. Type a number between 0 and 60,000,000 (microseconds).
Egress Time	Specifies the total one-way time (in microseconds), from the device to the remote server, that triggers a probe failure and generates a system log message. Type a number between 0 and 60,000,000 (microseconds).
Ingress Time	Specifies the total one-way time (in microseconds), from the remote server to the device, that triggers a probe failure and generates a system log message. Type a number between 0 and 60,000,000 (microseconds)
Jitter Egress Time	Specifies the total outbound-time jitter (in microseconds) for a test that triggers a probe failure and generates a system log message. Type a number between 0 and 60,000,000 (microseconds)

Table 98: RPM Setup Troubleshooting Options *(Continued)*

Field	Function
Jitter Ingress Time	Specifies the total inbound-time jitter (in microseconds) for a test that triggers a probe failure and generates a system log message. Type a number between 0 and 60,000,000 (microseconds).
Egress Standard Deviation	Specifies the maximum allowable standard deviation of outbound times (in microseconds) for a test, which, if exceeded, triggers a probe failure and generates a system log message. Type a number between 0 and 60,000,000 (microseconds).
Ingress Standard Deviation	Specifies the maximum allowable standard deviation of inbound times (in microseconds) for a test, which, if exceeded, triggers a probe failure and generates a system log message. Type a number between 0 and 60,000,000 (microseconds).
Traps	
Egress Jitter Exceeded	Generates SNMP traps when the threshold for jitter in outbound time is exceeded. • To enable SNMP traps for this condition, select the check box. • To disable SNMP traps, clear the check box.
Egress Standard Deviation Exceeded	Generates SNMP traps when the threshold for standard deviation in outbound times is exceeded. • To enable SNMP traps for this condition, select the check box. • To disable SNMP traps, clear the check box.

Table 98: RPM Setup Troubleshooting Options *(Continued)*

Field	Function
Egress Time Exceeded	Generates SNMP traps when the threshold for maximum outbound time is exceeded. • To enable SNMP traps for this condition, select the check box. • To disable SNMP traps, clear the check box.
Ingress Jitter Exceeded	Generates SNMP traps when the threshold for jitter in inbound time is exceeded. • To enable SNMP traps for this condition, select the check box. • To disable SNMP traps, clear the check box.
Ingress Standard Deviation Exceeded	Generates SNMP traps when the threshold for standard deviation in inbound times is exceeded. • To enable SNMP traps for this condition, select the check box. • To disable SNMP traps, clear the check box.
Ingress Time Exceeded	Generates traps when the threshold for maximum inbound time is exceeded. • To enable SNMP traps for this condition, select the check box. • To disable SNMP traps, clear the check box.
Jitter Exceeded	Generates traps when the threshold for jitter in round-trip time is exceeded. • To enable SNMP traps for this condition, select the check box. • To disable SNMP traps, clear the check box.

Table 98: RPM Setup Troubleshooting Options *(Continued)*

Field	Function
Probe Failure	Generates traps when the threshold for the number of successive lost probes is reached. • To enable SNMP traps for this condition, select the check box. • To disable SNMP traps, clear the check box.
RTT Exceeded	Generates traps when the threshold for maximum round-trip time is exceeded. • To enable SNMP traps for this condition, select the check box. • To disable SNMP traps, clear the check box.
Standard Deviation Exceeded	Generates traps when the threshold for standard deviation in round-trip times is exceeded. • To enable SNMP traps for this condition, select the check box. • To disable SNMP traps, clear the check box.
Test Completion	Generates traps when a test is completed. • To enable SNMP traps for this condition, select the check box. • To disable SNMP traps, clear the check box.
Test Failure	Generates traps when the threshold for the total number of lost probes is reached. • To enable SNMP traps for this condition, select the check box. • To disable SNMP traps, clear the check box.
Maximum Number of Concurrent Probes	

Table 98: RPM Setup Troubleshooting Options *(Continued)*

Field	Function
Maximum Number of Concurrent Probes	Specifies the maximum number of concurrent probes allowed. Type a number between 1 and 500.
Probe Server	
TCP Probe Server	Specifies the port on which the device is to receive and transmit TCP probes. Type number 7, or a port number from 49160 through 65535.
UDP Probe Server	Specifies the port on which the device is to receive and transmit UDP probes. Type number 7, or a port number from 49160 through 65535.

RELATED DOCUMENTATION

[View RPM | 349](#)

View RPM

IN THIS SECTION

- Problem | 350
- Solution | 350

Problem

Description

You are here: **Device Administration > RPM > View RPM.**

You can configure the RPM probes, to view the RPM statistics and to ensure that the device is configured to receive and transmit TCP and UDP RPM probes on correct ports.

You can view the RPM configuration to verify the following information:

- The RPM configuration is within the expected values.
- The RPM probes are functioning and the RPM statistics are within expected values.
- The device is configured to receive and transmit TCP and UDP RPM probes on the correct ports.

In addition to the RPM statistics for each RPM test, the J-Web interface displays the round-trip times and cumulative jitter graphically. In the graphs, the round-trip time and jitter values are plotted as a function of the system time. Large spikes in round-trip time or jitter indicate a slower outbound (egress) or inbound (ingress) time for the probe sent at that particular time.

Solution

To view RPM information:

1. Enter the information specified in [Table 99 on page 350](#).

Table 99: RPM Information Troubleshooting Options

Field	Function
Currently Running Tests	
Graph	Click the Graph link to display the graph (if it is not already displayed) or to update the graph for a particular test.
Owner	Configured owner name of the RPM test.
Test Name	Configured name of the RPM test.

Table 99: RPM Information Troubleshooting Options (*Continued*)

Field	Function
Probe Type	Type of RPM probe configured for the specified test. Following are valid probe types: • http-get • http-get-metadata • icmp-ping • icmp-ping-timestamp • tcp-ping • udp-ping
Target Address	IP address or URL of the remote server that is being probed by the RPM test.
Source Address	Explicitly configured source address that is included in the probe packet headers. If no source address is configured, the RPM probe packets use the outgoing interface as the source address, and the Source Address field is empty.
Minimum RTT	Shortest round-trip time from the J Series device to the remote server, as measured over the course of the test.
Maximum RTT	Longest round-trip time from the J Series device to the remote server, as measured over the course of the test.
Average RTT	Average round-trip time from the J Series device to the remote server, as measured over the course of the test.
Standard Deviation RTT	Standard deviation of round-trip times from the J Series device to the remote server, as measured over the course of the test.

Table 99: RPM Information Troubleshooting Options (*Continued*)

Field	Function
Probes Sent	Total number of probes sent over the course of the test.
Loss Percentage	Percentage of probes sent for which a response was not received.
Round-Trip Time for a Probe	
Samples	Total number of probes used for the data set. The J Series device maintains records of the most recent 50 probes for each configured test. These 50 probes are used to generate RPM statistics for a particular test.
Earliest Sample	System time when the first probe in the sample was received.
Latest Sample	System time when the last probe in the sample was received.
Mean Value	Average round-trip time for the 50-probe sample.
Standard Deviation	Standard deviation of the round-trip times for the 50-probe sample.
Lowest Value	Shortest round-trip time from the device to the remote server, as measured over the 50-probe sample.
Time of Lowest Sample	System time when the lowest value in the 50-probe sample was received.
Highest Value	Longest round-trip time from the J Series device to the remote server, as measured over the 50-probe sample.

Table 99: RPM Information Troubleshooting Options (*Continued*)

Field	Function
Time of Highest Sample	System time when the highest value in the 50-probe sample was received.
Cumulative Jitter for a Probe	
Samples	Total number of probes used for the data set. The J Series device maintains records of the most recent 50 probes for each configured test. These 50 probes are used to generate RPM statistics for a particular test.
Earliest Sample	System time when the first probe in the sample was received.
Latest Sample	System time when the last probe in the sample was received.
Mean Value	Average jitter for the 50-probe sample.
Standard Deviation	Standard deviation of the jitter values for the 50-probe sample.
Lowest Value	Smallest jitter value, as measured over the 50-probe sample.
Time of Lowest Sample	System time when the lowest value in the 50-probe sample was received.
Highest Value	Highest jitter value, as measured over the 50-probe sample.
Time of Highest Sample	System time when the highest jitter value in the 50-probe sample was received.

RELATED DOCUMENTATION

[Setup RPM](#) | 340

Tools

IN THIS CHAPTER

- [Troubleshoot Ping Host | 355](#)
- [Troubleshoot Ping MPLS | 359](#)
- [Troubleshoot Traceroute | 365](#)
- [Control Plane Packet Capture | 368](#)
- [About the Data Plane Packet Capture Page | 375](#)
- [Access CLI | 379](#)
- [View CLI Configuration | 381](#)
- [Edit CLI Configuration | 382](#)
- [Point and Click CLI | 383](#)

Troubleshoot Ping Host

IN THIS SECTION

- [About Ping Host Page | 355](#)

About Ping Host Page

You are here: **Device Administration** > **Tools** > **Ping Host**.

The ping diagnostic tool sends a series of ICMP "echo request" packets to the specified remote host.

The receipt of such packets will usually result in the remote host replying with an ICMP "echo response." Note that some hosts are configured not to respond to ICMP "echo requests," so a lack of responses does not necessarily represent a connectivity problem. Also, some firewalls block the ICMP packet types that ping uses, so you may find that you are not able to ping outside your local network.

You can ping a host to verify that the host can be reached over the network or not.

To use the ping host tool:

1. Enter the information specified in [Table 100 on page 356](#) to troubleshoot the issue.

The Remote Host field is the only required field.

2. Click the expand icon next to Advanced options.
3. Click **Start**.

The results of the ping operation are displayed in [Table 101 on page 358](#). If no options are specified, each ping response is in the following format:

```
bytes bytes from ip-address: icmp_seq=number ttl=number time=time
```

4. Click **OK** to stop the ping operation before it is complete.

Table 100: Ping Host Troubleshooting Options

Field	Action
Remote Host	Type the hostname or IP address of the host to ping.
Advanced Options	
Don't Resolve Addresses	• To suppress the display of the hop hostnames along t the path, select the check box. • To display the hop hostnames along the path, clear the check box.
Interface	From the list, select the interface on which ping requests are sent. If you select any , the ping requests are sent on all interfaces.
Count	From the list, select the number of ping requests to send.
Don't Fragment	• To set the don't fragment (DF) bit in the IP header of the ping request packet, select the check box. • To clear the DF bit in the IP header of the ping request packet, clear the check box.

Table 100: Ping Host Troubleshooting Options (Continued)

Field	Action
Record Route	• To record and display the path of the packet, select the check box. • To suppress the recording and display of the path of the packet, clear the check box.
Type-of-Service	From the list, select the decimal value of the ToS in the IP header of the ping request packet.
Routing Instance	From the list, select the routing instance name for the ping attempt.
Interval	From the list, select the interval in seconds, between the transmission of each ping request.
Packet Size	Type the size, in bytes, of the packet. The size can be from 0 through 65468. The device adds 8 bytes to the size of the ICMP header.
Source Address	Type the source IP address of the ping request packet.
Time-to-Live	From the list, select the TTL hop count for the ping request packet.
Bypass Routing	• To bypass the routing table and send the ping requests to hosts on the specified interface only, select the check box. • To route the ping requests using the routing table, clear the check box. If the routing table is not used, ping requests are sent only to hosts on the interface specified in the Interface box. If the host is not on that interface, ping responses are not sent.

Table 101: Ping Host Results and Output Summary

Field	Function
<i>bytes</i> bytes from <i>ip-address</i>	• <i>bytes</i>—Size of ping response packet, which is equal to the value you entered in the Packet Size box, plus 8. • <i>ip-address</i>—IP address of destination host that sent the ping response packet.
icmp_seq=0 icmp_seq= <i>number</i>	<i>time</i> —Sequence Number field of the ping response packet. You can use this value to match the ping response to the corresponding ping request.
ttl= <i>number</i>	<i>number</i> —TTL hop-count value of the ping response packet.
time= <i>time</i>	<i>time</i> —Total time between the sending of the ping request packet and the receiving of the ping response packet, in milliseconds. This value is also called round-trip time.
<i>number</i> packets transmitted	<i>number</i> —Number of ping requests (probes) sent to host.
<i>number</i> packets received	<i>number</i> —Number of ping responses received from host.
<i>percentage</i> packet loss	<i>percentage</i> —Number of ping responses divided by the number of ping requests, specified as a percentage.
round-trip min/avg/max/ stddev = <i>min-time</i> / <i>avg-time</i> / <i>max-time</i> / <i>std-dev</i> ms	• <i>min-time</i>—Minimum round-trip time (see time=<i>time</i> field in this table). • <i>avg-time</i>—Average round-trip time. • <i>max-time</i>—Maximum round-trip time. • <i>std-dev</i>—Standard deviation of the round-trip times.

Table 101: Ping Host Results and Output Summary *(Continued)*

Field	Function
Output = Packet loss of 100 percent	If the device does not receive ping responses from the destination host (the output shows a packet loss of 100 percent), one of the following explanations might apply: • The host is not operational. • There are network connectivity problems between the device and the host. • The host might be configured to ignore ICMP echo requests. • The host might be configured with a firewall filter that blocks ICMP echo requests or ICMP echo responses. • The size of the ICMP echo request packet exceeds the MTU of a host along the path. • The value you selected in the TTL box was less than the number of hops in the path to the host, in which case the host might reply with an ICMP error message. For more information about ICMP, see RFC 792, <i>Internet Control Message Protocol</i>.

RELATED DOCUMENTATION

[Troubleshoot Ping MPLS | 359](#)

[Troubleshoot Traceroute | 365](#)

[Control Plane Packet Capture | 368](#)

Troubleshoot Ping MPLS

IN THIS SECTION

- [About Ping MPLS Page | 360](#)

About Ping MPLS Page

You are here: **Device Administration** > **Tools** > **Ping MPLS**.

You can send variations of ICMP "echo request" packets to the specified MPLS endpoint.

To use the ping MPLS tool:

1. Click the expand icon next to the ping MPLS option you want to use.
2. Enter information specified in [Table 102 on page 360](#) to troubleshoot the issue.
3. Click **Start**.

The results of the ping operation are displayed in [Table 103 on page 363](#).

4. Click **OK** to stop the ping operation before it is complete.

Table 102: Ping MPLS Troubleshooting Options

Field	Action
Ping RSVP-signaled LSP	
LSP Name	Type the name of the LSP to ping.
Source Address	Type the source IP address of the ping request packet—a valid address configured on a J Series device interface.
Count	From the list, select the number of ping requests to send. The default is 5 requests.
Detailed Output	Select the check box to display detailed output rather than brief ping output.
Ping LDP-signaled LSP	
FEC Prefix	Type the forwarding equivalence class (FEC) prefix and length of the LSP to ping.
Source Address	Type the source IP address of the ping request packet—a valid address configured on a J Series device interface.
Count	From the list, select the number of ping requests to send. The default is 5 requests.

Table 102: Ping MPLS Troubleshooting Options *(Continued)*

Field	Action
Detailed Output	Select the check box to display detailed output rather than brief ping output.
Ping LSP to Layer 3 VPN prefix	
Layer 3 VPN Name	Type the name of the VPN to ping.
Count	From the list, select the number of ping requests to send. The default is 5 requests.
Detailed Output	Select the check box to display detailed output rather than brief ping output.
VPN Prefix	Type the IP address prefix and length of the VPN to ping.
Source Address	Type the source IP address of the ping request packet—a valid address configured on a J Series device interface.
Ping LSP for a Layer 2 VPN connection by interface	
Interface	From the list, select the J Series device interface on which ping requests are sent. If you select any, the ping requests are sent on all interfaces. (See the interface naming conventions in the Junos OS Interfaces Configuration Guide for Security Devices.)
Source Address	Type the source IP address of the ping request packet—a valid address configured on a J series device interface.
Count	From the list, select the number of ping requests to send. The default is 5 requests.
Detailed Output	Select the check box to display detailed output rather than brief ping output.
Ping LSP for a Layer 2 VPN connection by instance	
Layer 2VPN Name	Type the name of the Layer 2 VPN to ping.

Table 102: Ping MPLS Troubleshooting Options (Continued)

Field	Action
Remote Site Identifier	Type the remote site identifier of the Layer 2 VPN to ping.
Source Address	Type the source IP address of the ping request packet—a valid address configured on a J Series device interface.
Local Site Identifier	Type the local site identifier of the Layer 2 VPN to ping.
Count	From the list, select the number of ping requests to send. The default is 5 requests.
Detailed Output	Select the check box to display detailed output rather than brief ping output.

Ping LSP to a Layer 2 circuit remote site by interface

Interface	From the list, select the J Series device interface on which ping requests are sent. If you select any , the ping requests are sent on all interfaces.
Source Address	Type the source IP address of the ping request packet—a valid address configured on a J Series device interface.
Count	From the list, select the number of ping requests to send. The default is 5 requests.
Detailed Output	Select the check box to display detailed output rather than brief ping output.

Ping LSP to a Layer 2 circuit remote site by VCI

Remote Neighbor	Type the IP address of the remote neighbor (PE router) within the virtual circuit to ping.
Circuit Identifier	Type the virtual circuit identifier for the Layer 2 circuit.
Source Address	Type the source IP address of the ping request packet—a valid address configured on a J Series device interface.

Table 102: Ping MPLS Troubleshooting Options (*Continued*)

Field	Action
Count	From the list, select the number of ping requests to send.
Detailed Output	Select the check box to display detailed output rather than brief ping output.
Ping endpoint of LSP	
VPN Prefix	Type either the LDP FEC prefix and length or the RSVP LSP endpoint address for the LSP to ping.
Source Address	Type the source IP address of the ping request packet—a valid address configured on a J Series device interface.
Count	From the list, select the number of ping requests to send.
Detailed Output	Select the check box to display detailed output rather than brief ping output.

Table 103: Ping MPLS Results and Output Summary

Field	Function
Exclamation point (!)	Echo reply was received.
Period (.)	Echo reply was not received within the timeout period.
x	Echo reply was received with an error code. Errored packets are not counted in the received packets count and are accounted for separately.
<i>number</i> packets transmitted	<i>number</i> —Number of ping requests (probes) sent to a host.
<i>number</i> packets received	<i>number</i> —Number of ping responses received from a host.

Table 103: Ping MPLS Results and Output Summary (*Continued*)

Field	Function
<i>percentage</i> packet loss	<i>percentage</i> —Number of ping responses divided by the number of ping requests, specified as a percentage.
time	For Layer 2 circuits only, the number of milliseconds required for the ping packet to reach the destination. This value is approximate, because the packet has to reach the Routing Engine.
Output = Packet loss of 100 percent	If the device does not receive ping responses from the destination host (the output shows a packet loss of 100 percent), one of the following explanations might apply: • The host is not operational. • There are network connectivity problems between the device and the host. • The host might be configured to ignore echo requests. • The host might be configured with a firewall filter that blocks echo requests or echo responses. • The size of the echo request packet exceeds the MTU of a host along the path. • The outbound node at the remote endpoint is not configured to handle MPLS packets. • The remote endpoint's loopback address is not configured to 127.0.0.1.

RELATED DOCUMENTATION

[Troubleshoot Traceroute | 365](#)
[Control Plane Packet Capture | 368](#)

Troubleshoot Traceroute

IN THIS SECTION

- [About Traceroute Page](#) | 365

About Traceroute Page

You are here: **Device Administration** > **Tools** > **Traceroute**.

The traceroute diagnostic tool uses a series of packets crafted to elicit an ICMP "time exceeded" messages from intermediate points in the network between your device and the specified host.

The time-to-live for a packet is decremented each time the packet is routed, so traceroute generally receives at least one "time exceeded" response from each waypoint. Traceroute starts with a packet with a time-to-live value of one, and increments the time to live for subsequent packets, thereby constructing a rudimentary map of the path between hosts.

Use this page to display a list of routers between the device and a specified destination host.

To use the traceroute tool:

1. Click the expand icon next to Advanced options.
2. Enter information in the Traceroute page as described in [Table 104 on page 366](#).

The Remote Host field is the only required field.

3. Click **Start**.

The results of the traceroute operation are displayed in [Table 105 on page 367](#). If no options are specified, each line of the traceroute display is in the following format:

```
hop-number host (ip-address) [as-number]time1 time2 time3
```

The device sends a total of three traceroute packets to each router along the path and displays the round-trip time for each traceroute operation. If the device times out before receiving a Time Exceeded message, an asterisk (*) is displayed for that round-trip time.

4. Click **OK** to stop the traceroute operation before it is complete.

Table 104: Ping Traceroute Troubleshooting Options

Field	Action
Remote Host	Type the hostname or IP address of the destination host of the traceroute.
Advanced Options	
Don't Resolve Addresses	- To suppress the display of the hop hostnames along the path, select the check box. - To display the hop hostnames along the path, clear the check box.
Interface	From the list, select the interface on which traceroute packets are sent. If you select any , the traceroute requests are sent on all interfaces.
Time-to-Live	From the list, select the time-to-live (TTL) hop count for the traceroute request packet.
Type-of-Service	From the list, select the decimal value of the type-of-service (ToS) value to include in the IP header of the traceroute request packet.
Resolve AS Numbers	- To display the autonomous system (AS) number of each intermediate hop between the device and the destination host, select the check box. - To suppress the display of the AS number of each intermediate hop between the device and the destination host, clear the check box.
Routing Instance	From the list, select the routing instance name for the ping attempt.
Gateway	Type the gateway IP address to route through.
Source Address	Type the source IP address of the outgoing traceroute packets.

Table 104: Ping Traceroute Troubleshooting Options (*Continued*)

Field	Action
Bypass Routing	- To bypass the routing table and send the traceroute packets to hosts on the specified interface only, select the check box. - To route the traceroute packets by means of the routing table, clear the check box. If the routing table is not used, traceroute packets are sent only to hosts on the interface specified in the Interface box. If the host is not on that interface, traceroute responses are not sent.

Table 105: Ping Traceroute Results and Output Summary

Field	Function
Ping Traceroute Results and Output Summary	
<i>hop-number</i>	Number of the hop (router) along the path.
<i>host</i>	Hostname, if available, or IP address of the router. To suppress the display of the hostname, select the Don't Resolve Addresses check box.
<i>ip-address</i>	IP address of the router.
<i>as-number</i>	AS number of the router.
<i>time1</i>	Round-trip time between the sending of the first traceroute packet and the receiving of the corresponding Time Exceeded packet from that particular router.
<i>time2</i>	Round-trip time between the sending of the second traceroute packet and the receiving of the corresponding Time Exceeded packet from that particular router.
<i>time3</i>	Round-trip time between the sending of the third traceroute packet and the receiving of the corresponding Time Exceeded packet from that particular router.

Table 105: Ping Traceroute Results and Output Summary *(Continued)*

Field	Function
Output = Complete path to the destination host not displayed	If the device does not display the complete path to the destination host, one of the following explanations might apply: • The host is not operational. • There are network connectivity problems between the device and the host. • The host, or a router along the path, might be configured to ignore ICMP traceroute messages. • The host, or a router along the path, might be configured with a firewall filter that blocks ICMP traceroute requests or ICMP time exceeded responses. • The value you selected in the Time Exceeded box was less than the number of hops in the path to the host. In this case, the host might reply with an ICMP error message. For more information about ICMP, see RFC 792, <i>Internet Control Message Protocol</i>.

RELATED DOCUMENTATION

| [Control Plane Packet Capture](#) | 368

Control Plane Packet Capture

IN THIS SECTION

- [About the Control Plane Packet Capture Page](#) | 368

About the Control Plane Packet Capture Page

You are here: **Device Administration** > **Tools** > **Control Plane Packet Capture**.

You can quickly capture and analyze router control traffic on a device.

The packet capture diagnostic tool allows inspection of control traffic (not transient traffic). The summary of each decoded packet is displayed as it is captured. Captured packets are written to a PCAP file which can be downloaded.

NOTE: Starting in Junos OS Release 19.3R1, J-Web supports RE3 line cards for SRX5000 line of devices.

To use J-Web Control Plane Packet Capture:

1. Enter the information specified in [Table 106 on page 369](#) to troubleshoot the issue.
2. Save the captured packets to a file or specify other advanced options by clicking the expand icon next to Advanced options.
3. Click **Start**.

The captured packet headers are decoded and displayed in the Packet Capture display as specified in [Table 107 on page 374](#).

4. Click one:
 - **Stop Capturing**—Stops capturing the packets and stays on the same page while the decoded packet headers are being displayed.
 - **OK**—Stops capturing packets and returns to the Packet Capture page.

Table 106: Packet Capture Troubleshooting Options

Field	Description
Interface	Specifies the interface on which the packets are captured. From the list, select an interface—for example, ge-0/0/0. If you select default, packets on the Ethernet management port 0 are captured.

Table 106: Packet Capture Troubleshooting Options (*Continued*)

Field	Description
Detail level	Specifies the extent of details to be displayed for the packet headers. • Brief—Displays the minimum packet header information. This is the default. • Detail—Displays packet header information in moderate detail. • Extensive—Displays the maximum packet header information. From the list, select Detail.
Packets	Specifies the number of packets to be captured. Values range from 1 to 1000. Default is 10. Packet capture stops capturing packets after this number is reached. From the list, select the number of packets to be captured—for example, 10.
Addresses	Specifies the addresses to be matched for capturing the packets using a combination of the following parameters: • Direction—Matches the packet headers for IP address, hostname, or network address of the source, destination, or both. • Type—Specifies if packet headers are matched for host address or network address. You can add multiple entries to refine the match criteria for addresses. Select address-matching criteria. For example: 1. From the Direction list, select source. 2. From the Type list, select host. 3. In the Address box, type 10.1.40.48. 4. Click Add.

Table 106: Packet Capture Troubleshooting Options (*Continued*)

Field	Description
Protocols	Matches the protocol for which packets are captured. You can choose to capture TCP, UDP, or ICMP packets or a combination of TCP, UDP, and ICMP packets. From the list, select a protocol—for example: 1. Select a protocol from the list. 2. Click Add.
Ports	Matches the packet headers containing the specified source or destination TCP or UDP port number or port name. Select a direction and a port. For example: 1. From the Direction list, select src. 2. In the Port box, type 23. 3. Click Add.
Advanced Options	
Absolute TCP Sequence	Displays the absolute TCP sequence numbers for the packet headers. • To display absolute TCP sequence numbers in the packet headers, select this check box. • To stop displaying absolute TCP sequence numbers in the packet headers, clear this check box.
Layer 2 Headers	Displays the link-layer packet headers. • To include link-layer packet headers while capturing packets, select this check box. • To exclude link-layer packet headers while capturing packets, clear this check box.

Table 106: Packet Capture Troubleshooting Options *(Continued)*

Field	Description
Non-Promiscuous	Does not place the interface in promiscuous mode so that the interface reads only packets addressed to it. In promiscuous mode, the interface reads every packet that reaches it. • To read all packets that reach the interface, select this check box. • To read only packets addressed to the interface, clear this check box.
Display Hex	Displays packet headers, except link-layer headers, in hexadecimal format. • To display the packet headers in hexadecimal format, select this check box. • To stop displaying the packet headers in hexadecimal format, clear this check box.
Display ASCII and Hex	Displays packet headers in hexadecimal and ASCII formats. • To display the packet headers in ASCII and hexadecimal formats, select this check box. • To stop displaying the packet headers in ASCII and hexadecimal formats, clear this check box.

Table 106: Packet Capture Troubleshooting Options (*Continued*)

Field	Description
Header Expression	Specifies the match condition for the packets to be captured. The match conditions you specify for Addresses, Protocols, and Ports are displayed in expression format in this field. Enter match conditions directly in this field in expression format or modify the expression composed from the match conditions you specified for Addresses, Protocols, and Ports. If you change the match conditions specified for Addresses, Protocols, and Ports again, packet capture overwrites your changes with the new match conditions.
Packet Size	Specifies the number of bytes to be displayed for each packet. If a packet header exceeds this size, the display is truncated for the packet header. The default value is 96 bytes. Type the number of bytes you want to capture for each packet header—for example, 256.
Don't Resolve Addresses	Specifies that IP addresses are not to be resolved into hostnames in the packet headers displayed. • To prevent packet capture from resolving IP addresses to hostnames, select this check box. • To resolve IP addresses into hostnames, clear this check box.
No Timestamp	Suppresses the display of packet header timestamps. • To stop displaying timestamps in the captured packet headers, select this check box. • To display the timestamp in the captured packet headers, clear this check box.

Table 106: Packet Capture Troubleshooting Options (*Continued*)

Field	Description
Write Packet Capture File	Writes the captured packets to a file in PCAP format in /var/tmp. The files are named with the prefix jweb-pcap and the extension .pcap. If you select this option, the decoded packet headers are not displayed on the packet capture page. • To save the captured packet headers to a file, select this check box. • To decode and display the packet headers on the J-Web page, clear this check box.

Table 107: Packet Capture Results and Output Summary

Field	Function
Timestamp	Displays the time when the packet was captured. The timestamp 00:45:40.823971 means 00 hours (12.00 a.m.), 45 minutes, and 40.823971 seconds. NOTE: The time displayed is local time.
Direction	Displays the direction of the packet. Specifies whether the packet originated from the Routing Engine (Out) or was destined for the Routing Engine (In)
Protocol	Displays the protocol for the packet. In the sample output, IP indicates the Layer 3 protocol.
Source Address	Displays the hostname, if available, or IP address and the port number of the packet's origin. If the Don't Resolve Addresses check box is selected, only the IP address of the source is displayed. NOTE: When a string is defined for the port, the packet capture output displays the string instead of the port number.

Table 107: Packet Capture Results and Output Summary *(Continued)*

Field	Function
Destination Address	Displays the hostname, if available, or IP address of the packet's destination with the port number. If the Don't Resolve Addresses check box is selected, only the IP address of the destination and the port are displayed. NOTE: When a string is defined for the port, the packet capture output displays the string instead of the port number.
Protocol	Displays the protocol for the packet. In the sample output, TCP indicates the Layer 4 protocol.
Data Size	Displays the size of the packet (in bytes).

Release History Table

Release	Description
19.3R1	Starting in Junos OS Release 19.3R1, J-Web supports RE3 line cards for SRX5000 line of devices.

RELATED DOCUMENTATION

[Troubleshoot Traceroute](#) | [365](#)

About the Data Plane Packet Capture Page

You are here: **Device Administration** > **Tools** > **Data Plane Packet Capture**.

NOTE: This menu is supported for only SRX4600 devices and SRX5000 line of devices.

Starting in Junos OS 23.1R1 Release, you can quickly capture and analyze router data plane traffic on a device.

The packet capture diagnostic tool allows inspection of data plane traffic. The summary of each decoded packet is displayed as it is captured. Captured packets are written to a PCAP file which can be downloaded.

Capture the packet information from the operational mode without committing the configurations and with a minimal impact to the production system. You can define the packet filter to trace the traffic type based on your requirement.

To capture the data plane packet details:

1. Complete the configuration according to the guidelines provided in [Table 108 on page 376](#).

NOTE: To capture the packet information, you must provide at least one filter option from either Basic Filter or Source & Destination Filter.

2. Click **Start Packet Capture**.

The packet capturing starts, and the Data Plane Packet Capture page becomes read-only. You can navigate to other pages while the packet capture process is in progress.

3. Click **Stop Packet Capture**.

The packet capturing stops and the PCAP file is automatically downloaded to your system from the /var/log/ folder. To view the packet capture file in the J-Web UI, navigate to **Device Administration > Operations > Files** and then click **Log files**.

NOTE:

- You can only request one packet capture at a time, and you must stop each request before starting another.
- When a count limit is reached, the capture stops. Click **Stop Packet Capture** to download the PCAP file.

Table 108: Fields on the Data Plane Packet Capture Page

Field	Description
Basic Filter	

Table 108: Fields on the Data Plane Packet Capture Page *(Continued)*

Field	Description
Protocol	Select a protocol from the list to associate with the packet capture filter. You can search for a protocol name or a protocol number in the list. Range: 0 (HOPOPT) through 255 (Reserved).
Multitenancy type	Select one of the multitenancy type to filter the interface: Default, Tenant, or Logical System.
Logical interface	Select a logical interface from the list for the selected root logical system.
Tenant	Select a tenant name from the list.
Tenant logical interface	Select a logical interface from the list for the selected tenant.
Logical system	Select a logical system name from the list.
Logical system interface	Select a logical interface from the list for the selected logical system.
Source & Destination Filter	
Bidirectional	With this option enabled by default, J-Web collects bidirectional information such as traffic from source port to destination port and vice-versa. NOTE: To capture the packet information, you must provide at least one filter option from Source & Destination Filter.
Source port	Enter source port number (for example, 0). Port number: 0 through 65535.

Table 108: Fields on the Data Plane Packet Capture Page (*Continued*)

Field	Description
Source prefix	Enter source IPv4 or IPv6 address prefix to filter the packets.
Destination port	Enter destination port number (for example, 0). Port number: 0 through 65535.
Destination prefix	Enter destination IPv4 or IPv6 address prefix to filter the packets.
Additional Options	
Packet capture file name	Enter a packet capture file name. You can view the PCAP file using the Wireshark. Default file name is packet-capture .
Maximum file size	Select the maximum size of the packet capture file. Range: 1 through 1024. Default is 5 MB.
Maximum capture size	Select the maximum packet capture length. The packet truncates if the capture length is more than the specified length. Range: 68 through 10000. Default is 1514.
Packet limit	Select the packet capture limit value. The packet capture ends when the packets count limit is reached. Range: 10 through 1000000. Default is 100.

RELATED DOCUMENTATION

[Access CLI | 379](#)
[Control Plane Packet Capture | 368](#)

Access CLI

IN THIS SECTION

- [About CLI Terminal Page | 379](#)

About CLI Terminal Page

IN THIS SECTION

- [CLI Terminal Requirements | 379](#)
- [CLI Overview | 380](#)

You are here: **Device Administration** > **Tools** > **CLI Terminal**.

The Junos CLI provides a set of commands for monitoring and configuring a routing platform. Use this page to access Junos OS CLI through J-Web interface.

This topic includes the following sections:

CLI Terminal Requirements

To access the CLI through the J-Web interface, your management device requires the following features:

- **SSH access**—Secure shell (SSH) provides a secured method of logging in to the routing platform to encrypt traffic so that it is not intercepted. If SSH is not enabled on your system, the CLI terminal page displays an error and provides a link to the Set Up Quick Configuration page where you can enable SSH.
- **Java applet support**—Your Web browser must support Java applets.
- **JRE installed on the client**—Java Runtime Environment (JRE) version 1.4 or later must be installed on your system to run Java applications. Download the latest JRE version from the Java Software website <http://www.java.com/>. Installing JRE installs Java plug-ins, which once installed, load automatically and transparently to render Java applets.

NOTE: The CLI terminal is supported on JRE version 1.4 or later only.

CLI Overview

The Junos OS CLI uses industry-standard tools and utilities to provide a set of commands for monitoring and configuring a routing platform. You type commands on a line and press Enter to execute them. The CLI provides online command Help, command completion, and Emacs-style keyboard sequences for moving around on the command line and scrolling through a buffer of recently executed commands.

The commands in the CLI are organized hierarchically, with commands that perform a similar function grouped together under the same level. For example, all commands that display information about the device system and system software are grouped under the **show** command, and all commands that display information about the routing table are grouped under the **show route** command. The hierarchical organization results in commands that have a regular syntax and provides the following features that simplify CLI use:

- Consistent command names—Commands that provide the same type of function have the same name, regardless of the portion of the software they are operating on. For example, all **show** commands display software information and statistics, and all **clear** commands erase various types of system information.
- Lists and short descriptions of available commands—Information about available commands is provided at each level of the CLI command hierarchy. If you type a question mark (?) at any level, you see a list of the available commands along with a short description of each command.
- Command completion—Command completion for command names (keywords) and command options is also available at each level of the hierarchy. In the CLI terminal, you can perform one of the following actions to complete a command:
 - Enter a partial command name followed immediately by a question mark (with no intervening space) to see a list of commands that match the partial name you typed.
 - Press the Spacebar to complete a command or option that you have partially typed. If the partially typed letters begin a string that uniquely identifies a command, the complete command name appears. Otherwise, a prompt indicates that you have entered an ambiguous command, and the possible completions are displayed.

The Tab key option is currently not available on the CLI terminal.

The CLI has two modes:

- Operational mode—Complete set of commands to control the CLI environment, monitor and troubleshoot network connectivity, manage the device, and enter configuration mode.

- Configuration mode—Complete set of commands to configure the device.

For more information about the Junos OS CLI, see the [Junos OS CLI User Guide](#).

RELATED DOCUMENTATION

| [View CLI Configuration](#) | 381

View CLI Configuration

IN THIS SECTION

- [About CLI Viewer Page](#) | 381

About CLI Viewer Page

You are here: **Device Administration** > **Tools** > **CLI Viewer**.

You can view current configuration running on the device.

NOTE:

- The configuration statements appear in a fixed order irrespective of the order in which you configured the routing platform. The top of the configuration displays a timestamp indicating when the configuration was last changed and the current version.
- Each level in the hierarchy is indented to indicate each statement's relative position in the hierarchy. Each level is generally set off with braces, using an open brace ({) at the beginning of each hierarchy level and a closing brace (}) at the end. If the statement at a hierarchy level is empty, the braces are not displayed. Each leaf statement ends with a semicolon (;), as does the last statement in the hierarchy.
- The indented representation is used when the configuration is displayed or saved as an ASCII file. However, when you load an ASCII configuration file, the format of the file is not so strict.

The braces and semicolons are required, but the indentation and use of new lines are not required in ASCII configuration files.

- Uncommitted configuration changes will also be listed.

To save, commit, or cancel the current configuration:

1. Click one:

- **OK**—Saves the configuration and returns to the CLI Viewer page.
- **Commit Options > Commit**—Commits the configuration and returns to the CLI Viewer page.
- **Cancel**—Cancels your entries and returns to the CLI Viewer page.

RELATED DOCUMENTATION

[Edit CLI Configuration](#) | 382

Edit CLI Configuration

IN THIS SECTION

- [About CLI Editor Page](#) | 382

About CLI Editor Page

You are here: **Device Administration > Tools > CLI Editor**.

You can configure all routing platform services that you can configure from the Junos CLI prompt.

To edit the CLI configuration:

1. Navigate to the hierarchy level you want to edit. Edit the candidate configuration using standard text editor operations—insert lines (with the Enter key), delete lines, modify, copy, and paste text.
2. Click **Commit** to load and commit the configuration. This saves the edited configuration, which replaces the existing configuration. The device checks the configuration for the correct syntax before

committing it. If any errors occur when the configuration is loading or committed, they are displayed and the previous configuration is restored.

3. Click one:

- **OK**—Saves the configuration and returns to the CLI Editor page.
- **Commit Options>Commit**—Commits the configuration and returns to the CLI Editor page.
- **Cancel**—Cancels your entries and returns to the CLI Editor page.

NOTE: When you edit the ASCII configuration file, you can add comments of one or more lines. Comments must precede the statement they are associated with. If you place the comments in other places in the file, such as on the same line after a statement or on a separate line following a statement, they are removed when you click Commit. Comments must begin and end with special characters. For more information, see the *Junos OS CLI User Guide*.

RELATED DOCUMENTATION

| [Point and Click CLI](#) | 383

Point and Click CLI

IN THIS SECTION

- [About Point and Click CLI Page](#) | 383

About Point and Click CLI Page

You are here: **Device Administration > Tools > Point and Click CLI**.

You can edit configuration on a series of pages of clickable options.

1. To edit the configuration on a series of pages of clickable options that step you through the hierarchy, enter the information specified in [Table 109 on page 384](#). [Table 110 on page 385](#) lists key J-Web configuration editor tasks and their functions.

NOTE: Options changes for each device. For a device, if a feature is not yet configured, you have the option to first configure the feature. If the feature is already configured, you have the option to edit or delete the feature on that particular device.

2. Click one:
 - **Refresh**—Refreshes and updates the display with any changes to the configuration made by other users.
 - **Commit**—Verifies edits and applies them to the current configuration file running on the device.
 - **Discard**—Removes edits applied to, or deletes existing statements or identifiers from, the candidate configuration.
3. Click one:
 - **OK**—Saves the configuration and returns to the main configuration page.
 - **Commit Options>Commit**—Commits the configuration and returns to the main configuration page.
 - **Cancel**—Cancels your entries and returns to the main configuration page.

Table 109: Point and Click Configuration Details

Field	Description
Configuration	Specifies that you can edit the selected configuration on a series of pages of clickable options that step you through the hierarchy. Click an option: • Expand all—Expands the hierarchy of all statements. • Hide all—Hides the hierarchy of all statements. • (+)—Expands an individual statement in the hierarchy. • (-)—Hides an individual statement in the hierarchy.

Table 110: J-Web Configuration Editor Page Details

Field	Function
Access	Specifies that you can edit or delete access and user authentication methods to the device. The options available are: • Configure—Configures the feature. • Edit—Edits the feature. • Delete—Deletes the feature.
Accounting options	Specifies that you can configure accounting options such as log data about basic system operations and services on the device. The option available is: • Configure—Configures the feature.
Applications	Specifies that you can edit or delete applications functions of the Junos OS and their properties on the device. The options available are: • Edit—Edits the feature • Delete—Deletes the feature.
Chassis	Specifies that you can configure alarms and other chassis properties on the device. The option available is: • Configure—Configures the feature. • Edit—Edits the feature. • Delete—Deletes the feature.
Class of service	Specifies that you can edit or delete the Class-of-Service feature. The options available are: • Edit—Edits the feature • Delete—Deletes the feature.

Table 110: J-Web Configuration Editor Page Details *(Continued)*

Field	Function
Ethernet switching options	Specifies that you can configure Ethernet switching options on the device. The option available is: • Configure—Configures the feature.
Event options	Specifies that you can configure diagnostic event policies and actions associated with each policy. The option available is: • Configure—Configures the feature.
Firewall	Specifies that you can configure stateless firewall filters—also known as ACLs—on the device. The option available is: • Configure—Configures the feature.
Forwarding options	Specifies that you can configure forwarding option protocols, including flow monitoring, accounting properties, and packet capture. The option available is: • Configure—Configures the feature.
Interfaces	Specifies that you can edit or delete interfaces on the device. The options available are: • Edit—Edits the feature. • Delete—Deletes the feature.
Multicast snooping options	Specifies that you can configure multicast snooping options. The option available is: • Configure—Configures the feature.

Table 110: J-Web Configuration Editor Page Details (*Continued*)

Field	Function
Poe	Specifies that you can edit or delete Power over Ethernet options on the device. The options available are: • Edit—Edits the feature. • Delete—Deletes the feature.
Policy options	Specifies that you can configure routing policies that control information from routing protocols that the device imports into its routing table and exports to its neighbors. The option available is: • Configure—Configures the feature.
Protocols	Specifies that you can edit or delete routing protocols, including Intermediate System-to-Intermediate System (IS-IS), OSPF, RIP, Routing Information Protocol Next Generation (RIPng), and BGP. The options available are: • Edit—Edits the feature. • Delete—Deletes the feature.
Routing instances	Specifies that you can configure a hierarchy to configure routing instances. The options available re: • Configure—Configures the feature.
Routing options	Specifies that you can edit or delete protocol-independent routing properties. The options available are: • Edit—Edits the feature. • Delete—Deletes the feature.
Schedulers	Specifies that you can determine the day and time when security policies are in effect. The option available is: • Configure—Configures the feature.

Table 110: J-Web Configuration Editor Page Details *(Continued)*

Field	Function
Security	Specifies that you can edit or delete the rules for the transit traffic and the actions that need to take place on the traffic as it passes through the firewall; and to monitor the traffic attempting to cross from one security zone to another. The options available are: • Edit—Edits the feature. • Delete—Deletes the feature.
Services	Specifies that you can configure real-time performance monitoring (RPM) on the device. The option available is: • Configure—Configures the feature. • Edit—Edits the feature. • Delete—Deletes the feature.
Smtp	Specifies that you can configure Simple Mail Transfer Protocol. The option available is: • Configure—Configures the feature.
Snmp	Specifies that you can configure Simple Network Management Protocol for monitoring router operation and performance. The option available is: • Configure—Configures the feature.

Table 110: J-Web Configuration Editor Page Details *(Continued)*

Field	Function
System	Specifies that you can edit or delete system management functions, including the device's hostname, address, and domain name; the addresses of the DNS servers; user login accounts, including user authentication and the root-level user account; time zones and NTP properties; and properties of the device's auxiliary and console ports. The options available are: • Edit—Edits the feature. • Delete—Deletes the feature.
Vlans	Specifies that you can edit or delete a virtual LAN. The options available are: • Edit—Edits the feature. • Delete—Deletes the feature.
Wlan	Specifies that you can configure a wireless local area network. The option available is: • Configure—Configures the feature.
Access profile	
Access profile name	Enter the access profile name.
Advanced	
Add new entry	Click Add new entry to add a new identifier.

RELATED DOCUMENTATION
[Edit CLI Configuration | 382](#)

Reset Configuration

IN THIS CHAPTER

- [Reset Configuration and Rerun Setup Wizard](#) | 390

Reset Configuration and Rerun Setup Wizard

You are here: **Device Administration** > **Reset Configuration**

NOTE: This menu is only available if you have selected Standalone mode when configuring device factory default settings using the J-Web Setup Wizard.

This page allows you to reset the device configuration and rerun the J-Web Setup Wizard. For details on using the setup wizard to perform initial configuration on a device with a factory default configuration, see ["Access the J-Web User Interface" on page 3](#).

On the **Reset Configuration** dialog page:

1. Click **Reset** to proceed.
The **Reconfigure Setup Wizard** warning dialogue appears.
2. Click **Proceed to Launch** to reset the configuration and rerun the Setup Wizard.
For details on using the Setup Wizard, see ["The J-Web Setup Wizard" on page 8](#).

RELATED DOCUMENTATION

| [Access the J-Web User Interface](#) | 3



Network

Connectivity—Interfaces	393
Connectivity—VLAN	406
Connectivity—Link Aggregation	413
Connectivity—PPPoE	422
Connectivity—Wireless LAN	424
DHCP Client	434
DHCP Server	438
Firewall Filters—IPv4	448
Firewall Filters—IPv6	466
Firewall Filters—Assign to Interfaces	482
NAT Policies	484
NAT Pools	493
Destination NAT	504
Static NAT	510
NAT Proxy ARP/ND	518
Static Routing	525
RIP Routing	529
OSPF Routing	538
BGP Routing	551
Routing Instances	567

[Routing—Policies | 572](#)

[Routing—Forwarding Mode | 589](#)

[CoS—Value Aliases | 591](#)

[CoS—Forwarding Classes | 595](#)

[CoS Classifiers | 599](#)

[CoS—Rewrite Rules | 604](#)

[CoS—Schedulers | 609](#)

[CoS—Scheduler Maps | 614](#)

[CoS—Drop Profile | 618](#)

[CoS—Virtual Channel Groups | 622](#)

[CoS—Assign To Interface | 626](#)

[Application QoS | 632](#)

[IPsec VPN | 642](#)

[Dynamic VPN | 704](#)

[Compliance | 712](#)

Connectivity—Interfaces

IN THIS CHAPTER

- [About the Interfaces Page | 393](#)
- [Add a Logical Interface | 397](#)
- [Edit an Interface | 404](#)
- [Delete a Logical Interface | 405](#)

About the Interfaces Page

IN THIS SECTION

- [Tasks You Can Perform | 393](#)
- [Field Descriptions | 394](#)

You are here: **Network** > **Connectivity** > **Interfaces**.

Use this page to view or configure the logical interfaces to switch to L2 or L3 mode. You can view the interfaces in the ways of interface type, interface state, or zone association.

NOTE: Starting in Junos OS Release 23.4R1, J-Web supports SRX1600 and SRX2300 Firewalls.

Tasks You Can Perform

You can perform the following tasks from this page:

- Add a logical interface. See ["Add a Logical Interface" on page 397](#).

- Edit a logical interface. See ["Edit an Interface" on page 404](#).
- Delete a logical interface. See ["Delete a Logical Interface" on page 405](#).

Field Descriptions

[Table 111 on page 394](#) describes the fields to view interface configuration on the Interfaces page.

NOTE:

- J-Web supports IOC4 line cards for SRX5000 line of devices. You can also view the sub-ports details configured on any or all ports of the SRX5K-IOC4-MRATE line card.
- J-Web supports Wi-Fi Mini-PIM for SRX320, SRX340, SRX345, and SRX550M devices. The physical interface for the Wi-Fi Mini-PIM uses the name wl-x/0/0, where x identifies the slot on the services gateway where the Mini-PIM is installed.

You can also configure the wl-x/0/0 interface when adding a zone at **Security Policies & Objects > Zones/Screens**.

Table 111: View Interface Configuration Details on the Interfaces Page

Field	Action
Filter by	Select an option from the list to view the interfaces configuration details. The available options are: • Interface Type—Select an option to display the list of interfaces available on the device. • Interface State—Select an option to display the interfaces state of the device. The options are: • Admin Up • Link Up • Admin Up & Link Down • Admin Down • Zone Association—Select an option to display the list of available security zones.
Clear Filter	Clears the filter options that you have selected and displays all the interfaces.

Table 111: View Interface Configuration Details on the Interfaces Page (Continued)

Field	Action
Expand All	Expands the tree under the list of interfaces.
Global Options	To configure global setting for the interface ports: 1. Click Global Options. The Global Options window appears. 2. Enter the following details: • MAC table size—Enter the size of MAC address forwarding table. • MAC limit—Enter the maximum number of MAC addresses learned per interface. The range is 1 through 65,535. • Action—Select an option from the list for the action taken when MAC limit is reached. The options available are: • drop • drop-and-log • log • none • shutdown
Disable Interface	Disables the selected interface.
Enable Interface	Enables the selected disabled interface.

Table 112 on page 396 describes the fields on the Interfaces page.

Table 112: Fields on the Interfaces Page

Field	Description
Interface	Displays the interface name. Logical interfaces configured under this interface appear in a collapsible list under the physical interface.
Admin status	Displays the administrative status of the interface. Status can be either Up or Down.
Link Status	Displays the operational status of the link. Status can be either Up or Down.
IP Address	Displays the configured IP addresses. Multiple IP addresses configured on one logical interface are displayed in a collapsible list under the logical interface.
VLAN ID	Displays the VLAN ID. NOTE: VLAN ID is mandatory if the interface unit is higher than zero.
Zone	Displays the security zone with which this interface is associated.
Logical System/Tenant	Display the statistics information for the specified logical system or tenant.
Speed	Displays the Interface speed (For example, 10 Mbps, 100 Mbps, 1 Gbps, 25 Gbps, or Auto).
Description	Displays the interface description.

RELATED DOCUMENTATION

[Add a Logical Interface](#) | 397

Add a Logical Interface

You are here: **Network > Connectivity > Interfaces.**

To add a logical interface:

1. Select an interface and click **+** available on the upper-right corner of the Interfaces page.
The Add Interface page appears.
2. Complete the configuration according to the guidelines provided in [Table 113 on page 397](#).
3. Click **OK** to save the changes. If you want to discard your changes, click **Cancel** instead.
If you click OK, a new logical interface with the provided configuration is created.

[Table 113 on page 397](#) provides guidelines on using the fields on the Add Interface page.

Table 113: Fields on the Add Interface Page

Field	Description
General	
Unit	Enter the logical unit number.
Description	Enter the description for the interface.
Vlan Id	Enter the VLAN ID
Multi Tenancy Type	Select an option from the list: • None • Logical System • Tenant
Logical System	Select a logical system from the list. NOTE: This option is available when you select the multitenancy type as logical system.

Table 113: Fields on the Add Interface Page *(Continued)*

Field	Description
Tenant	Select a tenant from the list. NOTE: This option is available when you select the multitenancy type as tenant.
Zone	Select a zone form the list.
Protocol (family)	
IPv4 Address	
IPv4 Address/DHCP configuration	Select the check box to enable this option.
Enable DHCP	Select this option to enable Dynamic Host Configuration Protocol (DHCP).
Enable address configuration	Select this option to add IPv4 address. To add IPv4 address: 1. Click +. 2. Enter the following details: • IPv4 Address—Enter an IPv4 address. • Web Auth—Click Configure and enable the options, Enable Http, Enable Hhttps, and Redirect to Hhttps. Then, click OK to save changes. • ARP—Click Edit. In the ARP Address page, click + and enter the IPv4 Address, MAC Address, and select Publish. Click OK to save the changes.
IPv6 Address	

Table 113: Fields on the Add Interface Page *(Continued)*

Field	Description
IPv6 Address/DHCP configuration	Select the check box to enable this option. NOTE: Not available for IRB interface
Enable DHCP	Select this option to enable DHCP.
Enable address configuration	Select this option to add IPv6 address. To add IPv6 address: 1. Click +. 2. Enter an IPv6 address.
Ethernet Switching	
Ethernet Switching configuration	Select the check box to enable this option. NOTE: Not available for IRB interface
Interface Mode	Select an option from the list: - access—Configures a logical interface to accept untagged packets. - trunk—Configures a single logical interface to accept packets tagged with any VLAN ID.
Recovery Timeout	Enter a period of time in seconds that the interface remains in a disabled state due to a port error prior to automatic recovery.
VLAN Member	Select a VLAN member from the list.
VoIP VLAN	Select a VLAN name from the list to be sent from the authenticating server to the IP phone.
Configure Vlan(s)	Select a VLAN from the Available column and move it to Selected column using the right arrow.

Table 113: Fields on the Add Interface Page *(Continued)*

Field	Description
All Vlans	Select this option to select any available VLANs.
General- ge	
Description	Enter a description for the interface.
MTU (Bytes)	Enter the MTU in bytes.
Speed	Select the speed from the list: 10 Mbps, 100 Mbps, 1 Gbps, or None.
Link Mode	Select the link mode from the list: Half Duplex, Full Duplex, and None.
Loopback	Select this option if you want the interface to loop back.
Flow Control	Select this option to enable flow control, which regulates the flow of packets from the router to the remote side of the connection.
Enable Auto Negotiation	Select this option to enable autonegotiation.
Enable Per Unit Scheduler	Select this option to enable the association of scheduler maps with logical interfaces.
Enable Vlan Tagging	Select this option to enable the reception and transmission of 802.1Q VLAN-tagged frames on the interface.
Source MAC Filter	
Add	Click + and enter the MAC address to assign it to the interface.
Delete	Select a MAC address and click X.

Table 113: Fields on the Add Interface Page *(Continued)*

Field	Description
MAC Limit	Enter a value for MAC addresses to be associated with a VLAN. Range: 1 through 131071.
Packet Action	Select an option from the list: • drop—Drop packets with new source MAC addresses, and do not learn the new source MAC addresses. • drop-and-log—Drop packets with new source MAC addresses, and generate an alarm, an SNMP trap, or a system log entry • log—Hold packets with new source MAC addresses, and generate an alarm, an SNMP trap, or a system log entry. • none—Forward packets with new source MAC addresses and learn the new source MAC address. • shutdown—Disable the specified interface, and generate an alarm, an SNMP trap, or a system log entry.
General- It	
Unit	Enter a logical unit number.
Encapsulation	Select an option from the list: • Ethernet • Ethernet-VPLS
Peer Unit	Enter a peer unit number.

Table 113: Fields on the Add Interface Page *(Continued)*

Field	Description
Multi Tenancy Type	Select an option from the list: • None • Logical System • Tenant
Logical System	Select a logical system from the list. NOTE: This option is available when you select the multitenancy type as logical system.
Tenant	Select a tenant from the list. NOTE: This option is available when you select the multitenancy type as tenant.
IP Address	Click Add and enter an IP address. Select an IP address and click Delete to delete the selected IP address.
st0	
Tunnel Interface st0	Enter the logical unit number.
Zone	Select a zone from the list.
Description	Enter the description for the interface.
Unnumbered	Select this option to fetch interface from which an unnumbered interface borrows an IPv4 address.
Numbered	Select this option to fetch interface from which a numbered interface borrows an IPv4 or IPv6 address.
IPv4 Address	Enter an IPv4 address.

Table 113: Fields on the Add Interface Page *(Continued)*

Field	Description
IPv4 Subnet Mask	Enter a subnet mask for the IPv4 address.
IPv6 Address	Enter an IPv4 address.
IPv6 Subnet Mask	Enter a subnet mask for the IPv6 address.
Multipoint	
St Interface Configuration	Select the check box to enable this option.
Automatic	Select this option to automatically fetch next hop tunnel address.
Manual	Click + to add next hop tunnel address and VPN name. Select an existing next hop address and click X to delete it.
Routing Protocols	
Enable Routing Protocols	Select an option: • all—Select this option to enable all protocols routing on the routing device. • OSPF—Select this option to enable OSPF routing on the routing device. • BGP—Select this option to enable BGP routing on the routing device. • RIP—Select this option to enable RIP routing on the routing device.

RELATED DOCUMENTATION
[Edit an Interface | 404](#)
[Delete a Logical Interface | 405](#)

Edit an Interface

You are here: **Network > Connectivity > Interfaces.**

To edit an interface:

1. Select an existing interface that you want to edit on the Interfaces page.
2. Click the pencil icon available on the upper-right corner of the page.

The interface options appear with editable fields. For more information on the options, see ["Add a Logical Interface" on page 397](#).

3. Click **OK**.

Starting in Junos OS Junos OS 22.3R1 release, you can enable the interface with flexible VLAN tagging along with native VLAN ID or VLAN tagging for interfaces. To do this:

NOTE: Supported interfaces are GE, XE, AE, WL, and RETH.

1. Select an existing interface on the Interfaces page.
2. Click the pencil icon available on the upper right side of the page.
3. In the VLAN tagging type field, select one of the following options:
 - None—No action.
 - VLAN tagging—Receive and forward single-tag frames, dual-tag frames, or a mixture of single-tag and dual-tag frames.
 - Flexible VLAN tagging—Simultaneously supports transmission of 802.1Q VLAN single-tag and dual-tag frames on logical interfaces on the same Ethernet port.

NOTE: Selected interfaces are deleted when you edit:

- None to VLAN tagging or Flexible VLAN tagging
- VLAN tagging or Flexible VLAN tagging to None

4. Click up or down arrow in the Native VLAN ID field to specify the VLAN identifier to associate with untagged packets received on the physical interface.

Range: 1 through 4094

NOTE: This option is available only if you choose Flexible VLAN tagging type.

5. Click **OK**.

RELATED DOCUMENTATION

[Delete a Logical Interface](#) | 405

Delete a Logical Interface

You are here: **Network** > **Connectivity** > **Interfaces**.

To delete a logical interface:

1. Select a logical interface that you want to delete from the Interfaces page.
2. Click the delete icon available on the upper-right corner of the page.
A confirmation window appears.
3. Click **Yes** to delete or click **No**.

RELATED DOCUMENTATION

[Add a Logical Interface](#) | 397

[Edit an Interface](#) | 404

Connectivity—VLAN

IN THIS CHAPTER

- [About the VLAN Page | 406](#)
- [Add a VLAN | 408](#)
- [Edit a VLAN | 410](#)
- [Delete a VLAN | 411](#)
- [Assign an Interface to VLAN | 411](#)

About the VLAN Page

IN THIS SECTION

- [Tasks You Can Perform | 406](#)
- [Field Descriptions | 407](#)

You are here: **Network** > **Connectivity** > **VLAN**.

Use this page to view, add, and remove VLAN configuration details.

Tasks You Can Perform

You can perform the following tasks from this page:

- Add a VLAN. See ["Add a VLAN" on page 408](#).
- Edit a VLAN. See ["Edit a VLAN" on page 410](#).
- Delete a VLAN. See ["Delete a VLAN" on page 411](#).

- Assign Interface. See ["Assign an Interface to VLAN" on page 411](#).
- Show or hide columns in the VLAN table. To do this, use the Show Hide Columns icon in the upper-right corner of the page and select the options you want to show or deselect to hide options on the page.
- Advanced search for a VLAN. To do this, use the search text box present above the table grid. The search includes the logical operators as part of the filter string. In the search text box, when you hover over the icon, it displays an example filter condition. When you start entering the search string, the icon indicates whether the filter string is valid or not.

For an advanced search:

1. Enter the search string in the text box.

Based on your input, a list of items from the filter context menu appears.

2. Select a value from the list and then select a valid operator based on which you want to perform the advanced search operation.

NOTE: Press Spacebar to add an AND operator or OR operator to the search string. Press backspace at any point of time while entering a search criteria, only one character is deleted.

3. Press Enter to display the search results in the grid.

Field Descriptions

[Table 114 on page 407](#) describes the fields on the VLAN page.

Table 114: VLAN Configuration Page

Field	Function
VLAN Name	Displays the name for the VLAN.
VLAN ID/List	Displays the identifier or list for the VLAN.
Interface Assigned	Displays the interfaces assigned for the VLAN.

Table 114: VLAN Configuration Page *(Continued)*

Field	Function
Description	Displays a brief description for the VLAN.

RELATED DOCUMENTATION

| [Add a VLAN](#) | 408

Add a VLAN

You are here: **Network** > **Connectivity** > **VLAN**.

To add a VLAN:

1. Click **+** available on the upper-right corner of the VLAN page.
The Add VLAN page appears.
2. Complete the configuration according to the guidelines provided in [Table 115 on page 408](#).
3. Click **OK** to save the changes. If you want to discard your changes, click **Cancel**.

[Table 115 on page 408](#) provides guidelines on using the fields on the Add VLAN page.

Table 115: Fields on the Add VLAN Page

Field	Description
VLAN Details	
VLAN Name	Enter a unique name for the VLAN. NOTE: The VLAN text field is disabled when vlan-tagging is not enabled.

Table 115: Fields on the Add VLAN Page *(Continued)*

Field	Description
VLAN ID Type	Select a type of VLAN ID. The available options are: • Single • Range
VLAN ID	Enter a unique identification number for the VLAN from 1 through 4094. If no value is specified, the default is 1.
Description	Enter a brief description for the VLAN.
Advanced Settings (optional)	
L2 Interfaces	Enter the interfaces to be associated with the VLAN. The available options are as follows: • Add—Click + to add the MAC address and L2 interface details. • Edit—Click the pencil icon to edit the selected interface. • Remove—Select the interface or interfaces that you do not want associated with the VLAN.
Filter	
Input Filter	To apply an input firewall filter to an interface, select the firewall filter from the list.
Output Filter	To apply an output firewall filter to an interface, select the firewall filter from the list.
IPv4 Address	
NOTE: This option is available only when you select VLAN ID type as Single.	
IPv4 Address	Enter the IPv4 address of the VLAN.

Table 115: Fields on the Add VLAN Page *(Continued)*

Field	Description
Subnet	Enter the range of logical addresses within the address space that is assigned to an organization. For example, 255.255.255.0. You can also specify the address prefix.
IP Address	Enter the IP address of the VLAN. The available options are as follows: • Add—Click + to add the IP address, MAC address, and L2 interface details. • Edit—Click the pencil icon to edit the selected IPv4 address. • Delete—Select the IPv4 address or addresses that you do not want associated with the VLAN.
IPv6 Address NOTE: This option is available only when you select VLAN ID type as Single.	
IPv6 Address	Enter the IPv6 address of the VLAN.
Prefix	Select the destination prefix of the VLAN.

RELATED DOCUMENTATION

[Edit a VLAN](#) | 410

Edit a VLAN

You are here: **Network > Connectivity > VLAN.**

To edit a VLAN:

1. Select an existing VLAN that you want to edit on the VLAN page.
2. Click the pencil icon available on the upper-right corner of the page.

The Edit VLAN page appears with editable fields. For more information on the options, see ["Add a VLAN" on page 408](#).

3. Click **OK** to save the changes.

RELATED DOCUMENTATION

| [Delete a VLAN](#) | 411

Delete a VLAN

You are here: **Network** > **Connectivity** > **VLAN**.

To delete a VLAN:

1. Select one or more VLANs that you want to delete on the VLAN page.
2. Click the delete icon available on the upper-right corner of the page.
3. Click **Yes** to delete or click **No** to retain the profile.

RELATED DOCUMENTATION

| [Assign an Interface to VLAN](#) | 411

Assign an Interface to VLAN

You are here: **Network** > **Connectivity** > **VLAN**.

To assign an interface to VLAN:

1. Select a VLAN.
2. Click **Assign Interface** on the upper-right corner of the VLAN page.
The Assign Interfaces page appears.
3. Complete the configuration according to the guidelines provided in [Table 116 on page 412](#).
4. Click **OK** to save the changes. If you want to discard your changes, click **Cancel**.

Table 116: Fields on the Assign Interfaces Page

Field	Description
VLAN Name	Displays the name of the VLAN for which you want to assign the interface.
VLAN ID	Displays the ID of the selected VLAN.
Description	Displays the description of the selected VLAN.
Interfaces	Select the interfaces in the Available column and use the right arrow to move them to the Selected column.
VoIP Interfaces	Select the VoIP interfaces in the Available column and use the right arrow to move them to the Selected column.

RELATED DOCUMENTATION[Add a VLAN](#) | [408](#)

Connectivity—Link Aggregation

IN THIS CHAPTER

- [About the Link Aggregation Page | 413](#)
- [Link Aggregation Global Settings | 415](#)
- [Add a Logical Interface to Link Aggregation | 416](#)
- [Add a Link Aggregation | 417](#)
- [Edit an Aggregated Interface | 419](#)
- [Delete Link Aggregation | 420](#)
- [Search for Text in the Link Aggregation Table | 420](#)

About the Link Aggregation Page

IN THIS SECTION

- [Tasks You Can Perform | 413](#)
- [Field Descriptions | 414](#)

You are here: **Network > Connectivity > Link Aggregation.**

Use this page to view, add, and remove link aggregation configuration details.

Tasks You Can Perform

You can perform the following tasks from this page:

- Global Settings. See "[Link Aggregation Global Settings](#)" on page 415.
- Add Logical Interface. See "[Add a Logical Interface to Link Aggregation](#)" on page 416.

- Enable/Disable LACP link-protection. To do this, select a link aggregation and click **Enable/Disable** available at the upper-right corner of the Link Aggregation table.
- Add Link Aggregation. See ["Add a Link Aggregation" on page 417](#).
- Edit Link Aggregation. See ["Edit an Aggregated Interface" on page 419](#).
- Delete Link Aggregation. See ["Delete Link Aggregation" on page 420](#).
- Search for text in a link aggregation table. See ["Search for Text in the Link Aggregation Table" on page 420](#).
- Show or hide columns in the Link Aggregation table. To do this, use the Show Hide Columns icon in the upper-right corner of the page and select the options you want to show or deselect to hide options on the page.

Field Descriptions

[Table 117 on page 414](#) describes the fields on the Link Aggregation page.

Table 117: Fields on the Link Aggregation Page

Field	Description
Name	Displays the name of the select LAG.
Link Status	Displays whether the interface is linked (Up) or not linked (Down).
Admin Status	Displays whether the interface is up or down.
Interfaces	Displays the name of the aggregated interface.
VLAN ID	Displays the Virtual LAN identifier value for IEEE 802.1Q VLAN tags (0.4094).
IP Address	Displays the IP address associated with the interface.
VLAN Tagging Type	Displays whether the interface is enabled with VLAN-tagging, Flexible VLAN Tagging, or Flexible VLAN Tagging along with native VLAN ID.

Table 117: Fields on the Link Aggregation Page *(Continued)*

Field	Description
Enabled/Disabled	Displays whether the LACP link-protection is enabled or disabled.
Description	Provides a description of the LAG.

RELATED DOCUMENTATION

| [Link Aggregation Global Settings](#) | 415

Link Aggregation Global Settings

You are here: **Network > Connectivity > Link Aggregation.**

To add link aggregation global settings:

Complete the configuration according to the guidelines provided in [Table 118 on page 415](#).

Table 118: Fields on the Link Aggregation Global Settings page

Field	Action
General	
Device count	Enter the device count. By default, J-Web displays the device count as the same number of created aggregated Ethernet interfaces. Range: 1 through 128.
Link Aggregation Control Protocol (LACP)	
NOTE: This option is not available for SRX5000 line of devices.	
System priority	Click the arrow button to select the priority level that you want to associate with the LAG.

Table 118: Fields on the Link Aggregation Global Settings page *(Continued)*

Field	Action
Link protection mode	Select one of the following options: • Revertive—Enable to switch to a better priority link (if one is available). • Non-revertive—Disable the ability to switch to a better priority link (if one is available) once a link is established as active and collection distribution is enabled.

RELATED DOCUMENTATION

| [Add a Logical Interface to Link Aggregation | 416](#)

Add a Logical Interface to Link Aggregation

You are here: **Network** > **Connectivity** > **Link Aggregation**.

To add an interface to link aggregation:

1. Select an aggregated interface.
2. Click **Add Logical Interface** on the upper-right corner of the Link Aggregation page.
The Add Logical Interface page appears.
3. Complete the configuration according to the guidelines provided in [Table 119 on page 416](#).
4. Click **OK** to save the changes. If you want to discard your changes, click **Cancel**.

Table 119: Fields on the Add Logical Interface Page

Field	Action
General	
AE interface name	Displays aggregated interface name.
Logical interface unit	Enter the logical interface unit.

Table 119: Fields on the Add Logical Interface Page (Continued)

Field	Action
Description	Enter the description.
VLAN ID	Enter the VLAN ID. VLAN ID is mandatory.
IPv4 Address	
IPv4 Address	Click + and enter a valid IPv4 address.
Subnet Mask	Enter a valid subnet mask for IPv4 address.
IPv6 Address	
IPv6 Address	Click + and enter a valid IPv6 address.
Subnet Mask	Enter a valid subnet mask for IPv6 address.

RELATED DOCUMENTATION

| [Add a Link Aggregation](#) | 417

Add a Link Aggregation

You are here: **Network > Connectivity > Link Aggregation.**

To add a link aggregation:

1. Click + on the upper-right corner of the Link Aggregation page.
The Create Link Aggregation page appears.
2. Complete the configuration according to the guidelines provided in [Table 120 on page 418](#).
3. Click **OK** to save the changes. If you want to discard your changes, click **Cancel**.

Table 120: Fields on the Create Link Aggregation Page

Field	Action
General	
Name	Enter the aggregated interface name. The name should be in aeX format. Where X is a number. NOTE: If an aggregated interface already exists, then the field is displayed as read-only.
Description	Enter a description for the LAG.
Interfaces	Select the interface available for aggregation and move to Selected column using right arrow. NOTE: Only interfaces that are configured with the same speed can be selected together for a LAG.
VLAN tagging type	Select one of the following VLAN tagging type: • None • VLAN Tagging—Receive and forward single-tag frames, dual-tag frames, or a mixture of single-tag and dual-tag frames. • Flexible VLAN Tagging—Simultaneously supports transmission of 802.1Q VLAN single-tag and dual-tag frames on logical interfaces on the same Ethernet port. NOTE: When you edit from None to VLAN tagging or Flexible VLAN tagging or vice versa, all the logical interfaces of the selected interface are deleted.
Native VLAN ID	VLAN identifier to associate with untagged packets received on the physical interface. Range: 0 through 4094.
Link Aggregation Control Protocol (LACP)	

Table 120: Fields on the Create Link Aggregation Page *(Continued)*

Field	Action
LACP mode	Select a mode in which Link Aggregation Control Protocol packets are exchanged between the interfaces. The modes are: • Active—Indicates that the interface initiates transmission of LACP packets • Passive—Indicates that the interface only responds to LACP packets.
Periodic	Select a periodic transmissions of link aggregation control PDUs occur at different transmission rate. The options available are: • Fast—Transmit link aggregation control PDUs every second. • Slow—Transmit link aggregation control PDUs every 30 seconds.
System priority	Click the arrow button to select the priority level that you want to associate with the LAG.
Link protection	Enable or disable the option to protect the link. NOTE: You can configure only two member links for an aggregated Ethernet interface, that is, one active and one standby.
Link protection mode	Select one of the following options: • Revertive—Enable to switch to a better priority link (if one is available). • Non-revertive—Disable the ability to switch to a better priority link (if one is available) once a link is established as active and collection distribution is enabled.

RELATED DOCUMENTATION

[Edit an Aggregated Interface](#) | 419

Edit an Aggregated Interface

You are here: **Network > Connectivity > Link Aggregation.**

To edit an aggregated interface:

1. Select an existing aggregated interface that you want to edit on the Aggregated Interface page.
2. Click the pencil icon available on the upper-right corner of the page.

The edit Aggregated Interface page appears with editable fields. For more information on the options, see ["Add a Link Aggregation" on page 417](#).

3. Click **OK** to save the changes or click **Cancel** to discard the changes.

RELATED DOCUMENTATION

[Delete Link Aggregation](#) | 420

Delete Link Aggregation

You are here: **Network** > **Connectivity** > **Link Aggregation**.

To delete link aggregation:

1. Select one or more aggregated interfaces that you want to delete on the Link Aggregation page.
2. Click the delete icon available on the upper-right corner of the page.
3. Click **Yes** to delete or click **No** to retain the profile.

RELATED DOCUMENTATION

[About the Link Aggregation Page](#) | 413

Search for Text in the Link Aggregation Table

You are here: **Network** > **Connectivity** > **Link Aggregation**.

You can use the search icon in the upper-right corner of the Link Aggregation page to search for text containing letters and special characters on that page.

To search for text:

1. Click the search icon and enter partial text or full text of the keyword in the search bar.

The search results are displayed.

2. Click **X** next to a search keyword or click **Clear All** to clear the search results.

RELATED DOCUMENTATION

| [About the Link Aggregation Page](#) | 413

Connectivity—PPPoE

IN THIS CHAPTER

- [Configure PPPoE | 422](#)

Configure PPPoE

NOTE: This menu is available only for SRX300 lines of devices and SRX550M device.

You are here: **Network > Connectivity > PPPoE.**

PPPoE connects multiple hosts on an Ethernet LAN to a remote site through a single customer premises equipment (CPE) device (Juniper Networks device).

Use the configure PPPoE tasks to configure the PPPoE connection. The PPPoE wizard guides you to set up a PPPoE client over the Ethernet connection.

NOTE: On all branch SRX Series Firewalls, the PPPoE wizard has the following limitations:

- While you use the load and save functionality, the port details are not saved in the client file.
- The Non Wizard connection option cannot be edited or deleted through the wizard. Use the CLI to edit or delete the connections.
- The PPPoE wizard cannot be launched if the backend file is corrupted.
- The PPPoE wizard cannot be loaded from the client file if non-wizard connections share the same units.
- The PPPoE wizard cannot load the saved file from one platform to another platform.

- There is no backward compatibility between PPPoE wizard Phase 2 to PPPoE wizard Phase 1. As a result, the PPPoE connection from Phase 2 will not be shown in Phase 1 when you downgrade to an earlier release.

RELATED DOCUMENTATION

| [Configure VPN](#)

CHAPTER 31

Connectivity—Wireless LAN

IN THIS CHAPTER

- [About the Settings Page | 424](#)
- [Create an Access Point | 426](#)
- [Edit an Access Point | 427](#)
- [Delete an Access Point | 428](#)
- [Create an Access Point Radio Setting | 428](#)
- [Edit an Access Point Radio Setting | 432](#)
- [Delete an Access Point Radio Settings | 432](#)

About the Settings Page

IN THIS SECTION

- [Tasks You Can Perform | 425](#)
- [Field Descriptions | 425](#)

You are here: **Network > Connectivity > Wireless LAN > Settings.**

Use this page to configure wireless LAN settings.

NOTE: Starting in Junos OS Release 20.1R1, J-Web supports SRX380 devices. You can configure the SRX380 device supported wireless LAN settings.

Tasks You Can Perform

You can perform the following tasks from this page:

- Create an access point. See ["Create an Access Point" on page 426](#).
- Edit an access point. See ["Edit an Access Point" on page 427](#).
- Delete an access point. See ["Delete an Access Point" on page 428](#).
- Create access point radio settings. See ["Create an Access Point Radio Setting" on page 428](#).
- Edit access point radio settings. See ["Edit an Access Point Radio Setting" on page 432](#).
- Delete access point radio settings. See ["Delete an Access Point Radio Settings" on page 432](#).

Field Descriptions

[Table 121 on page 425](#) describes the fields on the Settings page.

Table 121: Fields on the Settings Page

Field	Description
Access Point Name	Displays the access point name.
Description	Displays the description for the access point.
WL Interface	Displays the wireless LAN interface name.
Location	Displays the location of the access point.
MAC Address	Displays the MAC address.
Country	Displays the country of the access point.

Release History Table

Release	Description
20.1R1	Starting in Junos OS Release 20.1R1, J-Web supports SRX380 devices. You can configure the SRX380 device supported wireless LAN settings.

RELATED DOCUMENTATION

[Create an Access Point](#) | 426

Create an Access Point

You are here: **Network > Connectivity > Wireless LAN > Settings.**

To create an access point:

1. Click **+** on the upper-right corner of the Settings page.
The Create Access Point Configuration page appears.
2. Complete the configuration according to the guidelines provided in [Table 122 on page 426](#).
3. Click **OK** to save the changes.
An access point is created.

If you want to discard your changes, click **Cancel**.

Table 122: : Fields on the Create Access Point Configuration Page

Field	Action
Basic Settings	
Name	Enter a unique name for the access point.
Description	Enter the description for the access point.
Interface	Select a wireless LAN interface from the list.

Table 122: : Fields on the Create Access Point Configuration Page *(Continued)*

Field	Action
Location	Enter the location of the access point.
MAC Address	Enter the MAC address.
Access Point Options	
Country	Select a country of the access point from the list.

RELATED DOCUMENTATION

[About the Settings Page | 424](#)

[Edit an Access Point | 427](#)

[Delete an Access Point | 428](#)

[Create an Access Point Radio Setting | 428](#)

Edit an Access Point

You are here: **Network** > **Connectivity** > **Wireless LAN** > **Settings**.

To edit an access point:

1. Select an existing access point that you want to edit on the Settings page.
2. Click the pencil icon on the upper-right corner of the page.

The Edit Access Point Configuration page appears with editable fields. For more information on the options, see "[Create an Access Point](#)" on page 426.

3. Click **OK** to save the changes.

RELATED DOCUMENTATION

[About the Settings Page | 424](#)

[Delete an Access Point | 428](#)

Delete an Access Point

You are here: **Network** > **Connectivity** > **Wireless LAN** > **Settings**.

To delete an access point:

1. Select an existing access point that you want to delete on the Settings page.
2. Click the delete icon on the upper-right corner of the page.
3. Click **Yes** to delete the access point or click **No** to retain the access point.

RELATED DOCUMENTATION

[About the Settings Page | 424](#)

[Create an Access Point | 426](#)

[Edit an Access Point | 427](#)

Create an Access Point Radio Setting

You are here: **Network** > **Connectivity** > **Wireless LAN** > **Settings**.

To create an access point radio setting:

1. Click + on the upper-right corner of the Radio Settings table.
The Create Access Point Radio Settings page appears.
2. Complete the configuration according to the guidelines provided in [Table 123 on page 428](#).
3. Click **OK** to save the changes.
The access point radio settings are created.

If you want to discard your changes, click **Cancel**.

Table 123: Fields on the Create Access Point Radio Settings Page

Field	Action
Radio	
Radio Type	Select a radio type from the list.

Table 123: Fields on the Create Access Point Radio Settings Page *(Continued)*

Field	Action
Radio State	Select the radio state to enable.

Table 123: Fields on the Create Access Point Radio Settings Page (*Continued*)

Field	Action
Virtual Access Points	To add a virtual access point: - Click Add. The Create VAP Configuration page appears. - Enter the following details: <i>Basic Settings:</i> - VAP ID—Enter a value using up or down arrows. - Description—Enter a description for the virtual access points. - SSID—Enter a unique name to broadcast from access points. - VLAN ID—Enter a VLAN identifier (VID) using up or down arrows. - Download Limit (Kbps)—Enter a value using up or down arrows. - Upload Limit (Kbps)—Enter a value using up or down arrows. - Broadcast SSID—Select No to disable. - Maximum Stations—Enter a value using up or down arrows. - Station Isolation—Select the check box to enable. <i>Security:</i> - Security—Select an option from the list. - If you have selected WPA Personal, enter the following details: - WPA Version—Select an option from the list. - Cipher Suites—Select an option from the list. - WPA Shared Key—Enter a value for the key. - Key Type—Select an option from the list. - If you have selected WPA Enterprise, enter the following details:

Table 123: Fields on the Create Access Point Radio Settings Page (*Continued*)

Field	Action
	• WPA Version—Select an option from the list. • Cipher Suites—Select an option from the list. • Radius Server IP—Enter IP address for the radio server. • Radius Port—Enter a value using up or down arrows. • Radius Key—Enter a value for the key. <i>Station MAC Filter:</i> • Allowed List MAC Address—Enter a MAC address that you want to allow and click Add to add the address in the MAC addresses list. Select the MAC address click Delete to remove it. • Deny List MAC Address—Enter a MAC address that you want to block and click Add to add the address in the MAC addresses list. Select the MAC address click Delete to remove it. 3. Click OK to save VAP configuration. Select the virtual access point and click Edit or Delete icons to edit or remove it.
Radio Settings—Radio Options	
Mode	Select a radio mode option from the list.
Channel Number	Select a channel number for radio from the list.
Channel Bandwidth	Select a channel bandwidth for radio from the list.
Transmit Power	Enter a value for radio transmit power using up or down arrows.

RELATED DOCUMENTATION

[About the Settings Page | 424](#)

[Edit an Access Point Radio Setting | 432](#)

[Delete an Access Point Radio Settings | 432](#)

Edit an Access Point Radio Setting

You are here: **Network** > **Connectivity** > **Wireless LAN** > **Settings**.

To edit an access point radio settings:

1. Select an existing access point radio setting that you want to edit on the Settings page.
2. Click the edit icon on the upper-right corner of the Radio Settings table.

The Edit Access Point Radio Settings page appears with editable fields. For more information on the options, see "[Create an Access Point Radio Setting](#)" on page 428.

3. Click **OK** to save the changes.

RELATED DOCUMENTATION

[About the Settings Page | 424](#)

[Delete an Access Point Radio Settings | 432](#)

Delete an Access Point Radio Settings

You are here: **Network** > **Connectivity** > **Wireless LAN** > **Settings**.

To delete an access point radio settings:

1. Select an existing access point radio setting that you want to delete on the Settings page.
2. Click the delete icon available on the upper-right corner of the Radio Settings table.
3. Click **Yes** to delete the access point radio settings or click **No** to retain the access point radio settings.

RELATED DOCUMENTATION

[About the Settings Page | 424](#)

Create an Access Point Radio Setting | 428

Edit an Access Point Radio Setting | 432

DHCP Client

IN THIS CHAPTER

- [About the DHCP Client Page | 434](#)
- [Add DHCP Client Information | 435](#)
- [Delete DHCP Client Information | 437](#)

About the DHCP Client Page

IN THIS SECTION

- [Tasks You Can Perform | 434](#)
- [Field Descriptions | 434](#)

You are here: **Network > DHCP > DHCP Client.**

Use this page to view, add, and remove link aggregation configuration details.

Tasks You Can Perform

You can perform the following tasks from this page:

- Create DHCP client information. See ["Add DHCP Client Information" on page 435](#).
- Delete DHCP client information. See ["Delete DHCP Client Information" on page 437](#).

Field Descriptions

[Table 124 on page 435](#) describes the fields on the DHCP Client page.

Table 124: Fields on the DHCP Client Page

Field	Description
Interface Name	Displays the interface name.
DHCP Client Identifier	Displays the name of the client used by the DHCP server to index its database of address bindings.
Server	Displays the DHCP server address.
Lease Time	Displays the time in seconds, to negotiate and exchange DHCP messages.
Add	Adds a new DHCP client configuration.
Delete	Deletes the selected DHCP client configuration.

RELATED DOCUMENTATION

| [Add DHCP Client Information](#) | 435

Add DHCP Client Information

You are here: **Network > DHCP > DHCP Client.**

To add DHCP Client information:

1. Click **Add** on the DHCP Client page.
The DHCP Client Information page appears.
2. Complete the configuration according to the guidelines provided in [Table 125 on page 436](#).
3. Click **OK** to save the changes. If you want to discard your changes, click **Cancel**.

Table 125: Fields on the DHCP Client Information Page

Field	Action
DHCP Client Information	
Interface	Enter the name of the interface on which to configure the DHCP client.
Client Identifier	Specifies the name of the client used by the DHCP server to index its database of address bindings. Select an option from the list: • ASCII— ASCII client. • Hexadecimal—Hexadecimal client.
Lease Time	Enter a value from 60 through 2,147,483,647. Specifies the time in seconds, to negotiate and exchange DHCP messages.
Retransmission Attempt	Enter a value from 0 through 6. The default value is 4. Specifies the number of attempts the router is allowed to retransmit a DHCP packet fallback.
DHCP Server Address	Enter the IPv4 address of the DHCP server. Specifies the preferred DHCP server that the DHCP clients contact with DHCP queries.
Vendor Class ID	Enter the vendor class ID numbers. Specifies the vendor class identity number for the DHCP client.
Update Server	Select the check box to enable the propagation of TCP/IP settings on the specified interface (if it is acting as a DHCP client) to the DHCP server that is configured on the router.

RELATED DOCUMENTATION

[Delete DHCP Client Information | 437](#)

Delete DHCP Client Information

You are here: **Network** > **DHCP** > **DHCP Client**.

To delete a DHCP Client Information:

1. Select a DHCP Client that you want to delete on the DHCP Client page.
2. Click **Delete** available on the DHCP Client page.
3. Click **Yes** to delete or click **No** to retain the profile.

RELATED DOCUMENTATION

[About the DHCP Client Page | 434](#)

[Add DHCP Client Information | 435](#)

CHAPTER 33

DHCP Server

IN THIS CHAPTER

- [About the DHCP Server Page | 438](#)
- [Add a DHCP Pool | 440](#)
- [Edit a DHCP Pool | 444](#)
- [Delete a DHCP Pool | 445](#)
- [DHCP Groups Global Settings | 445](#)
- [Add a DHCP Group | 446](#)
- [Edit a DHCP Group | 446](#)
- [Delete a DHCP Group | 447](#)

About the DHCP Server Page

IN THIS SECTION

- [Tasks You Can Perform | 438](#)
- [Field Descriptions | 439](#)

You are here: **Network > DHCP > DHCP Server.**

Use this page to view, add, and remove DHCP server configuration details.

Tasks You Can Perform

You can perform the following tasks from this page:

- Add a DHCP Pool. See ["Add a DHCP Pool" on page 440](#).

- Edit a DHCP Pool. See ["Edit a DHCP Pool" on page 444](#).
- Delete a DHCP Pool. See ["Delete a DHCP Pool" on page 445](#).
- Configure DHCP group global settings. See ["DHCP Groups Global Settings" on page 445](#).
- Add a DHCP group. See ["Add a DHCP Group" on page 446](#).
- Edit a DHCP group. See ["Edit a DHCP Group" on page 446](#).
- Delete a DHCP group. See ["Delete a DHCP Group" on page 447](#).

Field Descriptions

[Table 126 on page 439](#) describes the fields on the DHCP Server page.

Table 126: Fields on the DHCP Server Page

Field	Description
Routing Instance	Displays the name of the routing instance selected for DHCP server.
DHCP Pools	
Pool Name	Displays the name of the source pool.
Network Addresses	Displays the IP address in the pool.
Routing Instance	Displays the name of the routing instance selected.
DHCP Groups	
Global Settings	Specifies the global settings of DHCP server.
Group name	Specifies the source name of the group.
Interfaces	Displays name of the interfaces selected.
Routing Instance	Displays the name of the routing instance selected.

Table 126: Fields on the DHCP Server Page *(Continued)*

Field	Description
DHCP Address range for pool	
Address Range Name	Specify the name of the address assignment pool.
Address Range (Low)	Specifies the lowest address in the IP address pool range.
Address Range (High)	Specifies the highest address in the IP address pool range.
DHCP Static Bindings for pool	
Host Name	Specifies the name of the client for the static binding.
MAC Address	Specifies the client MAC address.
Fixed IP Address	Specifies the IP address to reserve for the client.

RELATED DOCUMENTATION

| [Add a DHCP Pool](#) | 440

Add a DHCP Pool

You are here: **Network** > **DHCP** > **DHCP Server**.

To add a DHCP Pool:

1. Click **+** on the upper-right corner of the DHCP Pools table.
The Add DHCP Pool page appears.
2. Complete the configuration according to the guidelines provided in [Table 127 on page 441](#).
3. Click **OK** to save the changes. If you want to discard your changes, click **Cancel**.

[Table 127 on page 441](#) describes the Add DHCP Pool Page.

Table 127: Fields on the Add DHCP Pool Page.

Field	Action
General	
Pool Name	Enter a name for DHCP pool.
Routing Instance	Select a routing instance from the list.
Network Addresses	Enter the following details: • IP Address—Enter an IP address. • Subnet Mask—Enter a subnet mask for the IP address.
DHCP Pool Attributes	
Click DHCP Attributes to add DHCP pool attributes. After configuring the attributes, click OK to save the changes.	
Pool Name	Displays the DHCP pool name.
Domain Name	Enter the domain name to be assigned to the address pool.
Server Identifier	Enter the name of the server identifier to assign to the DHCP client in the address pool.
Netbios Node Type	Select a NetBIOS node type from the list. This is equivalent to DHCP option 46.
Next Server	Enter the IP address of the next DHCP server that the clients need to contact.
Propagate Settings	Select an interface from the list. Specifies the name of the interface on the router through which the resolved DHCP queries are propagated to the DHCP pool.
TFTP Server	Enter the IP address of the TFTP server.

Table 127: Fields on the Add DHCP Pool Page. *(Continued)*

Field	Action
Maximum Lease Time (Secs)	Enter a from value 60 through 1,209,600. Specifies the maximum length of time in seconds, a client can hold a lease. (Dynamic BOOTP lease lengths can exceed this maximum time.)
Boot File	Enter the path and filename of the initial boot file to be used by the client.
Boot Server	Enter the IP address or hostname of the TFTP server that provides the initial boot file to the client.
Grace Period (Secs)	Enter a number of seconds the lease is retained. range is 0 through 4,294,967,295. By default, 0 is no grace period.
DNS Name Servers	Specifies the DNS name to assign to the DHCP client in the address pool. Click any one of the following: • +—Adds the DNS name in the address pool. • Click the pencil icon to edit a selected DNS name in the address pool. • X—Deletes the DNS name in the address pool.
WINS Servers	Specifies the WINS servers to assign to the DHCP client in the address pool. Click any one of the following: • +—Adds WINS servers to the address pool. • Click the pencil icon to edit a selected WINS server in the address pool. • X—Deletes the WINS servers in the address pool.

Table 127: Fields on the Add DHCP Pool Page. *(Continued)*

Field	Action
Gateway Routers	Specifies the gateway router to assign client in the address pool. Click any one of the following: • +—Adds the gateway router to the address pool. • Click the pencil icon to edit a selected gateway router in the address pool. • X—Deletes the gateway router in the address pool.
Options	Click + to add DHCP option. Enter the following details: • Code—Type a number. • Type—Select a type from the list that corresponds to the code. • Value—Type a valid option value based on the type. You can select the DHCP option and click the pencil icon to edit or click X to delete the DHCP options.
Option-82	Device inserts DHCP option 82 (also known as the DHCP relay agent information option) information. Enter the following details: • Circuit Identifier—Enter circuit ID to identify the circuit (interface or VLAN) on the switching device on which the request was received. • Ranges—Enter a value for the circuit ID. • Remote Identifier—Enter remote ID to identify the remote host. • Ranges—Enter a value for the remote ID.

Address Range

Click **+** to add address range. After configuring the attributes, click **OK** to save the changes.

Selected an address range and click the pencil icon to edit it or click **X** to delete it.

Table 127: Fields on the Add DHCP Pool Page. (Continued)

Field	Action
Name	Enter the address range name.
Low	Enter an IP address that is part of the subnet specified in Address Pool subnet.
High	Enter an IP address that is part of the subnet specified in Address Pool Subnet. This address must be greater than the address specified in Address Range Low.

Static Bindings

Click **+** to add DHCP static bindings. After configuring the attributes, click **OK** to save the changes.

Selected a DHCP static binding and click the pencil icon to edit it or click **X** to delete it.

Host Name	Enter the hostname to assign the DHCP client to the MAC address.
Mac Address	Enter the MAC address of the DHCP client.
Fixed IP Address	Enter the fixed address to assign the DHCP client to the MAC address.

RELATED DOCUMENTATION

[Edit a DHCP Pool](#) | [444](#)

Edit a DHCP Pool

You are here: **Network > DHCP > DHCP Server.**

To edit a DHCP Pool:

1. Select an existing DHCP Pool that you want to edit on the DHCP Server page.
2. Click the pencil icon available on the upper-right corner of the DHCP Pools table.

The Edit DHCP Pool page appears. You can edit the network addresses. For more information on the options, see ["Add a DHCP Pool" on page 440.](#)

3. Click **OK** to save the changes.

RELATED DOCUMENTATION

[Delete a DHCP Pool | 445](#)

Delete a DHCP Pool

You are here: **Network** > **DHCP** > **DHCP Server**.

To delete a DHCP Pool:

1. Select a DHCP Pool that you want to delete on the DHCP Server page.
2. Click the delete icon available on the upper-right corner of the DHCP Pools table.
3. Click **Yes** to delete or click **No** to retain the profile.

RELATED DOCUMENTATION

[DHCP Groups Global Settings | 445](#)

DHCP Groups Global Settings

You are here: **Network** > **DHCP** > **DHCP Server**.

To configure DHCP groups global settings:

1. Click **Global Settings** available on the upper-right corner of the DHCP Groups table.
The DHCP Global Configuration page appears.
2. Select the options available in the Available column and move them to Selected column using the arrow to configure the order of the DHCP pool match.
3. Click **OK** to save the changes or click **Cancel** to discard the changes.

RELATED DOCUMENTATION

[Add a DHCP Group | 446](#)

[Edit a DHCP Group | 446](#)

Add a DHCP Group

You are here: **Network** > **DHCP** > **DHCP Server**.

To add a DHCP Group:

1. Click **+** on the upper-right corner of the DHCP Groups table.
The Add DHCP Group page appears.
2. Complete the configuration according to the guidelines provided in [Table 128 on page 446](#).
3. Click **OK** to save the changes. If you want to discard your changes, click **Cancel**.

[Table 128 on page 446](#) describes the fields on the Add DHCP Group.

Table 128: Fields on the Add DHCP Group Page

Field	Action
Group Name	Enter a name for the DHCP group.
Routing Instance	Select a routing instance from the list.
Interfaces	Select the interfaces available in the Available column and move them to Selected column using the right arrow.

RELATED DOCUMENTATION

[Edit a DHCP Group | 446](#)

[Delete a DHCP Group | 447](#)

[DHCP Groups Global Settings | 445](#)

Edit a DHCP Group

You are here: **Network** > **DHCP** > **DHCP Server**.

To edit a DHCP group:

1. Select an existing DHCP group that you want to edit on the DHCP Server page.
2. Click the pencil icon available on the upper-right corner of the DHCP Groups table.
The Edit DHCP Group page appears with editable fields. For more information on the options, see ["Add a DHCP Group" on page 446](#).
3. Click **OK** to save the changes.

RELATED DOCUMENTATION

DHCP Groups Global Settings 445
Add a DHCP Group 446
Delete a DHCP Group 447

Delete a DHCP Group

You are here: **Network > DHCP > DHCP Server**.

To delete a DHCP group:

1. Select a DHCP group that you want to delete on the DHCP Server page.
2. Click the delete icon available on the upper-right corner of the DHCP Groups table.
3. Click **Yes** to delete or click **No** to retain the profile.

RELATED DOCUMENTATION

DHCP Groups Global Settings 445
Add a DHCP Group 446
Edit a DHCP Group 446

Firewall Filters—IPv4

IN THIS CHAPTER

- About the IPv4 Page | 448
- Add IPv4 Firewall Filters | 449

About the IPv4 Page

IN THIS SECTION

- Tasks You Can Perform | 448
- Field Descriptions | 448

You are here: **Network** > **Firewall Filters** > **IPv4**.

Use this page to configure IPv4 firewall filters.

Tasks You Can Perform

You can perform the following task from this page:

- Add an IPv4 firewall filter. See ["Add IPv4 Firewall Filters" on page 449](#).

Field Descriptions

[Table 129 on page 449](#) describes the fields on the IPv4 page.

Table 129: Fields on the IPv4 Page

Field	Description
IPv4 Filter Summary	
Filter Name	Displays the name of the filter and when expanded, lists the terms attached to the filter.
Add New IPv4 Filter	
Filter Name	Searches for existing filters by filter name.
Term Name	Searches for existing terms by term name.
Location	Specifies the position of the new filter.

RELATED DOCUMENTATION

[Add IPv4 Firewall Filters](#) | 449

Add IPv4 Firewall Filters

You are here: **Network** > **Firewall Filters** > **IPv4**.

To add an IPV4 firewall filter:

1. Complete the configuration according to the guidelines provided in [Table 130 on page 450](#) and [Table 131 on page 452](#).
2. Click **Add** available in the Add New IPv4 Filter section.
A new IPv4 Firewall Filter is created.
3. Click **OK** to save the changes. If you want to discard your changes, click **Cancel**.

Table 130: Fields on the Add IPv4 Firewall Filter Page

Field	Action
IPv4 Filter Summary	
Action column	Select an option. The options available are: • To move an item upward—Locate the item and click the up arrow from the same row. • To move an item downward—Locate the item and click the down arrow from the same row. • To delete an item—Locate the item and click the X from the same row.
Filter Name	Displays the name of the filter and when expanded, lists the terms attached to the filter. Displays the match conditions and actions that are set for each term. Allows you to add more terms to a filter or modify filter terms. The options available are: • To display the terms added to a filter—Click the plus sign next to the filter name. This also displays the match conditions and actions set for the term. • To edit a filter—Click the filter name. To edit a term, click the name of the term.
Search	
IPv4 Filter Name	Enter the existing filter name. The options available are: • To find a specific filter—Enter the name of the filter in the Filter Name box. • To list all filters with a common prefix or suffix—Use the wildcard character (*) when you enter the name of the filter. For example, te* lists all filters with a name starting with the characters te.

Table 130: Fields on the Add IPv4 Firewall Filter Page *(Continued)*

Field	Action
IPv4 Term Name	Enter the existing terms by term name. The options available are: • To find a specific term—Enter the name of the term in the Term Name box. • To list all terms with a common prefix or suffix—Use the wildcard character (*) when typing the name of the term. For example, ra* lists all terms with a name starting with the characters ra.
Number of Items to Display	Enter the number of filters or terms to display on one page. Select the number of items to be displayed on one page.
Add New IPv4 Filter	
Filter Name	Enter the existing filter name. The options available are: • To find a specific filter—Enter the name of the filter in the Filter Name box. • To list all filters with a common prefix or suffix—Use the wildcard character (*) when you enter the name of the filter. For example, te* lists all filters with a name starting with the characters te.
Term Name	Enter the existing terms by term name. The options available are: • To find a specific term—Enter the name of the term in the Term Name box. • To list all terms with a common prefix or suffix—Use the wildcard character (*) when typing the name of the term. For example, ra* lists all terms with a name starting with the characters ra.

Table 130: Fields on the Add IPv4 Firewall Filter Page *(Continued)*

Field	Action
Location	Positions the new filter in one of the following locations: • After Final IPv4 Filter—At the end of all filters. • After IPv4 Filter—After a specified filter. • Before IPv4 Filter—Before a specified filter.
Add	Adds a new filter name. Opens the term summary page for this filter allowing you to add new terms to this filter.

Add New IPv4 Term

Location	Positions the new term in one of the following locations: • After Final IPv4 Filter—At the end of all term. • After IPv4 Filter—After a specified term. • Before IPv4 Filter—Before a specified term.
Add	Opens the Filter Term page allowing you to define the match conditions and the action for this term.

Table 131: Fields on the Match Criteria for IPv4 Firewall Filter

Field	Action
Match Source	

Table 131: Fields on the Match Criteria for IPv4 Firewall Filter *(Continued)*

Field	Action
Source Address	Enter IP source addresses to be included in, or excluded from, the match condition. Allows you to remove source IP addresses from the match condition. If you have more than 25 addresses, this field displays a link that allows you to easily scroll through pages, change the order of addresses, and also search for them. The options available are: • Add—To include the address in the match condition. • Except—To exclude the address from the match condition and then select Add -To include the address in the match condition. • Delete—To remove an IP source address from the match condition. Enter an IP source address and prefix length and select an option.
Source Prefix List	Enter source prefix lists, which you have already defined, to be included in the match condition. Allows you to remove a prefix list from the match condition. Select an option: • Add—To include a predefined source prefix list in the match condition, type the prefix list name. • Except—To exclude the prefix list from the match condition and then select Add—To include the prefix list in the match condition. • Delete—To remove a prefix list from the match condition.

Table 131: Fields on the Match Criteria for IPv4 Firewall Filter (*Continued*)

Field	Action
Source Port	Enter the source port type to be included in, or excluded from, the match condition. Allows you to remove a source port type from the match condition. NOTE: This match condition does not check the protocol type being used on the port. Make sure to specify the protocol type (TCP or UDP) match condition in the same term. The options available are: • Add—To include the port in the match condition. • Except—To exclude the port from the match condition and then select Add—To include the port in the match condition. • Delete—To remove a port from the match condition. Select the port from the port name list; enter the port name, number, or range and then select an option.
Match Destination	
Destination Address	Enter destination addresses to be included in, or excluded from, the match condition. Allows you to remove a destination IP address from the match condition. If you have more than 25 addresses, this field displays a link that allows you to easily scroll through pages, change the order of addresses, and also search for them. The options available are: • Add—To include the address in the match condition. • Except—To exclude the address from the match condition and then select Add—To include the address in the match condition. • Delete—To remove an IP address from the match condition. Enter an IP destination address and prefix length and select an option.

Table 131: Fields on the Match Criteria for IPv4 Firewall Filter *(Continued)*

Field	Action
Destination Prefix List	Enter destination prefix lists, which you have already defined, to be included in the match condition. Allows you to remove a prefix list from the match condition. Select an option: • Add—To include a predefined destination prefix list, enter the prefix list name. • Except—To exclude the prefix list from the match condition and then select Add—To include the prefix list in the match condition. • Delete—To remove a prefix list from the match condition.
Destination Port	Enter destination port types to be included in, or excluded from, the match condition. Allows you to remove a destination port type from the match condition. NOTE: This match condition does not check the protocol type being used on the port. Make sure to specify the protocol type (TCP or UDP) match condition in the same term. The options available are: • Add—To include the port in the match condition. • Except—To exclude the port from the match condition and then select Add—To include the port in the match condition. • Delete—To remove a port type from the match condition. Select the port from the port name list; enter the port name, number, or range; and then select an option.
Match Source or Destination	

Table 131: Fields on the Match Criteria for IPv4 Firewall Filter *(Continued)*

Field	Action
Address	Enter IP addresses to be included in, or excluded from, the match condition for a source or destination. Allows you to remove an IP address from the match condition. If you have more than 25 addresses, this field displays a link that allows you to easily scroll through pages, change the order of addresses and also search for them. NOTE: This address match condition cannot be specified in conjunction with the source address or destination address match conditions in the same term. The options available are: • Add—To include the address in the match condition. • Except—To exclude the address from the match condition and then select Add—To include the address in the match condition. • Delete—To remove an IP address from the match condition. Enter an IP destination address and prefix length and select an option.
Prefix List	Enter prefix lists, which you have already defined, to be included in the match condition for a source or destination. Allows you to remove a prefix list from the match condition. NOTE: This prefix list match condition cannot be specified in conjunction with the source prefix list or destination prefix list match conditions in the same term. Select an option: • Add—To include a predefined destination prefix list, type the prefix list name. • Delete—To remove a prefix list from the match condition.

Table 131: Fields on the Match Criteria for IPv4 Firewall Filter (*Continued*)

Field	Action
Port	Enter a port type to be included in, or excluded from, a match condition for a source or destination. Allows you to remove a destination port type from the match condition. NOTE: This match condition does not check the protocol type being used on the port. Make sure to specify the protocol type (TCP or UDP) match condition in the same term. Also, this port match condition cannot be specified in conjunction with the source port or destination port match conditions in the same term. The options available are: • Add—To include the port in the match condition. • Except—To exclude the port from the match condition and then select Add—To include the port in the match condition. • Delete—To remove a port type from the match condition. Select the port from the port name list; enter the port name, number, or range; and then select an option.
Match Interface	
Interface	Enter interfaces to be included in a match condition. Allows you to remove an interface from the match condition. The options available are: • Add—To include an interface in a match condition. • Delete—To remove an interface from the match condition. Select a name from the interface name list or Enter the interface name and select an option.

Table 131: Fields on the Match Criteria for IPv4 Firewall Filter *(Continued)*

Field	Action
Interface Set	Enter interface sets, which you have already defined, to be included in a match condition. Allows you to remove an interface set from the match condition. The options available are: • Add—To include the group in the match condition. • Delete—To remove an interface group from the match condition. Enter the interface set name and select an option.
Interface Group	Enter interface groups, which you have already defined, to be included in, or excluded from, a match condition. Allows you to remove an interface group from the match condition. The options available are: • Add—To include the port in the match condition. • Except—To exclude the port from the match condition and then select Add—To include the port in the match condition. • Delete— To remove a port type from the match condition. Enter the name of the group and select an option.
Match Packet and Network	
First Fragment	Select the check box. Matches the first fragment of a fragmented packet.
Is Fragment	Select the check box. Matches trailing fragments (all but the first fragment) of a fragmented packet.
Fragment Flags	Enter fragmentation flags to be included in the match condition. Enter a text or numeric string defining the flag.

Table 131: Fields on the Match Criteria for IPv4 Firewall Filter *(Continued)*

Field	Action
TCP Established	Select the check box. Matches all Transmission Control Protocol packets other than the first packet of a connection. NOTE: This match condition does not verify that the TCP is used on the port. Make sure to specify the TCP as a match condition in the same term.
TCP Initial	Select the check box. Matches the first Transmission Control Protocol packet of a connection. NOTE: This match condition does not verify that the TCP is used on the port. Make sure to specify the TCP as a match condition in the same term.
TCP Flags	Enter Transmission Control Protocol flags to be included in the match condition. NOTE: This match condition does not verify that the TCP is used on the port. Make sure to specify the TCP as a match condition in the same term.
Protocol	Enter IPv4 protocol types to be included in, or excluded from, the match condition. Allows you to remove an IPv4 protocol type from the match condition. The options available are: • Add—To include the protocol in the match condition. • Except—To exclude the protocol from the match condition and then select Add—To include the protocol in the match condition. • Delete—To remove an IPv4 protocol type from the match condition. Select a protocol name from the list or enter a protocol name or number and then select an option.

Table 131: Fields on the Match Criteria for IPv4 Firewall Filter (*Continued*)

Field	Action
ICMP Type	Select a packet type from the list or enter a packet type name or number and then select an option. NOTE: This protocol does not verify that ICMP is used on the port. Make sure to specify an ICMP type match condition in the same term. The options available are: • Add—To include the packet type in the match condition. • Except—To exclude the packet type from the match condition and then select. Add—To include the packet type in the match condition. • Delete—To remove an ICMP packet type from the match condition.
ICMP Code	Select a packet code from the list or enter the packet code as text or a number and select an option. NOTE: The ICMP code is dependent on the ICMP type. Make sure to specify an ICMP type match condition in the same term. The options available are: • Add—To include the packet type in the match condition. • Except—To exclude the packet type from the match condition and then select Add—To include the packet type in the match condition. • Delete—To remove an ICMP packet type from the match condition.
Fragment Offset	Enter a fragment offset number or range and then select an option. The options available are: • Add—To include the offset in the match condition. • Except—To exclude the offset from the match condition and then select Add—To include the offset in the match condition. • Delete—To remove a fragment offset value from the match condition.

Table 131: Fields on the Match Criteria for IPv4 Firewall Filter *(Continued)*

Field	Action
Precedence	Enter IP precedence to be included in, or excluded from, the match condition. Allows you to remove an IP precedence entry from the match condition. The options available are: • Add—To include the precedence in the match condition. • Except—To exclude the precedence from the match condition and then select Add—To include the precedence in the match condition. • Delete—To remove an IP precedence from the match condition.
DSCP	Select DSCP from the list; or enter the DSCP value as a keyword, a decimal integer from 0 through 7, or a binary string; and then select an option. The options available are: • Add—To include the DSCP in the match condition. • Except—To exclude the DSCP from the match condition and then select Add—To include the DSCP in the match condition. • Delete—To remove a DSCP from the match condition.
TTL	Enter an IPv4 TTL value by entering a number from 1 through 255 and select an option. NOTE: This option is not available in SRX5600 device. The options available are: • Add—To include the TTL in the match condition. • Except—To exclude the TTL from the match condition and then select Add—To include the TTL in the match condition . • Delete—To remove an IPv4 TTL type from the match condition.

Table 131: Fields on the Match Criteria for IPv4 Firewall Filter (*Continued*)

Field	Action
Packet Length	Specify a packet length, enter a value or range. Select an option. The options available are: • Add—To include the packet length in the match condition. • Except—To exclude the packet length from the match condition and then select Add—To include the packet length in the match condition. • Delete—To remove a packet length value from the match condition.
Forwarding Class	Specify a forwarding class by selecting a forwarding class from the list or entering a forwarding class, and then select an option. The options available are: • Add—To include the forwarding class in the match condition. • Except—To exclude the forwarding class from the match condition and then select Add—To include the forwarding class in the match condition. • Delete—To remove a forwarding class from the match condition.
IP Options	Enter option by selecting an IP option from the list or entering a text or numeric string identifying the option, and then select an option. The options available are: • Add—To include the IP option in the match condition. • Except—To exclude the IP option from the match condition and then select Add—To include the IP option in the match condition. • Delete—To remove an IP option from the match condition.

Table 131: Fields on the Match Criteria for IPv4 Firewall Filter (*Continued*)

Field	Action
IPsec ESP SPI	Enter an ESP SPI value by entering a binary, hexadecimal, or decimal SPI value or range, and then select an option. The options available are: • Add—To include the value in the match condition. • Except—To exclude the value from the match condition and then select Add—To include the value in the match condition. • Delete—To remove an ESP SPI value from the match condition.
Action	
Nothing	Select Nothing. Specifies that no action is performed. By default, a packet is accepted if it meets the match conditions of the term, and packets that do not match any conditions in the firewall filter are dropped.
Accept	Select Accept. Accepts a packet that meets the match conditions of the term.
Discard	Select Discard. Discards a packet that meets the match conditions of the term. Names a discard collector for packets.
Reject	Select Reject and then select a message type from the reason list. Rejects a packet that meets the match conditions of the term and returns a rejection message. Allows you to specify a message type that denotes the reason the packet was rejected. NOTE: To log and sample rejected packets, specify log and sample action modifiers in conjunction with this action.

Table 131: Fields on the Match Criteria for IPv4 Firewall Filter *(Continued)*

Field	Action
Next Term	Select Next Term. Evaluates a packet with the next term in the filter if the packet meets the match conditions in this term. This action makes sure that the next term is used for evaluation even when the packet matches the conditions of a term. When this action is not specified, the filter stops evaluating the packet after it matches the conditions of a term and takes the associated action.
Routing Instance	Accepts a packet that meets the match conditions, and forwards it to the specified routing instance. Select Routing Instance and enter the routing instance name in the box next to Routing Instance.
Action Modifiers	
Forwarding Class	Classifies the packet as a specific forwarding class. Select Forwarding Class from the list.
Count	Counts the packets passing this term. Allows you to name a counter that is specific to this filter. This means that every time a packet transits any interface that uses this filter, it increments the specified counter. Select Count and enter a 24-character string containing letters, numbers, or hyphens to specify a counter name.
Virtual Channel	Enter a string identifying the virtual channel. NOTE: This option is not available in SRX345 of devices.
Prefix Action	Enter the prefix action. NOTE: This option is not available in SRX4100 and SRX345 devices.
Log	Select Log. Logs the packet header information in the routing engine.

Table 131: Fields on the Match Criteria for IPv4 Firewall Filter *(Continued)*

Field	Action
Syslog	Select Syslog . Records packet information in the system log.
Port Mirror	Select Port Mirror . Port mirrors the packet. NOTE: This option is not available in SRX5600 and SRX345 devices.
Loss Priority	Sets the loss priority of the packet. This is the priority of dropping a packet before it is sent, and it affects the scheduling priority of the packet. Select the range of priority from the list.

RELATED DOCUMENTATION

| [About the IPv4 Page](#) | 448

Firewall Filters—IPv6

IN THIS CHAPTER

- About the IPv6 Page | 466
- Add IPv6 Firewall Filters | 467

About the IPv6 Page

IN THIS SECTION

- Tasks You Can Perform | 466
- Field Descriptions | 466

You are here: **Network > Firewall Filters > IPV6.**

Use this page to configure IPv6 firewall filter.

Tasks You Can Perform

You can perform the following task from this page:

- Add an IPv6 Firewall Filters. See ["Add IPv6 Firewall Filters" on page 467](#).

Field Descriptions

[Table 132 on page 467](#) describes the fields on IPv6 page.

Table 132: Fields on the IPv6 Page

Field	Description
IPv6 Filter Summary	
Filter Name	Displays the name of the filter and when expanded, lists the terms attached to the filter.
Add New IPv6 Filter	
Filter Name	Searches for existing filters by filter name.
Term Name	Searches for existing terms by term name.
Location	Specifies the position of the new filter.

RELATED DOCUMENTATION

| [Add IPv6 Firewall Filters](#) | 467

Add IPv6 Firewall Filters

You are here: **Network** > **Firewall Filters** > **IPv6**.

To add an IPV6 firewall filter:

1. Complete the configuration according to the guidelines provided in [Table 133 on page 468](#) and [Table 134 on page 471](#).
2. Click **Add** available in the Add New IPv6 Filter section.
A new IPv6 Firewall Filter is created.
3. Click **OK** to save the changes. If you want to discard your changes, click **Cancel**.

[Table 133 on page 468](#) describes the fields on the Add IPv6 page.

Table 133: Fields on the Add IPv6 Firewall Filter Page

Field	Action
IPv6 Filter Summary	
Action column	Select an option: • To move an item upward—Locate the item and click the up arrow from the same row. • To move an item downward—Locate the item and click the down arrow from the same row. • To delete an item—Locate the item and click X from the same row.
Filter Name	Enter the name of the filter and, when expanded, lists the terms attached to the filter. Displays the match conditions and actions that are set for each term. Allows you to add more terms to a filter or to modify filter terms. The options available are: • To display the terms added to a filter—Click the plus sign next to the filter name. This also displays the match conditions and actions set for the term. • To edit a filter—Click the filter name. To edit a term, click the name of the term.
Search	

Table 133: Fields on the Add IPv6 Firewall Filter Page *(Continued)*

Field	Action
Filter Name	Searches for existing filters by filter name. The options available are: • To find a specific filter—Enter the name of the filter in the Filter Name box. • To list all filters with a common prefix or suffix—Use the wildcard character (*) when you enter the name of the filter. For example, te* lists all filters with a name starting with the characters te.
Term Name	Searches for existing terms by name. The options available are: • To find a specific term—Enter the name of the term in the Term Name box. • To list all terms with a common prefix or suffix—Use the wildcard character (*) when typing the name of the term. For example, ra* lists all terms with a name starting with the characters ra.
Number of Items to Display	Specifies the number of filters or terms to display on one page. Selects the number of items to be displayed on one page.
Add New IPv6 Filter	

Table 133: Fields on the Add IPv6 Firewall Filter Page *(Continued)*

Field	Action
Filter Name	Enter the name of the filter and when expanded, lists the terms attached to the filter. Displays the match conditions and actions that are set for each term. Allows you to add more terms to a filter or modify filter terms. Select an option: • To display the terms added to a filter—Click the plus sign next to the filter name. This also displays the match conditions and actions set for the term. • To edit a filter—Click the filter name. To edit a term, click the name of the term.
Term Name	Searches for existing terms by term name. Select an option: • To find a specific term—Enter the name of the term in the Term Name box. • To list all terms with a common prefix or suffix—Use the wildcard character (*) when typing the name of the term. For example, ra* lists all terms with a name starting with the characters ra.
Location	Positions the new filter in one of the following locations: • After Final IPv4 Filter—At the end of all filters. • After IPv6 Filter—After a specified filter. • Before IPv6 Filter—Before a specified filter.

Table 133: Fields on the Add IPv6 Firewall Filter Page *(Continued)*

Field	Action
Add	Click Add. Opens the Filter Term page allowing you to define the match conditions and the action for this term.
Add New IPv6 Term	
Location	Positions the new filter in one of the following locations: • After Final IPv4 Filter—At the end of all filters. • After IPv6 Filter—After a specified filter. • Before IPv6 Filter—Before a specified filter.
Add	Click Add. Opens the Filter Term page allowing you to define the match conditions and the action for this term.

Table 134: Fields on the Match Criteria for IPv6 Firewall Filter

Field	Action
Match Source	

Table 134: Fields on the Match Criteria for IPv6 Firewall Filter *(Continued)*

Field	Action
Source Address	Specifies IP source addresses to be included in, or excluded from, the match condition. Allows you to remove source IP addresses from the match condition. If you have more than 25 addresses, this field displays a link that allows you to easily scroll through pages, change the order of addresses, and also search for them. Enter an IP source address and prefix length, and select an option: • Add—To include the address in the match condition. • Except—To exclude the address from the match condition and then select Add -To include the address in the match condition. • Delete—To remove an IP source address from the match condition.
Source Prefix List	Specifies source prefix lists, which you have already defined, to be included in the match condition. Allows you to remove a prefix list from the match condition. Select an option: • Add—To include a predefined source prefix list in the match condition, type the prefix list name. • Delete—To remove a prefix list from the match condition.
Source Port	Specifies the source port type to be included in, or excluded from, the match condition. Allows you to remove a source port type from the match condition. NOTE: This match condition does not check the protocol type being used on the port. Make sure to specify the protocol type (TCP or UDP) match condition in the same term. Select the port from the port name list; enter the port name, number, or range and then select an option: • Add—To include the port in the match condition. • Except—To exclude the port from the match condition and then select Add—To include the port in the match condition. • Delete—To remove a port from the match condition.
Match Destination	

Table 134: Fields on the Match Criteria for IPv6 Firewall Filter *(Continued)*

Field	Action
Destination Address	Specifies destination addresses to be included in, or excluded from, the match condition. Allows you to remove a destination IP address from the match condition. If you have more than 25 addresses, this field displays a link that allows you to easily scroll through pages, change the order of addresses, and also search for them. Enter an IP destination address and prefix length and select an option: • Add—To include the address in the match condition. • Except—To exclude the address from the match condition and then select Add—To include the address in the match condition. • Delete—To remove an IP address from the match condition.
Destination Prefix List	Specifies destination prefix lists, which you have already defined, to be included in the match condition. Allows you to remove a prefix list from the match condition. Select an option: • Add—To include a predefined destination prefix list, enter the prefix list name. • Delete—To remove a prefix list from the match condition.
Destination Port	Specifies destination port types to be included in, or excluded from, the match condition. Allows you to remove a destination port type from the match condition. NOTE: This match condition does not check the protocol type being used on the port. Make sure to specify the protocol type (TCP or UDP) match condition in the same term. Select the port from the port name list; enter the port name, number, or range; and then select an option: • Add—To include the port in the match condition. • Except—To exclude the port from the match condition and then select Add—To include the port in the match condition. • Delete—To remove a port type from the match condition.
Match Source or Destination	

Table 134: Fields on the Match Criteria for IPv6 Firewall Filter *(Continued)*

Field	Action
Address	Specifies IP addresses to be included in, or excluded from, the match condition for a source or destination. Allows you to remove an IP address from the match condition. If you have more than 25 addresses, this field displays a link that allows you to easily scroll through pages, change the order of addresses and also search for them. NOTE: This address match condition cannot be specified in conjunction with the source address or destination address match conditions in the same term. Enter an IP destination address and prefix length and select an option: • Add—To include the address in the match condition. • Except—To exclude the address from the match condition and then select Add—To include the address in the match condition. • Delete—To remove an IP address from the match condition.
Prefix List	Specifies prefix lists, which you have already defined, to be included in the match condition for a source or destination. Allows you to remove a prefix list from the match condition. NOTE: This prefix list match condition cannot be specified in conjunction with the source prefix list or destination prefix list match conditions in the same term. Select an option: • Add—To include a predefined destination prefix list, type the prefix list name. • Delete—To remove a prefix list from the match condition.

Table 134: Fields on the Match Criteria for IPv6 Firewall Filter *(Continued)*

Field	Action
Port	Specifies a port type to be included in, or excluded from, a match condition for a source or destination. Allows you to remove a destination port type from the match condition. NOTE: This match condition does not check the protocol type being used on the port. Make sure to specify the protocol type (TCP or UDP) match condition in the same term. Also, this port match condition cannot be specified in conjunction with the source port or destination port match conditions in the same term. Select the port from the port name list; enter the port name, number, or range; and then select an option: • Add—To include the port in the match condition. • Except—To exclude the port from the match condition and then select Add—To include the port in the match condition. • Delete—To remove a port type from the match condition.
Match Interface	
Interface	Specifies interfaces to be included in a match condition. Allows you to remove an interface from the match condition. Select a name from the interface name list or Enter the interface name and select an option: • Add—To include an interface in a match condition. • Delete—To remove an interface from the match condition.
Interface Set	Specifies interface sets, which you have already defined, to be included in a match condition. Allows you to remove an interface set from the match condition. Enter the interface set name and select an option: • Add—To include the group in the match condition. • Delete—To remove an interface group from the match condition.

Table 134: Fields on the Match Criteria for IPv6 Firewall Filter *(Continued)*

Field	Action
Interface Group	Specifies interface groups, which you have already defined, to be included in, or excluded from, a match condition. Allows you to remove an interface group from the match condition. Enter the name of the group and select an option: • Add—To include the port in the match condition. • Except—To exclude the port from the match condition and then select Add—To include the port in the match condition. • Delete—To remove a port type from the match condition.
Match Packet and Network	
TCP Established	Matches all Transmission Control Protocol packets other than the first packet of a connection. NOTE: This match condition does not verify that the TCP is used on the port. Make sure to specify the TCP as a match condition in the same term. Select the check box.
TCP Initial	Matches the first Transmission Control Protocol packet of a connection. NOTE: This match condition does not verify that the TCP is used on the port. Make sure to specify the TCP as a match condition in the same term. Select the check box.
TCP Flags	Specifies Transmission Control Protocol flags to be included in the match condition. NOTE: This match condition does not verify that the TCP is used on the port. Make sure to specify the TCP as a match condition in the same term. Enter a text or numeric string defining the flag.

Table 134: Fields on the Match Criteria for IPv6 Firewall Filter *(Continued)*

Field	Action
Next Header	Specifies IPv6 protocol types to be included in, or excluded from, the match condition. Allows you to remove an IPv6 protocol type from the match condition. Select a protocol name from the list or enter a protocol name or number and then select an option: • Add—To include the protocol in the match condition. • Except—To exclude the protocol from the match condition and then select Add—To include the protocol in the match condition. • Delete—To remove an IPv6 protocol type from the match condition.
ICMP Type	Specifies ICMP packet types to be included in, or excluded from, the match condition. Allows you to remove an ICMP packet type from the match condition. NOTE: This protocol does not verify that ICMP is used on the port. Make sure to specify an ICMP type match condition in the same term. Select a packet type from the list or enter a packet type name or number and then select an option: • Add—To include the packet type in the match condition. • Except—To exclude the packet type from the match condition and then select. • Add—To include the packet type in the match condition. • Delete—To remove an ICMP packet type from the match condition.

Table 134: Fields on the Match Criteria for IPv6 Firewall Filter *(Continued)*

Field	Action
ICMP Code	Specifies the ICMP code to be included in, or excluded from, the match condition. Allows you to remove an ICMP code from the match condition. NOTE: The ICMP code is dependent on the ICMP type. Make sure to specify an ICMP type match condition in the same term. Select a packet code from the list or enter the packet code as text or a number and select an option: • Add—To include the packet type in the match condition. • Except—To exclude the packet type from the match condition and then select Add—To include the packet type in the match condition. • Delete—To remove an ICMP packet type from the match condition.
Traffic Class	Specifies the traffic class to be included in, or excluded from, the match condition. Allows you to remove a traffic class value from the match condition. The options available are: • Add—To include the traffic class in the match condition. • Except—To exclude the traffic class from the match condition and then select Add—To include the traffic class in the match condition. • Delete—To remove a traffic class value from the match condition.
Packet Length	Specifies the length of received packets, in bytes, to be included in, or excluded from, the match condition. Allows you to remove a packet length value from the match condition. Specify a packet length, enter a value or range. Select an option: • Add—To include the packet length in the match condition. • Except—To exclude the packet length from the match condition and then select Add—To include the packet length in the match condition. • Delete—To remove a packet length value from the match condition.

Table 134: Fields on the Match Criteria for IPv6 Firewall Filter *(Continued)*

Field	Action
Forwarding Class	Specifies forwarding classes to be included in, or excluded from, the match condition. Allows you to a remove forwarding class entry from the match condition. Specify a forwarding class by selecting a forwarding class from the list or entering a forwarding class, and then select an option: • Add—To include the forwarding class in the match condition. • Except—To exclude the forwarding class from the match condition and then select Add—To include the forwarding class in the match condition. • Delete—To remove a forwarding class from the match condition.
Action	
Nothing	Select Nothing. Specifies that no action is performed. By default, a packet is accepted if it meets the match conditions of the term, and packets that do not match any conditions in the firewall filter are dropped.
Accept	Select Accept. Accepts a packet that meets the match conditions of the term.
Discard	Select Discard. Discards a packet that meets the match conditions of the term. Names a discard collector for packets.
Reject	Select Reject and then select a message type from the reason list. Rejects a packet that meets the match conditions of the term and returns a rejection message. Allows you to specify a message type that denotes the reason the packet was rejected. NOTE: To log and sample rejected packets, specify log and sample action modifiers in conjunction with this action.

Table 134: Fields on the Match Criteria for IPv6 Firewall Filter *(Continued)*

Field	Action
Next Term	Select Next Term. Evaluates a packet with the next term in the filter if the packet meets the match conditions in this term. This action makes sure that the next term is used for evaluation even when the packet matches the conditions of a term. When this action is not specified, the filter stops evaluating the packet after it matches the conditions of a term and takes the associated action.
Routing Instance	Accepts a packet that meets the match conditions, and forwards it to the specified routing instance. Select Routing Instance and enter the routing instance name in the box next to Routing Instance.
Action Modifiers	
Forwarding Class	Classifies the packet as a specific forwarding class. Select Forwarding Class from the list.
Count	Counts the packets passing this term. Allows you to name a counter that is specific to this filter. This means that every time a packet transits any interface that uses this filter, it increments the specified counter. Select Count and enter a 24-character string containing letters, numbers, or hyphens to specify a counter name.
Log	Select Log. Logs the packet header information in the routing engine.
Syslog	Select Syslog. Records packet information in the system log.
Loss Priority	Sets the loss priority of the packet. This is the priority of dropping a packet before it is sent, and it affects the scheduling priority of the packet. Select the range of priority from the list.

RELATED DOCUMENTATION

| [About the IPv6 Page](#) | 466

Firewall Filters—Assign to Interfaces

IN THIS CHAPTER

- [About the Assign to Interfaces Page | 482](#)

About the Assign to Interfaces Page

IN THIS SECTION

- [Field Descriptions | 482](#)

You are here: You are here: **Network > Firewall Filters > Assign To Interfaces.**

Use this page to configure interface for firewall filters.

Field Descriptions

[Table 135 on page 483](#) describes the fields on the Assign Interfaces page.

Table 135: Fields on the Assign Interfaces Page

Field	Description
Logical Interface Name	Displays the logical interfaces on a router. Allows you to apply IPv4 and IPv6 firewall filters to packets received on the interface and packets transmitted from the interface. The options available are: • Input firewall filter: • IPv4 Input Filter—Enter the name of IPv4 filter applied to received packets. • IPv6 Input Filter—Enter the name of IPv6 filter applied to received packets. • Output firewall filter: • IPv4 Output Filter—Enter the name of IPv4 filter applied to transmitted packets. • IPv6 Output Filter—Enter the name of IPv6 filter applied to transmitted packets. Click OK to save the changes.
Link State	Displays the status of the logical interface.
Input Firewall Filters	Displays the input firewall filter applied on an interface. This filter evaluates all packets received on the interface.
Output Firewall Filters	Displays the output firewall filter applied on an interface. This filter evaluates all packets transmitted from the interface.

RELATED DOCUMENTATION
[Add IPv4 Firewall Filters](#) | 449

[Add IPv6 Firewall Filters](#) | 467

NAT Policies

IN THIS CHAPTER

- [About the NAT Policies Page | 484](#)
- [Create a Source NAT | 486](#)
- [Edit a Source NAT | 492](#)
- [Delete a Source NAT | 492](#)

About the NAT Policies Page

IN THIS SECTION

- [Tasks You Can Perform | 485](#)
- [Field Descriptions | 485](#)

You are here: **Network > NAT > Policies.**

Network Address Translation (NAT) is a form of network masquerading where you can hide devices between the zones or interfaces. A trust zone is a segment of the network where security measures are applied. It is usually assigned to the internal LAN. An untrust zone is the Internet. NAT modifies the IP addresses of the packets moving between the trust and untrust zones.

Whenever a packet arrives at the NAT device, the device performs a translation on the packet's IP address by rewriting it with an IP address that was specified for external use. After translation, the packet appears to have originated from the gateway rather than from the original device within the network. This helps you hide internal IP addresses from the other networks and keep your network secure.

Use this page to configure source, destination, and static NAT.

Tasks You Can Perform

You can perform the following tasks from this page:

- Create a source NAT. See ["Create a Source NAT" on page 486](#).
- Edit a source NAT. See ["Edit a Source NAT" on page 492](#).
- Delete a source NAT. See ["Delete a Source NAT" on page 492](#).
- View destination NAT rules. For more information on destination NAT, see ["About the Destination Page" on page 504](#).
- View static NAT rules. For more information on static NAT, see ["About the Static Page" on page 510](#).

Field Descriptions

[Table 136 on page 485](#) describes the fields on the NAT Policies Page.

Table 136: Fields on the NAT Policies Page.

Field	Description
Seq	Displays the sequence number of rules in a context. Drag and drop the policies within the same context to reorder your NAT policy among the existing policies.
Hits	Displays the number of hits the rule has encountered.
Rule Name	Displays the rule name.
NAT Type	Displays whether the NAT is source, destination, or static.
Source Ingress	Displays the source ingress type. For example: zone, interface, or routing instance.
Source Address	Displays the match source address of the NAT policy.
Source Port	Displays the match source port of the NAT policy.
Destination Egress	Displays the match destination egress type. For example: zone, interface, or routing instance.

Table 136: Fields on the NAT Policies Page. (Continued)

Field	Description
Destination Address	Displays the match destination address of the NAT policy.
Destination Port	Displays the match destination port of the NAT policy.
Applications	Displays the match application for the NAT policy.
Protocol	Displays the match IP protocol for the NAT policy.
Actions	Displays the action of the NAT policy.
Description	Displays the description for the NAT policy.

Create a Source NAT

You are here: **Network > NAT > Policies.**

To create a source NAT:

1. Click **Create > Source NAT** on the upper right-side of the Policies page.
The inline creation fields will appear.
2. Complete the configuration according to the guidelines provided in [Table 137 on page 486](#).
3. Click the tick icon on the right-side of the row once done with the configuration.

Table 137: Fields on the Policies Page—Create Source NAT

Field	Description
Rule Name > Name	Enter a unique source NAT rule name.
Source Ingress	

Table 137: Fields on the Policies Page—Create Source NAT *(Continued)*

Field	Description
Select Sources	
Source ingress type	Select an option from the list for ingress traffic that originates from inside the network: • Zone • Interface • Routing Instance
Zone	Select the source zones in the Available column and use the right arrow to move them to the Selected column. NOTE: This option is available only if you select source ingress type as Zone.
Interface	Select the source interfaces in the Available column and use the right arrow to move them to the Selected column. NOTE: This option is available only if you select source ingress type as Interface.
Routing instance	Select the source routing instances in the Available column and use the right arrow to move them to the Selected column. NOTE: This option is available only if you select source ingress type as Routing Instance.
Addresses	Select the source addresses in the Available column and use the right arrow to move them to the Selected column. To create a new address: 1. Click +. The Create Address page appears. 2. Enter the following details: • Name—Optional. Enter a unique name for source address. • Description—Enter the description for source address. • Host IP—Enter IPv4 or IPv6 host address.

Table 137: Fields on the Policies Page—Create Source NAT *(Continued)*

Field	Description
Ports/Port range	Click + to enter port number or port range (for example, 1-5) with minimum and maximum values for source. Range: 0 through 65535. To edit a port number or port range, select it and click the pencil icon. To delete a port number or port range, select it and click the delete icon.
Destination Egress	
Select Destination	
Destination egress type	Select an option from the list for outgoing traffic that originates from inside of the device network: • Zone • Interface • Routing Instance
Zone	Select the destination zones in the Available column and use the right arrow to move them to the Selected column. NOTE: This option is available only if you select destination egress type as Zone.
Interface	Select the destination interfaces in the Available column and use the right arrow to move them to the Selected column. NOTE: This option is available only if you select destination egress type as Interface.
Routing instance	Select the destination routing instances in the Available column and use the right arrow to move them to the Selected column. NOTE: This option is available only if you select destination egress type as Routing Instance.

Table 137: Fields on the Policies Page—Create Source NAT *(Continued)*

Field	Description
Addresses	Select the destination addresses in the Available column and use the right arrow to move them to the Selected column. To create a new address: 1. Click +. The Create Address page appears. 2. Enter the following details: • Name—Optional. Enter a unique name for destination address. • Description—Enter the description for destination address. • Host IP—Enter IPv4 or IPv6 host address.
Ports/Port range	Click + to enter port number or port range (for example, 1-5) with minimum and maximum values for destination. Range: 0 through 65535. To edit a port number or port range, select it and click the pencil icon. To delete a port number or port range, select it and click the delete icon.
Applications	
Select Applications	
Applications	Select an application option: • Any—Any applications you want to associate with the NAT policy. • Specific—Select the applications in the Available column and use the right arrow to move them to the Selected column. • None—No applications selected to associate with the NAT policy.
Protocols	
Select Protocols	

Table 137: Fields on the Policies Page—Create Source NAT *(Continued)*

Field	Description
Protocols	Select the protocols in the Available column and use the right arrow to move them to the Selected column.
Add Protocol	Click + and enter a protocol number to associate with the NAT policy. Range is 0 through 255.
Actions	
Actions	
Translation type	Select an option: • None—No translation is performed for the incoming traffic. • Interface—Performs interface-based translations on the source traffic. • Pool—Performs pool-based translations on the source traffic.
Source pool	Select a source pool from the list. Click Add New to create a new source NAT pool. For more information on field options, see "Create a Source NAT Pool" on page 496 .
Persistent	Enable this option for mapping all requests from the same internal transport address to the same reflexive transport address.

Table 137: Fields on the Policies Page—Create Source NAT *(Continued)*

Field	Description
Persistent NAT type	Select an option from the list: • any-remote-host—All requests from a specific internal IP address and port are mapped to the same reflexive transport address. Any external host can send a packet to the internal host by sending the packet to the reflexive transport address. • target-host—All requests from a specific internal IP address and port are mapped to the same reflexive transport address. An external host can send a packet to an internal host by sending the packet to the reflexive transport address. The internal host must have previously sent a packet to the external hosts IP address. • target-host-port—All requests from a specific internal IP address and port are mapped to the same reflexive transport address. An external host can send a packet to an internal host by sending the packet to the reflexive transport address. The internal host must have previously sent a packet to the external hosts IP address and port.
Inactivity timeout	Enter the amount of time that the persistent NAT binding remains in the sites memory when all the sessions of the binding entry have ended. Range is 60 through 7200 seconds.
Maximum session number	Enter the maximum number of sessions with which a persistent NAT binding can be associated. Range is 8 through 65536
Description	Enter the description for the source NAT.

RELATED DOCUMENTATION

[Edit a Source NAT | 492](#)
[Delete a Source NAT | 492](#)

Edit a Source NAT

You are here: **Network** > **NAT** > **Policies**.

To edit a source NAT:

1. Double-click an existing source NAT that you want to edit on the Policies page.
2. Complete the configuration according to the guidelines provided in ["Create a Source NAT" on page 486](#).
3. Click the tick icon on the right-side of the row once done with the configuration.

RELATED DOCUMENTATION

[Delete a Source NAT | 492](#)

Delete a Source NAT

You are here: **Network** > **NAT** > **Policies**.

To delete a source NAT:

1. Select one or more source NATs that you want to delete on the Policies page.
2. Click the delete icon available on the upper-right corner of the page.
A confirmation message window appears.
3. Click **Yes** to delete or click **No** to retain the source NAT.

RELATED DOCUMENTATION

[Create a Source NAT | 486](#)

[Edit a Source NAT | 492](#)

NAT Pools

IN THIS CHAPTER

- [About the NAT Pools Page | 493](#)
- [Global Options | 495](#)
- [Create a Source NAT Pool | 496](#)
- [Edit a Source NAT Pool | 500](#)
- [Delete a Source NAT Pool | 501](#)
- [Add a Destination NAT Pool | 501](#)
- [Edit a Destination NAT Pool | 503](#)
- [Delete a Destination NAT Pool | 503](#)

About the NAT Pools Page

IN THIS SECTION

- [Tasks You Can Perform | 494](#)
- [Field Descriptions | 494](#)

You are here: **Network > NAT > Pools.**

A NAT pool is a set of IP addresses that you can define and use for translation. NAT policies perform address translation by translating internal IP addresses to the addresses in these pools. Unlike static NAT, where there is a one-to-one mapping that includes destination IP address translation in one direction and source IP address translation in the reverse direction, with source NAT, you translate the original source IP address to an IP address in the address pool. With destination NAT, you translate the original destination address to an IP address in the address pool.

Use this page to configure source and destination NAT pools.

Tasks You Can Perform

You can perform the following tasks from this page:

- Add a global option. See ["Global Options" on page 495](#).
- Create a source NAT pool. See ["Create a Source NAT Pool" on page 496](#).
- Edit a source NAT pool. See ["Edit a Source NAT Pool" on page 500](#).
- Delete a source NAT pool. See ["Delete a Source NAT Pool" on page 501](#).
- Add a destination NAT pool. See ["Add a Destination NAT Pool" on page 501](#).
- Edit a destination NAT pool. See ["Edit a Destination NAT Pool" on page 503](#).
- Delete a destination NAT pool. See ["Delete a Destination NAT Pool" on page 503](#).

Field Descriptions

[Table 138 on page 494](#) describes the fields on the NAT Pools Page.

Table 138: Fields on the NAT Pools Page.

Field	Description
Pool Name	Displays the NAT pool name.
Pool Type	Displays whether the NAT pool is either source or destination.
Pool Address	Displays the NAT pool address.
Proxy ARP/ND	Displays the Address Resolution Protocol (ARP) proxy or Neighbor Discovery Protocol (NDP) proxy for the NAT pool.
Description	Displays the description for the NAT pool.

Global Options

You are here: **Network > NAT > Pools.**

To add global options for a NAT pool:

1. Click the **Global Options** available on the upper-right corner of the page.
The Global Options page appears.
2. Complete the configuration according to the guidelines provided in [Table 139 on page 495](#).
3. Click **OK** to save the changes.

Table 139: Fields on the Global Options Page

Field	Action
Persistent address	Enable this option to ensure that the same IP address is assigned from the source NAT pool to a specific host for multiple concurrent sessions.
Port randomization	Enable port randomization. The device performs NAT translation choosing the IP address by round robin, then chooses the port used for that IP address by randomization.
Interface port overloading	Enable this option to set the port range for NAT interface overload mapping. It also allows you to block a specific port from being used in interface overload mapping.
Overloading factor	Enter a value for the port overloading capacity for the source NAT interface. For example, if overloading factor is set to 2, and it is multiplied by a maximum port capacity of 63,486, the port overloading threshold is 126,972. If the configured setting exceeds the maximum port capacity of the interface, an error message is generated during the configuration commit.

RELATED DOCUMENTATION

[About the NAT Pools Page | 493](#)

[Create a Source NAT Pool | 496](#)

[Add a Destination NAT Pool | 501](#)

Create a Source NAT Pool

You are here: **Network** > **NAT** > **Pools**.

To add a source NAT pool:

1. Click **Create** > **Source NAT Pool** on the upper-right corner of the Pools page.
The Create Source NAT Pool page appears.
2. Complete the configuration according to the guidelines provided in [Table 140 on page 496](#).
3. Click **OK** to save the changes. If you want to discard your changes, click **Cancel**.

[Table 140 on page 496](#) describes the fields on the Create Source NAT Pool page.

Table 140: Fields on the Create Source NAT Pool Page

Field	Description
Name	Enter a unique string of alphanumeric characters, hyphens and underscores; maximum length 63-character.
Description	Enter a description for the source NAT pool.
Basic	
Routing instance	Select a routing instance from the list.

Table 140: Fields on the Create Source NAT Pool Page *(Continued)*

Field	Description
Pool addresses	Select the source NAT pool addresses in the Available column and the use the right arrow to move them to the Selected column. To add a new pool address: - Click +. The Add Pool Address page appears. - Enter the following details: Name—Enter a name for the pool address. Description—Enter a description for the pool address. Pool address type—Select either IP address or address range for the pool. IP address—Enter IPv4 or IPv6 address of the host. NOTE: This option is available only when you select IP address as pool address type. Start Address—Enter the starting range of IPv4 or IPv6 address for the source NAT pool. NOTE: This option is available only when you select Address Range as pool address type. End Address—Enter the ending range of IPv4 or IPv6 address for the source NAT pool. NOTE: This option is available only when you select Address Range as pool address type.
Advanced	
Port Translation	

Table 140: Fields on the Create Source NAT Pool Page *(Continued)*

Field	Description
Port translation	Select a port translation option from the list: • No Translation • Translation with port range—Port range from low to high. Range is 1024 through 65535. • Translation with port overloading factor—Port overloading capacity for the source NAT interface.
Shared Address	Enable this option to map many-to-one external IP addresses. This increases NAT resources and improves traffic. NOTE: This option is available only when you select No Translation.
Host address base	Enter IPv4 or IPv6 address used as the host address base. For example, if the host address base is 198.51.100.30 and the NAT pool uses the range 203.0.113.10 to 203.0.113.20, then 198.51.100.30 translates to 203.0.113.10, 198.51.100.31 translates to 203.0.113.11, and so on.
Port range from	Enter the lower limit of the port range. Range: 1024 through 65535. NOTE: This option is available only when you select Translation with port range.
Port range to	Enter the upper limit of the port range. Range: 1024 through 65535. NOTE: This option is available only when you select Translation with port range.
Overloading factor	Enter the port overloading factor value. Range: 2 through 32. NOTE: This option is available only when you select Translation with port overloading factor.

Table 140: Fields on the Create Source NAT Pool Page *(Continued)*

Field	Description
Address pooling	Specifies that multiple internal IP addresses can be mapped to the same external IP address. Use this option only when the source NAT pool is configured with no port translation.
Paired	Select this option to use in source NAT pools with port translation for applications that require all sessions associated with one internal IP address to be translated to the same external IP address for multiple sessions. NOTE: This option is available only when you enable Address Pooling.
Non-paired	Select this option to use in source NAT pools without port translation for assigning IP addresses using a round-robin fashion. NOTE: This option is available only when you enable Address Pooling.
Overflow pool type	Specify a source pool to use when the current address pool is exhausted: • None—No support for overflow. • Interface—Allow the interface to support overflow. • Pool—Name of the source address pool. NOTE: This option is available only when you select No Translation.
Overflow pool	Select a source address pool from the list.
Utilization Alarm	
Upper threshold	Enter an upper threshold percentage for pool address utilization at which an SNMP trap is triggered. Range: 50 through 100.

Table 140: Fields on the Create Source NAT Pool Page *(Continued)*

Field	Description
Lower threshold	Enter a lower threshold percentage for pool address utilization at which an SNMP trap is triggered. Range: 40 through 100. NOTE: This option can be set only if you configure the upper threshold value.

RELATED DOCUMENTATION

[About the NAT Pools Page | 493](#)

[Edit a Source NAT Pool | 500](#)

[Delete a Source NAT Pool | 501](#)

Edit a Source NAT Pool

You are here: **Network > NAT > Pools.**

To edit a source NAT pool:

1. Select an existing source NAT pool that you want to edit on the Pools page.
2. Click the pencil icon available on the upper-right corner of the page.
The Edit Source NAT Pool page appears with editable fields. For more information on the options, see "[Create a Source NAT Pool](#)" on page 496.
3. Click **OK** to save the changes.

RELATED DOCUMENTATION

[Delete a Source NAT Pool | 501](#)

Delete a Source NAT Pool

You are here: **Network** > **NAT** > **Pools**.

To delete source NAT pool(s):

1. Select one or more source NAT pools that you want to delete on the Pools page.
2. Click the delete icon available on the upper-right corner of the page.
A confirmation message window appears.
3. Click **Yes** to delete or click **No** to retain the profile.

RELATED DOCUMENTATION

- [About the NAT Pools Page | 493](#)
- [Create a Source NAT Pool | 496](#)
- [Edit a Source NAT Pool | 500](#)

Add a Destination NAT Pool

You are here: **Network** > **NAT** > **Pools**.

To add a destination NAT pool:

1. Click **Create** > **Destination NAT Pool** on the upper-right corner of the Pools page.
The Create Destination NAT Pool page appears.
2. Complete the configuration according to the guidelines provided in [Table 141 on page 501](#).
3. Click **OK** to save the changes. If you want to discard your changes, click **Cancel**.

[Table 141 on page 501](#) describes the fields on the Create Destination NAT Pool page.

Table 141: Fields on the Create Destination NAT Pool Page

Field	Action
Name	Enter the destination pool name.
Description	Enter a description for the destination pool.

Table 141: Fields on the Create Destination NAT Pool Page (*Continued*)

Field	Action
Routing instance	Select a routing instance from the list.
Pool address type	Select one of the following pool address type: • Address & Port—Translate destination IP address or addresses and port number(s) to a specific IP address and one port number. • Address Range—Translate a range of destination IP addresses to another range of IP addresses. This mapping is one-to-one.
Pool address	Enter IPv4 or IPv6 address for destination pool. NOTE: This option is available only when you select Address & Port as pool address type.
Pool port	Enter a destination port value. Range: 0 through 65535. NOTE: This option is available only when you select Address & Port as pool address type.
Start address	Enter starting address (IPv4 or IPv6) of the destination address range. NOTE: This option is available only when you select Address Range as pool address type.
End address	Enter ending address (IPv4 or IPv6) of the destination address range. NOTE: This option is available only when you select Address Range as pool address type.

RELATED DOCUMENTATION

[Edit a Destination NAT Pool | 503](#)

[Delete a Destination NAT Pool | 503](#)

[About the NAT Pools Page | 493](#)

[Create a Source NAT Pool | 496](#)

Edit a Destination NAT Pool

You are here: **Network** > **NAT** > **Pools**.

To edit a destination NAT pool:

1. Select an existing destination NAT pool that you want to edit on the Pools page.
2. Click the pencil icon available on the upper-right corner of the page.

The Edit Destination NAT Pool page appears with editable fields. For more information on the options, see ["Add a Destination NAT Pool" on page 501](#).

3. Click **OK** to save the changes.

RELATED DOCUMENTATION

[Delete a Destination NAT Pool | 503](#)

[About the NAT Pools Page | 493](#)

Delete a Destination NAT Pool

You are here: **Network** > **NAT** > **Pools**.

To delete destination NAT pool(s):

1. Select one or more destination NAT pools that you want to delete on the Pools page.
2. Click the delete icon available on the upper-right corner of the page.
3. Click **Yes** to delete or click **No** to retain the profile.

RELATED DOCUMENTATION

[Add a Destination NAT Pool | 501](#)

[Edit a Destination NAT Pool | 503](#)

Destination NAT

IN THIS CHAPTER

- [About the Destination Page | 504](#)
- [Add a Destination Rule Set | 506](#)
- [Edit a Destination Rule Set | 509](#)
- [Delete a Destination Rule Set | 509](#)

About the Destination Page

IN THIS SECTION

- [Tasks You Can Perform | 504](#)
- [Field Descriptions | 505](#)

You are here: **Network > NAT > Destination**.

Use this page to add, edit, or delete destination NAT configurations.

Tasks You Can Perform

You can perform the following tasks from this page:

- Add a Destination Rule Set. See ["Add a Destination Rule Set" on page 506](#).
- Edit a Destination Rule Set. See ["Edit a Destination Rule Set" on page 509](#).
- Delete a Destination Rule Set. See ["Delete a Destination Rule Set" on page 509](#).

Field Descriptions

Table 142 on page 505 describes the fields on the Destination Page.

Table 142: Fields on the Destination Page.

Field	Description
Destination NAT Rule Set	
From	Displays the destination NAT sort options from which the packets flow. The options available are: • Routing Instance • Zone • Interface
Filter	Displays the filter option.
Name	Displays the name of the destination NAT rule set.
From	Displays the name of the routing instance/zone/interface from which the packets flow.
Rule	Displays the name of the rule in the selected destination NAT rule set.
Description	Displays a description of the destination NAT rule set.
Rules in Selected Rule-Set	
Rule Name	Displays the name of the rule in the selected destination NAT rule set.
Match Source	Displays the match source address.
Match Destination	Displays the match destination address.
Match IP Protocol	Displays the match IP protocol.

Table 142: Fields on the Destination Page. (Continued)

Field	Description
Match Destination Port	Displays the match destination port.
Action	Displays the action of the rule in the selected rule set.
Upper Threshold	Displays upper threshold at which an SNMP trap is triggered.
Lower Threshold	Displays lower threshold at which an SNMP trap is triggered.
Description	Displays a description of the rule in the selected destination NAT rule set.

RELATED DOCUMENTATION

| [Add a Destination Rule Set](#) | 506

Add a Destination Rule Set

You are here: **Network** > **NAT** > **Destination**.

To add a destination Rule Set:

1. Click **+** on the upper-right corner of the Destination page.
The Add Rule Set page appears.
2. Complete the configuration according to the guidelines provided in [Table 143 on page 506](#).
3. Click **OK** to save the changes. If you want to discard your changes, click **Cancel**.

[Table 143 on page 506](#) describes the fields on the Add Rule Set page.

Table 143: Fields on the Add Rule Set page.

Field	Action
Add Rule Set	

Table 143: Fields on the Add Rule Set page. *(Continued)*

Field	Action
Rule Set Name	Enter the rule set name.
Rule Set Description	Enter a description for the rule set.
From	Specifies the filter options. Select an option: • Routing Instance • Zone • Interface Select the routing instances/zones/interfaces in the Available column and the use the right arrow to move them to the Selected column.
Add Rule	
Rule Name	Enter the rule name.
Rule Description	Enter a description for the rule.
Match	
Source Address	Search and select the source addresses in the Available column and the use the right arrow to move them to the Selected column. You can also enter a source address in the New text box in the Selected column and click Add to add the source address to the lower pane of the Selected column.
Destination Address	Enter the destination IP address.
Port	Enter the destination port number.
IP Protocol	Enter the protocol name in the text box and click + to add the protocol to the IP Protocol column.

Table 143: Fields on the Add Rule Set page. *(Continued)*

Field	Action
Actions	Specifies the actions for the destination NAT pool. Select an option: • No Destination NAT. • Do Destination NAT With Pool.
Do Destination NAT With Pool	
Add New Pool	Select a pool from the list or click +.
Add Destination Pool	
Pool Name	Enter the destination pool name.
Pool Description	Enter a description for the destination pool.
Routing Instance	Specifies the routing instance available. Select an option.
Pool Addresses and Port	
Address/Port	Enter the destination pool address.
Port	Enter the destination pool port number.
Address Range	Enter the destination pool address range.
Upper Threshold	Enter upper threshold at which an SNMP trap is triggered. Session count hit alarm range: 1 through 4294967295
Lower Threshold	Enter lower threshold at which an SNMP trap is triggered. Rule session count alarm range: 1 through 4294967295

RELATED DOCUMENTATION

| [Edit a Destination Rule Set](#) | 509

Edit a Destination Rule Set

You are here: **Network** > **NAT** > **Destination**.

To edit a destination rule set:

1. Select an existing destination rule set that you want to edit on the Destination page.
2. Click the pencil icon available on the upper-right corner of the page.

The Edit Rule Set page appears with editable fields. For more information on the options, see "[Add a Destination Rule Set](#)" on page 506.

3. Click **OK** to save the changes.

RELATED DOCUMENTATION

| [Delete a Destination Rule Set](#) | 509

Delete a Destination Rule Set

You are here: **Network** > **NAT** > **Destination**.

To delete destination rule set(s):

1. Select one or more destination rule sets that you want to delete on Destination page.
2. Click the delete icon available on the upper-right corner of the page.
3. Click **Yes** to delete or click **No** to retain the profile.

RELATED DOCUMENTATION

| [Add a Destination NAT Pool](#) | 501

CHAPTER 40

Static NAT

IN THIS CHAPTER

- [About the Static Page | 510](#)
- [Add a Static Rule Set | 512](#)
- [Edit a Static Rule Set | 516](#)
- [Delete a Static Rule Set | 516](#)

About the Static Page

IN THIS SECTION

- [Tasks You Can Perform | 510](#)
- [Field Descriptions | 511](#)

You are here: **Network** > **NAT** > **Static**.

Use this page to configure static NAT.

Tasks You Can Perform

You can perform the following tasks from this page:

- Add a static rule set and rules to it. See ["Add a Static Rule Set" on page 512](#).
- Edit a static rule set and its rules. See ["Edit a Static Rule Set" on page 516](#).
- Delete a static rule set and its rules. See ["Delete a Static Rule Set" on page 516](#).
- Move the rules in the rules table. To do this, select a rule which you want to move and select the following options according to your choice:

- Move Up—Enables you to move the rule up in the list.
- Move Down—Enables you to move the rule down in the list.
- Move to Top—Enables you to move the rule to top of the list
- Move to Bottom—Enables you to move the rule to the bottom of the list

Field Descriptions

Table 144 on page 511 describes the fields on the Static page.

Table 144: Fields on the Static Page

Field	Description
Static NAT Rule Set	
From	Displays the destination NAT sort options from which the packets flow. The options available are: • Routing Instance • Zone • Interface
Filter	Displays the filter options.
Name	Displays the name of the static NAT rule set.
From	Displays the name of the routing instance, zone, or interface from which the packets flow.
Rule	Displays the name of the rule in the selected static NAT rule set.
Description	Displays a description of the static NAT rule set.
Rules in Selected Rule-Set	

Table 144: Fields on the Static Page (Continued)

Field	Description
Rule Name	Displays the name of the routing instance, zone, or interface to which the packet flows.
Source Addresses	Displays the source address to match the rule.
Source Ports	Displays the source port number.
Destination Addresses	Displays the destination address to match the rule.
Destination Ports	Displays the destination port number.
Prefix	Displays the static IP address prefix.
Mapped Port	Displays the destination port or port range to allow static NAT to map ports.
Upper Threshold	Displays the upper threshold value of the at which an SNMP trap is triggered.
Lower Threshold	Displays the lower threshold value of the at which an SNMP trap is triggered.
Description	Displays the description of the rule in the selected static NAT rule set.

RELATED DOCUMENTATION

[Add a Static Rule Set | 512](#)

[Edit a Static Rule Set | 516](#)

[Delete a Static Rule Set | 516](#)

Add a Static Rule Set

You are here: **Network** > **NAT** > **Static**.

To add a static rule set:

1. Click **+** on the upper-right corner of the Static page.
The Add Rule Set page appears.
2. Complete the configuration according to the guidelines provided in [Table 145 on page 513](#).
3. Click **OK** to save the changes. If you want to discard your changes, click **Cancel**.

Table 145: Fields on the Add Static Rule Set Page

Field	Action
Rule Set Name	Enter a rule set name.
Rule Set Description	Enter a description for the rule set.
From	Select a filter option from the list: • Routing Instance • Zone • Interface Select the routing instances, zones, or interfaces in the Available column and use the right arrow to move them to the Selected column.
Rules	
Rules	Specifies the rules added to the selected static rule set.

Table 145: Fields on the Add Static Rule Set Page (*Continued*)

Field	Action
Add	To add a rule to the selected static rule set: - Click + available at the upper right of the Rules table. The Add Rule page appears. - Enter the following details: - Rule Name—Enter a rule name. - Rule Description—Enter a description for the rule. - Match—Displays the match destination address. - Source Address—Select an IPv4 or IPv6 address from the list or enter the address and click + to add it. Select an existing IPv4 or IPv6 address and click X to delete it. - Source Port—Enter a port number or port range from low to high and click + to add it. Port Range: 0 through 65535. Select an existing port and click X to delete it. - Destination Address—Select IPv4 or IPv6 and then select an address from the list. - Destination Port—Select one of the following options: - Any—Selects available port. - Port—Enter a port number. - Port Range—Enter a port range from low to high. - Then—Enter the following details: - Host Address—Enter the static prefix address. NOTE: You can select Translate to ipv4 address if you have selected IPv6 in the destination address.

Table 145: Fields on the Add Static Rule Set Page *(Continued)*

Field	Action
	• Mapped Port—Select one of the following options: • Any—Selects available port. • Port—Enter a port number. • Port Range—Enter a port range from low to high. • Routing Instance—Select a routing instance from the list. • Upper Threshold—Enter an upper threshold value at which an SNMP trap is triggered. Range: 1 through 4294967295. • Lower Threshold—Enter a lower threshold value at which an SNMP trap is triggered. Range: 1 through 4294967295. NOTE: This option can be set only if you configure the upper threshold value. 3. Click OK to save the changes. If you want to discard your changes, click Cancel.
Edit	Select an existing rule and click the edit icon at the upper-right corner of the Rules table. The Edit Interface page appears with editable fields.
Delete	Select an interface and click the delete icon at the upper-right corner of the Rules table. A confirmation window appears. Click Yes to delete the selected interface or click No to discard.

RELATED DOCUMENTATION

[About the Static Page | 510](#)

[Edit a Static Rule Set | 516](#)

[Delete a Static Rule Set | 516](#)

Edit a Static Rule Set

You are here: **Network** > **NAT** > **Static**.

To edit a static rule set and its rules:

1. Select an existing static rule set that you want to edit on the Static page.
2. Click the pencil icon available on the upper-right corner of the Static page.

The Edit Static Rule Set page appears with editable fields. For more information on the options, see ["Add a Static Rule Set" on page 512](#).

NOTE: Alternatively, you can select the rule directly and click the pencil icon available on the upper-right corner of the Rules table to edit a rule for the selected rule set.

3. Click **OK** to save the changes.

RELATED DOCUMENTATION

[About the Static Page | 510](#)

[Add a Static Rule Set | 512](#)

[Delete a Static Rule Set | 516](#)

Delete a Static Rule Set

You are here: **Network** > **NAT** > **Static**.

To delete a static rule set and its rules:

1. Select one or more static rules sets that you want to delete on the Static page.
2. Click the delete icon available on the upper-right corner of the page.

A confirmation window appears.

NOTE: Alternatively, you can select the rule directly and click the delete (X) icon available on the upper-right corner of the Rules table to delete a rule for the selected rule set.

3. Click **Yes** to delete or click **No** to retain the profile.

RELATED DOCUMENTATION

[About the Static Page | 510](#)

[Add a Static Rule Set | 512](#)

[Edit a Static Rule Set | 516](#)

NAT Proxy ARP/ND

IN THIS CHAPTER

- [About the Proxy ARP/ND Page | 518](#)
- [Add a Proxy ARP | 519](#)
- [Edit a Proxy ARP | 521](#)
- [Delete a Proxy ARP | 521](#)
- [Add a Proxy ND | 522](#)
- [Edit a Proxy ND | 523](#)
- [Delete a Proxy ND | 523](#)

About the Proxy ARP/ND Page

IN THIS SECTION

- [Tasks You Can Perform | 518](#)
- [Field Descriptions | 519](#)

You are here: **Network** > **NAT** > **Proxy ARP/ND**.

You can add, edit, and delete proxy ARP or proxy ND configurations.

Tasks You Can Perform

You can perform the following tasks from this page:

- Add a proxy ARP. See ["Add a Proxy ARP" on page 519](#).
- Edit a proxy ARP. See ["Edit a Proxy ARP" on page 521](#).

- Delete a proxy ARP. See ["Delete a Proxy ARP" on page 521](#).
- Create a proxy ND. See ["Add a Proxy ND" on page 522](#).
- Edit a proxy ND. See ["Edit a Proxy ND" on page 523](#).
- Delete a proxy ND. See ["Delete a Proxy ND" on page 523](#).
- Launch NAT wizard. To do this, click **Launch Wizard** option at the upper-right corner of the page. The NAT wizard leads you through the basic required steps to configure NAT for the SRX Series security device.

Field Descriptions

[Table 146 on page 519](#) describes the fields on the Proxy ARP/ND Configuration page.

Table 146: Fields on the Proxy ARP/ND Configuration Page

Field	Description
Interface	Displays the interface type.
Address	Displays the IPv4 or IPv6 address.

RELATED DOCUMENTATION

Add a Proxy ARP 519
Edit a Proxy ARP 521
Delete a Proxy ARP 521
Add a Proxy ND 522
Edit a Proxy ND 523
Delete a Proxy ND 523

Add a Proxy ARP

You are here: **Network** > **NAT** > **Proxy ARP/ND**.

To add a proxy ARP:

1. Click **+** on the upper-right corner of the proxy ARP/ND page.
Select the Proxy ARP page. The Add Proxy ARP page appears.
2. Complete the configuration according to the guidelines provided in [Table 147 on page 520](#).
3. Click **OK** to save the changes. If you want to discard your changes, click **Cancel**.

Table 147: Fields on the Add Proxy ARP Page

Field	Action
Interface	Enter the interface type. Select an option: • ge-0/0/0.0 • ge-0/0/2.0 • lo0.0 • vlan0.0
Addresses	Displays the proxy ARP IP address. Click Delete to deleted the proxy ARP address.
IPv4 Address/Range	Enter the source IP address range and the end IP address that the device can be assigned to. Click + to add to the addresses.

RELATED DOCUMENTATION

About the Proxy ARP/ND Page 518
Edit a Proxy ARP 521
Delete a Proxy ARP 521
Add a Proxy ND 522
Edit a Proxy ND 523
Delete a Proxy ND 523

Edit a Proxy ARP

You are here: **Network** > **NAT** > **Proxy ARP/ND**.

To edit a proxy ARP:

1. Select an existing proxy ARP that you want to edit on the Proxy ARP/ND page.
2. Click the pencil icon available on the upper-right corner of the page.

The Edit Proxy ARP page appears with editable fields. For more information on the options, see "[Add a Proxy ARP](#)" on page 519.

3. Click **OK** to save the changes or click **Cancel** to discard the changes.

RELATED DOCUMENTATION

[About the Proxy ARP/ND Page](#) | 518

[Add a Proxy ARP](#) | 519

[Delete a Proxy ARP](#) | 521

[Add a Proxy ND](#) | 522

[Edit a Proxy ND](#) | 523

[Delete a Proxy ND](#) | 523

Delete a Proxy ARP

You are here: **Network** > **NAT** > **Proxy ARP/ND**.

To delete proxy ARP(s):

1. Select one or more proxy ARPs that you want to delete on the Proxy ARP page.
2. Click the delete icon available on the upper-right corner of the page.
3. Click **Yes** to delete or click **No** to retain the profile.

RELATED DOCUMENTATION

[About the Proxy ARP/ND Page](#) | 518

[Add a Proxy ARP](#) | 519

[Edit a Proxy ARP](#) | 521

[Add a Proxy ND | 522](#)

[Edit a Proxy ND | 523](#)

[Delete a Proxy ND | 523](#)

Add a Proxy ND

You are here: **Network** > **NAT** > **Proxy ARP/ND**.

To add a proxy ND:

1. Click **+** on the upper-right corner of the proxy ARP/ND page.
The Add Proxy ND page appears.
2. Complete the configuration according to the guidelines provided in [Table 148 on page 522](#).
3. Click **OK** to save the changes. If you want to discard your changes, click **Cancel**.

Table 148: Fields on the Add Proxy ND Page

Field	Action
Interface	Enter the interface type. Select an option: • ge-0/0/0.0 • ge-0/0/1.0 • ge-0/0/3.0 • lo0.0
Addresses	Displays the proxy ND IP address. Click Delete to deleted the proxy ND address.
IPv6 Address/Range	Enter the source IPv6 address range and the end IPv6 address that the device can be assigned to. Click + to add to the addresses.

RELATED DOCUMENTATION

[About the Proxy ARP/ND Page | 518](#)

[Add a Proxy ARP | 519](#)

[Edit a Proxy ARP | 521](#)

[Delete a Proxy ARP | 521](#)

[Edit a Proxy ND | 523](#)

[Delete a Proxy ND | 523](#)

Edit a Proxy ND

You are here: **Network** > **NAT** > **Proxy ARP/ND**.

To edit a proxy ND:

1. Select an existing proxy ND that you want to edit on the Proxy ARP/ND page.
2. Click the pencil icon available on the upper-right corner of the page.

The Edit Proxy ND page appears with editable fields. For more information on the options, see "[Add a Proxy ND](#)" on page 522.

3. Click **OK** to save the changes or click **Cancel** to discard the changes.

RELATED DOCUMENTATION

[About the Proxy ARP/ND Page | 518](#)

[Add a Proxy ARP | 519](#)

[Edit a Proxy ARP | 521](#)

[Delete a Proxy ARP | 521](#)

[Add a Proxy ND | 522](#)

[Delete a Proxy ND | 523](#)

Delete a Proxy ND

You are here: **Network** > **NAT** > **Proxy ARP/ND**.

To delete proxy ND(s):

1. Select one or more proxy NDs that you want to delete on the Proxy ND page.
2. Click the delete icon available on the upper-right corner of the page.
3. Click **Yes** to delete or click **No** to retain the profile.

RELATED DOCUMENTATION

About the Proxy ARP/ND Page 518
Add a Proxy ARP 519
Edit a Proxy ARP 521
Delete a Proxy ARP 521
Add a Proxy ND 522
Edit a Proxy ND 523

CHAPTER 42

Static Routing

IN THIS CHAPTER

- [About the Static Routing Page | 525](#)
- [Add a Static Route | 526](#)
- [Edit a Static Route | 528](#)
- [Delete a Static Route | 528](#)

About the Static Routing Page

IN THIS SECTION

- [Tasks You Can Perform | 525](#)
- [Field Descriptions | 526](#)

You are here: **Network** > **Routing** > **Static Routing**.

Use this page to view, add, and remove link aggregation configuration details.

Tasks You Can Perform

You can perform the following tasks from this page:

- Add a static route. See ["Add a Static Route" on page 526](#).
- Edit a static route. See ["Edit a Static Route" on page 528](#).
- Delete a static route. See ["Delete a Static Route" on page 528](#).

Field Descriptions

Table 149 on page 526 describes the fields on the Static Routing page.

Table 149: Fields on the Static Routing Page

Field	Description
Route	Displays the static route selected.
Next-hop	Displays the selected next-hop address.
Routing Instance	Displays the routing instance selected for this route.

RELATED DOCUMENTATION

| [Add a Static Route](#) | 526

Add a Static Route

You are here: **Network** > **Routing** > **Static Routing**.

To add a static route:

1. Click **+** on the upper-right corner of the Static Routing page.
The Add Static Route page appears.
2. Complete the configuration according to the guidelines provided in [Table 150 on page 527](#).
3. Click **OK** to save the changes. If you want to discard your changes, click **Cancel** instead.
If you click **OK**, a new static route is added with the provided configuration.

Table 150: Fields on the Add Static Route Page

Field	Description
Routing Instance	Select the routing instance from the list. The selected destination routing instance that points to the routing table containing the tunnel destination address. NOTE: If you log in as a tenant user, routing instance is not displayed as tenant context supports only one routing instance.
IPv4	Click the IPv4 button.
IP address	Enter the static route IPv4 address.
Subnet mask	Enter the subnet mask. For example, 24 bits represents the 255.255.255.0 address.
IPv6	Click the IPv6 button.
IPv6 address	Enter the static route IPv6 address.
Prefix	Enter the prefix for IPv6 address.
Next-hop	Displays the next-hop address created. Click any one of the following • +—To add the next-hop, enter the following details and click OK: • IP Address/IPv6 Address—Enter the IPv4 or IPv6 address based on the selected static route address type. • Interface Name—Select an interface from the list. • Delete—Select one or more next-hop addresses and click X. Then, click Yes to delete it.

RELATED DOCUMENTATION
[Edit a Static Route](#) | 528

Edit a Static Route

You are here: **Network** > **Routing** > **Static Routing**.

To edit a static route:

1. Select the existing static route that you want to edit on the Static Routing page.
2. Click the pencil icon available on the upper-right corner of the Static Routing page.

The Edit Static Route page appears with editable fields. For more information on the options, see ["Add a Static Route" on page 526](#).

3. Click **OK** to save the changes.

RELATED DOCUMENTATION

| [Delete a Static Route](#) | 528

Delete a Static Route

You are here: **Network** > **Routing** > **Static Routing**.

To delete a static route:

1. Select the existing static route that you want to delete on the Static Routing page.
2. Click the delete icon available on the upper-right corner of the Static Routing page.

A confirmation window appears.

3. Click **Yes** to delete or click **No**.

RELATED DOCUMENTATION

| [About the Static Routing Page](#) | 525

RIP Routing

IN THIS CHAPTER

- [About the RIP Page | 529](#)
- [Add a RIP Instance | 531](#)
- [Edit a RIP Instance | 533](#)
- [Delete a RIP Instance | 533](#)
- [Edit RIP Global Settings | 533](#)
- [Delete RIP Global Settings | 537](#)

About the RIP Page

IN THIS SECTION

- [Tasks You Can Perform | 529](#)
- [Field Descriptions | 530](#)

You are here: **Network > Routing > RIP.**

Use this page to configure RIP.

Tasks You Can Perform

You can perform the following tasks from this page:

- Add a RIP instance. See ["Add a RIP Instance" on page 531](#).
- Edit a RIP instance. See ["Edit a RIP Instance" on page 533](#).
- Delete a RIP instance. See ["Delete a RIP Instance" on page 533](#).

- Edit RIP global settings. See ["Edit RIP Global Settings" on page 533](#).
- Delete RIP global settings. See ["Delete RIP Global Settings" on page 537](#).

Field Descriptions

[Table 151 on page 530](#) describes the fields on the RIP page.

Table 151: Fields on the RIP Page

Field	Description
Routing Instance	Select a routing instance from the list.
RIP Instances	
RIP Instances	Displays the RIP instance selected.
Neighbors	Displays the neighbors selected.
Routing Instance	Displays the routing instance.
Export Policies	Displays the export policies selected.
Import Policies	Displays the import policies selected.
Preference	Displays the preference selected.
Update Interval	Displays the update interval selected.
Metric-out	Displays the metric-out value selected.
RIP Global Settings	
Name	Displays the name of the RIP.
Value	Displays the values for RIP.

RELATED DOCUMENTATION

| [Add a RIP Instance](#) | 531

Add a RIP Instance

You are here: **Network** > **Routing** > **RIP**.

To add a RIP instance:

- 1. Click **+** on the upper-right corner of the RIP page.
The Add page appears.
- 2. Complete the configuration according to the guidelines provided in [Table 152 on page 531](#).
- 3. Click **OK** to save the changes. If you want to discard your changes, click **Cancel** instead.
If you click **OK**, a new RIP instance is added with the provided configuration.

Table 152: Fields on the Add Page

Field	Action
General	
Routing Instance	Select a routing instance from the list to display only the default routing instance or all routing instances.
RIP Instance Name	Enter the RIP instance name.
Preference	Enter the preference of the external routes learned by RIP as compared to those learned from other routing protocols.
Metric out	Enter the metric value to add to routes transmitted to the neighbor.
Update Interval	Enter the update time interval to periodically send out routes learned by RIP to neighbors.
Route Timeout	Enter the route timeout interval for RIP.
Policy	

Table 152: Fields on the Add Page *(Continued)*

Field	Action
Import Policy	Specifies one or more policies to control which routes learned from an area are used to generate summary link-state advertisements (LSAs) into other areas. Click one of the following options: • +—Adds an import policy. • Move up arrow—Moves the selected policy up the list of policies. • Move down arrow—Moves the selected policy down the list of policies. • X—Removes an import policy.
Export Policy	Specifies one or more policies to control which summary LSAs are flooded into an area. Click one of the following options: • +—Adds an export policy. • Move up arrow—Moves the selected policy up the list of policies. • Move down arrow—Moves the selected policy down the list of policies. • X—Removes an export policy.
Neighbor Displays the RIP-enabled interfaces, its port, metric-in, and update interval.	
Associate	Select interface(s) to associate with the RIP. Select the box next to the interface name to enable RIP on an interface. Click the edit icon to modify one or more selected interfaces settings. NOTE: Only logical interfaces for RIP are displayed.

RELATED DOCUMENTATION

[Edit a RIP Instance](#) | 533

Edit a RIP Instance

You are here: **Network** > **Routing** > **RIP**.

To edit a RIP instance:

1. Select the existing logical system profile that you want to edit on the RIP page.
2. Click the pencil icon available on the upper-right corner of the RIP page.

The Edit page appears with editable fields. For more information on the options, see ["Add a RIP Instance" on page 531](#).

3. Click **OK** to save the changes.

RELATED DOCUMENTATION

[Delete a RIP Instance](#) | 533

Delete a RIP Instance

You are here: **Network** > **Routing** > **RIP**.

To delete a RIP instance:

1. Select the existing logical system profile that you want to delete on the RIP page.
2. Click the delete icon available on the upper-right corner of the RIP page.

A confirmation window appears.

3. Click **Yes** to delete or click **No**.

RELATED DOCUMENTATION

[Edit RIP Global Settings](#) | 533

Edit RIP Global Settings

You are here: **Network** > **Routing** > **RIP**.

To edit RIP global settings:

1. Click the pencil icon on the upper-right corner of the RIP Global Settings table.
The Edit RIP Global Settings page appears.
2. Complete the configuration according to the guidelines provided in [Table 153 on page 534](#).
3. Click **OK** to save the changes. If you want to discard your changes, click **Cancel**.

Table 153: Fields on the Edit RIP Global Settings Page

Field	Action
General	
Send	Select a RIP send options from the list: • Broadcast • Multicast • None • Version-1
Receive	Select a RIP receive options from the list: • Both • None • Version-1 • Version-2
Route timeout (sec)	Enter the route timeout interval value for RIP.
Update interval (sec)	Enter the update time interval value to periodically send out routes learned by RIP to neighbors.
Hold timeout (sec)	Enter the hold timeout interval period for which the expired route is retained in the routing table before being removed.
Metric in	Enter the metric-in value to add to incoming routes when advertising into RIP routes that were learned from other protocols.

Table 153: Fields on the Edit RIP Global Settings Page (*Continued*)

Field	Action
RIB Group	Select a routing table group to install RIP routes into multiple routing tables.
Message size	Enter the number of route entries to be included in every RIP update message.
Check Zero	Specifies whether the reserved fields in a RIP packet are set to zero. Select an option: • True—Discards version 1 packets that have nonzero values in the reserved fields and version 2 packets that have nonzero values in the fields that must be zero. This default behavior implements check-zero the RIP version 1 and version 2 specifications. • False—Receives RIP version 1 packets with nonzero values in the reserved fields or RIP version 2 packets with nonzero values in the fields that must be zero. This behavior violates the specifications in RFC 1058 and RFC 2453.
Graceful switchover	Specifies graceful switch over for RIP. Enter the following: • Disable—Select the check box to disable graceful switchover. • Restart time (sec)—Enter the time in seconds for the restart to complete.
Authentication	Enter the following: • Authentication Type—Select the type of authentication for RIP route queries received on an interface. The options available are: • None • MD5 • Simple • Authentication key—Enter the authentication key for MD5.
Policy	

Table 153: Fields on the Edit RIP Global Settings Page (*Continued*)

Field	Action
Import Policy	Specifies one or more policies to routes being imported into the local routing device from the neighbors. Click one of the following options: • +—Adds an import policy. • Move up arrow—Moves the selected policy up the list of policies. • Move down arrow—Moves the selected policy down the list of policies. • X—Removes an import policy.
Trace Options	
File Name	Enter the filename to receive the output of the trace operation.
Number of Files	Enter the maximum number of trace files.
File Size	Enter the maximum size for each trace file.
World-readable	Specifies whether or not the trace file can be read by any user or not. Select an option: • True—Allows any user to read the file. • False—Restricts all users being able to read the file.
Flags	Select one or more flags from the Available Flags column and move it to the Configured Flags column using the arrow.

RELATED DOCUMENTATION

[Delete RIP Global Settings](#) | 537

Delete RIP Global Settings

You are here: **Network** > **Routing** > **RIP**.

To delete RIP global settings:

1. Select an information that you want to delete on the RIP Global settings table.
2. Click the delete icon available on the upper-right corner of the RIP Global settings table.
A confirmation window appears.
3. Click **Yes** to delete or click **No**.

RELATED DOCUMENTATION

[About the RIP Page](#) | 529

OSPF Routing

IN THIS CHAPTER

- [About the OSPF Page | 538](#)
- [Add an OSPF | 540](#)
- [Edit an OSPF | 549](#)
- [Delete an OSPF | 549](#)

About the OSPF Page

IN THIS SECTION

- [Tasks You Can Perform | 538](#)
- [Field Descriptions | 539](#)

You are here: **Network > Routing > OSPF**.

Use this page to configure OSPF routing.

Tasks You Can Perform

You can perform the following tasks from this page:

- Add an OSPF. See ["Add an OSPF" on page 540](#).
- Edit an OSPF. See ["Edit an OSPF" on page 549](#).
- Delete OSPF. See ["Delete an OSPF" on page 549](#).
- Advanced search for an OSPF. To do this, use the search text box present above the table grid. The search includes the logical operators as part of the filter string. In the search text box, when you

hover over the icon, it displays an example filter condition. When you start entering the search string, the icon indicates whether the filter string is valid or not.

For an advanced search:

1. Enter the search string in the text box.

Based on your input, a list of items from the filter context menu appears.

2. Select a value from the list and then select a valid operator based on which you want to perform the advanced search operation.

NOTE: Press Spacebar to add an AND operator or OR operator to the search string. Press backspace at any point of time while entering a search criteria, only one character is deleted.

3. Press Enter to display the search results in the grid.
- Show or hide columns in the OSPF table. To do this, click the Show Hide Columns icon in the upper-right corner of the OSPF table and select the options you want to view or deselect the options you want to hide on the page.

Field Descriptions

Table 154 on page 539 describes the fields on the OSPF page.

Table 154: Fields on the OSPF Page

Field	Description
Filter	Select an instance for OSPF from the list.
Area ID	Displays the area ID selected.
Area Type	Displays the area type selected.
Member Interfaces	Displays the member interface selected.
Version	Displays the version of the interface selected (OSPF for IPv4 and OSPFv3 for IPv6).

Table 154: Fields on the OSPF Page *(Continued)*

Field	Description
Routing Instance	Displays the routing instance of the interface selected. NOTE: This option is not available for tenant users.
Import Policy	Displays the import policy selected. NOTE: This option is not available for tenant users.
Export Policy	Displays the export policy selected. NOTE: This option is not available for tenant users.

RELATED DOCUMENTATION

| [Add an OSPF](#) | 540

Add an OSPF

You are here: **Network** > **Routing** > **OSPF**.

To add an OSPF routing:

1. Click **+** on the upper-right corner of the OSPF page.
The Create OSPF page appears.
2. Complete the configuration according to the guidelines provided in [Table 155 on page 540](#).
3. Click **OK** to save the changes. If you want to discard your changes, click **Cancel** instead.
If you click **OK**, a new OSPF routing is added with the provided configuration.

Table 155: Fields on the Add an OSPF Page

Field	Action
Basic Settings	

Table 155: Fields on the Add an OSPF Page *(Continued)*

Field	Action
Routing Instance	Select the routing instance from the list or create a new routing instance inline. NOTE: This option is not available for tenant users. To add a new routing instance inline: - Click Add. The Create Routing Instance page appears. - Enter the following details: General Settings Name—Enter a unique name for the routing instance that contains a corresponding IP unicast table; no special characters are allowed and the keyword default cannot be used. Description—Enter a description for the routing instance. We recommend that you enter a maximum of 255 characters. Instance Type—Select a type of routing instance from the list: Virtual Router—Used for non-VPN related applications. VPLS—This instance is applicable only for root or super admin. This option will not be applicable for LSYS admin. Interfaces with Encapsulation Ethernet-VPLS will be listed when VPLS instance type is selected. Interfaces—Select one or more interfaces to associate with the routing instance from the Available column and move it to the Selected column using arrow. To search for specific interface, click the search icon and enter partial text or full text of the keyword in the search bar. - Click OK to save changes.
Routing Options	
Router ID	Enter the ID of the routing device.

Table 155: Fields on the Add an OSPF Page *(Continued)*

Field	Action
Traffic Engineering	Enable this option if you want the traffic to be managed or engineered.
NOTE: This option is not available for OSPFv3.	
Area Details	
Area Id	Specifies the uniquely identified area within its AS. Type a 32-bit numeric identifier for the area. Type an integer or select and edit the value. If you enter an integer, the value is converted to a 32-bit equivalent. For example, if you enter 3, the value assigned to the area is 0.0.0.3.

Table 155: Fields on the Add an OSPF Page *(Continued)*

Field	Action
Area Range	Displays a range of IP addresses for the summary link state advertisements (LSAs) to be sent within an area. Select an option: - To add an area range form: - Click +. The Create Area Range Form page appears. - Enter the following details: - Area Range—Enter the area range address. NOTE: For OSPF, enter an IPv4 address and for OSPFv3 enter an IPv6 address. - Subnet mask—Enter the subnet mask area address. NOTE: This option is available only for IPv4 address. - Override metric—Select a value to override the metric for the IP address range. Range: 1025 through 65534. - Select Restrict Advertisements of this area range to specify that the routes contained within a summary must not be displayed. - Select Enforce exact match for advertisements of this area range to specify that the summary of a route must be advertised only when an exact match is made within the configured summary range. - Click OK. - To edit the selected are range: - Select the existing area range. - Click the pencil icon to edit the selected area range. The Edit Area Range Form page appears with editable fields.

Table 155: Fields on the Add an OSPF Page *(Continued)*

Field	Action
	c. Click OK to save the changes. 3. To delete an area range: a. Select the area range that you want to delete. b. Click the delete icon. A confirmation message appears. c. Click Yes to delete the selected area range.
Version	Select the version of the OSPF: - ospf—Enables OSPF routing on the routing device. - ospf3—Enables OSPFv3 routing on the routing device.
Area Type NOTE: This option is not applicable for area zero.	Specifies the type of OSPF area. Select an option from the list: None—A regular OSPF area, including the backbone area. stub—A stub area. nssa—A not-so-stubby area (NSSA).
No Summaries (Totally Stubby area) NOTE: This option is applicable for non-zero area and it is not applicable for area zero.	Enable or disable the summaries. NOTE: This option can be configured when area-type is nssa or stub.
Virtual Link NOTE: This option is applicable for area zero and it is not applicable for non-zero area.	Select whether you want the virtual link to be established. If you select virtual link to be created, then enter the Neighbor ID and Transit area. Transit area is the area that has virtual link connecting two or more ABRs attached to this area.

Table 155: Fields on the Add an OSPF Page *(Continued)*

Field	Action
Interface Details	
Select Interface	Select one or more interfaces to associate with the routing instance from the Available column and move it to the Selected column using arrow.
Interface type	Specifies the interfaces to be associated with the OSPF configuration. Select an option from the list: • None—No interface. • nbma—Non broadcast multiaccess (NBMA) interface. NOTE: This option is not available for OSPFv3. • p2mp—Point-to-multipoint interface. • p2p—Point-to-point interface. • p2mp-over-lan—Point-to-multipoint over LAN mode. NOTE: This option is not available for OSPF.
Interface Metric	Type the metric that you want for measuring the interface.
Passive mode	Enable this option for the passive mode. NOTE: You can enable this option only if Secondary option is disabled and vice-versa.
Advanced	

Table 155: Fields on the Add an OSPF Page *(Continued)*

Field	Action
Bidirectional Forward Detection	Enable this option for the bidirectional forward detection (BFD) protocol version that you want to detect. If you enable, enter the following details: • BFD Version—Select the bidirectional forward detection version from the list: • None—No BFD version is used. • automatic—Autodetects the BFD protocol version. • BFD Version 0—Uses BFD protocol version 0. • BFD Version 1—Uses BFD protocol version 1. • Minimum Interval—Enter the minimum interval value for BFD in milliseconds. Range: 1 through 255,000. • Minimum Receive Interval—Enter the minimum receive interval value. Range: 1 through 255,000.
IPsec security association	Select a number of one of the security associations from the list. By default, no security keys are configured. NOTE: You can configure this option only if Secondary option is disabled and vice-versa.
Link protection	Enable this option. Creates a backup loop-free alternate path to the primary next hop for all destination routes that traverse the protected interface. NOTE: You can either enable Link protection or Node Link protection at a time. For example, if you enable Link protection, then Node Link protection is automatically disabled.
Node Link protection	Enable this option. Creates an alternate loop-free path to the primary next hop for all destination routes that traverse a protected interface. NOTE: You can either enable Link protection or Node Link protection at a time. For example, if you enable Link protection, then Node Link protection is automatically disabled.

Table 155: Fields on the Add an OSPF Page *(Continued)*

Field	Action
Secondary NOTE: This option is not available for OSPFv3.	Enable this option. Specifies an interface to belong to another OSPF area. NOTE: You can enable this option only if Passive Mode is disabled and IPsec security association is not configured and vice-versa.
Authentication NOTE: This option is not available for OSPFv3.	Select an authentication key (password) from the list: • None • md5 • simplepassword
MD5 Authentication Key NOTE: This option is not available for OSPFv3.	Specifies an MD5 authentication key (password). Click + and enter the following details: • MD5 ID—MD5 key identifier. Range: 0 through 255. • Key—One or more MD5 key strings. The MD5 key values can be from 1 through 16 characters long. Characters can include ASCII strings. If you include spaces, enclose all characters in quotation marks (" "). • Start Time—MD5 start time. Then, click tick mark to save the changes.
Simple Password NOTE: This option is not available for OSPFv3.	Enter a simple authentication key (password).
Advanced Settings	
Policy	
NOTE: This option is not available for tenant users.	

Table 155: Fields on the Add an OSPF Page *(Continued)*

Field	Action
Import Policy	Specifies one or more policies to control which routes learned from an area are used to generate summary link-state advertisements (LSAs) into other areas. Click one of the following options: • +—Adds an import policy. • Move up—Moves the selected policy up the list of policies. • Move down—Moves the selected policy up the list of policies down. • X—Removes the import policy.
Export Policy	Specifies one or more policies to control which summary LSAs are flooded into an area. Click one of the following options: • +—Adds an import policy. • Move up—Moves the selected policy up the list of policies. • Move down—Moves the selected policy up the list of policies down. • X—Removes the import policy.
Trace Options	
File Name	Enter the name of the file to receive the output of the trace operation.
Number of files	Enter the maximum number of trace files.
File Size	Enter the maximum size for each trace file.
World Readable	Enable this option to allow any user to read the file. Disable this option to prevent all users from reading the file.

Table 155: Fields on the Add an OSPF Page *(Continued)*

Field	Action
Flags	Specifies the trace operation to be performed. Select one or more flags in the Available column and move them to the Selected column using the right arrow.

RELATED DOCUMENTATION

| [Edit an OSPF](#) | 549

Edit an OSPF

You are here: **Network** > **Routing** > **OSPF**.

To edit an OSPF routing:

1. Select an existing OSPF routing that you want to edit on the OSPF page.
2. Click the pencil icon available on the upper-right corner of the OSPF page.

The Create OSPF page appears with editable fields. For more information on the options, see ["Add an OSPF" on page 540](#).

3. Click **OK** to save the changes.

RELATED DOCUMENTATION

| [Delete an OSPF](#) | 549

Delete an OSPF

You are here: **Network** > **Routing** > **OSPF**.

To delete an OSPF routing:

1. Select an existing OSPF routing that you want to delete on the OSPF page.

2. Click the delete icon available on the upper-right corner of the OSPF page.
A confirmation window appears.
3. Click **Yes** to delete or click **No**.

RELATED DOCUMENTATION

| [About the OSPF Page](#) | 538

BGP Routing

IN THIS CHAPTER

- [About the BGP Page | 551](#)
- [Add a BGP Group | 555](#)
- [Edit a BGP Group | 560](#)
- [Delete a BGP Group | 561](#)
- [Edit Global Information | 561](#)

About the BGP Page

IN THIS SECTION

- [Tasks You Can Perform | 551](#)
- [Field Descriptions | 552](#)

You are here: **Network** > **Routing** > **BGP**.

Use this page to configure BGP routing.

Tasks You Can Perform

You can perform the following tasks from this page:

- Create a routing instance. See ["Add a BGP Group" on page 555](#).
- Edit a routing instance. See ["Edit a BGP Group" on page 560](#).
- Delete a routing instance. See ["Delete a BGP Group" on page 561](#).

- Disable group information. To do this, select an existing group information and click **Disable**.
- Edit global information. See ["Edit Global Information" on page 561](#).
- Disable global information. To do this, select an existing global information and click **Disable**.

Field Descriptions

[Table 156 on page 552](#) describes the fields on the BGP page.

Table 156: Fields on the BGP Page

Field	Description
Routing Instance NOTE: If you log in as a tenant user, the Routing Instance is not displayed as tenant context supports only one routing instance.	Select routing instances from the list. Example: default or all routing instances.
Group Name	Displays the name of the group.
Status	Displays the status of the group.
Peer ASN	Displays the peer ASN.
Type	Displays the group type.
Dynamic Peers	Displays the dynamic peers selected.
Static Peers	Displays the static peers selected.
Routing Instance	Displays the routing instance selected.
Import Policy	Displays the import policy selected. NOTE: If you log in as a tenant user, Routing Instance, Import Policy, and Export Policy are not displayed.

Table 156: Fields on the BGP Page *(Continued)*

Field	Description
Export Policy	Displays the export policy selected. NOTE: If you log in as a tenant user, Routing Instance, Import Policy, and Export Policy are not displayed.

Global Information

The global information values corresponding to the routing instance that you selected will be displayed in the Global Information section. Based on the routing instance that you select, the values in the Global information.

Edit	Edits the Global settings which lists the following fields. See "Edit Global Information" on page 561 .

Table 156: Fields on the BGP Page *(Continued)*

Field	Description
Name	Displays the following names: • Router Identifier—Specifies the routing device's IP address. • BGP Status—Enables or disables BGP. • Router ASN—Specifies the routing device's AS number. • Preference—Specifies the route preference. • Confederation—Specifies the routing device's confederation AS number. NOTE: If you log in as a tenant user, Confederation is not displayed. • Confederation Members—Specifies the AS numbers for the confederation members. NOTE: If you log in as a tenant user, Confederation Members is not displayed. • Description—Specifies the text description of the global, group, or neighbor configuration. • Import Policy—Specifies one or more routing policies for routes being imported into the routing table from BGP. NOTE: If you log in as a tenant user, Import Policy is not displayed. • Export Policy—Specifies one or more policies to routes being exported from the routing table into BGP. NOTE: If you log in as a tenant user, Export Policy is not displayed.

RELATED DOCUMENTATION

| [Add a BGP Group](#) | 555

Add a BGP Group

You are here: **Network** > **Routing** > **BGP**.

To add a BGP Group:

1. Click **+** on the upper-right corner of the BGP Group page.
The Add a Group page appears.
2. Complete the configuration according to the guidelines provided in [Table 157 on page 555](#).
3. Click **OK** to save the changes. If you want to discard your changes, click **Cancel**.

Table 157: Fields on the Add a Group Page

Field	Action
General	
Routing Instance NOTE: If you log in as a tenant user, the Routing Instance is not displayed as tenant context supports only one routing instance.	Select a routing instance from the list.
Group Name	Enter a new group name.
ASN	Specifies the unique numeric identifier of the AS in which the routing device is configured. Enter the routing device's 32-bit AS number, in dotted decimal notation. If you enter an integer, the value is converted to a 32-bit equivalent. For example, if you enter 3 , the value assigned to the AS is 0.0.0.3 .
Preference	Enter the degree of preference value for an external route. The route with the highest local preference value is preferred.

Table 157: Fields on the Add a Group Page *(Continued)*

Field	Action
Cluster Id	Enter the IPv6 or IPv4 address to be used as the cluster identifier. The cluster identifier is used by the route reflector cluster in an internal BGP group.
Description	Enter the text description for the global, group, or neighbor configuration.
Damping	Select the check box to enable route flap damping.
Advertise Inactive Routes	Select the check box to enable advertising of inactive routes.
Advertise Peer AS Routes	Select the check box to advertising of peer AS routes.
Neighbors	

Table 157: Fields on the Add a Group Page *(Continued)*

Field	Action
Dynamic Neighbors	Configures a dynamic neighbor (peer). Select one of the following options: - To add a dynamic neighbor: - Click +. The Add Dynamic Neighbor window appears. - Select one of the following options in the Addresses field: - All - IPv4 - IPv6 - Enter the following details if you select IPv4 in the Addresses field: - IP Address—Enter the IPv4 address for dynamic neighbor. - Subnet Mask—Enter the subnet mask for the IPv4 address. - Enter the following details if you select IPv6 in the Addresses field: - IPv6 Address—Enter the IPv6 address for dynamic neighbor. - Prefix—Enter the prefix length using up and down arrows for the IPv6 address. - Click OK to save changes. - To edit a dynamic neighbor: - Select the existing dynamic neighbor address. - Click the pencil icon to edit the selected dynamic neighbor address. The Edit Dynamic Neighbor window appears with editable fields. - Click OK to save changes. - To delete a dynamic neighbor: - Select the existing dynamic neighbor address. - Click the delete icon (X) to delete the selected dynamic neighbor address.

Table 157: Fields on the Add a Group Page *(Continued)*

Field	Action
Static Neighbors	Configures a static neighbor (peer). Select one of the following options: - To add a static neighbor: - Click +. The Add Static Neighbor window appears. - Enter the following details: - Addresses—Select IPv4 or IPv6. - IP Address—Enter the IPv4 address for static neighbor. - Local Address—Enter the IP address for static neighbor. - Preference—Enter the preference value for an external route. The route with the highest local preference value is preferred. - Description—Enter a description. - Hold Time—Enter the hold timeout interval period. - Out Delay—Enter the output delay time. Range: 0 through 65,535 seconds. - Passive—Select the check box to enable the device to be passive. The routing device will wait for the peer to issue an open request before a message is sent. - As Override—Select the check box to replace all occurrences of the peer AS number in the AS path with its own AS number before advertising the route to the peer. - Import Policy—Select one of the following options: +—Adds an import policy.

Table 157: Fields on the Add a Group Page *(Continued)*

Field	Action
	• Move up—Moves the selected policy up the list of policies. • Move down—Moves the selected policy down. • X—Removes an import policy. • Export Policy—Select one of the following options: • +—Adds an import policy. • Move up—Moves the selected policy up the list of policies. • Move down—Moves the selected policy down. • X—Removes an import policy. c. Click OK to save changes. 2. To edit a static neighbor: a. Select the existing static neighbor address. b. Click the pencil icon to edit the selected static neighbor address. The Edit Static Neighbor window appears with editable fields. c. Click OK to save changes. 3. To delete a static neighbor: a. Select the existing static neighbor address. b. Click the delete icon (X) to delete the selected static neighbor address.
Policies Tab	

Table 157: Fields on the Add a Group Page *(Continued)*

Field	Action
Import Policy	Specifies one or more routing policies for routes being imported into the routing table from BGP. Select one of the following options: • +—Adds an import policy. • Move up—Moves the selected policy up the list of policies. • Move down—Moves the selected policy down. • X—Removes an import policy.
Export Policy	Specifies one or more policies to routes being exported from the routing table into BGP. Select one of the following options: • +—Adds an import policy. • Move up—Moves the selected policy up the list of policies. • Move down—Moves the selected policy down. • X—Removes an import policy.

RELATED DOCUMENTATION

[Edit a BGP Group](#) | 560

Edit a BGP Group

You are here: **Network** > **Routing** > **BGP**.

To edit a BGP group :

1. Select an existing BGP group that you want to edit on the BGP page.
2. Click the pencil icon available on the upper-right corner of the BGP page.

The Edit a Group page appears with editable fields. For more information on the fields, see ["Add a BGP Group" on page 555](#).

3. Click **OK** to save the changes.

RELATED DOCUMENTATION

| [Delete a BGP Group](#) | 561

Delete a BGP Group

You are here: **Network** > **Routing** > **BGP**.

To delete a BGP group:

1. Select an existing BGP group that you want to delete on the BGP page.
2. Click the delete icon available on the upper-right corner of the BGP page.
A confirmation window appears.
3. Click **Yes** to delete or click **No**.

RELATED DOCUMENTATION

| [Edit Global Information](#) | 561

Edit Global Information

You are here: **Network** > **Routing** > **BGP**.

To edit BGP global information:

1. Select an existing global information that you want to edit on the BGP page.
2. Click the pencil icon available on the upper-right corner of the Global Information table.
The Edit Global Settings page appears.
3. Complete the configuration according to the guidelines provided in [Table 158 on page 562](#).
4. Click **OK** to save the changes.

Table 158: Fields on the Edit Global Settings Page

Field	Action
General	
Router ASN	Enter the router ASN value.
Router Identifier	Enter the router identification IP address.
BGP Status	Select an option from the list: Enable or Disable.
Preference	Enter the degree of preference value for an external route. The route with the highest local preference value is preferred.
Description	Enter the description.
Confederation Number	Enter the router confederation ASN value.

Table 158: Fields on the Edit Global Settings Page (*Continued*)

Field	Action
Confederation Members	Specifies the AS numbers for the confederation members. Select one of the following options: - To add a member ASN: - Click +. The Confederation Members window appears. - Enter member ASN value in the Member ASN field. - Click OK to save changes. - To edit a member ASN: - Select an existing member ASN value and click the pencil icon. The Confederation Members window appears. - Edit member ASN value in the Member ASN field. - Click OK to save changes. - To delete a member ASN: - Select an existing member ASN value. The Confederation Members window appears. - Click the delete icon to delete the member ASN value.
Advance Options	
Keep Route	Specifies whether routes learned from a BGP peer must be retained in the routing table even if they contain an AS number that was exported from the local AS. Select All or None to configure keep routes.
TCP MSS	Enter the maximum segment size (MSS) for the TCP connection. Range: 1 through 4096.
MTU Discovery	Select the check box to enable MTU discovery.

Table 158: Fields on the Edit Global Settings Page (*Continued*)

Field	Action
Remove Private ASN	Select the check box to enable removal of private ASNs.
Graceful Restart	Enter the following details: - Restart Time—Enter the period of time after which a restart is expected to be complete. - Stale Routes Time—Enter the maximum time that stale routes are kept during restart.
Multihop	Specifies the maximum time-to-live (TTL) value for the TTL in the IP header of BGP packets. Enter the following details: - NextHop Change—Select the check box to allow unconnected third-party next hops. - TTL—Enter a TTL value.
Authentication	Enter the following details: - Authentication Algorithm—Select an option from the list: None, MD5, or SHA1. - Authentication Key—Enter an MD5 authentication key (password). This option is available if you select MD5 as authentication algorithm.

Policies Tab

NOTE: If you log in as a tenant user, Policy tab is not displayed.

Table 158: Fields on the Edit Global Settings Page (*Continued*)

Field	Action
Import Policy	Applies one or more policies to routes being imported into the local routing device from the neighbors. Select one of the following options: • +—Adds an import policy. • Move up—Moves the selected policy up the list of policies. • Move down—Moves the selected policy down. • X—Removes an import policy.
Export Policy	Specifies one or more policies to control which summary LSAs are flooded into an area. Select one of the following options: • +—Adds an import policy. • Move up—Moves the selected policy up the list of policies. • Move down—Moves the selected policy down. • X—Removes an import policy.
Trace Options Tab	
File Name	Enter the name of the file to receive the output of the trace operation.
Number of Files	Enter the maximum number of trace files.
File Size	Enter the maximum size for each trace file.

Table 158: Fields on the Edit Global Settings Page *(Continued)*

Field	Action
World Readable	Specifies whether the trace file can be read by any user. Select an option: • True—Allows any user to read the file. • False—Prevents all users from reading.
Flags	Select one or more flags from the Available Flags column and move it to the Configured Flags column using the arrow.

RELATED DOCUMENTATION

| [About the BGP Page](#) | 551

CHAPTER 46

Routing Instances

IN THIS CHAPTER

- [About the Routing Instances Page | 567](#)
- [Add a Routing Instance | 569](#)
- [Edit a Routing Instance | 570](#)
- [Delete a Routing Instance | 571](#)

About the Routing Instances Page

IN THIS SECTION

- [Tasks You Can Perform | 567](#)
- [Field Descriptions | 568](#)

You are here: **Network** > **Routing** > **Routing Instances**.

Use this page to configure routing instances.

Tasks You Can Perform

You can perform the following tasks from this page:

- Create a routing instance. See ["Add a Routing Instance" on page 569](#).
- Edit a routing instance. See ["Edit a Routing Instance" on page 570](#).
- Delete a routing instance. See ["Delete a Routing Instance" on page 571](#).

- Show or hide columns in the Routing Instance table. To do this, use the Show Hide Columns icon in the upper-right corner of the page and select the options you want to show or deselect to hide options on the page.
- Advance search for a routing instance. To do this, use the search text box present above the table grid. The search includes the logical operators as part of the filter string. In the search text box, when you hover over the icon, it displays an example filter condition. When you start entering the search string, the icon indicates whether the filter string is valid or not.

For an advanced search:

1. Enter the search string in the text box.

Based on your input, a list of items from the filter context menu appears.

2. Select a value from the list and then select a valid operator based on which you want to perform the advanced search operation.

NOTE: Press Spacebar to add an AND operator or OR operator to the search string. Press backspace at any point of time while entering a search criteria, only one character is deleted.

3. Press Enter to display the search results in the grid.

Field Descriptions

Table 159 on page 568 describes the fields on the Routing Instances page.

Table 159: Fields on the Routing Instances Page

Field	Description
Name	Name of the routing instance.
Type	Identifies the routing instance type.
Assigned Interfaces	Displays the selected interfaces assigned to the routing instance.
Description	Displays the description of the routing instances.

RELATED DOCUMENTATION

| [Add a Routing Instance](#) | 569

Add a Routing Instance

You are here: **Network** > **Routing** > **Routing Instances**.

To add a routing interface:

1. Click **+** available on the upper-right corner of the Routing Instances page.
The Create Routing Instance page appears.
2. Complete the configuration according to the guidelines provided in [Table 160 on page 569](#).
3. Click **OK** to save the changes. If you want to discard your changes, click **Cancel** instead.
If you click **OK**, a new routing instance is added with the provided configuration.

Table 160: Fields on the Add Routing Instance

Field	Description
General Settings	
Name	Enter a unique name for the routing instance that contains a corresponding IP unicast table; no special characters are allowed and the keyword default cannot be used.
Description	Enter a description for the routing instance. We recommend that you enter a maximum of 255 characters.
Instance Type	Select the type of routing instance from the list: • Virtual Router—Used for non-VPN related applications. • VPLS—This instance is applicable only for root or super admin. This option will not be applicable for LSYS admin. Interfaces with Encapsulation Ethernet-VPLS will be listed when VPLS instance type is selected.

Table 160: Fields on the Add Routing Instance *(Continued)*

Field	Description
Interfaces	Select interfaces from the Available column and move it to the Selected column using the arrow. • Name—Displays the interface name. • Zone—Displays the zone name corresponding to the interface name. This is used to validate that all the interfaces of the selected zone(s) must belong to the same routing instance.

RELATED DOCUMENTATION

[About the Routing Instances Page | 567](#)

[Edit a Routing Instance | 570](#)

Edit a Routing Instance

You are here: **Network** > **Routing** > **Routing Instances**.

To edit a routing instance:

1. Select a routing instance that you want to edit on the Routing Instances page.
2. Click the pencil icon available on the upper-right corner of the page.

The Edit Routing Instance page appears with editable fields. For more information on the fields, see ["Add a Routing Instance" on page 569](#).

NOTE: As the Instance Type field is not editable, you can delete the existing routing instance and create a new one with the required routing instance type.

3. Click **OK** to save the changes or click **Cancel** to discard the changes.

RELATED DOCUMENTATION

[About the Routing Instances Page | 567](#)

Delete a Routing Instance

You are here: **Network** > **Routing** > **Routing Instances**.

To delete a routing instance:

1. Select one or more routing instance that you want to delete on the Routing Instances page.
2. Click the delete icon available on the upper-right corner of the page.
A confirmation window appears.
3. Click **Yes** to delete or click **No**.

RELATED DOCUMENTATION

[About the Routing Instances Page | 567](#)

[Add a Routing Instance | 569](#)

[Edit a Routing Instance | 570](#)

Routing—Policies

IN THIS CHAPTER

- [About the Policies Page | 572](#)
- [Global Options | 574](#)
- [Add a Policy | 575](#)
- [Clone a Policy | 587](#)
- [Edit a Policy | 587](#)
- [Delete a Policy | 587](#)
- [Test a Policy | 588](#)

About the Policies Page

IN THIS SECTION

- [Tasks You Can Perform | 572](#)
- [Field Descriptions | 573](#)

You are here: **Network** > **Routing** > **Policies**.

Use this page to configure policies.

Tasks You Can Perform

You can perform the following tasks from this page:

- Create global options. See ["Global Options" on page 574](#).
- Create a policy. See ["Add a Policy" on page 575](#).

- Clone a policy. See ["Clone a Policy" on page 587](#).
- Edit a policy. See ["Edit a Policy" on page 587](#).
- Delete a policy. See ["Delete a Policy" on page 587](#).
- Term Up—Moves a term up in a selected list policies configuration.
- Term Down—Moves a term down in a selected list policies configuration.
- Test a policy. See ["Test a Policy" on page 588](#).

Field Descriptions

[Table 161 on page 573](#) describes the fields on the Policies page.

Table 161: Fields on the Policies Page

Field	Description
Name	Displays the name of the policy.
From: Prefix	Displays the policy prefix.
From: Protocol	Displays the selected source protocol.
From: Interface or Address	Displays the selected source interface or IP address.
To: Protocol	Displays the source destination protocol.
To: Interface or Address	Displays the selected interface or address.
Action	Displays the selected action.
Move To	Displays if the action is to move to next policy or term.

RELATED DOCUMENTATION

| [Global Options](#) | [574](#)

Global Options

You are here: **Network** > **Routing** > **Policies**.

To edit global options:

1. Select an existing configuration that you want to edit on the Global Options page.
2. Click the pencil icon available on the upper-right corner of the page.
The Edit Global Options page appears. You can modify any previous changes done. For more information on the options, see [Table 162 on page 574](#).
3. Click **OK** to save the changes.

Table 162: Fields on the Global Options Page

Field	Action
Add Prefix List	
Name	Enter the name of the prefix list. Select an option from the list: • Add—Adds the prefix list. • Edit—Edits the prefix list. • X—Removes the prefix list.
Members	
IP Address	To add prefix list members: 1. Click +. The Add Prefix List Members page appears. 2. Enter the following details: • IP Address—Enter the prefix list IP address. • Subnet Mask—Enter the subnet mask IP address 3. Click OK to save changes. Click the pencil icon to edit the IP address. You can click X to delete the IP address.

Table 162: Fields on the Global Options Page *(Continued)*

Field	Action
As Path	
As Path	Click + to add As path. As Path Name—Enter the name of the As path. Regular Expression—Enter the regular expression of the As path. Click the pencil icon to edit the As path. You can click X to delete the As path.
BGP Community	
BGP Community	Click + to add a BGP community. Name—Enter the BGP community name. Click the pencil icon to edit the As path. You can click X to delete the As path.
Members	Click + to add a BGP community member. Community ID—Enter the BGP community ID.

RELATED DOCUMENTATION

[Add a Policy](#) | 575

Add a Policy

You are here: **Network** > **Routing** > **Policies**.

To add a policy:

1. Click + > **New** on the upper-right corner of the Policies page.
The Add Policy page appears.
2. Complete the configuration according to the guidelines provided in [Table 163 on page 576](#).
3. Click **OK** to save the changes. If you want to discard your changes, click **Cancel** instead.

If you click **OK**, a new policy is added with the provided configuration.

Table 163: Fields on the Policy Page

Field	Description
Policy Name	Enter the policy name.
Terms	Click one of the following: • +—Adds the term. • Edit—Edits the term. • X—Deletes the term,
Add Term	
Term Name	Enter the term name.
Source	
Family	Select a family protocol address from the list.
Routing Instance	Select a routing instance from the list.
RIB	Select a routing table from the list.
Preference	Enter a preference value for the route.
Metric	Enter the metric value. You can specify up to four metric values.

Table 163: Fields on the Policy Page *(Continued)*

Field	Description
Interface	Specifies the name or IP address of one or more routing device interfaces. Do not use this qualifier with protocols that are not interface-specific, such as internal BGP (IBGP). Choose one of the following options: - To add an interface - Click + and select Interface. The Available Interfaces page appears. - Select an interface from the list and click OK. The selected interface is added. - To add an IP address - Click + and select Address. The Add IP Address page appears. - Enter IP address from the list and click OK. The selected IP address is added. - To delete an interface or an IP address: - Select an existing interface or address from Interfaces. - Click X. The selected interface or IP address is deleted.

Table 163: Fields on the Policy Page *(Continued)*

Field	Description
Prefix List	Specifies a named list of IP addresses. You can specify an exact match with incoming routes. Choose one of the following options: - To add a prefix list: - Click +. - The Available Prefix List page appears. - Select a prefix list from the list and click OK. - The selected prefix list is added. - To delete a prefix list: - Select an existing prefix list. - Click X. - The selected prefix list is deleted.
Protocol	Specifies the name of the protocol from which the route was learned or to which the route is being advertised. Choose one of the following options: - To add a protocol: - Click +. - The Available Protocols page appears. - Select a protocol from the list and click OK. - The selected protocol is added. - To delete a protocol: - Select an existing protocol. - Click X. - The selected protocol is deleted.

Table 163: Fields on the Policy Page *(Continued)*

Field	Description
Policy	Specifies the name of a policy to evaluate as a subroutine. Choose one of the following options: - To add a policy: - Click +. - The Available Policies page appears. - Select a policy from the list and click OK. - The selected policy is added. - To delete a policy: - Select an existing policy. - Click X. - The selected policy is deleted.
More	Click More for advanced configuration options for policies. The More Options page appears. Click OK to save changes after the configuration is complete.
More Options	
OSPF Area ID	Enter the IP address for the area identifier.
BGP Origin	Select a value from the list to specify the origin of the AS path information.
Local Preference	Type a BGP local preference value.

Table 163: Fields on the Policy Page *(Continued)*

Field	Description
AS Path	Specifies the name of an AS path regular expression. Choose one of the following options: 1. To add an As path: a. Click +. - The Available AS Paths page appears. b. Select an As path from the list and click OK. - The selected As path is added. 2. To delete an As path: a. Select an existing As path. b. Click X. - The selected As path is deleted.
Route	Enter the following details: • External—Select the check box to enable external routing. • OSPF Type—Select an OSPF type from the list.

Table 163: Fields on the Policy Page *(Continued)*

Field	Description
Community	Specifies the name of one or more communities. Choose one of the following options: - To add a community: - Click +. - The Available Communities page appears. - Select a community from the list and click OK. - The selected community is added. - To delete a community: - Select an existing community. - Click X. - The selected community is deleted.
Destination	
Family	Select a value for address family protocol from the list.
Routing Instance	Select a routing instance from the list.
RIB	Select a name of a routing table from the list.
Preference	Type a preference value for the route.
Metric	Type a metric value.

Table 163: Fields on the Policy Page *(Continued)*

Field	Description
Interface	Specifies the name or IP address of one or more routing device interfaces. Do not use this qualifier with protocols that are not interface-specific, such as internal BGP (IBGP). Choose one of the following options: - To add an interface: - Click + and select Interface. The Available Interfaces page appears. - Select an interface from the list and click OK. The selected interface is added. - To add an IP address: - Click + and select Address. The Add IP Address page appears. - Enter IP address from the list and click OK. The selected IP address is added. - To delete an interface or an IP address: - Select an existing interface or address from Interfaces. - Click X. The selected interface or IP address is deleted.

Table 163: Fields on the Policy Page *(Continued)*

Field	Description
Protocol	Specifies the name of the protocol from which the route was learned or to which the route is being advertised. Choose one of the following options: 1. To add a protocol: a. Click +. The Available Protocols page appears. b. Select a protocol from the list and click OK. The selected protocol is added. 2. To delete a protocol: a. Select an existing protocol. b. Click X. The selected protocol is deleted.
Policy	Displays the name of the policy. Choose one of the following options: 1. To add a policy: a. Click +. The Available Policies page appears. b. Select a policy from the list and click OK. The selected policy is added. 2. To delete a policy: a. Select an existing policy. b. Click X. The selected policy is deleted.

Table 163: Fields on the Policy Page (*Continued*)

Field	Description
More	Click More for advanced configuration options for policies. The More Options page appears. Click OK to save changes after the configuration is complete.
Action	
Action	Select an action value from the list.
Default Action	Select a value from the list. Specifies that any action that is intrinsic to the protocol is overridden. This action is also non terminating so that various policy terms can be evaluated before the policy is terminated.
Next	Select a value from the list. Specifies the default control action if a match occurs, and there are no further terms in the current routing policy.
Priority	Select a value from the list. Specifies a priority for prefixes included in an OSPF import policy. Prefixes learned through OSPF are installed in the routing table based on the priority assigned to the prefixes.
BGP Origin	Select a value from the list. Specifies the BGP origin attribute.
AS Path Prepend	Enter AS path prepend value. Affixes an AS number at the beginning of the AS path. AS numbers are added after the local AS number has been added to the path. This action adds an AS number to AS sequences only, not to AS sets. If the existing AS path begins with a confederation sequence or set, the affixed AS number is placed within a confederation sequence. Otherwise, the affixed AS number is placed with a non confederation sequence.

Table 163: Fields on the Policy Page *(Continued)*

Field	Description
AS Path Expand	Enter the following details: - Type—Select the type and type a value. Extracts the last AS number in the existing AS path and affixes that AS number to the beginning of the AS path n times, where n is a number from 1 through 32. The AS number is added before the local AS number has been added to the path. This action adds AS numbers to AS sequences only, not to AS sets. If the existing AS path begins with a confederation sequence or set, the affixed AS numbers are placed within a confederation sequence. Otherwise, the affixed AS numbers are placed within a non confederation sequence. This option is typically used in non-IBGP export policies. - Value—Enter the As path value.
Preference	Enter the following details: - Action—Select the preference action and type a value. - Value—Enter the preference value.
Local Preference	Enter the following details: - Action—Select the preference action and type a value. - Value—Enter the preference value.
Load Balance Per Packet	Select the check box to enable this option. Specifies that all next-hop addresses in the forwarding table must be installed and have the forwarding table perform per-packet load balancing. This policy action allows you to optimize VPLS traffic flows across multiple paths.
Tag	Enter the following details: - Action—Select the action and type a value. Changes the metric (MED) value by the specified negative or positive offset. This action is useful only in an external BGP (EBGP) export policy. - Value—Enter the tag value.

Table 163: Fields on the Policy Page *(Continued)*

Field	Description
Metric	Enter the following details: - Action—Select the action and type a value. Specifies the tag value. The tag action sets the 32-bit tag field in OSPF external link-state advertisement (LSA) packets. - Value—Enter the metric value.
Route	Enter the following details: - External—Select the check box to enable this option. - OSPF Type—Select an option from the list.
Class of Service	Enter the following details: - Class—Select None from the list. Specifies the class-of-service parameters to be applied to routes installed into the routing table. - Source Class—Enter the source class. Specifies that the value entered here maintains the packet counts for a route passing through your network, based on the source address. - Destination Class—Enter the destination class. Specifies the value entered here maintains packet counts for a route passing through your network, based on the destination address in the packet. - Forwarding Class—Enter the forwarding class. Specifies that the value of queue number entered here maintains packet counts for a route passing through your network, based on the internal queue number assigned in the packet.

RELATED DOCUMENTATION

[Clone a Policy](#) | 587

Clone a Policy

You are here: **Network** > **Routing** > **Policies**.

To clone a policy:

1. Select a policy that you want to clone and select **Clone** from the More link.
The Clone Policy page appears with editable fields. For more information on the fields, see ["Add a Policy" on page 575](#).
2. Click **OK** to save the changes. If you want to discard your changes, click **Cancel**.

RELATED DOCUMENTATION

| [Edit a Policy](#) | 587

Edit a Policy

You are here: **Network** > **Routing** > **Policies**.

To edit a policy:

1. Select a policy that you want to edit on the Policies page.
2. Click the pencil icon available on the upper-right corner of the Policies page.
The Edit Policy page appears with editable fields. For more information on the options, see ["Add a Policy" on page 575](#).
3. Click **OK** to save the changes.

RELATED DOCUMENTATION

| [Delete a Policy](#) | 587

Delete a Policy

You are here: **Network** > **Routing** > **Policies**.

To delete a policy configuration:

1. Select one or more policies that you want to delete from the Policies page.
2. Click the delete icon available on the upper-right corner of the Policies page.
A confirmation window appears.
3. Click **Yes** to delete or click **No**.

RELATED DOCUMENTATION

[Test a Policy](#) | 588

Test a Policy

You are here: **Network** > **Routing** > **Policies**.

To test a policy:

1. Select a policy you want to test.
2. Click **Test Policy** at the upper-right corner of the Policies page.
The Test Policy page appears.
3. Click **Start** to test the policy.

You can click **Generate Report** to get the test reports.

RELATED DOCUMENTATION

[Add a Policy](#) | 575

[Edit a Policy](#) | 587

[Delete a Policy](#) | 587

Routing—Forwarding Mode

IN THIS CHAPTER

- [About the Forwarding Mode Page | 589](#)

About the Forwarding Mode Page

IN THIS SECTION

- [Field Descriptions | 589](#)

You are here: **Network > Routing > Forwarding Mode.**

Use this page to view the forwarding configuration details.

Field Descriptions

[Table 164 on page 590](#) describes the fields on the Forwarding Mode page.

Once the configuration is complete, click **Save** to save the changes or click **Cancel** to discard the changes.

Table 164: Fields on the Forwarding Mode Page

Field	Description
Family IPv6	Supports IPv6 protocol traffic, including Routing Information Protocol for IPv6 (RIPng). Select an option from the list: • None • drop—Drop IPv6 packets. • flow-based—Perform flow-based packet forwarding. • packet-based—Perform simple packet forwarding. NOTE: For SRX5000 line of devices, only drop and flow-based options are available.
Family ISO NOTE: This option is not available for SRX5000 line of devices.	Supports IS-IS traffic. Select an option from the list: • None • packet-based
Family MPLS NOTE: This option is not available for SRX5000 line of devices.	Supports MPLS traffic. Select an option from the list: • None • flow-based • packet-based

CoS—Value Aliases

IN THIS CHAPTER

- [About the Value Aliases Page | 591](#)
- [Add a Code Point Alias | 592](#)
- [Edit a Code Point Alias | 593](#)
- [Delete a Code Point Alias | 594](#)

About the Value Aliases Page

IN THIS SECTION

- [Tasks You Can Perform | 591](#)
- [Field Descriptions | 592](#)

You are here: **Network** > **Class of Service(CoS)** > **Value Aliases**.

Use this page to view, add, and remove value aliases details.

Tasks You Can Perform

You can perform the following tasks from this page:

- Add a code point alias. See ["Add a Code Point Alias" on page 592](#).
- Edit a code point alias. See ["Edit a Code Point Alias" on page 593](#).
- Delete a code point alias. See ["Delete a Code Point Alias" on page 594](#).

Field Descriptions

Table 165 on page 592 describes the fields on the Value Alias page.

Table 165: Fields on the Value Alias Page

Field	Description
Alias name	Displays the name given to CoS values. For example, af11 or be.
Alias type	Displays the code point type. The following types of code points are supported: • DSCP—Defines aliases for Differentiated Services code point (DSCP) for IPv4 values. You can refer to these aliases when you configure classes and define classifiers. • DSCP-IPv6—Defines aliases for DSCP IPv6 values. You can refer to these aliases when you configure classes and define classifiers. • EXP—Defines aliases for MPLS experimental (EXP) bits. You can map MPLS EXP bits to the device forwarding classes. • inet-precedence—Defines aliases for IPv4 precedence values. Precedence values are modified in the IPv4 TOS field and mapped to values that correspond to levels of service.
CoS Value bits	Displays the CoS value for which an alias is defined. NOTE: Changing this value alters the behavior of all classifiers that refer to this alias.

RELATED DOCUMENTATION

| [Add a Code Point Alias](#) | 592

Add a Code Point Alias

You are here: **Network** > **Class of Service(CoS)** > **Value Aliases**.

To add a code point alias:

1. Click + available on the upper-right corner of the Value Aliases page.

The Add Code Point Alias page appears.

2. Complete the configuration according to the guidelines provided in [Table 166 on page 593](#).
3. Click **OK** to save the changes. If you want to discard your changes, click **Cancel**.

Table 166: Fields on the Add Code Point Alias Page

Field	Description
Code point name	Enter a name for the CoS point alias.
Code point type	Select a code point type from the list.
Code point value bits	Select a COS value for which an alias is defined.

RELATED DOCUMENTATION

[Edit a Code Point Alias](#) | 593

Edit a Code Point Alias

You are here: **Network** > **Class of Service(CoS)** > **Value Aliases**.

To edit a code point alias:

1. Select a code point alias that you want to edit on the Value Aliases page.
2. Click the pencil icon available on the upper-right corner of the Value Aliases page.

The Code Point options appears with editable fields. For more information on the options, see ["Add a Code Point Alias" on page 592](#).

3. Click **OK** to save the changes.

RELATED DOCUMENTATION

[Delete a Code Point Alias](#) | 594

Delete a Code Point Alias

You are here: **Network** > **Class of Service(CoS)** > **Value Aliases**.

To delete a code point alias:

1. Select a code point alias that you want to delete on the Value Aliases page.
2. Click the delete icon available on the upper-right corner of the Value Aliases page.
A confirmation window appears.
3. Click **Yes** to delete or click **No**.

RELATED DOCUMENTATION

| [About the Value Aliases Page](#) | 591

CHAPTER 50

CoS—Forwarding Classes

IN THIS CHAPTER

- [About the Forwarding Classes Page | 595](#)
- [Add a Forwarding Class | 596](#)
- [Edit a Forwarding Class | 597](#)
- [Delete a Forwarding Class | 597](#)

About the Forwarding Classes Page

IN THIS SECTION

- [Tasks You Can Perform | 595](#)
- [Field Descriptions | 596](#)

You are here: **Network > Class of Service(CoS) > Forwarding Classes.**

Use this page to view, add, and delete Forwarding Classes.

Tasks You Can Perform

You can perform the following tasks from this page:

- Add a forwarding class. See ["Add a Forwarding Class" on page 596](#).
- Edit a forwarding class. See ["Edit a Forwarding Class" on page 597](#).
- Delete forwarding class. See ["Delete a Forwarding Class" on page 597](#).

Field Descriptions

Table 167 on page 596 describes the fields on the Forwarding Classes page.

Table 167: Fields on the Forwarding Classes Page

Field	Description
Forwarding class name	Displays the forwarding class name assigned to the internal queue number. By default, four forwarding classes are assigned to queue numbers: 0 (best-effort), 1 (assured-forwarding), 5 (expedited-forwarding), and 7 (network-connect).
Queue number	Displays the internal queue numbers to which forwarding classes are assigned. By default, if a packet is not classified, it is assigned to the class associated with queue 0. You can have more than one forwarding class assigned to a queue number.
Queue characteristics	Displays the queue characteristics, for example, video or voice.

RELATED DOCUMENTATION

| [Add a Forwarding Class](#) | 596

Add a Forwarding Class

You are here: **Network** > **Class of Service(CoS)** > **Forwarding Classes**.

To add a forwarding class:

1. Click **+** available on the upper-right corner of the Forwarding Class page.
The Add Forwarding Class page appears.
2. Complete the configuration according to the guidelines provided in [Table 168 on page 597](#).
3. Click **OK** to save the changes. If you want to discard your changes, click **Cancel**.

Table 168: Fields on the Add Forwarding Class page

Field	Description
Queue number	Select the internal queue number to which a forwarding class is assigned.
Forwarding class name	Enter the forwarding class name assigned to the internal queue number.

RELATED DOCUMENTATION

| [Edit a Forwarding Class](#) | 597

Edit a Forwarding Class

You are here: **Network** > **Class of Service(CoS)** > **Forwarding Classes**.

To edit a forwarding class:

1. Select an existing forwarding class that you want to edit on the Forwarding Classes page.
2. Click the pencil icon available on the upper-right corner of the Forwarding Classes page.
The Edit Forwarding Class options appears with editable fields. For more information on the options, see "[Add a Forwarding Class](#)" on page 596 for options available for editing.
3. Click **OK** to save the changes.

RELATED DOCUMENTATION

| [Delete a Forwarding Class](#) | 597

Delete a Forwarding Class

You are here: **Network** > **Class of Service(CoS)** > **Forwarding Classes**.

To delete a forwarding class:

1. Select an existing forwarding class that you want to delete on the Forwarding Classes page.

2. Click the delete icon available on the upper-right corner of the Forwarding Classes page.
A confirmation window appears.
3. Click **Yes** to delete or click **No**.

RELATED DOCUMENTATION

| [About the Forwarding Classes Page](#) | 595

CHAPTER 51

CoS Classifiers

IN THIS CHAPTER

- [About the Classifiers Page | 599](#)
- [Add a Classifier | 601](#)
- [Edit a Classifier | 602](#)
- [Delete a Classifier | 603](#)

About the Classifiers Page

IN THIS SECTION

- [Tasks You Can Perform | 599](#)
- [Field Descriptions | 600](#)

You are here: **Network > Class of Service(CoS) > Classifiers.**

Use this page to view, add, and delete Classifier Page configuration.

Tasks You Can Perform

You can perform the following tasks from this page:

- Add a classifier. See ["Add a Classifier" on page 601.](#)
- Edit a classifier. See ["Edit a Classifier" on page 602.](#)
- Delete classifier. See ["Delete a Classifier" on page 603.](#)

Field Descriptions

Table 169 on page 600 describes the fields on the Classifiers page.

Table 169: Fields on the Classifiers Page

Field	Description
Classifier name	Displays the name of a classifier.
Classifier type	Displays the classifier type. The following type of classifiers are available: • dscp—Differentiated Services code point classifier for IPv4. • dscp-ipv6—Differentiated Services code point classifier for IPv6 (default and compatibility). NOTE: This option is not available on SRX4000 lines of devices. • exp—MPLS experimental (EXP) bits classifier NOTE: This option is not available on SRX4000 lines of devices and SRX5000 lines of devices. • ieee-802.1—IEEE-802.1 classifier • ieee-802.1ad—IEEE-802.1ad classifier NOTE: This option is not available on SRX4000 lines of devices. • inet-precedence—IPv4 precedence classifier (default and compatibility)
Details of classifiers	
Incoming code point	Displays CoS values and the aliases to which the forwarding class and loss priority are mapped.
Forwarding class name	Displays forwarding class names that are assigned to specific CoS values and aliases of a classifier.
Loss priority	Displays loss priorities that are assigned to specific CoS values and aliases of a classifier.

RELATED DOCUMENTATION

| [Add a Classifier](#) | 601

Add a Classifier

You are here: **Network** > **Class of Service(CoS)** > **Classifiers**.

To add a classifier:

1. Click **+** available on the upper-right corner of the Classifiers page.
The Add Classifier page appears.
2. Complete the configuration according to the guidelines provided in [Table 170 on page 601](#).
3. Click **OK** to save the changes. If you want to discard your changes, click **Cancel**.

Table 170: Fields on the Add Classifier Page

Field	Description
Classifier name	Enter the classifier name.
Classifier type	Select a classifier type from the list. • dscp—Differentiated Services code point classifier for IPv4. • dscp-ipv6—Differentiated Services code point classifier for IPv6 (default and compatibility). NOTE: This option is not available on SRX4000 lines of devices. • exp—MPLS experimental (EXP) bits classifier NOTE: This option is not available on SRX4000 lines of devices and SRX5000 lines of devices. • ieee-802.1—IEEE-802.1 classifier • ieee-802.1ad—IEEE-802.1ad classifier NOTE: This option is not available on SRX4000 lines of devices. • inet-precedence—IPv4 precedence classifier (default and compatibility)

Table 170: Fields on the Add Classifier Page *(Continued)*

Field	Description
Code point mapping	Specifies the code point mapping created. The available options are as follows: • Add—Click + to add a code point mapping. • Edit—Click pencil icon to edit the selected code point mapping. • Delete—Deletes the code point mapping.
Code point	Select the CoS value in bits and the alias of a classifier from the list.
Forwarding class	Select the forwarding class for the specified CoS value and alias from the list.
Loss priority	Select the loss priority for the specified CoS value and alias from the list.

RELATED DOCUMENTATION

[Edit a Classifier](#) | 602

Edit a Classifier

You are here: **Network** > **Class of Service(CoS)** > **Classifiers**.

To edit a classifier:

1. Select an existing classifier configuration that you want to edit on the Classifiers page.
2. Click the pencil icon available on the upper-right corner of the Classifiers page.

The Edit Classifiers page appears with editable fields. For more information on the options, see "[Add a Classifier](#)" on page 601.

3. Click **OK** to save the changes.

RELATED DOCUMENTATION

| [Delete a Classifier](#) | 603

Delete a Classifier

You are here: **Network** > **Class of Service(CoS)** > **Classifiers**.

To delete a classifier:

1. Select a classifier that you want to delete on the Classifiers Page.
2. Click the delete icon available on the upper-right corner of the Classifiers page.
A confirmation window appears.
3. Click **Yes** to delete or click **No** to retain the profile.

RELATED DOCUMENTATION

| [About the Classifiers Page](#) | 599

CHAPTER 52

CoS—Rewrite Rules

IN THIS CHAPTER

- [About the Rewrite Rules Page | 604](#)
- [Add a Rewrite Rule | 605](#)
- [Edit a Rewrite Rule | 607](#)
- [Delete a Rewrite Rule | 607](#)

About the Rewrite Rules Page

IN THIS SECTION

- [Tasks You Can Perform | 604](#)
- [Field Descriptions | 605](#)

You are here: **Network > Class of Service(CoS) > Rewrite Rules.**

Use this page to add, edit, or delete rewrite rule configurations.

Tasks You Can Perform

You can perform the following tasks from this page:

- Add a rewrite rule. See ["Add a Rewrite Rule" on page 605](#).
- Edit a rewrite rule. See ["Edit a Rewrite Rule" on page 607](#).
- Delete rewrite rule. See ["Delete a Rewrite Rule" on page 607](#).

Field Descriptions

Table 171 on page 605 describes the fields on the Rewrite Rules page.

Table 171: Fields on the Rewrite Rules Page

Field	Description
Rewrite rule name	Displays the names of defined rewrite rules.
Rewrite rule type	Displays the rewrite rule type.
Code Point Details	
Egress/Outgoing Code point	Displays the CoS values and aliases that a specific rewrite rule has set for a specific forwarding class and loss priority.
Forwarding class name	Displays the forwarding classes associated with a specific rewrite rule.
Loss priority	Displays the loss priority values associated with a specific rewrite rule.

RELATED DOCUMENTATION

| [Add a Rewrite Rule](#) | 605

Add a Rewrite Rule

You are here: **Network** > **Class of Service(CoS)** > **Rewrite Rules**.

To add a rule configuration:

1. Click **+** available on the upper-right corner of the Forwarding Class page.
The Add Rewrite Rule page appears.
2. Complete the configuration according to the guidelines provided in [Table 172 on page 606](#).
3. Click **OK** to save the changes. If you want to discard your changes, click **Cancel**.

Table 172: Fields on the Add Rewrite Rule Page

Field	Action
Rewrite rule name	Enter the name of a defined rewrite rule.
Rewrite rule type	Select a rewrite rule type from the list. • dscp—Defines the Differentiated Services code point rewrite rule. • ieee-802.1—Defines the IEEE-802.1 rewrite rule. • inet-precedence—Defines the precedence rewrite rule for IPv4. • exp—Defines the MPLS EXP rewrite rule. NOTE: This option is not available on SRX4000 lines of devices and SRX5000 lines of devices. • dscp-ipv6—Defines the Differentiated Services code point rewrite rule for IPv6. NOTE: This option is not available on SRX4000 lines of devices. • ieee-802.1ad—Defines the IEEE-802.1ad rewrite rule. NOTE: This option is not available on SRX4000 lines of devices. • frame-relay-de—Defines the frame relay discard eligible bit rewrite rule. NOTE: This option is not available on SRX4000 lines of devices and SRX5000 lines of devices.
Code point mapping	Specifies the code point mapping created. Click one: • Add—Click + to add a code point mapping. • Edit—Click pencil icon to edit the selected code point mapping. • Delete—Deletes the code point mapping.
Egress/Outgoing Code point	Select a CoS value and alias from the list.

Table 172: Fields on the Add Rewrite Rule Page *(Continued)*

Field	Action
Forwarding class	Select the forwarding class of the rewrite rule from the list.
Loss priority	Select the loss priority of the rewrite rule from the list.

RELATED DOCUMENTATION

[Edit a Rewrite Rule](#) | 607

Edit a Rewrite Rule

You are here: **Network** > **Class of Service(CoS)** > **Rewrite Rules**.

To edit a rewrite rule:

1. Select an existing rule configuration you want to edit on the Rewrite Rules page.
2. Click the pencil icon available on the upper-right corner of the Rewrite Rules page.

The Edit Rewrite Rule page appears with editable fields. For more information on the options, see ["Add a Rewrite Rule" on page 605](#).

3. Click **OK** to save the changes.

RELATED DOCUMENTATION

[Delete a Rewrite Rule](#) | 607

Delete a Rewrite Rule

You are here: **Network** > **Class of Service(CoS)** > **Rewrite Rules**.

To delete a rewrite rule:

1. Select an existing rule configuration you want to delete on the Rewrite Rules page.

2. Click the delete icon available on the upper-right corner of the Rewrite Rules page.
A confirmation window appears.
3. Click **Yes** to delete or click **No** to retain the previous configuration.

RELATED DOCUMENTATION

| [About the Rewrite Rules Page](#) | 604

CHAPTER 53

CoS—Schedulers

IN THIS CHAPTER

- [About the Schedulers Page | 609](#)
- [Add a Scheduler | 610](#)
- [Edit a Scheduler | 612](#)
- [Delete a Scheduler | 613](#)

About the Schedulers Page

IN THIS SECTION

- [Tasks You Can Perform | 609](#)
- [Field Descriptions | 610](#)

You are here: **Network > Class of Service(CoS) > Schedulers.**

Use this page to add, edit or delete configuration of schedulers and enable or disable global settings.

Tasks You Can Perform

You can perform the following tasks from this page:

- Add a scheduler. See ["Add a Scheduler" on page 610](#).
- Edit a scheduler. See ["Edit a Scheduler" on page 612](#).
- Delete scheduler. See ["Delete a Scheduler" on page 613](#).

Field Descriptions

Table 173 on page 610 describes the fields on the Schedulers page.

Table 173: Fields on the Schedulers Page

Field	Description
Schedulers Global Setting	
Enable Non Strict Priority	Applies non-strict priority policy to all the schedulers.
Schedulers Configuration	
Scheduler name	Displays the names of defined schedulers.
Scheduler priority	Displays the scheduler transmission priority, which determines the order in which an output interface transmits traffic from the queues.
Details of scheduler	
Name	Displays the scheduler name.
Value	Displays the CoS value.

RELATED DOCUMENTATION

| [Add a Scheduler](#) | 610

Add a Scheduler

You are here: **Network** > **Class of Service(CoS)** > **Schedulers**.

To add a scheduler:

1. Click + available on the upper-right corner of the Scheduler page.
The Add Scheduler page appears.

2. Complete the configuration according to the guidelines provided in [Table 174 on page 611](#).
3. Click **OK** to save the changes. If you want to discard your changes, click **Cancel**.

Table 174: Fields on the Add Scheduler Page

Field	Action
Scheduler name	Enter the scheduler name.
Scheduler priority	Select an option from the list: • high—Packets in this queue have high priority. • low—Packets in this queue are transmitted last. • medium-low—Packets in this queue have medium-low priority. • medium-high—Packets in this queue have medium-high priority. • strict-high—Packets in this queue are transmitted first.
Buffer size	Select an option from the list: • exact—Exact buffer size. • percent—Percentage of the total buffer. Select and type an integer from 1 through 100. • remainder—Remaining available buffer size. • temporal—Temporal value in microseconds.
Shaping rate	Enter the minimum bandwidth allocated to a queue. Select an option from the list: • rate—Shaping rate as an absolute number of bits per second. Select and type an integer from 3200 through 160,000,000,000 bits per second. • percent—Shaping rate as a percentage. Select and type an integer from 0 through 100.

Table 174: Fields on the Add Scheduler Page *(Continued)*

Field	Action
Transmit rate	Enter the transmission rate of a scheduler. Select an option from the list: • rate—Transmit rate. Select and type an integer from 3200 through 160,000,000,000 bits per second. • exact—Exact transmit rate. • percent—Percentage of transmission capacity. Select and type an integer from 1 through 100. • remainder—Remaining transmission capacity.

RELATED DOCUMENTATION

[Edit a Scheduler](#) | 612

Edit a Scheduler

You are here: **Network** > **Class of Service(CoS)** > **Schedulers**.

To edit a scheduler:

1. Select an existing scheduler that you want to edit on the Schedulers page.
2. Click the pencil icon available on the upper-right corner of the Schedulers page.
The Edit Scheduler appears with editable fields. For more information on the options, see "[Add a Scheduler](#)" on page 610.
3. Click **OK** to save the changes.

RELATED DOCUMENTATION

[Delete a Scheduler](#) | 613

Delete a Scheduler

You are here: **Network** > **Class of Service(CoS)** > **Schedulers**.

To delete a scheduler:

1. Select an existing scheduler that you want to delete on the Schedulers page.
2. Click the delete icon available on the upper-right corner of the Schedulers page.
A confirmation window appears.
3. Click **Yes** to delete or click **No**.

RELATED DOCUMENTATION

[About the Schedulers Page](#) | 609

CHAPTER 54

CoS—Scheduler Maps

IN THIS CHAPTER

- [About the Scheduler Maps Page | 614](#)
- [Add a Scheduler Map | 615](#)
- [Edit a Scheduler Map | 616](#)
- [Delete a Scheduler Map | 617](#)

About the Scheduler Maps Page

IN THIS SECTION

- [Tasks You Can Perform | 614](#)
- [Field Descriptions | 615](#)

You are here: **Network > Class of Service(CoS) > Scheduler Maps**.

Use this page to add, edit, or delete schedulers maps configurations.

Tasks You Can Perform

You can perform the following tasks from this page:

- Add a scheduler map. See ["Add a Scheduler Map" on page 615](#).
- Edit a scheduler map. See ["Edit a Scheduler Map" on page 616](#).
- Delete a scheduler map. See ["Delete a Scheduler Map" on page 617](#).

Field Descriptions

Table 175 on page 615 describes the fields on the Scheduler Maps page.

Table 175: Fields on the Scheduler Maps Page

Field	Description
Scheduler map name	Displays the names of defined scheduler maps. Scheduler maps link schedulers to forwarding classes.
Schedulers	Displays the schedulers assigned for each map.
Forwarding classes	Displays the forwarding classes assigned for each map.
Details of Schedulers	
Name	Displays the scheduler assigned to the selected scheduler map.
Value	Displays the CoS values.

RELATED DOCUMENTATION

[Add a Scheduler Map](#) | 615

Add a Scheduler Map

You are here: **Network** > **Class of Service(CoS)** > **Scheduler Maps**.

To add a scheduler map:

1. Click **+** available on the upper-right corner of the Scheduler Map page.
The Add Scheduler Map page appears.
2. Complete the configuration according to the guidelines provided in [Table 176 on page 616](#).
3. Click **OK** to save the changes. If you want to discard your changes, click **Cancel**.

Table 176: Fields on the Add Scheduler Map Page

Field	Action
Scheduler map name	Enter a name for the scheduler map.
best-effort	Select an option from the list. Specifies no service profile. Loss priority is typically not carried in a CoS value.
expedited-forwarding	Select an option from the list. Specifies end-to-end service with low loss, low latency, low jitter, and assured bandwidth.
assured-forwarding	Select an option from the list. Specifies the group of defined values.
network-control	Select an option from the list. Specifies CoS packet forwarding class of high priority.

RELATED DOCUMENTATION

[Edit a Scheduler Map](#) | **616**

Edit a Scheduler Map

You are here: **Network** > **Class of Service(CoS)** > **Scheduler Maps**.

To edit a scheduler map:

1. Select an existing scheduler map that you want to edit on the Schedulers page.
2. Click the pencil icon available on the upper-right corner of the Schedulers page.

The Edit Scheduler Map page appears with editable fields. For more information on the options, see ["Add a Scheduler Map" on page 615](#).

3. Click **OK** to save the changes.

RELATED DOCUMENTATION

[Delete a Scheduler Map](#) | 617

Delete a Scheduler Map

You are here: **Network** > **Class of Service(CoS)** > **Scheduler Maps**.

To delete a scheduler map:

1. Select an existing scheduler map that you want to delete on the Schedulers page.
2. Click the delete icon available on the upper-right corner of the Schedulers page.
A confirmation window appears.
3. Click **Yes** to delete or click **No**.

RELATED DOCUMENTATION

[About the Scheduler Maps Page](#) | 614

CHAPTER 55

CoS—Drop Profile

IN THIS CHAPTER

- [About the Drop Profile Page | 618](#)
- [Add a Drop Profile | 619](#)
- [Edit a Drop Profile | 621](#)
- [Delete a Drop Profile | 621](#)

About the Drop Profile Page

IN THIS SECTION

- [Tasks You Can Perform | 618](#)
- [Field Descriptions | 619](#)

You are here: **Network** > **Class of Service(CoS)** > **Drop Profile**.

Use this page to configure drop profiles.

Tasks You Can Perform

You can perform the following tasks from this page:

- Add a drop profile. See ["Add a Drop Profile" on page 619](#).
- Edit a drop profile. See ["Edit a Drop Profile" on page 621](#).
- Delete a drop profile. See ["Delete a Drop Profile" on page 621](#).

Field Descriptions

Table 177 on page 619 describes the fields on the Drop Profile page.

Table 177: Fields on the Drop Profile Page

Field	Description
Drop profile name	Displays the configured random early detection (RED) drop profile names.
Profile type	Displays whether a RED drop profile type is interpolated or segmented.
Data points	Displays information about the data point types.

RELATED DOCUMENTATION

[About the Drop Profile Page](#) | 618

Add a Drop Profile

You are here: **Network** > **Class of Service(CoS)** > **Drop Profile**.

To add a drop profile:

1. Click **+** available on the upper-right corner of the Drop Profile page.
The Add Drop Profile page appears.
2. Complete the configuration according to the guidelines provided in [Table 178 on page 619](#).
3. Click **OK** to save the changes. If you want to discard your changes, click **Cancel**.

Table 178: Fields on the Add Drop Profile Page

Field	Action
Drop Profile Name	Enter a drop profile name.

Table 178: Fields on the Add Drop Profile Page *(Continued)*

Field	Action
Interpolated	Select the option to specify whether the value pairs are interpolated to produce a smooth profile.
Segmented	Select the option to specify whether the value pairs are represented by line fragments, which connect each data point on the graph to produce a segmented profile.
Data point	To add a data point: - Click +. The Add Data Point page appears. - Enter the following details: Fill Level—Enter a percentage value for queue buffer fullness for the X-coordinate. For example, 95. Drop Probability—Enter a percentage value for drop probability for the Y-coordinate. For example, 85. - Click OK to save changes. To edit a data point: - Select the existing data point and click the pencil icon. The Edit Data Point page appears. - Enter a percentage value for Drop Probability. - Click OK to save changes. To delete a data point, select the existing data point and click the delete (X) icon. Then, click Yes to delete it.

RELATED DOCUMENTATION

| [Edit a Drop Profile](#) | 621

Edit a Drop Profile

You are here: **Network** > **Class of Service(CoS)** > **Drop Profile**.

To edit a drop profile:

1. Select an existing drop profile that you want to edit on the Drop Profile page.
2. Click the pencil icon available on the upper-right corner of the Drop Profile page.

The Edit Drop Profile page appears with editable fields. For more information on the options, see ["Add a Drop Profile" on page 619](#).

3. Click **OK** to save the changes.

RELATED DOCUMENTATION

[Delete a Drop Profile](#) | [621](#)

Delete a Drop Profile

You are here: **Network** > **Class of Service(CoS)** > **Drop Profile**.

To delete a drop profile:

1. Select an existing drop profile that you want to delete on the Drop Profile page.
2. Click the delete icon available on the upper-right corner of the Drop Profile page.

A confirmation window appears.

3. Click **Yes** to delete or click **No**.

RELATED DOCUMENTATION

[About the Drop Profile Page](#) | [618](#)

CoS—Virtual Channel Groups

IN THIS CHAPTER

- [About the Virtual Channel Groups Page | 622](#)
- [Add a Virtual Channel | 623](#)
- [Edit a Virtual Channel | 624](#)
- [Delete a Virtual Channel | 625](#)

About the Virtual Channel Groups Page

IN THIS SECTION

- [Tasks You Can Perform | 622](#)
- [Field Descriptions | 623](#)

You are here: **Network** > **Class of Service(CoS)** > **Virtual Channel Groups**.

NOTE: This menu is not available for SRX4000 line of devices and SRX5000 line of devices.

Use this page to configure virtual channel group.

Tasks You Can Perform

You can perform the following tasks from this page:

- Add a virtual channel. See ["Add a Virtual Channel" on page 623](#).
- Edit a virtual channel. See ["Edit a Virtual Channel" on page 624](#).

- Delete a virtual channel. See ["Delete a Virtual Channel" on page 625](#).

Field Descriptions

[Table 179 on page 623](#) describes the fields on the Virtual Channel Groups page.

Table 179: Fields on the Virtual Channel Groups Page

Field	Description
Virtual Channel Group Name	Displays the name of defined virtual channel groups.
Virtual Channel Name	Displays the name of defined virtual channels.
Default	Displays the default virtual channel of a group marking.
Scheduler Map	Displays the scheduler map assigned to a particular virtual channel.
Shaping Rate	Displays the shaping rate configured for a virtual channel.

RELATED DOCUMENTATION

[Add a Virtual Channel](#) | [623](#)

Add a Virtual Channel

You are here: **Network** > **Class of Service(CoS)** > **Virtual Channel Groups**.

NOTE: This menu is not available for SRX4000 line of devices and SRX5000 line of devices.

To add a virtual channel to the virtual channel group:

1. Click **Add** on the Virtual Channel page.
The Virtual Channel Information page appears.
2. Complete the configuration according to the guidelines provided in [Table 180 on page 624](#).

3. Click **OK** to save the changes. If you want to discard your changes, click **Cancel**.

Table 180: Fields on the Virtual Channel Information Page

Field	Action
Virtual Channel Name	Select a predefined name from the list or enter a new virtual channel name.
Scheduler Map	Select a scheduler map from the list. Specifies a predefined scheduler map to assign to a virtual channel. The scheduler maps associate schedulers with forwarding classes.
Shaping Rate	Enter the shaping rate for a virtual channel. Configuring a shaping rate is optional. If no shaping rate is configured, a virtual channel without a shaper can use the full logical interface bandwidth. The options available are: Select an option from the list: • Unconfigured—Select the option for no shaping rate. • Absolute Rate—Configures a shaping rate as an absolute number of bits per second. Range: 3200 through 320000000000. • Percent—Configures a shaping rate as a percentage. Range: 0 through 100.

RELATED DOCUMENTATION

| [Edit a Virtual Channel](#) | 624

Edit a Virtual Channel

You are here: **Network** > **Class of Service(CoS)** > **Virtual Channel Groups**.

NOTE: This menu is not available for SRX4000 line of devices and SRX5000 line of devices.

To edit a virtual channel in the virtual channel group:

1. Click on the existing virtual channel name that you want to edit on the Virtual Channel Groups page.
The Virtual Channel Information page appears with editable fields. For more information on the options, see ["Add a Virtual Channel" on page 623](#).
2. Click **OK** to save the changes.

RELATED DOCUMENTATION

| [Delete a Virtual Channel](#) | 625

Delete a Virtual Channel

You are here: **Network** > **Class of Service(CoS)** > **Virtual Channel Groups**.

NOTE: This menu is not available for SRX4000 line of devices and SRX5000 line of devices.

To delete a virtual channel:

1. Select an existing virtual channel name that you want to delete on the Virtual Channel Groups page.
2. Click **Delete** on the Virtual Channel Groups page.

RELATED DOCUMENTATION

| [About the Virtual Channel Groups Page](#) | 622

CoS—Assign To Interface

IN THIS CHAPTER

- [About the Assign To Interface Page | 626](#)
- [Edit a Port | 628](#)
- [Add a Logical Interface | 628](#)
- [Edit a Logical Interface | 630](#)
- [Delete a Logical Interface | 631](#)

About the Assign To Interface Page

IN THIS SECTION

- [Tasks You Can Perform | 626](#)
- [Field Descriptions | 627](#)

You are here: **Network** > **Class of Service(CoS)** > **Assign To Interface**.

Use this page to add, edit, or delete interface configuration.

Tasks You Can Perform

You can perform the following tasks from this page:

- Edit a port. See ["Edit a Port" on page 628](#).
- Add a Logical Interface. See ["Add a Logical Interface" on page 628](#).
- Edit a Logical Interface. See ["Edit a Logical Interface" on page 630](#).

- Delete Logical Interface. See ["Delete a Logical Interface" on page 631](#).

Field Descriptions

[Table 181 on page 627](#) describes the fields on the Assign To Interface page.

Table 181: Fields on the Assign To Interface Page

Field	Description
Port	Displays the port and interface name.
Scheduler map	Displays the predefined scheduler maps for the physical interface.
Details of Logical Interfaces	
Unit	Displays the name of a logical interface.
Forwarding class	Displays the forwarding classes assigned to a particular interface.
Scheduler map	Displays the scheduler maps assigned to a particular interface.
Virtual channel group	Displays the virtual channel groups assigned to a particular interface.
Classifier[dscp,dscpv6,exp,inet]	Displays the classifiers assigned to a particular interface—for example, information about DSCP and DSCPv6, EXP, and IPv4 (inet precedence) classifiers.
Rewrite rule[dscp,dscpv6,exp,inet]	Displays the rewrite rules assigned to a particular interface—for example, information about Differentiated Services Code Point (DSCP and DSCPv6), EXP, and IPv4 (inet precedence) rewrite rules.

RELATED DOCUMENTATION

[Edit a Port](#) | [628](#)

Edit a Port

You are here: **Network** > **Class of Service(CoS)** > **Assign To Interface**.

To edit a port:

1. Select an existing port profile that you want to edit on the Assign To Interface page.
2. The Edit page appears with editable fields. For more information on the options, see [Table 182 on page 628](#).
3. Click **OK** to save the changes.

Table 182: Fields on the Edit Port Page

Field	Action
Interface Name	Displays the selected interface name.
Associate system default scheduler map	Select Associate system default scheduler map. Specifies that you can associate the system default scheduler map with the selected interface.
Select the scheduler map	Select Select the scheduler map and select a value from the list. Specifies the scheduler map to the selected interface.

RELATED DOCUMENTATION

[Add a Logical Interface](#) | 628

Add a Logical Interface

You are here: **Network** > **Class of Service(CoS)** > **Assign To Interface**.

To add a logical interface:

1. Click **+** available on the upper-right corner of the Logical Interface page.
The Add Logical Interface page appears.
2. Complete the configuration according to the guidelines provided in [Table 183 on page 629](#).

3. Click **OK** to save the changes. If you want to discard your changes, click **Cancel**.

Table 183: Fields on the Add Logical Interface

Field	Action
Unit	Enter a logical interface name.
Scheduler map	Select a scheduler map from the list.
Forwarding class	Select a forwarding class from the list.
Virtual channel group	Select a virtual channel group from the list.
Classifiers	
dscp	Select a classifier DSCP value from the list. Specifies the Differentiated Services Code Point of the classifier type assigned to a particular interface.
dscp v6	Select a classifier DSCPv6 value from the list. Specifies the Differentiated Services Code Point version 6 of the classifier type assigned to a particular interface.
exp	Select an EXP classifier value from the list. Specifies the EXP classifier type assigned to a particular interface.
inet precedence	Select an IPv4 precedence classifier value from the list. Specifies the IPv4 precedence classifier type assigned to a particular interface.
Rewrite rules	
dscp	Select a rewrite rule DSCP value from the list. Specifies the Differentiated Services Code Point of the rewrite rule type assigned to a particular interface

Table 183: Fields on the Add Logical Interface *(Continued)*

Field	Action
dscp v6	Select a rewrite rule DSCPv6 value from the list. Specifies the Differentiated Services Code Point version 6 of the rewrite rule type assigned to a particular interface.
exp	Select an EXP rewrite rule value from the list. Specifies the EXP rewrite rule type assigned to a particular interface.
inet precedence	Select an IPv4 precedence rewrite rule value from the list. Specifies the IPv4 precedence rewrite rule type assigned to a particular interface.

RELATED DOCUMENTATION

[Edit a Logical Interface](#) | 630

Edit a Logical Interface

You are here: **Network** > **Class of Service(CoS)** > **Assign To Interface**.

To edit a logical interface:

1. Select an existing logical interface that you want to edit on the Logical Interface page.
2. Click the pencil icon available on the upper-right corner of the Logical Interface page.

The Edit Logical Interface page appears with editable fields. For more information on the options, see ["Add a Logical Interface" on page 628](#).

3. Click **OK** to save the changes.

RELATED DOCUMENTATION

[Delete a Logical Interface](#) | 631

Delete a Logical Interface

You are here: **Network** > **Class of Service(CoS)** > **Assign To Interface**.

To delete a logical interface:

1. Select an existing logical interface that you want to delete on the Logical Interface page.
2. Click the delete icon available on the upper-right corner of the Logical Interface page.
A confirmation window appears.
3. Click **Yes** to delete or click **No**.

RELATED DOCUMENTATION

[About the Assign To Interface Page](#) | 626

Application QoS

IN THIS CHAPTER

- [About the Application QoS Page | 632](#)
- [Add an Application QoS Profile | 635](#)
- [Edit an Application QoS Profile | 637](#)
- [Clone an Application QoS Profile | 637](#)
- [Delete an Application QoS Profile | 638](#)
- [Add a Rate Limiter Profile | 638](#)
- [Edit a Rate Limiter Profile | 639](#)
- [Clone a Rate Limiter Profile | 640](#)
- [Delete a Rate Limiter Profile | 640](#)

About the Application QoS Page

IN THIS SECTION

- [Tasks You Can Perform | 633](#)
- [Field Descriptions | 634](#)

You are here: **Network** > **Application QoS**.

Application quality of service (AppQoS) provides the ability to prioritize and meter application traffic to provide better service to business-critical or high-priority application traffic.

The AppQoS feature expands the capability of Junos OS class of service (CoS) to include marking DSCP values based on Layer-7 application types, honoring application-based traffic through loss priority

settings, and controlling transfer rates on egress Physical Interface Cards (PICs) based on Layer-7 application types.

Use this page to add, edit, clone, and delete an AppQoS profile and a rate limiter profile.

Tasks You Can Perform

You can perform the following tasks from this page:

- Add an AppQoS profile. See ["Add an Application QoS Profile" on page 635](#).
- Edit an AppQoS profile. See ["Edit an Application QoS Profile" on page 637](#).
- Clone an AppQoS profile. See ["Clone an Application QoS Profile" on page 637](#).
- Delete AppQoS profile. See ["Delete an Application QoS Profile" on page 638](#).
- Add a rate limiter profile. See ["Add a Rate Limiter Profile" on page 638](#).
- Edit a rate limiter profile. See ["Edit a Rate Limiter Profile" on page 639](#).
- Clone a rate limiter profile. See ["Clone a Rate Limiter Profile" on page 640](#).
- Delete rate limiter profile. See ["Delete a Rate Limiter Profile" on page 640](#).
- Show or hide columns in the AppQoS Profile or Rate Limiter Profile table. To do this, click Show Hide Columns icon in the upper-right corner of the page and select the columns you want to display or deselect to hide columns on the page.
- Advanced search for an AppQoS or rate limiter profile. To do this, use the search text box present above the table grid. The search includes the logical operators as part of the filter string. An example filter condition is displayed in the search text box when you hover over the Search icon. When you start entering the search string, the icon indicates whether the filter string is valid or not.

For an advanced search:

1. Enter the search string in the text box.

Based on your input, a list of items from the filter context menu appears.

2. Select a value from the list and then select a valid operator based on which you want to perform the advanced search operation.

NOTE: Press Spacebar to add an AND operator or OR operator to the search string. Press backspace to delete a character of the search string.

3. Press Enter to display the search results in the grid.

Field Descriptions

Table 184 on page 634 describes the fields on the Application QoS page.

Table 184: Fields on the Application QoS Page

Field	Description
AppQoS Profile	
Name	Displays the AppQoS profile name.
Traffic Direction	Displays whether the traffic direction is client-to-server and server-to-client. NOTE: If the same rate limiter profile is associated with client-to-server and server-to-client traffic, then Both status will be displayed.
Rate Limiter	Displays the rate limiter profile name.
Forwarding Class	Displays the forwarding class name.
Rate Limiter Profile	
Name	Displays the rate limiter profile name.
Maximum Bandwidth	Displays the maximum bandwidth (in Mbps) to be transmitted for the rate limiter.
Maximum Burst Size	Displays maximum burst size (in MB) to be transferred in a single burst or time-slice.
Associated AppQoS Profile	Displays the AppQoS profile name associated with the rate limiter profile.

Add an Application QoS Profile

You are here: **Network** > **Application QoS**.

To add an AppQoS profile:

1. Click **+** available on the upper-right corner of the Application QoS page.
The Add AppQoS Profile page appears.
2. Complete the configuration according to the guidelines provided in [Table 185 on page 635](#) through [Table 186 on page 636](#).
3. Click **OK** to save the changes. If you want to discard your changes, click **Cancel**.

Table 185: Fields on the Add AppQoS Profile Page

Field	Action
Name	Enter a name for the AppQoS profile. The name must be a string beginning with a letter or underscore and consisting of letters, numbers, dashes and underscores, and length should be maximum 53 characters.
Rate Limiter	
Traffic Direction	
Client to Server	Select a rate limiter from the list to be associated with client-to-server traffic for this application. Click Add New to add a new rate limiter profile. For more information on creating a new rate limiter, see "Add a Rate Limiter Profile" on page 638 .
Server to Client	Select a rate limiter from the list to be associated with server-to-client traffic for this application. Click Add New to add a new rate limiter profile. For fields information, see "Add a Rate Limiter Profile" on page 638 .

Table 185: Fields on the Add AppQoS Profile Page *(Continued)*

Field	Action
Action	Select one of the following actions to configure the AppQoS rules: • Drop—Drops out-of-profile packets. • Loss Priority High—Elevates the loss priority to maximum. NOTE: This option is not supported for SRX4600 and SRX5000 line of devices.
QoS Marking	
DSCP	Select an option from the list to mark Differentiated Services code point (DSCP) alias or bit map with matching applications to establish the output queue.
Forwarding Class	Select an option from the list to mark the AppQoS class with matching applications. Click Add New to add a new forwarding class. For more information in adding a new forwarding class, see Table 186 on page 636. NOTE: Add New is not supported for the logical systems and tenants. You can only select the predefined value.
Packet Loss Priority	Select an option from the list to mark loss priority with matching applications. Possible values are none, high, low, medium-high, and medium-low. A high loss priority means that there is an 80% chance of packet loss in congestion.
Logs	Enable this option to log AppQoS events.

Table 186: Fields on the Add Forwarding Class page

Field	Action
Name	Enter a name for the forwarding class.
Queue Number	Enter an output queue number to associate with the forwarding class. Range is 0 through 7.

Table 186: Fields on the Add Forwarding Class page *(Continued)*

Field	Action
Priority	Select the forwarding class queuing priority from the list.

RELATED DOCUMENTATION

[About the Application QoS Page | 632](#)

[Edit an Application QoS Profile | 637](#)

[Clone an Application QoS Profile | 637](#)

[Delete an Application QoS Profile | 638](#)

Edit an Application QoS Profile

You are here: **Network** > **Application QoS**.

To edit an AppQoS profile:

1. Select an existing AppQoS profile that you want to edit on the Application QoS page.
2. Click the pencil icon available on the upper right-side of the page.

The Edit AppQoS Profile page appears with editable fields. For more information on editing the fields, see ["Add an Application QoS Profile" on page 635](#).

3. Click **OK** to save the changes or click **Cancel** to discard the changes.

RELATED DOCUMENTATION

[About the Application QoS Page | 632](#)

[Clone an Application QoS Profile | 637](#)

[Delete an Application QoS Profile | 638](#)

Clone an Application QoS Profile

You are here: **Network** > **Application QoS**.

To clone an AppQoS profile:

1. Select an existing AppQoS profile that you want to clone on the Application QoS page.
2. Click **More** > **Clone** available on the upper right-side of the page.
The Clone AppQoS Profile page appears with editable fields. For more information on editing the fields, see ["Add an Application QoS Profile" on page 635](#).
3. Click **OK** to save the changes or click **Cancel** to discard the changes.

RELATED DOCUMENTATION

- [About the Application QoS Page | 632](#)
- [Edit an Application QoS Profile | 637](#)
- [Delete an Application QoS Profile | 638](#)

Delete an Application QoS Profile

You are here: **Network** > **Application QoS**.

To delete AppQoS profile(s):

1. Select one or more AppQoS profiles that you want to delete on the Application QoS page.
2. Click the delete icon available on the upper-right corner of the page.
3. Click **Yes** to delete the selected AppQoS profiles or click **No** to retain the profiles.

RELATED DOCUMENTATION

- [About the Application QoS Page | 632](#)
- [Add an Application QoS Profile | 635](#)
- [Edit an Application QoS Profile | 637](#)
- [Clone an Application QoS Profile | 637](#)

Add a Rate Limiter Profile

You are here: **Network** > **Application QoS**.

To add a rate limiter profile:

1. Click **+** available on the upper-right corner of the Application QoS page.
The Add Rate Limiter Profile page appears.
2. Complete the configuration according to the guidelines provided in [Table 187 on page 639](#).
3. Click **OK** to save the changes. If you want to discard your changes, click **Cancel**.

Table 187: Fields on the Add Rate Limiter Profile Page

Field	Action
Name	Enter a name for the rate limiter profile. It is applied in AppQoS rules to share device resources based on quality-of-service requirements. Name must be a string beginning with a letter or underscore and consisting of letters, numbers, dashes and underscores and length should be maximum 63 characters.
Maximum Bandwidth	Enter the maximum bandwidth to be transmitted in Mbps, for this rate limiter. You can provision up to 10240 Mbps of bandwidth among multiple rate limiters to share the resource proportionally. Range is 64 kbps through 10240 Mbps.
Maximum Burst Size	Enter the maximum burst size (in MB) to be transferred in a single burst or time-slice. This limit ensures that a high-priority transmission does not keep a lower priority transmission from transmitting. Range is 1 byte through 1280 MB.

RELATED DOCUMENTATION

[About the Application QoS Page | 632](#)

[Edit a Rate Limiter Profile | 639](#)

[Clone a Rate Limiter Profile | 640](#)

[Delete a Rate Limiter Profile | 640](#)

Edit a Rate Limiter Profile

You are here: **Network > Application QoS**.

To edit a rate limiter profile:

1. Select an existing rate limiter profile that you want to edit on the Application QoS page.
2. Click the pencil icon available on the upper right-side of the page.

The Edit Rate Limiter Profile page appears with editable fields. For more information on editing the fields, see ["Add a Rate Limiter Profile" on page 638](#).

3. Click **OK** to save the changes or click **Cancel** to discard the changes.

RELATED DOCUMENTATION

[About the Application QoS Page | 632](#)

[Clone a Rate Limiter Profile | 640](#)

[Delete a Rate Limiter Profile | 640](#)

Clone a Rate Limiter Profile

You are here: **Network** > **Application QoS**.

To clone a rate limiter profile:

1. Select an existing rate limiter profile that you want to clone on the Application QoS page.
2. Click **More** > **Clone** available on the upper right-side of the page.

The Clone Rate Limiter Profile page appears with editable fields. For more information on editing the fields, see ["Add a Rate Limiter Profile" on page 638](#).

3. Click **OK** to save the changes or click **Cancel** to discard the changes.

RELATED DOCUMENTATION

[About the Application QoS Page | 632](#)

[Edit a Rate Limiter Profile | 639](#)

[Delete a Rate Limiter Profile | 640](#)

Delete a Rate Limiter Profile

You are here: **Network** > **Application QoS**.

To delete rate limiter profile(s):

1. Select one or more rate limiter profiles that you want to delete on the Application QoS page.
2. Click the delete icon available on the upper-right corner of the page.
3. Click **Yes** to delete rate limiter profiles or click **No** to retain the profiles.

RELATED DOCUMENTATION

[About the Application QoS Page | 632](#)

[Add a Rate Limiter Profile | 638](#)

[Edit a Rate Limiter Profile | 639](#)

[Clone a Rate Limiter Profile | 640](#)

IPsec VPN

IN THIS CHAPTER

- [About the IPsec VPN Page | 642](#)
- [IPsec VPN Global Settings | 645](#)
- [Create a Site-to-Site VPN | 649](#)
- [Create a Remote Access VPN—Juniper Secure Connect | 666](#)
- [Create a Remote Access VPN—NCP Exclusive Client | 689](#)
- [Edit an IPsec VPN | 702](#)
- [Delete an IPsec VPN | 703](#)

About the IPsec VPN Page

IN THIS SECTION

- [Tasks You Can Perform | 642](#)
- [Field Descriptions | 643](#)

You are here: **Network > VPN > IPsec VPN.**

A VPN is a private network that uses a public network to connect two or more remote sites. Instead of using dedicated connections between networks, VPNs use virtual connections routed (tunneled) through public networks. IPsec VPN is a protocol, consists of set of standards used to establish a VPN connection. Use this page to configure IPsec VPN.

Tasks You Can Perform

You can perform the following tasks from this page:

- Configure IPsec VPN global settings. See ["IPsec VPN Global Settings" on page 645](#).
- Create a Site-to-Site VPN. See ["Create a Site-to-Site VPN" on page 649](#).
- Create a remote access VPN. See ["Create a Remote Access VPN—Juniper Secure Connect" on page 666](#) and ["Create a Remote Access VPN—NCP Exclusive Client" on page 689](#).
- Edit an IPsec VPN configuration. See ["Edit an IPsec VPN" on page 702](#).
- Delete an IPsec VPN configuration. See ["Delete an IPsec VPN" on page 703](#).
- Show or hide columns in the IPsec VPN table. To do this, click the Show Hide Columns icon in the upper-right corner of the page and select the columns you want to display or deselect to hide columns on the page.
- Advance search for an IPsec VPN. To do this, use the search text box present above the table grid. The search includes the logical operators as part of the filter string. An example filter condition is displayed in the search text box when you hover over the Search icon. When you start entering the search string, the icon indicates whether the filter string is valid or not.

For an advanced search:

1. Enter the search string in the text box.

Based on your input, a list of items from the filter context menu appears.

2. Select a value from the list and choose a valid operator for your advanced search.

NOTE: Press Spacebar to add an AND operator or OR operator to the search string. Press backspace to delete a character of the search string.

3. Press Enter to display the search results in the grid.

Field Descriptions

[Table 188 on page 643](#) describes the fields on the IPsec VPN page.

Table 188: Fields on the IPsec VPN Page

Field	Description
Name	Displays the name of the IPsec VPN.

Table 188: Fields on the IPsec VPN Page *(Continued)*

Field	Description
IKE Status	Displays the Phase I Internet Key Exchange (IKE) status.
VPN Topology	Displays the name of the VPN topology: • Site to Site VPN—Connects two sites in an organization together and allows secure communications between the sites. • Remote Access VPN—Allows a user who is working at home or traveling to connect to the corporate office and its resources. This topology is sometimes referred to as an end-to-site tunnel. The options available are Remote Access VPN (Juniper Secure Connect) and Remote Access VPN (NCP Exclusive Client). • Other topologies which are displayed and you cannot add or edit are: • Dynamic VPN—The dynamic VPN feature simplifies remote access by enabling users to create IPsec VPN tunnels without having to manually configure settings on their PCs or laptops. This feature is supported on SRX300, SRX320, SRX340, SRX345, and SRX550HM devices. • Hub-and-spoke VPNs—Connects branch offices to the corporate office in an enterprise network. You can also use this topology to connect spokes together by sending traffic through the hub. • ADVPN Hub—Auto Discovery VPN (ADVPN) dynamically establishes VPN tunnels between spokes to avoid routing traffic through the Hub. • ADVPN Spoke—Allows the spokes to establish a shortcut tunnel between peers.
Dead Peer Detection	Displays if the dead peer detection (DPD) is enabled or disabled.
Routing Mode	Displays the name of the routing mode to send traffic to the IPsec VPN.
Connection Profile	Displays the connection profile in the FQDN or FQDN/Realm format if configured. If not configured, the field displays as external-IP/VPN-Name. NOTE: Starting in Junos OS 23.1R1 Release, Remote Access column is renamed as Connection Profile.

RELATED DOCUMENTATION

Create a Site-to-Site VPN 649
Edit an IPsec VPN 702
Delete an IPsec VPN 703

IPsec VPN Global Settings

IN THIS SECTION

- [Field Descriptions | 645](#)

You are here: **Network** > **VPN** > **IPsec VPN**.

Use this page to view or add the VPN global configuration details. Click **Global Settings** on the IPsec VPN page.

Field Descriptions

[Table 189 on page 645](#) describes the fields on the Global Settings page.

Table 189: Fields on the Global Settings Page

Field	Description
General	
IKE - respond to bad-spi	Enable this option if you want the device to respond to IPsec packets with invalid IPsec Security Parameter Index (SPI) values.
Max responses	Enter a value from 1 through 30 to respond to invalid SPI values per gateway. The default is 5. This option is available when Response Bad SPI is selected.
IKE SNMP trap	Enable this option to control the sending of SNMP traps.

Table 189: Fields on the Global Settings Page *(Continued)*

Field	Description
Tunnel down	Enable this option to generate traps for IPsec tunnel going down only when the associated peer IKE SA is up. NOTE: This option is available when IKE SNMP trap is selected.
Peer down	Enable this option to generate traps when peer goes down. NOTE: This option is available when IKE SNMP trap is selected.
IPsec VPN monitor options	Enable this option if you want the device to monitor VPN liveliness.
Interval (seconds)	Enter a value from 2 through 3600 seconds after which Internet Control Message Protocol (ICMP) requests are sent to the peer.
Threshold	Enter a value from 1 through 65,536 to specify the number of consecutive unsuccessful pings before the peer is declared unreachable.
Remote Access VPN	
Default profile name	Select a default profile name from the list. NOTE: • This option is available when at least one Juniper Secure Connect VPN is created. • Starting in Junos OS 23.1R1 Release, default profile is deprecated in J-Web.
SSL VPN tunnel tracking	Enable this option to track Encapsulated Security Payload (ESP) tunnels.

Table 189: Fields on the Global Settings Page *(Continued)*

Field	Description
SSL VPN profiles	Lists the SSL VPN profiles. NOTE: This option displays associated IPsec VPNs when at least one Juniper Secure Connect VPN is created. To add a new SSL VPN profile: - Click +. The Add SSL VPN Profile page appears. - Enter the following details: Name—Enter the name for an SSL VPN profile. Logging—Enable this option to log for SSL VPN. SSL Termination Profile—Select an SSL termination profile from the list. To add a new SSL termination profile: - Click Add. The Create SSL Termination Profile page appears. - Enter the following details: Name—Enter a name for the SSL termination profile. Server Certificate—Select a server certificate from the list. To add a certificate, click Add. For more information on adding a device certificate, see No Link Title. To import a certificate, click Import. For more information on importing a device certificate, see No Link Title. - Click OK. - Click OK. To edit an SSL termination profile, select the profile you want to edit and click on the pencil icon.

Table 189: Fields on the Global Settings Page *(Continued)*

Field	Description
	To delete an SSL termination profile, select the profile you want to delete and click on the delete icon.
Internal SA Encryption	
Algorithm	Select an encryption algorithm from the list. That is, 3DES-CBC or AES-128-CBC.
Key	Enter the encryption key. You must ensure that the manual encryption key is in ASCII text and 16 (for AES-128-CBC algorithm) or 24 (for 3DES-CBC algorithm) characters long; otherwise, the configuration will result in a commit failure. NOTE: Key field will be enabled only if you select an algorithm.
IKE HA link	Use this toggle to enable or disable HA link encryption IKE internal messages for HA devices. By default, IKE HA link is disabled.
IKE Package	
NOTE:	
• If the device is in chassis cluster mode, you must install junos-ike package on both primary node and secondary node. As J-Web server runs only on primary node, you can install junos-ike package only on primary node. Use the CLI to install junos-ike package on secondary node. • Junos-ike package is not supported for SRX300 Series Firewall. • For SRX1600 and SRX2300 Firewalls, junos-ike package is already installed.	
Install IKE package	Use this to install junos-ike package on your device. NOTE: You must reboot your device once the junos-ike package is installed on your device to avoid configuration mismatch error.
Uninstall IKE package	Use this to uninstall junos-ike package from your device. NOTE: You must reboot your device once the junos-ike package is uninstalled from your device to avoid configuration mismatch error.

Table 189: Fields on the Global Settings Page *(Continued)*

Field	Description
Reboot Device	To reboot your device, do the following: 1. Click the reboot device button. The Reboot Device window appears. 2. Select and set the reboot time. That is: • Now— Device reboots immediately • In— Set the Reboot Time (minutes). • At— Set the Reboot at to schedule the reboot at particular time. NOTE: Restart your device to ensure proper operation of J-web. 3. Click OK.

RELATED DOCUMENTATION

[About the IPsec VPN Page | 642](#)

[Edit an IPsec VPN | 702](#)

[Delete an IPsec VPN | 703](#)

Create a Site-to-Site VPN

You are here: **Network > VPN > IPsec VPN**.

To create a site-to-site VPN:

1. Click **Create VPN** and select **Site to Site** on the upper-right corner of the IPsec VPN page.
The Create Site to Site VPN page appears.
2. Complete the configuration according to the guidelines provided in [Table 190 on page 650](#) through [Table 195 on page 660](#).
The VPN connectivity will change from grey to blue line in the topology to show that the configuration is complete.
3. Click **Save** to save the changes.
If you want to discard your changes, click **Cancel**.

Table 190: Fields on the Create IPsec VPN Page

Field	Action
Name	Enter a name for the VPN.
Description	Enter a description. This description will be used for the IKE and IPsec proposals and policies. During edit, the IPsec policy description will be displayed and updated.
Routing Mode	Select the routing mode to which this VPN will be associated: • Traffic Selector (Auto Route Insertion) • Static Routing • Dynamic Routing – OSPF • Dynamic Routing – BGP For each topology, J-Web auto generates the relevant CLIs. Traffic Selector is the default mode.

Table 190: Fields on the Create IPsec VPN Page (*Continued*)

Field	Action
Authentication Method	Select an authentication method from the list that the device uses to authenticate the source of Internet Key Exchange (IKE) messages: • Certificate Based—Types of digital signatures, which are certificates that confirm the identity of the certificate holder. The following are the authentication methods for a certificate based: • rsa-signatures—Specifies that a public key algorithm, which supports encryption and digital signatures, is used. • dsa-signatures—Specifies that the Digital Signature Algorithm (DSA) is used. • ecdsa-signatures-256—Specifies that the Elliptic Curve DSA (ECDSA) using the 256-bit elliptic curve secp256r1, as specified in the Federal Information Processing Standard (FIPS) Digital Signature Standard (DSS) 186-3, is used. • ecdsa-signatures-384—Specifies that the ECDSA using the 384-bit elliptic curve secp384r1, as specified in the FIPS DSS 186-3, is used. • ecdsa-signatures-521—Specifies that the ECDSA using the 521-bit elliptic curve secp521r1 is used. NOTE: ecdsa-signatures-521 supports only SRX5000 line of devices with SPC3 card and junos-ike package installed. • Pre-shared Key (default method)—Specifies that a preshared key, which is a secret key shared between the two peers, is used during authentication to identify the peers to each other. The same key must be configured for each peer. This is the default method.

Table 190: Fields on the Create IPsec VPN Page *(Continued)*

Field	Action
Auto-create Firewall Policy	If you select Yes, a firewall policy is automatically between internal zone and tunnel interface zone with local protected networks as source address and remote protected networks as destination address. Another firewall policy will be created visa-versa. If you choose No, you don't have a firewall policy option. You need to manually create the required firewall policy to make this VPN work. NOTE: If you do not want to auto-create a firewall policy in the VPN workflow, then the protected network is hidden for dynamic routing in both local and remote gateway.
Remote Gateway	Displays the remote gateway icon in the topology. Click the icon to configure the remote gateway. The gateway identifies the remote peer with the IPsec VPN peers and defines the appropriate parameters for that IPsec VPN. For fields information, see Table 191 on page 653.
Local Gateway	Displays the local gateway icon in the topology. Click the icon to configure the local gateway. For fields information, see Table 193 on page 655.

Table 190: Fields on the Create IPsec VPN Page (Continued)

Field	Action
IKE and IPsec Settings	Configure the custom IKE or IPsec proposal and the custom IPsec proposal with recommended algorithms or values. For fields information, see Table 195 on page 660. NOTE: • J-Web supports only one custom IKE proposal and does not support the predefined proposal-set. Upon edit and save, J-Web deletes the predefined proposal set if configured. • On the remote gateway of the VPN tunnel, you must configure the same custom proposal and policy. • Upon edit, J-Web shows the first custom IKE and IPsec proposal when more than one custom proposal is configured.

Table 191: Fields on the Remote Gateway Page

Field	Action
Gateway is behind NAT	If enabled, the configured external IP address (IPv4 or IPv6) is referred to as the NAT device IP address.
IKE Identity	Select an option from the list to configure remote identity.
Host name	Enter a remote host name.
IPv4 Address	Enter a remote IPv4 address.
IPv6 Address	Enter a remote IPv6 address.

Table 191: Fields on the Remote Gateway Page (*Continued*)

Field	Action
Key ID	Enter a Key ID.
E-mail Address	Enter an e-mail address.
External IP Address	Enter the peer IPv4 or IPv6 address. You can create one primary peer network with up to four backups. You must enter one IPv4 or IPv6 address or you can enter up to five IP addresses separated by comma.
Protected Networks	When you select a routing mode, lists all the global address(es). Select the addresses from the Available column and then click the right arrow to move it to the Selected column. When the routing mode is: • Traffic Selector—The IP addresses will be used as remote IP in traffic selector configuration. • Static Routing: • Static route will be configured for the selected global address(es). • The tunnel interface (st0.x) of the local gateway will be used as the next-hop. • Dynamic Routing—Default value is any. You can also select specific global address(es). The selected value is configured as destination address in the firewall policy.
Add	Click +. The Create Global Address page appears. See Table 192 on page 655 for fields information.

Table 192: Fields on the Create Global Address Page

Field	Action
Subnet	Enter the subnet for IPv4 or IPv6 address.
Identifier	Enter a name for the global address.

Table 193: Fields on the Local Gateway Page

Field	Action
Gateway is behind NAT	Enable this option when the local gateway is behind a NAT device.
IKE Identity	Select an option from the list to configure local identity. When Gateway is behind NAT is enabled, you can configure an IPv4 or IPv6 address to reference the NAT device.
Host name	Enter a host name. NOTE: This option is available only if Gateway is behind NAT is disabled.
IPv4 Address	Enter an IPv4 address.
IPv6 Address	Enter an IPv6 address.
Key ID	Enter a Key ID. NOTE: This option is available only if Gateway is behind NAT is disabled.
E-mail Address	Enter an E-mail address. NOTE: This option is available only if Gateway is behind NAT is disabled.

Table 193: Fields on the Local Gateway Page (*Continued*)

Field	Action
External Interface	Select an outgoing interface from the list for IKE negotiations. The list contains all available IP addresses if more than one IP address is configured to the specified interface. The selected IP address will be configured as the local address under the IKE gateway.
Tunnel Interface	Select an interface from the list to bind it to the tunnel interface (route-based VPN). Click Add to add a new interface. The Create Tunnel Interface page appears. See Table 194 on page 659.
Router ID	Enter the routing device's IP address. NOTE: This option is available if the routing mode is Dynamic Routing - OSPF or BGP.
Area ID	Enter an area ID within the range of 0 to 4,294,967,295, where the tunnel interfaces of this VPN need to be configured. NOTE: This option is available if the routing mode is Dynamic Routing - OSPF.
Tunnel Interface Passive	Enable this option to bypass traffic of the usual active IP checks. NOTE: This option is available if the routing mode is Dynamic Routing - OSPF.
ASN	Enter the routing device's AS number. Use a number assigned to you by the NIC. Range: 1 through 4,294,967,295 (232 – 1) in plain-number format for 4-byte AS numbers. NOTE: This option is available if the routing mode is Dynamic Routing - BGP.

Table 193: Fields on the Local Gateway Page (*Continued*)

Field	Action
Neighbor ID	Enter IP address of a neighboring router. NOTE: This option is available if the routing mode is Dynamic Routing - BGP.
BGP Group Type	Select the type of BGP peer group from the list: - external—External group, which allows inter-AS BGP routing. - internal—Internal group, which allows intra-AS BGP routing. NOTE: This option is available if the routing mode is Dynamic Routing - BGP.
Peer ASN	Enter the neighbor (peer) autonomous system (AS) number. NOTE: This option is available if you choose external as BGP Group Type.
Import Policies	Select one or more routing policies from the list to routes being imported into the routing table from BGP. Click Clear All to clear the selected policies. NOTE: This option is available if the routing mode is Dynamic Routing - BGP.
Export Policies	Select one or more policies from the list to routes being exported from the routing table into BGP. Click Clear All to clear the selected policies. NOTE: This option is available if the routing mode is Dynamic Routing - BGP.

Table 193: Fields on the Local Gateway Page (*Continued*)

Field	Action
Local certificate	Select a local certificate identifier when the local device has multiple loaded certificates. NOTE: This option is available if the authentication method is Certificate Based. Click Add to generate a new certificate. Click Import to import a device certificate. For more information see Manage Device Certificates.
Trusted CA/Group	Select the certificate authority (CA) profile from list to associate it with the local certificate. NOTE: This option is available if the authentication method is Certificate Based. Click Add to add a new CA profile. For more information see Manage Trusted Certificate Authority.
Pre-shared Key	Enter the value of the preshared key. The key can be one of the following: • <code>ascii-text</code>—ASCII text key. • <code>hexadecimal</code>—Hexadecimal key. NOTE: This option is available if the authentication method is Pre-shared Key.
Protected Networks	Click + . The Create Protected Networks page appears.
Create Protected Networks	
Zone	Select a security zone from the list that will be used as a source zone in the firewall policy.
Global Address	Select the addresses from the Available column and then click the right arrow to move it to the Selected column.

Table 193: Fields on the Local Gateway Page *(Continued)*

Field	Action
Add	Click Add. The Create Global Address page appears. See Table 192 on page 655.
Edit	Select the protected network you want to edit and click on the pencil icon. The Edit Global Address page appears with editable fields.
Delete	Select the protected network you want to edit and click on the delete icon. The confirmation message pops up. Click Yes to delete.

Table 194: Fields on the Create Tunnel Interface Page

Field	Action
Interface Unit	Enter the logical unit number.
Description	Enter a description for the logical interface.
Zone	Select a zone for the logical interface from the list to use as a source zone in the firewall policy. Click Add to add a new zone. Enter zone name and description and click OK on the Create Security Zone page.
Routing Instance	Select a routing instance from the list.

IPv4

NOTE: This option is available only if you select routing mode as Dynamic Routing - OSPF or BGP.

Table 194: Fields on the Create Tunnel Interface Page (Continued)

Field	Action
IPv4 Address	Enter a valid IPv4 address.
Subnet Prefix	Enter a subnet mask for the IPv4 address.
IPv6	
NOTE: This option is available only if you select routing mode as Dynamic Routing - OSPF or BGP.	
IPv6 Address	Enter a valid IPv6 address.
Subnet Prefix	Enter a subnet mask for the network range. Once entered, the value is validated.

Table 195: IKE and IPsec Settings

Field	Action
IKE Settings	
IKE Version	Select the required IKE version, either v1 or v2 to negotiate dynamic security associations (SAs) for IPsec. Default value is v2.
IKE Mode	Select the IKE policy mode from the list: - aggressive—Take half the number of messages of main mode, has less negotiation power, and does not provide identity protection. - main—Use six messages, in three peer-to-peer exchanges, to establish the IKE SA. These three steps include the IKE SA negotiation, a Diffie-Hellman exchange, and authentication of the peer. Also provides identity protection.
Encryption Algorithm	Select the appropriate encryption mechanism from the list. Default value is aes-256-gcm.

Table 195: IKE and IPsec Settings (*Continued*)

Field	Action
Authentication Algorithm	Select the authentication algorithm from the list. For example, hmac-md5-96—Produces a 128-bit digest and hmac-sha1-96—Produces a 160-bit digest. NOTE: This option is available when the encryption algorithm is not gcm. NOTE: Starting in Junos OS 23.4R1 Release, J-Web supports SHA 512-bit authentication algorithm for junos-ike package installed devices.
DH group	A Diffie-Hellman (DH) exchange allows participants to generate a shared secret value. Select the appropriate DH group from the list. Default value is group19. NOTE: Starting in Junos OS 23.4R1 Release, J-Web supports group 15, group 16, and group 21 DH groups for junos-ike package installed devices.
Lifetime Seconds	Select a lifetime of an IKE security association (SA). Default: 28,800 seconds. Range: 180 through 86,400 seconds.
Dead Peer Detection	Enable this option to send dead peer detection requests regardless of whether there is outgoing IPsec traffic to the peer.
DPD Mode	Select one of the options from the list: • optimized—Send probes only when there is outgoing traffic and no incoming data traffic - RFC3706 (default mode). • probe-idle-tunnel—Send probes same as in optimized mode and also when there is no outgoing and incoming data traffic. • always-send—Send probes periodically regardless of incoming and outgoing data traffic.
DPD Interval	Select an interval in seconds to send dead peer detection messages. The default interval is 10 seconds. Range is 2 to 60 seconds.
DPD Threshold	Select a number from 1 to 5 to set the failure DPD threshold. This specifies the maximum number of times the DPD messages must be sent when there is no response from the peer. The default number of transmissions is 5 times.

Table 195: IKE and IPsec Settings *(Continued)*

Field	Action
Advance Configuration (Optional)	
General IKE ID	Enable this option to accept peer IKE ID.
IKEv2 Re-authentication	Configure the reauthentication frequency to trigger a new IKEv2 reauthentication.
IKEv2 Re-fragmentation	This option is enabled by default.
IKEv2 Re-fragment Size	Select the maximum size, in bytes, of an IKEv2 message before it is split into fragments. The size applies to both IPv4 and IPv6 messages. Range: 570 to 1320 bytes. Default values are: • IPv4 messages—576 bytes. • IPv6 messages—1280 bytes.
NAT-T	Enable this option for IPsec traffic to pass through a NAT device. NAT-T is an IKE phase 1 algorithm that is used when trying to establish a VPN connection between two gateway devices, where there is a NAT device in front of one of the SRX Series Firewalls.
NAT Keep Alive	Select appropriate keepalive interval in seconds. Range: 1 to 300. If the VPN is expected to have large periods of inactivity, you can configure keepalive values to generate artificial traffic to keep the session active on the NAT devices.
IPsec Settings	
Protocol	Select either Encapsulation Security Protocol (ESP) or Authentication Header (AH) protocol from the list to establish VPN. Default value is ESP.

Table 195: IKE and IPsec Settings (Continued)

Field	Action
Encryption Algorithm	Select the encryption method. Default value is aes-256-gcm. NOTE: This option is available only for the ESP protocol.
Authentication Algorithm	Select the IPsec authentication algorithm from the list. For example, hmac-md5-96—Produces a 128-bit digest and hmac-sha1-96—Produces a 160-bit digest. NOTE: This option is available when the encryption algorithm is not gcm. NOTE: Starting in Junos OS 23.4R1 Release, J-Web supports HMAC-SHA 384 and HMAC-SHA 512 authentication algorithm for junos-ike package installed devices.
Perfect Forward Secrecy	Select Perfect Forward Secrecy (PFS) from the list. The device uses this method to generate the encryption key. Default value is group19. PFS generates each new encryption key independently from the previous key. The higher numbered groups provide more security, but require more processing time. NOTE: group15, group16, and group21 support only the SRX5000 line of devices with an SPC3 card and junos-ike package installed. NOTE: Starting in Junos OS 23.4R1 Release, J-Web supports group 15, group 16, and group 21 PFS for junos-ike package installed devices.
Lifetime Seconds	Select the lifetime (in seconds) of an IPsec security association (SA). When the SA expires, it is replaced by a new SA and security parameter index (SPI) or terminated. Default is 3,600 seconds. Range: 180 through 86,400 seconds.
Lifetime Kilobytes	Select the lifetime (in kilobytes) of an IPsec SA. Default is 128kb. Range: 64 through 4294967294.
Establish Tunnel	Enable this option to establish the IPsec tunnel. IKE is activated immediately (default value) after a VPN is configured and the configuration changes are committed.
Advanced Configuration	
VPN Monitor	Enable this option to use it in a destination IP address. NOTE: This option is not available for Traffic Selectors routing mode.

Table 195: IKE and IPsec Settings *(Continued)*

Field	Action
Destination IP	Enter the destination of the Internet Control Message Protocol (ICMP) pings. The device uses the peer's gateway address by default. NOTE: This option is not available for Traffic Selectors routing mode.
Optimized	Enable this option for the VPN object. If enabled, the SRX Series Firewall only sends ICMP echo requests (pings) when there is outgoing traffic and no incoming traffic from the configured peer through the VPN tunnel. If there is incoming traffic through the VPN tunnel, the SRX Series Firewall considers the tunnel to be active and does not send pings to the peer. This option is disabled by default. NOTE: This option is not available for Traffic Selectors routing mode.
Source Interface	Select the source interface for ICMP requests from the list. If no source interface is specified, the device automatically uses the local tunnel endpoint interface. NOTE: This option is not available for Traffic Selectors routing mode.
Verify-path	Enable this option to verify the IPsec datapath before the secure tunnel (st0) interface is activated and route(s) associated with the interface are installed in the Junos OS forwarding table. This option is disabled by default. NOTE: This option is not available for Traffic Selectors routing mode.
Destination IP	Enter the destination IP address. Original, untranslated IP address of the peer tunnel endpoint that is behind a NAT device. This IP address must not be the NAT translated IP address. This option is required if the peer tunnel endpoint is behind a NAT device. The verify-path ICMP request is sent to this IP address so that the peer can generate an ICMP response. NOTE: This option is not available for Traffic Selectors routing mode.
Packet size	Enter the size of the packet that is used to verify an IPsec datapath before the st0 interface is brought up. Range: 64 to 1350 bytes. Default value is 64 bytes. NOTE: This option is not available for Traffic Selectors routing mode.

Table 195: IKE and IPsec Settings (*Continued*)

Field	Action
Anti Replay	IPsec protects against VPN attack by using a sequence of numbers built into the IPsec packet—the system does not accept a packet with the same sequence number. This option is enabled by default. The Anti-Replay checks the sequence numbers and enforce the check, rather than just ignoring the sequence numbers. Disable Anti-Replay if there is an error with the IPsec mechanism that results in out-of-order packets, which prevents proper functionality.
Install Interval	Select the maximum number of seconds to allow for the installation of a rekeyed outbound security association (SA) on the device. Select a value from 1 to 10.
Idle Time	Select the idle time interval. The sessions and their corresponding translations time out after a certain period of time if no traffic is received. Range is 60 to 999999 seconds.
DF Bit	Select how the device handles the Don't Fragment (DF) bit in the outer header: • clear—Clear (disable) the DF bit from the outer header. This is the default. • copy—Copy the DF bit to the outer header. • set—Set (enable) the DF bit in the outer header.
Copy Outer DSCP	This option enabled by default. This enables copying of Differentiated Services Code Point (DSCP) (outer DSCP+ECN) from the outer IP header encrypted packet to the inner IP header plain text message on the decryption path. Enabling this feature, after IPsec decryption, clear text packets can follow the inner CoS (DSCP+ECN) rules.
ICMP big packet warning	Use this option to enable or disable sending ICMP packet too big notifications for IPv6 packets. NOTE: This option is available only for junos-ike package installed devices.
ESN	Enable this to allow IPsec to use 64-bit sequence number. If ESN is not enabled, 32-bit sequence number will be used by default. Ensure ESN is not enabled when anti-replay is disabled. NOTE: This option is available only for junos-ike package installed devices.

Table 195: IKE and IPsec Settings (*Continued*)

Field	Action
Tunnel MTU	Enter the maximum transmit packet size for IPsec tunnels. Range: 256 through 9192. NOTE: This option is available only for junos-ike package installed devices.

RELATED DOCUMENTATION

[About the IPsec VPN Page | 642](#)

[IPsec VPN Global Settings | 645](#)

[Edit an IPsec VPN | 702](#)

[Delete an IPsec VPN | 703](#)

Create a Remote Access VPN—Juniper Secure Connect

You are here: **Network > VPN > IPsec VPN.**

Juniper Secure Connect is Juniper's client-based SSL-VPN solution that offers secure connectivity for your network resources.

Juniper Secure Connect provides secure remote access for the users to connect to the corporate networks and resources remotely using the Internet. Juniper Secure Connect downloads the configuration from SRX Services devices and chooses the most effective transport protocols during connection establishment to deliver a great administrator and user experience.

To create a remote access VPN for Juniper secure connect:

1. Choose **Create VPN > Remote Access > Juniper Secure Connect** on the upper right-side of the IPsec VPN page.

The Create Remote Access (Juniper Secure Connect) page appears.

NOTE: Starting in Junos OS Release 23.2R1, when you create or edit the Juniper Secure Connect VPNs, the ike-user-type is group-ike-id if the Junos-ike package is already installed.

This helps to enable you with the multi device access. This is not supported for SRX300 line of Firewalls and SRX550HM Firewall.

2. Complete the configuration according to the guidelines provided in [Table 196 on page 667](#) through [Table 201 on page 684](#).

The VPN connectivity will change from grey to blue line in the topology to show that the configuration is complete.

3. Click **Save** to complete Secure Connect VPN Configuration and associated policy if you have selected the auto policy creation option.

If you want to discard your changes, click **Cancel**.

Table 196: Fields on the Create Remote Access (Juniper Secure Connect) Page

Field	Action
Name	Enter a name for the remote access connection. This name will be displayed as the end users realm name in the Juniper Secure Connect Client.
Description	Enter a description. This description will be used for the IKE and IPsec proposals, policies, remote access profile, client configuration, and NAT rule set. During edit the IPsec policy description will be displayed. IPsec policy and remote access profile descriptions will be updated.
Routing Mode	This option is disabled for the remote access. Default mode is Traffic Selector (Auto Route Insertion).

Table 196: Fields on the Create Remote Access (Juniper Secure Connect) Page (*Continued*)

Field	Action
Authentication Method	Select an authentication method from the list that the device uses to authenticate the source of Internet Key Exchange (IKE) messages: • EAP-MSCHAPv2 (Username & Password)—Uses the user account credentials verified by the RADIUS server (for external user authentication) to authenticate for network access. • EAP-TLS (Certificate)—Uses the TLS public key certificate authentication mechanism within EAP to provide mutual client-server and server-client authentication. With EAP-TLS, both the client and the server must be assigned a digital certificate signed by a Certificate Authority (CA) that they both trust. NOTE: Starting in Junos OS Release 23.1R1, EAP-TLS is not available in Juniper Secure Connect > Remote User. • Pre-shared Key (Username & Password)—A secret key shared between the two peers, is used during authentication to identify the peers to each other. NOTE: Starting in Junos OS Release 23.2R1, when you create or edit the Juniper Secure Connect VPNs, the ike-user-type is group-ike-id. This helps to enable you with the multi device access. This is not supported for SRX300 line of Firewalls and SRX550HM Firewall.

Table 196: Fields on the Create Remote Access (Juniper Secure Connect) Page *(Continued)*

Field	Action
Auto-create Firewall Policy	If you select Yes, a firewall policy is automatically created between internal zone and tunnel interface zone with local protected networks as source address and remote protected networks as destination address. Another firewall policy will be created visa-versa. If you choose No, you don't have a firewall policy option. You need to manually create the required firewall policy to make this VPN work. NOTE: If you do not want to auto-create a firewall policy in the VPN workflow, then the protected network is hidden for dynamic routing in both local and remote gateway.
Remote User	Displays the remote user icon in the topology. Click the icon to configure the Juniper Secure Connect client settings. For more information on the fields, see Table 197 on page 670. NOTE: Starting in Junos OS 23.1R1 Release, J-Web displays the remote user in FQDN or FQDN/Realm format if connection profile is configured. If not configured, J-Web displays the external interface IP (for default profile) or external interface IP/VPN-Name (for non-default profile).
Local Gateway	Displays the local gateway icon in the topology. Click the icon to configure the local gateway. For more information on the fields, see Table 198 on page 677.

Table 196: Fields on the Create Remote Access (Juniper Secure Connect) Page (Continued)

Field	Action
IKE and IPsec Settings	Configure the custom IKE or IPsec proposal and the custom IPsec proposal with recommended algorithms or values. For more information on the fields, see Table 201 on page 684. NOTE: • J-Web supports only one custom IKE proposal and does not support the predefined proposal-set. Upon edit and save, J-Web deletes the predefined proposal set if configured. • On the remote gateway of the VPN tunnel, you must configure the same custom proposal and policy. • Upon edit, J-Web shows the first custom IKE and IPsec proposal when more than one custom proposal is configured.

Table 197: Fields on the Remote User Page

Field	Action
Default Profile	Enable this option to use the configured VPN name as remote access default profile. NOTE: • Starting in Junos OS 23.1R1 Release, default profile is deprecated in J-Web. • The field displays the configured value, if default profile is configured under VPN > IPsec VPN > Global Settings > Remote Access VPN.

Table 197: Fields on the Remote User Page (*Continued*)

Field	Action
Connection Mode	Select one of the following options from the list to establish the Juniper Secure Connect client connection: • Manual—You need manually connect to the VPN tunnel every time you log in. • Always—You are automatically connected to the VPN tunnel every time you log in. The default connection mode is Manual.
SSL VPN	Enable this option to establish SSL VPN connection from the Juniper Secure Connect Client to the SRX Series Firewall. By default, this option is enabled. NOTE: This is a fallback option when IPsec ports are not reachable.
Biometric authentication	Enable this option to authenticate the client system using unique configured methods. An authentication prompt is displayed when you connect in the client system. The VPN connection will only be initiated after successful authentication through the method configured for <i>Windows Hello</i> (fingerprint recognition, face recognition, PIN entry, and so on). <i>Windows Hello</i> must be preconfigured on the client system if the Biometric authentication option is enabled.

Table 197: Fields on the Remote User Page *(Continued)*

Field	Action
Dead Peer Detection	Enable the dead peer detection (DPD) option to allow the Juniper Secure Connect client to detect if the SRX Series Firewall is reachable. Disable this option to allow the Juniper Secure Connect client to detect till the SRX Series Firewall connection reachability is restored. This option is enabled by default.
DPD Interval	Enter the amount of time that the peer waits for traffic from its destination peer before sending a dead-peer-detection (DPD) request packet. The Range is 2 through 60 seconds and default is 60 seconds.
DPD Threshold	Enter the maximum number of unsuccessful dead peer detection (DPD) requests to be sent before the peer is considered unavailable. The Range is 1 through 5 and default is 5.
Certificates	Enable Certificates to configure certificate options on Secure Client Connect. NOTE: This option is available only if you select the EAP-TLS (Certificate) authentication method.
Expiry Warning	Enable this option to display the certificate expiry warning on the Secure Connect Client. This option is enabled by default. NOTE: This option is available only if you enable Certificates.

Table 197: Fields on the Remote User Page (*Continued*)

Field	Action
Warning Interval	Enter the interval (days) at which the warning to be displayed. Range is 1 through 90. Default value is 60. NOTE: This option is available only if you enable Certificates.
Pin Req Per Connection	Enable this option to enter the certificate pin on every connection. This option is enabled by default. NOTE: This option is available only if you enable Certificates.
Save username	Starting in Junos OS Release 22.1R1, you can enable this option to save the remote username.
Save password	Starting in Junos OS Release 22.1R1, you can enable this option to save both the remote username and password.
Windows Logon	Enable this option to provide users to securely log on to the Windows domain before logging on to the Windows system. The client supports domain logon using a credential service provider after establishing a VPN connection to the company network.
Domain Name	Enter the system domain name on to which the Users Machine logs.

Table 197: Fields on the Remote User Page (*Continued*)

Field	Action
Mode	Select one of the following options from the list to log on to Windows domain. • Manual—You must manually enter your logon data on the Windows logon screen. • Automatic—The client software transfers the data entered here to the Microsoft logon interface (Credential Provider) without your action.
Disconnect at Logoff	Enable this option to shut down the connection when the system switches to hibernation or standby mode. When the system resumes from hibernation or standby mode the connection has to be re-established.
Flush Credential at Logoff	Enable this option to delete username and password from the cache. You must reenter the username and password.
Lead Time Duration	Enter the lead time duration to initialize time between network logon and domain logon. After the connection is set up, the Windows logon will only be executed after the initialization time set here has elapsed.
EAP Authentication	Enable this option to execute EAP authentication prior to the destination dialog in the credential provider. Then, system will ask for the necessary PIN, regardless of whether EAP will be required for subsequent dial-in. If this option is disabled, then EAP authentication will be executed after the destination selection.

Table 197: Fields on the Remote User Page (*Continued*)

Field	Action
Auto Dialog Open	Enable this option to select whether a dialog should open automatically for connection establishment to a remote domain. If this option is disabled, then the password and PIN for the client will only be queried after the Windows logon.
Multi device access	NOTE: Starting in Junos OS Release 23.2R1, J-Web supports Multi Device Access option for Remote User page. This option is not supported for SRX300 line of Firewalls and SRX550HM Firewall. Enable this option to connect you from multiple devices. NOTE: To use multi device access, the junos-ike package must be installed on your SRX Series Firewall. Run the following command on your SRX Series Firewall to install the junos-ike package: <pre>request system software add optional: //junos-ike.tgz</pre>

Table 197: Fields on the Remote User Page (*Continued*)

Field	Action
Application bypass	Enable this option to configure which applications, domains, or both can bypass the VPN tunnel. You can select the configured application bypass profiles in the grid view. To add a new application bypass term: 1. Click the + icon. 2. Enter the following details: • Name—Enter a name for the term. • Description—Enter application bypass term description. • Protocol—Select the protocol available from the list. The following options are available: • TCP & UDP—Bypasses both TCP and UDP traffic. • TCP—Bypasses only TCP traffic. • UDP—Bypasses only UDP traffic. By default, TCP & UDP is selected. • Domain Type—Select the domain type available from the list. The following options are available: • Contains—Any domain name (for example, abc.com). • FQDN—Domain name contains the fully qualified domain name (for example, www.abc.com). • Wildcard—Domain name contains any subdomain (for example, .abc.com).

Table 197: Fields on the Remote User Page (Continued)

Field	Action
	When wildcard is selected, “.” is prepopulated in the domain value field by default. Domain Value—Enter the domain name to bypass VPN tunnel. 3. Click the tick icon to save the changes and create application bypass term. Click X to discard. 4. Click the edit icon available above the grid to edit the application bypass term and click the delete icon to delete any application bypass term. NOTE: When editing the remote user, if you toggle off Application Bypass, the configured Application bypass terms under the remote user will be deleted.
Compliance	NOTE: Starting in Junos OS Release 23.2R1, J-Web supports Compliance option for Remote User page. This option is not supported for SRX300 line of Firewalls and SRX550HM Firewall. Select the compliance rule from the list which will be validated by the SRX Series Firewall to establish a VPN tunnel before a user logs in. To create a new compliance rule, click Create. The Create Pre-Logon Compliance page appears. For the field information, see "Create Pre-Logon Compliance" on page 714.

Table 198: Fields on the Local Gateway Page

Field	Action
Gateway is behind NAT	Enable this option when the local gateway is behind a NAT device.

Table 198: Fields on the Local Gateway Page *(Continued)*

Field	Action
NAT IP Address	Enter the public (NAT) IP address of the SRX Series Firewall. NOTE: This option is available only when Gateway is behind NAT is enabled. You can configure an IPv4 address to reference the NAT device.
External Interface	Select an outgoing interface from the list for which the client will connect to. The list contains all available IP addresses if more than one IPv4 or IPv6 address is configured to the specified interface. The selected IP address will be configured as the local address under the IKE gateway. NOTE: Starting in Junos OS Release 23.4R1, J-Web supports IPv6 address for the junos-ike package installed devices.

Table 198: Fields on the Local Gateway Page (*Continued*)

Field	Action
Connection profile	This is a mandatory field. Enter the connection profile in the format of IP address or FQDN or FQDN/Realm. Connection profile can be any string and can have periods and slashes; 255 characters maximum. IKE ID is automatically derived from connection profile. NOTE: - Starting in Junos OS 23.1R1 Release, IKE ID will be automatically derived using connection profile. If system hostname is configured, IKE ID will be configured as <configured-hostname>@connection-profile else it will be no-config-hostname@connection-profile. If connection profile has realm (/hr), while forming IKE ID, '/' will be replaced with '..' - For existing VPN where remote access profile name does not contain a dot (.), connection profile will be displayed as external-IP for default profile or external-IP/VPN-Name for non-default profile. Once you update existing VPN, the default profile name is updated with the connection profile value. - If you change the connection profile value, IKE ID will be auto updated.
Tunnel Interface	Select an interface from the list for the client to connect to. Click Add to add a new interface. The Create Tunnel Interface page appears. For more information on creating a new tunnel interface, see Table 199 on page 683. Click Edit to edit the selected tunnel interface.

Table 198: Fields on the Local Gateway Page (*Continued*)

Field	Action
Pre-shared Key	Enter one of the following values of the preshared key: • <code>ascii-text</code>—ASCII text key. • <code>hexadecimal</code>—Hexadecimal key. NOTE: This option is available if the authentication method is Pre-shared Key.
Local certificate	Select a local certificate from the list. Local certificate lists only the RSA certificates. NOTE: This option is available only if you select the EAP-TLS (Certificate) authentication method. Starting in Junos OS 23.1R1 Release, all device certificates are listed in local certificates. For example, Let's Encrypt and ACME certificates. For more information on device certificates, see "Create a Device Certificate" on page 255
User Authentication	This field is mandatory. Select the authentication profile from the list that will be used to authenticate user accessing the remote access VPN. Click Add to create a new Profile. For more information on creating a new access profile, see "Add an Access Profile" on page 1080.

Table 198: Fields on the Local Gateway Page *(Continued)*

Field	Action
SSL VPN Profile	Select the SSL VPN Profile from the list that will be used to terminate the remote access connections. To create a new SSL VPN profile: 1. Click Add. 2. Enter the following details: • Name—Enter the name for an SSL VPN profile. • Logging—Enable this option to log for SSL VPN. • SSL Termination Profile—Select an SSL termination profile from the list. To add a new SSL termination profile: a. Click Add. The Create SSL Termination Profile page appears. b. Enter the following details: • Name—Enter a name for the SSL termination profile. • Server Certificate—Select a server certificate from the list. To add a certificate, click Add. For more information on adding a device certificate, see No Link Title. To import a certificate, click Import. For more information on importing a device certificate, see No Link Title. • Click OK. c. Click OK. 3. Click OK.

Table 198: Fields on the Local Gateway Page (*Continued*)

Field	Action
Source NAT Traffic	This option is enabled by default. All traffic from the Juniper Secure Connect client is NATed to the selected interface by default. If disabled, you must ensure that you have a route from your network pointing to the SRX Series Firewalls for handling the return traffic correctly.
Interface	Select an interface from the list through which the source NAT traffic pass through.
Protected Networks	Click + . The Create Protected Networks page appears.
Create Protected Networks	
Zone	Select a security zone from the list that will be used as a source zone in the firewall policy.
Global Address	Select the addresses from the Available column and then click the right arrow to move it to the Selected column. Click Add to select the networks the Client can connect to. The Create Global Address page appears. For more information on the fields, see Table 200 on page 683.
Edit	Select the protected network you want to edit and click on the pencil icon. The Edit Protected Networks page appears with editable fields.

Table 198: Fields on the Local Gateway Page *(Continued)*

Field	Action
Delete	Select the protected network you want to edit and click on the delete icon. The confirmation message pops up. Click Yes to delete the protected network.

Table 199: Fields on the Create Tunnel Interface Page

Field	Action
Interface Unit	Enter the logical unit number.
Description	Enter a description for the logical interface.
Zone	Select a zone from the list to add it to the tunnel interface. This zone is used in the auto-creation of the firewall policy. Click Add to add a new zone. Enter zone name and description and click OK on the Create Security Zone page.
Routing Instance	Select a routing instance from the list. NOTE: The default routing instance, primary, refers to the main inet.0 routing table in the logical system.

Table 200: Fields on the Create Global Address Page

Field	Action
Subnet	Enter the subnet for IPv4 or IPv6 address. NOTE: Starting in Junos OS Release 23.4R1, J-Web supports IPv6 address for the junos-ike package installed devices.

Table 200: Fields on the Create Global Address Page (Continued)

Field	Action
Identifier	Enter a name for the global address.

Table 201: IKE and IPsec Settings

Field	Action

IKE Settings

NOTE: The following parameters are generated automatically and are not displayed in the J-Web UI:

- If the authentication method is Pre-Shared Key, the IKE version is v1, ike-user-type is shared-ike-id, and mode is Aggressive.
- If the authentication method is Certificate Based, the IKE version is v2, ike-user-type is shared-ike-id, and mode is Main.
- Starting in Junos OS Release 23.2R1, the ike-user-type is group-ike-id. This helps to enable you with the multi device access. You can edit and save the existing VPN to convert to group-ike-id.

This is not supported for SRX300 line of Firewalls and SRX550HM Firewall.

Encryption Algorithm	Select the appropriate encryption mechanism from the list. Default value is AES-CBC 256-bit.
Authentication Algorithm	Select the authentication algorithm from the list. For example, SHA 256-bit. NOTE: Starting in Junos OS 23.4R1 Release, J-Web supports SHA 512-bit authentication algorithm for junos-ike package installed devices.
DH group	A Diffie-Hellman (DH) exchange allows participants to generate a shared secret value. Select the appropriate DH group from the list. Default value is group19. NOTE: Starting in Junos OS 23.4R1 Release, J-Web supports group 15, group 16, and group 21 DH groups for junos-ike package installed devices.
Lifetime Seconds	Select a lifetime duration (in seconds) of an IKE security association (SA). Default value is 28,800 seconds. Range: 180 through 86,400 seconds.

Table 201: IKE and IPsec Settings (Continued)

Field	Action
Dead Peer Detection	Enable this option to send dead peer detection requests regardless of whether there is outgoing IPsec traffic to the peer.
DPD Mode	Select one of the options from the list: • optimized—Send probes only when there is outgoing traffic and no incoming data traffic - RFC3706 (default mode). • probe-idle-tunnel—Send probes same as in optimized mode and also when there is no outgoing and incoming data traffic. • always-send—Send probes periodically regardless of incoming and outgoing data traffic.
DPD Interval	Select an interval (in seconds) to send dead peer detection messages. The default interval is 10 seconds. Range is 2 to 60 seconds.
DPD Threshold	Select a number from 1 to 5 to set the failure DPD threshold. This specifies the maximum number of times the DPD messages must be sent when there is no response from the peer. The default number of transmissions is 5 times.

Advance Configuration (Optional)

NAT-T	Enable this option for IPsec traffic to pass through a NAT device. NAT-T is an IKE phase 1 algorithm that is used when trying to establish a VPN connection between two gateway devices, where there is a NAT device in front of one of the SRX Series Firewalls.
NAT Keep Alive	Select appropriate keepalive interval in seconds. Range: 1 to 300. If the VPN is expected to have large periods of inactivity, you can configure keepalive values to generate artificial traffic to keep the session active on the NAT devices.

Table 201: IKE and IPsec Settings (*Continued*)

Field	Action
IKE Connection Limit	Enter the number of concurrent connections that the VPN profile supports. Range is 1 through 4294967295. When the maximum number of connections is reached, no more remote access user (VPN) endpoints attempting to access an IPsec VPN can begin Internet Key Exchange (IKE) negotiations.
IKEv2 Fragmentation	This option is enabled by default. IKEv2 fragmentation splits a large IKEv2 message into a set of smaller ones so that there is no fragmentation at the IP level. Fragmentation takes place before the original message is encrypted and authenticated, so that each fragment is separately encrypted and authenticated. NOTE: This option is available if the authentication method is Certificated Based.
IKEv2 Fragment Size	Select the maximum size, in bytes, of an IKEv2 message before it is split into fragments. The size applies to IPv4 message. Range: 570 to 1320 bytes. Default value is 576 bytes. NOTE: This option is available if the authentication method is Certificated Based.
IPsec Settings NOTE: The authentication method is Pre-Shared Key or Certificate Based, it automatically generates protocol as ESP.	
Encryption Algorithm	Select the encryption method. Default value is AES-GCM 256-bit.
Authentication Algorithm	Select the IPsec authentication algorithm from the list. For example, HMAC-SHA-256-128. NOTE: This option is available when the encryption algorithm is not gcm. NOTE: Starting in Junos OS 23.4R1 Release, J-Web supports HMAC-SHA 384 and HMAC-SHA 512 authentication algorithm for junos-ike package installed devices.

Table 201: IKE and IPsec Settings *(Continued)*

Field	Action
Perfect Forward Secrecy	Select Perfect Forward Secrecy (PFS) from the list. The device uses this method to generate the encryption key. Default value is group19. PFS generates each new encryption key independently from the previous key. The higher numbered groups provide more security, but require more processing time. NOTE: group15, group16, and group21 support only the SRX5000 line of devices with an SPC3 card and junos-ike package installed. NOTE: Starting in Junos OS 23.4R1 Release, J-Web supports group 15, group 16, and group 21 PFS for junos-ike package installed devices.
Lifetime Seconds	Select the lifetime (in seconds) of an IPsec security association (SA). When the SA expires, it is replaced by a new SA and security parameter index (SPI) or terminated. Default is 3,600 seconds. Range: 180 through 86,400 seconds.
Lifetime Kilobytes	Select the lifetime (in kilobytes) of an IPsec SA. Default is 256kb. Range: 64 through 4294967294.
Advanced Configuration	
Anti Replay	IPsec protects against VPN attack by using a sequence of numbers built into the IPsec packet—the system does not accept a packet with the same sequence number. This option is enabled by default. The Anti-Replay checks the sequence numbers and enforce the check, rather than just ignoring the sequence numbers. Disable Anti-Replay if there is an error with the IPsec mechanism that results in out-of-order packets, which prevents proper functionality.
Install Interval	Select the maximum number of seconds to allow for the installation of a rekeyed outbound security association (SA) on the device. Select a value from 1 to 10 seconds.
Idle Time	Select the idle time interval. The sessions and their corresponding translations time out after a certain period of time if no traffic is received. Range is 60 to 999999 seconds.

Table 201: IKE and IPsec Settings *(Continued)*

Field	Action
DF Bit	Select how the device handles the Don't Fragment (DF) bit in the outer header: • clear—Clear (disable) the DF bit from the outer header. This is the default. • copy—Copy the DF bit to the outer header. • set—Set (enable) the DF bit in the outer header.
Copy Outer DSCP	This option enabled by default. This enables copying of Differentiated Services Code Point (DSCP) (outer DSCP+ECN) from the outer IP header encrypted packet to the inner IP header plain text message on the decryption path. Enabling this feature, after IPsec decryption, clear text packets can follow the inner CoS (DSCP+ECN) rules.
ICMP big packet warning	Use this option to enable or disable sending ICMP packet too big notifications for IPv6 packets. NOTE: This option is available only for junos-ike package installed devices.
ESN	Enable this to allow IPsec to use 64-bit sequence number. If ESN is not enabled, 32-bit sequence number will be used by default. Ensure ESN is not enabled when anti-replay is disabled. NOTE: This option is available only for junos-ike package installed devices.
Tunnel MTU	Enter the maximum transmit packet size for IPsec tunnels. Range: 256 through 9192. NOTE: This option is available only for junos-ike package installed devices.

RELATED DOCUMENTATION

[About the IPsec VPN Page | 642](#)
[IPsec VPN Global Settings | 645](#)
[Edit an IPsec VPN | 702](#)
[Delete an IPsec VPN | 703](#)

Create a Remote Access VPN—NCP Exclusive Client

You are here: **Network > VPN > IPsec VPN.**

The NCP Exclusive Remote Access Client is part of the NCP Exclusive Remote Access solution for Juniper SRX Series Gateways. The VPN client is only available with NCP Exclusive Remote Access Management. Use the NCP Exclusive Client to establish secure, IPsec-based data links from any location when connected with SRX Series Gateways.

To create a remote access VPN for Juniper secure connect:

1. Choose **Create VPN > Remote Access > NCP Exclusive Client** on the upper right-side of the IPsec VPN page.

The Create Remote Access (NCP Exclusive Client) page appears.

2. Complete the configuration according to the guidelines provided in [Table 202 on page 689](#) through [Table 206 on page 697](#).

The VPN connectivity will change from grey to blue line in the topology to show that the configuration is complete.

3. Click **Save** to save the changes.

If you want to discard your changes, click **Cancel**.

Table 202: Fields on the Create Remote Access (NCP Exclusive Client) Page

Field	Action
Name	Enter a name for the remote access connection. This name will be displayed as the end users connection name in the NCP exclusive client.
Description	Enter a description. This description will be used for the IKE and IPsec proposals, policies, remote access profile, client configuration, and NAT rule set. During edit the IPsec policy description will be displayed. IPsec policy and remote access profile descriptions will be updated.
Routing Mode	This option is disabled for the remote access. Default mode is Traffic Selector (Auto Route Insertion).

Table 202: Fields on the Create Remote Access (NCP Exclusive Client) Page *(Continued)*

Field	Action
Authentication Method	Select an authentication method from the list that the device uses to authenticate the source of Internet Key Exchange (IKE) messages: • EAP Based—EAP-MSCHAPv2 uses the user account credentials verified by the RADIUS server (for external user authentication) to authenticate network access. • Pre-shared Key (Username & Password)—A secret key shared between the two peers, is used during authentication to identify the peers to each other.
Auto-create Firewall Policy	If you select Yes, a firewall policy is automatically created between internal zone and tunnel interface zone with local protected networks as source address and remote protected networks as destination address. Another firewall policy will be created visa-versa. If you choose No, you don't have a firewall policy option. You need to manually create the required firewall policy to make this VPN work. NOTE: If you do not want to auto-create a firewall policy in the VPN workflow, then the protected network is hidden for dynamic routing in both local and remote gateway.
Remote User	Displays the remote user icon in the topology. This option is disabled.
Local Gateway	Displays the local gateway icon in the topology. Click the icon to configure the local gateway. For more information on the fields, see Table 203 on page 691.

Table 202: Fields on the Create Remote Access (NCP Exclusive Client) Page *(Continued)*

Field	Action
IKE and IPsec Settings	Configure the custom IKE or IPsec proposal and the custom IPsec proposal with recommended algorithms or values. For more information on the fields, see Table 206 on page 697. NOTE: • J-Web supports only one custom IKE proposal and does not support the predefined proposal-set. Upon edit and save, J-Web deletes the predefined proposal set if configured. • On the remote gateway of the VPN tunnel, you must configure the same custom proposal and policy. • Upon edit, J-Web shows the first custom IKE and IPsec proposal when more than one custom proposal is configured.

Table 203: Fields on the Local Gateway Page

Field	Action
Gateway is behind NAT	Enable this option when the local gateway is behind a NAT device.
NAT IP Address	Enter the public (NAT) IP address of the SRX Series Firewall. NOTE: This option is available only when Gateway is behind NAT is enabled. You can configure an IPv4 address to reference the NAT device.
IKE ID	This field is mandatory. Enter the IKE ID in the format user@example.com.

Table 203: Fields on the Local Gateway Page (*Continued*)

Field	Action
External Interface	Select an outgoing interface from the list for which the client will connect to. The list contains all available IP addresses if more than one IPv4 address is configured to the specified interface. The selected IP address will be configured as the local address under the IKE gateway.
Tunnel Interface	Select an interface from the list for the client to connect to. Click Add to add a new interface. The Create Tunnel Interface page appears. For more information on creating a new tunnel interface, see Table 204 on page 696. Click Edit to edit the selected tunnel interface.
Pre-shared Key	Enter one of the following values of the preshared key: • <code>ascii-text</code>—ASCII text key. • <code>hexadecimal</code>—Hexadecimal key. NOTE: This option is available if the authentication method is Pre-shared Key.
Local certificate	Select a local certificate from the list. Local certificate lists only the RSA certificates. To add a certificate, click Add. For more information on adding a device certificate, see No Link Title. To import a certificate, click Import. For more information on importing a device certificate, see No Link Title. NOTE: This option is available if the authentication method is Certificated Based.

Table 203: Fields on the Local Gateway Page (*Continued*)

Field	Action
Trusted CA/Group	Select a trusted Certificate Authority/group profile from the list. To add a CA profile, click Add CA Profile. For more information on adding a CA profile, see No Link Title. NOTE: This option is available if the authentication method is Certificated Based.
User Authentication	This field is mandatory. Select the authentication profile from the list that will be used to authenticate user accessing the remote access VPN. Click Add to create a new Profile. For more information on creating a new access profile, see "Add an Access Profile" on page 1080.

Table 203: Fields on the Local Gateway Page *(Continued)*

Field	Action
SSL VPN Profile	Select the SSL VPN Profile from the list that will be used to terminate the remote access connections. To create a new SSL VPN profile: 1. Click Add. 2. Enter the following details: • Name—Enter the name for an SSL VPN profile. • Logging—Enable this option to log for SSL VPN. • SSL Termination Profile—Select an SSL termination profile from the list. To add a new SSL termination profile: a. Click Add. b. Enter the following details: • Name—Enter a name for the SSL termination profile. • Server Certificate—Select a server certificate from the list. To add a certificate, click Add. For more information on adding a device certificate, see No Link Title. To import a certificate, click Import. For more information on importing a device certificate, see No Link Title. • Click OK. c. Click OK. 3. Click OK.

Table 203: Fields on the Local Gateway Page (*Continued*)

Field	Action
Source NAT Traffic	This option is enabled by default. All traffic from the Juniper Secure Connect client is NATed to the selected interface by default. If disabled, you must ensure that you have a route from your network pointing to the SRX Series Firewalls for handling the return traffic correctly.
Interface	Select an interface from the list through which the source NAT traffic pass through.
Protected Networks	Click + . The Create Protected Networks page appears.
Create Protected Networks	
Zone	Select a security zone from the list that will be used as a source zone in the firewall policy.
Global Address	Select the addresses from the Available column and then click the right arrow to move it to the Selected column. Click Add to select the networks the Client can connect to. The Create Global Address page appears. For more information on the fields, see Table 205 on page 696.
Edit	Select the protected network you want to edit and click on the pencil icon. The Edit Protected Networks page appears with editable fields.

Table 203: Fields on the Local Gateway Page *(Continued)*

Field	Action
Delete	Select the protected network you want to edit and click on the delete icon. The confirmation message pops up. Click Yes to delete the protected network.

Table 204: Fields on the Create Tunnel Interface Page

Field	Action
Interface Unit	Enter the logical unit number.
Description	Enter a description for the logical interface.
Zone	Select a zone from the list to add it to the tunnel interface. This zone is used in the auto-creation of the firewall policy. Click Add to add a new zone. Enter zone name and description and click OK on the Create Security Zone page.
Routing Instance	Select a routing instance from the list. NOTE: The default routing instance, primary, refers to the main inet.0 routing table in the logical system.

Table 205: Fields on the Create Global Address Page

Field	Action
Name	Enter a name for the global address. The name must be a unique string that must begin with an alphanumeric character and can include colons, periods, dashes, and underscores; no spaces allowed; 63-character maximum.

Table 205: Fields on the Create Global Address Page (*Continued*)

Field	Action
IP Type	Select IPv4 .
IPv4	
IPv4 Address	Enter a valid IPv4 address.
Subnet	Enter the subnet for IPv4 address.

Table 206: IKE and IPsec Settings

Field	Action
IKE Settings NOTE: The following parameters are generated automatically and are not displayed in the J-Web UI: • If the authentication method is Pre-Shared Key, the IKE version is 1, ike-user-type is shared-ike-id, and mode is Aggressive. • If the authentication method is Certificate Based, the IKE version is 2, ike-user-type is group-ike-id, and mode is Main.	
Encryption Algorithm	Select the appropriate encryption mechanism from the list. Default value is AES-CBC 256-bit.
Authentication Algorithm	Select the authentication algorithm from the list. For example, SHA 256-bit. NOTE: Starting in Junos OS 23.4R1 Release, J-Web supports SHA 512-bit authentication algorithm for junos-ike package installed devices.
DH group	A Diffie-Hellman (DH) exchange allows participants to generate a shared secret value. Select the appropriate DH group from the list. Default value is group19. NOTE: Starting in Junos OS 23.4R1 Release, J-Web supports group 15, group 16, and group 21 DH groups for junos-ike package installed devices.

Table 206: IKE and IPsec Settings (Continued)

Field	Action
Lifetime Seconds	Select a lifetime duration (in seconds) of an IKE security association (SA). Default value is 28,800 seconds. Range: 180 through 86,400 seconds.
Dead Peer Detection	Enable this option to send dead peer detection requests regardless of whether there is outgoing IPsec traffic to the peer.
DPD Mode	Select one of the options from the list: • optimized—Send probes only when there is outgoing traffic and no incoming data traffic - RFC3706 (default mode). • probe-idle-tunnel—Send probes same as in optimized mode and also when there is no outgoing and incoming data traffic. • always-send—Send probes periodically regardless of incoming and outgoing data traffic.
DPD Interval	Select an interval (in seconds) to send dead peer detection messages. The default interval is 10 seconds. Range is 2 to 60 seconds.
DPD Threshold	Select a number from 1 to 5 to set the failure DPD threshold. This specifies the maximum number of times the DPD messages must be sent when there is no response from the peer. The default number of transmissions is 5 times.

Advance Configuration (Optional)

NAT-T	Enable this option for IPsec traffic to pass through a NAT device. NAT-T is an IKE phase 1 algorithm that is used when trying to establish a VPN connection between two gateway devices, where there is a NAT device in front of one of the SRX Series Firewalls.
NAT Keep Alive	Select appropriate keepalive interval in seconds. Range: 1 to 300. If the VPN is expected to have large periods of inactivity, you can configure keepalive values to generate artificial traffic to keep the session active on the NAT devices.

Table 206: IKE and IPsec Settings *(Continued)*

Field	Action
IKE Connection Limit	Enter the number of concurrent connections that the VPN profile supports. Range is 1 through 4294967295. When the maximum number of connections is reached, no more remote access user (VPN) endpoints attempting to access an IPsec VPN can begin Internet Key Exchange (IKE) negotiations.
IKEv2 Fragmentation	This option is enabled by default. IKEv2 fragmentation splits a large IKEv2 message into a set of smaller ones so that there is no fragmentation at the IP level. Fragmentation takes place before the original message is encrypted and authenticated, so that each fragment is separately encrypted and authenticated. NOTE: This option is available if the authentication method is Certificated Based.
IKEv2 Fragment Size	Select the maximum size, in bytes, of an IKEv2 message before it is split into fragments. The size applies to IPv4 message. Range: 570 to 1320 bytes. Default value is 576 bytes. NOTE: This option is available if the authentication method is Certificated Based.
IPsec Settings	
Encryption Algorithm	Select the encryption method. Default value is AES-GCM 256-bit.
Authentication Algorithm	Select the IPsec authentication algorithm from the list. For example, HMAC-SHA-256-128. NOTE: This option is available when the encryption algorithm is not gcm. NOTE: Starting in Junos OS 23.4R1 Release, J-Web supports HMAC-SHA 384 and HMAC-SHA 512 authentication algorithm for junos-ike package installed devices.

Table 206: IKE and IPsec Settings (*Continued*)

Field	Action
Perfect Forward Secrecy	Select Perfect Forward Secrecy (PFS) from the list. The device uses this method to generate the encryption key. Default value is group19. PFS generates each new encryption key independently from the previous key. The higher numbered groups provide more security, but require more processing time. NOTE: group15, group16, and group21 support only the SRX5000 line of devices with an SPC3 card and junos-ike package installed. NOTE: Starting in Junos OS 23.4R1 Release, J-Web supports group 15, group 16, and group 21 PFS for junos-ike package installed devices.
Lifetime Seconds	Select the lifetime (in seconds) of an IPsec security association (SA). When the SA expires, it is replaced by a new SA and security parameter index (SPI) or terminated. Default is 3,600 seconds. Range: 180 through 86,400 seconds.
Lifetime Kilobytes	Select the lifetime (in kilobytes) of an IPsec SA. Default is 256kb. Range: 64 through 4294967294.
Advanced Configuration	
Anti Replay	IPsec protects against VPN attack by using a sequence of numbers built into the IPsec packet—the system does not accept a packet with the same sequence number. This option is enabled by default. The Anti-Replay checks the sequence numbers and enforce the check, rather than just ignoring the sequence numbers. Disable Anti-Replay if there is an error with the IPsec mechanism that results in out-of-order packets, which prevents proper functionality.
Install Interval	Select the maximum number of seconds to allow for the installation of a rekeyed outbound security association (SA) on the device. Select a value from 1 to 10.
Idle Time	Select the idle time interval. The sessions and their corresponding translations time out after a certain period of time if no traffic is received. Range is 60 to 999999 seconds.

Table 206: IKE and IPsec Settings *(Continued)*

Field	Action
DF Bit	Select how the device handles the Don't Fragment (DF) bit in the outer header: • clear—Clear (disable) the DF bit from the outer header. This is the default. • copy—Copy the DF bit to the outer header. • set—Set (enable) the DF bit in the outer header.
Copy Outer DSCP	This option enabled by default. This enables copying of Differentiated Services Code Point (DSCP) (outer DSCP+ECN) from the outer IP header encrypted packet to the inner IP header plain text message on the decryption path. Enabling this feature, after IPsec decryption, clear text packets can follow the inner CoS (DSCP+ECN) rules.
ICMP big packet warning	Use this option to enable or disable sending ICMP packet too big notifications for IPv6 packets. NOTE: This option is available only for junos-ike package installed devices.
ESN	Enable this to allow IPsec to use 64-bit sequence number. If ESN is not enabled, 32-bit sequence number will be used by default. Ensure ESN is not enabled when anti-replay is disabled. NOTE: This option is available only for junos-ike package installed devices.
Tunnel MTU	Enter the maximum transmit packet size for IPsec tunnels. Range: 256 through 9192. NOTE: This option is available only for junos-ike package installed devices.

RELATED DOCUMENTATION

[About the IPsec VPN Page | 642](#)

[IPsec VPN Global Settings | 645](#)

[Edit an IPsec VPN | 702](#)

[Delete an IPsec VPN | 703](#)

Edit an IPsec VPN

You are here: **Network > VPN > IPsec VPN.**

You can edit any of the following IPsec VPNs:

- Site-to-Site VPN
- Remote Access VPN (Juniper Secure Connect)
- Remote Access VPN (NCP Exclusive Client)

To edit IPsec VPN:

NOTE:

- When the IKE status is up and if you edit the IPsec VPN, the topology diagram is shown in green.
- All local gateway protected networks will form traffic selectors with all remote gateway protected networks and vice-versa.

1. Select an existing IPsec VPN configuration that you want to edit on the IPsec VPN page.
2. Click the pencil icon available on the upper right-side of the page.

The edit page for the selected IPsec VPN page appears with editable fields. You can modify any previous changes done to Site-to-Site VPN, Remote Access VPN (Juniper Secure Connect), and Remote Access VPN (NCP Exclusive Client).

3. Click **OK** to save the changes. If you want to discard your changes, click **Cancel**.

NOTE:

- During edit, Auto-create Firewall Policy and Gateway behind NAT options are not supported. Gateway behind NAT is supported only for remote access VPN.
- The Source NAT Traffic option is only supported when creating remote access VPN. During edit, this option is not supported.
- For Site-to-Site VPN, when the routing mode is Traffic Selector, the traffic selector creates the complete mesh between the local and remote addresses.

RELATED DOCUMENTATION

[Create a Site-to-Site VPN | 649](#)

[Create a Remote Access VPN—Juniper Secure Connect | 666](#)

[Create a Remote Access VPN—NCP Exclusive Client | 689](#)

[Delete an IPsec VPN | 703](#)

Delete an IPsec VPN

You are here: **Network > VPN > IPsec VPN**.

You can delete any of the VPN topologies.

To delete any IPsec VPN configurations:

1. Select existing an IPsec VPN configuration(s) that you want to delete on the IPsec VPN page.
2. Click the delete icon available on the upper-right corner of the page.

The Confirm Delete window appears.

NOTE:

- For Site-to-Site VPN, only the associated IPsec VPN routing configuration such as static route or OSPF is deleted.
- Remote Access VPN default profile will be deleted only if the deleting VPN is configured as default profile. You need to configure the default profile under **VPN > IPsec VPN > Global Settings > Remote Access VPN**.

3. Click **Yes** to delete or click **No** to retain the configuration.

RELATED DOCUMENTATION

[About the IPsec VPN Page | 642](#)

[IPsec VPN Global Settings | 645](#)

[Create a Site-to-Site VPN | 649](#)

[Edit an IPsec VPN | 702](#)

Dynamic VPN

IN THIS CHAPTER

- [About the Dynamic VPN Page | 704](#)
- [Global Settings | 706](#)
- [IPsec Template | 708](#)
- [Add a Dynamic VPN | 709](#)
- [Edit a Dynamic VPN | 710](#)
- [Delete a Dynamic VPN | 711](#)

About the Dynamic VPN Page

IN THIS SECTION

- [Tasks You Can Perform | 704](#)
- [Field Descriptions | 705](#)

You are here: **Network > VPN > Dynamic VPN.**

You can view and add, edit, or delete dynamic VPN global configuration options.

NOTE: This menu is available only for SRX300 line of devices and SRX550M devices.

Tasks You Can Perform

You can perform the following tasks from this page:

- Configure global settings. See ["Global Settings" on page 706](#).
- Add DVPN IPsec template. See ["IPsec Template" on page 708](#).
- Add a dynamic VPN. See ["Add a Dynamic VPN" on page 709](#).
- Edit a dynamic VPN. See ["Edit a Dynamic VPN" on page 710](#).
- Delete dynamic VPN. See ["Delete a Dynamic VPN" on page 711](#).
- Launch VPN wizard. To do this, click Launch Wizard available on the upper right corner of the Dynamic VPN table. Follow the guided steps to configure the VPN wizard.

Field Descriptions

[Table 207 on page 705](#) describes the fields on the Dynamic VPN page.

Table 207: Fields on the Dynamic VPN Page

Field	Description
Access Profile	Select a previously created access profile from the list displayed in Global Settings. Specify the access profile to use for Extended Authentication for remote users trying to download the Access Manager. NOTE: This Access Profile option does not control authentication for VPN sessions. For more information, see Add a Gateway and Add a VPN.
Client VPNs	Create a client configuration for the dynamic VPN feature.
Name	Enter a name for dynamic VPN.
User	Enter an username. Specifies the list of users who can use this client configuration.
IP Address	Enter an IP address and netmask for the users.
IPsec VPN	Select a previously configured IKE AutoKey configuration from the list.

Table 207: Fields on the Dynamic VPN Page *(Continued)*

Field	Description
Remote Protected Resources	Enter an IP address and netmask of a resource behind the firewall. Traffic to the specified resource will go through the VPN tunnel and therefore will be protected by the firewall's security policies.

RELATED DOCUMENTATION

[Global Settings | 706](#)

[Edit a Dynamic VPN | 710](#)

[Delete a Dynamic VPN | 711](#)

Global Settings

You are here: **VPN** > **Dynamic VPN**.

To add global settings:

1. Click **Global Settings** available on the upper-right corner of the Resource Profiles page.
The DVPN - Global Settings page appears.
2. Complete the configuration according to the guidelines provided in [Table 208 on page 706](#).
3. Click **OK** to save the changes. If you want to discard your changes, click **Cancel**.

Table 208: Fields on the Global Settings page

Field	Action
Access Profile	Select an access profile from the list to use for Extended Authentication for remote users trying to download the Access Manager.
Address Profile Settings	
Address Pool	Select an address pool from the list

Table 208: Fields on the Global Settings page *(Continued)*

Field	Action
+	Click + to add a new address pool. The New Address Pool page appears.
New Address Pool	
Name	Enter a name for address pool.
Network Address	Enter the network prefix for the address pool for IPv4 or IPv6 addresses.
Address Ranges	
+	Click + to add the address range for DVPN.
Address Range Name	Enter an address range name.
Lower Limit	Enter the lower boundary for the IPv4 or IPv6 address range.
High Limit	Enter the upper boundary for the IPv4 or IPv6 address range.
X	Click X to delete the address ranges of DVPN.
XAUTH Attributes	
Primary DNS Sever	Enter the primary DNS IP address.
Secondary DNS Sever	Enter the secondary DNS IP address.
Primary WINS Sever	Enter the primary WINS IP address.
Secondary WINS Sever	Enter the secondary WINS IP address.

RELATED DOCUMENTATION

About the Dynamic VPN Page 704
IPsec Template 708
Add a Dynamic VPN 709

IPsec Template

You are here: VPN > Dynamic VPN.

To add a dynamic VPN IPsec template:

1. Click **IPsec Template** available on the upper-right corner of the Dynamic VPN page.
The DVPN IPsec Template page appears.
2. Complete the configuration according to the guidelines provided in [Table 209 on page 708](#).
3. Click **OK** to save the changes. If you want to discard your changes, click **Cancel**.

Table 209: Fields on the DVPN IPsec Template Page

Field	Action
Clone IPsec from DVPN template	
Name	Displays the name of the cloned DVPN template.
Preshared Key	Enter the authorization key.
IKE ID	Specify the IKE IDs for the DVPN.
External Interface	Select the external interface from the list.

RELATED DOCUMENTATION

About the Dynamic VPN Page 704
Global Settings 706
Add a Dynamic VPN 709

Add a Dynamic VPN

You are here: **Network** > **VPN** > **Dynamic VPN**.

To add a dynamic VPN:

1. Click **+** available on the upper-right corner of the Dynamic VPN page.
The Add DVPN page appears.
2. Complete the configuration according to the guidelines provided in [Table 210 on page 709](#).
3. Click **OK** to save the changes. If you want to discard your changes, click **Cancel**.

Table 210: Fields on the DVPN Page

Field	Action
Name	Enter the name of the client configuration.
IPsec VPN	Select a previously configured IKE AutoKey configuration from the list to use when establishing the VPN tunnel.
Access Users	
Local Users in Profile	Specifies the list of users who can use this client configuration. Select the users and click on the arrow button to move to copy to DVPN. NOTE: The server does not validate the names that you enter here, but the names must be the names that the users use to log in to the device when downloading the client.
Users in DVPN	Specifies the list of users copied from the local users in profile or the newly added users.
Username	Enter a username.
Password	Enter a password for the username.

Table 210: Fields on the DVPN Page (*Continued*)

Field	Action
IP	Enter an IP address for the user.
+	Click + and select Add to DVPN or Add to Both to add the user to either in Users in DVPN or to both DVPN and Local Users in Profile.
Remote Protected Resources	Enter an IP address and net mask and click +. Specifies the IP address and net mask of a resource behind the firewall. Traffic to the specified resource will go through the VPN tunnel and therefore will be protected by the firewall's security policies. NOTE: The device does not validate that the IP/net mask combination that you enter here matches up with your security policies.
Remote Exceptions	Enter an IP address and net mask and click + . Specifies the IP address and net mask of exceptions to the remote protected resources list.

RELATED DOCUMENTATION

[About the Dynamic VPN Page | 704](#)

[Edit a Dynamic VPN | 710](#)

[Delete a Dynamic VPN | 711](#)

Edit a Dynamic VPN

You are here: **Network > VPN > Dynamic VPN.**

To edit a dynamic VPN setting:

1. Select the existing a dynamic VPN settings policy that you want to edit on the Dynamic VPN page.
2. Click the pencil icon available on the upper-right corner of the page.

The Edit DVPN page appears with editable fields. For more information on the options, see ["Add a Dynamic VPN" on page 709](#).

- 3. Click **OK** to save the changes.

RELATED DOCUMENTATION

About the Dynamic VPN Page 704
Global Settings 706
IPsec Template 708
Add a Dynamic VPN 709

Delete a Dynamic VPN

You are here: **Network > VPN > Dynamic VPN**.

To delete a dynamic VPN:

- 1. Select a dynamic VPN policy that you want to delete on the Dynamic VPN page.
- 2. Click the delete icon available on the upper-right corner of the page.
- 3. Click **Yes** to delete or click **No** to retain the profile.

RELATED DOCUMENTATION

About the Dynamic VPN Page 704
Global Settings 706
IPsec Template 708
Add a Dynamic VPN 709
Edit a Dynamic VPN 710

Compliance

IN THIS CHAPTER

- [About the Compliance Page | 712](#)
- [Create Pre-Logon Compliance | 714](#)
- [Edit Pre-Logon Compliance | 720](#)
- [Delete Pre-Logon Compliance | 720](#)

About the Compliance Page

You are here: **Network** > **VPN** > **Compliance**.

NOTE: Starting in Junos OS Release 23.2R1, J-Web supports new **Compliance** sub-menu under **Network** menu. This sub-menu is not supported for SRX300 line of Firewalls and SRX550HM Firewall.

Create compliance rules for users in the SRX Series Firewall to validate application version, OS version, hostname, domain, workgroup, and action. When a user initiates a connection, the SRX Series Firewall validates the request using the compliance rules. Once validated, the Juniper Secure Connect application connects to the SRX Series Firewall through a VPN tunnel to gain access to the networks protected resources.

You can perform the following tasks:

- Click **More** available on the upper-right corner of the Compliance page or right-click on the compliance rule to do the following:
 - Move term up and down.
 - Create pre-logon compliance term.
 - Create pre-logon compliance term before and after.

- View the details of a pre-logon compliance rule. To do this, select an existing rule and follow the available options:
 - Click **More** and select **Detailed View**.
 - Right-click on the selected rule and select **Detailed View**.
- Create pre-logon compliance. See ["Create Pre-Logon Compliance" on page 714](#).
- Edit pre-logon compliance. See ["Edit Pre-Logon Compliance" on page 720](#).
- Delete pre-logon compliance. See ["Delete Pre-Logon Compliance" on page 720](#).
- Show or hide columns in the Compliance table. To do this, use the **Show Hide Columns** icon in the upper-right corner of the page and select the options you want to show or deselect to hide options on the page.
- Advanced search for compliance rule. To do this, use the search text box present above the table grid. The search includes the logical operators as part of the filter string. An example filter condition is displayed in the search text box when you hover over the Search icon. When you start entering the search string, the icon indicates whether the filter string is valid or not.

For an advanced search:

1. Enter the search string in the text box.

Based on your input, a list of items from the filter context menu appears.

2. Select a value from the list and then select a valid operator based on which you want to perform the advanced search operation.

NOTE: Press Spacebar to add an AND operator or OR operator to the search string. Press backspace to delete a character of the search string.

3. Press Enter to display the search results in the grid.

Click **X** to clear the search entries.

[Table 211 on page 713](#) provides the details of the fields on the Compliance page.

Table 211: Fields on the Compliance page

Field	Description
Name	Displays the pre-logon compliance rule name.

Table 211: Fields on the Compliance page (*Continued*)

Field	Description
Term	Displays the number of pre-logon compliance rule terms created.
Secure connect	Displays the client's secure connect version.
Operation system	Displays the client's operating system version.
Device IDs	Displays user device ID.
Hostnames	Displays hostnames defined in the compliance rule term.
Domains	Displays domain names defined in the compliance rule term.
Workgroups	Displays workgroups defined in the compliance rule term.
Action	Displays the action defined in the compliance rule term.

Create Pre-Logon Compliance

You are here: **Network** > **VPN** > **Compliance**.

NOTE: Starting in Junos OS Release 23.2R1, J-Web supports new **Compliance** sub-menu under **Network** menu. This sub-menu is not supported for SRX300 line of Firewalls and SRX550HM Firewall.

To create a pre-logon compliance:

1. Click + available on the upper-right corner of the Compliance page.

The Create Pre-Logon Compliance page appears.

2. Complete the configuration according to the guidelines provided in [Table 212 on page 715](#).
3. On this page, you can perform the following tasks:
 - a. Click **More** available above the table grid or right-click on the compliance rule term to do the following:
 - Create term before and after.
 - Move term up and down.
 - View the details of a pre-logon compliance rule term.
 - b. Create pre-logon compliance rule terms. See [Table 212 on page 715](#) for more information.
 - c. Edit pre-logon compliance rule terms.
 - d. Delete pre-logon compliance rule terms.
 - e. Show or hide columns in the Terms table. To do this, use the **Show Hide Columns** present above the table grid and select the options you want to show or deselect to hide options on the page.
4. Click **OK** to save the changes. If you want to discard your changes, click **Cancel**.

If you click **OK**, a new pre-logon compliance with the provided configuration is created.

Table 212: Fields on the Create Pre-Logon Compliance page

Fields	Description
Name	Enter a name for the pre-logon compliance. Name must be a string that begins with an alphanumeric character and can include dashes, underscores, and periods; no spaces allowed; 32-character maximum.

Table 212: Fields on the Create Pre-Logon Compliance page (*Continued*)

Fields	Description
Terms	To create pre-logon compliance terms: 1. Click + available above the table grid. The Create Term page appears. 2. Enter the following details: • Name—Enter a pre-logon compliance rule term name. • Action—Select Allow or Deny actions for resources and applications access request. • Secure connect—Configure client's secure connect version. Maximum allowed count is 16. To configure, do the following: a. Click +. b. Select an operating system from the list. c. Select an operator available in the list. d. Enter the secure connect version. e. Click the tick icon to save the changes. If you want to discard your changes, click X. You can edit and delete the existing secure connect configuration using the edit icon and delete icon respectively. • Operating systems—Configure client's operating system version. Maximum allowed count is 16. To configure, do the following: a. Click +. b. Select an operating system from the list.

Table 212: Fields on the Create Pre-Logon Compliance page *(Continued)*

Fields	Description
	c. Select an operator available in the list. d. Enter the OS version. e. Click the tick icon to save the changes. If you want to discard your changes, click X. You can edit and delete the existing operating system configuration using the edit icon and delete icon respectively. • Device IDs—Configure user device IDs. Maximum allowed device IDs are 1024. To configure, do the following: a. Click +. b. Enter the device ID. Device ID must begin with an alphanumeric character and must contain "+", "/", and "=" only. c. Click the tick icon to save the changes. If you want to discard your changes, click X. You can edit and delete the existing device IDs using the edit icon and delete icon respectively. • Hostnames—Configure hostnames. Maximum allowed hostnames are 1024. To configure, do the following: a. Click +. b. Enter the hostname.

Table 212: Fields on the Create Pre-Logon Compliance page *(Continued)*

Fields	Description
	Hostname must begin with an alphanumeric character and must contain dashes and underscores only. c. Click the tick icon to save the changes. If you want to discard your changes, click X. You can edit and delete the existing hostnames using the edit icon and delete icon respectively. • Domains—Configure domain names. Maximum allowed domains are 16. To configure, do the following: a. Click +. b. Enter the domain. Domain name must begin with an alphanumeric character and must contain "." and "-" only. c. Click the tick icon to save the changes. If you want to discard your changes, click X. You can edit and delete the existing domain names using the edit icon and delete icon respectively. • Workgroups—Configure workgroups. Maximum allowed workgroups are 16. To configure, do the following: a. Click +. b. Enter the workgroup. Workgroup must begin with an alphanumeric character and must contain "." and "-" only.

Table 212: Fields on the Create Pre-Logon Compliance page (*Continued*)

Fields	Description
	c. Click the tick icon to save the changes. If you want to discard your changes, click X. You can edit and delete the existing workgroups using the edit icon and delete icon respectively. 3. Click OK to save the changes. If you want to discard your changes, click Cancel. If you click OK, a new pre-logon compliance rule term with the provided configuration is created.
Name	Displays pre-logon compliance rule term name.
Secure connect	Displays client's secure connect version
Operating systems	Displays client's operating system version.
Device IDs	Displays user device ID.
Hostnames	Displays hostnames defined in the compliance rule term.
Domains	Displays domain names defined in the compliance rule term.
Workgroups	Displays workgroups defined in the compliance rule term.
Action	Displays the action defined in the compliance rule term.

RELATED DOCUMENTATION

[About the Compliance Page | 712](#)

[Edit Pre-Logon Compliance | 720](#)

Edit Pre-Logon Compliance

You are here: **Network** > **VPN** > **Compliance**.

NOTE: Starting in Junos OS Release 23.2R1, J-Web supports new **Compliance** sub-menu under **Network** menu. This sub-menu is not supported for SRX300 line of Firewalls and SRX550HM Firewall.

To edit a pre-logon compliance:

1. Select the pre-logon compliance that you want to edit on the Compliance page.
2. Click the edit icon available on the upper-right corner of the Compliance page.
The Edit Pre-Logon Compliance page appears.
3. Select the term that you want to edit.
The Edit Term page appears with editable fields. For more information on the options, see [Table 212 on page 715](#).
4. Click the tick icon to accept the changes. If you want to discard, click **X**.

RELATED DOCUMENTATION

[Create Pre-Logon Compliance | 714](#)

[Delete Pre-Logon Compliance | 720](#)

Delete Pre-Logon Compliance

You are here: **Network** > **VPN** > **Compliance**.

NOTE: Starting in Junos OS Release 23.2R1, J-Web supports new **Compliance** sub-menu under **Network** menu. This sub-menu is not supported for SRX300 line of Firewalls and SRX550HM Firewall.

To delete a pre-logon compliance:

1. Select the pre-logon compliance that you want to delete on the Compliance page.
2. Click the delete icon available on the upper-right corner of the Compliance page.

["Create Pre-Logon Compliance" on page 714](#)

A confirmation window appears.

3. Click **Yes** to delete.

RELATED DOCUMENTATION

[Edit Pre-Logon Compliance | 720](#)

[Create Pre-Logon Compliance | 714](#)

7

PART

Security Policies and Objects

[Security Policies | 723](#)

[Metadata Streaming Policy | 777](#)

[Zones/Screens | 782](#)

[Zone Addresses | 800](#)

[Global Addresses | 807](#)

[Services | 813](#)

[Dynamic Applications | 822](#)

[Application Tracking | 837](#)

[Schedules | 839](#)

[Proxy Profiles | 845](#)

Security Policies

IN THIS CHAPTER

- [About the Security Policies Page | 723](#)
- [Global Options | 728](#)
- [Add a Rule to a Security Policy | 731](#)
- [Clone a Security Policy Rule | 748](#)
- [Edit a Security Policy Rule | 749](#)
- [Delete a Security Policy Rule | 749](#)
- [Configure Captive Portal for Web Authentication and Firewall User Authentication | 750](#)

About the Security Policies Page

IN THIS SECTION

- [Tasks You Can Perform | 724](#)
- [Field Descriptions | 727](#)

You are here: **Security Policies & Objects > Security Policies.**

Use this page to get a high-level view of your firewall policy rules settings. The security policy applies the security rules to the transit traffic within a context (from-zone to to-zone). The traffic is classified by matching its source and destination zones, the source and destination addresses, and the application that the traffic carries in its protocol headers with the policy database in the data plane.

Using a global policy, you can regulate traffic with addresses and applications, regardless of their security zones, by referencing user-defined addresses or the predefined address “any.” These addresses can span multiple security zones.

Tasks You Can Perform

You can perform the following tasks from this page:

- Add Global Options. See ["Global Options" on page 728](#).
- Add a Rule. See ["Add a Rule to a Security Policy" on page 731](#).
- Edit a Rule. See ["Edit a Security Policy Rule" on page 749](#).
- Clone a Rule. See ["Clone a Security Policy Rule" on page 748](#).
- Delete a Rule. See ["Delete a Security Policy Rule" on page 749](#).
- To save the rules configuration, click **Save**.
- To delete the rules configuration, click **Discard**.
- Drag and drop the rules within a zone context. To do this, select the rule you want to place in a different sequence number within a zone context, drag and drop it using the cursor.

NOTE: If you drag and drop a rule outside the zone context, J-Web will display a warning message that you cannot move the rule into another zone context.

- Advanced search for policy rule. To do this, use the search text box present above the table grid. The search includes the logical operators as part of the filter string. An example filter condition is displayed in the search text box when you hover over the Search icon. When you start entering the search string, the icon indicates whether the filter string is valid or not.

For an advanced search:

1. Enter the search string in the text box.

Based on your input, a list of items from the filter context menu appears.

2. Select a value from the list and then select a valid operator based on which you want to perform the advanced search operation.

NOTE: Press Spacebar to add an AND operator or OR operator to the search string. Press backspace to delete a character of the search string.

3. Press Enter to display the search results in the grid.

The supported search scenarios and its examples are as follows:

1. Logical operators:

- AND operator for multiple parameters

Example: Name = Rule1 AND Dynamic Application = Malware

- OR operator for same and different parameters

Example for same parameters: Name = Rule1 OR Name = Rule2

Example for different parameters: Name = Rule1 OR Dynamic Application = Malware

- Combination of AND and OR operators

Example: Name = Rule1 AND (Dynamic Application = Malware OR Action = Reject)

- Comma (,) separated value

Example: Name = Rule1, Rule2

- != operator for single parameter

Example: Name != Rule1

2. Dynamic applications or service objects with matching characters of *Junos*

When you search for the matching characters of Junos, such as, jun, un, nos, and os, the result displays all the matched objects but without junos prefix. For example, if the configured dynamic application is *junos:01NET*, the search for dynamic applications with *jun* characters display only *01NET*.

3. Saved policy rules

When you add or edit a rule, click **Save** to save the configuration. To search for this saved configuration, you must wait for the device to synchronize the configuration.

- Show or hide columns in the policy rule table. To do this, click Show Hide Columns icon in the upper-right corner of the policy rule table and select the columns you want to display or deselect the columns you want to hide on the page.

[Table 213 on page 726](#) describes few more options on Rules.

Table 213: More Options on the Security Policies Page

Field	Description
Create Rule Before	Adds a new rule before the selected rule. To add a new rule before the selected rule: 1. Select an existing rule before which you want to create a rule. 2. Click More > Create Rule Before. Alternatively, you can right-click on the selected rule and select Create Rule Before. NOTE: • When you create a new rule, it inherits the name, source zone, and destination zone same as parent (selected) rule. Source address and destination address will be any and the action will be Deny. • For global policy, source zone and destination zone will not be available. 3. Click tick mark to create the new rule.
Create Rule After	Adds a new rule after the selected rule. To add a new rule after the selected rule: 1. Select an existing rule after which you want to create a rule. 2. Click More > Create Rule After. Alternatively, you can right-click on the selected rule and select Create Rule After. NOTE: • When you create a new rule, it inherits the name, source zone, and destination zone same as parent (selected) rule. Source address and destination address will be any and the action will be Deny. • For global policy, source zone and destination zone will not be available. 3. Click tick mark to create the new rule.
Clone	Clones or copies the selected firewall policy configuration and enables you to update the details of the rule.
Clear All	Clears the selection of those rules that are selected.

Field Descriptions

Table 214 on page 727 describes the fields on the Security Policies page.

NOTE: On the Security Policies page:

- For logical systems and tenants, the URL Categories option will not be displayed.
- For tenants, the Dynamic Application option will not be displayed.

Table 214: Fields on the Security Policies Page

Field	Description
Seq	Displays the sequence number of rules in a zone pair.
Hits	Displays the number of hits the rule has encountered.
Rule Name	Displays the rule name. You can hover over the name column to view the rule name and its description.
Source Zone	Displays the source zone that is specified in the zone pair for the rule.
Source Address	Displays the name of the source address or address set for the rule.
Source Identity	Displays the user identity of the rule.
Destination Zone	Displays the destination zone that is specified in the zone pair for the rule.
Destination Address	Displays the name of the destination address or address set for the rule.
Dynamic Application	Displays the dynamic application names for match criteria in application firewall rule set. An application firewall configuration permits, rejects, or denies traffic based on the application of the traffic.

Table 214: Fields on the Security Policies Page (Continued)

Field	Description
Services	Displays the type of service for the destination of the rule.
URL Category	Displays the URL category that you want to match criteria for web filtering category.
Action	Displays the actions that need to take place on the traffic as it passes through the firewall.
Advanced Security	Displays the security option that apply for this rule.
Rule Options	Displays the rule option while permitting the traffic.
Schedule	Displays the scheduler details that allow a policy to be activated for a specified duration. You can define schedulers for a single (nonrecurrent) or recurrent time slot within which a policy is active.

RELATED DOCUMENTATION

| [Global Options](#) | 728

Global Options

You are here: **Security Policies & Objects > Security Policies.**

To add global options:

1. Click **Global Options** available on the upper-right corner of the Security Policies page.
The Global Options page appears.
2. Complete the configuration according to the guidelines provided in [Table 215 on page 729](#).
3. Click **OK** to save the changes. If you want to discard your changes, click **Cancel**.

[Table 215 on page 729](#) describes the fields on the Global Options page.

Table 215: Fields on the Global Options Page

Field	Action
Pre-id Default Policy	
Session Timeout	
ICMP	Enter the timeout value for ICMP sessions ranging from 4 through 86400 seconds.
ICMP6	Enter the timeout value for ICMP6 sessions ranging from 4 through 86400 seconds.
OSPF	Enter the timeout value for OSPF sessions ranging from 4 through 86400 seconds.
TCP	Enter the timeout value for TCP sessions ranging from 4 through 86400 seconds.
UDP	Enter the timeout value for UDP sessions ranging from 4 through 86400 seconds.
Others	Enter the timeout value for other sessions ranging from 4 through 86400 seconds.
Logging	
Session Initiate	Enable this option to start logging at the beginning of a session. WARNING: Configuring session-init logging for the pre-id-default-policy can generate a large number of logs.
Session Close	Enable this option to start logging at the closure of a session. NOTE: Configuring session-close logging ensures that the SRX Series Firewall generates the security logs if a flow is unable to leave the pre-id-default-policy.
Flow	
Aggressive Session Aging	
NOTE: This option is not supported for logical systems and tenants.	

Table 215: Fields on the Global Options Page (*Continued*)

Field	Action
Early Ageout	Enter a value from 1 through 65,535 seconds. The default value is 20 seconds. Specifies the amount of time before the device aggressively ages out a session from its session table.
Low watermark	Enter a value from 0 through 100 percent. The default value is 100 percent. Specifies the percentage of session table capacity at which the aggressive aging-out process ends.
High watermark	Enter a value from 0 through 100 percent. The default value is 100 percent. Specifies the percentage of session table capacity at which the aggressive aging-out process begins.
SYN Flood Protection	
SYN Flood Protection	Enable this option to defend against SYN attacks.
Mode	Select one of the following options: • Cookie—Uses a cryptographic hash to generate a unique Initial Sequence Number (ISN). This is enabled by default. • Proxy—Uses a proxy to handle the SYN attack.
TCP MSS	
All TCP Packets	Enter a maximum segment size value from 64 through 65,535 to override all TCP packets for network traffic.
Packets entering IPsec Tunnel	Enter a maximum segment size value from 64 through 65,535 bytes to override all packets entering an IPsec tunnel. The default value is 1320 bytes.
GRE Packets entering IPsec Tunnel	Enter a maximum segment size value from 64 through 65,535 bytes to override all generic routing encapsulation packets entering an IPsec tunnel. The default value is 1320 bytes.

Table 215: Fields on the Global Options Page (*Continued*)

Field	Action
GRE Packets exiting IPsec Tunnel	Enter a maximum segment size value from 64 through 65,535 bytes to override all generic routing encapsulation packets exiting an IPsec tunnel. The default value is 1320 bytes.
TCP Session	
Sequence number check	By default, this option is enabled to check sequence numbers in TCP segments during stateful inspections. The device monitors the sequence numbers in TCP segments.
SYN flag check	By default, this option is enabled to check the TCP SYN bit before creating a session. The device checks that the SYN bit is set in the first packet of a session. If it is not set, the device drops the packet.

RELATED DOCUMENTATION

[Add a Rule to a Security Policy](#) | 731

Add a Rule to a Security Policy

You are here: **Security Policies & Objects** > **Security Policies**.

NOTE: To reference the Content Security policies and the AppQoS profiles in a security policy rules, create Content Security policies and AppQoS profiles before creating or editing security policy rules if required. To create Content Security policies, go to **Security Services** > **Content Security** > **Content Security Policies** and to create AppQoS profiles, go to **Network** > **Application QoS**.

To add a rule to a security policy:

1. Click **+** available on the upper-right corner of the Security Policies page.
The inline editable fields will appear.
2. Complete the configuration according to the guidelines provided in [Table 216 on page 732](#).

3. Click the tick icon on the upper right of the row once done with the configuration.

NOTE: Scroll back the horizontal bar if the inline tick and the cancel icons are not available when creating a new rule.

4. Click **Save** to save the changes or click **Discard** to discard the changes.

NOTE: You must perform Step 3 and Step 4 before performing any further actions in the J-Web UI.

Table 216: Fields on the Security Policies Page

Field	Action
Rule Name	Enter a name for the new rule or policy.
Rule Description	Enter a description for the security policy.
Global Policy	Enable this option to specify that the policy defined is a global policy and zones are not required.

Table 216: Fields on the Security Policies Page *(Continued)*

Field	Action
Source Zone	To add sources: 1. Click +. The Select Sources page appears. 2. Enter the following details: • Zone—Select the source zone from the list to which you want the rule to be associated. • Addresses—Select any or Specific. NOTE: • You can select the IP feeds to define the matching criteria for a policy. Also, you can view source type (Address, Address group, Wild card, Range, IP feeds) in the new Type column. • Feeds are only displayed if you have enrolled to Juniper ATP Cloud. You can also download the feeds using the command, <code>request services security-intelligence download</code>. To select a specific address or IP feed, select the addresses or IP feeds from the Available column and then click the right arrow to move it to the Selected column. You can select Exclude Selected to exclude only the selected address from the list. To create a new address, click +. The Create Address page appears. For more information on fields, see Table 217 on page 743. • Source identity—Select the user identity from the Available column and then click the right arrow to move it to the Selected column. To create a source identity, click +. Enter a new username or identity in the Create Source Identity page and click OK. • Source identity feed—You can select user identity threat feed to define the matching criteria for a policy. Select the user identity threat feed from the Available column and then click the right arrow to move it to the Selected column.

Table 216: Fields on the Security Policies Page *(Continued)*

Field	Action
	Maximum user identity threat feed count is 1024. That is, sum of source identity feed and destination identity feed per policy. NOTE: Feeds are only displayed if you have enrolled to Juniper ATP Cloud. You can also download the feeds using the command, <code>request services security-intelligence download</code>.

Table 216: Fields on the Security Policies Page (*Continued*)

Field	Action
Destination Zone	To add a destination: - Click +. The Select Destination page appears. - Enter the following details: Zone—Select the destination zone from the list to which you want the rule to be associated. Addresses—Select any or Specific. NOTE: - You can select the IP feeds to define the matching criteria for a policy. Also, you can view source type (Address, Address group, Wild card, Range, IP feeds) in the new Type column. - Feeds are only displayed if you have enrolled to Juniper ATP Cloud. You can also download the feeds using the command, <code>request services security-intelligence download</code>. To select a specific address or IP feed, select the addresses or IP feeds from the Available column and then click the right arrow to move it to the Selected column. You can select Exclude Selected to exclude only the selected address from the list. To create a new address, click +. For more information on fields, see Table 217 on page 743. Dynamic applications—Select Any, Specific, or None. NOTE: The Dynamic Applications option is not supported for tenants. To select a specific application, select the application from the Available column and then click the right arrow to move it to the Selected column. NOTE: The select all check box is only available when you search for specific dynamic applications.

Table 216: Fields on the Security Policies Page (Continued)

Field	Action
	To create a new application, click +. The Create Application Signature page appears. For more information on fields, see "Add Application Signatures" on page 828. NOTE: For logical systems, you cannot create a dynamic application inline. • Services—Select Any, Specific, or None. To select a specific service, select the service from the Available column and then click the right arrow to move it to the Selected column. To create a new service, click +. The Create Service page appears. For more information on fields, see Table 218 on page 744. • URL category—Select any, Specific, or None to match criteria for a web filtering category. To select a specific URL category, select the URL category from the Available column and then click the right arrow to move it to the Selected column. NOTE: This option is not available for logical systems and tenants. • Destination identity feed—You can select user identity threat feed to define the matching criteria for a policy. Select the user identity threat feed from the Available column and then click the right arrow to move it to the Selected column. Maximum user identity threat feed count is 1024. That is, sum of source identity feed and destination identity feed per policy. NOTE: Feeds are only displayed if you have enrolled to Juniper ATP Cloud. You can also download the feeds using the command, <code>request services security-intelligence download</code>.
Action	Select an action to take when traffic matches the criteria: • Permit—Allows packet to pass through the firewall. • Deny—Block and drop the packet, but do not send notification back to the source. • Reject—Block and drop the packet and send a notice to the source host.

Table 216: Fields on the Security Policies Page *(Continued)*

Field	Action

Advanced Services

Click **+**. The Select Advanced Services page appears.

NOTE:

- When the action is Reject:
 - You can configure only the SSL Proxy and Redirect Profile options.
 - You can configure only the SSL Proxy option if the dynamic application is None.
 - Advanced Security option is not supported for logical systems and tenants.
- When the action is Permit:
 - For logical systems, only IPS, IPS policy, Content Security, threat prevention policy, ICAP redirect profile, and AppQOS options are supported.
 - For tenant systems, only threat prevention policy and AppQOS are supported.

SSL proxy	Select the SSL proxy policy to associate with this rule from the list.
Content Security	Select the Content Security policy you want to associate with this rule from the list. The list displays all the Content Security policies available. If you want to create a new Content Security policy, click Add New. The Create a Content Security Policy page appears. For more information on creating a new Content Security policy, see "Create a Content Security Policy" on page 946.
IPS policy	Select the IPS policy from the list.
Threat prevention policy	Select the configured threat prevention policy from the list.
ICAP redirect profile	Select the configured ICAP redirect profile name from the list.

Table 216: Fields on the Security Policies Page *(Continued)*

Field	Action
AAMW	Select an anti-malware profile from the list that you want to associate with the security policy. NOTE: Starting in Junos OS 22.2R1 Release, you can associate an anti-malware profile with the security policies.
SecIntel profile group	Select a SecIntel profile group from the list that you want to associate with the security policy. NOTE: Starting in Junos OS 22.2R1 Release, you can associate a SecIntel profile group with the security policies.
IPsec VPN	Select the IPsec VPN tunnel from the list. NOTE: If you select Dynamic applications in the destination, IPsec VPN option is not supported.
Pair policy name	Enter the name of the policy with the same IPsec VPN in the opposite direction to create a pair policy. NOTE: If you select Dynamic applications in the destination, Pair Policy Name option is not supported.
Application QoS profile	Select the configured AppQoS profile from the list. If you want to create a new AppQoS profile, click Add New. The Add AppQoS Profile page appears. For more information on creating a new AppQoS profile, see "Add an Application QoS Profile" on page 635.

Table 216: Fields on the Security Policies Page *(Continued)*

Field	Action
Threat profiling	Starting in Junos OS Release 21.4R1, you can enable this option to generate threat profiling feeds. NOTE: Feeds are only displayed if you have enrolled to Juniper ATP Cloud. You can also download the feeds using the command, <code>request services security-intelligence download</code>. You can add source and destination addresses, and source and destination identities to the threat feeds. After the feeds are generated, you can configure other security policies to use the feeds to match designated traffic and perform policy actions. • Add source IP to feed—Select the threat feed from the list to add it to the source IP address. • Add source identity to feed—Select the threat feed from the list to add it to the source user identity. • Add destination IP to feed—Select the threat feed from the list to add it to the destination IP address. • Add destination identity to feed—Select the threat feed from the list to add it to the destination user identity.
Packet capture	Enable to capture unknown application traffic specific to a security policy rule. By default, this option is disabled. Once enabled, you can view the packet capture (PCAP) file details or download the PCAP file on the Monitor > Log > Sessions page.

Rule Options

Click on **Rule Options**. The SELECT RULE OPTIONS page appears.

Logging

Session initiate	Enable this option to log an event when a session is created.
Session close	Enable this option to log an event when the session closes.

Table 216: Fields on the Security Policies Page *(Continued)*

Field	Action
Count	Enable this option to collect statistics of the number of packets, bytes, and sessions that pass through the firewall with this policy. Specifies statistical counts. An alarm is triggered whenever traffic exceeds specified packet and byte thresholds. NOTE: Alarm threshold fields are disabled if Enable Count is not enabled.
Authentication NOTE: - If you select Dynamic applications in the destination, Authentication option is not supported. - This option is not supported for logical systems and tenant systems.	
Push auth entry to JIMS	Enable this option to push authentication entries from firewall authentication, that are in auth-success state, to Juniper Identity Management Server (JIMS). This will enable the SRX Series Firewall to query JIMS to get IP/user mapping and device information. This is not a mandatory option. You can select it when at least one domain is configured on local Active Directory or configure identity management.
Type	Select the firewall authentication type from the list. The options available are: None, Pass-through, User-firewall, and Web-authentication.
Access profile	Select an access profile from the list. NOTE: This option is not supported if you select the authentication type as Web-authentication.
Client name	Enter the client username or client user group name. NOTE: This option is not supported if you select the authentication type as User-firewall.
Domain	Select a domain name that must be in a client name from the list. NOTE: This option is supported only if you select the authentication type as User-firewall.

Table 216: Fields on the Security Policies Page (*Continued*)

Field	Action
Web redirect (http)	Enable this option to redirect HTTP requests to the device's internal webserver by sending a redirect HTTP response to the client system to reconnect to the webserver for user authentication. NOTE: This option is not supported if you select the authentication type as Web-authentication.
Captive portal	Enable this option to redirect a client HTTP or HTTPS request to the internal HTTPS webserver of the device. The HTTPS client requests are redirected when SSL termination profile is configured. NOTE: This option is not supported if you select the authentication type as Web-authentication.
Interface	Select an interface for the webserver where the client HTTP or HTTPS request is redirected. NOTE: You cannot edit this once the policy is created. To edit the interface, go to Network > Connectivity > Interfaces.
IPv4 address	Enter IPv4 address of the webserver where the client HTTP or HTTPS request is redirected. NOTE: You cannot edit this once the policy is created. To edit the interface, go to Network > Connectivity > Interfaces.

Table 216: Fields on the Security Policies Page *(Continued)*

Field	Action
SSL termination profile	Select an SSL termination profile from the list which contains the SSL terminated connection settings. SSL termination is a process where the SRX Series Firewall acts as an SSL proxy server, terminates the SSL session from the client. To add a new SSL termination profile: 1. Click Add. The Create SSL Termination Profile page appears. 2. Enter the following details: • Name—Enter SSL termination profile name; 63-character maximum. • Server certificate—Select a server certificate from the list that is used to authenticate the server identity. To add a certificate, click Add. For more information on adding a device certificate, see No Link Title. To import a certificate, click Import. For more information on importing a device certificate, see, No Link Title.
Auth only browser	Enable this option to drop non-browser HTTP traffic to allow for captive portal to be presented to unauthenticated users who request access using a browser. NOTE: This option is not supported if you select the authentication type as Web-authentication.
User agents	Enter a user-agent value which is used to verify that the user's browser traffic is HTTP/HTTPS traffic. NOTE: This option is not supported if you select the authentication type as Web-authentication.
Advanced Settings	
Destination address translation	Select the action to be taken on a destination address translation from the list. The options available are: None, Drop Translated, and Drop Untranslated.

Table 216: Fields on the Security Policies Page *(Continued)*

Field	Action
Redirect options	Select a redirect action from the list. The options available are: None, Redirect Wx, and Reverse Redirect Wx. NOTE: This option is not supported for SRX5000 line of devices.
TCP Session Options	
Sequence number check	Enable or disable checking of sequence numbers in TCP segments during stateful inspections at policy rule level. By default, the check happens at the global level. To avoid commit failure, turn off Sequence number check under Global Options > Flow > TCP Session.
SYN flag check	Enable or disable the checking of the TCP SYN bit before creating a session at policy rule level. By default, the check happens at the global level. To avoid commit failure, turn off SYN flag check under Global Options > Flow > TCP Session.
Schedule	
Schedule	Click Schedule and select one of the configured schedules from the list. To add a new schedule, click Add New Schedule. The Add New Schedule page appears. For more information on creating a new schedule, see Table 219 on page 746.

Table 217: Fields on the Create Address Page

Field	Action
Name	Enter a name for the address. The name must be a unique string that must begin with an alphanumeric character and can include colons, periods, dashes, and underscores; no spaces allowed; 63-character maximum.
IP type	Select IPv4 or IPv6.
IPv4	
IPv4 address	Enter a valid IPv4 address.

Table 217: Fields on the Create Address Page (Continued)

Field	Action
Subnet	Enter a subnet mask for the IPv4 address.
IPv6	
IPv6 address	Enter a valid IPv6 address.
Subnet prefix	Enter a subnet prefix for the IPv6 address.

Table 218: Fields on the Create Service Page

Field	Action
Global Settings	
Name	Enter a unique name for the application.
Description	Enter description of the application.
Application protocol	Select an option from the list for application protocol.
Match IP protocol	Select an option from the list to match IP protocol.
Source port	Select an option from the list for source port.
Destination port	Select an option from the list for destination port.
ICMP type	Select an option from the list for ICMP message type.
ICMP code	Select an option from the list for ICMP message code.

Table 218: Fields on the Create Service Page (*Continued*)

Field	Action
RPC program numbers	Enter a value for RPC program numbers. The format of the value must be W or X-Y. Where, W, X, and Y are integers between 0 and 65535.
Inactivity timeout	Select an option from the list for application specific inactivity timeout.
UUID	Enter a value for DCE RPC objects. NOTE: The format of the value must be 12345678-1234-1234-1234-123456789012.
Custom application group	Select an application set name from the list.

Terms

Click +. The Create Term page appears.

Name	Enter a name for the term.
ALG	Select an option from the list for ALG.
Match IP protocol	Select an option from the list to match IP protocol.
Source port	Select an option from the list for source port.
Destination port	Select an option from the list for destination port.
ICMP type	Select an option from the list for ICMP message type.
ICMP code	Select an option from the list for ICMP message code.

Table 218: Fields on the Create Service Page (*Continued*)

Field	Action
RPC program numbers	Enter a value for RPC program numbers. NOTE: The format of the value must be W or X-Y. Where, W, X, and Y are integers between 0 and 65535.
Inactivity timeout	Select an option from the list for application specific inactivity timeout.
UUID	Enter a value for DCE RPC objects. NOTE: The format of the value must be 12345678-1234-1234-1234-123456789012.

Table 219: Fields on the Add New Schedule Page

Field	Action
Name	Enter the name for the schedule.
Description	Enter a description for the schedule.
Repeats	Select an option from the list to repeat the schedule: • Never • Daily • Weekly
All Day	Enable this option to schedule an event for an entire day. This option is available only for Never and Daily repeat type schedule.
Start date	Select the schedule start date in the YYYY-MM-DD format. This option is available only for Never repeat type schedule.

Table 219: Fields on the Add New Schedule Page *(Continued)*

Field	Action
Stop date	Select the schedule stop date in the YYYY-MM-DD format. This option is available only for Never repeat type schedule.
Start time	Enter the start time for the schedule in HH:MM:SS 24 hours format. This option is available only for Daily repeat type schedule.
Stop time	Enter the end time for the schedule in HH:MM:SS 24 hours format. This option is available only for Daily repeat type schedule.
Repeat on	Select the days and time on which you want to repeat the schedule. To set time for the selected day(s): 1. Click Set Time or Set Time to Selected Days. The Set Time to Selected Days page appears. 2. Enter the following details: • Name—Displays the day(s) you have selected. • All day—Enable this option for the event to run for the entire day. • Start time—Enter the start time in HH:MM:SS 24 hours format. • Stop time—Enter the stop time in HH:MM:SS 24 hours format. 3. Click OK to save changes. This option is available only for Weekly repeat type schedule.

Table 219: Fields on the Add New Schedule Page (Continued)

Field	Action
Schedule criteria	Select any of the following options: • Schedule Never Stops—Schedule can be active forever (recurrent), but only as specified by the daily or weekly schedule. • Schedule Specify Window—Schedule can be active during a single time slot, as specified by a start date and a stop date. Enter the following details: • Schedule starts—Enter the schedule start date in the YYYY-MM-DD format. • Schedule ends—Enter the schedule start date in the YYYY-MM-DD format. This option is available only for Daily and Weekly repeat type schedule.

RELATED DOCUMENTATION

[Edit a Security Policy Rule | 749](#)

[Clone a Security Policy Rule | 748](#)

Clone a Security Policy Rule

You are here: **Security Policies & Objects > Security Policies.**

To clone a rule:

1. Select a rule that you want to clone on the Security Policies page.
2. Click **More** > **Clone** available on the upper right-side of the page.

The Security Policies page appears with inline editable fields. For more information on editing the fields, see ["Add a Rule to a Security Policy" on page 731](#).

3. Click **OK** to save the changes or click **Cancel** to discard the changes.

A cloned rule is created for the selected rule. By default, the name of the cloned rule is in the format: `<rule name>_clone`.

RELATED DOCUMENTATION

[Delete a Security Policy Rule](#) | 749

Edit a Security Policy Rule

You are here: **Security Policies & Objects** > **Security Policies**.

To edit a rule:

1. Select an existing rule configuration that you want to edit on the Security Policies page.
2. Click the pencil icon available on the upper right-side of the page.
The Security Policies page appears with inline editable fields. For more information on editing the fields, see "[Add a Rule to a Security Policy](#)" on page 731.
3. Click **OK** to save the changes.

RELATED DOCUMENTATION

[Delete a Security Policy Rule](#) | 749

Delete a Security Policy Rule

You are here: **Security Policies & Objects** > **Security Policies**.

To delete a rule:

1. Select one or more rules that you want to delete on the Security Policies page.
2. Click the delete icon available on the upper-right corner of the page.
3. Click **Yes** to delete the rules or click **No** to retain the rules.

RELATED DOCUMENTATION

[About the Security Policies Page](#) | 723

Configure Captive Portal for Web Authentication and Firewall User Authentication

SUMMARY

Learn how to configure captive portal for Web authentication and firewall user authentication using J-Web.

IN THIS SECTION

- [Overview | 750](#)
- [Workflow | 751](#)
- [Step 1: Create a Logical Interface and Enable Web Authentication | 753](#)
- [Step 2: Create an Access Profile | 759](#)
- [Step 3: Configure Web Authentication Settings | 760](#)
- [Step 4: Create Security Zones and Assign Interfaces to the Zones | 762](#)
- [Step 5: Enable Web or Firewall User Authentication for Captive Portal in the Security Policy | 766](#)
- [Step 6: Verify the Web Authentication and User Authentication Configuration | 773](#)

Overview

What Is Captive Portal?

Captive portal is a method of authenticating devices that need to connect to a network. On an SRX Series Firewalls, you can enable captive portal to redirect Web browser requests to a login page that prompts you to enter your username and password. After successful authentication, you can proceed with the original page request and subsequent network access.

What Is Web Authentication?

With a Web authentication method, you point a browser to an IP address on a device that is enabled for Web authentication. This action initiates an HTTPS session on the IP address that hosts the Web authentication feature on the device. The device then prompts you to enter your username and password, and the result is cached on the device. When the traffic later encounters a Web authentication policy, your access is allowed or denied based on the previous Web authentication results.

You can use other authentication methods as well, but we will not cover those methods in this document. However, we describe each of those methods in brief:

- **Pass-through authentication**—Pass-through user authentication is a form of active authentication. In this method, the device prompts you to enter a username and password. If authentication validates your identity, you are allowed to pass through the firewall and access the requested resources.
- **Pass-through with web-redirect**—When using this authentication method for HTTPS client requests, you can use the web-redirect feature to direct your requests to the device's internal webserver. The webserver sends a redirect HTTPS response to the client system, directing it to reconnect to the webserver for user authentication. The interface that the client's request arrives at is the interface on which the redirect response is sent.

What Is Firewall User Authentication?

A firewall user is a network user who must provide a username and password for authentication when initiating a connection across the firewall. Junos OS enables administrators to restrict or to permit firewall users' access to protected resources (in different zones) behind a firewall based on their source IP address and other credentials. After defining the firewall users, you can create a policy that requires the users to authenticate using one of the three authentication methods (Web, pass-through, or pass-through with web-redirect).

Workflow

IN THIS SECTION

- [Scope | 751](#)
- [Before You Begin | 753](#)

Scope

Here's a sample topology (see [Figure 19 on page 752](#)), which comprises:

- A firewall user's device that acts as a client.
- An SRX Series Firewall that has access to the Internet.
- A network device that acts as an HTTPS server.

Figure 19: Sample Topology



In this sample topology, you'll use J-Web on the SRX Series Firewall to do the following tasks:

NOTE: The values used to configure the sample topology are only examples.

Step	Action
1	Create a logical interface on ge-0/0/3, assign it the IP address 203.0.113.35, and enable Web authentication. NOTE: In this example, the firewall user system IP address is 203.0.113.12, which is in the same subnet as 203.0.113.0/24. Create a logical interface on ge-0/0/2 and assign it the IP address 192.0.2.1. NOTE: In this example, the HTTPS server IP address is 192.0.2.1.
2	Create an access profile (FWAUTH) and define local authentication services.
3	Configure Web authentication settings to display the successful login message.
4	Create an untrust (UT_ZONE) and a trust (T_ZONE) zones and assign the ge-0/0/3 and ge-0/0/2 interfaces, respectively.
5	Configure captive portal for Web authentication and firewall user authentication in the security policy rules (FWAUTH-RULE).

(Continued)

Step	Action
6	Verify that the configured values work for a firewall user: • For Web authentication, you'll successfully authenticate using <code>https://203.0.113.35</code>. • For firewall user authentication, you'll successfully authenticate using <code>https://203.0.113.35</code> and then get redirected to <code>https://192.0.2.1</code> for accessing the HTTPS server.

Before You Begin

- The values used to configure the sample topology are only examples. You can change any details necessary to match your network configuration.
- Ensure that the SRX Series Firewall you use in this example runs Junos OS Release 21.4R1 or later.
- Ensure that your device has the required certificates installed to allow authentication. In this example, we'll use *cert1*, a self-signed certificate.

Step 1: Create a Logical Interface and Enable Web Authentication

In this step, you'll do the following tasks:

- For the ge-0/0/3 interface on the SRX Series Firewall:
 1. Create a logical interface for an untrust zone.
 2. Assign the IPv4 address 203.0.113.35 to the interface.

NOTE: You'll use the same IP address for enabling captive portal.

3. Enable HTTPS on the interface for Web authentication.
- For the ge-0/0/2 interface on the SRX Series Firewall:
 1. Create a logical interface for a trust zone.
 2. Assign the IPv4 address 192.0.2.1 to the interface.

You are here (in the J-Web UI): **Network > Connectivity > Interfaces**

To create a logical interface for an untrust zone and to enable Web authentication:

1. Select **ge-0/0/3** and then select **Create > Logical Interface** on the upper-right corner of the Interfaces page.

The Add Logical Interface for ge-0/0/3.0 page appears.

NOTE: You cannot configure captive portal on the fxp0 interface.

2. Specify the following details:

Field	Action
Logical unit number	Type 0 .
Description	Type UT_Zone Interface .
VLAN ID	This field is not editable.
Multi tenancy type	Select None from the list.
Logical system	This field is not editable.
Zone	Select None from the list. In a later step, we'll create an untrust zone (UT_ZONE) and assign the ge-0/0/3 interface to it. See "Step 4: Create Security Zones and Assign Interfaces to the Zones" on page 762.
Protocol (family) - IPv4 Address	
IPv4 Address / DHCP	Select the check box to enable the IPv4 Address/ DHCP configuration.

(Continued)

Field	Action
IPv4 Address	Select IPv4 Address. Then, click + and enter the following details: • IPv4 Address—Type 203.0.113.35 for Web authentication. NOTE: The captive portal configuration uses the same IPv4 address. • Subnet—Select 24 using the up or down arrow. • Web Auth: a. Click Configure. The Web Authentication page appears. b. Select Enable Https dedicated to captive portal. c. Click OK to save changes.

Add Logical Interface for ge-0/0/3.0

Logical unit number

0

Description

UT_Zone Interface

VLAN ID

Multi tenancy type

None

Logical system

None

Zone

None

Protocol (family)

IPv4 Address

IPv6 Address

Ethernet S

☒ IPv4 Address / DHCP

☐ DHCP

☒ IPv4 Address

Web Authentication

Enable Http

Enable Https

Redirect to Https

☐

☒

☐

Cancel

OK

+ X

	IPv4 Address	Subnet	Web Auth	ARP
☒	203.0.113.35	24	Configure	Edit

Cancel

OK

3. Click **OK** to save the changes.
- Good job! You've created a logical interface on ge-0/0/3 with IP address 203.0.113.35 (Web authentication enabled) for your system.*
- To create a logical interface for a trust zone:
1. Select **ge-0/0/2** and then select **Create > Logical Interface** on the upper-right corner of the Interfaces page.
- The Add Logical Interface for ge-0/0/2.0 page appears.
2. Specify the following details:

Field	Action
Logical unit number	Type 0 .
Description	Type T_Zone Interface .
VLAN ID	This field is not editable.
Multi tenancy type	Select None from the list.
Logical system	This field is not editable.
Zone	Select None from the list. In a later step, we'll create a trust zone (T_ZONE) and assign the ge-0/0/2 interface to it. See "Step 4: Create Security Zones and Assign Interfaces to the Zones" on page 762.
VLAN ID	This field is not editable.
Protocol (family) - IPv4 Address	
IPv4 Address / DHCP	Select the check box to enable the IPv4 Address/ DHCP configuration.
IPv4 Address	a. Select IPv4 Address. b. Click +. c. IPv4 Address—Type 192.0.2.1 (HTTPS server). d. Subnet—Select 24 using the up or down arrow. e. Web Auth—Leave as is. f. ARP—Leave as is.

Add Logical Interface for ge-0/0/2.0

Logical unit number: 0

Description: T_Zone Interface

VLAN ID:

Multi tenancy type: None

Logical system: None

Zone: None

Protocol (family):

IPv4 Address | IPv6 Address | Ethernet Switching

☒ IPv4 Address / DHCP

☐ DHCP

☒ IPv4 Address

	IPv4 Address	Subnet	Web Auth	ARP
☒	192.0.2.1	24	Configure	Edit

Cancel OK

- Click **OK** to save the changes.

Good job! You've created a logical interface on ge-0/0/2 with IP address 192.0.2.1 for the HTTPS server.

- Click **Commit** (at the right-side of the top banner) and select **Commit configuration** to commit the changes now.

The successful-commit message appears.

You can also choose to commit all configuration changes at once, at the end of "[Step 5: Enable Web or Firewall User Authentication for Captive Portal in the Security Policy](#)" on page 766.

Step 2: Create an Access Profile

Let's create an access profile to define local authentication services. You will use this access profile in Web authentication settings and security policies.

You are here (in the J-Web UI): **Security Services > Firewall Authentication > Access Profile**

To create an access profile:

1. Click the add icon (+) on the upper-right corner of the Access Profile page.


The Create Access Profile page appears.

2. Specify the following details:

Field	Action
Name	Type FWAUTH .
Address Assignment	(Optional) Select None from the list. You can select an address pool from the list. You can also add a new address pool by clicking Create Address Pool and providing the required values.
Authentication	
Local	a. Select Local to configure the local authentication services. b. Click + and enter the following details on the Create Local Authentication User page: i. Username—Type FWClient1. This is the username of the user requesting access. ii. Password—Type \$ABC123. iii. XAUTH IP Address—Leave as is. iv. Group—Leave as is. v. Click OK to save the changes.
Authentication Order	
Order 1	Select Local from the list.

(Continued)

Field	Action
Order 2	By default, None is selected. Leave as is.

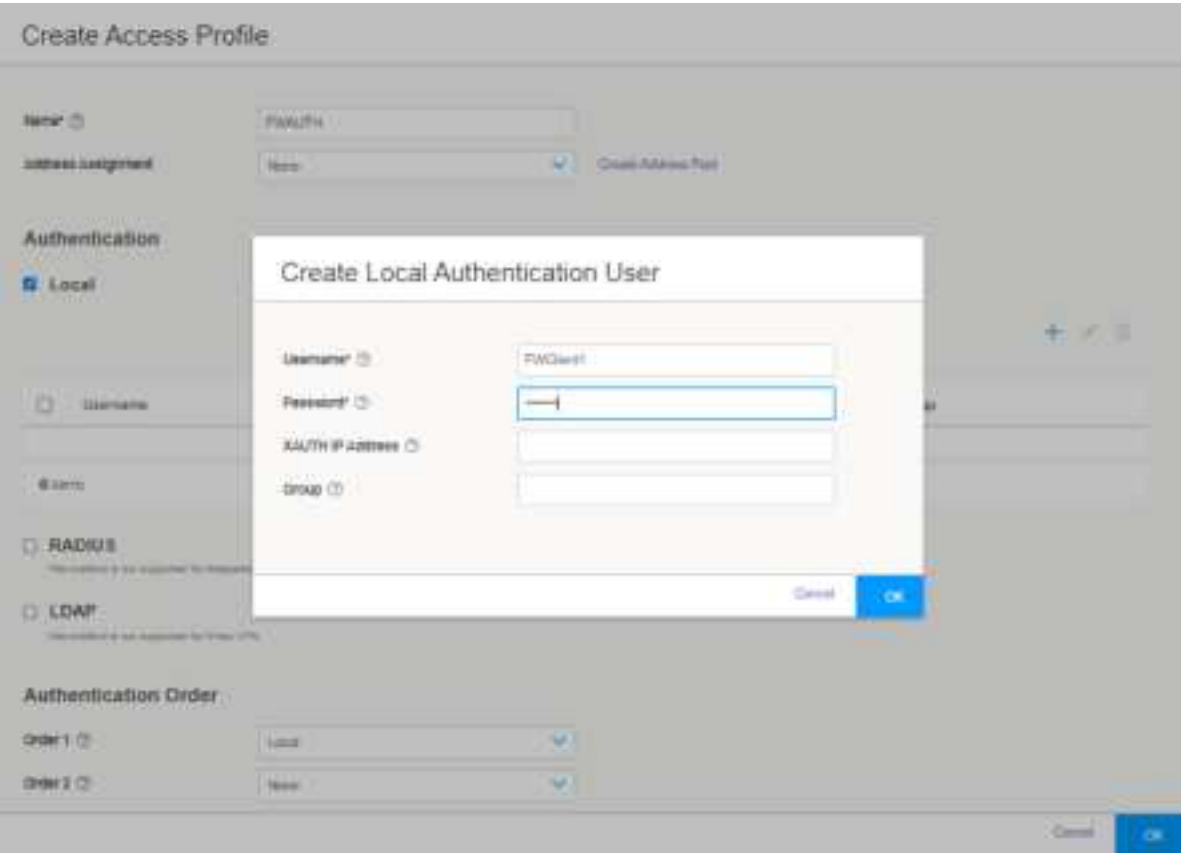

3. Click **OK** to save the changes.
- Good job! You've created the **FWAUTH** access profile.*
4. Click **Commit** (at the right-side of the top banner) and select **Commit configuration** to commit the changes now.
- The successful-commit message appears.
- You can also choose to commit all configuration changes at once, at the end of ["Step 5: Enable Web or Firewall User Authentication for Captive Portal in the Security Policy"](#) on page 766.

Step 3: Configure Web Authentication Settings

We'll now assign the created access profile, define a successful-login message, and upload the logo image. You use this image for both Web authentication and captive portal.

You are here (in the J-Web UI): **Security Services > Firewall Authentication > Authentication Settings**

To configure Web authentication settings:

1. Click **Web Authentication Settings**.
2. Do the following:
 - **Default Profile**—Select **FWAUTH** from the list. The security policies use this profile to authenticate users.
 - **Success**—Type **Authentication Success** as the message to be displayed for users who log in successfully.
3. (Optional) To upload a customized logo:
 - a. Click **Logo Image Upload**.
 - b. Click **Browse** for uploading a logo file.
 - c. Select a logo image and then click **OK**.

NOTE: For a good logo, the image must be in the **.gif** format and the resolution must be 172x65.

- d. Click **Sync** to apply the logo.

The uploaded image will now appear on the captive portal login page or the Web authentication login page.



4. Click **Save** on the upper-right corner of the Authentication Settings page to save the changes.
Congratulations! You've successfully saved your Web authentication settings.
5. Click **Commit** (at the right-side of the top banner) and select **Commit configuration** to commit the changes now.

The successful-commit message appears.

You can also choose to commit all configuration changes at once, at the end of "[Step 5: Enable Web or Firewall User Authentication for Captive Portal in the Security Policy](#)" on page 766.

Step 4: Create Security Zones and Assign Interfaces to the Zones

You create a security zone to define one or more network segments that regulate inbound and outbound traffic through policies.

We'll now separately create:

- An untrust zone (UT_ZONE) and assign the ge-0/0/3 interface to it.
- A trust zone (T_ZONE) and assign the ge-0/0/2 interface to it.

You are here (in the J-Web UI): **Security Policies & Objects > Zones/Screens**

To create UT_ZONE (untrust zone) and T_ZONE (trust zone) and to assign the defined interfaces to the zones:

1. Click the add icon (+) on the upper-right corner of the Zone List page.

The Add Zone page appears.

2. Specify the following details:

Field	Action
Main	
Zone name	• Type UT_ZONE for an untrust zone. • Type T_ZONE for a trust zone.
Zone description	• Type untrust zone for UT_ZONE. • Type trust zone for T_ZONE.
Zone type	Select Security .
Application Tracking	Leave as is.
Source Identity Log	Leave as is.

(Continued)

Field	Action
Traffic Control Options	Leave as is.
Interfaces	- For UT_ZONE, select ge-0/0/3.0 from the Available column and click the right arrow to move it to the Selected column. - For T_ZONE, select ge-0/0/2.0 from the Available column and click the right arrow to move it to the Selected column.

Add Zone

[Main](#) | [Host Inbound Traffic - Zone](#) | [Host Inbound Traffic - Interface](#)

Zone Name *

Zone Description

Zone Type *
☒ Security
 ☐ Functional

Application Tracking ☐

Source Identity Log ☐

Traffic Control Options

Send RST for Non Matching Session ☐

Binding Screen

Interfaces

Available	Selected
ge-0/0/2.0	ge-0/0/3.0
fxp0.0	

[Cancel](#) [OK](#)

Add Zone

MainHost Inbound Traffic - ZoneHost Inbound Traffic - Interface

Zone Name *

T_ZONE

Zone Description

trust zone

Zone Type *

Security

Functional

Application Tracking

Source Identity Log

Traffic Control Options

Send RST for Non Matching Session

Binding Screen

Interfaces

Available

ge-0/0/3.0

fxp0.0

Selected

ge-0/0/2.0

Cancel

OK

Field	Action (Sample Value)
Host Inbound Traffic - Zone	Leave as is.

Host Inbound Traffic - Interface

Selected Interfaces	- For UT_ZONE, select ge-0/0/3.0. - For T_ZONE, select ge-0/0/2.0.
Available Services	Select all from the Available Services column and click the right arrow to move it to the Selected column.

(Continued)

Field	Action (Sample Value)
Available Protocols	Select all from the Available Protocols column and click the right arrow to move it to the Selected column.

Add Zone

Main

Host Inbound Traffic - Zone

Host Inbound Traffic - Interface

Selected Interfaces

ge-0/0/3.0

Available Services

all
bootp
dhcp
dhcpv6
dns
finger
ftp
ident-reset

Selected

all

Available Protocols

all
bfd
bgp
dvmrp
igmp
ldp
msdp
nhrp

Selected

all

Cancel

OK

Add Zone

The screenshot shows the 'Add Zone' configuration window. The 'Host Inbound Traffic - Interface' tab is selected. The 'Selected Interfaces' list contains 'ge-0/0/2.0'. The 'Available Services' list includes 'all', 'bootp', 'dhcp', 'dhcpv6', 'dns', 'finger', 'ftp', and 'ident-reset'. The 'Selected' list for services contains 'all'. The 'Available Protocols' list includes 'all', 'bfd', 'bgp', 'dvmrp', 'igmp', 'ldp', 'msdp', and 'nhdp'. The 'Selected' list for protocols contains 'all'. The 'OK' button is highlighted in blue.

3. Click **OK** to save the changes.

Good job! You have assigned the ge-0/0/3 interface to UT_ZONE and ge-0/0/2 to T_ZONE.

4. Click **Commit** (at the right-side of the top banner) and select **Commit configuration** to commit the changes now.

The successful-commit message appears.

You can also choose to commit all configuration changes at once, at the end of "[Step 5: Enable Web or Firewall User Authentication for Captive Portal in the Security Policy](#)" on page 766.

Step 5: Enable Web or Firewall User Authentication for Captive Portal in the Security Policy

We'll now enable captive portal in the security policy rules to redirect a client HTTPS request to the internal HTTPS server of the device.

You are here (in the J-Web UI): **Security Policies & Objects > Security Policies**

To configure security policy rule for captive portal:


1. Click the add icon (+) on the upper-right corner of the Security Policies page.

The inline editable fields appear.

2. Specify the following details:

Field	Action
Rule Name	
Name	Type FWAUTH-RULE .
Description	Type Test rule .
Source Zone	
+	Click + to add a source zone. The Select Sources page appears.


(Continued)

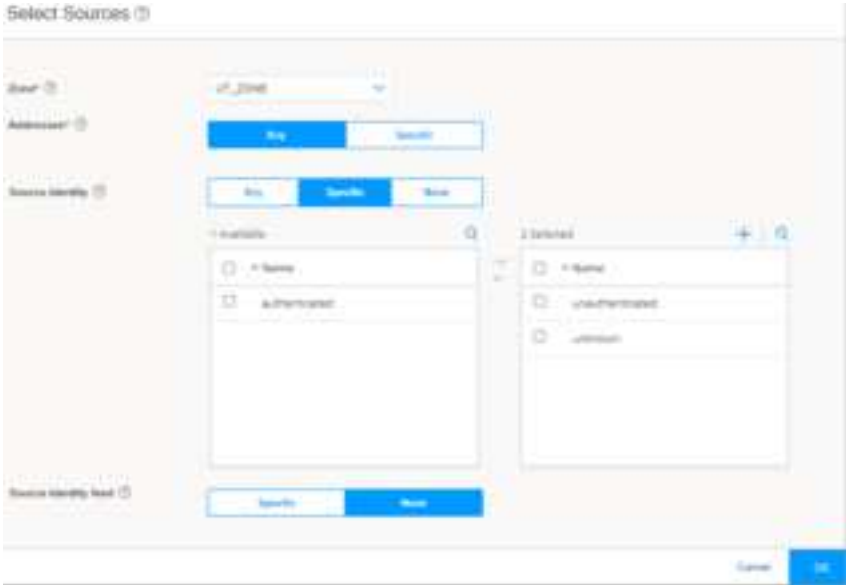Field	Action
Select Sources	Specify the following details: a. Zone—Select UT_ZONE from the list to which you want the rule to be associated. b. Addresses—By default, Any is selected. Leave as is. c. Source identity: - For Web authentication, select None. - For firewall user authentication, select Specific. Then select unauthenticated and unknown from the Available column and click the right arrow to move these values to the Selected column. d. Source identity feed—Select None.  e. Click OK to save the changes.
Destination Zone	
+	Click + to add a destination zone. The Select Destination page appears.

(Continued)

Field	Action
Select Destination	Specify the following details: a. Zone—Select T_ZONE from the list to which you want the rule to be associated. b. Addresses—By default, Any is selected. Leave as is. c. Dynamic applications—Select None. NOTE: You cannot configure dynamic applications with Web authentication. d. Services—Select Any. e. URL category—Select None. f. Destination identity feed—Select None. Select Destination ⓘ Zone ⓘ T_ZONE Addresses ⓘ Any Specific Dynamic applications ⓘ Any Specific None Services ⓘ Any Specific None URL category ⓘ Any Specific None Destination identity feed ⓘ Specific None CancelOK g. Click OK to save the changes.
Action	Select Permit .
Advanced Services	Leave as is.
Rule Options	
+	Click + to select rule options. The Select Rule Options page appears.

(Continued)

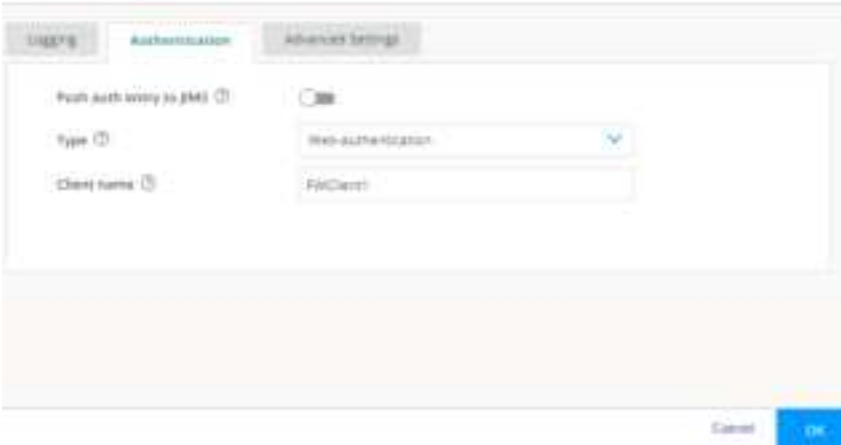Field	Action
Logging	Leave as is.
Authentication	Specify the following details: • Push auth entry to JIMS—By default, this option is disabled. Leave as is. • Type—Select Web-authentication from the list. • Client name—Type FWClient1. • Click OK to save the changes. Select Rule Options ⓘ 

(Continued)


Field	Action
Authentication	Specify the following details:
NOTE: Use this configuration for <i>firewall user authentication</i> only.	• Push auth entry to JIMS—By default, this option is disabled. Leave as is. • Type—Select User-firewall from the list. • Access profile—Select FWAUTH from the list. • Domain—Leave as is. • Web redirect (http)—By default, this option is disabled. Leave as is. • Captive Portal—Enable to redirect a client HTTPS request to the webserver for user authentication. • Interface—Select ge-0/0/3.0 (203.0.113.35/24) from the list for the webserver where the client HTTPS request is redirected. This is the same interface that you configured while enabling Web authentication. • IP address—Type 203.0.113.35 for the webserver where the client HTTPS request is redirected. This is the same IPv4 address that you configured while enabling Web authentication on the ge-0/0/3 Interface. • SSL Termination Profile—Select SSL_termination (cert1) from the list for SSL termination support service. Acting as an SSL proxy server, the SRX Series Firewall uses the SSL termination process to terminate the client's SSL session. • Auth only browser—By default, this option is disabled. Leave as is. • User agents—Leave as is. • Click OK to save the changes.

(Continued)

Field	Action
	Select Rule Options ⓘ Settings Authentication Advanced Settings Push auth entry to RMS ⓘ ☐ Type ⓘ User-Forward ▼ Access Profile** ⓘ Any-URLs ▼ Add Domain ⓘ Domain ▼ Web redirect (page) ⓘ ☐ Captive Portal ⓘ ☒ Interface* ⓘ ge 0/0:30 (203.0.113.200) ▼ IPv4 Address* ⓘ 203.0.113.25 ▼ SSL Termination Profile SSL_Termination (cert1) ▼ Add Auth only browser ⓘ ☐ User agents ⓘ + × Cancel OK

3. Click the tick icon
- 
- on the right-side of the row after you're done with the configuration.

NOTE: Slide the horizontal bar backward if the inline tick and cancel icons are not available when creating a new rule.

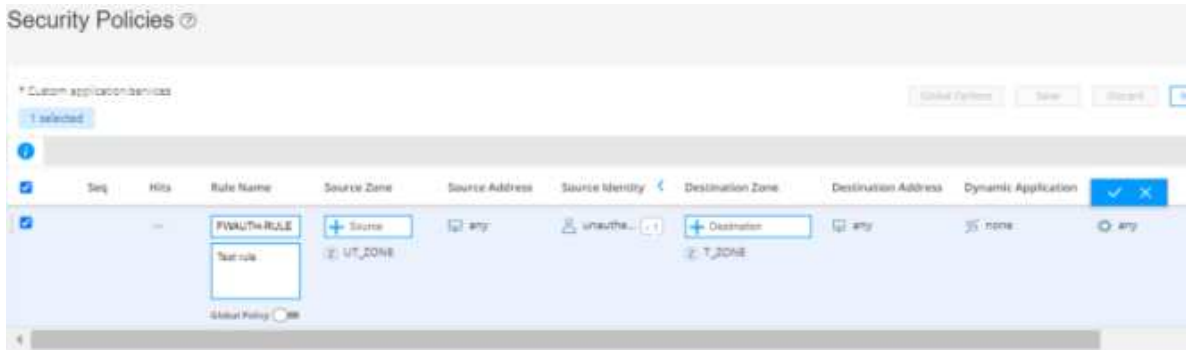

4. Click **Save** on the upper-right corner of the Security Policies page to save changes.



5. Click **Commit** (at the right side of the top banner) and select **Commit configuration**.

The successful-commit message appears.

Congratulations! You've successfully committed your configuration changes. You are all set with the Web or firewall user authentication policy.

Step 6: Verify the Web Authentication and User Authentication Configuration

IN THIS SECTION

- Purpose | 773
- Action | 774
- What's Next | 776

Purpose

The final step! Let's see whether your configuration works for a firewall user:

- For Web authentication, you'll successfully authenticate using <https://203.0.113.35>. This is the same IPv4 address that you configured in ["Step 1: Create a Logical Interface and Enable Web Authentication" on page 753](#).
- For firewall user authentication, you'll successfully authenticate using <https://203.0.113.35> and then get redirected to <https://192.0.2.1> for accessing the HTTPS server. These are the same IPv4


addresses that you configured in ["Step 1: Create a Logical Interface and Enable Web Authentication" on page 753](#).

Action

To verify the Web authentication configuration:

1. Type **https://203.0.113.35** in your Web browser.

The Firewall Authentication login page appears.

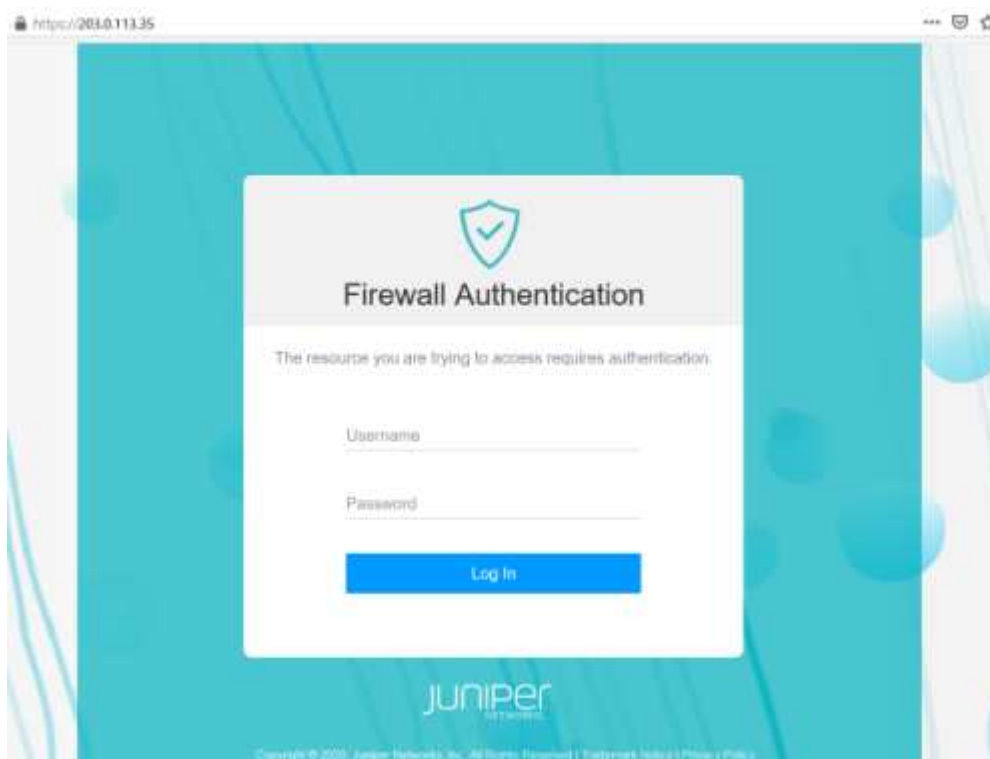

2. Type the following credentials, and then click **Log In**.

- Username—**FWClient1**
- Password—**\$ABC123**

Congratulations! You are successfully authenticated. You can also see the success message *Authentication Success* that you configured.




3. Click **Close**.

To verify firewall user authentication:


1. Type **https://192.0.2.1** in your Web browser.

You are redirected to **https://203.0.113.35** for Web authentication.

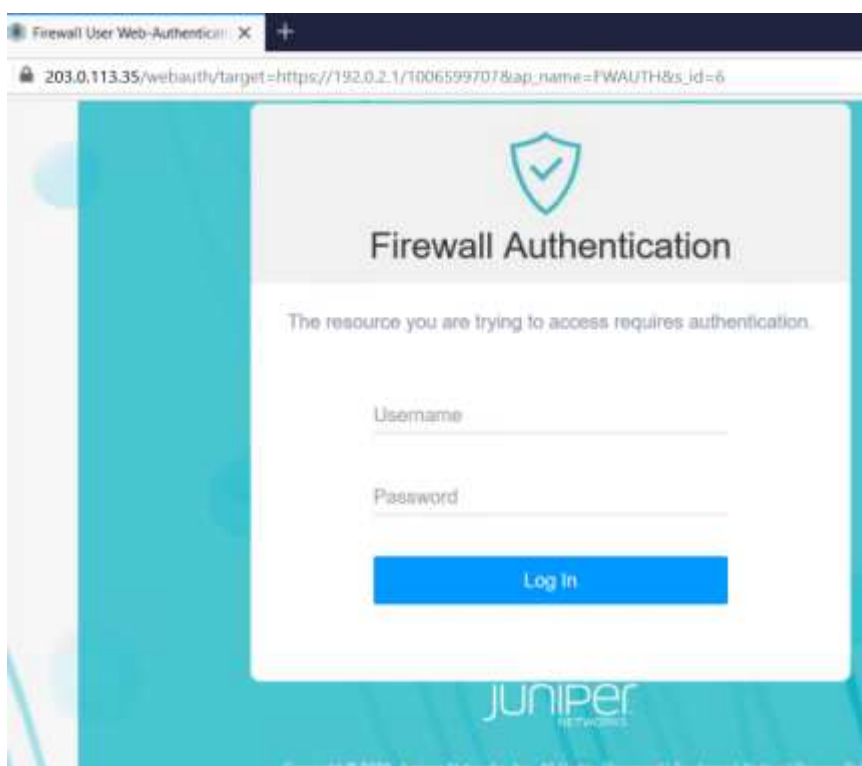

2. Type the following credentials, and then click **Log In**.

- Username—FWClient1
- Password—\$ABC123

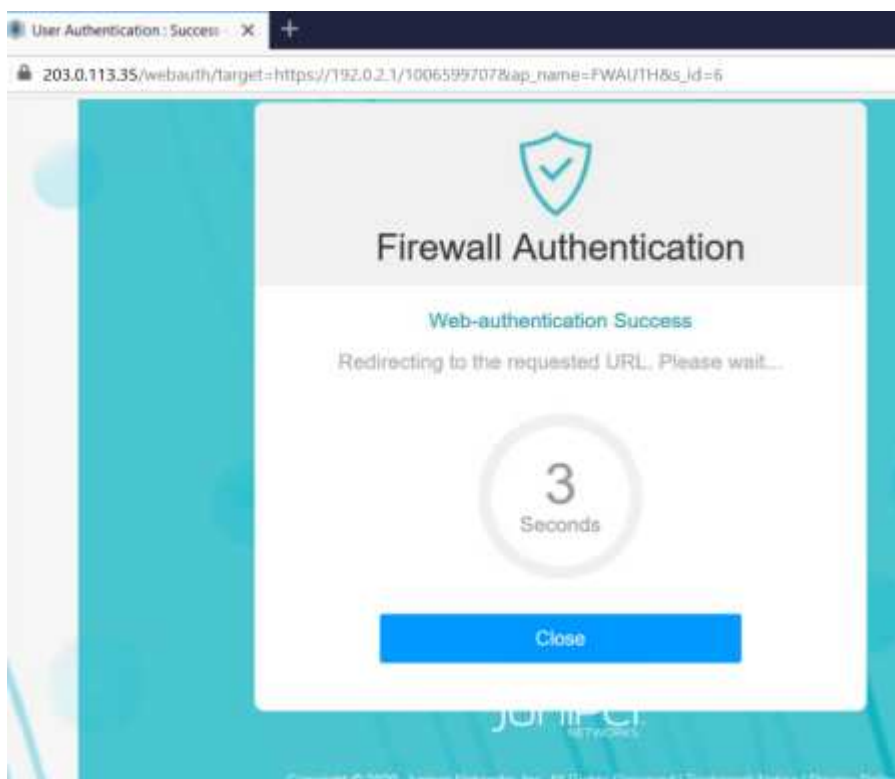

Congratulations! You are successfully authenticated. Soon, you'll be redirected to <https://192.0.2.1>, and you'll be able to access the HTTPS server.

What's Next

To keep going, visit the [J-Web for SRX Series Documentation](#) page in the Juniper TechLibrary.

Metadata Streaming Policy

IN THIS CHAPTER

- [About the Metadata Streaming Policy Page | 777](#)
- [Create a Metadata Streaming Policy | 779](#)
- [Edit a Metadata Streaming Policy | 780](#)
- [Delete a Metadata Streaming Policy | 781](#)

About the Metadata Streaming Policy Page

IN THIS SECTION

- [Benefits of Metadata Streaming | 778](#)
- [Tasks You Can Perform | 778](#)
- [Field Descriptions | 779](#)

You are here: **Security Policies & Objects > Metadata Streaming Policy.**

Configure a security metadata streaming policy on SRX Series Firewalls to send a network traffic metadata and connection patterns to Juniper ATP Cloud. Using DNS, a metadata streaming profile protects and defends your network from advanced threats. You must assign the metadata streaming profile to the metadata streaming policy. For more information on the metadata streaming profile, see ["About the Metadata Streaming Profile Page" on page 1022](#). After configuring the metadata streaming policy, assign it to the security policy at zone-level.

Domain Name System (DNS) Domain Generation Algorithm (DGA) generates seemingly random domain names that are used as rendezvous points with potential C&C servers. DNS DGA detection uses machine learning models as well as known pre-computed DGA domain names to provides domain verdicts, which helps in-line DNS query blocking and sinkholing on SRX Series Firewalls.

Encrypted Traffic Insights (ETI) detects malicious threats that are hidden in encrypted traffic without intercepting and decrypting the traffic.

Benefits of Metadata Streaming

- Provide all SRX Series Firewalls with a SaaS-based, high-performance, and low-overhead solution.
- Deploy easily to existing SRX environments.
- SRX can detect and act on Domain Name System (DNS) without any sensors.

Tasks You Can Perform

You can perform the following tasks from this page:

- Create a metadata streaming policy. See ["Create a Metadata Streaming Policy" on page 779](#).
- Edit a metadata streaming policy. See ["Edit a Metadata Streaming Policy" on page 780](#).
- Delete a metadata streaming policy. See ["Delete a Metadata Streaming Policy" on page 781](#).
- Show or hide columns in the Metadata Streaming Policy table. To do this, use the Show Hide Columns icon in the upper-right corner of the page and select the options to show or deselect to hide options on the page.
- Advanced search for metadata streaming policies. To do this, use the search text box present above the table grid. The search includes the logical operators as part of the filter string. In the search text box, when you hover over the icon, it displays an example filter condition. When you start entering the search string, the icon indicates whether the filter string is valid or not.

For an advanced search:

1. Enter the search string in the text box.

Based on your input, a list of items from the filter context menu appears.

2. Select a value from the list and then select a valid operator to perform the advanced search operation.

NOTE: Press Spacebar to add an AND operator or an OR operator to the search string. Press backspace at any point of time while entering a search criteria, only one character is deleted.

3. Press Enter to display the search results in the grid.

Field Descriptions

Table 220 on page 779 describes the fields on the Metadata Streaming Policy page.

Table 220: Fields on the Metadata Streaming Policy Page

Field	Description
Source Zone	Displays the name of the source zone associated with the metadata streaming policy.
Destination Zone	Displays the name of the destination zone associated with the metadata streaming policy.
Metadata Streaming Profile	Displays the name of the metadata streaming profile associated with the metadata streaming policy.

RELATED DOCUMENTATION

| [Create a Metadata Streaming Policy | 779](#)

Create a Metadata Streaming Policy

You are here: **Security Policies & Objects > Metadata Streaming Policy.**

Create a metadata streaming policy to associate a metadata streaming profile with the zone-level.

To create a metadata streaming policy:

1. Click + available on the upper-right corner of the Metadata Streaming Policy page.
The inline editable fields will appear.
2. Complete the configuration according to the guidelines provided in [Table 221 on page 780](#).
3. Click the tick icon on the upper right of the row once done with the configuration.

Table 221: Fields on the Metadata Streaming Policy Page

Field	Action
Source Zone	Select a source zone from the list to associate it with the metadata streaming policy.
Destination Zone	Select a destination zone from the list to associate it with the metadata streaming policy.
Metadata Streaming Profile	Select a metadata streaming profile from the list to associate it with the zone-level. To create a metadata streaming profile inline, click Create Metadata Streaming Profile available in the list. For information on creating the profile, see "Create a Metadata Streaming Profile" on page 1025.

RELATED DOCUMENTATION

[About the Metadata Streaming Policy Page | 777](#)

[Edit a Metadata Streaming Policy | 780](#)

[Delete a Metadata Streaming Policy | 781](#)

Edit a Metadata Streaming Policy

You are here: **Security Policies & Objects > Metadata Streaming Policy.**

To edit a metadata streaming policy:

1. Select an existing policy configuration to edit on the Metadata Streaming Policy page.
2. Click the pencil icon available on the upper-right corner of the page.

The Metadata Streaming Policy page opens with inline editable fields. For more information on editing the fields, see ["Create a Metadata Streaming Policy" on page 779](#).

3. Click the tick icon on the upper right of the row to save the edited configuration.

RELATED DOCUMENTATION

[About the Metadata Streaming Policy Page | 777](#)

[Create a Metadata Streaming Policy | 779](#)

[Delete a Metadata Streaming Policy | 781](#)

Delete a Metadata Streaming Policy

You are here: **Security Policies & Objects > Metadata Streaming Policy.**

To delete metadata streaming policies:

1. Select one or more policy configuration to delete on the Metadata Streaming Policy page.
2. Click the delete icon available on the upper-right corner of the page.
3. Click **Yes** to delete the policy configuration or click **No** to retain the policy configuration.

RELATED DOCUMENTATION

[About the Metadata Streaming Policy Page | 777](#)

[Create a Metadata Streaming Policy | 779](#)

[Edit a Metadata Streaming Policy | 780](#)

Zones/Screens

IN THIS CHAPTER

- [About the Zones/Screens Page | 782](#)
- [Add a Zone | 784](#)
- [Edit a Zone | 787](#)
- [Delete a Zone | 787](#)
- [Add a Screen | 787](#)
- [Edit a Screen | 798](#)
- [Delete a Screen | 799](#)

About the Zones/Screens Page

IN THIS SECTION

- [Tasks You Can Perform | 782](#)
- [Field Descriptions | 783](#)

You are here: **Security Policies & Objects > Zones/Screens.**

Use this page to configure zones and screens.

Tasks You Can Perform

You can perform the following tasks from this page:

- Add a Zone. See ["Add a Zone" on page 784](#).
- Edit a Zone. See ["Edit a Zone" on page 787](#).

- Delete Zone. See ["Delete a Zone" on page 787](#).
- Add a Screen. See ["Add a Screen" on page 787](#).
- Edit a Screen. See ["Edit a Screen" on page 798](#).
- Delete Screen. See ["Delete a Screen" on page 799](#).

Field Descriptions

[Table 222 on page 783](#) describes the fields on Zones/Screens page.

Table 222: Fields on Zones/Screens Page

Field	Description
Zone List	
Zone name	Displays the name of the zone.
Type	Displays the type of zone.
Host-inbound Services	Displays the services that permit inbound traffic.
Host-inbound Protocols	Displays the protocol that permit inbound traffic.
Interfaces	Displays the interfaces that are part of this zone.
Screen	Displays name of the option objects applied to the zone.
Description	Displays a description of the zone.
Screen List	
Screen name	Displays the name of the screen object.
Type	Displays the type of screen.

Table 222: Fields on Zones/Screens Page *(Continued)*

Field	Description
Description	Displays a description of the screen.

RELATED DOCUMENTATION

| [Add a Zone](#) | [784](#)

Add a Zone

You are here: **Security Policies & Objects > Zones/Screens.**

To add a zone:

1. Click **+** available on the upper-right corner of the Zone List page.
The Add Zone page appears.
2. Complete the configuration according to the guidelines provided in [Table 223 on page 784](#).
3. Click **OK** to save the changes. If you want to discard your changes, click **Cancel**.

Table 223: Fields on the Add Zone page

Field	Action
Main	
Zone name	Enter a name for the zone.
Zone description	Enter a description for the zone.
Zone type	Select a zone type: Security or Functional.
Application Tracking	Select the check box to enable application tracking support for the zone.

Table 223: Fields on the Add Zone page (*Continued*)

Field	Action
Source Identity Log	Select the check box to enable it to trigger user identity logging when that zone is used as the source zone (from-zone) in a security policy.
Traffic Control Options	Enter the following details: - Send RST for Non Matching Session—Select the check box to enable this option. Specifies that when the reset feature is enabled, the system sends a TCP segment with the RESET flag set when traffic arrives. This does not match an existing session and does not have the Synchronize flag set. - Binding Screen—Select a binding screen from the list. NOTE: If you have already configured screens, the list shows the screen names and allows you to select or delete a screen.
Interfaces	Select interfaces from the Available column and move it to the Selected column using the arrow to include in the security zone. Starting in Junos OS Release 19.4R1, J-Web supports Wi-Fi Mini-PIM for SRX320, SRX340, SRX345, and SRX550M devices. The physical interface for the Wi-Fi Mini-PIM uses the name wl-x/0/0, where x identifies the slot on the services gateway where the Mini-PIM is installed.

Host inbound traffic - Zone

Protocols	Specifies the protocols that permit inbound traffic of the selected type to be transmitted to hosts within the zone. Select the protocols from the Available column and move it to the Selected column using the right arrow. Select all to permit all protocols. NOTE: To deselect protocols, select the protocols in the Selected column and then use the left arrow to move them to the Available column.

Table 223: Fields on the Add Zone page *(Continued)*

Field	Action
Services	Specifies the interface services that permit inbound traffic of the selected type to be transmitted to hosts within the zone. Select the services from the Available column and move it to the Selected column using the right arrow. Select all to permit all services. NOTE: To deselect services, select the services in the Selected column and then use the left arrow to move them to the Available column.
Host inbound traffic - Interface	
Selected Interfaces	Displays the list of selected interfaces.
Interface Services	Specifies the interfaced services that permit inbound traffic from the selected interface to be transmitted to hosts within the zone. Select the interface services from the Available column and move it to the Selected column using the right arrow. Select all to permit all interface services. NOTE: If you select multiple interfaces, the existing interface services and protocols are cleared and are applied to the selected interfaces.
Interface Protocols	Specifies the interfaced protocols that permit inbound traffic from the selected interface to be transmitted to hosts within the zone. Select the interface protocols from the Available column and move it to the Selected column using the right arrow. Select all to permit all interface protocols.

RELATED DOCUMENTATION

[Edit a Zone](#) | [787](#)

Edit a Zone

You are here: **Security Policies & Objects > Zones/Screens.**

To edit a zone:

1. Select an existing zone configuration that you want to edit on the Zones/Screens page.
2. Click the pencil icon available on the upper-right corner of the Zone List page.

The Edit Zone page appears with editable fields. For more information on the options, see ["Add a Zone" on page 784](#).

3. Click **OK** to save the changes.

RELATED DOCUMENTATION

| [Delete a Zone](#) | 787

Delete a Zone

You are here: **Security Policies & Objects > Zones/Screens.**

To delete a zone:

1. Select a zone that you want to delete on the Zones/Screens page.
2. Click the delete icon available on the upper-right corner of the Zone List page.

A confirmation window appears.

3. Click **Yes** to delete or click **No** to retain the profile.

RELATED DOCUMENTATION

| [Add a Screen](#) | 787

Add a Screen

You are here: **Security Policies & Objects > Zones/Screens.**

To add a screen:

1. Click **+** available on the upper-right corner of the Screen List page.
The Add Screen page appears.
2. Complete the configuration according to the guidelines provided in [Table 224 on page 788](#).
3. Click **OK** to save the changes. If you want to discard your changes, click **Cancel**.

[Table 224 on page 788](#) describes the fields on the Add Screen page.

Table 224: Fields on the Add Screen Page

Field	Action
Main	
Screen name	Enter a name for the screen object.
Screen description	Enter a description for the screen object.
Generate alarms without dropping packet	Select the check box to enable this feature.
IP spoofing	Select the check box to enable this feature. Specifies that you can enable IP address spoofing. IP spoofing is when a false source address is inserted in the packet header to make the packet appear to come from a trusted source.
IP sweep	Select the check box to enable this feature. Specifies the number of ICMP address sweeps. An IP address sweep can occur with the intent of triggering responses from active hosts.
Threshold	Enter the time interval for an IP sweep. NOTE: If a remote host sends ICMP traffic to 10 addresses within this interval, an IP address sweep attack is flagged and further ICMP packets from the remote host are rejected. Range: 1000 through 1000000 microseconds. The default value is 5000 microseconds.

Table 224: Fields on the Add Screen Page *(Continued)*

Field	Action
Port scan	Select the check box to enable this feature. Specifies the number of TCP port scans. The purpose of this attack is to scan the available services in the hopes that at least one port will respond, thus identifying a service to target.
Threshold	Enter the time interval for a TCP port scan. NOTE: If a remote host scans 10 ports within this interval, a port scan attack is flagged and further packets from the remote host are rejected. Range: 1000 through 1000000 microseconds. The default value is 5000 microseconds.
MS-Windows Defense	WinNuke attack protection—Select the check box to enable this feature. NOTE: WinNuke is a DoS attack targeting any computer on the Internet running Windows operating system.
IPv6 Check	Enter the following details: - Malformed IPv6—Select this check box to enable the IPv6 malformed header intrusion detection service (IDS) option. - Malformed ICMPv6—Select this check box to enable the ICMPv6 malformed IDS option.
Denial of Service	
Land attack protection	Select the check box to enable this feature. NOTE: Land attacks occur when an attacker sends spoofed SYN packets containing the IP address of the victim as both the destination and source IP address.
Teardrop attack protection	Select the check box to enable this feature. NOTE: Teardrop attacks exploit the reassembly of fragmented IP packets.
ICMP fragment protection	Select the check box to enable this feature. NOTE: ICMP packets contain very short messages. There is no legitimate reason for ICMP packets to be fragmented.

Table 224: Fields on the Add Screen Page *(Continued)*

Field	Action
Ping of death attack protection	Select the check box to enable this feature. NOTE: A ping of death occurs when IP packets are sent that exceed the maximum legal length (65,535 bytes).
Large size ICMP packet protection	Select the check box to enable this feature.
Block fragment traffic	Select the check box to enable this feature.
SYN-ACK-ACK proxy protection	Select the check box to enable this feature.
Threshold	Enter the threshold value for SYN-ACK-ACK proxy protection. NOTE: The range is from 1 through 250000 sessions. The default value is 512 sessions.
Anomalies	

Table 224: Fields on the Add Screen Page *(Continued)*

Field	Action
IP	Enter the following details: • Bad option—Select the check box to specify the number of bad options counter. • Security—Select the check box to enable the method for hosts to send security. • Unknown protocol—Select the check box to enable the IP address with security option. • Strict source route—Select the check box to enable the complete route list for a packet to take on its journey from source to destination. • Source route—Select the check box to enable this feature. Specifies the number of IP addresses of the devices set at the source that an IP transmission is allowed to take on its way to its destination. • Timestamp—Select the check box to enable the time recorded (in UTC) when each network device receives the packet during its trip from the point of origin to its destination. • Stream—Select the check box to enable a method for the 16-bit SATNET stream identifier to be carried through networks that do not support streaming. • Loose source route—Select the check box to enable a partial route list for a packet to take on its journey from source to destination. • Record route—Select the check box to enable that IP addresses of network devices along the path that the IP packet travels can be recorded.

Table 224: Fields on the Add Screen Page *(Continued)*

Field	Action
TCP	Enter the following details: • SYN Fragment Protection—Select the check box to enable the number of TCP SYN fragments. • SYN and FIN Flags Set Protection—Select the check box to enable the number of TCP SYN and FIN flags. NOTE: When you enable this option, Junos OS checks if the SYN and FIN flags are set in TCP headers. If it discovers such a header, it drops the packet. • FIN Flag Without ACK Flag Set Protection—Select the check box to enable the number of TCP FIN flags set without an ACK flag set. • TCP Packet Without Flag Set Protection—Select the check box to enable the number of TCP headers without flags set. NOTE: A normal TCP segment header has at least one flag control set.
Flood Defense	
Limit sessions from the same source	Enter the range within which the sessions are limited from the same source IP. Range: 1 through 50000 sessions.
Limit sessions from the same destination	Enter the range within which the sessions are limited from the same destination IP. The range is from 1 through 50000 sessions. Range: 1 through 8000000 sessions per second. The default value is 128 sessions.
ICMP flood protection	Select the check box to enable the Internet Control Message Protocol (ICMP) flood counter. NOTE: An ICMP flood typically occurs when ICMP echo requests use all resources in responding, such that valid network traffic can no longer be processed.
Threshold	Enter the threshold value for ICMP flood protection. NOTE: Range: 1 through 4000000 ICMP pps.

Table 224: Fields on the Add Screen Page *(Continued)*

Field	Action
UDP flood protection	Select the check box to enable the User Datagram Protocol (UDP) flood counter. NOTE: UDP flooding occurs when an attacker sends IP packets containing UDP datagrams to slow system resources, such that valid connections can no longer be handled.
Threshold	Enter the threshold value for UDP flood protection. NOTE: Range: 1 through 100000 session. The default value is 1000 sessions.

Table 224: Fields on the Add Screen Page *(Continued)*

Field	Action
UDP allowlist	- Click Select. The UDP Allowlist window appears. - Click + to add IP addresses that you wish to allowlist. The Add Allowlist window appears. - Enter the following details: - Name—Enter a Name to identify the group of IP addresses. - IPv4/IPv6 Address—Enter IPv4 or IPv6 address. - IPv4/IPv6 Address(es)—Lists the address that you have entered. NOTE: You can select the IP address and click X to delete it. - Click OK to save the changes. - Select the allowlist name in the UDP Allowlist page that you associated with the group of IP addresses that you entered in the Add Allowlist window from the Available column and move it to the Selected column using the right arrow. - Click OK to save the changes. NOTE: - The UDP Allowlist option is enabled only if you select UDP flood protection. - The allowlist that you created in the UDP Allowlist window will be available in the TCP Allowlist window also for selection. To edit an allowlist in the UDP Allowlist page, select the allowlist name and click on the pencil icon. To delete an allowlist in the UDP Allowlist page, select the allowlist name and click on the delete icon.
SYN flood protection	Select the check box to enable all the threshold and age timeout options. Specifies that SYN flooding occurs when a host becomes so overwhelmed by SYN segments initiating incomplete connection requests that it can no longer process legitimate connection requests.

Table 224: Fields on the Add Screen Page *(Continued)*

Field	Action
TCP allowlist	- Click Select. The TCP Allowlist window appears. - Click + to add IP addresses that you wish to allowlist. The Add Allowlist window appears. - Enter the following details: - Name—Enter a Name to identify the group of IP addresses. - IPv4/IPv6 Address—Enter IPv4 or IPv6 address. - IPv4/IPv6 Address(es)—Lists the address that you have entered. NOTE: You can select the IP address and click X to delete it. - Click OK to save the changes. - Select the allowlist name in the TCP Allowlist page that you associated with the group of IP addresses that you entered in the Add Allowlist window from the Available column and move it to the Selected column using the right arrow. - Click OK to save the changes. NOTE: - The TCP Allowlist option is enabled only if you select SYN flood protection. - The allowlist that you created in the TCP allowlist window will be available in the UDP Allowlist window also for selection. To edit a allowlist in the TCP Allowlist page, select the allowlist name and click on the pencil icon. To delete a allowlist in the TCP Allowlist page, select the allowlist name and click on the delete icon.
Attack threshold	Enter a value to specify the number of SYN packets per second required to trigger the SYN proxy mechanism. NOTE: Range: 1 through 1000000 proxied requests per second. The default attack threshold value is 625 pps.

Table 224: Fields on the Add Screen Page *(Continued)*

Field	Action
Alarm threshold	Enter a value to specify the number of half-complete proxy connections per second at which the device makes entries in the event alarm log. NOTE: Range: 1 through 1000000 segments per second. The default alarm threshold value is 250 pps.
Source threshold	Enter a value to specify the number of SYN segments received per second from a single source IP address (regardless of the destination IP address and port number), before the device begins dropping connection requests from that source. NOTE: Range: 4 through 1000000 segments per second. The default source threshold value is 25 pps.
Destination threshold	Enter a value to specify the number of SYN segments received per second for a single destination IP address before the device begins dropping connection requests to that destination. If a protected host runs multiple services, you might want to set a threshold based only on destination IP address, regardless of the destination port number. NOTE: Range: 4 through 1000000 segments per second. The default destination threshold value is 0 pps.
Ager timeout	Enter a value to specify the maximum length of time before a half-completed connection is dropped from the queue. You can decrease the timeout value until you see any connections dropped during normal traffic conditions. Range: 1 through 50 seconds. The default value is 20 seconds. NOTE: 20 seconds is a reasonable length of time to hold incomplete connection requests.

IPv6 EXT Header

Table 224: Fields on the Add Screen Page *(Continued)*

Field	Action
Predefined Header Type	Configure the following screen options: - Hop-by-Hop header—Select an option from the list and enter the value and click + to add it. To delete, select one or more headers and click X. - Destination header—Select an option from the list and enter the value and click + to add it. To delete, select one or more headers and click X.
Routing header	Select the check box to enable the IPv6 routing header screen option.
ESP header	Select the check box to enable the IPv6 Encapsulating Security Payload header screen option.
No-Next header	Select the check box to enable the IPv6 no next header screen option.
Mobility header	Select the check box to enable the IPv6 mobility header screen option.
Fragment header	Select the check box to enable the IPv6 fragment header screen option.
AH header	Select the check box to enable the IPv6 Authentication Header screen option.
Shim6 header	Select the check box to enable the IPv6 shim header screen option.
HIP header	Select the check box to enable the IPv6 Host Identify Protocol header screen option.
Customer Defined Header Type	Enter a value to define the type of header range and click + to add it. Range: 0 through 255. To delete, select one or more header types and click X.

Table 224: Fields on the Add Screen Page *(Continued)*

Field	Action
IPv6 ext header limit	Enter a value to set the number of IPv6 extension headers that can pass through the screen. Range: 0 through 32.
Apply to Zones	
Apply to Zones	Select zones from the Available column and move them to the Selected column using the right arrow.

RELATED DOCUMENTATION

[Edit a Screen](#) | 798

Edit a Screen

You are here: **Security Policies & Objects > Zones/Screens.**

To edit a screen:

1. Select an existing screen that you want to edit on the Zones/Screens page.
2. Click the pencil icon available on the upper-right corner of the Screen List page.
The Edit Screen page appears with editable fields. For more information on the options, see ["Add a Screen" on page 787](#).
3. Click **OK** to save the changes.

RELATED DOCUMENTATION

[Delete a Screen](#) | 799

Delete a Screen

You are here: **Security Policies & Objects > Zones/Screens.**

To delete a screen:

1. Select a screen that you want to delete on the Zones/Screens page.
2. Click the delete icon available on the upper-right corner of the Screen List page.
3. Click **Yes** to delete or click **No** to retain the profile.

RELATED DOCUMENTATION

[About the Zones/Screens Page](#) | 782

Zone Addresses

IN THIS CHAPTER

- [About the Zone Addresses Page | 800](#)
- [Add Zone Addresses | 802](#)
- [Clone Zone Addresses | 804](#)
- [Edit Zone Addresses | 805](#)
- [Delete Zone Addresses | 805](#)
- [Search Text in a Zone Addresses Table | 805](#)

About the Zone Addresses Page

IN THIS SECTION

- [Tasks You Can Perform | 800](#)
- [Field Descriptions | 801](#)

You are here: **Security Policies & Objects > Zone Addresses.**

Use this page to configure zone address or address set.

Tasks You Can Perform

You can perform the following tasks from this page:

- Add addresses or address sets. See ["Add Zone Addresses" on page 802.](#)
- Edit addresses or address sets. See ["Edit Zone Addresses" on page 805.](#)
- Delete addresses or address sets. See ["Delete Zone Addresses" on page 805.](#)

- Clone addresses or address sets. See ["Clone Zone Addresses" on page 804](#).
- View the details of addresses or address sets—To do this, select the address or address set for which you want to view the details and follow the available options:
 - Click **More** and select **Detailed View**.
 - Click the detailed view icon available to the left of the selected address or address set.
- Deselect the selected address or address set. To do this, click **More** and select **Clear All Selections**.
- Search text in the Addresses table. See ["Search Text in a Zone Addresses Table" on page 805](#).
- Show or hide columns in the Web filtering profiles table. To do this, click the Show Hide Columns icon in the upper-right corner of the Web filtering profiles table and select the options you want to view or deselect the options you want to hide on the page.

Field Descriptions

[Table 225 on page 801](#) describes the fields on the Zone Addresses page.

Table 225: Fields on the Zone Addresses Page

Field	Description
Addresses	
Zone	Displays the zone name to which the address is applied.
Name	Displays the address name.
Type	Displays the selected address type.
IP Address	Displays the IP address of the zone address.
Description	Displays the description of the address.
Address Sets	
Zone	Displays the zone name to which the address set is applied.

Table 225: Fields on the Zone Addresses Page *(Continued)*

Field	Description
Name	Displays the address sets name.
Type	Displays the selected address type.
Address List	Displays the preexisting addresses that should be included from the address set.
Address Set List	Displays the preexisting addresses that should be included from the list.
Description	Displays the description of the address set.

RELATED DOCUMENTATION

[Add Zone Addresses](#) | 802

Add Zone Addresses

You are here: **Security Policies & Objects** > **Zone Addresses**.

To create a zone address or address set:

1. Click **+** available on the upper-right corner of the Zone Addresses page.
The Create Addresses page appears.
2. Complete the configuration according to the guidelines provided in [Table 226 on page 802](#).
3. Click **OK** to save the changes. If you want to discard your changes, click **Cancel**.

Table 226: Fields on the Create Addresses Page

Field	Action
Object Type	Select an option from the list: Address or Address Group.

Table 226: Fields on the Create Addresses Page *(Continued)*

Field	Action
Addresses or Address Sets	
Zone	Select a zone from the list to which the address is applied.
Name	Enter the address name.
Description	Enter the description for the address.
Type	Select an option from the list: Host, Range, or DNS host.
Host IP	Enter the IPv4 or IPv6 address. NOTE: This option is available if you have selected Host type.
Start Address	Enter the start IPv4 or IPv6 address. NOTE: This option is available if you have selected Range type.
End Address	Enter the end IPv4 or IPv6 address. NOTE: This option is available if you have selected Range type.
DNS Name	Enter a domain hostname. The string must include alphanumeric characters, periods, dashes, no spaces are allowed and must end with an alphanumeric character. NOTE: This option is available if you have selected DNS Host type.
Address Sets	Displays the address set name. Select the address set.
Create Address Set	Enter the address set name and click + to add the address set in the Address Sets.
Address Set Name	Enter a name for address set. NOTE: This option is available if you have selected Address Group for Object type.

Table 226: Fields on the Create Addresses Page *(Continued)*

Field	Action
Description	Enter a description for address set. NOTE: This option is available if you have selected Address Group for Object type.
Address List	Specifies which of the preexisting addresses should be included or excluded from the address set. Select the addresses from the list in the Available column and then click the right arrow to move it to the Selected column. NOTE: This option is available if you have selected Address Group for Object type.

RELATED DOCUMENTATION

[Edit Zone Addresses](#) | 805

Clone Zone Addresses

You are here: **Security Policies & Objects** > **Zone Addresses**.

To clone a zone address or address set:

1. Select an existing zone address or address set that you want to clone and select **Clone** from the More link.
2. Click the pencil icon available on the upper-right corner of the Zone Addresses page.
The Clone Addresses page appears with editable fields. For more information on the options, see ["Add Zone Addresses" on page 802](#).
3. Click **OK** to save the changes.

RELATED DOCUMENTATION

[Delete Zone Addresses](#) | 805

Edit Zone Addresses

You are here: **Security Policies & Objects > Zone Addresses.**

To edit a zone address or address set:

1. Select an existing zone address or address set that you want to edit on the Zone Addresses page.
2. Click the pencil icon available on the upper-right corner of the Zone Addresses page.

The Edit Addresses page appears with editable fields. For more information on the options, see "[Add Zone Addresses](#)" on page 802.

3. Click **OK** to save the changes.

RELATED DOCUMENTATION

| [Delete Zone Addresses](#) | 805

Delete Zone Addresses

You are here: **Security Policies & Objects > Zone Addresses.**

To delete a zone address or address set:

1. Select a zone address or address set that you want to delete on the Zone Addresses page.
2. Click the delete icon available on the upper-right corner of the Zone Addresses page.

A confirmation window appears.

3. Click **Yes** to delete or click **No** to retain the profile.

RELATED DOCUMENTATION

| [Search Text in a Zone Addresses Table](#) | 805

Search Text in a Zone Addresses Table

You are here: **Security Policies & Objects > Zone Addresses.**

You can use the search icon in the upper-right corner of the Zone Addresses page to search for text containing letters and special characters on that page.

To search for text:

1. Click the search icon and enter partial text or full text of the keyword in the search bar.
The search results are displayed.
2. Click **X** next to a search keyword or click **Clear All** to clear the search results.

RELATED DOCUMENTATION

| [About the Zone Addresses Page](#) | 800

Global Addresses

IN THIS CHAPTER

- [About the Global Addresses Page | 807](#)
- [Add an Address Book | 808](#)
- [Edit an Address Book | 812](#)
- [Delete an Address Book | 812](#)

About the Global Addresses Page

IN THIS SECTION

- [Tasks You Can Perform | 807](#)
- [Field Descriptions | 808](#)

You are here: **Security Policies & Objects > Global Addresses.**

Use this page to configure global address books for security policies.

Tasks You Can Perform

You can perform the following tasks from this page:

- Add an Address Book. See "[Add an Address Book](#)" on page 808.
- Edit an Address Book. See "[Edit an Address Book](#)" on page 812.
- Delete an Address Book. See "[Delete an Address Book](#)" on page 812.

- Upgrade the old zone-based address book to global address books. To do this, click **Upgrade** available on the right-side corner of the Global Addresses table. Click **Yes** to proceed with the upgrade to global address books and click **OK**.

Field Descriptions

Table 227 on page 808 describes the fields on the Global Addresses Page.

Table 227: Fields on the Global Addresses Page

Field	Description
Address Book Name	Displays the address book name.
Attached Zone	Displays the name of the zone that is attached to the address book.
Global	Displays information about the predefined address book. The global address book is available by default to all security zones. You do not need to attach a security zone to the global address book.
Address/Address-Set Name	Displays the addresses and address sets associated with the selected address book.
Address Value	Displays the IP address.
Address-Set Members	Displays the addresses in an address set.

RELATED DOCUMENTATION

| [Add an Address Book](#) | 808

Add an Address Book

You are here: **Security Policies & Objects > Global Addresses.**

To add an address book:

1. Click **+** available on the upper-right corner of the Global Addresses page.
The Add Address Book page appears.
2. Complete the configuration according to the guidelines provided in [Table 228 on page 809](#).
3. Click **OK** to save the changes. If you want to discard your changes, click **Cancel**.

Table 228: Fields on the Global Addresses Page

Field	Action
Address Book Name	Enter a name for the address book.
Address Book Description	Enter a description for the address book.
Attach Zones	You can select more than one zone from the list for one address book. NOTE: Ensure that each zone has only one address book attached to it. If there is more than one address book attached to a zone, you will get the following error when you commit the configuration. Security zone must be unique in address books.
Addresses	

Table 228: Fields on the Global Addresses Page *(Continued)*

Field	Action
+	To add an address: - Click + available on the upper-right corner of the Addresses table. The Add Address page appears. - Enter the following details: - Address Name—Enter a name for the address. - Description—Enter a description for the address. - Address Type—Select one of the following address types from the list: - IP Address - Wildcard Address - Domain Name - Ranged Address - Value—Enter an address that matches the selected address type. - Click OK to save the changes.
Edit	To edit an address: - Select an existing address and click the pencil icon available on the upper-right corner of the Addresses table. The Add Address page appears with editable fields. - Click OK to save the changes.
Delete	Select an existing address and click the delete icon available on the upper-right corner of the Addresses table to delete it.
Address Set	

Table 228: Fields on the Global Addresses Page *(Continued)*

Field	Action
+	To add an address set: - Click + available on the upper-right corner of the Addresses table. The Add Address Set page appears. - Enter the following details: - Address Set Name—Enter a name for the address set. - Description—Enter a description for the address set. - Address List—Select the address from the list in the Available column and then click the right arrow to move it to the Selected column. Specifies which of the preexisting addresses should be included or excluded from the address set. - Address Set List—Select the address sets from the list in the Available column and then click the right arrow to move it to the Selected column. Specifies which of the preexisting address sets should be included or excluded from the list. - Click OK to save the changes.
Edit	To edit an address set: - Select an existing address and click the pencil icon available on the upper-right corner of the Address Set table. The Add Address Set page appears with editable fields. - Click OK to save the changes.
Delete	Select an existing address set and click the delete icon available on the upper-right corner of the Address Set table to delete it.

RELATED DOCUMENTATION

Edit an Address Book

You are here: **Security Policies & Objects** > **Global Addresses**.

To edit an address book:

1. Select an existing address book that you want to edit on the Global Addresses page.
2. Click the pencil icon available on the upper-right corner of the Global Addresses page.

The Edit Address Book page appears with editable fields. For more information on the options, see ["Add an Address Book" on page 808](#).

3. Click **OK** to save the changes.

RELATED DOCUMENTATION

| [Delete an Address Book](#) | 812

Delete an Address Book

You are here: **Security Policies & Objects** > **Global Addresses**.

To delete an address book:

1. Select an existing address book that you want to delete on the Global Addresses page.
2. Click the delete icon available on the upper-right corner of the Global Addresses page.

A confirmation window appears.

3. Click **Yes** to delete or click **No** to retain the profile.

RELATED DOCUMENTATION

| [About the Global Addresses Page](#) | 807

Services

IN THIS CHAPTER

- [About the Services Page | 813](#)
- [Add a Custom Application | 815](#)
- [Edit a Custom Application | 818](#)
- [Delete Custom Application | 818](#)
- [Add an Application Group | 819](#)
- [Edit an Application Group | 820](#)
- [Delete an Application Group | 821](#)

About the Services Page

IN THIS SECTION

- [Tasks You Can Perform | 813](#)
- [Field Descriptions | 814](#)

You are here: **Security Policies & Objects > Services.**

Use services in policies to manage applications across devices.

Tasks You Can Perform

You can perform the following tasks from this page:

- Add a custom application. See ["Add a Custom Application" on page 815.](#)
- Edit a custom application. See ["Edit a Custom Application" on page 818.](#)

- Delete custom application. See ["Delete Custom Application" on page 818](#).
- Add an application group. See ["Add an Application Group" on page 819](#).
- Edit an application group. See ["Edit an Application Group" on page 820](#).
- Delete an application group. See ["Delete an Application Group" on page 821](#).

Field Descriptions

[Table 229 on page 814](#) describes the fields on the Services Page.

Table 229: Fields on the Services Page

Field	Description
Custom-Applications	
Application Name	Displays the custom application name.
Application Description	Displays a description of the custom application.
Application-Protocol	Displays the custom application protocol.
IP-Protocol	Displays the custom network protocol.
Source-Port	Displays the custom source port identifier.
Destination-Port	Displays the custom destination port identifier.
Pre-defined Applications	
Application Name	Displays the predefined application name.
Application-Protocol	Displays the predefined application protocol.
IP-Protocol	Displays the predefined network protocol.

Table 229: Fields on the Services Page *(Continued)*

Field	Description
Source-Port	Displays the predefined source port identifier.
Destination-Port	Displays the predefined destination port identifier.
Application Group	
Application Group Name	Displays the application group name.
Members	Displays members in the set.
Description	Displays a description of the application group.

RELATED DOCUMENTATION

| [Add a Custom Application](#) | 815

Add a Custom Application

You are here: **Security Policies & Objects > Services.**

To add a custom application:

1. Click the **Custom-Applications** tab.
2. Click + available on the upper-right corner of the Services page.
The Add an Application page appears.
3. Complete the configuration according to the guidelines provided in [Table 230 on page 816](#).
4. Click **OK** to save the changes. If you want to discard your changes, click **Cancel**.

Table 230: Fields on the Add an Application Page

Field	Action
Global	
Application Name	Enter a custom application name.
Application Description	Enter a description for the custom application.
Application-protocol	Select a custom application protocol from the list.
Match IP protocol	Select a custom network protocol from the list.
Destination Port	Select a custom destination port identifier from the list.
Source Port	Select a custom source port identifier from the list.
Inactivity-timeout	Enter a value from 4 through 86400. Specifies the length of time (in seconds) that the application is inactive before it times out.
RPC-program-number	Enter a remote procedure call value from 0 through 65535.
Match ICMP message code	Select an Internet Control Message Protocol (ICMP) message code value from the list.
Match ICMP message type	Select an Internet Control Message Protocol message type value from the list.
UUID	Enter a universal unique identifier (UUID).
Application Group	Select an option from the list. Specifies the set to which this application belongs.
Terms	

Table 230: Fields on the Add an Application Page *(Continued)*

Field	Action
Add	Click +. The Add new term page appears.
Term Name	Enter an application term name.
ALG	Select an option from the list. Specifies the Application Layer Gateway (ALG) for the application protocol.
Match IP protocol	Select a network protocol from the list.
Destination Port	Enter the destination port identifier.
Source Port	Specifies the source port identifier.
Inactivity-timeout	Enter a value from 4 through 86400. Specifies the length of time (in seconds) that the application is inactive before it times out.
RPC-program-number	Enter a remote procedure call value from 0 through 65535.
Match ICMP message code	Select an ICMP message code value from the list.
Match ICMP message type	Select an ICMP message type value from the list.
UUID	Select an option from the list. Specifies the set to which this application belongs.
Edit	Select a term and click the pencil icon at the right corner of the table to modify the configuration.

Table 230: Fields on the Add an Application Page *(Continued)*

Field	Action
Delete	Select a term and click the delete (X) icon at the right corner of the table to delete the selected term.

RELATED DOCUMENTATION

| [Edit a Custom Application](#) | 818

Edit a Custom Application

You are here: **Security Policies & Objects** > **Services**.

To edit a custom application:

1. Click the **Custom-Applications** tab.
2. Select an existing application that you want to edit on the Services page.
3. Click the pencil icon available on the upper-right corner of the Services page.

The Edit an Application page appears with editable fields. For more information on the options, see ["Add a Custom Application" on page 815](#).

4. Click **OK** to save the changes.

RELATED DOCUMENTATION

| [Delete Custom Application](#) | 818

Delete Custom Application

You are here: **Security Policies & Objects** > **Services**.

To delete a custom application:

1. Click the **Custom-Applications** tab.

- 2. Select an application that you want to delete on the Services page.
- 3. Click the delete icon available on the upper-right corner of the Services page.
A confirmation message window appears.
- 4. Click **Yes** to delete or click **No** to retain the profile.

RELATED DOCUMENTATION

Add a Custom Application 815
Add an Application Group 819

Add an Application Group

You are here: **Security Policies & Objects > Services.**

To add an application group:

- 1. Click the **Application Group** tab.
- 2. Click + available on the upper-right corner of the Application Group page.
The Add New Application Set page appears.
- 3. Complete the configuration according to the guidelines provided in [Table 231 on page 819](#).
- 4. Click **OK** to save the changes. If you want to discard your changes, click **Cancel**.

Table 231: Fields on the Add New Application Set Page

Field	Action
Application Group Name	Enter a name for application group.
Description	Enter a description for application group.

Table 231: Fields on the Add New Application Set Page *(Continued)*

Field	Action
Application	Using the right arrow, select values from Applications out of this set and move them to Applications in this set. NOTE: • Enter the application name in the search box and press Enter to search for the required application. • Click Clear to remove the selected applications from the list of Applications in this set column.
Application Group	Using the right arrow, select values from Application groups out of this group and move them to Application groups in this group. NOTE: • Enter the application name in the search box and press Enter to search for the required application. • Click Clear to remove the selected applications from the list of Application groups in this group column.

RELATED DOCUMENTATION

[Edit an Application Group](#) | 820

Edit an Application Group

You are here: **Security Policies & Objects > Services**.

To edit an application group:

1. Click the **Application Group** tab.
2. Select an existing application group that you want to edit on the Services page.
3. Click the pencil icon available on the upper-right corner of the Services page.

The Edit Application Set page appears with editable fields. For more information on the options, see ["Add an Application Group" on page 819](#).

4. Click **OK** to save the changes.

RELATED DOCUMENTATION

| [Delete an Application Group](#) | 821

Delete an Application Group

You are here: **Security Policies & Objects** > **Services**.

To delete an application group:

1. Click the **Application Group** tab.
2. Select an application group name that you want to delete on the Services page.
3. Click the delete icon available on the upper-right corner of the Services page.
A confirmation message window appears.
4. Click **Yes** to delete or click **No** to retain the profile.

RELATED DOCUMENTATION

| [About the Services Page](#) | 813

Dynamic Applications

IN THIS CHAPTER

- [About the Dynamic Applications Page | 822](#)
- [Global Settings | 825](#)
- [Add Application Signatures | 828](#)
- [Clone Application Signatures | 833](#)
- [Add Application Signatures Group | 834](#)
- [Edit Application Signatures | 835](#)
- [Delete Application Signatures | 835](#)
- [Search Text in an Application Signatures Table | 836](#)

About the Dynamic Applications Page

IN THIS SECTION

- [Tasks You Can Perform | 823](#)
- [Field Descriptions | 824](#)

You are here: **Security Policies & Objects > Dynamic Applications.**

Use this page to create, modify, clone, and delete application signature groups. You can view the details of predefined application signatures that are already downloaded.

All enabled and disabled application signatures on the device are displayed in a grid format. A message Once a new custom application signature is created or modified, the configuration is committed immediately to the device. is displayed at the top of the page.

A status message is displayed just above the grid. It shows the version number of the installed application, the latest version available, and whether you have downloaded or installed an application package.

Installed application package version : 0 | Latest version 3207 available | No application package is downloaded yet

NOTE: If you successfully download an application package, the Install button is displayed. If you successfully install a downloaded application package, an Uninstall button is displayed.

Tasks You Can Perform

You can perform the following tasks from this page:

- Global Settings. See ["Global Settings" on page 825](#).
- Create application signatures. See ["Add Application Signatures" on page 828](#).
- Create application signatures group. See ["Add Application Signatures Group" on page 834](#).
- Edit application signatures. See ["Edit Application Signatures" on page 835](#).
- Delete application signatures. See ["Delete Application Signatures" on page 835](#).
- Clone application signatures. See ["Clone Application Signatures" on page 833](#).
- Search text in an application signature. See ["Search Text in an Application Signatures Table" on page 836](#).
- View the details of application signatures—To do this, select the application signature for which you want to view the details and follow the available options:
 - Click **More** and select **Detailed View**.
 - Right-click on the selected application signature profile and select **Detailed View**.
 - Mouse over to the left of the selected application signature and click **Detailed View**.
- Filter the application signatures based on select criteria. To do this, select the filter icon at the upper-right corner of the application signatures table. The columns in the grid change to accept filter options. Type the filter options; the table displays only the data that fits the filtering criteria.

- Show or hide columns in the application signature profiles table. To do this, click the Show Hide Columns icon in the upper-right corner of the application signatures table and select the options you want to view or deselect the options you want to hide on the page.
- **More**—Clone an existing application signature package, create group, or configure the page to show a detailed view.
- **Create Group**—Create a new application signature or application signatures group.

Field Descriptions

[Table 232 on page 824](#) describes the fields on the Application Signatures page.

Table 232: Fields on the Application Signatures Page

Field	Description
Name	Displays the application signature name.
Object Type	Displays the application signature object type.
Category	Specifies the category of the application signature.
Subcategory	Specifies the subcategory of the application signature.
Risk	Displays the risk as critical, high, moderate, low, or unsafe.
Characteristic	Specifies the characteristic of the application signature.
Predefined or Custom	Displays the predefined or custom application signatures and settings that are configured on your device.
Status	Displays the status of the application signature.

RELATED DOCUMENTATION

Add Application Signatures 828
Add Application Signatures Group 834
Edit Application Signatures 835
Delete Application Signatures 835
Clone Application Signatures 833
Search Text in an Application Signatures Table 836

Global Settings

You are here: **Security Policies & Objects > Dynamic Applications.**

To add global settings:

1. Click the **Global Settings** on the upper-right corner of the Application Signatures page.
The Global Settings page appears.
2. Complete the configuration according to the guidelines provided in [Table 233 on page 825](#).
3. Click **OK** to save the changes. If you want to discard your changes, click **Cancel**.

Table 233: Fields on the Global Settings Option Page

Field	Action
General	
Custom Application Byte Limit	Select the byte limit in the range 0 through 10000. This helps in understanding when to stop the identification of custom applications.
Micro Applications	Enable micro-application detection in application identification and then use them as matching criteria in a security policy.
Application System Cache	
Enable or disable storing of AI result in application cache, configure ASC security services, configure miscellaneous services such as ABPR, or set the cache entry timeout.	
Application Cache	Enable this option to save the mapping between an application type and the corresponding destination IP address, destination port, protocol type, and service.

Table 233: Fields on the Global Settings Option Page (*Continued*)

Field	Action
Security Services	Enable this option for security services, such as security policies, application firewall (AppFW), Juniper ATP Cloud, IDP, and Content Security.
Miscellaneous Services	Enable this option for miscellaneous services, such as APBR and AppTrack.
Cache entry timeout	Enter the timeout value in seconds for the application system cache (ASC) entries. Range: 0 through 1000000 seconds. Default is 3600 seconds.
Packet Capture	
Global packet capture	Enable packet capture globally to capture all unknown application traffic. You can also enable this option specific to a security policy at the rule level. For more information, see "Add a Rule to a Security Policy" on page 731 .
Aggressive mode	Enable to capture all traffic before AppID classifies the applications. In this mode, the system captures all application traffic regardless of the application system cache (ASC) entry. Packet capture starts for the first packet of the first session.
Exclude inconclusive traffic	Disable packet capture of inconclusive traffic. This option is available when you enable the Aggressive mode option. This option disables the packet capture for the following sessions: • Sessions closed before the application identification or classification completes. • Sessions not classified even though they reach the maximum packet capture limit. If you do not configure this option, by default, the system captures packets for inconclusive sessions.
Advanced	
Maximum packets	Maximum number of UDP packets per session. Range: 1 through 1000. Default is 10 packets.

Table 233: Fields on the Global Settings Option Page *(Continued)*

Field	Action
Maximum bytes	Maximum number of TCP bytes per session. For TCP sessions, the count includes the actual payload data length and excludes IP/TCP headers for the maximum bytes limit. Range: 40 through 1,073,741,824. Default is 6000 bytes.
Maximum files	Maximum number of unique packet capture files to create before the oldest file is overwritten by a new file created. Range: 1 through 2500. Default is 100.
Maximum storage	Maximum disk space (bytes) that can be used in the Routing Engine for packet capture files. Range: 1 through 4096 MB. Default is 50 MB.
Maximum memory	Maximum memory limit for deep packet inspection (DPI). Range: 1 KB through maximum bytes (depending on the available space on the device).
Packet capture interval	Timeout value in minutes to avoid repetitive capture of same traffic. After this interval, the system continues to capture newer packet details for unknown applications until the capture limit is reached. Range: 1 through 525,600 minutes. Default is 1440 minutes (24 hours).
Repeat traffic capture	Number of repetitive captures of same traffic. Use this option to limit the number of times the same traffic can be repeatedly captured before the cache entry times out. Range: 1 through 1000. Default is 5.

RELATED DOCUMENTATION

[About the Dynamic Applications Page | 822](#)

[Add Application Signatures | 828](#)

[Add Application Signatures Group | 834](#)

Edit Application Signatures 835
Delete Application Signatures 835
Clone Application Signatures 833
Search Text in an Application Signatures Table 836

Add Application Signatures

You are here: **Security Policies & Objects > Dynamic Applications.**

To add an application signature:

1. Click **Create > Signature** on the upper-right corner of the Dynamic Applications page.
The Create Application Signatures page appears.
2. Complete the configuration according to the guidelines provided in [Table 234 on page 828](#).
3. Click **OK** to save the changes. If you want to discard your changes, click **Cancel**.

Table 234: Fields on the Add Application Signatures Page

Field	Action
Name	Enter the application signature name.
Description	Enter the application signature description.
Order	Enter the order of the custom application. Lower order has higher priority. The range is 1 through 50,000.

Table 234: Fields on the Add Application Signatures Page (Continued)

Field	Action
Priority	Enter the priority over other signature applications. Select an option from the list: • High • Low By default, the priority for the custom application is set to Low. This allows a predefined application to take precedence. If you want to override a predefined application, you must set the priority to High.
Risk	Enter the risk as critical, high, moderate, low, or unsafe.
Application Identification match criteria	Select one or more options from the list: • ICMP Mapping • IP Protocol Mapping • Address Mapping • L7 Signature
ICMP Mapping	Select a value from the list. • ICMP Type—Select the numeric value of an ICMP type. The type identifies the ICMP message, such as Unassigned or Destination Unreachable. The range is from 0 through 254. • Select the numeric value of an ICMP code. The code field provides further information (such as RFCs) about the associated type field. The range is from 0 through 254.
IP Protocol Mapping	Select the numeric value of an ICMP type. The type identifies the ICMP message, such as Unassigned or Destination Unreachable. The range is from 0 through 254.

Table 234: Fields on the Add Application Signatures Page *(Continued)*

Field	Action
Address Mapping	To add a new address mapping: 1. Click Add. The Add Address Mapping page appears. Enter the following details: • Name—Enter the name of the address mapping. • IP Address—Enter an IPv4 or IPv6 address. • CIDR Range—Enter an IPv4 or IPV6 address prefix for classless IP addressing. • TCP Port range—Enter the TCP port range for the application. • UDP Port Range—Enter the UDP port range for the application. 2. Click the pencil icon at the upper-right corner of the Address Mapping table. Then, edit the address mapping and click OK. 3. To delete an existing Address Mapping, select it and click the delete icon or right-click on it and click Delete.
L7 Signature	
Cacheable	Set this option to True only when L7 signatures are configured in a custom signature. This option is not supported for address-based, IP protocol-based, and ICMP-based custom application signatures.
Add L7 Signature	Click Add L7 Signature list and select an option from the following: • Over HTTP • Over SSL • Over TCP • Over UDP The Add Signature page appears.

Table 234: Fields on the Add Application Signatures Page *(Continued)*

Field	Action
Add Signature	
Over Protocol	Displays the signature that matches the application protocol. Example: HTTP
Signature Name	Enter a unique name that is a string of alphanumeric characters, colons, periods, dashes, and underscores. No spaces are allowed and the maximum length is 63 characters.
Port Range	Enter the port range for the application. Range is 0-65535.
Add Members	
Custom signatures can contain multiple members that define attributes of an application. The supported member name range is m01 through m15.	
+	Click + to create a member.
Context (Over HTTP)	Select the service-specific context from the following list: • http-get-url-parsed-param-parsed • http-header-content-type • http-header-cookie • http-header-host • http-header-user-agent • http-post-url-parsed-param-parsed • http-post-variable-parsed • http-url-parsed • http-url-parsed-param-parsed

Table 234: Fields on the Add Application Signatures Page (*Continued*)

Field	Action
Context (Over SSL)	Select the service-specific context as ssl-server-name.
Context (Over TCP)	Select the service-specific context as stream.
Context (Over UDP)	Select the service-specific context as stream.
Direction	Select the direction of the packet flow to match the signature: - any—The direction of the packet flow can either be from the client-side to the server-side or from the server-side to the client-side. - client-to-server—The direction of packet flow is from the client-side to the server-side. - server-to-client—The direction of packet flow is from the server-side to the client-side.
Depth	Enter the maximum number of bytes to check for context match. Use the byte limit for AppID to identify custom application pattern for applications running over TCP or UDP or Layer 7 applications. Range is 1 through 8000. The Depth is set to 1000 by default, if not explicitly configured. NOTE: Starting in Junos OS Release 20.2R1, Depth option is supported.
Pattern	Enter the deterministic finite automaton (DFA) pattern matched the context. The DFA pattern specifies the pattern to be matched for the signature. The maximum length is 128.

Release History Table

Release	Description
20.2R1	Starting in Junos OS Release 20.2R1, Depth option is supported.

RELATED DOCUMENTATION

About the Dynamic Applications Page 822
Global Settings 825
Add Application Signatures Group 834
Edit Application Signatures 835
Delete Application Signatures 835
Clone Application Signatures 833
Search Text in an Application Signatures Table 836

Clone Application Signatures

You are here: **Security Policies & Objects > Dynamic Applications.**

To clone an application signature:

1. Select the application signature profile that you want to clone and select **Clone** from the More link.

NOTE: Alternatively, you can right-click on the selected application signature profile and select **Clone**.

The Clone Application Signature page appears with editable fields. For more information on the fields, see ["Add Application Signatures" on page 828](#).

2. Click **OK** to save the changes. If you want to discard your changes, click **Cancel**.

RELATED DOCUMENTATION

About the Dynamic Applications Page 822
Global Settings 825
Add Application Signatures 828
Add Application Signatures Group 834
Edit Application Signatures 835
Delete Application Signatures 835
Search Text in an Application Signatures Table 836

Add Application Signatures Group

You are here: **Security Policies & Objects > Dynamic Applications.**

To add an application signature group:

1. Click **Create > Signature Group** on the upper-right corner of the Dynamic Applications page. You can also click **More** and select **Create Group**.

The Create Application Signature Group page appears.

2. Complete the configuration according to the guidelines provided in [Table 235 on page 834](#).
3. Click **OK** to save the changes. If you want to discard your changes, click **Cancel**.

Table 235: Fields on the Add Application Signature Group Page

Field	Action
Name	Enter the application signature group name.
Group Members	Enter the add or remove applications associated with the application signature group. Click one of the following options: • Add—Click + to create an application signature group. • Delete—Select an existing application signature group that you want to delete and click the delete icon available at the upper right of the application signature group table. • Detailed View—Hover over the application signature group name and click the Detailed View icon to view the signature group. You can also click More and select Detailed View for the selected signature group.

RELATED DOCUMENTATION

[About the Dynamic Applications Page | 822](#)

[Edit Application Signatures | 835](#)

[Delete Application Signatures | 835](#)

[Clone Application Signatures | 833](#)

[Search Text in an Application Signatures Table | 836](#)

Edit Application Signatures

You are here: **Security Policies & Objects > Dynamic Applications.**

To edit an application signature:

1. Select an existing application signature that you want to edit on the Dynamic Applications page.
2. Click the pencil icon available on the upper-right corner of the page.

The Edit Application Signatures page appears with editable fields. For more information on the options, see ["Add Application Signatures" on page 828](#).

3. Click **OK** to save the changes.

RELATED DOCUMENTATION

About the Dynamic Applications Page 822
Global Settings 825
Add Application Signatures 828
Add Application Signatures Group 834
Add Application Signatures Group 834
Delete Application Signatures 835
Clone Application Signatures 833
Search Text in an Application Signatures Table 836

Delete Application Signatures

You are here: **Security Policies & Objects > Dynamic Applications.**

To delete application signatures:

1. Select an application signature that you want to delete on the Dynamic Applications page.
2. Click the delete icon available on the upper-right corner of the page.
3. Click **Yes** to delete or click **No** to retain the profile.

RELATED DOCUMENTATION

About the Dynamic Applications Page 822

Global Settings	 825
Add Application Signatures	 828
Add Application Signatures Group	 834
Edit Application Signatures	 835
Clone Application Signatures	 833
Search Text in an Application Signatures Table	 836

Search Text in an Application Signatures Table

You are here: **Security Policies & Objects > Dynamic Applications.**

You can use the search icon in the upper-right corner of the Dynamic Applications page to search for text containing letters and special characters on that page.

To search for text:

1. Click the search icon and enter partial text or full text of the keyword in the search bar.
The search results are displayed.
2. Click **X** next to a search keyword or click **Clear All** to clear the search results.

RELATED DOCUMENTATION

About the Dynamic Applications Page	 822
Global Settings	 825
Add Application Signatures	 828
Add Application Signatures Group	 834
Edit Application Signatures	 835
Delete Application Signatures	 835
Clone Application Signatures	 833

Application Tracking

IN THIS CHAPTER

- About the Application Tracking Page | 837

About the Application Tracking Page

IN THIS SECTION

- Field Description | 837

You are here: **Security Policies & Objects** > **Application Tracking**.

Use this page to configure application tracking.

Field Description

To configure application tracking:

1. Complete the configuration according to the guidelines provided in [Table 236 on page 837](#).
2. Click **Save** to save the changes.

[Table 236 on page 837](#) describes the fields on the Application Tracking page.

Table 236: Fields on the Application Tracking Page

Field	Description
Application tracking	Select this option to enable application tracking.

Table 236: Fields on the Application Tracking Page *(Continued)*

Field	Description
Logging Type	Select an option: • Log as session(s) created—Generates a log message when a session is created. By default, this option is disabled. • Delay logging first session—Enables you to specify the length of time that must pass before the first log message is created. The default is 1 minute.
First Update Interval (min)	Use the up/down arrow to set the interval time.
Session Update Interval (min)	Use the up/down arrow to set the interval time.
Application Tracking By Zone	Lists the available zones. • To enable application tracking, select the zone and click the right arrow to move it to the tracking enabled list. • To disable application tracking, select the zone and then click the left arrow to move the zone back into the available list.

RELATED DOCUMENTATION

[About the Address Pools Page](#) | 1089

Schedules

IN THIS CHAPTER

- [About the Schedules Page | 839](#)
- [Add a Schedule | 841](#)
- [Clone a Schedule | 843](#)
- [Edit a Schedule | 843](#)
- [Delete a Schedule | 844](#)
- [Search Text in Schedules Table | 844](#)

About the Schedules Page

IN THIS SECTION

- [Tasks You Can Perform | 839](#)
- [Field Descriptions | 840](#)

You are here: **Security Policies & Objects > Schedules.**

Use this page to configure security policy schedules.

Tasks You Can Perform

You can perform the following tasks from this page:

- Add a schedule. See ["Add a Schedule" on page 841.](#)
- Clone a schedule. See ["Clone a Schedule" on page 843.](#)
- Edit a schedule. See ["Edit a Schedule" on page 843.](#)

- Delete a schedule. See ["Delete a Schedule" on page 844](#).
- View the details of schedules—To do this, select the schedule for which you want to view the details and follow the available options:
 - Click **More** and select **Detailed View**.
 - Right-click on the selected custom object and select **Detailed View**.
 - Mouse over to the left of the selected custom object and click **Detailed View**.
- Deselect the selected schedules. To do this, click **More** and select **Clear All Selections**.
- Search text in the Schedules table. See ["Search Text in Schedules Table" on page 844](#).
- Show or hide columns in the Schedules table. To do this, click the Show Hide Columns icon in the upper-right corner of the Schedules table and select the options you want to view or deselect the options you want to hide on the page.

Field Descriptions

[Table 237 on page 840](#) describes the fields on the Schedules Page.

Table 237: Fields on the Schedules Page

Field	Description
Name	Displays the name of the policy schedule.
Description	Displays a description of the policy schedule.
Start Date	Displays the start date for the first day.
End Date	Displays the stop date for the first day.
Second Start Date	Displays the start date for the second day.
Second End Date	Displays the stop date for the second day.
Schedules	On expanding, displays the days of the schedule, exclusion days if any, and the start and end time of the schedule.

RELATED DOCUMENTATION

| [Add a Schedule](#) | 841

Add a Schedule

You are here: **Security Policies & Objects** > **Schedules**.

To add a schedule:

- 1. Click **+** available on the upper-right corner of the Schedules page.
The Create Schedule page appears.
- 2. Complete the configuration according to the guidelines provided in [Table 238 on page 841](#).
- 3. Click **OK** to save the changes. If you want to discard your changes, click **Cancel**.

Table 238: Fields on the Create Schedule Page

Field	Action
General	
Name	Enter the name of the scheduler.
Description	Enter a description for the scheduler.
Dates	
Start Date	Select the start date for the first day from the calendar and select the time in AM, PM, or 24 ours format.
Stop Date	Select the stop date for the first day from the calendar and select the time in AM, PM, or 24 ours format.
Second Start Date	Select the start date for the second day from the calendar and select the time in AM, PM, or 24 ours format.
Second End Date	Select the stop date for the second day from the calendar and select the time in AM, PM, or 24 ours format.

Table 238: Fields on the Create Schedule Page *(Continued)*

Field	Action
Time Ranges	
Time Ranges	Select the check box to specify the time range.
Daily Options	- Click on the day to specify the time for a particular day. The Specify Time for <Selected Day> page appears. NOTE: Click Specify the same time for all days to configure the same time options to all days. - Select an option for time: - All Day—Specifies time options for an entire day. - Exclude Day—Excludes a specific day. - Time Ranges—Enter time ranges for the selected day: - Start Time—Enter the first day start time in HH:MM:SS and select AM, PM, or 24 hours format. - End Time—Enter the first day end time first day in HH:MM:SS and select AM, PM, or 24 hours format. - Second Start Time—Click + and enter the second day start time in HH:MM:SS, and then select AM, PM, or 24 hours format. - Second End Time—Enter the second day end time in HH:MM:SS and select AM, PM, or 24 hours format. NOTE: Click X to delete the second day start and end time. - Click OK to save changes.

RELATED DOCUMENTATION

| [Edit a Schedule](#) | 843

Clone a Schedule

You are here: **Security Policies & Objects** > **Schedules**.

To clone a schedule:

1. Select a schedule that you want to clone and select **Clone** from the More link.

The Clone Schedule page appears with editable fields. For more information on the fields, see ["Add a Schedule" on page 841](#).

NOTE: Alternatively, you can right-click on the selected schedule and select **Clone**.

2. Click **OK** to save the changes. If you want to discard your changes, click **Cancel**.

RELATED DOCUMENTATION

[Edit a Schedule](#) | 843

Edit a Schedule

You are here: **Security Policies & Objects** > **Schedules**.

To edit a schedule:

1. Select an existing schedule that you want to edit on the Schedules page.
2. Click the pencil icon available on the upper-right corner of the Schedules page.

The Edit Schedules page appears with editable fields. For more information on the options, see ["Add a Schedule" on page 841](#).

3. Click **OK** to save the changes or click **Cancel** to discard the changes.

RELATED DOCUMENTATION

[Delete a Schedule](#) | 844

Delete a Schedule

You are here: **Security Policies & Objects** > **Schedules**.

To delete a schedule:

1. Select a schedule that you want to delete on the Schedules page.
2. Click the delete icon available on the upper-right corner of the Schedules page.
A confirmation window appears.
3. Click **Yes** to delete or click **No** to retain the profile.

RELATED DOCUMENTATION

| [Search Text in Schedules Table](#) | 844

Search Text in Schedules Table

You are here: **Security Policies & Objects** > **Schedules**.

You can use the search icon in the upper-right corner of the Schedules page to search for text containing letters and special characters on that page.

To search for text:

1. Click the search icon and enter partial text or full text of the keyword in the search bar.
The search results are displayed.
2. Click **X** next to a search keyword or click **Clear All** to clear the search results.

RELATED DOCUMENTATION

| [About the Schedules Page](#) | 839

CHAPTER 71

Proxy Profiles

IN THIS CHAPTER

- [About the Proxy Profiles Page | 845](#)
- [Add a Proxy Profile | 847](#)
- [Edit a Proxy Profile | 848](#)
- [Delete a Proxy Profile | 848](#)

About the Proxy Profiles Page

IN THIS SECTION

- [Tasks You Can Perform | 845](#)
- [Field Descriptions | 846](#)

You are here: **Security Policies & Objects > Proxy Profiles.**

Use this page to configure the proxy profiles.

Tasks You Can Perform

You can perform the following tasks from this page:

- Add a proxy profile. See ["Add a Proxy Profile" on page 847](#).
- Edit a proxy profile. See ["Edit a Proxy Profile" on page 848](#).
- Delete a proxy profile. See ["Delete a Proxy Profile" on page 848](#).

- Filter the proxy profile based on select criteria. To do this, select the filter icon at the upper-right corner of the Proxy Profiles table. The columns in the grid change to accept filter options. Type the filter options; the table displays only the data that fits the filtering criteria.
- Show or hide columns in the Proxy Profiles table. To do this, click the Show Hide Columns icon in the upper-right corner of the Proxy Profiles table and select the options you want to view or deselect the options you want to hide on the page.
- Advanced search for proxy profiles. To do this, use the search text box present above the table grid. The search includes the logical operators as part of the filter string. In the search text box, when you hover over the icon, it displays an example filter condition. When you start entering the search string, the icon indicates whether the filter string is valid or not.

For an advanced search:

1. Enter the search string in the text box.

Based on your input, a list of items from the filter context menu appears.

2. Select a value from the list and then select a valid operator based on which you want to perform the advanced search operation.

NOTE: Press Spacebar to add an AND operator or OR operator to the search string. Press backspace at any point of time while entering a search criteria, only one character is deleted.

3. Press Enter to display the search results in the grid.

Field Descriptions

Table 239 on page 846 describes the fields on the Proxy Profiles Page.

Table 239: Fields on the Proxy Profiles Page

Field	Description
Profile Name	Displays the name of the proxy profile.
Server IP / Host Name	Displays the connection type used by the proxy profile.
Port Number	Displays the port number.

RELATED DOCUMENTATION

| [Add a Proxy Profile](#) | 847

Add a Proxy Profile

You are here: **Security Policies & Objects > Proxy Profiles.**

To add a proxy profile:

- 1. Click **+** available on the upper-right corner of the Proxy Profiles page.
The Create Proxy Profile page appears.
- 2. Complete the configuration according to the guidelines provided in [Table 240 on page 847](#).
- 3. Click **OK** to save the changes. If you want to discard your changes, click **Cancel**.

[Table 240 on page 847](#) describes the fields on the Create Proxy Profile Page.

Table 240: Fields on the Create Proxy Profile Page

Field	Action
Profile Name	Enter a name of the proxy profile.
Connection Type	Select the type of connection used by the proxy profile: • Server IP—Enter the server IP address. • Host Name—Enter a hostname.
Port Number	Enter the port number used by the proxy profile. Range: 0 through 65535.

RELATED DOCUMENTATION

| [Edit a Proxy Profile](#) | 848

Edit a Proxy Profile

You are here: **Security Policies & Objects** > **Proxy Profiles**.

To edit a proxy profile:

1. Select an existing proxy profile that you want to edit on the Proxy Profiles page.
2. Click the pencil icon available on the upper-right corner of the Proxy Profiles page.

The Edit Proxy Profile page appears with editable fields. For more information on the options, see ["Add a Proxy Profile" on page 847](#).

3. Click **OK** to save the changes.

RELATED DOCUMENTATION

[Delete a Proxy Profile](#) | 848

Delete a Proxy Profile

You are here: **Security Policies & Objects** > **Proxy Profiles**.

To delete a proxy profile:

1. Select a proxy profile that you want to delete on the Proxy Profiles page.
2. Click the delete icon available on the upper-right corner of the Proxy Profiles page.
A confirmation window appears.
3. Click **Yes** to delete or click **No** to retain the profile.

RELATED DOCUMENTATION

[Add a Proxy Profile](#) | 847

[Edit a Proxy Profile](#) | 848

8

PART

Security Services

[Content Security Default Configuration | 851](#)

[Content Security Antivirus Profiles | 855](#)

[Content Security Web Filtering Profiles | 886](#)

[Content Security Antispam Profiles | 916](#)

[Content Security Content Filtering Profiles | 922](#)

[Content Security Custom Objects | 931](#)

[Content Security Policies | 944](#)

[IPS Policies | 952](#)

[IPS Signatures | 969](#)

[IPS Sensor | 1003](#)

[ALG | 1011](#)

[Metadata Streaming Profile | 1022](#)

[ATP Anti-malware | 1029](#)

[ATP SecIntel Profiles | 1039](#)

[ATP SecIntel Profile Groups | 1054](#)

[SSL Initiation Profiles | 1059](#)

[SSL Proxy Profiles | 1066](#)

[Firewall Authentication—Access Profile | 1078](#)

[Firewall Authentication—Address Pools | 1089](#)

[Firewall Authentication Settings | 1097](#)

Firewall Authentication—UAC Settings | 1100

Firewall Authentication—Active Directory | 1104

Firewall Authentication—Local Authentication | 1110

Firewall Authentication—Authentication Priority | 1113

Firewall Authentication—JIMS | 1115

ICAP Redirect | 1122

Content Security Default Configuration

IN THIS CHAPTER

- [About the Default Configuration Page | 851](#)
- [Edit a Default Configuration | 853](#)
- [Delete a Default Configuration | 853](#)

About the Default Configuration Page

IN THIS SECTION

- [Tasks You Can Perform | 852](#)
- [Field Descriptions | 852](#)

You are here: **Security Services > Content Security > Default Configuration.**

The Default Configuration page describes the security features of Content Security.

This default configuration will be used, if there are multiple Content Security policies present in the potential list. The global configuration will be used till the exact match is found in the potential list.

The following security features are parts of Content Security default configuration:

- **Antivirus**—Antivirus is an in-the-cloud antivirus solution. The virus pattern and malware database are located on external servers maintained by Sophos (Sophos Extensible List) servers.
- **Web Filtering**—Web filtering lets you to manage Internet usage by preventing access to inappropriate Web content.
- **Antispam**—This feature examines transmitted messages to identify any e-mail spam.

- **Content Filtering**—This feature blocks or permits certain types of traffic based on the MIME type, file extension, protocol command, and embedded object type.

Tasks You Can Perform

You can perform the following tasks from this page:

- View the collapsed or expanded details of the Content Security default configuration options. To do this, select any one of the Content Security default configurations and click **Expand All** or **Collapse All** available on the upper-right corner of the page.
- Edit a default configuration. See ["Edit a Default Configuration" on page 853](#).
- Delete a default configuration. See ["Delete a Default Configuration" on page 853](#).

Field Descriptions

[Table 241 on page 852](#) describes the fields on the Default Configuration page.

Table 241: Fields on the Default Configuration Page

Field	Function
Anti-Virus	Displays the configured antivirus. You can edit the configured antivirus.
Web Filtering	Displays the configured Web filtering. You can edit the configured web filtering. NOTE: Starting in Junos OS 23.4R1 Release, J-Web supports Juniper NextGen Web Filtering.
Anti-Spam	Displays the configured antispam. You can edit the configured antispam.
Content Filtering	Displays the configured content filtering. You can edit the configured content filtering.

RELATED DOCUMENTATION

[Edit a Default Configuration | 853](#)

[Delete a Default Configuration | 853](#)

Edit a Default Configuration

You are here: **Security Services > Content Security > Default Configuration.**

You can edit all of the following Content Security default configurations:

- Antivirus
- Web filtering
- Antispam
- Content filtering

NOTE: Starting in Junos OS 23.4R1 Release, J-Web supports Juniper NextGen Web Filtering.

To edit a default configuration:

1. Select any of the existing Content Security default configurations that you want to edit on the Default Configuration page.
2. Click the pencil icon available on the upper-right corner of the page.

The edit page for the selected default configuration appears with editable fields. You can modify any previous changes done to Antivirus, Web Filtering, Antispam, and Content Filtering.

3. Click **OK** to save the changes.

RELATED DOCUMENTATION

[About the Default Configuration Page | 851](#)

[Delete a Default Configuration | 853](#)

Delete a Default Configuration

You are here: **Security Services > Content Security > Default Configuration.**

You can delete all of the following Content Security default configurations:

- Antivirus
- Web filtering
- Antispam
- Content filtering

To delete an individual default configuration:

1. Select any of the existing Content Security default configurations that you want to delete on the Default Configuration page.
2. Click the delete icon available on the upper-right corner of the page.

The Confirm Delete window appears.

NOTE: You can only delete the configured data and not the junos-default configuration.

3. Click **Yes** to delete or click **No** to retain the profile.

To delete all the default configuration at the same time:

1. Click **Delete All Default Configurations** available on the upper-right corner of the page.

The Confirm Delete window appears.

NOTE: You can only delete the configured data and not the junos-default configuration.

2. Click **Yes** to delete or click **No** to retain the profile.

RELATED DOCUMENTATION

[About the Default Configuration Page | 851](#)

[Edit a Default Configuration | 853](#)

Content Security Antivirus Profiles

IN THIS CHAPTER

- [About the Antivirus Profiles Page | 855](#)
- [Add an Antivirus Profile | 857](#)
- [Clone an Antivirus Profile | 863](#)
- [Edit an Antivirus Profile | 863](#)
- [Delete an Antivirus Profile | 864](#)
- [Prevent Virus Attacks by Using J-Web Content Security Antivirus | 864](#)

About the Antivirus Profiles Page

IN THIS SECTION

- [Tasks You Can Perform | 855](#)
- [Field Descriptions | 856](#)

You are here: **Security Services > Content Security > Antivirus Profiles.**

Use this page to configure antivirus.

Tasks You Can Perform

You can perform the following tasks from this page:

- Add an antivirus profile. See ["Add an Antivirus Profile" on page 857.](#)
- Clone an antivirus profile. See ["Clone an Antivirus Profile" on page 863.](#)
- Edit an antivirus profile. See ["Edit an Antivirus Profile" on page 863.](#)

- Delete antivirus profile. See ["Delete an Antivirus Profile" on page 864](#).
- View the details of an antivirus profile—To do this, select the antivirus profile for which you want to view the details and follow the available options:
 - Click **More** and select **Detailed View**.
 - Right-click on the selected antivirus profile and select **Detailed View**.
 - Mouse over to the left of the selected antivirus profile and click **Detailed View**.
- Advanced search for antivirus profiles. To do this, use the search text box present above the table grid. The search includes the logical operators as part of the filter string. In the search text box, when you hover over the icon, it displays an example filter condition. When you start entering the search string, the icon indicates whether the filter string is valid or not.

For an advanced search:

1. Enter the search string in the text box.

Based on your input, a list of items from the filter context menu appears.

2. Select a value from the list and then select a valid operator based on which you want to perform the advanced search operation.

NOTE: Press Spacebar to add an AND operator or OR operator to the search string. Press backspace at any point of time while entering a search criteria, only one character is deleted.

3. Press Enter to display the search results in the grid.
- Filter the antivirus profiles based on select criteria. To do this, select the filter icon at the upper-right corner of the antivirus profiles table. The columns in the grid change to accept filter options. Type the filter options; the table displays only the data that fits the filtering criteria.
 - Show or hide columns in the antivirus profiles table. To do this, click the Show Hide Columns icon in the upper-right corner of the antivirus profiles table and select the options you want to view or deselect the options you want to hide on the page.

Field Descriptions

[Table 242 on page 857](#) describes the fields on the Antivirus Profiles page.

Table 242: Fields on the Antivirus Profiles Page

Field	Function
Name	Displays the unique name of the antispam profile.
URL Allowlist	Specifies a unique customized list of all URLs or IP addresses for a given category that are to be bypassed for scanning.
Default Action	Displays the default fallback action taken when the antivirus system encounters errors.

RELATED DOCUMENTATION

[Add an Antivirus Profile | 857](#)

[Edit an Antivirus Profile | 863](#)

[Delete an Antivirus Profile | 864](#)

Add an Antivirus Profile

You are here: **Security Services** > **Content Security** > **Antivirus Profiles**.

To add an antivirus profile:

1. Click **+** available on the upper-right corner of the Antivirus Profiles page.
The Create Antivirus Profiles wizard appears, displaying brief instructions about creating an antivirus profile.
2. Click **Next** to navigate to the next page.
3. Complete the configuration according to the guidelines provided in [Table 243 on page 858](#).
4. Click **Finish**.
The Summary page is displayed with the configurations you have made.
5. Review the settings, and if you need to make any modifications, click the **Edit** link or the **Back** button.
6. Click **OK** to save the changes. If you want to discard your changes, click **Cancel**.
A new antivirus profile is created. You can assign this antivirus profile to a Content Security policy. Within the Content Security policy, you can apply either the same or different antivirus profiles to the Web, file transfer and E-mail traffic.

Table 243: Fields on the Create Antivirus Profile Page

Field	Function
General	
Name	Enter a unique name for the antivirus profile. The maximum length is 29 characters.
URL Allowlist	Select the customized object from the list for a given category that are to be bypassed for scanning.
MIME Allowlist	

Table 243: Fields on the Create Antivirus Profile Page *(Continued)*

Field	Function
MIME Allowlist	Select a MIME allowlist from the list. To create a MIME list inline and add it to the MIME allowlist: 1. Click Create New MIME List. The Add MIME Pattern List window appears. 2. Enter the following details: • Name—Enter a unique name for the MIME pattern list. You can use a string beginning with an alphabet or underscore and consisting of alphanumeric characters, special characters such as dashes and underscores. The maximum length is 40 characters. • Values—Click + and enter a value in the value list and click the tick mark. NOTE: Value must be two strings separated by slash(/): • The first string beginning with a letter or number and consisting of alphanumeric characters, underscores and dashes. Dashes cannot be used consecutively in the string. • The second string can be null or begin with a letter or number and consisting of alphanumeric characters, underscores, dashes, dots and pluses. Dashes, dots, and pluses cannot be used consecutively in the string. If you want to delete any MIME pattern values, select the value and click the delete icon. 3. Click OK. A new MIME list is created and added to the MIME allowlist.
Exception MIME Allowlist	Select an exception MIME allowlist from the list. Click Create New MIME list to create and add a MIME pattern list inline.

Table 243: Fields on the Create Antivirus Profile Page *(Continued)*

Field	Function
Fallback Options	
Fallback options are used when the antivirus system experiences errors and must fall back to one of the previously configured actions to either deny (block) or permit the object.	
Content Size	Select Block or Log and Permit. If the content size exceeds a set limit, the content is either passed or blocked. The default action is Block.
Engine Error	Select Block or Log and Permit to specify whether the scan engine should be blocked (default) or logged and permitted if it is not ready during certain processes. For example, while the signature database is loading.
Trickling Timeout	Select Block or Log and Permit to specify whether the time taken to scan should be blocked (default) or logged and permitted if the scan process exceeds the timeout setting in the antivirus profile.
Out of Resources	Select Block or Log and Permit to specify whether the resource constraints should be blocked (default) or logged and permitted if the error is received during virus scanning.
Decompress Layer	Select Block or Log and Permit to specify whether the number of layers of nested compressed files that the internal antivirus scanner can decompress before the execution of the virus scan. The default action is Block.
Too many Requests	Select an option to specify whether the number of messages should be blocked (default) or logged and permitted if the messages received concurrently exceeds the device limits.
Default Action	Select a default action to take when an error occurs; Block or Log and Permit.

Table 243: Fields on the Create Antivirus Profile Page *(Continued)*

Field	Function
Notification Options	
Use the notification options to configure a method of notifying the user when a fallback occurs or a virus is detected.	
Fallback Deny	
Notify Mail Sender	Select this option to configure e-mail notifications to notify the administrator about the errors returned by either the scan engine or the scan manager when a fallback action occurs.
Notification Type	Select None , Protocol , or Message from the list to specify the type of notification sent when a fallback option of deny is triggered.
Custom Message Subject	Enter the subject line text for your custom message for the fallback deny notification. The maximum character length is 255.
Custom Message	Enter the customized message text for the fallback deny notification. The maximum character length is 512.
Fallback Non-Deny	
Notify Mail Recipient	Select this option to configure E-mail notifications to notify the recipient when a fallback e-mail option without a deny action is triggered.
Custom Message Subject	Enter the subject line for your custom message for the fallback non-deny notification. The maximum character length is 255.

Table 243: Fields on the Create Antivirus Profile Page *(Continued)*

Field	Function
Custom Message	Enter the customized message text for the fallback non-deny notification. The maximum character length is 512.
Virus Detection	
Notify Mail Sender	Select this option to configure E-mail notifications to notify the administrator when a virus is detected.
Notification Type	Specifies the type of notification to be sent when a virus is detected. Select None, Protocol, or Message from the list to specify the type of notification sent when a virus is detected.
Custom Message Subject	Enter the subject line text for your custom message for the virus detection notification. The maximum character length is 255.
Custom Message	Enter the customized message text for the virus detection notification. The maximum character length is 512.

RELATED DOCUMENTATION
[About the Antivirus Profiles Page | 855](#)
[Edit an Antivirus Profile | 863](#)
[Delete an Antivirus Profile | 864](#)

Clone an Antivirus Profile

You are here: **Security Services** > **Content Security** > **Antivirus Profiles**.

To clone an antivirus profile:

1. Select an antivirus profile that you want to clone and select **Clone** from the More link.

NOTE: Alternatively, you can right-click on the selected antivirus profile and select **Clone**.

The Clone Antivirus Profiles page appears with editable fields. For more information on the options, see ["Add an Antivirus Profile" on page 857](#).

2. Click **OK** to save the changes.

A cloned antivirus profile is created for the selected antivirus profile. By default, the name of the cloned antivirus profile is in the format: *<Antivirus profile name>_clone*.

RELATED DOCUMENTATION

[About the Antivirus Profiles Page | 855](#)

[Edit an Antivirus Profile | 863](#)

[Delete an Antivirus Profile | 864](#)

Edit an Antivirus Profile

You are here: **Security Services** > **Content Security** > **Antivirus Profiles**.

To edit an antivirus profile:

1. Select an existing antivirus profile that you want to edit on the Antivirus Profiles page.
2. Click the pencil icon available on the upper-right corner of the page.

The Edit Antivirus Profiles page appears with editable fields. For more information on the options, see ["Add an Antivirus Profile" on page 857](#).

NOTE: Alternatively, you can right-click on the selected antivirus profile and select **Edit Antivirus Profiles**.

3. Click **OK** to save the changes.

RELATED DOCUMENTATION

[About the Antivirus Profiles Page | 855](#)

[Edit an Antivirus Profile | 863](#)

[Delete an Antivirus Profile | 864](#)

Delete an Antivirus Profile

You are here: **Security Services > Content Security > Antivirus Profiles.**

To delete an antivirus profile:

1. Select an antivirus profile that you want to delete on the Antivirus Profiles page.
2. Click the delete icon available on the upper-right corner of the page.

NOTE: Alternatively, you can right-click on the selected antivirus profile and select **Delete Antivirus Profiles**.

3. Click **Yes** to delete or click **No** to retain the profile.

RELATED DOCUMENTATION

[About the Antivirus Profiles Page | 855](#)

[Add an Antivirus Profile | 857](#)

[Edit an Antivirus Profile | 863](#)

Prevent Virus Attacks by Using J-Web Content Security Antivirus

SUMMARY

Learn about Content Security antivirus protection and how to configure Content Security antivirus to prevent virus attacks on SRX Series Firewalls by using J-Web. The Content Security antivirus feature on the SRX Series Firewall scans network traffic to

IN THIS SECTION

- [Content Security Antivirus Overview | 865](#)
- [Benefits of Content Security Antivirus | 866](#)

protect your network from virus attacks and to prevent virus spread.

- [Antivirus Workflow | 867](#)
- [Step 1: Update Default Configuration for Antivirus | 869](#)
- [Step 2: Configure Antivirus Custom Object | 871](#)
- [Step 3: Create Antivirus Profile | 875](#)
- [Step 4: Apply the Antivirus Profile to a Content Security Policy | 877](#)
- [Step 5: Assign the Content Security Policy to a Security Firewall Policy | 878](#)
- [Step 6: Verify That Content Security Antivirus Is Working | 881](#)
- [What's Next? | 883](#)
- [Sample Configuration Output | 883](#)

Content Security Antivirus Overview

In today's world, where cyber security threats are evolving and getting more sophisticated, protecting your network from virus attacks is extremely critical. The viruses, worms, and malware perform unwanted and malicious acts, such as damaging or deleting files, hacking personal data, affecting system performance, reformatting the hard disk, or using your computer to transmit viruses to other computers. The Content Security antivirus software acts like a first line of defense against such security threats and prevents the spread of viruses into your network. It protects your network from virus attacks, unwanted computer malwares, spywares, rootkits, worms, phishing attacks, spam attacks, trojan horses, and so on.

You must always ensure that the antivirus software and virus pattern database are up to date.

NOTE: Starting in Junos OS 22.2R1:

- In the J-Web GUI, UTM term is replaced with Content Security.
- In Junos CLI commands, we continue to use the legacy term UTM for content security.

Juniper Networks offers the following Content Security antivirus solutions:

- On-device antivirus protection

The on-device antivirus is an on-box solution. The on-device antivirus scan engine scans the data by accessing the virus pattern database that is locally stored on the device. It provides a full file-based antivirus scanning function that is available through a separately licensed subscription service.

NOTE:

- The on-device Express or Kaspersky scan engine is not supported from Junos OS Release 15.1X49-D10 onwards; however, it is still applicable for Junos OS Release 12.3X48.
- Starting in Junos OS Release 18.4R1, SRX Series Firewalls support the Avira on-device antivirus scanning engine.
- Avira on-device antivirus scanning engine is not supported on SRX300, SRX320, SRX340, SRX345, SRX380, and SRX550 HM devices.

- Sophos antivirus protection

Sophos antivirus is an in-the-cloud antivirus solution. The virus pattern and malware database is located on external servers maintained by Sophos (Sophos Extensible List) servers. The Sophos antivirus scanner also uses a local internal cache to maintain query responses from the external list server. We offer the Sophos antivirus scanning as a less CPU-intensive alternative to the full file-based antivirus feature.

Benefits of Content Security Antivirus

- The on-device antivirus solution:
 - Scans the application traffic locally without connecting to the Internet server to query whether the application traffic has virus.
 - Minimizes processing delays because the pattern database is locally stored and the scan engine is on-device.
- The Sophos antivirus solution:
 - Avoids downloading and maintaining large pattern databases on the Juniper device because the virus pattern and malware database is located on external servers maintained by Sophos.
 - Improves lookup performance because the Sophos antivirus scanner uses a local internal cache to maintain query responses from the external list server.
 - Effectively prevents malicious content from reaching the endpoint client or server through the use of the Uniform Resource Identifier (URI) checking functionality.

Antivirus Workflow

IN THIS SECTION

- [Scope | 867](#)
- [Before You Begin | 867](#)
- [Topology | 868](#)
- [Video | 868](#)
- [Sneak Peek – J-Web Content Security Antivirus Configuration Steps | 868](#)

Scope

Juniper Web (J-Web) Device Manager supports the Content Security antivirus solution on SRX Series Firewalls. In this example, you'll use Sophos antivirus protection to do the following:

1. Scan HTTP and FTP traffic from a server (10.102.70.89) to your computer for virus attacks.
2. Define a custom message **Virus Found!** to be displayed when a virus is found while scanning the traffic.
3. Create Allowlist URLs (<http://10.102.70.89>) where AV scanning is skipped.

NOTE: Assumption is that you must be able to route to the example URLs.

Before You Begin


- Install a Sophos antivirus license. See the [Installation and Upgrade Guide](#), [Licensing Administration Guide](#), and [Licensing Guide](#).
- Ensure that the SRX Series Firewall you use in this example runs Junos OS Release 22.2R1.

NOTE: Starting in Junos OS 22.2R1:

- In the J-Web GUI, UTM term is replaced with Content Security.
- In Junos CLI commands, we continue to use the legacy term UTM for content security.

Topology

The topology used in this example comprises a PC connected to a Content Security-enabled SRX Series Firewall that has access to the Internet and a server. You'll use J-Web to scan the HTTP and FTP requests sent to the server with this simple setup. You'll then use Sophos antivirus protection to prevent virus attacks from the Internet to your PC.

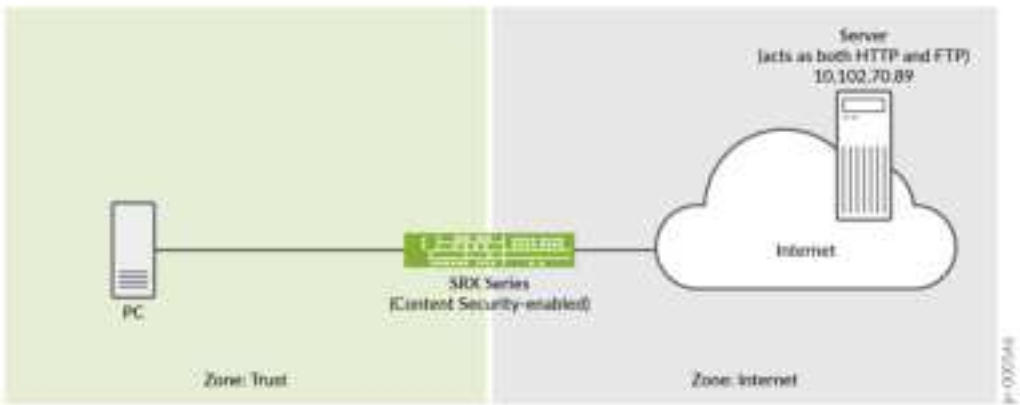

Video

See the following video to learn how to configure Content Security antivirus using J-Web.



Video: [Configure Content Security Antivirus Using J-Web](#)

Sneak Peek – J-Web Content Security Antivirus Configuration Steps



Step	Action
Step 1	Configure the Sophos engine in Default Configuration. Here, you first define the default engine as Sophos in Default Configuration.

(Continued)

Step	Action
Step 2	Configure antivirus custom object. Here, you define the URL pattern list (allowlist) of URLs or addresses that will be bypassed by antivirus scanning. After you create the URL pattern list, you will create a custom URL category list and add the pattern list to it.
Step 3	Configure an antivirus feature profile using the Sophos engine. After the default configuration, you define the parameters that will be used for virus scanning in the feature profile. NOTE: You must configure DNS servers before creating the antivirus profiles. To configure DNS servers, go to Device Administration > Basic Settings > System Identity > DNS servers.
Step 4	Create a Content Security policy for Sophos antivirus and apply the antivirus feature profile to the Content Security policy. Here, you use a Content Security policy to bind a set of protocols (for example, HTTP) to the Sophos Content Security feature profile. You can scan other protocols as well by creating different profiles or adding other protocols to the profile, such as imap-profile, pop3-profile, and smtp-profile.
Step 5	Create a security policy for Sophos antivirus and assign the Content Security policy to the security policy. Here, you use the security firewall and feature profile settings to scan the traffic from the trust zone (trust) to the untrust zone (Internet).
Step 6	Access a URL from the allowlist URL (http://10.102.70.89) and try to download a test virus file (eicar.txt) which is made available on the 10.102.70.89 server.

Step 1: Update Default Configuration for Antivirus

You are here (in the J-Web UI): **Security Services > Content Security > Default Configuration**.

In this step, you'll set up **Sophos Engine** as the default engine type.


To update the default antivirus profile:

1. On the Anti-Virus tab, click the edit icon (pencil) to edit the default configuration.
The Anti Virus page appears. See .
2. Complete the tasks listed in the Action column in [Table 244 on page 870](#).

Table 244: Default Configuration Settings

Field	Action
Type	Select the Sophos Engine type for the antivirus.
URL Whitelist	Select None .
MIME Whitelist	
List	Select None .
Exception	Select None .

Figure 20: Default Antivirus Configuration

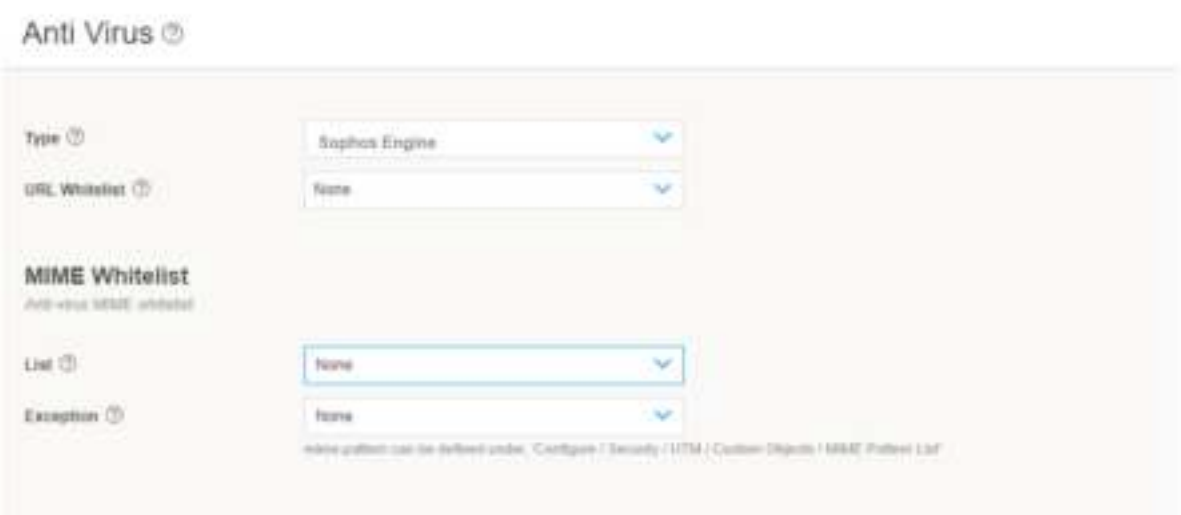

3. Click **OK** to save the new default configuration.

Step 2: Configure Antivirus Custom Object

IN THIS SECTION

- Step 2a: Configure a URL Pattern List That You Want to Bypass | 871
- Step 2b: Categorize the URLs That You Want to Allow | 873

Step 2a: Configure a URL Pattern List That You Want to Bypass

In this step, you define a URL pattern list (safelist) of URLs or addresses that will be bypassed by antivirus scanning.

You are here (in the J-Web UI): **Security Services > Content Security > Custom Objects.**

To configure the safelist of URLs:

1. Click the **URL Pattern List** tab.
2. Click the add icon (+) to add a URL pattern list.
The Add URL Pattern List page appears. See [Figure 21 on page 872](#).
3. Complete the tasks listed in the Action column in [Table 245 on page 871](#).

Table 245: URL Pattern List Settings

Field	Action
Name	Type av-url-pattern . NOTE: Use a string beginning with a letter or underscore and consisting of alphanumeric characters and special characters such as dashes and underscores. You can use a maximum of 29 characters.
Value	a. Click + to add a URL pattern value. b. Type http://10.102.70.89 . c. Click the tick icon  .

Figure 21: Add URL Pattern List

Add URL Pattern List ?

Name* ?

Values* ?

1 selected + 🗑

☒	Value List
☒	http://10.102.70.89

1 items

Cancel Ok

4. Click **OK** to save the URL pattern list configuration.

Good job! Here's the result of your configuration:

✔ URL pattern list name: av-url-pattern
 URLs allowed: http://10.102.70.89

Security Dashboard / Content Security / Custom Objects

Custom Objects ?

URL Pattern
File Extension
Protocol Command
URL Pattern
URL Category
Custom Message

	Name	Value
☐	av-url-pattern	http://10.102.70.89

1 items

Step 2b: Categorize the URLs That You Want to Allow

You'll now assign the created URL pattern to a URL category list. The category list defines the action of mapping. For example, the *Safelist* category should be permitted.

You are here: **Security Services > Content Security > Custom Objects.**

To categorize URLs:

- 1. Click the **URL Category List** tab.
- 2. Click the add icon (+) to add a URL category list.
The Add URL Category List page appears. See [Figure 22 on page 874](#).
- 3. Complete the tasks listed in the Action column in [Table 246 on page 873](#).

Table 246: URL Category List Settings

Field	Action
Name	Type av-url as the URL category list name for the safelisted URL pattern. NOTE: Use a string beginning with a letter or underscore and consisting of alphanumeric characters and special characters such as dashes and underscores. You can use a maximum of 59 characters.
URL Patterns	Select the URL pattern value av-url-pattern from the Available column and click the right arrow to move the URL pattern values to the Selected column. By doing this, you associate the URL pattern value av-url-pattern with the URL category list av-url .

Figure 22: Add URL Category List

Add URL Category List

Name*

av-url

URL Patterns*

0 Available

☐

Name

No available items

Create New URL Pattern

1 Selected

☐

Name

☐

av-url-pattern

Cancel

OK

4. Click **OK** to save the category list configuration.
- Good job! Here's the result of your configuration:*

URL category name: av-url

URL pattern list name: av-url-pattern

34-0000500

Security Services / Content Security / Custom Objects

Custom Objects

MIME PatternFile ExtensionProtocol CommandURL PatternURL CategoryCustom Message

1

☐

Name

Value

☐

av-url

av-url-pattern

1 items

Step 3: Create Antivirus Profile

You are here: **Security Services > Content Security > Antivirus Profiles.**

In this step, you'll create a new Content Security antivirus profile, refer the created URL objects (patterns and categories) to the profile, and specify the notification details.

To create the new antivirus profile:

1. Click the add icon (+) to add a new antivirus profile.
The Create Antivirus Profiles page appears. See [Figure 23 on page 876](#).
2. Complete the tasks listed in the Action column in [Table 247 on page 875](#).

Table 247: Antivirus Profile Settings

Field	Action
General	
Name	Type av-profile for the new antivirus profile. NOTE: You can use a maximum of 29 characters.
URL Allowlist	Select av-url from the list.
Fallback Options	
Content Size	Select Log and Permit .
Default Action	Select Log and Permit .
Notification Options	
Virus Detection	Select Notify Mail Sender .
Notification Type	Select Message .
Custom Message Subject	Type ***Antivirus Alert*** .

Table 247: Antivirus Profile Settings (Continued)

Field	Action
Custom Message	Type Virus Found !.

Figure 23: Create Antivirus Profile General Settings

Create Antivirus Profiles ?

General

Fallback Options

Notification Options

General Information

Name* ?

av-profile

URL Whitelist ?

av-url

MIME Whitelist

Anti-virus MIME whitelist

MIME Whitelist ?

None

Create New MIME list

Exception MIME Whitelist ?

None

Create New MIME list

Figure 24: Create Antivirus Profile Notification Settings

Create Antivirus Profiles

General Fallback Options **Notification Options**

Notification Options

Use notification options to specify how users are notified when a fallback occurs or a virus is detected.

Fallback Deny ☐ Notify Mail Sender

Fallback Not Deny ☐ Notify Mail Recipient

Virus Detection ☒ Notify Mail Sender

Notification Type Message ✓

Custom Message Subject Antivirus Alert
255 characters maximum

Custom Message Virus Found!
512 characters maximum

Cancel Back Finish

3. Click **Finish**. Review the summary of the configuration and click **OK** to save your configuration.
4. Click **Close** after you see a successful-configuration message.

Good job! Here's the result of your configuration:



Step 4: Apply the Antivirus Profile to a Content Security Policy

After you've created the antivirus feature profile, you configure a Content Security policy for an antivirus scanning protocol and attach this policy to the antivirus profile created in ["Step 3: Create Antivirus Profile" on page 875](#). In this example, you'll scan HTTP and FTP traffic for viruses.

You are here: **Security Services > Content Security > Content Security Policies**.

To create a Content Security policy:

1. Click the add icon (+).

The Create Content Security Policies page appears.

2. Complete the tasks listed in the Action column in [Table 248 on page 878](#):

Table 248: Create Content Security Policies Settings

Field	Action
General	
Name	Type av-policy as the name of the Content Security policy and click Next . NOTE: You can use a maximum of 29 characters.
Antivirus	
HTTP	Select av-profile from the list and click OK .
FTP Upload	Select av-profile from the list.
FTP Download	Select av-profile from the list and click Next till end of the page.

3. Click **Finish**. Review the summary of the configuration and click **OK** to save the changes.
4. Click **Close** after you see a successful-configuration message.

Almost there! Here's the result of your configuration:



Step 5: Assign the Content Security Policy to a Security Firewall Policy

In this step, you create a firewall security policy that will cause traffic passing from the trust zone (trust) to the untrust zone (Internet) to be scanned by Sophos antivirus using the antivirus profile settings.

You haven't yet assigned the Content Security configurations to the security policy from the trust zone to the Internet zone. Filtering actions are taken only after you assign the Content Security policy to security policy rules that act as the match criteria.

NOTE: When the security policy rules are permitted, the SRX Series Firewall:

1. Intercepts an HTTP connection and extracts each URL (in the HTTP request) or IP address.



NOTE: For an HTTPS connection, antivirus is supported through SSL forward proxy.

2. Searches for URLs in the user-configured safelist under Antivirus (**Security Services > Content Security > Default Configuration**). Then, if the URL is in the user-configured safelist, the device permits the URL.
3. Allows or blocks the URL (if a category is not configured) based on the default action configured in the antivirus profile.

You are here: **Security Policies & Objects > Security Policies.**

To create security policy rules for the Content Security policy:

1. Click the add icon (+).
2. Complete the tasks listed in the Action column in [Table 249 on page 879](#):

Table 249: Rule Settings

Field	Action
General	
Rule Name	Type av-security-policy as the security policy rule name. This rule allows the URLs in the av-url category list.
Rule Description	Enter a description for the security policy rule and click Next .

Table 249: Rule Settings (*Continued*)

Field	Action
Source Zone	a. Click +. The Select Sources page appears. b. Zone—Select trust from the list. c. Addresses—Leave this field with the default value any. d. Click OK
Destination Zone	a. Click +. The Select Destination page appears. b. Zone—Select internet from the list. c. Addresses—Leave this field with the default value any. d. Services—Leave this field with the default value any. e. Click OK
Action	Select Permit from the list.
Advanced Security	a. Click +. The Select Advanced Security page appears. b. Content Security—Select av-policy from the list. c. Click OK


NOTE: Navigate to **Security Policies & Objects > Zones/Screens** to create zones. Creating zones is outside the scope of this documentation.

3. Click the tick icon



to save changes.

Good job! Here's the result of your configuration:

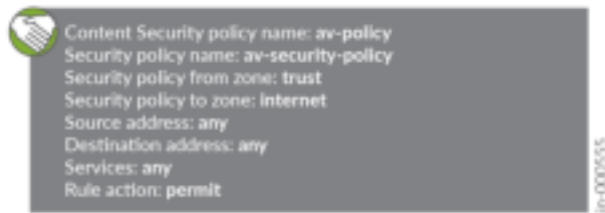

4. Click the commit icon (at the right side of the top banner) and select **Commit**.
The successful-commit message appears.

Congratulations! We're now ready to scan the traffic for virus attacks.

Step 6: Verify That Content Security Antivirus Is Working

IN THIS SECTION

- Purpose | 881
- Action | 881

Purpose

Verify that your configured Content Security antivirus is preventing virus attacks from the Internet server and allowing traffic from the Allowlist server.

Action

1. Using the PC, send a HTTP request to `http://10.102.70.89`.

Good job! You can access the `http://10.102.70.89` server.
2. Using the PC, send a FTP request to the 10.102.70.89 server to download the eicar.txt file. The eicar.txt file is a test virus file which is made available on the 10.102.70.89 server.

Sorry! The SRX Series Firewall has blocked downloading the file and sent you a custom block message *****Antivirus Alert***- Virus Found!**.

Here is an example output when you try to download the eicar.txt file and the SRX Series Firewall sends a virus alert:

```
[centos-01 ~]$ ftp 10.102.70.89
Connected to 10.102.70.89 (10.102.70.89).
220 XX FTP server (Version 6.00LS) ready.
Name (10.102.70.89:lab): root
331 Password required for root.
Password:
230 User root logged in.
Remote system type is UNIX.
Using binary mode to transfer files.
ftp> get eicar.txt
local: eicar.txt remote: eicar.txt
227 Entering Passive Mode (10,102,70,89,197,55)
150 Opening BINARY mode data connection for 'eicar.txt' (70 bytes).
netin: Connection reset by peer
426 10.102.70.89:21->10.0.1.1:36240 ***Antivirus Alert***- Virus Found!
```

Here is an example of the anti-virus statistics output when you find a threat:

```
[edit]
root@srx> show security utm anti-virus statistics
UTM Anti Virus statistics:

Intelligent-prescreening passed:      0
MIME-whitelist passed:                0
URL-whitelist passed:                 1
Session abort:                        0
Scan Request:

Total          Clean          Threat-found  Fallback
    2             0             1           0

Fallback:

Log-and-Permit  Block          Permit
Engine not ready:      0             0           0
Out of resources:      0             0           0
Timeout:              0             0           0
```

Maximum content size:	0	0	0
Too many requests:	0	0	0
Decompress error:	0	0	0
Others:	0	0	0

What's Next?

If you want to	Then
Monitor Content Security antivirus details and statistics	In J-Web, go to Monitor > Security Services > Content Security > Anti Virus .
Generate and view reports on URLs allowed and blocked	To generate and view reports: 1. Log in to J-Web UI and click Monitor > Reports. The Reports page appears. 2. Select any of the following predefined report name. • Threat Assessment Report • Viruses Blocked NOTE: You can't generate more than one report at the same time. 3. Click Generate Report. The Report Title page appears. 4. Enter the required information and click Save. A reported is generated.
Learn more about Content Security features	See Content Security User Guide

Sample Configuration Output

In this section, we present samples of configurations that block virus attacks from the websites defined in this example.

You configure the following Content Security configurations at the [edit security utm] hierarchy level.

Creating custom objects at the [edit security utm] hierarchy level:

```
custom-objects {
  url-pattern {
    av-url-pattern {
      value http://10.102.70.89 ;
    }
  }
  custom-url-category {
    av-url {
      value av-url-pattern;
    }
  }
}
```

Creating the antivirus profile at the [edit security utm] hierarchy level:

```
default-configuration {
  anti-virus {
    type sophos-engine;
  }
}
```

```
feature-profile {
  anti-virus {
    profile UTM-LB-AV {
      notification-options {
        virus-detection {
          type message;
          notify-mail-sender;
          custom-message "Virus-Found!";
          custom-message-subject "***Antivirus Alert***";
        }
      }
    }
  }
}
```


Creating the Content Security policy:

```
utm-policy av-policy {
  anti-virus {
    http-profile av-profile;
    ftp {
      upload-profile av-profile;
      download-profile av-profile;
    }
  }
}
```

Creating rules for a security policy at the [edit security policies] hierarchy level.:

```
from-zone trust to-zone internet {
  policy av-security-policy {
    match {
      source-address any;
      destination-address any;
      application any;
    }
    then {
      permit {
        application-services {
          utm-policy av-policy;
        }
      }
    }
  }
}
```

Content Security Web Filtering Profiles

IN THIS CHAPTER

- [About the Web Filtering Profiles Page | 886](#)
- [Add a Web Filtering Profile | 889](#)
- [Clone a Web Filtering Profile | 895](#)
- [Edit a Web Filtering Profile | 896](#)
- [Delete a Web Filtering Profile | 897](#)
- [Allow or Block Websites by Using J-Web Integrated Content Security Web Filtering | 897](#)

About the Web Filtering Profiles Page

IN THIS SECTION

- [Tasks You Can Perform | 887](#)
- [Field Descriptions | 888](#)

You are here: **Security Services > Content Security > Web Filtering Profiles.**

Use this page to manage Internet usage by preventing access to inappropriate Web content.

A Web filtering profile defines a set of permissions and actions to take based on Web connections predefined by website categories. In addition, you can create custom URL categories and URL pattern lists during this process.

For an example use case, see [Allow or Block Websites by Using J-Web Integrated Content Security Web Filtering](#).

Tasks You Can Perform

You can perform the following tasks from this page:

- Add a Web filtering profile. See ["Add a Web Filtering Profile" on page 889](#).
- Edit a Web filtering profile. See ["Edit a Web Filtering Profile" on page 896](#).
- Clone a Web filtering profile. See ["Clone a Web Filtering Profile" on page 895](#).
- Delete a Web filtering profile. See ["Delete a Web Filtering Profile" on page 897](#).
- Filter the Web filtering profiles based on select criteria. To do this, select the filter icon at the upper-right corner of the Web filtering profiles table. The columns in the grid change to accept filter options. Type the filter options; the table displays only the data that fits the filtering criteria.
- Show or hide columns in the Web filtering profiles table. To do this, click the Show Hide Columns icon in the upper-right corner of the Web filtering profiles table and select the columns you want to view or deselect the columns you want to hide on the page.
- View the details of a Web filtering profile—To do this, select the Web filtering profile for which you want to view the details and follow the available options:
 - Click **More** and select **Detailed View**.
 - Right-click on the selected Web filtering profile and select **Detailed View**.
 - Mouse over to the left of the selected Web filtering profile and click **Detailed View**.
- Advanced search for Web filtering profiles. To do this, use the search text box present above the table grid. The search includes the logical operators as part of the filter string. An example filter condition is displayed in the search text box when you hover over the Search icon. When you start entering the search string, the icon indicates whether the filter string is valid or not.

For an advanced search:

1. Enter the search string in the text box.

Based on your input, a list of items from the filter context menu appears.

2. Select a value from the list and then select a valid operator based on which you want to perform the advanced search operation.

NOTE: Press Spacebar to add an AND operator or OR operator to the search string. Press backspace to delete a character of the search string.

3. Press Enter to display the search results in the grid.

- Migrate to Juniper NextGen—Click **Migrate to Juniper NextGen** to convert all user defined Juniper Enhanced profiles to Juniper NextGen profiles.

NOTE:

- You cannot migrate to Juniper NextGen when:
 - Web filtering profile type is not configured in the Default Configuration page. Profile type must be ng-juniper.
 - There are no user defined profile types in the Web Filtering Profiles page with Juniper Enhanced.
- On the Default Configuration page, your profile type is not ng-juniper (Juniper NextGen), and you have a Juniper Enhanced profile type on the Web Filtering profiles page. When you click **Migrate to Juniper NextGen**, the Web Filtering profile type is automatically changed to ng-juniper on the Default Configuration page.

Field Descriptions

Table 250 on page 888 describes the fields on the Web filtering page.

Table 250: Fields on the Web Filtering Page

Field	Action
Name	Displays the name for the Web filtering profile.
Profile type	Displays the type of profile based on the filtering type selected.
Default action	Displays the default action to be taken for the web filtering profile.
Timeout	Displays the time interval to wait before the connection to the server is closed.

RELATED DOCUMENTATION

[Add a Web Filtering Profile | 889](#)

[Edit a Web Filtering Profile | 896](#)

Add a Web Filtering Profile

You are here: **Security Services > Content Security > Web Filtering Profiles.**

To create a new web filtering profile:

1. Click **+** available on the upper-right corner of the Web Filtering Profiles page.
The Create Web Filtering Profiles page appears.
2. Complete the configuration according to the guidelines provided in [Table 251 on page 889](#) through [Table 253 on page 894](#).
3. Click **Finish** to save the changes or click **Back** to go to the previous tab. If you want to discard your changes, click **Cancel**.

If you click **Finish**, a new web filtering profile is created.

Table 251: Fields on the General tab

Field	Action
Name	Enter a name for the Web filtering profile. The maximum length is 29 characters.
Timeout	Enter a timeout value to wait for a response from the Websense server. The maximum value is 1800 seconds. Default value is 15 seconds.

Table 251: Fields on the General tab (*Continued*)

Field	Action
Engine type	Select an engine type for Web filtering: The available options are • Juniper NextGen—Intercepts the HTTP and HTTPS traffic and sends URL information or the destination IP address to the Juniper NextGen Web Filtering (NGWF) Cloud. The NGWF Cloud categorizes the URL and provides site reputation information. Based on this information, SRX Series Firewall takes the action on the traffic. • Juniper Enhanced—Specifies that the Juniper Enhanced Web filtering intercepts the HTTP and the HTTPS requests and sends the HTTP URL or the HTTPS source IP to the Websense ThreatSeeker Cloud (TSC). • Websense Redirect—Specifies that the Web filtering module intercepts an HTTP request. The URL in the request is then sent to the external Websense server which makes a permit or a deny decision. • Local—Specifies that the Web filtering module intercepts URLs and makes a permit or deny decision locally. NOTE: The default value is Juniper NextGen.
Safe search	Enable a safe search solution to ensure that the embedded objects such as images on the URLs received from the search engines are safe and that no undesirable content is returned to the client. NOTE: This option is available only for the Juniper Enhanced engine type. By default, this option is enabled.
Account	Enter the user account associated with the Websense Web filtering profile. NOTE: This option is available only for the Websense Redirect engine type.
Server	Enter the hostname or IP address for the Websense server. NOTE: This option is available only for the Websense Redirect engine type.

Table 251: Fields on the General tab (*Continued*)

Field	Action
Port	Enter the port number for communicating with the Websense server. The default port is 15868. NOTE: This option is available only for the Websense Redirect engine type.
Sockets	Enter the number of sockets used for communication between the client and the server. The default value is 8. NOTE: This option is available only for the Websense Redirect engine type.
Custom Block Message/URL	Specify the redirect URL or a custom message to be sent when HTTP requests are blocked. Maximum length is 512 characters.
Custom Quarantine Message	Define a custom message to allow or deny access to a blocked site based on a user response to the message. Maximum length is 512 characters. NOTE: This option is available only for the Juniper Enhanced, Juniper NextGen, and the Local engine types.
Base Filter	Select a predefined base filter, which has default actions for all categories, for Web filtering. Click Clear All to discard the changes. NOTE: This option is available only for the Juniper Enhanced and Juniper NextGen engine types.

Table 252: Fields on the URL Categories Tab

Field	Action
Apply actions	To apply actions that the device must take for the selected category: - Click Apply Actions. The Apply Actions page appears. - Enter the following details: - Action—Select an action for the URL category from the list. The options are Permit, Log and Permit, Block or Quarantine. - Custom Message—Select a custom message for the URL category. NOTE: - This option is applicable only when the action is Block or Quarantine. - Click Clear all to clear the custom message. To add a custom message list inline: - Click Create New. - Enter the following details: - Name—Enter a unique name for the custom message list. Special characters such as hyphen, underscore, !, @, \$, *, + are allowed. The maximum length is 29 characters. - Type—Select an option from the list. The options are Redirect URL or User Message. - Content—Enter a content for the custom message list. The maximum length is 512 characters. - Click OK to add a new custom message list. Else, click Cancel. - Click OK to apply actions for the category. Else, click Cancel.

Table 252: Fields on the URL Categories Tab *(Continued)*

Field	Action
Create	To add a new URL category: - Click +. The Select URL Categories page appears. - Select one or more predefined and custom URL categories to apply to the list. The Name column displays the list of URL categories to choose from. Click the search icon in the upper-right corner of the table to search for any particular URL category in the list. - Enter the following details: - Action—Select an action for the URL category from the list. The options available are Permit, Log and Permit, Block, and Quarantine. NOTE: The default action is Log and Permit. - Custom Message—Select a custom message for the URL category. NOTE: - This option is applicable only when the action is Block or Quarantine. - Click Clear all to clear the custom message. - Click Create New to add a custom message list inline. - Click OK to save the changes. If you want to discard your changes, click Cancel.
Delete	Select a URL category that you want to delete and click the delete icon in the upper-right corner of the table
Search	Click the search icon in the upper-right corner of the table and the URL category you want to search.
Category name	Displays the URL category names. Select one or more categories from the list.

Table 252: Fields on the URL Categories Tab *(Continued)*

Field	Action
Action	Displays the action taken for the URL category.
Custom message	Displays the respective custom messages for the URL categories.

Table 253: Fields on the Fallback Options Tab

Field	Action
Global Reputation Actions	Select to choose the action you want to take for each reputation level. URLs can be processed using their reputation score if there is no category available.
Very Safe	Select an option from the list for the device must take appropriate action if the site reputation reaches the % score that is defined by you. NOTE: If you have not defined the percentage, the default score is 90 through 100. The options are Permit, Log and Permit, Block, and Quarantine.
Moderately Safe	Select an option from the list for the device must take appropriate action if the site reputation reaches the % score that is defined by you. NOTE: If you have not defined the percentage, the default score is 80 through 89. The options are Permit, Log and Permit, Block, and Quarantine.
Fairly Safe	Select an option from the list for the device must take appropriate action if the site reputation reaches the % score that is defined by you. NOTE: If you have not defined the percentage, the default score is 70 through 79. The options are Permit, Log and Permit, Block, and Quarantine.

Table 253: Fields on the Fallback Options Tab *(Continued)*

Field	Action
Suspicious	Select an option from the list for the device must take appropriate action if the site reputation reaches the % score that is defined by you. NOTE: If you have not defined the percentage, the default score is 60 through 69. The options are Permit, Log and Permit, Block, and Quarantine.
Harmful	Select an option from the list for the device must take appropriate action if the site reputation reaches the % score that is defined by you. NOTE: If you have not defined the percentage, the default score is 50 through 59. The options are Permit, Log and Permit, Block, and Quarantine.
Default Action	Select an option from the list for the actions to be taken for URL categories with no assigned action and for uncategorized URLs. The options are Permit, Log and Permit, Block, and Quarantine.
Fallback Action	Select an option from the list. The options are Log and Permit and Block. Use this option when the ThreatSeeker Websense Cloud servers are unreachable. A timeout occurs for requests to ThreatSeeker Cloud.

RELATED DOCUMENTATION

[About the Web Filtering Profiles Page | 886](#)

[Clone a Web Filtering Profile | 895](#)

[Edit a Web Filtering Profile | 896](#)

[Delete a Web Filtering Profile | 897](#)

Clone a Web Filtering Profile

You are here: **Security Services > Content Security > Web Filtering Profiles.**

To clone a Web filtering profile:

1. Select a Web filtering profile that you want to clone and select **Clone** from the More link.

NOTE: Alternatively, you can right-click on the selected Web filtering profile and select **Clone**.

The Clone Web Filtering Profiles page appears with editable fields. For more information on the options, see ["Add a Web Filtering Profile" on page 889](#).

2. Click **OK** to save the changes.
A cloned Web filtering profile is created for the selected Web filtering profile. By default, the name of the cloned Web filtering profile is in the format: *<Web filtering profile name>_clone*.

RELATED DOCUMENTATION

- [About the Web Filtering Profiles Page | 886](#)
- [Add a Web Filtering Profile | 889](#)
- [Edit a Web Filtering Profile | 896](#)
- [Delete a Web Filtering Profile | 897](#)

Edit a Web Filtering Profile

You are here: **Security Services > Content Security > Web Filtering Profiles**.

To edit a Web filtering profile:

1. Select a Web filtering profile that you want to edit on the Web Filtering page.
2. Click the pencil icon available on the upper-right corner of the page.
The Edit Web Filtering Profiles page appears with editable fields. For more information on the options, see ["Add a Web Filtering Profile" on page 889](#).
3. Click **OK** to save the changes or click **Cancel** to discard the changes.

RELATED DOCUMENTATION

- [About the Web Filtering Profiles Page | 886](#)
- [Add a Web Filtering Profile | 889](#)
- [Clone a Web Filtering Profile | 895](#)
- [Delete a Web Filtering Profile | 897](#)

Delete a Web Filtering Profile

You are here: **Security Services** > **Content Security** > **Web Filtering Profiles**.

To delete Web filtering profiles:

1. Select one or more Web filtering profiles that you want to delete from the Web Filtering page.
2. Click the delete icon available on the upper-right corner of the page.
A confirmation window appears.
3. Click **Yes** to delete or click **No** to retain the profile.

RELATED DOCUMENTATION

[About the Web Filtering Profiles Page | 886](#)

[Add a Web Filtering Profile | 889](#)

[Clone a Web Filtering Profile | 895](#)

[Edit a Web Filtering Profile | 896](#)

Allow or Block Websites by Using J-Web Integrated Content Security Web Filtering

SUMMARY

Learn about Web filtering and how to filter URLs on Content Security-enabled SRX Series Firewalls by using J-Web. Web filtering helps you to allow or block access to the Web and to monitor your network traffic.

IN THIS SECTION

- [Content Security URL Filtering Overview | 898](#)
- [Benefits of Content Security Web Filtering | 899](#)
- [Web Filtering Workflow | 899](#)
- [Step 1: List URLs That You Want to Allow or Block | 901](#)
- [Step 2: Categorize the URLs That You Want to Allow or Block | 903](#)
- [Step 3: Add a Web Filtering Profile | 905](#)

- [Step 4: Reference a Web Filtering Profile in a Content Security Policy | 906](#)
- [Step 5: Assign a Content Security Policy to a Security Policy | 909](#)
- [Step 6: Verify That the URLs Are Allowed or Blocked from the Server | 912](#)
- [What's Next | 913](#)
- [Sample Configuration Output | 913](#)

Content Security URL Filtering Overview

Today, most of us spend an amount of time on the Web. We surf our favorite sites, follow interesting links sent to us through E-mail, and use a variety of Web-based applications for our office network. This increased use of the network helps us both personally and professionally. However, it also exposes the organization to a variety of security and business risks, such as potential data loss, lack of compliance, and threats such as malware, viruses, and so on. In this environment of increased risk, it's wise for businesses to implement Web or URL filters to control network threats. You can use a Web or URL filter to categorize websites on the Internet and to either allow or block user access.

Here's an example of a typical situation where a user of office network has access to a website blocked:

On the Web browser, the user types **www.game.co.uk**, a popular gaming site. The user receives a message such as Access Denied or The Website is blocked. Display of such a message means that your organization has inserted a filter for the gaming websites, and you can't access the site from your workplace.

Juniper Web (J-Web) Device Manager supports Content Security Web filtering on SRX Series Firewalls.

NOTE: Starting in Junos OS 22.2R1:

- In the J-Web GUI, UTM term is replaced with Content Security.
- In Junos CLI commands, we continue to use the legacy term UTM for content security.

In J-Web, a Web filtering profile defines a set of permissions and actions based on Web connections predefined by website categories. You can also create custom URL categories and URL pattern lists for a Web filtering profile.

NOTE: You cannot inspect URLs within e-mails using J-Web Content Security Web filtering.

Benefits of Content Security Web Filtering

- Local Web filtering:
 - Doesn't require a license.
 - Enables you to define your own lists of allowed sites (allowlist) or blocked sites (blocklist) for which you want to enforce a policy.
- Enhanced Web filtering:
 - Is the most powerful integrated filtering method and includes a granular list of URL categories, support for Google Safe Search, and a reputation engine.
 - Doesn't require additional server components.
 - Provides real-time threat score for each URL.
 - Enables you to redirect users from a blocked URL to a user-defined URL rather than simply preventing user access to the blocked URL.
- Redirect Web filtering:
 - Tracks all queries locally, so you don't need an Internet connection.
 - Uses the logging and reporting features of a standalone Websense solution.

Web Filtering Workflow

IN THIS SECTION

- [Scope | 900](#)
- [Before You Begin | 900](#)
- [Topology | 901](#)
- [Sneak Peek – J-Web Content Security Web Filtering Steps | 901](#)

Scope

In this example, you'll:

1. Create your own custom URL pattern lists and URL categories.
2. Create a Web filtering profile using the Local engine type. Here, you define your own URL categories, which can be allowed sites (allowlist) or blocked sites (blocklist) that are evaluated on the SRX Series Firewall. All URLs added for blocked sites are denied, while all URLs added for allowed sites are permitted.
3. Block inappropriate gaming websites and allow suitable websites (for example, www.juniper.net).
4. Define a custom message to display when users attempt to access gaming websites.
5. Apply the Web filtering profile to a Content Security policy.
6. Assign the Content Security policy to a security policy rule.

NOTE: Web filtering and URL filtering have the same meaning. We'll use the term *Web filtering* throughout our example.

Before You Begin


- We assume that your device is set with the basic configuration. If not, see [Configure Setup Wizard](#).
- You do not need a license to configure the Web filtering profile if you use the Local engine type. This is because you will be responsible for defining your own URL pattern lists and URL categories.
- You need a valid license (**wf_key_websense_ewf**) if you want to try the Juniper Enhanced engine type for the Web filtering profile. Redirect Web filtering does not need a license.
- Ensure that the SRX Series Firewall you use in this example runs Junos OS Release 22.2R1 and later.

NOTE: Starting in Junos OS 22.2R1:

- In the J-Web GUI, UTM term is replaced with Content Security.
- In Junos CLI commands, we continue to use the legacy term UTM for content security.

Topology

In this topology, we have a PC connected to a Content Security-enabled SRX Series Firewall that has access to the Internet. Let's use J-Web to filter the HTTP/HTTPS requests sent to the Internet using this simple setup.

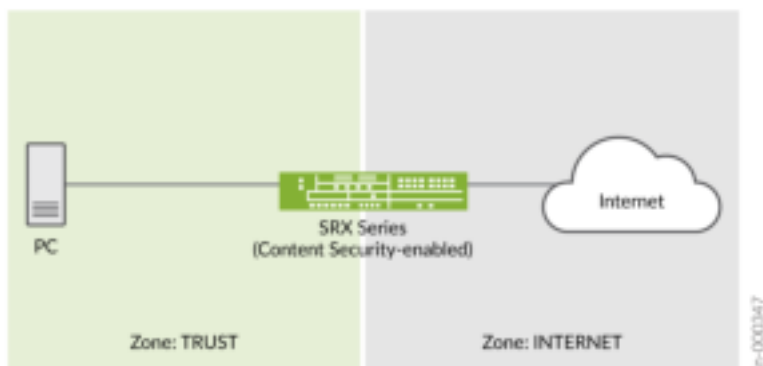

Sneak Peek – J-Web Content Security Web Filtering Steps



Step 1: List URLs That You Want to Allow or Block

In this step, we define custom objects (URLs and patterns) to handle the URLs that you want to allow or block.

You are here (in the J-Web UI): **Security Services > Content Security > Custom Objects**.

To list URLs:

1. Click the URL Pattern List tab.
2. Click the add icon (+) to add a URL pattern list.
The Add URL Pattern List page appears. See [Figure 25 on page 902](#).
3. Complete the tasks listed in the Action column in the following table:

Field	Action
Name	Type allowed-sites or blocked-sites . NOTE: Use a string beginning with a letter or underscore and consisting of alphanumeric characters and special characters such as dashes and underscores. The maximum length is 29 characters.
Value	a. Click + to add a URL pattern value. b. Type the following: • For allowed-sites—www.juniper.net and www.google.com • For blocked-sites—www.gematsu.com and www.game.co.uk c. Click the tick icon 

Figure 25: Add URL Pattern List



4. Click **OK** to save the changes.
- Good job! Here's the result of your configuration:*





Step 2: Categorize the URLs That You Want to Allow or Block

We'll now assign the created URL patterns to URL category lists. The category list defines the action associated with the associated URLs. For example, the *Gambling* category should be blocked.

You are here: **Security Services > Content Security > Custom Objects.**

To categorize URLs:


- 1. Click the URL Category List tab.
- 2. Click the add icon (+) to add a URL category list.

The Add URL Category List page appears. See [Figure 26 on page 904](#).


- 3. Complete the tasks listed in the Action column in the following table:

Field	Action
Name	Type the URL category list name as good-sites for the allowed-sites URL pattern or stop-sites for the blocked-sites URL pattern. NOTE: Use a string beginning with a letter or underscore and consisting of alphanumeric characters and special characters such as dashes and underscores. The maximum length is 59 characters.
URL Patterns	a. Select the URL pattern values allowed-sites or blocked-sites from the Available column to associate the URL pattern values with the URL categories good-sites or stop-sites, respectively. b. Click the right arrow to move the URL pattern values to the Selected column.

Figure 26: Add URL Category List

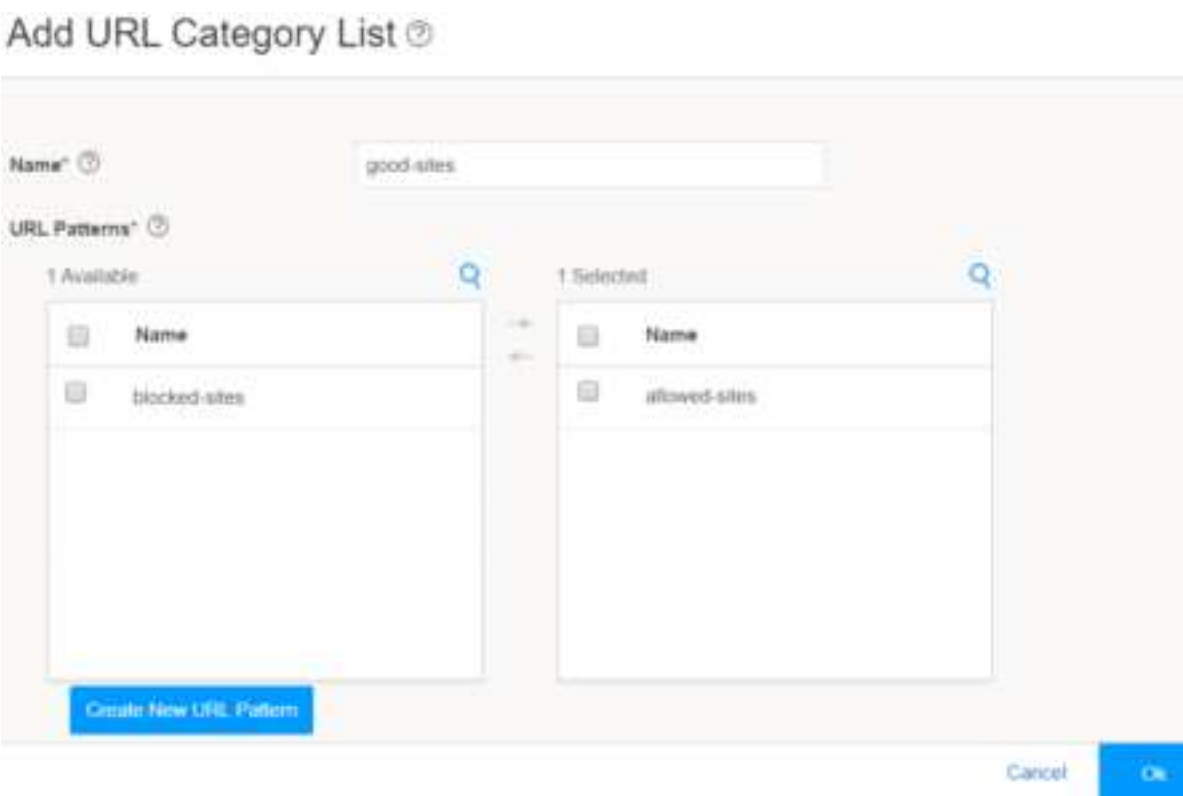

- 4. Click **OK** to save the changes.
- Good job! Here's the result of your configuration:*

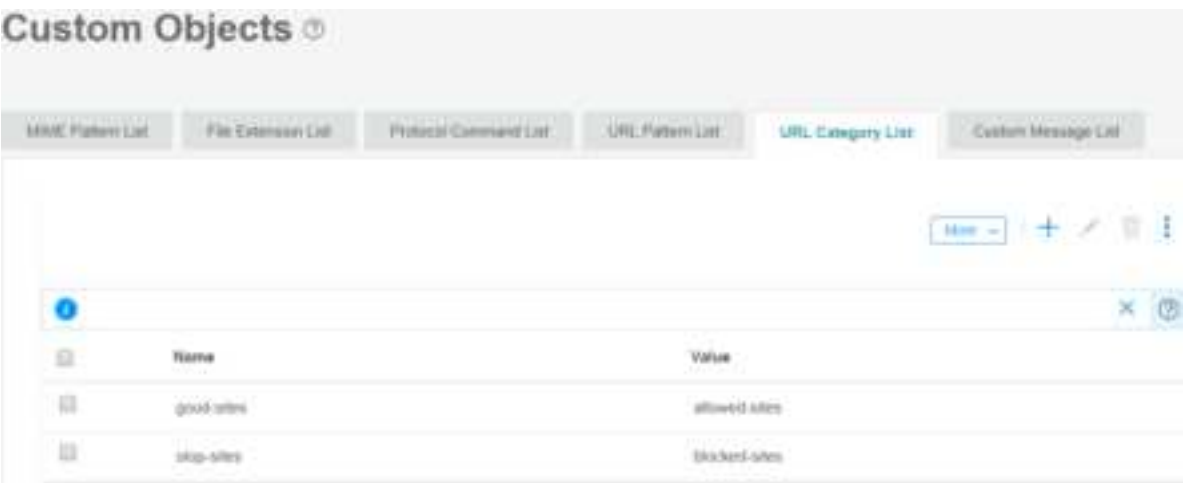

Step 3: Add a Web Filtering Profile

Now, let's link the created URL objects (patterns and categories) to a Content Security Web filtering profile. This mapping allows you to set different values for your filtering behavior.

You are here: **Security Services > Content Security > Web Filtering Profiles.**

To create a Web filtering profile:

1. Click the add icon (+) to add a Web filtering profile.

The Create Web Filtering Profiles page appears. See [Figure 27 on page 906](#).


2. Complete the tasks listed in the Action column in the following table:

Field	Action
General	
Name	Type wf-local for the Web filtering profile. NOTE: The maximum length is 29 characters.
Timeout	Type 30 (in seconds) to wait for a response from the Local engine. The maximum value is 1800 seconds. The default value is 15 seconds.
Engine type	Select the Local engine type for Web filtering. Click Next . NOTE: The default value is Juniper Enhanced.
URL Categories	
+	Click the add icon to open the Select URL Categories window.
Select URL categories to apply to the list	Select good-sites or stop-sites .
Action	Select Log and Permit for the good-sites category from the list. Select Block for the stop-sites category from the list.

Figure 27: Create Web Filtering Profile



3. Click **Finish**. Review the summary of the configuration and click **OK** to save changes.
Good job! Here's the result of your configuration:

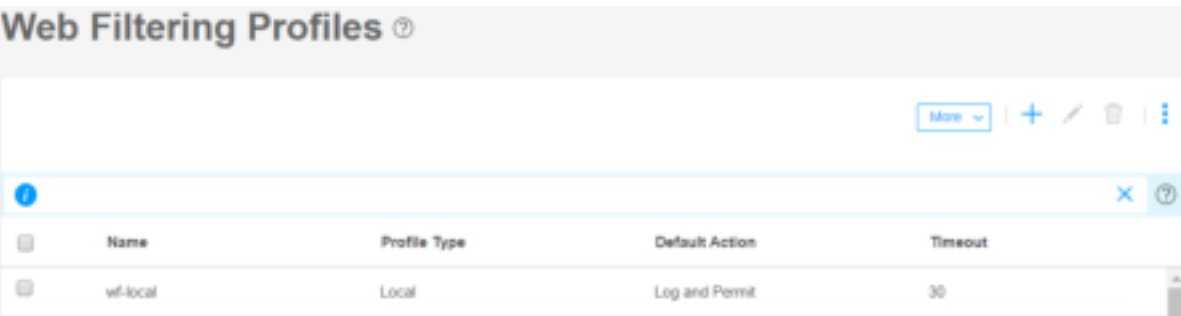

4. Click **Close** after you see a successful-configuration message.

Step 4: Reference a Web Filtering Profile in a Content Security Policy

We now need to assign the Web filtering profile (wf-local) to a Content Security policy that can be applied to a security policy.

You are here: **Security Services > Content Security > Content Security Policies.**

To create a Content Security policy:

- 1. Click the add icon (+) to add a Content Security policy.
The Create Content Security Policies page appears.
- 2. Complete the tasks listed in the Action column in the following table:

Field	Action

General – General Information


Name	Type wf-custom-policy for the Content Security policy. NOTE: The maximum length is 29 characters. Click Next and then click Next to skip the Antivirus configuration.

Web Filtering - Web Filtering Profiles by Traffic Protocol

HTTP	Select wf-local from the list and click Next till the end of the workflow.

3. Click **Finish**. Review the summary of the configuration and click **OK** to save changes.

Almost there! Here's the result of your configuration:

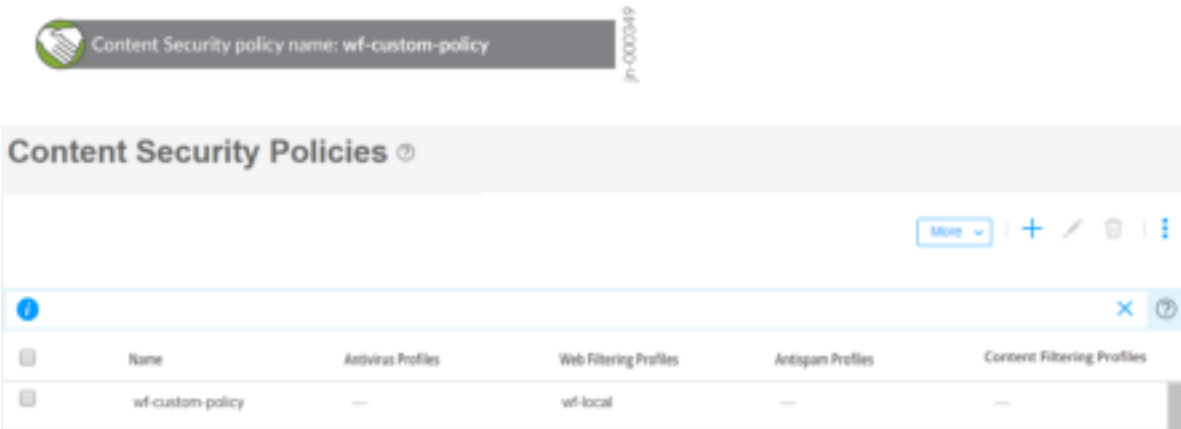

4. Click **Close** after you see a successful message.

Almost done! Now, you create a default UTM web filtering policy that references your list of good and stop sites.

You are here: **Security Services > Content Security > Default Configuration > Web Filtering.**

5. Click the edit icon to modify the default web filtering policy.


The Web Filtering page appears.

6. Complete the tasks listed in the Action column in the following table:

Field	Action
Type	Select Juniper Local from the list to configure the use of the local Content Security filtering database.
URL Blocklist	Select stop-sites from the list to link to the list of URLs that are not allowed (blocked).
URL Allowlist	Select good-sites from the list to link to the list of URLs that are allowed.
Juniper Local > Global	
Custom Block Message	Enter Juniper Web Filtering has been set to block this site.
Default Action	Select Block from the list. Skip other fields and click OK .

7. Click **OK** to save changes.

Almost there! Here's the result of your Content Security default Web filtering configuration.

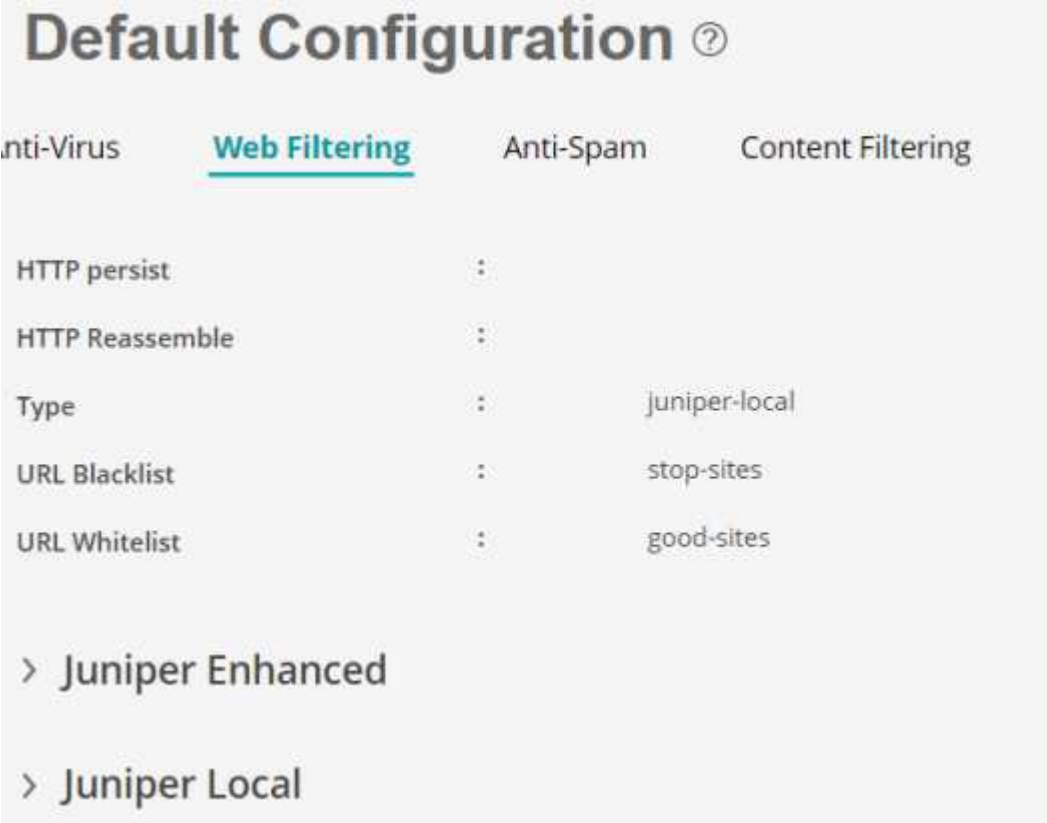

Good news! You're done with Content Security Web filtering configuration.

Step 5: Assign a Content Security Policy to a Security Policy

You haven't yet assigned the Content Security configuration to the security policy from the TRUST zone to the INTERNET zone. Filtering actions are taken only after you assign the Content Security policy to security policy rules that act as the match criteria.

NOTE: When the security policy rules are permitted, the SRX Series Firewall:

1. Intercepts an HTTP/HTTPS connection and extracts each URL (in the HTTP/HTTPS request) or IP address.

NOTE: For an HTTPS connection, Web filtering is supported through SSL forward proxy.

2. Searches for URLs in the user-configured blocklist or allowlist under Web Filtering (**Security Services > Content Security > Default Configuration**). Then, if the URL is in the:

a. User-configured blocklist, the device blocks the URL.

b. User-configured allowlist, the device permits the URL.

3. Checks the user-defined categories and blocks or allows the URL based on the user-specified action for the category.

4. Allows or blocks the URL (if a category is not configured) based on the default action configured in the Web filtering profile.

You are here: **Security Policies & Objects > Security Policies.**

To create security policy rules for the Content Security policy:

1. Click the add icon (+).

2. Complete the tasks listed in the Action column in [Table 254 on page 910](#).

Table 254: Rule Settings

Field	Action
General – General Information	
Rule Name	Type wf-local-policy for the security policy allowing the good-sites category and denying the stop-sites category.
Rule Description	Enter a description for the security policy rule.
Source Zone	a. Click +. The Select Sources page appears. b. Zone—Select TRUST from the list. c. Addresses—Leave this field with the default value Any. d. Click OK

Table 254: Rule Settings (*Continued*)

Field	Action
Destination Zone	a. Click +. The Select Destination page appears. b. Zone—Select INTERNET from the list. c. Addresses—Leave this field with the default value Any. d. Services—Leave this field with the default value Any. e. URL Category—Leave this field blank. f. Click OK
Action	By default, Permit is selected. Leave as is.
Advanced Security	a. Click +. The Select Advanced Security page appears. b. Content Security—Select wf-custom-policy from the list. c. Click OK

NOTE: Navigate to **Security Policies & Objects > Zones/Screens** to create zones. Creating zones is outside the scope of this documentation.


3. Click the tick icon



and then click **Save** to save changes.

NOTE: Scroll back the horizontal bar if the inline tick and cancel icons are not available when creating a new rule.

Good job! Here's the result of your configuration:

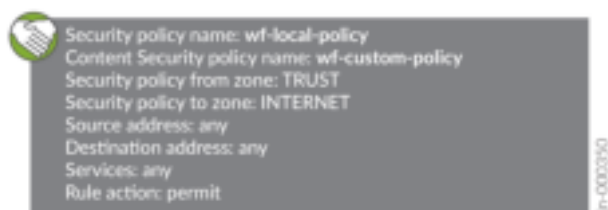

4. Click the commit icon (at the right side of the top banner) and select **Commit**.

The successful-commit message appears.

Congratulations! We're ready to filter the URL requests.


Step 6: Verify That the URLs Are Allowed or Blocked from the Server

Let's verify that our configurations and security policy work fine with the defined URLs in the topology:

- If you enter www.gematsu.com and www.game.co.uk, the SRX Series Firewall should block the URLs and send the configured blocked site message.

NOTE: Most sites use HTTPS. The blocked site message is only seen for HTTP sites. For HTTPS, you can expect a Secure Connection Failed error message, such as An error occurred during a connection to <blocked-siteurl> PR_CONNECT_RESET_ERROR.

- If you enter www.juniper.net and www.google.com, the SRX Series Firewall should allow the URLs with their homepage displayed.

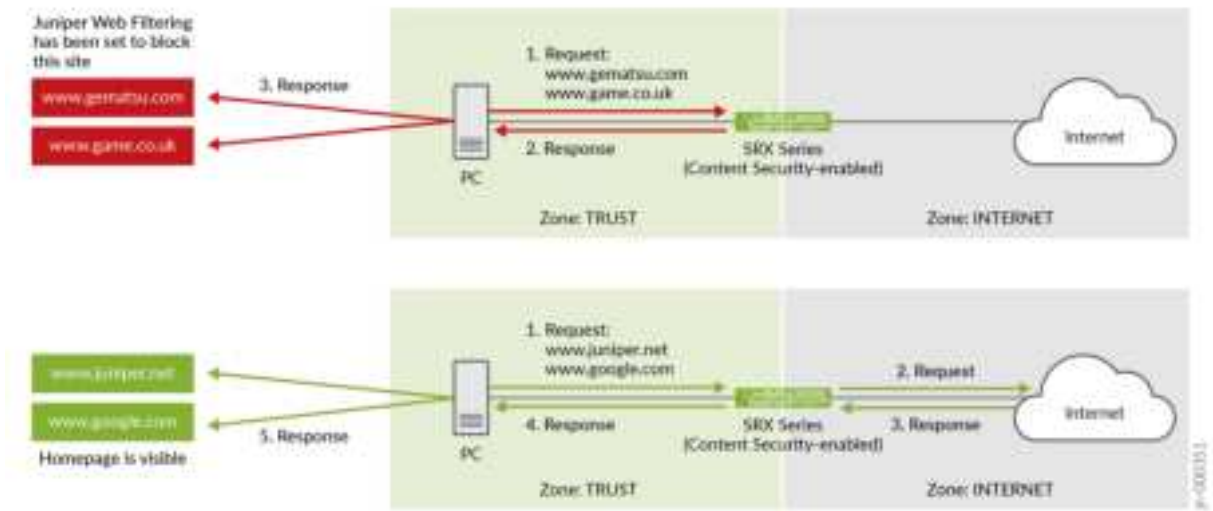

What's Next

What to do?	Where?
Monitor Content Security Web filtering information and statistics.	In J-Web, go to Monitor > Security Services > Content Security > Web Filtering .
Generate and view reports on URLs allowed and blocked.	In J-Web, go to Reports . Generate reports for Threat Assessment Reports and Top Blocked Applications via Webfilter logs.
Learn more about Content Security features.	Content Security User Guide

Sample Configuration Output

In this section, we present samples of configurations that allow and block the websites defined in this example.

You configure the following Content Security configurations at the [edit security utm] hierarchy level.

Creating custom objects:

```
custom-objects {
  url-pattern {
    blocked-sites {
      value [ http://*.gematsu..com http://*.game.co.uk];
    }
  }
}
```

```

    }
    allowed-sites {
        value [ http://*.juniper.net http://*.google.com];
    }
}
custom-url-category {
    good-sites {
        value allowed-sites;
    }
    stop-sites {
        value blocked-sites;
    }
}
}

```

Creating the Web filtering profile:

```

default-configuration {
    web-filtering {
        url-whitelist good-sites;
        url-blacklist stop-sites;
        type juniper-local;
        juniper-local {
            default block;
            custom-block-message "Juniper Web Filtering has been set to block this
site.";
            fallback-settings {
                default log-and-permit;
                server-connectivity log-and-permit;
                timeout log-and-permit;
                too-many-requests log-and-permit;
            }
        }
    }
}
}

```

```

feature-profile {
    web-filtering {
        juniper-local {
            profile wf-local {
                category {

```

```

        stop-sites {
            action block;
        }
        good-sites {
            action log-and-permit;
        }
    }
    timeout 30;
}
}
}
}
}

```

Creating the Content Security policy:

```

utm-policy wf-custom-policy {
    web-filtering {
        http-profile wf-local;
    }
}

```

You configure the security policy rules at the [\[edit security policies\]](#) hierarchy level.

Creating rules for a security policy:

```

from-zone trust to-zone internet {
    policy wf-local-policy {
        match {
            source-address any;
            destination-address any;
            application any;
        }
        then {
            permit {
                application-services {
                    utm-policy wf-custom-policy;
                }
            }
        }
    }
}
}

```

Content Security Antispam Profiles

IN THIS CHAPTER

- [About the Antispam Profiles Page | 916](#)
- [Add an Antispam Profile | 918](#)
- [Clone an Antispam Profile | 919](#)
- [Edit an Antispam Profile | 920](#)
- [Delete an Antispam Profile | 921](#)

About the Antispam Profiles Page

IN THIS SECTION

- [Tasks You Can Perform | 916](#)
- [Field Descriptions | 917](#)

You are here: **Security Services** > **Content Security** > **Antispam Profiles**.

Use the Antispam Profiles page to view and manage antispam profiles. An antispam profile is used to examine transmitted e-mail messages to identify e-mail spam by using a constantly updated spam block list.

Tasks You Can Perform

You can perform the following tasks from this page:

- Create an antispam profile. See ["Add an Antispam Profile" on page 918](#).
- Edit an antispam profile. See ["Edit an Antispam Profile" on page 920](#).

- Delete an antispam profile. See ["Delete an Antispam Profile" on page 921](#).
- Clone an antispam profile. See ["Clone an Antispam Profile" on page 919](#).
- View the details of an antispam profile—To do this, select the antispam profile for which you want to view the details and follow the available options:
 - Click **More** and select **Detailed View**.
 - Right-click on the selected antispam profile and select **Detailed View**.
 - Mouse over to the left of the selected antispam profile and click **Detailed View**.
- Advanced search for antispam profiles. To do this, use the search text box present above the table grid. The search includes the logical operators as part of the filter string. In the search text box, when you hover over the icon, it displays an example filter condition. When you start entering the search string, the icon indicates whether the filter string is valid or not.

For an advanced search:

1. Enter the search string in the text box.

Based on your input, a list of items from the filter context menu appears.

2. Select a value from the list and then select a valid operator based on which you want to perform the advanced search operation.

NOTE: Press Spacebar to add an AND operator or OR operator to the search string. Press backspace at any point of time while entering a search criteria, only one character is deleted.

3. Press Enter to display the search results in the grid.
- Filter the antispam profiles based on select criteria. To do this, select the filter icon at the upper-right corner of the antispam profiles table. The columns in the grid change to accept filter options. Type the filter options; the table displays only the data that fits the filtering criteria.
 - Show or hide columns in the antispam profiles table. To do this, click the Show Hide Columns icon in the upper-right corner of the antispam profiles table and select the options you want to view or deselect the options you want to hide on the page.

Field Descriptions

[Table 255 on page 918](#) describes the fields on the Antispam Profiles page.

Table 255: Fields on the Antispam Profiles Page

Field	Description
Name	Name of the antispam profile.
Sophos Blocklist	Indicates whether Sophos Blocklist is enabled (server-based filtering) or disabled (local filtering).
Action	Action to be taken when spam is detected.
Custom Tag	Custom-defined tag that identifies an e-mail message as spam.

RELATED DOCUMENTATION
[Add an Antispam Profile | 918](#)
[Clone an Antispam Profile | 919](#)
[Edit an Antispam Profile | 920](#)
[Delete an Antispam Profile | 921](#)

Add an Antispam Profile

You are here: **Security Services** > **Content Security** > **Antispam Profiles**.

To add an antispam profile:

1. Click **+** on the upper-right corner of the Antispam Profiles page.
The Create Antispam Profiles page appears.
2. Complete the configuration according to the guidelines provided in [Table 256 on page 919](#).
3. Click **OK** to save the changes. If you want to discard your changes, click **Cancel**.

Table 256: Fields on the Create Antispam Profiles Page

Field	Action
General Information	
Name	Enter a unique name for your antispam profile.
Sophos Blocklist	Enable this option to use server-based spam filtering. By default, this option is enabled. NOTE: If you disable this option, then local spam filtering is used.
Action	
Default Action	Select an option to be taken when a spam message is detected. The options available are: • Tag E-Mail Subject Line—Adds a custom string at the beginning of the subject of the e-mail. • Tag SMTP Header—Adds a custom string to the e-mail header. • Block E-Mail—Blocks the spam e-mail. • None—No action taken.
Custom Tag	Enter a custom string for identifying a message as spam. By default, the device uses ***SPAM*** .

RELATED DOCUMENTATION

[About the Antispam Profiles Page | 916](#)

[Clone an Antispam Profile | 919](#)

[Edit an Antispam Profile | 920](#)

[Delete an Antispam Profile | 921](#)

Clone an Antispam Profile

You are here: **Security Services > Content Security > Antispam Profiles.**

To clone an antispam profile:

1. Select an antispam profile that you want to clone and select **Clone** from the More link.

NOTE: Alternatively, you can right-click on the selected antispam profile and select **Clone**.

The Clone Antispam Profiles page appears with editable fields. For more information on the fields, see ["Add an Antispam Profile" on page 918](#).

2. Click **OK** to save the changes.

A cloned antispam profile is created for the selected antispam profile. By default, the name of the cloned antispam profile is in the format: *<Antispam profile name>_clone*.

RELATED DOCUMENTATION

[About the Antispam Profiles Page | 916](#)

[Add an Antispam Profile | 918](#)

[Edit an Antispam Profile | 920](#)

[Delete an Antispam Profile | 921](#)

Edit an Antispam Profile

You are here: **Security Services > Content Security > Antispam Profiles**.

To edit an antispam profile:

1. Select an existing antispam profile that you want to edit on the Antispam Profiles page.
2. Click the pencil icon available on the upper-right corner of the page.

The Edit Antispam Profiles page appears. You can modify any previous changes done to Sophos Blocklist, Default Action, and Custom Tag for the selected antispam profile. For more information on the options, see ["Add an Antispam Profile" on page 918](#).

3. Click **OK** to save the changes.

RELATED DOCUMENTATION

[About the Antispam Profiles Page | 916](#)

[Add an Antispam Profile | 918](#)

[Clone an Antispam Profile | 919](#)[Delete an Antispam Profile | 921](#)

Delete an Antispam Profile

You are here: **Security Services** > **Content Security** > **Antispam Profiles**.

To delete antispam profile(s):

1. Select one or more antispam profiles that you want to delete on the Antispam Profiles page.
2. Click the delete icon available on the upper-right corner of the page.
3. Click **Yes** to delete or click **No** to retain the profile.

RELATED DOCUMENTATION

[About the Antispam Profiles Page | 916](#)[Add an Antispam Profile | 918](#)[Clone an Antispam Profile | 919](#)[Edit an Antispam Profile | 920](#)

Content Security Content Filtering Profiles

IN THIS CHAPTER

- [About the Content Filtering Profiles Page | 922](#)
- [Add a Content Filtering Profile | 924](#)
- [Clone a Content Filtering Profile | 928](#)
- [Edit a Content Filtering Profile | 929](#)
- [Delete a Content Filtering Profile | 930](#)

About the Content Filtering Profiles Page

IN THIS SECTION

- [Tasks You Can Perform | 922](#)
- [Field Descriptions | 923](#)

You are here: **Security Services** > **Content Security** > **Content Filtering Profiles**.

Use this page to configure content filtering.

Tasks You Can Perform

You can perform the following tasks from this page:

- Add a content filtering profile. See ["Add a Content Filtering Profile" on page 924](#).
- Clone a content filtering profile. See ["Clone a Content Filtering Profile" on page 928](#)
- Edit a content filtering profile. See ["Edit a Content Filtering Profile" on page 929](#).

- Delete a content filtering profile. See ["Delete a Content Filtering Profile" on page 930](#).
- View the details of a content filtering profile—To do this, select the content filtering profile for which you want to view the details and follow the available options:
 - Click **More** and select **Detailed View**.
 - Right-click on the selected content filtering profile and select **Detailed View**.
 - Mouse over to the left of the selected content filtering profile and click **Detailed View**.
- Advanced search for content filtering profiles. To do this, use the search text box present above the table grid. The search includes the logical operators as part of the filter string. In the search text box, when you hover over the icon, it displays an example filter condition. When you start entering the search string, the icon indicates whether the filter string is valid or not.

For an advanced search:

1. Enter the search string in the text box.

Based on your input, a list of items from the filter context menu appears.

2. Select a value from the list and then select a valid operator based on which you want to perform the advanced search operation.

NOTE: Press Spacebar to add an AND operator or OR operator to the search string. Press backspace at any point of time while entering a search criteria, only one character is deleted.

3. Press Enter to display the search results in the grid.
- Filter the content filtering profiles based on select criteria. To do this, select the filter icon at the upper-right corner of the content filtering profiles table. The columns in the grid change to accept filter options. Type the filter options; the table displays only the data that fits the filtering criteria.
 - Show or hide columns in the content filtering profiles table. To do this, click the Show Hide Columns icon in the upper-right corner of the content filtering profiles table and select the options you want to view or deselect the options you want to hide on the page.

Field Descriptions

[Table 257 on page 924](#) describes the fields on the Content Filtering Profiles page.

Table 257: Fields on the Content Filtering Profiles Page

Field	Description
Name	Displays the unique name of the content filtering profile.
Permit Command List	Displays the permitted protocol command name.
Block Command List	Displays the blocked protocol command.
Notification Type	Displays the notification type opted.

RELATED DOCUMENTATION
[Add a Content Filtering Profile | 924](#)
[Edit a Content Filtering Profile | 929](#)
[Delete a Content Filtering Profile | 930](#)

Add a Content Filtering Profile

You are here: **Security Services > Content Security > Content Filtering Profiles.**

To add a content filtering profile:

1. Click **+** on the upper-right corner of the Content Filtering Profiles page.
The Create Content Filtering page appears.
2. Complete the configuration according to the guidelines provided in [Table 258 on page 925](#).
3. Click **Finish**.
The Summary page is displayed with the configurations you have made.
4. Review the settings, and if you need to make any modifications, click the **Edit** link or the **Back** button.
5. Click **OK** to save the changes. If you want to discard your changes, click **Cancel**.
A new content filter profile is created.

Table 258: Fields on the Create Content Filtering Profiles Page

Field	Action
General - General Information	
Name	Enter a unique name for the content filtering profile.
Notification Options	
Notification Mail Sender	Select the Notify Mail Sender check box to send an e-mail when a virus is detected and a content block is triggered.
Notification Type	Select the None , Protocol Only , or Message options from the list to specify the type of notification sent when a content block is triggered.
Custom Notification Message	Specifies the customized message text for the content-block notification. Enter the text for this custom notification message (if you are using one).
Protocol Commands	

Table 258: Fields on the Create Content Filtering Profiles Page *(Continued)*

Field	Action
Command Block List	Select the protocol command name to be blocked from the list. By blocking certain commands, traffic can be controlled on the protocol command level. To create a protocol command inline and add it to the command block list: - Click Create Protocol Command. The Add Protocol Command List window appears. - Enter the following details: - Name—Enter a unique name for the protocol command list. You can use a string beginning with an alphabet or underscore and consisting of alphanumeric characters, special characters such as dashes and underscores. The maximum length is 29 characters. - Values—Click + and enter a value in the value list and click the tick mark. To delete any value list, select the value and click on the delete icon. - Click OK. A new protocol command is created and added to the command block list.
Command Permit List	Select the protocol command name to be permitted from the list. Click Create Protocol Command to create a protocol command inline and add it to the permitted list.
Content Types	

Table 258: Fields on the Create Content Filtering Profiles Page *(Continued)*

Field	Action
Block Content Type	Select the content type you want to block. The available options are: • ActiveX • Windows executables (.exe) • HTTP Cookie • Java Applet • ZIP files
File Extensions	
Extension Block List	Select an extension from the list that you want to block. To create a file extension inline and add it to the extension block list: 1. Click Create File Extensions. The Add File Extension List window appears. 2. Enter the following details: • Name—Enter a unique name for the file extension list. You can use a string beginning with an alphabet or underscore and consisting of alphanumeric characters, special characters such as dashes and underscores. The maximum length is 29 characters. • Values—Select one or more values in the Available Column and move it to the Selected Column using the right arrow. 3. Click OK. A new file extension is created and added to the extension block list.
MIME Types	

Table 258: Fields on the Create Content Filtering Profiles Page *(Continued)*

Field	Action
MIME Block List	Select the MIME type from the list. To create a MIME list inline and add it to the MIME block list: - Click Create MIME List. The Add MIME Pattern List window appears. - Enter the following details: - Name—Enter an unique name for the MIME pattern list. You can use a string beginning with an alphabet or underscore and consisting of alphanumeric characters, special characters such as dashes and underscores. The maximum length is 40 characters. - Values—Click + and enter a value in the value list and click the tick mark. To delete any value list, select the value and click on the delete icon. - Click OK. A new MIME list is created and added to the MIME block list.
MIME Permit List	Select the MIME type from the list. Click Create MIME List to create a MIME list inline and add it to the MIME permit list.

RELATED DOCUMENTATION

[About the Content Filtering Profiles Page | 922](#)

[Edit a Content Filtering Profile | 929](#)

[Delete a Content Filtering Profile | 930](#)

Clone a Content Filtering Profile

You are here: **Security Services > Content Security > Content Filtering Profiles.**

To clone a content filtering profile:

1. Select a content filtering profile that you want to clone and select **Clone** from the More link.

NOTE: Alternatively, you can right-click on the selected content filtering profile and select **Clone**.

The Clone Content Filtering Profiles page appears with editable fields. For more information on the fields, see ["Add a Content Filtering Profile" on page 924](#).

2. Click **OK** to save the changes.

A cloned content filtering profile is created for the selected content filtering profile. By default, the name of the cloned content filtering profile is in the format: *<Content filtering profile name>_clone*.

RELATED DOCUMENTATION

[About the Content Filtering Profiles Page | 922](#)

[Edit a Content Filtering Profile | 929](#)

[Delete a Content Filtering Profile | 930](#)

Edit a Content Filtering Profile

You are here: **Security Services > Content Security > Content Filtering Profiles**.

To edit a content filtering profile:

1. Select an existing content filtering profile that you want to edit on the Content Filtering profiles page.
2. Click the pencil icon available on the upper-right corner of the page.

The Edit Content Filtering Profiles page appears with editable fields. For more information on the options, see ["Add a Content Filtering Profile" on page 924](#).

NOTE: Alternatively, you can right-click on the selected content filtering profile and select **Edit Profile**.

3. Click **OK** to save the changes.

RELATED DOCUMENTATION

[About the Content Filtering Profiles Page | 922](#)

[Add a Content Filtering Profile | 924](#)

[Delete a Content Filtering Profile | 930](#)

Delete a Content Filtering Profile

You are here: **Security Services** > **Content Security** > **Content Filtering Profiles**.

To delete a content filtering profile:

1. Select a content filtering profile that you want to delete on the Content Filtering Profiles page.
2. Click the delete icon available on the upper-right corner of the page.

NOTE: Alternatively, you can right-click on the selected content filtering profile and select **Delete Profile**.

3. Click **Yes** to delete or click **No** to retain the profile.

RELATED DOCUMENTATION

[About the Content Filtering Profiles Page | 922](#)

[Add a Content Filtering Profile | 924](#)

[Edit a Content Filtering Profile | 929](#)

Content Security Custom Objects

IN THIS CHAPTER

- [About the Custom Objects Page | 931](#)
- [Add a MIME Pattern List | 934](#)
- [Add a File Extension List | 936](#)
- [Add a Protocol Command List | 936](#)
- [Add a URL Pattern List | 937](#)
- [Add a URL Category List | 938](#)
- [Add a Custom Message List | 940](#)
- [Clone Custom Objects | 941](#)
- [Edit Custom Objects | 941](#)
- [Delete Custom Objects | 942](#)

About the Custom Objects Page

IN THIS SECTION

- [Tasks You Can Perform | 932](#)
- [Field Descriptions | 933](#)

You are here: **Security Services** > **Content Security** > **Custom Objects**.

Use the Custom Objects page to define your own objects for URL filtering, antivirus filtering, and content filtering.

Tasks You Can Perform

You can perform the following tasks from this page:

- Add a MIME pattern list. See ["Add a MIME Pattern List" on page 934](#).
- Add a file extension list. See ["Add a File Extension List" on page 936](#).
- Add a protocol command list. See ["Add a Protocol Command List" on page 936](#).
- Add an URL pattern list. See ["Add a URL Pattern List" on page 937](#).
- Add an URL category list. See ["Add a URL Category List" on page 938](#).
- Add a custom message list. See ["Add a Custom Message List" on page 940](#).
- Edit custom objects. See ["Edit Custom Objects" on page 941](#).
- Delete custom objects. See ["Delete Custom Objects" on page 942](#).
- Clone custom objects. See ["Clone Custom Objects" on page 941](#).
- View the details of custom objects—To do this, select the custom object for which you want to view the details and follow the available options:
 - Click **More** and select **Detailed View**.
 - Right-click on the selected custom object and select **Detailed View**.
 - Mouse over to the left of the selected custom object and click **Detailed View**.
- Filter the custom objects based on select criteria. To do this, select the filter icon at the upper-right corner of the custom objects table. The columns in the grid change to accept filter options. Type the filter options; the table displays only the data that fits the filtering criteria.
- Show or hide columns in the custom objects table. To do this, click the Show Hide Columns icon in the upper-right corner of the custom objects table and select the options you want to view or deselect the options you want to hide on the page.
- Advance search for custom objects. To do this, use the search text box present above the table grid. The search includes the logical operators as part of the filter string. In the search text box, when you hover over the icon, it displays an example filter condition. When you start entering the search string, the icon indicates whether the filter string is valid or not.

For an advanced search:

1. Enter the search string in the text box.

Based on your input, a list of items from the filter context menu appears.

- 2. Select a value from the list and then select a valid operator based on which you want to perform the advanced search operation.

NOTE: Press Spacebar to add an AND operator or OR operator to the search string. Press backspace at any point of time while entering a search criteria, only one character is deleted.

- 3. Press Enter to display the search results in the grid.

Field Descriptions

Table 259 on page 933 describes the fields on the Custom Objects page.

Table 259: Fields on the Custom Objects Page

Field	Description
MIME Pattern List	
Name	Displays the user-defined name or a predefined MIME pattern name.
Value	Displays the user-defined value or a predefined MIME pattern value.
Filename Extension List	
Name	Displays the user-defined name or a predefined file extension name.
Value	Displays the user-defined value or a predefined file extension value.
Protocol Command List	
Name	Displays only the user-defined protocol command names.
Value	Displays only the user-defined protocol command values.
URL Pattern List	

Table 259: Fields on the Custom Objects Page *(Continued)*

Field	Description
Name	Displays only the user-defined URL pattern names.
Value	Displays only the user-defined URL pattern values.

URL Category List

Name	Displays only the predefined URL categories.
Value	Displays only the predefined URL categories from the SurfControl server. You can also configure URLs. The URLs configured in the URL pattern list are displayed here.

Custom Message List

The Custom Message List displays the custom messages that you have created. It also displays the type of action taken when you create block message or URL, or quarantine message or URL for each category.

Name	Displays the name of the custom message that you have created.
Type	Displays the type of custom message. The options are Redirect-URL or User Message.
Content	Displays the content of the custom message. It is either a user message or a URL to which you will be redirected.

RELATED DOCUMENTATION

[Add a MIME Pattern List](#) | 934

Add a MIME Pattern List

You are here: **Security Services > Content Security > Custom Objects.**

To add a MIME pattern list:

1. Click the **MIME Pattern List** tab.
2. Click **+** on the upper-right corner of the MIME Pattern List tab.
The Add MIME Pattern List page appears.
3. Complete the configuration according to the guidelines provided in [Table 260 on page 935](#).
4. Click **OK** to save the changes. If you want to discard your changes, click **Cancel**.

Table 260: Fields on the Add MIME Pattern List Page

Field	Action
Name	Enter a name for the MIME pattern list. You can use a string beginning with a letter or underscore and consisting of alphanumeric characters, special characters such as dashes and underscores. The maximum length is 40 characters.
Value	To add a MIME pattern value: 1. Click +. 2. Enter the MIME pattern value in the Value List. NOTE: Value must be two strings separated by slash(/): • The first string beginning with a letter or number and consisting of alphanumeric characters, underscores and dashes. Dashes cannot be shown continuously in the string. • The second string can be null or begin with a letter or number and consisting of alphanumeric characters, underscores, dashes, dots and pluses. Dashes, dots, and pluses cannot be shown continuously in the string. 3. Click the tick mark. If you want to delete any MIME pattern values, select the value and click the delete icon.

RELATED DOCUMENTATION

Clone Custom Objects 941
Edit Custom Objects 941
Delete Custom Objects 942

Add a File Extension List

You are here: **Security Services > Content Security > Custom Objects.**

To add a file extension list:

1. Click the **File Extension List** tab.
2. Click **+** on the upper-right corner of the File Extension List tab.
The Add File Extension List page appears.
3. Complete the configuration according to the guidelines provided in [Table 261 on page 936](#).
4. Click **OK** to save the changes. If you want to discard your changes, click **Cancel**.

Table 261: Fields on the Add File Extension List Page

Field	Action
Name	Enter a name for the file extension list. You can use a string beginning with a letter or underscore and consisting of alphanumeric characters, special characters such as dashes and underscores. The maximum length is 29 characters.
Value	Select values from the list in the Available column to associate it with the file extension name and then click the right arrow to move it to the Selected column.

RELATED DOCUMENTATION

[Clone Custom Objects | 941](#)

[Edit Custom Objects | 941](#)

[Delete Custom Objects | 942](#)

Add a Protocol Command List

You are here: **Security Services > Content Security > Custom Objects.**

To add a protocol command list:

1. Click the **Protocol Command List** tab.
2. Click **+** on the upper-right corner of the Protocol Command List tab.

The Add Protocol Command List page appears.

- 3. Complete the configuration according to the guidelines provided in [Table 262 on page 937](#).
- 4. Click **OK** to save the changes. If you want to discard your changes, click **Cancel**.

Table 262: Fields on the Add Protocol Command List Page

Field	Action
Name	Enter a name for the protocol command list. You can use a string beginning with a letter or underscore and consisting of alphanumeric characters, special characters such as dashes and underscores. The maximum length is 29 characters.
Value	To add a protocol command value: 1. Click +. 2. Enter the protocol command value in the Value List. 3. Click the tick mark. If you want to delete any protocol command values, select the value and click the delete icon.

RELATED DOCUMENTATION

Clone Custom Objects 941
Edit Custom Objects 941
Delete Custom Objects 942

Add a URL Pattern List

You are here: **Security Services > Content Security > Custom Objects**.

To add a URL pattern list:

1. Click the **URL Pattern List** tab.
2. Click + on the upper-right corner of the URL Pattern List tab.
The Add URL Pattern List page appears.
3. Complete the configuration according to the guidelines provided in [Table 263 on page 938](#).

4. Click **OK** to save the changes. If you want to discard your changes, click **Cancel**.

Table 263: Fields on the Add URL Pattern List Page

Field	Action
Name	Enter a name for the URL pattern list. You can use a string beginning with a letter or underscore and consisting of alphanumeric characters, special characters such as dashes and underscores. The maximum length is 29 characters. NOTE: Multiple URLs are supported in a pattern.
Value	To add a URL pattern value: 1. Click +. 2. Enter the URL pattern value in the Value List. 3. Click the tick mark. If you want to delete any URL pattern values, select the value and click the delete icon.

RELATED DOCUMENTATION

[Clone Custom Objects | 941](#)

[Edit Custom Objects | 941](#)

[Delete Custom Objects | 942](#)

Add a URL Category List

You are here: **Security Services > Content Security > Custom Objects**.

To add a URL category list:

1. Click the **URL Category List** tab.
2. Click + on the upper-right corner of the URL Category List tab.
The Add URL Category List page appears.
3. Complete the configuration according to the guidelines provided in [Table 264 on page 939](#).
4. Click **OK** to save the changes. If you want to discard your changes, click **Cancel**.

Table 264 on page 939 provides guidelines on using the fields on the Add URL Category List page.

Table 264: Fields on the Add URL Category List Page

Field	Action
Name	Enter a name for the URL category list. You can use a string beginning with a letter or underscore and consisting of alphanumeric characters, special characters such as dashes and underscores. The maximum length is 59 characters.
Value	Select values from the list in the Available column to associate it with the URL category list name and then click the right arrow to move it to the Selected column. To add a new URL pattern inline: 1. Click Create New URL Pattern. The Add URL Pattern List page appears. 2. Enter a URL pattern name. You can use a string beginning with a letter or underscore and consisting of alphanumeric characters, special characters such as dashes and underscores. The maximum length is 29 characters. 3. Click + to add a URL pattern value. 4. Enter the URL pattern value in the Value List. 5. Click the tick mark. 6. Optional. If you want to delete any URL pattern values, select the value and click the delete icon. 7. Click OK to save the changes.

RELATED DOCUMENTATION

Clone Custom Objects 941
Edit Custom Objects 941
Delete Custom Objects 942

Add a Custom Message List

You are here: **Security Services** > **Content Security** > **Custom Objects**.

To add a custom message list:

1. Click the **Custom Message List** tab.
2. Click **+** on the upper-right corner of the Custom Message List tab.
The Add Custom Message List page appears.
3. Complete the configuration according to the guidelines provided in [Table 265 on page 940](#).
4. Click **OK** to save the changes. If you want to discard your changes, click **Cancel**.

Table 265: Fields on the Add Custom Message List Page

Field	Action
Name	Enter a name for the custom message list. You can use a string beginning with a letter or underscore and consisting of alphanumeric characters, special characters such as dashes and underscores. The maximum length is 59 characters.
Type	Select an option: • Redirect URL—Specifies custom redirect URL server. • User Message—Specifies that website access has been blocked by an organization's access policy.
Content	Enter content of the custom message; maximum length is 1024 characters. It is either a user message or a URL to which you will be redirected.

RELATED DOCUMENTATION

[Clone Custom Objects | 941](#)

[Edit Custom Objects | 941](#)

[Delete Custom Objects | 942](#)

Clone Custom Objects

You are here: **Security Services** > **Content Security** > **Custom Objects**.

You can clone all of the following custom objects:

- MIME pattern list
- File extension list
- Protocol command list
- URL pattern list
- URL category list
- Custom message list

To clone a custom object:

1. Right-click any of the custom objects and select **Clone**. You can also select **Clone** from the More link.
The clone page for the selected custom object appears with editable fields.
2. Make the required changes in the editable fields.
3. Click **OK** to save the changes.

A cloned custom object is created for the selected custom objects. By default, the name of the cloned custom objects is in the format: *<custom objects name>_clone*.

RELATED DOCUMENTATION

[Add a MIME Pattern List | 934](#)

[Add a File Extension List | 936](#)

[Add a Protocol Command List | 936](#)

[Add a URL Pattern List | 937](#)

[Add a URL Category List | 938](#)

[Add a Custom Message List | 940](#)

Edit Custom Objects

You are here: **Security Services** > **Content Security** > **Custom Objects**.

You can edit all of the following custom objects:

- MIME pattern list
- File extension list
- Protocol command list
- URL pattern list
- URL category list
- Custom message list

To edit a custom objects:

1. Select any of the existing custom objects that you want to edit on the Custom Objects page.
2. Click the pencil icon available on the upper-right corner of the page.
The edit page for the selected custom object appears with editable fields. You can modify the parameters of the custom object as required.
3. Click **OK** to save the changes. If you want to discard your changes, click **Cancel**.

RELATED DOCUMENTATION

[Add a MIME Pattern List | 934](#)

[Add a File Extension List | 936](#)

[Add a Protocol Command List | 936](#)

[Add a URL Pattern List | 937](#)

[Add a URL Category List | 938](#)

[Add a Custom Message List | 940](#)

Delete Custom Objects

You are here: **Security Services > Content Security > Custom Objects**.

You can delete all of the following custom objects:

- MIME pattern list
- File extension list
- Protocol command list

- URL pattern list
- URL category list
- Custom message list

To delete a custom object:

1. Select any of the existing custom objects that you want to delete from the Custom Objects page.
2. Click the delete icon available on the upper-right corner of the page.
3. Click **Yes** to delete or click **No** to retain the selected custom object.

RELATED DOCUMENTATION

[About the Custom Objects Page | 931](#)

[Clone Custom Objects | 941](#)

[Edit Custom Objects | 941](#)

Content Security Policies

IN THIS CHAPTER

- [About the Content Security Policies Page | 944](#)
- [Create a Content Security Policy | 946](#)
- [Clone a Content Security Policy | 949](#)
- [Edit a Content Security Policy | 950](#)
- [Delete a Content Security Policy | 950](#)

About the Content Security Policies Page

IN THIS SECTION

- [Tasks You Can Perform | 944](#)
- [Field Descriptions | 945](#)

You are here: **Security Services** > **Content Security** > **Content Security Policies**.

Use this page to configure Content Security Policies.

Tasks You Can Perform

You can perform the following tasks from this page:

- Create a Content Security policy. See ["Create a Content Security Policy" on page 946](#).
- Clone a Content Security policy. See ["Clone a Content Security Policy" on page 949](#).
- Edit a Content Security policy. See ["Edit a Content Security Policy" on page 950](#).

- Delete a Content Security policy. See ["Delete a Content Security Policy" on page 950](#).
- View the details of a Content Security policy—To do this, select the Content Security policy for which you want to view the details and select any of the following options:
 - Click **More** and select **Detailed View**.
 - Right-click on the selected Content Security policy and select **Detailed View**.
 - Mouse over to the left of the selected Content Security policy and click **Detailed View**.
- Advanced search for Content Security policy. To do this, use the search text box present above the table grid. The search includes the logical operators as part of the filter string. In the search text box, when you hover over the icon, it displays an example filter condition. When you start entering the search string, the icon indicates whether the filter string is valid or not.

For an advanced search:

1. Enter the search string in the text box.

Based on your input, a list of items from the filter context menu appears.

2. Select a value from the list and then select a valid operator based on which you want to perform the advanced search operation.

NOTE: Press Spacebar to add an AND operator or OR operator to the search string. Press backspace at any point of time while entering a search criteria, only one character is deleted.

3. Press Enter to display the search results in the grid.
- Show or hide columns in the Content Security Policies table. To do this, click the Show Hide Columns icon in the upper-right corner of the Content Security policies table and select the options you want to view or deselect the options you want to hide on the page.

Field Descriptions

[Table 266 on page 946](#) describes the fields on the Content Security Policies page.

Table 266: Fields on the Content Security Policies Page

Field	Description
Name	Displays the Content Security policy name.
Antivirus	Displays the antivirus profile.
Web Filtering	Displays the Web filtering profile.
Antispam	Displays the antispam profile.
Content Filtering	Displays the content filtering profiles.

RELATED DOCUMENTATION

| [Create a Content Security Policy](#) | 946

Create a Content Security Policy

You are here: **Security Services** > **Content Security** > **Content Security Policies**.

To add a Content Security policy:

1. Click **+** on the upper-right corner of the Content Security Policies page.
The Create a Content Security Policy page appears.
2. Complete the configuration according to the guidelines provided in [Table 267 on page 947](#).
3. Click **Finish**.
The Summary page is displayed with the configurations you have made.
4. Review the settings, and if you need to make any modifications, click the **Edit** link or the **Back** button.
5. Click **OK** to save the changes. If you want to discard your changes, click **Cancel**.
A Content Security policy is created.

Table 267: Fields on the Create a Content Security Policy Page

Field	Action
General—General Information	
Name	Enter a Content Security policy name.
Antivirus—Antivirus Profiles by Traffic Protocol	
Apply to all protocols	Select the check box to apply the default profile to all protocols such as HTTP, FTP, IMAP, SMTP, and POP3. If you do not select the check box, you can apply different profiles to different protocols.
HTTP	Select an option from the list to specify the Content Security policy for the HTTP protocol to be scanned.
FTP Upload	Select an option from the list to specify the Content Security policy for the FTP protocol to be scanned.
FTP Download	Select an option from the list to specify the Content Security policy for the FTP protocol to be scanned.
IMAP	Select an option from the list to specify the Content Security policy for the IMAP protocol to be scanned.
SMTP	Select an option from the list to specify the Content Security policy for the SMTP protocol to be scanned.
POP3	Select an option from the list to specify the Content Security policy for the POP3 protocol to be scanned.
Create Another Profile	Click Create Another Profile to create an antivirus profile inline. For more information on the fields, see "Add an Antivirus Profile" on page 857 .
Web Filterings—Web Filtering Profiles by Traffic Protocol	

Table 267: Fields on the Create a Content Security Policy Page *(Continued)*

Field	Action
HTTP	Select an option from the list to specify the Content Security policy for the HTTP protocol to be scanned.
Create Another Profile	Click Create Another Profile to create Web filtering profile inline. For more information on the fields, see "Add a Web Filtering Profile" on page 889 .
Antispam—Antispam Profiles by Traffic Protocol	
SMTP profile	Select an option from the list to specify the Content Security policy for the SMTP protocol to be scanned.
Create Another Profile	Click Create Another Profile to create antispam profile inline. For more information on the fields, see "Add an Antispam Profile" on page 918 .
Content Filtering—Content Filtering Profiles by Traffic Protocol	
Apply to all protocols	Select the check box to apply the default profile to all protocols such as HTTP, FTP, IMAP, SMTP, and POP3. If you do not select the check box, you can apply different profiles to different protocols.
HTTP	Select an option from the list to specify the Content Security policy for the HTTP protocol to be scanned.
FTP Upload	Select an option from the list to specify the Content Security policy for the FTP protocol to be scanned.
FTP Download	Select an option from the list to specify the Content Security policy for the FTP protocol to be scanned.
IMAP	Select an option from the list to specify the Content Security policy for the IMAP protocol to be scanned.

Table 267: Fields on the Create a Content Security Policy Page *(Continued)*

Field	Action
SMTP	Select an option from the list to specify the Content Security policy for the SMTP protocol to be scanned.
POP3	Select an option from the list to specify the Content Security policy for the POP3 protocol to be scanned.
Create Another Profile	Click Create Another Profile to create content filtering Profile inline. For more information on the fields, see "Add a Content Filtering Profile" on page 924 .

RELATED DOCUMENTATION

[About the Content Security Policies Page | 944](#)

[Clone a Content Security Policy | 949](#)

[Edit a Content Security Policy | 950](#)

[Delete a Content Security Policy | 950](#)

Clone a Content Security Policy

You are here: **Security Services > Content Security > Content Security Policies**.

To clone a Content Security policy:

1. Select a Content Security policy that you want to clone and select **Clone** from the More link.

NOTE: Alternatively, you can right-click on the selected Content Security policy and select **Clone**.

The Clone Content Security Policies page appears with editable fields. For more information on the fields, see ["Create a Content Security Policy" on page 946](#).

2. Click **OK** to save the changes.

A cloned Content Security policy is created for the selected Content Security policy. By default, the name of the cloned Content Security policy is in the format: **<Content Security policy name>_clone**.

RELATED DOCUMENTATION

[About the Content Security Policies Page | 944](#)

[Edit a Content Security Policy | 950](#)

[Delete a Content Security Policy | 950](#)

Edit a Content Security Policy

You are here: **Security Services > Content Security > Content Security Policies**.

To edit a Content Security policy:

1. Select an existing Content Security policy that you want to edit on the Content Security Policies page.
2. Click the pencil icon available on the upper-right corner of the page.

The Edit Content Security Policies page appears with editable fields. For more information on the options, see "[Create a Content Security Policy](#)" on page 946.

NOTE: Alternatively, you can right-click on the selected Content Security policy and select **Edit Policy**.

3. Click **OK** to save the changes.

RELATED DOCUMENTATION

[About the Content Security Policies Page | 944](#)

[Delete a Content Security Policy | 950](#)

Delete a Content Security Policy

You are here: **Security Services > Content Security > Content Security Policies**.

To delete a Content Security policy:

1. Select a Content Security policy that you want to delete on the Content Security Policies page.
2. Click the delete icon available on the upper-right corner of the page.

NOTE: Alternatively, you can right-click on the selected Content Security policy and select **Delete Policy**.

3. Click **Yes** to delete or click **No** to retain the profile.

RELATED DOCUMENTATION

[About the Content Security Policies Page | 944](#)

[Clone a Content Security Policy | 949](#)

[Create a Content Security Policy | 946](#)

IPS Policies

IN THIS CHAPTER

- [About the IPS Policies Page | 952](#)
- [Import IPS Predefined Policies | 954](#)
- [Add an IPS Policy | 955](#)
- [Clone an IPS Policy | 955](#)
- [Edit an IPS Policy | 956](#)
- [Delete an IPS Policy | 957](#)
- [Add Rules to an IPS Policy | 957](#)
- [Edit an IPS Policy Rule | 967](#)
- [Delete an IPS Policy Rule | 968](#)

About the IPS Policies Page

IN THIS SECTION

- [Tasks You Can Perform | 953](#)
- [Field Descriptions | 953](#)

You are here: **Security Services > IPS > Policies.**

An intrusion prevention system (IPS) policy defines how your device handles the network traffic. It allows you to enforce various attack detection and prevention techniques on traffic traversing your network. You can define policy rules to match a section of traffic based on a zone, network, and application, and then take active or passive preventive actions on that traffic.

Tasks You Can Perform

You can perform the following tasks from this page:

- Import predefined policies. See ["Import IPS Predefined Policies" on page 954](#).
- Set an IPS policy as default policy. To do this, select an existing IPS policy and click **More > Set Default**.
- Create an IPS policy. See ["Add an IPS Policy" on page 955](#).

NOTE: IPS policies that are created by root users in root-logical-system are not displayed in security profile advanced settings if you have logged in as a logical system user.

- Edit an IPS policy. See ["Edit an IPS Policy" on page 956](#).
- Delete an IPS policy. See ["Delete an IPS Policy" on page 957](#).
- Clone an IPS policy. See ["Clone an IPS Policy" on page 955](#).
- Add rules to the IPS policy. See ["Add Rules to an IPS Policy" on page 957](#).
- Edit an IPS policy rule. See ["Edit an IPS Policy Rule" on page 967](#).
- Delete an IPS policy rule. See ["Delete an IPS Policy Rule" on page 968](#).
- Search a policy. To do this:
 1. Click the search icon in the upper-right corner of the IPS Policies table.
 2. Enter the policy name that you want to find and click the search icon.

Based on your input, a list of matching policies appears.
- Show or hide columns in the IPS Policies table. To do this, click the Show Hide Columns icon in the upper-right corner of the IPS Policies table and select the options you want to view or deselect the options you want to hide on the page.

Field Descriptions

[Table 268 on page 954](#) describes the fields on the IPS Policies page.

Table 268: Fields on the IPS Policies Page

Field	Description
Policy Name	Displays the IPS policy name.
Rules	Displays the number of rules that are configured for the policy or allows you to add new rules to the policy.
Predefined or Custom	Displays if the IPS policy is a predefined or a custom policy. NOTE: This option is not available for logical systems and tenants.

RELATED DOCUMENTATION

[Add an IPS Policy | 955](#)

[Add Rules to an IPS Policy | 957](#)

[Edit an IPS Policy | 956](#)

[Delete an IPS Policy | 957](#)

[Clone an IPS Policy | 955](#)

Import IPS Predefined Policies

The predefined policies are templates which can be used as a guideline. Each template is set of rules of a specific rulebase type that you can clone and then update to meet your needs. Use this page to import the IPS predefined policies.

NOTE: This option is not available for logical systems and tenants.

To import the predefined policy templates:

1. Click **Import Predefined Policies** at the upper-right corner of the IPS Policies page.
The Import Predefined Policies page appears.
2. Select the predefined policy templates from the Available column that you want to import.
3. Click on the right arrow to move the selected predefined policy templates to the Selected column.

4. Click **OK**.

The imported predefined policy template are displayed in the IPS Policies page.

RELATED DOCUMENTATION

[About the IPS Policies Page | 952](#)

[Add an IPS Policy | 955](#)

[Add Rules to an IPS Policy | 957](#)

Add an IPS Policy

You are here: **Security Services > IPS > Policies**.

To add an IPS policy:

1. Click **+** on the upper-right corner of the IPS Policies page.
The Create IPS Policy page appears.
2. Enter a name for the IPS policy.
Name of the IPS policy must be a unique string of alphanumeric and special characters, including colons, periods, hyphens, and underscores; 250-character maximum.
3. Click **OK** to save the changes. If you want to discard your changes, click **Cancel**.
The IPS policy is displayed on the IPS Policies page.

RELATED DOCUMENTATION

[About the IPS Policies Page | 952](#)

[Add Rules to an IPS Policy | 957](#)

[Edit an IPS Policy | 956](#)

[Delete an IPS Policy | 957](#)

[Clone an IPS Policy | 955](#)

Clone an IPS Policy

You are here: **Security Services > IPS > Policies**.

To clone an IDP policy:

1. Select an IPS policy that you want to clone and click **More** > **Clone** on the upper-right corner of the IPS Policies page.

The Clone IPS Policy page appears with the editable name field. By default, the clone name will show as *<IPS policy name>_clone*.

2. Click **OK** to save the changes. If you want to discard your changes, click **Cancel**.

You can see the cloned IPS policy on the IPS Policies page. You can edit the rules of the cloned IPS policy. For more information on the IPS policy and its rules, see ["Add an IPS Policy" on page 955](#) and ["Add Rules to an IPS Policy" on page 957](#).

RELATED DOCUMENTATION

[About the IPS Policies Page | 952](#)

[Edit an IPS Policy | 956](#)

[Delete an IPS Policy | 957](#)

[Add Rules to an IPS Policy | 957](#)

[Edit an IPS Policy Rule | 967](#)

Edit an IPS Policy

You are here: **Security Services** > **IPS** > **Policies**.

To edit an IPS policy:

1. Select an existing IPS policy that you want to edit on the IPS Policies page.
2. Click the pencil icon available on the upper-right corner of the page.

The Edit IPS Policy page appears with editable fields. For more information on the options, see ["Add an IPS Policy" on page 955](#).

NOTE: Alternatively, you can right-click on the selected IPS policy and select **Edit**.

3. Click **OK** to save the changes.

RELATED DOCUMENTATION

[About the IPS Policies Page | 952](#)

[Add an IPS Policy | 955](#)[Add Rules to an IPS Policy | 957](#)[Clone an IPS Policy | 955](#)[Delete an IPS Policy | 957](#)

Delete an IPS Policy

You are here: **Security Services** > **IPS** > **Policies**.

To delete an IPS policy:

1. Select an IPS policy that you want to delete on the IPS Policies page.
2. Click the delete icon available on the upper-right corner of the page.

NOTE: Alternatively, you can right-click on the selected IPS policy and select **Delete**.

3. Click **Yes** to delete or click **No** to retain the policy.

RELATED DOCUMENTATION

[About the IPS Policies Page | 952](#)[Add an IPS Policy | 955](#)[Add Rules to an IPS Policy | 957](#)[Edit an IPS Policy | 956](#)[Clone an IPS Policy | 955](#)

Add Rules to an IPS Policy

You are here: **Security Services** > **IPS** > **Policies**.

To add rules to an IPS policy:

NOTE: You can only add rules for the custom IPS policies.

1. Click **Add Rules** or on the rule number available next to the column of your IPS policy name.
The IPS Rules page appears.
2. Click **+** on the upper-right corner of the IPS Rules or Exempt Rules page.
The IPS Rules or Exempt Rules page with the inline editable fields will appear.
3. Complete the configuration according to the guidelines provided in [Table 269 on page 958](#).
4. Click the tick icon on the right-side of the row once done with the configuration.
Once you configure the IPS policy rules, you can associate the IPS policy with the security policy.

Table 269: Fields on the IPS Rules or Exempt Rules Page

Field	Action
Rule Name	Enter the rule name for the IPS policy.
Description	Enter the description for the rule.
Network Criteria	
Sources	
Source zone	Select a source zone to be associated with the IPS policy: • Not configured—Matches the configured source zone from firewall policy. • Any—Matches any source zone from firewall policy. • Specific—Select a source zone from the list where network traffic originates.
Source addresses	Select a source address to be associated with the IPS policy: • Not configured—Matches the configured source IP address from firewall policy. • Any—Matches any source IP address from firewall policy. • Specific—A source IP address from which network traffic originates. Select the addresses from the Available column and then click the right arrow to move it to the Selected column. You can select Exclude Selected to exclude only the selected address from the list.
Destinations	

Table 269: Fields on the IPS Rules or Exempt Rules Page *(Continued)*

Field	Action
Destination zone	Select a destination zone to be associated with the IPS policy: • Not configured—Matches the configured destination zone from firewall policy. • Any—Matches any destination zone from firewall policy. • Specific—Select a destination zone from the list to which network traffic is sent.
Destination addresses	Select a destination address to be associated with the IPS policy: • Not configured—Matches the configured destination IP address from firewall policy. • Any—Matches any destination IP address from firewall policy. • Specific—A destination IP address to which the network traffic is sent. Select the addresses from the Available column and then click the right arrow to move it to the Selected column. You can select Exclude Selected to exclude only the selected address from the list.
IPS Signatures	
Add	Select predefined or custom signatures from the list to add it to the IPS policy rules.
Delete	Select the IPS signatures you do not want to add to the IPS policy rules and click the delete icon.
Name	Displays name of the IPS predefined or custom signatures.
Category	Displays the predefined attack or attack groups categories. For example, App, HTTP, and LDAP.
Severity	Displays the attack severity level that the signature reports.
Attack Type	Displays the attack type (signature or anomaly).

Table 269: Fields on the IPS Rules or Exempt Rules Page *(Continued)*

Field	Action
Recommended Action	Displays the specified action taken from the device when it detects an attack. For example, ignore and drop.
Type	Displays if the IPS signature type is predefined or custom.
Add Predefined Signatures	
View by	View and select the desired predefined attacks or attack groups and click OK to add it to the selected IPS policy.
Show or Hide Columns	Use the Show Hide Columns icon in the upper-right corner of the page and select the options you want to show or deselect to hide options on the page.
Name	Displays name of the predefined attack objects or attack object group.
Category	Displays the predefined attack or attack groups categories. For example, App, HTTP, and LDAP.
Severity	Displays the attack severity level that the signature reports.
Type Attack	Displays the attack type (signature or anomaly).
Recommended	Displays the added predefined attacks recommended by Juniper Networks to the dynamic attack group.
Recommended Action	Displays the specified action taken from the device when it detects an attack. For example, ignore and drop.
Performance	Displays a performance filter (fast, normal, slow, and unknown) to add attack objects based on the performance level that is vulnerable to the attack.
Direction	Displays the connection direction (any, client-to-server, or server-to-client) of the attack.

Table 269: Fields on the IPS Rules or Exempt Rules Page *(Continued)*

Field	Action
Add Custom Signatures	
View by	View and select the desired custom attacks, static groups, or dynamic groups and click OK to add it to the selected IPS policy.
Custom Signatures—Custom Attacks	
Name	Displays the custom attack object name.
Severity	Displays the attack severity level that the signature reports.
Attack Type	Displays the attack type (signature or anomaly).
Recommended Action	Displays the specified action taken from the device when it detects an attack. For example, ignore and drop.
Custom Signatures—Static Group	
Name	Displays static group name for the custom signatures.
Group Members	Displays the name of the attack object or group attack object. The members can be predefined attacks, predefined attack groups, custom attacks, or custom dynamic groups.
Custom Signatures—Dynamic Groups	
Name	Displays dynamic group name for the custom signatures.
Attack Prefix	Displays prefix match for attack names. For example: HTTP:*
Severity	Displays the attack severity level that the signature reports.

Table 269: Fields on the IPS Rules or Exempt Rules Page *(Continued)*

Field	Action
Attack Type	Displays the attack type (signature or anomaly).
Category	Displays the dynamic attack groups categories. For example, App, HTTP, and LDAP.
Direction	Displays the connection direction (any, client-to-server, or server-to-client) of the attack.

Table 269: Fields on the IPS Rules or Exempt Rules Page *(Continued)*

Field	Action
Action	NOTE: This option is not available for exempt rules. Select any one of the actions from the list: • Recommended (default)—All predefined attack objects have a default action associated with them. This is the action that we recommend when that attack is detected. • No Action—No action is taken. Use this action when you want to only generate logs for some traffic. • Drop Connection—Drops all packets associated with the connection, preventing traffic for the connection from reaching its destination. Use this action to drop connections for traffic that is not prone to spoofing. • Drop Packet—Drops a matching packet before it can reach its destination but does not close the connection. Use this action to drop packets for attacks in traffic that is prone to spoofing, such as UDP traffic. Dropping a connection for such traffic could result in a denial of service that prevents you from receiving traffic from a legitimate source-IP address. • Close Client—Closes the connection and sends an RST packet to the client but not to the server. • Close Server—Closes the connection and sends an RST packet to the server but not to the client. • Close Client & Server—Closes the connection and sends an RST packet to both the client and the server. • Ignore Connection—Stops scanning traffic for the rest of the connection if an attack match is found. IPS disables the rulebase for the specific connection. • Mark DiffServ—Assigns the indicated service-differentiation value to the packet in an attack, then passes them on normally.
Options NOTE: This option is not available for exempt rules.	
Log Attacks	Enable the log attacks to create a log record that appears in the log viewer.

Table 269: Fields on the IPS Rules or Exempt Rules Page *(Continued)*

Field	Action
Log Packets	Enable the log packets to capture the packets received before and after the attack for further offline analysis of attacker behavior.
Advanced	
NOTE: This option is not available for exempt rules.	
Threat Profiling	
NOTE: Feeds are only displayed if you have enrolled to Juniper ATP Cloud. You can also download the feeds using the command, <code>request services security-intelligence download</code> .	
Add attacker to feed	Select from the list to add the attackers IP addresses to the feed to configure IPS rule with threat profiles.
Add target to feed	Select from the list to add the target IP addresses to the feed to configure IPS rule with threat profiles.
Notifications	
Packets before	Enter the number of packets processed before the attack is captured. Range: 1 through 255. Default is 1. NOTE: This option is available when you enable Log Packets.
Packets after	Enter the number of packets processed after the attack is captured. Range: 0 through 255. Default is 1. NOTE: This option is available when you enable Log Packets.
Post window timeout	Enter the time limit for capturing post-attack packets for a session. No packet capture is conducted after the timeout has expired. Range: 0 through 1800 seconds. Default is 1 second. NOTE: This option is available when you enable Log Packets.

Table 269: Fields on the IPS Rules or Exempt Rules Page *(Continued)*

Field	Action
Alert Flag	Enable this option to set an alert flag in the Alert column of the Log Viewer for the matching log record. NOTE: This option is available when you enable Log Attacks.
IP Actions	
Action	Specifies the action that IPS takes against future connections that use the same IP address. Select an IP action from the list: • None—Do not take any action, which is the default setting. • Notify—Don't take any action on future traffic but log the event. • Close—Close future connections of new sessions that match the IP address by sending RST packets to the client and server. • Block—Block future connections of any session that matches the IP address.

Table 269: Fields on the IPS Rules or Exempt Rules Page *(Continued)*

Field	Action
IP Target	Configure how the traffic should be matched to the configured IP actions. Select an IP target from the list: • None—Do not match any traffic. • Destination address—Match traffic based on the destination IP address of the attack traffic. • Service—For TCP and UDP, match traffic based on the source IP address, source port, destination IP address, and destination port of the attack traffic. • Source address—Match traffic based on the source IP address of the attack traffic. • Source zone—Match traffic based on the source zone of the attack traffic. • Source zone address—Match traffic based on the source zone and source IP address of the attack traffic. • Zone service—Match traffic based on the source zone, destination IP address, destination port, and protocol of the attack traffic.
Refresh timeout	Enable refresh of the IP action timeout (that you specify in the Timeout field) if future traffic matches the configured IP actions.
Timeout	Specifies the number of seconds the IP action should remain effective before new sessions are initiated within that specified timeout value. Enter the timeout value, in seconds. The maximum value is 65,535 seconds. Default is 300 seconds.
Log IP-Action hits	Enable to log information about the IP action against the traffic that matches a rule. By default, this setting is disabled.
Log IP-Action rule creation	Enable to generate an event when the IP action filter is triggered. By default, this setting is disabled.
Rule Modifiers	

Table 269: Fields on the IPS Rules or Exempt Rules Page *(Continued)*

Field	Action
Severity override	Severity level (None, Critical, Info, Major, Minor, Warning) to override the inherited attack severity in the rules. The most dangerous level is critical, which attempts to crash your server or gain control of your network. Informational level is least dangerous and is used by network administrators to find flaws in their security systems.
Terminal matching	Enable to mark an IPS rule as terminal. When a terminal rule is matched, the device stops matching for the remaining rules in that IPS policy.

RELATED DOCUMENTATION

[About the IPS Policies Page | 952](#)

[Edit an IPS Policy Rule | 967](#)

[Delete an IPS Policy Rule | 968](#)

[Add an IPS Policy | 955](#)

[Clone an IPS Policy | 955](#)

[Delete an IPS Policy | 957](#)

Edit an IPS Policy Rule

You are here: **Security Services > IPS > Policies.**

To edit an IPS policy rule:

1. Click on the existing IPS policy rule on the IPS Policies page.
The IPS Rules page appears.
2. Select the IPS or exempt rules you want to edit.
3. Click the pencil icon available on the upper-right corner of the page.
Editable fields on the IPS Rules or Exempt Rules page appears.

NOTE: Alternatively, you can right-click on the selected IPS policy and select **Edit**.

- 4. Edit the required options and click the tick icon on the right-side of the row once done with the configuration.

For more information on the rules options, see ["Add Rules to an IPS Policy" on page 957](#).

The selected IPS policy rules are edited.

RELATED DOCUMENTATION

About the IPS Policies Page 952
Delete an IPS Policy Rule 968
Add an IPS Policy 955
Add Rules to an IPS Policy 957
Clone an IPS Policy 955
Delete an IPS Policy 957

Delete an IPS Policy Rule

You are here: **Security Services > IPS > Policies**.

To delete an IPS policy rule:

- 1. Click on the existing IPS policy rule on the IPS Policies page.
The IPS Rules page appears.
- 2. Select the IPS or exempt rules you want to delete.
- 3. Click the delete icon available on the upper-right corner of the page.
- 4. Click **Yes** to delete or click **No** to retain the rule.

RELATED DOCUMENTATION

About the IPS Policies Page 952
Edit an IPS Policy Rule 967
Add an IPS Policy 955
Add Rules to an IPS Policy 957
Clone an IPS Policy 955
Delete an IPS Policy 957

IPS Signatures

IN THIS CHAPTER

- [About the IPS Signatures Page | 969](#)
- [Import Snort Rules | 974](#)
- [Create a Custom IPS Signature | 975](#)
- [Create IPS Signature Static Groups | 991](#)
- [Create IPS Signature Dynamic Group | 994](#)
- [Clone an IPS Signature | 999](#)
- [Edit an IPS Signature | 1000](#)
- [Delete an IPS Signature | 1001](#)

About the IPS Signatures Page

IN THIS SECTION

- [Tasks You Can Perform | 970](#)
- [Field Descriptions | 971](#)

You are here: **Security Services > IPS > Signatures.**

The intrusion prevention system (IPS) compares traffic against signatures of known threats and blocks traffic when a threat is detected. Network intrusions are attacks on, or other misuses of, network resources. To detect such activity, IPS uses signatures. A signature specifies the types of network intrusions that the device should detect and report. Whenever a traffic pattern matches a signature, IPS triggers the alarm and blocks the traffic from reaching its destination. One of the key components of IPS is the signature database. It contains definitions of different objects that is used in defining IPS policy rules, such as attack objects, application signature objects, and service objects.

You can group the attack objects to keep IPS policies organized and manageable. An attack object group can contain one or more types of attack objects. Junos OS supports the following three types of attack groups:

- **IPS signature**—Contains objects present in the signature database.
- **Dynamic group**—Contains attack objects that meets the specified matching criteria. During a signature update, dynamic group membership is automatically updated based on the matching criteria for that group. For example, you can dynamically group the attacks that are related to a specific application using dynamic attack group filters.
- **Static group**—Contains a list of attacks that are specified in the attack definition.

Tasks You Can Perform

You can perform the following tasks from this page:

- Associate IPS signatures to IPS policies. To do this, click **IPS Policies** link available below the IPS Signatures page title to directly navigate to the IPS Policies page. Then, click **Add rules** to assign the IPS signature to a specific policy. For more information, see ["Add Rules to an IPS Policy" on page 957](#).
- View the list of IPS signature predefined attacks or attack groups. To do this, click the **PREDEFINED** tab and select **Predefined Attacks** or **Predefined Attack Group** from the View by list.
- View the details of a predefined IPS signature. To do this, select an existing IPS signature on the PREDEFINED tab and follow the available options:
 - Click **More** and select **Detailed View**.
 - Right-click on the selected IPS signature and select **Detailed View**.
 - Hover over to the left of the selected IPS signature name and click the **Detailed View** icon.
- View the custom signatures of custom attacks, static groups, or dynamic groups. To do this, click the **CUSTOM** tab and select **Custom Attacks**, **Static Groups**, or **Dynamic Groups** from the View by list.
- Import snort rules to convert them as custom attacks. See ["Import Snort Rules" on page 974](#).
- Create IPS signature custom attacks. See ["Create a Custom IPS Signature" on page 975](#).
- Create IPS signature static groups. See ["Create IPS Signature Static Groups" on page 991](#).
- Create IPS signature dynamic groups. See ["Create IPS Signature Dynamic Group" on page 994](#).
- View the details of an IPS signature for custom attacks, static groups, and dynamic groups. To do this, select an existing IPS signature, static group, or dynamic group on the CUSTOM tab and follow the available options:

- Click **More** and select **Detailed View**.
- Right-click on the selected IPS signature and select **Detailed View**.
- Hover over to the left of the selected IPS signature and click **Detailed View**.
- Clone an IPS signature. See ["Clone an IPS Signature" on page 999](#).
- Edit an IPS signature. See ["Edit an IPS Signature" on page 1000](#).
- Delete an IPS signature. See ["Delete an IPS Signature" on page 1001](#).
- Show or hide columns in the Predefined table. To do this, click the Show Hide Columns icon in the upper-right corner of the Predefined table. Then, select the options you want to view or clear the options you want to hide on the page.
- Advanced search for predefined or custom IPS signatures. To do this, use the search text box present above the table grid. The search includes the logical operators as part of the filter string. In the search text box, when you hover over the icon, it displays an example filter condition. When you start entering the search string, the icon indicates whether the filter string is valid or not.

For an advanced search:

1. Enter the search string in the text box.

Based on your input, a list of items from the filter context menu appears.

2. Select a value from the list and then select a valid operator based on which you want to perform the advanced search operation.

NOTE: Press spacebar to add an AND operator or OR operator to the search string. Predefined signatures support only the AND operator. Press backspace at any time when typing a search criteria to delete only one character.

3. Press **Enter** to display the search results in the grid.

Field Descriptions

[Table 270 on page 972](#) and [Table 271 on page 973](#) describes the fields on the IPS Signatures page.

Table 270: Fields on the PREDEFINED Tab

Field	Description
Name	Displays the name of the predefined IPS signature.
Category	Displays the category of the attack object.
Severity	Displays the severity level of the attack that the signature will report.
Attack Type	Displays if the type of attack object is signature, anomaly, or chain. NOTE: This field is applicable only for predefined attacks.
Type Attack	Displays if the attack type is static or dynamic group. NOTE: This field is applicable only for predefined attack groups.
Recommended	Indicates whether the attack objects are recommended by Juniper (True) or not (False).
Recommended Action	Displays the action or actions taken when the monitored traffic matches the attack objects specified in the IPS rules.
False Positive	Displays the frequency or frequencies with which the attack produces a false positive on your network.
Performance	Displays the IPS signature performance impact filter or filters.
Direction	Displays the traffic direction or traffic directions for which the attack is detected. For example, client to server.
Service	Displays the protocol, service, or list of both protocol and services that the attack uses to enter your network.

Table 271: Fields on the Custom Tab

Field	Description

View by: Custom Attacks

Name	Displays the name of the custom attack IPS signature.
Severity	Displays the severity level of the attack that the signature will report.
Attack Type	Displays if the type of attack object is signature, anomaly, or chain.
Recommended Action	Displays the action taken when the monitored traffic matches the attack objects specified in the IPS rules.

View by: Static Groups

Name	Displays the name of the static group IPS signature.
Group Members	Displays the IPS signatures or IPS signature dynamic groups that are part of the IPS static group.

View by: Dynamic Groups

Name	Displays the name of the dynamic group IPS signature.
Attack Prefix	Displays the value or values for attack name prefix match.
Severity	Displays the severity level or severity levels of the attack that the signature will report.
Attack Type	Displays if the type of attack object is signature, anomaly, or chain.
Category	Displays the category or categories of the attack object.

Table 271: Fields on the Custom Tab (Continued)

Field	Description
Direction	Displays the traffic direction or traffic directions for which the attack is detected. For example, client to server.
Attack Excluded	Displays the excluded attack or attacks that are part of the database updates.
File Type	Displays the attack file type or file types that are used as a dynamic group filter.
False Positive	Displays the frequency or frequencies with which the attack produces a false positive on your network.
Recommended	Indicates whether the attack objects are recommended by Juniper (True) or not (False).
Service	Displays the protocol, service, or list of protocols and services that the attack uses to enter your network.
Vendor	Displays the vendor or product that the attack belongs to.
Vulnerability Type	Displays the attack vulnerability type or vulnerability types that are used as a dynamic group filter.
Performance	Performance impact filter or filters used for the dynamic group.
CVSS Score	Displays the Common Vulnerability Scoring System (CVSS) score or scores that is used as a dynamic group filter.
Age of attack	Displays the age of the attack (in years) that is used as a dynamic group filter.

Import Snort Rules

Snort is an open-source intrusion prevention system (IPS) and help detect malicious attacks. You can convert the Snort IPS rules into Juniper IPS custom attack signatures using the Juniper Integration of

Snort Tool (JIST). By default, Junos OS includes the JIST. The tool supports Snort version 2 and version 3 rules.

To import the Snort rules:

1. Click the **CUSTOM** tab on the IPS Signatures page.
2. Click **Import Snort Rules** at the upper-right corner of the Custom Signatures page.

NOTE: This option is only available if you have selected **Custom Attacks** in the View by list.

The Import Snort Rules page appears.

3. Click **Browse** and select the file to upload the Snort rules file and click **OK**.

The supported file formats are: .rules, .txt, .set, and .srt

The Custom Signatures page lists the converted custom attack signatures. The unconverted rules and error log files are downloaded automatically.

RELATED DOCUMENTATION

[About the IPS Signatures Page | 969](#)

[Create a Custom IPS Signature | 975](#)

[Create IPS Signature Static Groups | 991](#)

[Create IPS Signature Dynamic Group | 994](#)

[Clone an IPS Signature | 999](#)

[Edit an IPS Signature | 1000](#)

[Delete an IPS Signature | 1001](#)

Create a Custom IPS Signature

You are here: **Security Services > IPS > Signatures**.

Create custom attack objects to detect a known or unknown attack for protecting your network.

To create a custom IPS signature:

1. Click the **CUSTOM** tab.
2. Click **Create > Custom** on the upper-right corner of the Custom Signatures page.

The Create Custom Attack page appears.

- 3. Complete the configuration according to the guidelines provided from [Table 272 on page 976](#) to [Table 275 on page 984](#).
- 4. Click **OK** to save the changes. If you want to discard your changes, click **Cancel**.
You are returned to the Custom Signatures page and displays the custom signatures that you successfully created.

Table 272: Fields on the IPS Signatures Page—Create Custom

Field	Action
General	
Name	Enter the name of the custom attack object. 250-character maximum.
Description	Enter a description for the custom attack object.

Table 272: Fields on the IPS Signatures Page—Create Custom *(Continued)*

Field	Action
Recommended action	Select an action from the list to perform when the device detects an attack: • None—No action is taken. Use this action to only generate logs for some traffic. • Close—Reset the client and the server. • Close client—Closes the connection and sends an RST packet to the client but not to the server. • Close server—Closes the connection and sends an RST packet to the server but not to the client. • Drop—Drops all packets associated with the connection, preventing traffic for the connection from reaching its destination. Use this action to drop connections for traffic that is not prone to spoofing. • Drop packet—Drops a matching packet before it can reach its destination but does not close the connection. Use this action to drop packets for attacks in traffic that is prone to spoofing, such as UDP traffic. Dropping a connection for such traffic could result in a denial of service that prevents you from receiving traffic from a legitimate source-IP address. • Ignore—Stops scanning traffic for the rest of the connection if an attack match is found. IPS disables the rulebase for the specific connection.

Table 272: Fields on the IPS Signatures Page—Create Custom *(Continued)*

Field	Action
Severity	Select a severity from the list that matches the attack object severity on your network: • Critical—Contains attack objects matching exploits that attempt to evade detection, cause a network device to crash, or gain system-level privileges. • Info—Contains attack objects that matches the following parameters: • Normal and harmless traffic containing URLs • DNS lookup failures • SNMP public community strings • Peer-to-Peer (P2P) • Major—Contains attack objects that matches the exploits that attempt to: • Disrupt a service. • Gain user-level access to a network device. • Activate a Trojan horse previously loaded on a device. • Minor—Contains attack objects that matches the exploits that detect reconnaissance efforts attempting to access vital informational through directory traversal or information leaks. • Warning—Contains attack objects that matches the exploits that attempt to obtain noncritical information or scan a network with a scanning tool.
Detection Filter	

Table 272: Fields on the IPS Signatures Page—Create Custom *(Continued)*

Field	Action
Time count	Set the number of times that the attack object must detect an attack within the specified scope. The detection occurs before the device determines if or not the attack object matches the attack. Range: 0 through 4,294,967,295
Time scope	Select the scope from the list within which the count occurs: • None—No action is taken. Use this option when you only want to generate logs for some traffic. • Destination—Detects the signature in traffic from the destination IP address for the specified number of times, regardless of the source IP address. • Session—Detects the signature in traffic between source and destination IP addresses of the sessions for the specified number of times. • Source—Detects the signature in traffic from the source IP address for the specified number of times, regardless of the destination IP address.
Time interval	Enter the maximum time interval between any two instances of a time-binding custom attack. Supported format is MMm-SSs. Range: 0 minutes and 0 seconds to 60 minutes and 0 seconds.
Signature	

Table 272: Fields on the IPS Signatures Page—Create Custom *(Continued)*

Field	Action
Attack type	Select one of the following attack type from the list: - Signature—IPS uses stateful signatures to detect attacks. Using stateful signatures, IPS look for the specific protocol or service that was used to carry out the attack. For fields description, see Table 273 on page 980. - Anomaly—Protocol anomaly attack objects detect abnormal or ambiguous messages within a connection using the protocol's set of rules. For fields description, see Table 274 on page 984. - Chain—Chain attack object combines multiple signatures and/or protocol anomalies into a single object. Traffic must match all of the combined signatures and/or protocol anomalies to match the chain attack object. For fields description, see Table 275 on page 984.

Table 273: Fields on the Attack Type—Signature

Field	Action
Attack type	Signature—IPS uses stateful signatures to detect attacks. Using stateful signatures, IPS look for the specific protocol or service that was used to carry out the attack.
Context	Select an attack context from the list which defines the location of the signature where IPS should look for the attack in a specific Application Layer protocol.
Protocol binding	Select a protocol from the list that the attack uses to enter your network.

Table 273: Fields on the Attack Type—Signature *(Continued)*

Field	Action
Application	Select an application from the list under which the attack must match. NOTE: This option is available only when protocol binding type is Application.
Protocol number	Set the transport layer protocol number which allows IPS to match the attack to it. Range: 0 through 139 NOTE: This option is available only when protocol binding type is IP and IPv6.
Program number	Set the remote procedure call (RPC) program number which allows to match the attack to it. NOTE: This option is available only when protocol binding type is RPC.
Minimum port	Set the minimum port in the port range. Range: 0 through 65,535 NOTE: This option is available only when protocol binding type is TCP.
Maximum port	Set the maximum port in the port range. Range: 0 through 65,535 NOTE: This option is available only when protocol binding type is TCP.

Table 273: Fields on the Attack Type—Signature *(Continued)*

Field	Action
Direction	Select the traffic direction from the list for which the attack is detected: • Client to Server—Detects the attack only in client-to-server traffic. • Server to Client—Detects the attack only in server-to-client traffic. • Any Direction—Detects the attack in either direction.
Content	
DFA pattern	Enter the signature pattern in deterministic finite automation (DFA) format. For example: When you use the syntax: <code>\[hello\]</code>, pattern is hello and it is case insensitive. Example matches for the syntax are hElLo, HEllO, and heLLo.
PCRE pattern	Enter the signature pattern in standard Perl Compatible Regular Expression (PCRE) format. Example syntax: <code>Sea[ln]</code>, pattern is Seal and it is case insensitive. Example matches for the syntax are Seal, Seam, and Sean
Depth	Allows you to specify the depth in a packet to search for the given pattern. The depth is not relative. For example, you can specify a value for depth as 100.
Variable	Enter the depth variable name.

Table 273: Fields on the Attack Type—Signature *(Continued)*

Field	Action
Value	Set the depth value to be used. Range: 1 through 65535
Offset	Allows you to specify where to start searching for a pattern within a packet. Offset is not relative. For example, you can specify a value for depth as 100.
Variable	Enter the offset variable name.
Value	Set the offset value to be used. Range: 1 through 65535
Is data at	Enable this option to allow you to verify that the payload has data at a specified location.
Negate	Enable this option to negate the result of Is data at.
Relate	Enable this option to use an offset relative to last pattern match.
Offset	Allows you to specify where to start searching for a pattern within a packet. Offset is not relative. For example, you can specify a value for depth as 100.
Variable	Enter the offset variable name.
Value	Set the offset value to be used. Range: 1 through 65535

Table 274: Fields on the Attack Type—Anomaly

Field	Action
Attack type	Anomaly—Protocol anomaly attack objects detect abnormal or ambiguous messages within a connection using the protocol's set of rules.
Service	Select a service from the list. Service is a protocol whose anomaly is defined in the attack. Example: IP, TCP, and ICMP.
Test anomaly	Select a protocol anomaly test condition from the list to be checked.
Direction	Select a traffic direction from the list for which the attack is detected: - Any Direction—Detects the attack in either direction. - Client to Server—Detects the attack only in client-to-server traffic. - Server to Client—Detects the attack only in server-to-client traffic.

Table 275: Fields on the Attack Type—Chain

Field	Action
Attack type	Chain—Chain attack object combines multiple signatures and/or protocol anomalies into a single object. Traffic must match all of the combined signatures and/or protocol anomalies to match the chain attack object.
Protocol binding	Select a protocol from the list that the attack uses to enter your network.

Table 275: Fields on the Attack Type—Chain (*Continued*)

Field	Action
Application	Select an application under which the attack must match. NOTE: This option is available only when protocol binding type is Application.
Protocol Number	Set the transport layer protocol number which allows IPS to match the attack to it. Range: 0 through 139 NOTE: This option is available only when protocol binding type is IP and IPv6.
Program Number	Set the remote procedure call (RPC) program number which allows to match the attack to it. NOTE: This option is available only when protocol binding type is RCP.
Minimum Port	Set the minimum port in the port range. Range: 0 through 65,535 NOTE: This option is available only when protocol binding type is TCP.
Maximum Port	Set the maximum port in the port range. Range: 0 through 65,535 NOTE: This option is available only when protocol binding type is TCP.

Table 275: Fields on the Attack Type—Chain (Continued)

Field	Action
Chain order expressions	Select a Boolean expression that defines the condition for the individual members of a chain attack that will decide if the chain attack is hit: • AND—If both of the member name patterns match, the expression matches. The order of the members does not matter. • OR—If either of the member name patterns match, the expression matches. • OAND—If both of the member name patterns match, and if they appear in the same order as in the Boolean Expression, the expression matches.
Customized ordering	Enable this option to create a compound attack object that must match each member signature or protocol anomaly in the order you specify. If you do not specify an ordered match, the compound attack object still must match all members, but the attacks or protocol anomalies can appear in random order.
Reset	Enable this option if the compound attack should be matched more than once within a single session or transaction.
Scope	Select one of the following scopes: • session—Allows multiple matches for the object within the same session. • transaction—Matches the object across multiple transactions that occur within the same session.
Add signatures	
Edit (pencil icon)	Select an existing signature that you want to edit. Click the edit (pencil) icon, make the required changes, and click OK.

Table 275: Fields on the Attack Type—Chain (*Continued*)

Field	Action
Delete (trash can icon)	Select an existing signature that you want to delete. Click the delete (trash can) icon and click Yes .
+	Click + to add one or more signature attack objects that use a stateful attack signature (a pattern that always exists within a specific section of the attack) to detect known attacks.
Signature No	Displays the system-generated signature number. You cannot modify this field.
Context	Select the attack context from the list which defines the location of the signature where IPS should look for the attack in a specific Application Layer protocol.
Direction	Select a traffic direction from the list for which the attack is detected: - Any Direction—Detects the attack in either direction. - Client to Server—Detects the attack only in client-to-server traffic. - Server to Client—Detects the attack only in server-to-client traffic.
Content	
DFA pattern	Enter the signature pattern in deterministic finite automation (DFA) format. Example syntax: <code>\[hello\]</code>, pattern is hello and it is case insensitive. Example matches for the syntax are hElLo, HEllO, and heLLO.

Table 275: Fields on the Attack Type—Chain (*Continued*)

Field	Action
PCRE pattern	Enter the signature pattern in standard Perl Compatible Regular Expression (PCRE) format. Example syntax: Sea[ln], pattern is Seal and it is Unicode insensitive. Example matches to the syntax Seal, Seam, and Sean
Depth	Allows you to specify the depth in a packet to search for the given pattern. The depth is not relative. For example, you can specify a value for depth as 100.
Variable	Enter the depth variable name.
Value	Set the depth value to be used. Range: 1 through 65535
Distance	Allows you to specify how much of the packet data should the IPS engine ignore before it begins searching for the specified pattern relative to the end of the previous pattern match.
Variable	Enter the distance variable name.
Value	Set the match value to be used. This is always relative to previous match.
Offset	Allows you to specify where to start searching for a pattern within a packet. Offset is not relative. For example, you can specify a value for depth as 100.
Variable	Enter the offset variable name.
Value	Set the offset value to be used. Range: 1 through 65535

Table 275: Fields on the Attack Type—Chain (*Continued*)

Field	Action
Is data at	Enable this option to allow you to verify that the payload has data at a specified location.
Negate	Enable this option to negate the result of Is data at.
Relate	Enable this option to use an offset relative to last pattern match.
Offset	Allows you to specify where to start searching for a pattern within a packet. Offset is not relative. For example, you can specify a value for depth as 100.
Variable	Enter the offset variable name.
Value	Set the offset value to be used. Range: 1 through 65535
Within	Allows you to specify that there are maximum N bytes between pattern matches.
Variable	Enter the match variable name.
Value	Set the match value to be used. This is always relative to previous match.
Add anomaly	
Edit (pencil icon)	Select an existing anomaly that you want to edit. Click the edit (pencil) icon, make the required changes, and click OK .
Delete (trash can icon)	Select an existing anomaly that you want to delete. Click the delete (trash can) icon and click Yes .

Table 275: Fields on the Attack Type—Chain *(Continued)*

Field	Action
+	Click + to add one or more protocol anomaly attack objects to detect abnormal or ambiguous messages within a connection according to the set of rules for the particular protocol being used.
Anomaly No	Displays the system-generated anomaly number. You cannot modify this field.
Test Anomaly	Select a protocol anomaly test condition to be checked.
Direction	Select a traffic direction from the list for which the attack is detected: - Any Direction—Detects the attack in either direction. - Client to Server—Detects the attack only in client-to-server traffic. - Server to Client—Detects the attack only in server-to-client traffic.

RELATED DOCUMENTATION

[About the IPS Signatures Page | 969](#)

[Import Snort Rules | 974](#)

[Create IPS Signature Static Groups | 991](#)

[Create IPS Signature Dynamic Group | 994](#)

[Clone an IPS Signature | 999](#)

[Edit an IPS Signature | 1000](#)

[Delete an IPS Signature | 1001](#)

Create IPS Signature Static Groups

You are here: **Security Services > IPS > Signatures.**

Create static groups for better manageability because you can group different types of signatures into one entity.

To create an IPS signatures static group:

1. Click the **CUSTOM** tab.
2. Click **Create > Static Group** on the upper-right corner of the Custom Signatures page.
The Create Static Group page appears.
3. Complete the configuration according to the guidelines provided in [Table 276 on page 991](#).
4. Click **OK** to save the changes. If you want to discard your changes, click **Cancel**.
You are returned to the Custom Signatures page and displays the static group that you successfully created.

Table 276: Fields on the Create Static Group Page

Field	Action
Name	Name must be a string beginning with a letter or underscore and consisting of letters, numbers, dashes and underscores; 250-character maximum.
Group Members	
Add	Click Add and select either Predefined Signatures or Custom Signatures to add to the static group.
Add Predefined Signatures	
View by	Select Predefined Attack Groups or Predefined Attacks from the list.
Predefined Attack Groups	Select one or more predefined attack groups and click OK to add predefined attack groups to the static group.

Table 276: Fields on the Create Static Group Page (Continued)

Field	Action
Predefined Attacks	Select one or more predefined attacks and click OK to add predefined attacks to the static group.
Detailed View	To view the details of an IPS signature, select a predefined attack or attack group and then click More > Detailed View .
Three vertical dots	Click the Show Hide Columns icon, then select options to view or clear the options to hide on the page.
Advanced Search	1. Enter the search string in the search text box present above the table grid. 2. Select a value from the list and then select a valid operator based on which you want to perform the advanced search operation. NOTE: Press spacebar to add an AND operator to the search string. Press backspace at any time when typing a search criteria to delete only one character. 3. Press Enter to display the search results in the grid.
Custom Signatures	
View by	Select one of the following custom signatures to add to the static group: • Custom Attacks • Static Groups • Dynamic Groups
Custom Attacks	Select one or more custom attacks and click OK to add custom attacks to the static group.

Table 276: Fields on the Create Static Group Page *(Continued)*

Field	Action
Static Groups	Select one or more static groups and click OK to add static groups to the static group.
Dynamic Groups	Select one or more dynamic groups and click OK to add dynamic groups to the static group.
Detailed View	To view the details of an IPS signature, select a custom attack, static group, or dynamic group and then click More > Detailed View .
Three vertical dots	Click the Show Hide Columns icon, then select options to view or clear the options to hide on the page.
Advanced Search	1. Enter the search string in the search text box present above the table grid. 2. Select a value from the list and then select a valid operator based on which you want to perform the advanced search operation. NOTE: Press spacebar to add an AND operator to the search string. Press backspace at any time when typing a search criteria to delete only one character. 3. Press Enter to display the search results in the grid.

RELATED DOCUMENTATION

[About the IPS Signatures Page | 969](#)

[Import Snort Rules | 974](#)

[Create a Custom IPS Signature | 975](#)

[Create IPS Signature Dynamic Group | 994](#)

[Clone an IPS Signature | 999](#)

[Edit an IPS Signature | 1000](#)

[Delete an IPS Signature | 1001](#)

Create IPS Signature Dynamic Group

You are here: **Security Services > IPS > Signatures.**

Create a dynamic attack group to select its members based on the specified filters in the group. The list of attacks is updated (added or removed) automatically when a new signature database is used.

To create an IPS signatures dynamic group:

1. Click the **CUSTOM** tab.
2. Click **Create > Dynamic Group** on the upper-right corner of the Custom Signatures page.
The Create Dynamic Group page appears.
3. Complete the configuration according to the guidelines provided in [Table 277 on page 994](#).
4. Click **OK** to save the changes. If you want to discard your changes, click **Cancel**.

You are returned to the Custom Signatures page and the dynamic group you successfully created is displayed.

Table 277: Fields on the Create Dynamic Group Page

Field	Action
Name	Name must be a string beginning with a letter or underscore and consisting of letters, numbers, dashes and underscores; 250-character maximum.
Filter Criteria	
Attack prefix	Select one or more values from the list for the attack name prefix match.

Table 277: Fields on the Create Dynamic Group Page (*Continued*)

Field	Action
Severity	Select one or more severity values from the list to add attack objects based on the attack severity levels (critical, info, major, minor, or warning). • Critical—The attack is a critical one. • Info—Provides information of attack when it matches. • Major—The attack is a major one. • Minor—The attack is a minor one. • Warning—Issues a warning when attack matches.
Service	Select one or more service values from the list to add attack objects based on the attack service. For example, BGP, FTP, and HTTP.
Category	Select one or more category values from the list to add attack objects based on the category.
Recommended	Select one of the following filter: • None—No action is performed. • Yes—The recommended filter to add predefined attacks recommended by Juniper Networks to the dynamic attack group. • No—The non-recommended attack objects in the dynamic attack group.

Table 277: Fields on the Create Dynamic Group Page *(Continued)*

Field	Action
Direction	Select one or more direction values from the list: - Any—Monitors traffic from client to server and server to client. - Client to Server—Monitors traffic only from client to server (most attacks occur over client to server connections). - Exclude Any—Allows traffic from client to server and server to client. - Exclude Client to Server—Allows traffic only from server to client. - Exclude Server to Client—Allows traffic only from client to server. - Server to Client—Monitors traffic only from server to client.
Expression	Select one of the following expressions from the list: - None—No action is performed. - AND—If both the directions match, the expression matches. - OR—If either of the directions match, the expression matches.

Table 277: Fields on the Create Dynamic Group Page (*Continued*)

Field	Action
Performance	Select one or more performance values from the list: • Fast—Fast track performance level. • Normal—Normal track performance level. • Slow—Slow track performance level. • Unknown—By default, all compound attack objects are set to Unknown. As you fine-tune IPS to your network traffic, you can change this setting to help you track performance level.
False positives	Select one or more false positives value from the list: • Frequently—Frequently track false positive occurrences. • Occasionally—Occasionally track false positive occurrences. • Rarely—Rarely track false positive occurrences. • Unknown—By default, all compound attack objects are set to Unknown. As you fine-tune IPS to your network traffic, you can change this setting to help you track false positives.
Attack type	Select Anomaly or Signature attack type from the list. If you choose None, no action will be taken.
Attacks	Select Excluded or Not Excluded from the list to check the signatures that are part of the database updates. If you choose None, no action will be taken.

Table 277: Fields on the Create Dynamic Group Page (*Continued*)

Field	Action
CVSS score	Select Greater than or Less than from the list to specify the Common Vulnerability Scoring System (CVSS) score of the attack. CVSS score of the attack is a free and open industry standard for assessing the severity of computer system security vulnerabilities. CVSS attempts to assign severity scores to vulnerabilities allowing responders to prioritize responses and resources according to threats.
Greater than	Set to match the CVSS score greater than the value specified. Range: 0 through 10
Less than	Set to match the CVSS score lesser than the value specified. Range: 0 through 10
Age of attack	Select Greater than or Less than from the list to specify the age of the attack.
Value	Set to match when age of attack in terms of years is greater than or less than the specified value (years). Range: 1 through 100.
File type	Select the file type from the list that the attack targets. For example, HTML and PDF.
Vulnerability type	Select the vulnerability type for IPS from the list that indicates which applications are weak and can be manipulated. The vulnerability type is reported for fixing these vulnerabilities.

Table 277: Fields on the Create Dynamic Group Page *(Continued)*

Field	Action
Vendor	Group attacks specific to the product of a vendor. You can add, modify, or delete a vendor. To add a vendor to the dynamic group: 1. Click +. 2. Select the vendor name and product name from the list. 3. Click the tick icon to save the vendor details. To edit a vendor, select it and click the pencil icon. To delete a vendor, select it and click the delete icon.

RELATED DOCUMENTATION

[About the IPS Signatures Page | 969](#)

[Import Snort Rules | 974](#)

[Create a Custom IPS Signature | 975](#)

[Create IPS Signature Static Groups | 991](#)

[Clone an IPS Signature | 999](#)

[Edit an IPS Signature | 1000](#)

[Delete an IPS Signature | 1001](#)

Clone an IPS Signature

You are here: **Security Services > IPS > Signatures.**

You can clone both the predefined and the custom IPS signatures.

To clone a predefined IPS signature:

1. Click the **PREDEFINED** tab.
2. Select an existing predefined IPS signature you want to clone.

3. Click **More** > **Clone** on the upper-right corner of the Predefined Signatures page.
The Clone Predefined Group Details page appears.
4. Edit the required fields and click **OK**.
The cloned signature is displayed on the Predefined Signatures page.

NOTE: By default, the name of the cloned signature is in the *<Signature name>_clone* format.

To clone a custom IPS signature:

1. Click the **CUSTOM** tab.
2. Select an existing custom IPS signature, static group, or dynamic group that you want to clone.
3. Click **More** > **Clone** on the upper-right corner of the Custom Signatures page.
The Clone *<Custom Attack or Static Group or Dynamic Group>* page appears.
4. Edit the required fields and click **OK**.

The cloned signature is displayed on the Custom Signatures page.

NOTE: By default, the name of the cloned signature is in the *<Signature name>_clone* format.

RELATED DOCUMENTATION

- [About the IPS Signatures Page | 969](#)
- [Import Snort Rules | 974](#)
- [Create a Custom IPS Signature | 975](#)
- [Create IPS Signature Static Groups | 991](#)
- [Create IPS Signature Dynamic Group | 994](#)
- [Edit an IPS Signature | 1000](#)
- [Delete an IPS Signature | 1001](#)

Edit an IPS Signature

You are here: **Security Services** > **IPS** > **Signatures**.

You can edit a custom IPS signature, static group, or dynamic group.

To edit a custom IPS signature, static group, or dynamic group:

1. Click the **CUSTOM** tab.
2. Select an existing custom IPS signature, static group, or dynamic group that you want to edit.
3. Click the pencil icon on the upper-right corner of the Custom Signatures page.

The Edit *<Custom Attack or Static Group or Dynamic Group>* page appears.

NOTE: When editing a dynamic group, click **Preview Filtered Signatures** at the bottom of the page to view the list of filtered signatures.

4. Make the required changes and click **OK**.

The edited signature is displayed on the Custom Signatures page.

NOTE: You cannot edit the name of the custom IPS signature, static group, or dynamic group.

RELATED DOCUMENTATION

[About the IPS Signatures Page | 969](#)

[Import Snort Rules | 974](#)

[Create a Custom IPS Signature | 975](#)

[Create IPS Signature Static Groups | 991](#)

[Create IPS Signature Dynamic Group | 994](#)

[Clone an IPS Signature | 999](#)

[Delete an IPS Signature | 1001](#)

Delete an IPS Signature

You are here: **Security Services > IPS > Signatures**.

You can delete one or more custom IPS signature, static group, or dynamic group.

To delete a custom IPS signature, static group, or dynamic group:

1. Click the **CUSTOM** tab.

2. Select one or more existing custom IPS signatures, static groups, or dynamic groups that you want to delete on the Custom Signatures page.

NOTE: Alternatively, you can right-click on the selected name and select **Delete**.

3. Click the delete icon on the upper-right corner of the Custom Signatures page.
4. Click **Yes** to delete or click **No** to retain the existing custom IPS signatures, static groups, or dynamic groups.

RELATED DOCUMENTATION

[About the IPS Signatures Page | 969](#)

[Import Snort Rules | 974](#)

[Create a Custom IPS Signature | 975](#)

[Create IPS Signature Static Groups | 991](#)

[Create IPS Signature Dynamic Group | 994](#)

[Clone an IPS Signature | 999](#)

[Edit an IPS Signature | 1000](#)

IPS Sensor

IN THIS CHAPTER

- About the Sensor Page | 1003

About the Sensor Page

IN THIS SECTION

- Field Descriptions | 1003

You are here: **Security Services > IPS > Sensor.**

You can configure sensor settings to limit the number of sessions running application identification and also to limit memory usage for application identification.

Field Descriptions

Table 278 on page 1003 describes the fields on the Sensor page.

Table 278: Fields on the Sensor Page

Field	Description
Packet Capture	
Local Storage	Enable this option to store the PCAP file locally (/var/log/pcap/idp/) on the SRX Series Firewall.

Table 278: Fields on the Sensor Page *(Continued)*

Field	Description
Maximum files	Enter or select the maximum number of unique packet capture files to create before the oldest file is overwritten by a newly created file. Range: 1 through 5000.
Storage limit	Enter or select the maximum disk space (Megabytes) that can be used in the Routing Engine for packet capture files. Range: 1 MB through 4096 MB.
External Server	Enable this option to send the PCAP file to an external server.
IP Address	Enter the external server IPv4 address that captures the packet.
Port	Enter or select the port number of the server for SRX Series Firewalls to send the packet capture object. Port number: 0 through 65535. Default port is 2050.
Source Address	Enter the source IPv4 address for the carrier TCP or UDP packet.
Intelligent IDP ByPass	
IDP By Pass	Enable or disable the IDP Intelligent Bypass option.
IDP By Pass CPU Threshold	Enter the threshold value. Range: 0 through 99. Default value: 85.
IDP By Pass CPU Tolerance	Enter the CPU tolerance value. Range: 1 through 99. Default value: 5.

Table 278: Fields on the Sensor Page *(Continued)*

Field	Description
Intelligent Inspection	Enable or disable this option. If you enable this option, enter the following details: - Ignore Content Decompression— Enable this option to enable payload content decompression. - Signature Severity—Select the severity level of the attack from the list that the signature will report for IDP processing. The available options are minor, major, and critical. NOTE: Click Clear All to clear all the selected severity values. - Protocols—Select the protocols from the list that needs to be processed in Intelligent Inspection mode. NOTE: Click Clear All to clear all the selected protocols. - CPU Threshold (%)—Enter the value of CPU usage threshold percentage for intelligent inspection. Range: 0 through 99 percent. - CPU Tolerance (%)—Enter the value of CPU usage tolerance percentage for intelligent inspection. Range: 1 through 99 percent. - Memory Tolerance—Enter the value of memory tolerance percentage for intelligent inspection. Range: 1 through 100 percent. - Free Memory Threshold—Enter the value of free memory threshold percentage for intelligent inspection. Range: 1 through 100 percent. - Session Bytes Depth—Enter the value of session bytes scanning depth. Range: 1 through 1000000 bytes.
Memory Lower Threshold	Enter the memory lower threshold limit percentage. Range: 1 through 100.

Table 278: Fields on the Sensor Page *(Continued)*

Field	Description
Memory Upper Threshold	Enter the memory upper threshold limit percentage. Range: 1 through 100.
Advanced Settings	
IDP Protection Mode	
Protection Mode	Select an option to specify the inspection parameters for efficient inspection of traffic in the device. The options available are: • DataCenter—Disables all STC traffic inspection. • Datacenter Full—Disables all STC traffic inspection. • Perimeter—Inspects all STC (Server To Client) traffic. • Perimeter Full—Inspects all STC traffic.
Exception Handling	
Drop On Limit	Enable this option to specify the dropped connections on exceeding resource limits.
Drop On Failover	Enable this option to specify the dropped traffic on HA failover sessions.
Drop If No Policy Loaded	Enable this option to specify all the dropped traffic till IDP policy gets loaded.
IDP Flow	
Log Errors	Enable this option to specify if the flow errors have to be logged. Select an option from the list.
Flow FIFO Max Size	Enter a value to specify the maximum FIFO size. Range: : 1 through 65535. Default value is 1.

Table 278: Fields on the Sensor Page *(Continued)*

Field	Description
Hash Table Size	Enter a value to specify the hash table size. Range: 1024 through 1,000,000. Default value is 1024.
Max Timers Poll Ticks	Enter a value to specify the maximum amount of time at which the timer ticks at a regular interval. Range: 0 through 1000 ticks. Default value is 1000 ticks.
Reject Timeout	Enter a value to specify the amount of time in milliseconds within which a response must be received. Range: 1 through 65,535 seconds. Default value is 300 seconds.
Global	
Enable All Qmodules	Select an option from the list to specify all the qmodules of the global rulebase IDP security policy are enabled.
Enable Packet Pool	Select an option from the list to specify the packet pool is enabled to be used when the current pool is exhausted.
Policy Lookup Cache	Select an option from the list to specify the cache is enabled to accelerate IDP policy lookup.
Memory Limit Percent	Enter a value to specify the limit IDP memory usage at this percent of available memory. Range: 10 through 90 percent.
HTTP X-Forwarded	When you enable this option, during traffic flow, IDP saves the source IP addresses (IPv4 or IPv6) from the contexts of HTTP traffic, and displays it in the attack logs.
IPS	
Detect Shellcode	Select an option from the list to specify if shellcode detection has to be applied.

Table 278: Fields on the Sensor Page (Continued)

Field	Description
Ignore Regular Expression	Select an option from the list to specify if the sensor has to bypass DFA and PCRE matching.
Process Ignore Server-to-Client	Select an option from the list to specify if the sensor has to bypass IPS processing for server-to-client flows.
Process Override	Select an option from the list to specify if the sensor has to execute protocol decoders even without an IDP policy.
Process Port	Enter an integer to specify a port on which the sensor executes protocol decoders. Range: 0 through 65535.
IPS FIFO Max Size	Enter an integer to specify the maximum allocated size of the IPS FIFO. Range: 1 through 65535.
Minimum Log Supercade	Enter an integer to specify the minimum number of logs to trigger the signature hierarchy feature. Range: 0 through 65535.
Log	
Cache Size	Enter a value to specify the size in bytes for each user's log cache.
Disable Suppression	Enable this option to specify if the log suppression has to be disabled.
Include Destination Address	Select an option from the list to specify if combine log records for events with a matching source address.
Max Logs Operate	Enter a value to specify the maximum number of logs on which log suppression can operate. Range is 255 through 65536.

Table 278: Fields on the Sensor Page *(Continued)*

Field	Description
Max Time Report	Enter a value to specify the time (seconds) after which suppressed logs will be reported. IDP reports suppressed logs after 5 seconds by default.
Start Log	Enter a value to specify the number of log occurrences after which log suppression begins. Log suppression begins with the first occurrence by default. Range is 1 through 128.
Reassembler	
Ignore Memory Overflow	Select an option from the list to specify if the user has to allow per-flow memory to go out of limit.
Ignore Reassembly Memory Overflow	Select an option from the list to specify if the user has to allow per-flow reassembly memory to go out of limit.
Ignore Reassembly Overflow	Enable this option to specify the TCP reassembler to ignore the global reassembly overflow to prevent the dropping of application traffic.
Max Flow Memory	Enter an integer to specify the maximum per-flow memory for TCP reassembly in kilobytes. Range: 64 through 4,294,967,295 kilobytes.
Max Packet Memory	Enter an integer to specify the maximum packet memory for TCP reassembly in kilobytes. Range: 64 through 4,294,967,295 kilobytes
Max Synacks Queued	Enter an integer to specify the maximum limit for queuing Syn/Ack packets with different SEQ numbers. Range: 0 through 5
Packet Log	

Table 278: Fields on the Sensor Page *(Continued)*

Field	Description
Max Sessions	Enter an integer to specify the maximum number of sessions actively conducting pre-attack packet captures on a device at one time. Range: 1 through 100 percent
Total Memory	Enter an integer to specify the maximum amount of memory to be allocated to packet capture for the device. Range: 1 through 100 percent

Detectors—Click +.

The Detector window opens up and enter the following field details.

Protocol	Select the name of the protocol from the list to enable or disable the detector.
Tunable Name	Select the name of the specific tunable parameter from the list to enable or disable the protocol detector for each of the services.
Tunable Value	Enter the protocol value of the specific tunable parameter to enable or disable the protocol detector for each of the services. Range: 0 to 4294967295

RELATED DOCUMENTATION

| [About the IPS Policies Page](#) | 952

ALG

IN THIS CHAPTER

- About the ALG Page | 1011

About the ALG Page

IN THIS SECTION

- Field Descriptions | 1011

You are here: **Security Services > ALG.**

Use this page to configure Application Layer Gateway (ALG).

Field Descriptions

Table 279 on page 1011 describes the fields on the ALG page.

Once the configuration is complete, click **OK** to save the changes or click **Reset** to revert back the changes.

Table 279: Fields on the ALG Page

Field	Description
Main	

Table 279: Fields on the ALG Page *(Continued)*

Field	Description
Enable PPTP	Select the check box to enable the Point-to-Point Tunneling Protocol (PPTP) for ALG. PPTP is a Layer 2 protocol that tunnels PPP data across TCP/IP networks. The PPTP client is freely available on Windows systems and is widely deployed for building VPNs.
Enable RSH	Select the check box to enable RSH for ALG. The RSH ALG handles TCP packets destined for port 514 and processes the RSH port command. The RSH ALG performs NAT on the port in the port command and opens gates as necessary.
Enable RTSP	Select the check box to enable the Real-Time Streaming Protocol (RTSP) for ALG.
Enable SQL	Select the check box to enable Structured Query Language (SQL) for ALG. The SQLNET ALG processes SQL TNS response frames from the server side. It parses the packet and looks for the (HOST=ipaddress), (PORT=port) pattern and performs NAT and gate opening on the client side for the TCP data channel.
Enable TALK	Select the check box to enable the TALK protocol for ALG. The TALK protocol uses UDP port 517 and port 518 for control-channel connections. The talk program consists of a server and a client. The server handles client notifications and helps to establish talk sessions. There are two types of talk servers: ntalk and talkd. The TALK ALG processes packets of both ntalk and talkd formats. It also performs NAT and gate opening as necessary.
Enable TFTP	Select the check box to enable the Trivial File Transfer Protocol (TFTP) for ALG. The TFTP ALG processes TFTP packets that initiate a request and opens a gate to allow return packets from the reverse direction to the port that sends the request.
DNS	
Enable DNS	Select the check box to enable the domain name system (DNS) for ALG. The DNS ALG monitors DNS query and reply packets and closes the session if the DNS flag indicates the packet is a reply message.

Table 279: Fields on the ALG Page *(Continued)*

Field	Description
Doctoring	Select one of the following options: - Sanity Check—Performs only DNS ALG sanity checks. - None—Disables all DNS ALG doctoring.
Maximum Message length	Select a number to specify the maximum DNS message length. Range: 512 through 8192 bytes.
Enable Oversize message drop.	Select the check box to enable oversize message drop.
FTP	
Enable FTP	Select the check box to enable the File Transfer Protocol (FTP) for ALG. The FTP ALG monitors PORT, PASV, and 227 commands. It performs Network Address Translation (NAT) on IP/port in the message and gate opening on the device as necessary. The FTP ALG supports FTP put and FTP get command blocking. When FTP_NO_PUT or FTP_NO_GET is set in the policy, the FTP ALG sends back a blocking command and closes the associated opened gate when it detects an FTP STOR or FTP RETR command.
Enable allow mismatch IP address	Select the check box to allow any mismatch in IP address.
Enable FTPs Extension	Select the check box to enable secure FTP and FTP SSL protocols.
Enable line Break Extension	Select the check box to enable line-break-extension. This option will enable the FTP ALG to recognize the LF as line break in addition to the standard CR+LF (carriage return, followed by line feed).
H323	

Table 279: Fields on the ALG Page *(Continued)*

Field	Description
Enable H323	Select the check box to enable the H.323 ALG.
Application Screen	Specify the security screens for the H.323 protocol ALG. Enter the following details: • Message Flood Gatekeeper Threshold—Enter a value. The value range is 1 to 50000 messages per second. Limits the rate per second at which remote access server (RAS) requests to the gatekeeper are processed. Messages exceeding the threshold are dropped. This feature is disabled by default. • Action on receiving unknown message: • Enable Permit NAT Applied—Select the check box to specify how unidentified H.323 (unsupported) messages are handled by the device. The default is to drop unknown messages. Permitting unknown messages can compromise security and is not recommended. However, in a secure test or production environment, this statement can be useful for resolving interoperability issues with disparate vendor equipment. By permitting unknown H.323 messages, you can get your network operational and later analyze your VoIP traffic to determine why some messages were being dropped. This statement applies only to received packets identified as supported VoIP packets. If a packet cannot be identified, it is always dropped. If a packet is identified as a supported protocol, the message is forwarded without processing. • Enable Permit Routed—Select the check box to specify that unknown messages be allowed to pass if the session is in route mode. Sessions in transparent mode are treated as though they are in route mode.
DSCP Code Rewrite	Code Point—Select a 6-bit string from the list. Specifies a rewrite-rule for the traffic that passes through a voice over IP Application Layer Gateway (VoIP ALG). The value of code point is in binary format. The VoIP rewrite rules modifies the appropriate class of service (CoS) bits in an outgoing packet through Differentiated Services Code Point (DSCP) mechanism that improves the VoIP quality in a congested network.

Table 279: Fields on the ALG Page *(Continued)*

Field	Description
Endpoints	Enter the following details: - Timeout For Endpoint—Enter a timeout value in seconds for entries in the NAT table. Range: 10 through 50,000 seconds Controls the duration of the entries in the NAT table. - Enable Permit Media From Any Source Port—Select this option to allow media traffic from any port number.
IKE-ESP	
Enable IKE-ESP	Select the check box to enable IKE-ESP.
ESP Gate Timeout (sec)	Select the gate timeout from 2 to 30 seconds.
ESP Session Timeout (sec)	Select the ESP timeout session from 60 to 2400 seconds.
ALG State Timeout (Sec)	Select the ALG state time out from 180 to 86400 sec.
MGCP	
Enable MGCP	Select the check box to enable the Media Gateway Control Protocol (MGCP).
Inactive Media Timeout	Select a value to specify the maximum amount of time that the temporary openings in the firewall (pinholes) remain open for media if no activity is detected. range is from 10 through 2,550 seconds. Specifies the maximum time (in seconds) a call can remain active without any media (RTP or RTCP) traffic within a group. Each time an RTP or RTCP packet occurs within a call, this timeout resets. When the period of inactivity exceeds this setting, the temporary openings (pinholes) in the firewall MGCP ALG opened for media are closed. The default setting is 120 seconds; the range is from 10 to 2550 seconds. Note that, upon timeout, while resources for media (sessions and pinholes) are removed, the call is not terminated.

Table 279: Fields on the ALG Page (Continued)

Field	Description
Maximum Call Duration	Select a value from 3 through 720 minutes. Sets the maximum length of a call. When a call exceeds this parameter setting, the MGCP ALG tears down the call and releases the media sessions. The default setting is 720 minutes; the range is from 3 to 720 minutes.
Transaction Timeout	Enter a value from 3 through 50 seconds to specify Specifies a timeout value for MGCP transactions. A transaction is a signaling message, for example, a NTFY from the gateway to the call agent or a 200 OK from the call agent to the gateway. The device tracks these transactions and clears them when they time out.
Application Screen	Enter the following details: • Message Flood Threshold—Enter a value from 2 through 50,000 seconds per media gateway. Limits the rate per second at which message requests to the Media Gateway are processed. Messages exceeding the threshold are dropped by the Media Gateway Control Protocol (MGCP). This feature is disabled by default. • Connection Flood Threshold—Enter a value from 2 through 10,000. Limits the number of new connection requests allowed per Media Gateway (MG) per second. Messages exceeding the ALG. • Action On Receiving Unknown Message—Enter any of the following: • Enable Permit NAT Applied—Select the check box to specify how unidentified MGCP messages are handled by the Juniper Networks device. The default is to drop unknown (unsupported) messages. Permitting unknown messages can compromise security and is not recommended. However, in a secure test or production environment, this statement can be useful for resolving interoperability issues with disparate vendor equipment. By permitting unknown MGCP (unsupported) messages, you can get your network operational and later analyze your VoIP traffic to determine why some messages were being dropped. • Enable Permit Routed—Select the check box. Specifies that unknown messages be allowed to pass if the session is in route mode. (Sessions in transparent mode are treated as route mode.)

Table 279: Fields on the ALG Page *(Continued)*

Field	Description
DSCP Code Rewrite	Specifies a code-point alias or bit set to apply to a forwarding class for a rewrite rule. Code Point—Enter a six-bit DSCP code point value.
MSRPC	
Enable MSRPC	Select the check box to enable the MSRPC. Provides a method for a program running on one host to call procedures in a program running on another host. Because of the large number of RPC services and the need to broadcast, the transport address of an RPC service is dynamically negotiated based on the service program's Universal Unique Identifier (UUID). The specific UUID is mapped to a transport address.
Maximum Group Usage (%)	Select the group usage % from 10 to 100%.
Map Entry Timeout (min)	Select the map entry timeout session from 5 to 4320 minutes.
SCCP	
Enable SCCP	Select the check box to enable the Skinny Client Control Protocol.
Inactive Media Timeout	Select a value from 10 through 600 seconds. Indicates the maximum length of time (in seconds) a call can remain active without any media (RTP or RTCP) traffic within a group. Each time an RTP or RTCP packet occurs within a call, this timeout resets. When the period of inactivity exceeds this setting, the gates opened for media are closed.
Application Screen	Call Flood Threshold—Select a value from 2 through 1,000. Protects SCCP ALG clients from flood attacks by limiting the number of calls they attempt to process.

Table 279: Fields on the ALG Page *(Continued)*

Field	Description
Action On Receiving Unknown Messages	• Enable Permit NAT Applied—Select the check box. Specifies how unidentified SCCP messages are handled by the device. The default is to drop unknown (unsupported) messages. Permitting unknown messages can compromise security and is not recommended. However, in a secure test or production environment, this statement can be useful for resolving interoperability issues with disparate vendor equipment. By permitting unknown SCCP (unsupported) messages, you can get your network operational and later analyze your VoIP traffic to determine why some messages were being dropped. This statement applies only to received packets identified as supported VoIP packets. If a packet cannot be identified, it is always dropped. If a packet is identified as a supported protocol, the message is forwarded without processing. • Enable Permit Routed—Select the check box. Specifies that unknown messages be allowed to pass if the session is in route mode. (Sessions in transparent mode are treated as though they are in route mode.)
DSCP Code Rewrite	Code Point—Enter a six-bit DSCP code point value.
SIP	
Enable SIP	Select the check box to enable Session Initiation Protocol (SIP).
Enable Retain Hold Resource	Select the check box to enable whether the device frees media resources for a SIP, even when a media stream is placed on hold. By default, media stream resources are released when the media stream is held.
Maximum Call Duration	Select a value from 3 through 720 minutes. Sets the absolute maximum length of a call. When a call exceeds this parameter setting, the SIP ALG tears down the call and releases the media sessions. The default setting is 720 minutes, the range is from 3 to 720 minutes.

Table 279: Fields on the ALG Page *(Continued)*

Field	Description
C Timeout	Select a value from 3 through 10 minutes. Specifies the INVITE transaction timeout at the proxy, in minutes; the default is 3. Because the SIP ALG is in the middle, instead of using the INVITE transaction timer value B (which is $(64 * T1) = 32$ seconds), the SIP ALG gets its timer value from the proxy.
T4 Interval	Select a value from 5 through 10 seconds. Specifies the maximum time a message remains in the network. The default is 5 seconds; the range is 5 through 10 seconds. Because many SIP timers scale with the T4-Interval (as described in RFC 3261), when you change the value of the T4-Interval timer, those SIP timers also are adjusted.
Inactive Media Timeout	Select a value from 10 through 2,550 seconds. Specifies the maximum time (in seconds) a call can remain active without any media (RTP or RTCP) traffic within a group. Each time an RTP or RTCP packet occurs within a call, this timeout resets. When the period of inactivity exceeds this setting, the temporary openings (pinholes) in the firewall SIP ALG opened for media are closed. The default setting is 120 seconds; the range is 10 through 2550 seconds. Note that, upon timeout, while resources for media (sessions and pinholes) are removed, the call is not terminated.
T1 Interval	Select a value from 500 through 5000 milliseconds. Specifies the round-trip time estimate, in seconds, of a transaction between endpoints. The default is 500 milliseconds. Because many SIP timers scale with the T1-Interval (as described in RFC 3261), when you change the value of the T1-Interval timer, those SIP timers also are adjusted.

Table 279: Fields on the ALG Page (Continued)

Field	Description
Application Screen	Action On Receiving Unknown Message: • Enable Permit NAT Applied—Select the check box to enable handling unidentified SIP messages by the device. This statement applies only to received packets identified as supported VoIP packets. If a packet cannot be identified, it is always dropped. If a packet is identified as a supported protocol, the message is forwarded without processing. • Enable Permit Routed—Select the check box to enable to allow unknown messages to pass if the session is in route mode. (Sessions in transparent mode are treated as route mode.)
Protect Options	• SIP Invite Attack Table Entry Timeout—Enter a value from 1 through 3,600 seconds. Specifies the time (in seconds) to make an attack table entry for each INVITE, which is listed in the application screen. • Enable Attack Protection—Select one of the options: All Servers, Selected Servers, or None. Protects servers against INVITE attacks. Configures the SIP application screen to protect the server at some or all destination IP addresses against INVITE attacks. When you select Selected Servers, enter the destination IP address and click +. You can select the destination IP address and click X to delete it.
DSCP Code Rewrite	Code Point—Enter a six-bit DSCP code point value.
SUNRPC	
Enable SUNRPC	Select the check box to enable SUNRPC. Because of the large number of RPC services and the need to broadcast, the transport address of an RPC service is dynamically negotiated based on the service's program number and version number. Several binding protocols are defined for mapping the RPC program number and version number to a transport address.

Table 279: Fields on the ALG Page *(Continued)*

Field	Description
Maximum Group Usage (%)	Select the maximum group usage % from 10 to 100%.
Map Entry Timeout	Select the map entry timeout session from 5 to 4320 minutes.

Metadata Streaming Profile

IN THIS CHAPTER

- [About the Metadata Streaming Profile Page | 1022](#)
- [Configure DNS Filter | 1024](#)
- [Create a Metadata Streaming Profile | 1025](#)
- [Edit a Metadata Streaming Profile | 1028](#)
- [Delete a Metadata Streaming Profile | 1028](#)

About the Metadata Streaming Profile Page

IN THIS SECTION

- [Tasks You Can Perform | 1022](#)
- [Field Descriptions | 1023](#)

You are here: **Security Services > Metadata Streaming Profile.**

You can create a metadata streaming profile and assign it to a metadata streaming policy to protect and defend your network from advanced threats using DNS.

Tasks You Can Perform

- Associate the created metadata streaming profiles with metadata streaming policies. To do this:
 1. Click **Metadata Streaming Policy** link under the Metadata Streaming Profile page title to directly navigate to the Metadata Streaming Policy page.
 2. Click + to add a new metadata streaming policy configuration or click the pencil icon to edit an existing policy configuration.

3. Select the metadata streaming profile under Metadata Streaming Profile to a specific policy configuration. For more information on assigning the metadata streaming profile to a metadata streaming policy, see ["Create a Metadata Streaming Policy" on page 779](#).
- Configure DNS filter. See ["Configure DNS Filter" on page 1024](#).
 - Create a metadata streaming profile. See ["Create a Metadata Streaming Profile" on page 1025](#).
 - Edit a metadata streaming profile. See ["Edit a Metadata Streaming Profile" on page 1028](#).
 - Delete a metadata streaming profile. See ["Delete a Metadata Streaming Profile" on page 1028](#).
 - Show or hide columns in the Metadata Streaming Profile table. To do this, use the Show Hide Columns icon in the upper-right corner of the page and select the options to show or deselect to hide options on the page.
 - Advanced search for metadata streaming profiles. To do this, use the search text box present above the table grid. The search includes the logical operators as part of the filter string. In the search text box, when you hover over the icon, it displays an example filter condition. When you start entering the search string, the icon indicates whether the filter string is valid or not.

For an advanced search:

1. Enter the search string in the text box.

Based on your input, a list of items from the filter context menu appears.

2. Select a value from the list and then select a valid operator to perform the advanced search operation.

NOTE: Press Spacebar to add an AND operator or an OR operator to the search string. Press backspace at any point of time while entering a search criteria, only one character is deleted.

3. Press Enter to display the search results in the grid.

Field Descriptions

[Table 280 on page 1024](#) describes the fields on the Metadata Streaming Profile page.

Table 280: Fields on the Metadata Streaming Profile Page

Field	Description
Name	Displays the metadata streaming profile name.
DGA Detection	Displays the action and logs that the SRX Series Firewall will take when a DGA-based attack is detected on DNS packets.
Tunnel Detection	Displays the action and logs that the SRX Series Firewall will take when a DNS tunneling is detected.
Encrypted Traffic Insights	Displays the action and logs that the SRX Series Firewall will take when a malicious threats are detected. The detection is made when malicious threats are hidden in an encrypted traffic without intercepting and decrypting the traffic.

RELATED DOCUMENTATION

[Create a Metadata Streaming Profile](#) | 1025

Configure DNS Filter

You are here: **Security Services > Metadata Streaming Profile.**

Configure the settings for filtering DNS requests for allowed and disallowed domains.

To configure DNS filter:

1. Click **DNS Filter** on the upper-right corner of the Metadata Streaming Profile page.
The DNS Filter page opens.
2. Complete the configuration according to the guidelines provided in [Table 281 on page 1025](#).
3. Click **OK** to save the changes. To discard your changes, click **Cancel**.

Table 281: Fields on the DNS Filter Page

Field	Action
Allowlist	Allowlist logs the DNS request and allows the access. To configure the allowlist: - Click +. - Enter a domain to allow the access. - Click the tick icon on the upper right of the row once done with the configuration.
Blocklist	Blocklist blocks access to the site by sending the client a DNS response that includes an IP address or domain name of a sinkhole server instead of the disallowed domain. To configure the blocklist: - Click +. - Enter a domain to block. - Click the tick icon on the upper right of the row once done with the configuration.

RELATED DOCUMENTATION

[About the Metadata Streaming Profile Page](#) | 1022

Create a Metadata Streaming Profile

You are here: **Security Services** > **Metadata Streaming Profile**.

Create a metadata streaming profile to protect and defend your network from advanced threats using DNS.

To create a metadata streaming profile:

1. Click **+** on the upper-right corner of the Metadata Streaming Profile page.
The Create Metadata Streaming Profile page opens.
 2. Complete the configuration according to the guidelines provided in [Table 282 on page 1026](#).
 3. Click **OK** to save the changes. To discard your changes, click **Cancel**.
- Once you create the metadata streaming profile, you can associate it with metadata streaming policies.

Table 282: Fields on the Create Metadata Streaming Profile Page

Field	Action
Name	Enter a name for the metadata streaming profile. The name must be a unique string and can include alphabets, numbers, or special characters, and 64 characters maximum. Special characters such as & ()] ? " # are not allowed.
DGA detection	
DGA detection	Enable to detect DGA-based attacks on DNS packets.
Action	Select an action that the SRX Series Firewall will take when a detection is made: • Deny—Drops DGA session. • Sinkhole—Drops the DGA session and sinkholes the domain. • Permit—Permits DGA session.
Logs	Select an action to log the event: • Log detections—(Recommended) Generates log only for malicious DNS detections. Log everything—Generates log for every request (malicious or not) that passes through the device.
Tunnel detection	

Table 282: Fields on the Create Metadata Streaming Profile Page *(Continued)*

Field	Action
Tunnel detection	Enable to detect DNS tunneling.
Action	Select an action that the SRX Series Firewall will take when a detection is made: • Deny—Drops tunnel session. • Sinkhole—Drops the tunnel session and sinkholes the domain. • Permit—Permits tunnel session.
Logs	Select an action to log the event: • Log detections—(Recommended) Generates log only for malicious tunnel detections. Log everything—Generates log for every request (malicious or not) that passes through the device.
Encrypted Traffic Insights (ETI)	
Encrypted Traffic Insights (ETI)	Enable to detect malicious threats that are hidden in encrypted traffic without intercepting and decrypting the traffic.
Action	Permits security metadata streaming actions.
Logs	Enable to log all security metadata streaming actions.

RELATED DOCUMENTATION

[About the Metadata Streaming Profile Page | 1022](#)

[Edit a Metadata Streaming Profile | 1028](#)

[Delete a Metadata Streaming Profile | 1028](#)

Edit a Metadata Streaming Profile

You are here: **Security Services** > **Metadata Streaming Profile**.

To edit a metadata streaming profile:

1. Select an existing metadata streaming profile to edit on the Metadata Streaming Profile page.
2. Click the pencil icon available on the upper-right corner of the page.

The Edit Metadata Streaming Profile page opens with editable fields. For more information on the options, see "[Create a Metadata Streaming Profile](#)" on page 1025.

3. Click **OK** to save the changes.

RELATED DOCUMENTATION

[About the Metadata Streaming Profile Page | 1022](#)

[Delete a Metadata Streaming Profile | 1028](#)

Delete a Metadata Streaming Profile

You are here: **Security Services** > **Metadata Streaming Profile**.

To delete metadata streaming profile(s):

1. Select one or more metadata streaming profiles to delete on the Metadata Streaming Profile page.
2. Click the delete icon available on the upper-right corner of the page.
3. Click **Yes** to delete the profile or click **No** to retain the profile.

RELATED DOCUMENTATION

[About the Metadata Streaming Profile Page | 1022](#)

[Create a Metadata Streaming Profile | 1025](#)

[Edit a Metadata Streaming Profile | 1028](#)

ATP Anti-malware

IN THIS CHAPTER

- [About the Anti-malware Page | 1029](#)
- [Create an Anti-malware Profile | 1031](#)
- [Edit an Anti-malware Profile | 1037](#)
- [Delete an Anti-malware Profile | 1038](#)

About the Anti-malware Page

IN THIS SECTION

- [Tasks You Can Perform | 1029](#)
- [Field Descriptions | 1031](#)

You are here: **Security Services > Advanced Threat Prevention > Anti-malware.**

SRX Series Firewalls use intelligence provided by Juniper Advanced Threat Prevention Cloud (Juniper ATP Cloud) to remediate malicious content using security policies. If configured, security policies block the content before it is delivered to the destination address.

The anti-malware profile defines the content to scan for any malware and the action to be taken when malware is detected. Juniper ATP Cloud uses a pipeline approach to analyzing and detecting malware. If an analysis reveals that the file is malware, it is not necessary to continue the pipeline to further examine the malware.

Tasks You Can Perform

You can perform the following tasks from this page:

- Associate anti-malware profiles with security policies. To do this:
 1. Click **Security Policies** under the Anti-malware page title to directly navigate to the Security Policies page.
 2. Click + to add a new rule or click the pencil icon to edit an existing rule.
 3. Select the anti-malware profile under Advance Services to a specific policy. For more information, see ["Add a Rule to a Security Policy" on page 731](#).
- Create an anti-malware profile. See ["Create an Anti-malware Profile" on page 1031](#).
- Edit an anti-malware profile. See ["Edit an Anti-malware Profile" on page 1037](#).
- Delete an anti-malware profile. See ["Delete an Anti-malware Profile" on page 1038](#).
- Clone an anti-malware profile. To do this:
 1. Select an existing anti-malware profile to clone.
 2. Select **Clone** from the More link.

The Clone Anti-malware Profile page opens with editable fields. For more information on the options, see ["Create an Anti-malware Profile" on page 1031](#).
- Show or hide columns in the Anti-malware table. To do this, use the Show Hide Columns icon in the upper-right corner of the page, and select the options to show or deselect to hide options on the page.
- Advanced search for anti-malware profile. To do this, use the search text box present above the table grid. The search includes the logical operators as part of the filter string. In the search text box, when you hover over the icon, it displays an example filter condition. When you start entering the search string, the icon indicates whether the filter string is valid or not.

For an advanced search:

1. Enter the search string in the text box.

Based on your input, a list of items from the filter context menu opens.

2. Select a value from the list and then select a valid operator to perform the advanced search operation.

NOTE: Press Spacebar to add an AND operator or an OR operator to the search string. Press backspace at any point of time while entering a search criteria, only one character is deleted.

3. Press Enter to display the search results in the grid.

Field Descriptions

[Table 283 on page 1031](#) describes the fields on the Anti-malware page.

Table 283: Fields on the Anti-malware Page

Field	Description
Name	Displays the anti-malware profile name.
Verdict threshold	Displays the threshold value to determine when a file is considered malware.
Protocols	Displays whether the protocol is HTTP, IMAP, SMB, and/or SMTP. Mouse over the protocol name to view the configuration details of inspection profile, action, and logs.
Additional Logging	Displays whether the additional logs configured are files under verdict threshold, Allowlist, and/or Blocklist.

Create an Anti-malware Profile

You are here: **Security Services > Advanced Threat Prevention > Anti-malware.**

Configure the anti-malware profiles for SRX Series Firewall. The profile lets you define which files to send to the cloud for inspection and the action to be taken when malware is detected.

To create an anti-malware profile:

1. Click **+** on the upper-right corner of the Anti-malware page.
The Create Anti-malware Profile page opens.
2. Complete the configuration according to the guidelines provided in [Table 284 on page 1032](#).
3. Click **OK** to save the changes. To discard your changes, click **Cancel**.

Once you create the anti-malware profile, you can associate it with the security policies.

Table 284: Fields on the Create Anti-malware Profile Page

Field	Action
Name	Enter a name for the anti-malware profile. The name must be a unique string of alphanumeric, special characters and 64 characters maximum. Special characters such as & ()] ? " # are not allowed.
Verdict threshold	Select a threshold value from the list. The threshold value determines when a file is considered malware. If the cloud service returns a file verdict equal to or higher than the configured threshold, then that file is considered as malware.
Protocols	

Table 284: Fields on the Create Anti-malware Profile Page (*Continued*)

Field	Action
HTTP	Enable this option to inspect advanced anti-malware (AAMW) files downloaded by hosts through HTTP protocol. The AAMW files are then submitted to Juniper ATP Cloud for malware screening. Once you enable this option, configure the following: • Action (known verdict)—Select Permit or Block action from the list based on the detected malware. • Action (unknown verdict)—Select Permit or Block action from the list based on the detected malware having a verdict of “unknown.” • Notification—Select one of the following options to permit or block actions based on detected malware: • Redirect URL—Enter HTTP URL redirection for a customized client notification based on detected malware with the block action. • Redirect message—Enter the message for a customized client notification based on detected malware with the block action. Range: 1 through 1023 • File name—Click Browse to upload a customized file to which users will be directed. The files must be in .php, .html, or .py format and the files will be stored in <code>/jail/var/tmp</code>. • Inspection profile—Select a Juniper Advanced Threat Prevention (ATP) Cloud profile name from the list. The ATP Cloud profile defines the types of files to scan. To view the default and other inspection profiles on the SRX Series Firewall, your device must be enrolled with Juniper ATP Cloud. • Logs—Enable this option to add the event to the log file.

Table 284: Fields on the Create Anti-malware Profile Page (*Continued*)

Field	Action
IMAP	Enable this option to inspect and manage email attachments sent over IMAP email management. Once you enable this option, configure the following: • Inspection profile—Select a Juniper Advanced Threat Prevention (ATP) Cloud profile name from the list. The ATP Cloud profile defines the types of files to scan. To view the default and other inspection profiles on the SRX Series Firewall, your device must be enrolled with Juniper ATP Cloud. • Logs—Enable this option to add the event to the log file.
SMB	Enable this option to inspect files downloaded by hosts through Server Message Block (SMB) protocol. SMB protocol enables applications or users to access files and other resources on a remote server. Once you enable this option, configure the following: • Action—Select Permit or Block action from the list based on the downloaded files. • Inspection profile—Select a Juniper Advanced Threat Prevention (ATP) Cloud profile name from the list. The ATP Cloud profile defines the types of files to scan. To view the default and other inspection profiles on the SRX Series Firewall, your device must be enrolled with Juniper ATP Cloud. • Logs—Enable this option to add the event to the log file.

Table 284: Fields on the Create Anti-malware Profile Page (*Continued*)

Field	Action
SMTP	Enable this option to inspect and manage email attachments sent over SMTP email management. Once you enable this option, configure the following: • Inspection profile—Select a Juniper Advanced Threat Prevention (ATP) Cloud profile name from the list. The ATP Cloud profile defines the types of files to scan. To view the default and other inspection profiles on the SRX Series Firewall, your device must be enrolled with Juniper ATP Cloud. • Logs—Enable this option to add the event to the log file.
Fallback Actions	
Global fallback action	Select None , Permit , or Block action from the list to permit or block the file regardless of its threat level.
Logs	Enable this option to add the event to the log file.

Table 284: Fields on the Create Anti-malware Profile Page (*Continued*)

Field	Action
Specific Fallback Configurations	- Invalid content size: - Select None, Permit, or Block action from the list if the content size exceeds the supported range (32 MB). - Logs—Enable this option to add the event to the log file. - Out of resource action - Select None, Permit, or Block action from the list if the service is out of resources. - Logs—Enable this option to add the event to the log file. - Service not ready action - Select None, Permit, or Block action from the list if the service is not yet ready. - Logs—Enable this option to add the event to the log file. - Submission timeout action - Select None, Permit, or Block action from the list if the submission is timed out. - Logs—Enable this option to add the event to the log file. - Unknown file action: - Select None, Permit, or Block action from the list if the file type is unknown. - Logs—Enable this option to add the event to the log file. - Verdict timeout action

Table 284: Fields on the Create Anti-malware Profile Page (*Continued*)

Field	Action
	- Select None, Permit, or Block action from the list if the verdict response is timed out. - Logs—Enable this option to add the event to the log file.
Additional Logging	
Files under verdict threshold	Enable this option to create a system log entry when the file verdict number is less than the threshold.
Blocklist	Enable this option to create a system log entry when an attempt is made to access that are listed in the blocklist.
Allowlist	Enable this option to create a system log entry when an attempt is made to access that are listed in the allowlist.

RELATED DOCUMENTATION

[About the Anti-malware Page | 1029](#)

[Edit an Anti-malware Profile | 1037](#)

[Delete an Anti-malware Profile | 1038](#)

Edit an Anti-malware Profile

You are here: **Security Services > Advanced Threat Prevention > Anti-malware.**

To edit an anti-malware profile:

1. Select an existing anti-malware profile to edit.
2. Click the pencil icon on the upper-right corner of the Anti-malware page.

The Edit Anti-malware Profile page opens with editable fields. For more information on the options, see ["Create an Anti-malware Profile" on page 1031](#).

Alternatively, you can right-click on the selected anti-malware profile and select **Edit**.

3. Click **OK** to save the changes.

RELATED DOCUMENTATION

[About the Anti-malware Page | 1029](#)

[Create an Anti-malware Profile | 1031](#)

[Delete an Anti-malware Profile | 1038](#)

Delete an Anti-malware Profile

You are here: **Security Services > Advanced Threat Prevention > Anti-malware**.

To delete anti-malware profiles:

1. Select one or more existing anti-malware profiles to delete.
2. Click the delete icon on the upper-right corner of the Anti-malware page.
Alternatively, you can right-click on the selected anti-malware profile and select **Delete**.
3. Click **Yes** to delete or click **No** to retain the profile.

RELATED DOCUMENTATION

[About the Anti-malware Page | 1029](#)

[Create an Anti-malware Profile | 1031](#)

[Edit an Anti-malware Profile | 1037](#)

ATP SecIntel Profiles

IN THIS CHAPTER

- [About the SecIntel Profiles Page | 1039](#)
- [Configure DNS Sinkhole | 1042](#)
- [Create a Command and Control Profile | 1043](#)
- [Edit a Command and Control Profile | 1046](#)
- [Delete a Command and Control Profile | 1046](#)
- [Create a DNS Profile | 1047](#)
- [Edit a DNS Profile | 1048](#)
- [Delete a DNS Profile | 1049](#)
- [Create an Infected Hosts Profile | 1050](#)
- [Edit an Infected Hosts Profile | 1052](#)
- [Delete an Infected Hosts Profile | 1053](#)

About the SecIntel Profiles Page

IN THIS SECTION

- [Tasks You Can Perform | 1040](#)
- [Field Descriptions | 1041](#)

You are here: **Security Services > Advanced Threat Prevention > SecIntel Profiles.**

Juniper Networks Security Intelligence (SecIntel) provides carefully curated and verified threat intelligence from industry-leading threat feeds to SRX Series Firewalls. This enables blocking malicious and unwanted traffic such as Command and Control (C&C) communications, GeolP, Attacker IPs, and

more with minimum latency. SecIntel delivers real-time threat intelligence by enabling automatic and responsive traffic filtering.

Configure SecIntel profiles to work with security intelligence feeds, such as C&C, DNS, and infected hosts. The Security Intelligence process is responsible for downloading the security intelligence feeds and parsing from the feed connector or ATP Cloud feed server. Anything that matches these scores is considered malware or an infected host.

Tasks You Can Perform

You can perform the following tasks from this page:

- View the list of C&C, DNS, and infected hosts profiles. To do this, select **All**, **Command & Control**, **DNS**, or **Infected Hosts** from the View by list.
- Configure DNS sinkhole. See ["Configure DNS Sinkhole" on page 1042](#).
- Create a C&C profile. See ["Create a Command and Control Profile" on page 1043](#).
- Edit a C&C profile. See ["Edit a Command and Control Profile" on page 1046](#).
- Delete a C&C profile. See ["Delete a Command and Control Profile" on page 1046](#).
- Create a DNS profile. See ["Create a DNS Profile" on page 1047](#).
- Edit a DNS profile. See ["Edit a DNS Profile" on page 1048](#).
- Delete a DNS profile. See ["Delete a DNS Profile" on page 1049](#).
- Create an infected hosts profile. See ["Create an Infected Hosts Profile" on page 1050](#).
- Edit an infected hosts profile. See ["Edit an Infected Hosts Profile" on page 1052](#).
- Delete an infected hosts profile. See ["Delete an Infected Hosts Profile" on page 1053](#).
- Clone a C&C, DNS, or an infected hosts profile. To do this:
 1. Select an existing C&C, DNS, or an infected hosts profile to clone from the SecIntel Profiles page.
 2. Select **Clone** from the More link.

The Clone *<Command & Control, DNS, or Infected Hosts>* Profile page opens with editable fields.

- Show or hide columns in the SecIntel Profiles table. To do this, use the Show Hide Columns icon in the upper-right corner of the page, and select the options to show or deselect to hide options on the page.
- Advanced search for SecIntel profiles. To do this, use the search text box present above the table grid. The search includes the logical operators as part of the filter string. In the search text box, when

you hover over the icon, it displays an example filter condition. When you start entering the search string, the icon indicates whether the filter string is valid or not.

For an advanced search:

- 1. Enter the search string in the text box.

Based on your input, a list of items from the filter context menu appears.

- 2. Select a value from the list and then select a valid operator to perform the advanced search operation.

NOTE: Press Spacebar to add an AND operator or an OR operator to the search string. Press backspace at any point of time while entering a search criteria, only one character is deleted.

- 3. Press Enter to display the search results in the grid.

Field Descriptions

Table 285 on page 1041 describes the fields on the SecIntel Profiles page.

Table 285: Fields on the SecIntel Profiles Page

Field	Description
Name	Displays the SecIntel profile name.
Type	Displays if the SecIntel profile is a C&C, a DNS, or an infected hosts profile.
Feeds	Displays the feeds that are associated with the C&C, DNS, or infected hosts profile.
Block Action	Displays the notification action taken with the block action. For example, Redirect URL, Redirect Message, and Sinkhole.
Description	Displays the description of the SecIntel profile.

Configure DNS Sinkhole

You are here: **Security Services > Advanced Threat Prevention > SecIntel Profiles.**

Configure DNS sinkhole to identify and block DNS requests for the disallowed domains by resolving the domains to a sinkhole server or by rejecting the DNS requests.

To configure DNS sinkhole:

1. Click **DNS Sinkhole**.
The DNS Sinkhole page opens.
2. Complete the configuration according to the guidelines provided in [Table 286 on page 1042](#).
3. Click **OK** to save the changes. To discard your changes, click **Cancel**.

Table 286: Fields on the DNS Sinkhole Page

Field	Action
IPv4 address	Enter IPv4 address of Juniper Networks or external sinkhole server.
FQDN	Enter Fully qualified domain name (FQDN) that must be sent in the DNS response for the sinkhole servers. By default, sinkhole.junipersecurity.net is displayed when your SRX Series Firewall is enrolled with Juniper ATP Cloud.
IPv6 address	Enter IPv6 address of Juniper Networks or external sinkhole server.
DNS response TTL	Enter Time-to-live (TTL) value in seconds to send the DNS response after taking the DNS sinkhole action. Range: 0 through 3600. Default is 1800.
Server response error code	Select a DNS response error code from the list that must be sent for bad domains for server query type: • No error—No error response. • Refused—Refuse the DNS query. By default, this option will be selected.

Table 286: Fields on the DNS Sinkhole Page *(Continued)*

Field	Action
Text response error code	Select a DNS response error code from the list that must be sent for bad domains for text query type. • No error—No error response. • Refused—Refuse the text query. By default, this option will be selected.
Wildcard level	Select number of wildcarding levels that will be iteratively examined for a domain match. Range: 0 through 10. Default is 2.

RELATED DOCUMENTATION

[About the SecIntel Profiles Page](#) | 1039

Create a Command and Control Profile

You are here: **Security Services > Advanced Threat Prevention > SecIntel Profiles.**

Create a Command and Control (C&C) profile to provide information on C&C servers that have attempted to contact and compromise hosts on your network. A C&C server is a centralized computer that issues commands to botnets of compromised networks of computers and receives reports back from them.

To create a C&C profile:

1. Click **Create > Command & Control** on the upper-right corner of the SecIntel Profiles page. The Create Command & Control Profile page opens.
2. Complete the configuration according to the guidelines provided in [Table 287 on page 1044](#).
3. Click **OK** to save the changes. To discard your changes, click **Cancel**.

Once you create the C&C profile, you can associate it with the SecIntel profile groups.

Table 287: Fields on the Create Command & Control Profile page

Field	Action
Name	Enter a name for the C&C profile. The name must be a unique string of alphanumeric and special characters; 63-character maximum. Special characters < and > are not allowed.
Description	Enter a description for the C&C profile.
Default action for all feeds	Drag the slider to change the action to be taken for all the feed types. Actions are Permit (1 - 4), Log (5-6), and Block (7 - 10). Log will have the permit action and also logs the event.
Feeds & threat score	Do the following: a. Click + to define feeds and threat score to the C&C profile. The Add Feeds window appears. b. Enter the following details: i. Feeds—Select one or more feeds that are known command and control for botnets from the Available column and move it to the Selected column. ii. Threat score—Drag the slider to change the action to be taken based on the threat score. c. Click OK.

Table 287: Fields on the Create Command & Control Profile page *(Continued)*

Field	Action
Block action	Select one of the following block actions from the list: • Drop Packets—Device silently drops the session's packet and the session eventually times out. • Close session options—Device sends a TCP RST packet to the client and server and the session is dropped immediately.
Close session options	Select one of the following options from the list: None, Redirect URL, Redirect message, or File.
Redirect URL	Enter a remote file URL to redirect users when connections are closed.
Redirect message	Enter a custom message to send to the users when connections are closed.
Upload file	Click Browse to select and upload a file. This file is used to send to the users when connections are closed. NOTE: The files must be in .php, .html, or .py format and will be stored in /jail/var/tm

RELATED DOCUMENTATION

[About the SecIntel Profiles Page | 1039](#)

[Create a Command and Control Profile | 1043](#)

[Edit a Command and Control Profile | 1046](#)

[Delete a Command and Control Profile | 1046](#)

Edit a Command and Control Profile

You are here: **Security Services** > **Advanced Threat Prevention** > **SecIntel Profiles**.

To edit a Command & Control (C&C) profile:

NOTE: You can edit only the C&C profiles created in J-Web.

1. Select an existing C&C profile to edit.
2. Click the pencil icon on the upper-right corner of the SecIntel Profiles page.
The Edit Command & Control Profile page opens with editable fields. For more information on the options, See "[Create a Command and Control Profile](#)" on page 1043.
3. Click **OK** to save the changes.

RELATED DOCUMENTATION

[About the SecIntel Profiles Page](#) | 1039

[Create a Command and Control Profile](#) | 1043

[Delete a Command and Control Profile](#) | 1046

Delete a Command and Control Profile

You are here: **Security Services** > **Advanced Threat Prevention** > **SecIntel Profiles**.

To delete Command & Control (C&C) profile(s):

1. Select one or more existing C&C profiles to delete.

NOTE: Ensure that selected profiles are not mapped to the SecIntel profile groups.

2. Click the delete icon on the upper-right corner of the SecIntel Profile page.
3. Click **Yes** to delete or click **No** to retain the profile.

RELATED DOCUMENTATION

[About the SecIntel Profiles Page](#) | 1039

Create a DNS Profile

You are here: **Security Services > Advanced Threat Prevention > SecIntel Profiles.**

Create a DNS profile to configure feeds and threat score to list the domains that are known to be connected to malicious activity.

To create a DNS profile:

1. Click **Create > DNS** on the upper-right corner of the SecIntel Profiles page.
The Create DNS Profile page opens.
2. Complete the configuration according to the guidelines provided in [Table 288 on page 1047](#).
3. Click **OK** to save the changes. To discard your changes, click **Cancel**.

Once you create the DNS profile, you can associate it with the SecIntel profile groups.

Table 288: Fields on the Create DNS Profile Page

Field	Action
Name	Enter a name for the DNS profile. The name must be a unique string of alphanumeric and special characters; 63-character maximum. Special characters such as < and > are not allowed.
Description	Enter a description for the DNS profile.
Default action for all feeds	Drag the slider to change the action to be taken for all the feed types. Actions are Permit (1 - 4), Log (5-6), and Block (7 - 10). Log will have the permit action and also logs the event.

Table 288: Fields on the Create DNS Profile Page *(Continued)*

Field	Action
Feeds & threat score	Do the following: - Click + to define feeds and threat score to the DNS profile. The Add Feeds window appears. - Enter the following details: - Feeds—Select one or more feeds from the Available column and move it to the Selected column to associate with the DNS profile. - Threat score—Drag the slider to change the action to be taken based on the threat score. - Click OK.
Block action	Select one of the following block actions from the list: - Drop Packets—Device silently drops the session's packet and the session eventually times out. - Sinkhole—DNS sinkhole action for malicious DNS queries.

RELATED DOCUMENTATION

[About the SecIntel Profiles Page | 1039](#)

[Edit a DNS Profile | 1048](#)

[Delete a DNS Profile | 1049](#)

Edit a DNS Profile

You are here: **Security Services > Advanced Threat Prevention > SecIntel Profiles.**

To edit a DNS profile:

NOTE: You can edit only the DNS profiles created in J-Web.

1. Select an existing DNS profile to edit.
2. Click the pencil icon on the upper-right corner of the SecIntel Profiles page.
The Edit DNS Profile page opens with editable fields. For more information on the options, see ["Create a DNS Profile" on page 1047](#).
3. Click **OK** to save the changes.

RELATED DOCUMENTATION

[About the SecIntel Profiles Page | 1039](#)

[Create a DNS Profile | 1047](#)

[Delete a DNS Profile | 1049](#)

Delete a DNS Profile

You are here: **Security Services > Advanced Threat Prevention > SecIntel Profiles.**

To delete DNS profile(s):

1. Select one or more existing DNS profiles to delete.

NOTE: Ensure that selected profiles are not mapped to the SecIntel profile groups.

2. Click the delete icon on the upper-right corner of the SecIntel Profile page.
3. Click **Yes** to delete or click **No** to retain the profile.

RELATED DOCUMENTATION

[About the SecIntel Profiles Page | 1039](#)

[Create a DNS Profile | 1047](#)

[Edit a DNS Profile | 1048](#)

Create an Infected Hosts Profile

You are here: **Security Services > Advanced Threat Prevention > SecIntel Profiles.**

Create an infected hosts profile to configure feeds and threat score to list the IP address or IP subnet of the compromised host. Infected hosts indicate local devices that are potentially compromised because they appear to be part of a C&C network or exhibit other symptoms.

To create an infected hosts profile:

1. Click **Create > Infected Hosts** on the upper-right corner of the SecIntel Profiles page.
The Create Infected Hosts Profile page opens.
2. Complete the configuration according to the guidelines provided in [Table 289 on page 1050](#).
3. Click **OK** to save the changes. To discard your changes, click **Cancel**.

Once you create the infected hosts profile, you can associate it with the SecIntel profile groups.

Table 289: Fields on the Create Infected Hosts Profile Page

Field	Action
Name	Enter a name for the infected hosts profile. The name must be a unique string of alphanumeric and special characters; 63-character maximum. Special characters such as < and > are not allowed.
Description	Enter a description for the infected hosts profile.
Default action for all feeds	Drag the slider to change the action to be taken for all the feed types. Actions are Permit (1 - 4), Log (5-6), and Block (7 - 10). Log will have the permit action and also logs the event.

Table 289: Fields on the Create Infected Hosts Profile Page (*Continued*)

Field	Action
Feeds & threat score	Do the following: a. Click + to define feeds and threat score to the infected hosts profile. The Add Feeds window appears. b. Enter the following details: i. Feeds—Select one or more feeds from the Available column and move it to the Selected column to associate with the infected hosts profile. ii. Threat score—Drag the slider to change the action to be taken based on the threat score. c. Click OK.
Block action	Select one of the following block actions from the list: • Drop Packets—Device silently drops the session's packet and the session eventually times out. • Close session options—Device sends a TCP RST packet to the client and server and the session is dropped immediately.
Close session options	Select one of the following options from the list: None, Redirect URL, Redirect message, or File.
Redirect URL	Enter a remote file URL to redirect users when connections are closed.
Redirect message	Enter a custom message to send to the users when connections are closed.

Table 289: Fields on the Create Infected Hosts Profile Page *(Continued)*

Field	Action
Upload file	Click Browse to select and upload a file. This file is used to send to the users when connections are closed. NOTE: The files must be in .php, .html, or .py format and will be stored in /jail/var/tm

RELATED DOCUMENTATION

[About the SecIntel Profiles Page | 1039](#)

[Edit an Infected Hosts Profile | 1052](#)

[Delete an Infected Hosts Profile | 1053](#)

Edit an Infected Hosts Profile

You are here: **Security Services > Advanced Threat Prevention > SecIntel Profiles.**

To edit an infected hosts profile:

NOTE: You can edit only the infected hosts profiles created in J-Web.

1. Select an existing infected hosts profile to edit.
2. Click the pencil icon on the upper-right corner of the SecIntel Profiles page.
The Edit Infected Hosts Profile page opens with editable fields. For more information on the options, see "[Create an Infected Hosts Profile](#)" on page 1050.
3. Click **OK** to save the changes.

RELATED DOCUMENTATION

[About the SecIntel Profiles Page | 1039](#)

[Create an Infected Hosts Profile | 1050](#)

Delete an Infected Hosts Profile

You are here: **Security Services** > **Advanced Threat Prevention** > **SecIntel Profiles**.

To delete an infected hosts profile:

1. Select one or more existing infected hosts profiles to delete.

NOTE: Ensure that selected profiles are not mapped to the SecIntel profile groups.

2. Click the delete icon on the upper-right corner of the SecIntel Profile page.
3. Click **Yes** to delete or click **No** to retain the profile.

RELATED DOCUMENTATION

[About the SecIntel Profiles Page | 1039](#)

[Create an Infected Hosts Profile | 1050](#)

[Edit an Infected Hosts Profile | 1052](#)

ATP SecIntel Profile Groups

IN THIS CHAPTER

- [About the SecIntel Profile Groups Page | 1054](#)
- [Create a SecIntel Profile Group | 1056](#)
- [Edit a SecIntel Profile Group | 1058](#)
- [Delete a SecIntel Profile Group | 1058](#)

About the SecIntel Profile Groups Page

IN THIS SECTION

- [Tasks You Can Perform | 1054](#)
- [Field Descriptions | 1055](#)

You are here: **Security Services** > **Advanced Threat Prevention** > **SecIntel Profile Groups**.

Configure a SecIntel profile group to add SecIntel profiles, such as C&C, DNS, and infected hosts. Once created, you can assign this group to the security policy.

Tasks You Can Perform

You can perform the following tasks from this page:

- Associate SecIntel profile groups with Security Policies. To do this:
 1. Click **Security Policies** under the SecIntel Profile Groups page title to directly navigate to the Security Policies page.
 2. Click + to add a new rule or click the pencil icon to edit an existing rule.

3. Select the SecIntel profile group under Advance Services to a specific policy. For more information, see ["Add a Rule to a Security Policy" on page 731](#).
- Create a SecIntel profile group. See ["Create a SecIntel Profile Group" on page 1056](#).
 - Edit a SecIntel profile group. See ["Edit a SecIntel Profile Group" on page 1058](#).
 - Delete a SecIntel profile group. See ["Delete a SecIntel Profile Group" on page 1058](#).
 - Clone a SecIntel profile group. To do this:
 1. Select an existing a SecIntel profile group to clone.
 2. Select **Clone** from the More link.

The Clone SecIntel Profile Group page opens with editable fields. For more information on the options, see ["Create a SecIntel Profile Group" on page 1056](#).
 - Show or hide columns in the SecIntel Profile Groups table. To do this, use the Show Hide Columns icon in the upper-right corner of the page and select the options to show or deselect to hide options on the page.
 - Advanced search for SecIntel profile groups. To do this, use the search text box present above the table grid. The search includes the logical operators as part of the filter string. In the search text box, when you hover over the icon, it displays an example filter condition. When you start entering the search string, the icon indicates whether the filter string is valid or not.

For an advanced search:

1. Enter the search string in the text box.

Based on your input, a list of items from the filter context menu appears.

2. Select a value from the list and then select a valid operator based on which you want to perform the advanced search operation.

NOTE: Press Spacebar to add an AND operator or an OR operator to the search string. Press backspace at any point of time while entering a search criteria, only one character is deleted.

3. Press Enter to display the search results in the grid.

Field Descriptions

[Table 290 on page 1056](#) describes the fields on the SecIntel Profile Groups page.

Table 290: Fields on the SecIntel Profile Groups Page

Field	Description
Name	Displays the SecIntel profile group name.
Command & Control	Displays the C&C profile that you have associated with the SecIntel profile group.
DNS	Displays the DNS profile that you have associated with the SecIntel profile group.
Infected Hosts	Displays the infected hosts profile that you have associated with the SecIntel profile group.
Description	Displays the description for the SecIntel profile group.

Create a SecIntel Profile Group

You are here: **Security Services > Advanced Threat Prevention > SecIntel Profile Groups.**

Create a SecIntel profile group with SecIntel profiles, such as C&C, DNS, and infected hosts. Once created, you can assign this group to the security policy.

To create a SecIntel profile group:

1. Click **+** on the upper-right corner of the SecIntel Profile Groups page.
The Create SecIntel Profile Groups page opens.
2. Complete the configuration according to the guidelines provided in [Table 291 on page 1057](#).
3. Click **OK** to save the changes. To discard your changes, click **Cancel**.

Once you create the SecIntel profile group, you can associate it with the security policies.

Table 291: Fields on the Create SecIntel Profile Groups Page

Field	Action
Name	Enter a name for the SecIntel profile group. The name must be a unique string of alphanumeric, special characters and 64-character maximum. Special characters such as & ()] ? " # < > are not allowed.
Description	Enter description for the SecIntel profile group.
Command & Control	Select a C&C profile from the list to associate with the SecIntel profile group. Click Create New to create a new C&C profile inline. For more information on a new C&C profile, see "Create a Command and Control Profile" on page 1043.
DNS	Select a DNS profile from the list to associate with the SecIntel profile group. Click Create New to create a new DNS profile inline. For more information on a new DNS profile, see "Create a DNS Profile" on page 1047.
Infected Hosts	Select a infected hosts profile from the list to associate with the SecIntel profile group. Click Create New to create a new infected hosts profile inline. For more information on a new infected hosts profile, see "Create an Infected Hosts Profile" on page 1050.

RELATED DOCUMENTATION

[About the SecIntel Profile Groups Page | 1054](#)

[Edit a SecIntel Profile Group | 1058](#)

[Delete a SecIntel Profile Group | 1058](#)

Edit a SecIntel Profile Group

You are here: **Security Services** > **Advanced Threat Prevention** > **SecIntel Profile Groups**.

To edit a SecIntel profile group:

1. Select an existing SecIntel profile group to edit.
2. Click the pencil icon on the upper-right corner of the SecIntel Profile Groups page.
The Edit SecIntel Profile Groups page opens with editable fields. For more information on the options, see "[Create a SecIntel Profile Group](#)" on page 1056.

Alternatively, you can right-click on the selected SecIntel profile group and select **Edit**.

3. Click **OK** to save the changes.

RELATED DOCUMENTATION

[About the SecIntel Profile Groups Page](#) | 1054

[Create a SecIntel Profile Group](#) | 1056

[Delete a SecIntel Profile Group](#) | 1058

Delete a SecIntel Profile Group

You are here: **Security Services** > **Advanced Threat Prevention** > **SecIntel Profile Groups**.

To delete SecIntel profile group(s):

1. Select an existing SecIntel profile group to delete.
2. Click the delete icon on the upper-right corner of the SecIntel Profile Groups page.
3. Click **Yes** to delete or click **No** to retain the profile group.

RELATED DOCUMENTATION

[About the SecIntel Profile Groups Page](#) | 1054

[Create a SecIntel Profile Group](#) | 1056

[Edit a SecIntel Profile Group](#) | 1058

SSL Initiation Profiles

IN THIS CHAPTER

- [About the SSL Initiation Profile Page | 1059](#)
- [Add an SSL Initiation Profile | 1061](#)
- [Edit an SSL Initiation Profile | 1064](#)
- [Delete SSL Initiation Profile | 1065](#)

About the SSL Initiation Profile Page

IN THIS SECTION

- [Tasks You Can Perform | 1059](#)
- [Field Descriptions | 1060](#)

You are here: **Security Services** > **SSL Profiles** > **SSL Initiation**.

You can configure SSL Initiation profiles.

Tasks You Can Perform

You can perform the following tasks from this page:

- Add an SSL initiation profile. See ["Add an SSL Initiation Profile" on page 1061](#).
- Edit an SSL initiation profile. See ["Edit an SSL Initiation Profile" on page 1064](#).
- Delete SSL initiation profile. See ["Delete SSL Initiation Profile" on page 1065](#).

- Show or hide columns in the SSL Initiation Profile table. To do this, use the Show Hide Columns icon in the upper-right corner of the page and select the options you want to show or deselect to hide options on the page.
- Advance search for SSL initiation profile. To do this, use the search text box present above the table grid. The search includes the logical operators as part of the filter string. In the search text box, when you hover over the icon, it displays an example filter condition. When you start entering the search string, the icon indicates whether the filter string is valid or not.

For an advanced search:

1. Enter the search string in the text box.

Based on your input, a list of items from the filter context menu appears.

2. Select a value from the list and then select a valid operator based on which you want to perform the advanced search operation.

NOTE: Press Spacebar to add an AND operator or OR operator to the search string. Press backspace at any point of time while entering a search criteria, only one character is deleted.

3. Press Enter to display the search results in the grid.

Field Descriptions

Table 292 on page 1060 describes the fields on the SSL Initiation Profile page.

Table 292: Fields on the SSL Initiation Profile Page

Field	Description
Name	Displays the name of the SSL initiation profile.
Flow Tracing	Displays whether flow trace is enabled or disabled for troubleshooting policy-related issues.
Protocol Version	Displays the accepted protocol SSL version.

Table 292: Fields on the SSL Initiation Profile Page (Continued)

Field	Description
Preferred Cipher	Displays the preferred cipher which the SSH server uses to perform encryption and decryption function.
Session Cache	Displays whether SSL session cache is enabled or not.
Server Authentication Failure	Displays the action that will be performed if errors are encountered during the server certificate verification process (such as CA signature verification failure, self-signed certificates, and certificate expiry).
Certificate Revocation	Displays the criterion for certificate revocation for the SSL initiation profile.

RELATED DOCUMENTATION
[Add an SSL Initiation Profile | 1061](#)
[Edit an SSL Initiation Profile | 1064](#)
[Delete SSL Initiation Profile | 1065](#)

Add an SSL Initiation Profile

You are here: **Security Services > SSL Profiles > SSL Initiation.**

To add an SSL initiation profile:

1. Click **+** on the upper-right corner of the SSL Initiation Profile page.
The Create SSL Initiation Profile page appears.
2. Complete the configuration according to the guidelines provided in [Table 293 on page 1062](#).
3. Click **OK** to save the changes. If you want to discard your changes, click **Cancel**.

Table 293: Fields on the Create SSL Initiation Profile Page

Field	Action
General Information	
Name	Enter a unique name of the SSL initiation profile. The string must consist of alphanumeric characters, colons, periods, dashes, and underscores. No spaces are allowed; maximum length is 63 characters.
Flow Tracing	Select this option to enable flow trace for troubleshooting policy-related issues for this profile.
Protocol Version	Specifies the accepted protocol SSL version. Select the protocol from the list: None, All, TLSv1, TLSv1.1, or TLSv1.2.
Preferred Cipher	Specify the cipher depending on their key strength. Select a preferred cipher from the list: • Custom—Configure custom cipher suite and order of preference. • Medium—Use ciphers with key strength of 128 bits or greater. • Strong—Use ciphers with key strength of 168 bits or greater. • Weak—Use ciphers with key strength of 40 bits or greater.
Custom Ciphers	Select one or more Ciphers from the list. Click Clear All to clear the selected ciphers from the list.
Session Cache	Select this option to enable SSL session cache.
Certificate	

Table 293: Fields on the Create SSL Initiation Profile Page *(Continued)*

Field	Action
Trusted CA	Select the trusted certificate authority profile from the list. Specify the set of ciphers the SSH server can use to perform encryption and decryption functions. If this option is not configured, the server accepts any supported suite that is available.
Client Certificate	Specify a client certificate that is required to effectively authenticate the client. Select the appropriate client certificate from the list. • None • SSLRP_Automation_Cert_2 • SSLFP_Automation_Cert_1 • SSLRP_Automation_Cert_1 • SSLFP_Automation_Cert_2 • SSL2
Actions	
Server Authentication Failure	Select this option to ignore server authentication completely. In this case, SSL forward proxy ignores errors encountered during the server certificate verification process (such as CA signature verification failure, self-signed certificates, and certificate expiry). We do not recommend this option for authentication, because configuring it results in websites not being authenticated at all. However, you can use this option to effectively identify the root cause for dropped SSL sessions.

Table 293: Fields on the Create SSL Initiation Profile Page *(Continued)*

Field	Action
CRL Validation	Enable this option to disable CRL validation.
Action	Select an action from the list if CRL info is not present: • None • Allow • Drop
Hold Instruction Code	Select Ignore if you want to keep the instruction code on hold for this profile.

RELATED DOCUMENTATION

[About the SSL Initiation Profile Page | 1059](#)

[Edit an SSL Initiation Profile | 1064](#)

[Delete SSL Initiation Profile | 1065](#)

Edit an SSL Initiation Profile

You are here: **Security Services > SSL Profiles > SSL Initiation.**

To edit an SSL initiation profile:

1. Select the existing SSL initiation profile that you want to edit on the SSL Initiation Profile page.
2. Click the pencil icon available on the upper-right corner of the page.

The Edit an SSL Initiation Profile page appears with editable fields. For more information on the options, see ["Add an SSL Initiation Profile" on page 1061](#).

3. Click **OK** to save the changes.

RELATED DOCUMENTATION

[About the SSL Initiation Profile Page | 1059](#)

[Add an SSL Initiation Profile | 1061](#)

[Delete SSL Initiation Profile | 1065](#)

Delete SSL Initiation Profile

You are here: **Security Services > SSL Profiles > SSL Initiation.**

To delete an SSL initiation profile:

1. Select an SSL initiation profile that you want to delete on the SSL Initiation Profile page.
2. Click the delete icon available on the upper-right corner of the page.
3. Click **Yes** to delete or click **No** to retain the profile.

RELATED DOCUMENTATION

[About the SSL Initiation Profile Page | 1059](#)

[Add an SSL Initiation Profile | 1061](#)

[Edit an SSL Initiation Profile | 1064](#)

SSL Proxy Profiles

IN THIS CHAPTER

- [About the SSL Proxy Page | 1066](#)
- [Add an SSL Proxy Profile | 1069](#)
- [Clone an SSL Proxy Profile | 1075](#)
- [Edit an SSL Proxy Profile | 1076](#)
- [Delete a SSL Proxy Profile | 1076](#)

About the SSL Proxy Page

IN THIS SECTION

- [Tasks You Can Perform | 1066](#)
- [Field Descriptions | 1067](#)

You are here: **Security Services > SSL Profiles > SSL Proxy.**

You can create, add, edit, and delete SSL proxy or global policy configurations.

Tasks You Can Perform

You can perform the following tasks from this page:

- Configure global policy. To do this, click **Global Config** at the upper-right corner of the table and enter the session cache timeout in seconds.
- Add an SSL proxy profile. See ["Add an SSL Proxy Profile" on page 1069](#).
- Edit an SSL proxy profile. See ["Edit an SSL Proxy Profile" on page 1076](#).

- Delete SSL proxy profile. See ["Delete a SSL Proxy Profile" on page 1076](#).
- Clone an SSL proxy profile. See ["Clone an SSL Proxy Profile" on page 1075](#).
- View the details of an SSL proxy profile—To do this, select the SSL proxy profile for which you want to view the details and follow the available options:
 - Click **More** and select **Detailed View**.
 - Right-click on the selected SSL proxy profile and select **Detailed View**.
 - Mouse over to the left of the selected SSL proxy profile and click **Detailed View**.
- Deselect the selected SSL proxy profiles. To do this, click **More** and select **Clear All Selections**.
- Show or hide columns in the SSL Proxy Profiles table. To do this, click the Show Hide Columns icon in the upper-right corner of the custom objects table and select the options you want to view or deselect the options you want to hide on the page.
- Advance search for SSL proxy profiles. To do this, use the search text box present above the table grid. The search includes the logical operators as part of the filter string. In the search text box, when you hover over the icon, it displays an example filter condition. When you start entering the search string, the icon indicates whether the filter string is valid or not.

For an advanced search:

1. Enter the search string in the text box.

Based on your input, a list of items from the filter context menu appears.

2. Select a value from the list and then select a valid operator based on which you want to perform the advanced search operation.

NOTE: Press Spacebar to add an AND operator or OR operator to the search string. Press backspace at any point of time while entering a search criteria, only one character is deleted.

3. Press Enter to display the search results in the grid.

Field Descriptions

[Table 294 on page 1068](#) describes the fields on the SSL Proxy page.

Table 294: Fields on the SSL Proxy Page

Field	Description
Name	Displays the name of the SSL Proxy profile.
Protection Type	Displays the type of protection the profile provides. One is client protection and the other one is server protection. Client protection is for SSL forward proxy and server protection is for reverse proxy.
Preferred Cipher	Displays the category of the profile depending on their key strength.
Custom Cipher	Displays the custom cipher which the SSH server uses to perform encryption and decryption function.
Flow Tracing	Displays whether flow trace is enabled or disabled for troubleshooting policy-related issues.
Exempted Addresses	Displays the addresses to whitelists that bypass SSL forward proxy processing.
Server Auth Failure	Displays the action that will be performed if errors are encountered during the server certificate verification process (such as CA signature verification failure, self-signed certificates, and certificate expiry).
Session Resumption	Displays whether the session resumption is disabled or not.
Interface	Displays the name of the interface associated with the VLAN.
MAC Address	Displays the MAC address associated with the VLAN.

RELATED DOCUMENTATION

| [Add an SSL Proxy Profile](#) | 1069

Add an SSL Proxy Profile

You are here: **Security Services** > **SSL Profiles** > **SSL Proxy**.

To add an SSL proxy profile:

1. Click **+** on the upper-right corner of the SSL Proxy Profile page.
The Create SSL Proxy Profile page appears.
2. Complete the configuration according to the guidelines provided in [Table 295 on page 1069](#).
3. Click **OK** to save the changes. If you want to discard your changes, click **Cancel**.

Table 295: Fields on the Create SSL Proxy Profile Page

Field	Action
General Information	
Name	Enter a name of the SSL proxy profile. The string must contain alphanumeric characters, colons, periods, dashes, and underscores. No spaces are allowed; maximum length is 63 characters.
Preferred Cipher	Specifies the cipher depending on their key strength. Select a preferred cipher from the list: • Medium—Use ciphers with key strength of 128 bits or greater. • Strong—Use ciphers with key strength of 168 bits or greater. • Weak—Use ciphers with key strength of 40 bits or greater. • Custom—Configure custom cipher suite and order of preference.

Table 295: Fields on the Create SSL Proxy Profile Page *(Continued)*

Field	Action
Custom Ciphers	Specifies the set of ciphers the SSH server can use to perform encryption and decryption functions. If this option is not configured, the server accepts any supported suite that is available. Select the set of ciphers from the list: 1. <code>rsa-with-RC4-128-md5—RSA</code>, 128-bit RC4, MD5 hash 2. <code>rsa-with-RC4-128-sha—RSA</code>, 128-bit RC4, SHA hash 3. <code>rsa-with-des-cbc-sha—RSA</code>, DES/CBC, SHA hash 4. <code>rsa-with-3DES-ede-cbc-sha—RSA</code>, 3DES EDE/CBC, SHA hash 5. <code>rsa-with-aes-128-cbc-sha—RSA</code>, 128-bit AES/CBC, SHA hash 6. <code>rsa-with-aes-256-cbc-sha—RSA</code>, 256-bit AES/CBC, SHA hash 7. <code>rsa-export-with-rc4-40-md5—RSA-export</code>, 40-bit RC4, MD5 hash 8. <code>rsa-export-with-des40-cbc-sha—RSA-export</code>, 40-bit DES/CBC, SHA hash 9. <code>rsa-with-aes-256-gcm-sha384—RSA</code>, 256-bit AES/GCM, SHA384 hash 10. <code>rsa-with-aes-256-cbc-sha256—RSA</code>, 256-bit AES/CBC, SHA256 hash 11. <code>rsa-with-aes-128-gcm-sha256—RSA</code>, 128-bit AES/GCM, SHA256 hash 12. <code>rsa-with-aes-128-cbc-sha256—RSA</code>, 256-bit AES/CBC, SHA256 hash 13. <code>ecdhe-rsa-with-aes-256-gcm-sha384—ECDHE</code>, RSA, 256-bit AES/GCM, SHA384 hash

Table 295: Fields on the Create SSL Proxy Profile Page *(Continued)*

Field	Action
	14. ecdhe-rsa-with-aes-256-cbc-sha—ECDHE, RSA, 256-bit AES/CBC, SHA hash 15. ecdhe-rsa-with-aes-256-cbc-sha384—ECDHE, RSA, 256-bit AES/CBC, SHA384 hash 16. ecdhe-rsa-with-aes-3des-ede-cbc-sha—ECDHE, RSA, 3DES, EDE/CBC, SHA hash 17. ecdhe-rsa-with-aes-128-gcm-sha256—ECDHE, RSA, 128-bit AES/GCM, SHA256 hash 18. ecdhe-rsa-with-aes-128-cbc-sha—ECDHE, RSA, 128-bit AES/CBC, SHA hash 19. ecdhe-rsa-with-aes-128-cbc-sha256—ECDHE, RSA, 128-bit AES/CBC, SHA256 hash
Flow Trace	Select the check box to enable flow trace for troubleshooting policy-related issues. Else leave it blank.
Certificate Type	Specifies whether the certificate that you want to associate with this profile is a root CA or server certificate. Server certificate is used for SSL reverse proxy. If you choose server certificate, the trusted CA, CRL, and server auth failure options will not be available. For forward proxy profile, choose the root CA In a public key infrastructure (PKI) hierarchy, the root CA is at the top of the trust path. The root CA identifies the server certificate as a trusted certificate.
Certificate	Select the certificate that you want to associate with this SSL proxy profile from the list. Specifies the certificate that you created in the Administration > Certificate Management page of J-Web. In a public key infrastructure (PKI) hierarchy, the CA is at the top of the trust path. The CA identifies the server certificate as a trusted certificate.

Table 295: Fields on the Create SSL Proxy Profile Page *(Continued)*

Field	Action
Trusted Certificate Authorities	Select the trusted CA that are available on the device from the following options: All, None, Select specific. If you choose Select specific, you need to select the Certificate Authorities from the Available column and move it to the Selected column.
Exempted Addresses	Specifies addresses to create whitelists that bypass SSL forward proxy processing. Select the addresses from the from the Available column and move it to the Selected column. Because SSL encryption and decryption are complicated and expensive procedures, network administrators can selectively bypass SSL proxy processing for some sessions. Such sessions mostly include connections and transactions with trusted servers or domains with which network administrators are very familiar. There are also legal requirements to exempt financial and banking sites. Such exemptions are achieved by configuring the IP addresses or domain names of the servers under whitelists.
Exempted URL Categories	Specifies URL categories to create whitelists that bypass SSL forward proxy processing. Select URL categories from the from the Available column and move it to the Selected column. These URL categories are exempted during SSL inspection. Only the predefined URL categories can be selected for the exemption.
Actions	

Table 295: Fields on the Create SSL Proxy Profile Page *(Continued)*

Field	Action
Server Auth Failure	Select the check box to ignore server authentication completely. In this case, SSL forward proxy ignores errors encountered during the server certificate verification process (such as CA signature verification failure, self-signed certificates, and certificate expiry). We do not recommend this option for authentication, because configuring it results in websites not being authenticated at all. However, you can use this option to effectively identify the root cause for dropped SSL sessions.
Session Resumption	Select the check box if you do not want session resumption. To improve throughput and still maintain an appropriate level of security, SSL session resumption provides a session caching mechanism so that session information, such as the pre-master secret key and agreed-upon ciphers, can be cached for both the client and server.
Logging	Select an option from the list to generate logs. You can choose to log All events, Warning, Info, Errors, or different sessions (whitelisted, Allowed, Dropped, or Ignored).

Table 295: Fields on the Create SSL Proxy Profile Page *(Continued)*

Field	Action
Renegotiation	After a session is created and SSL tunnel transport has been established, a change in SSL parameters requires renegotiation. SSL forward proxy supports both secure (RFC 5746) and nonsecure (TLS v1.0 and SSL v3) renegotiation. You can specify whether to Allow nonsecure renegotiation, Allow-secure renegotiation, or Drop renegotiation. When session resumption is enabled, session renegotiation is useful in the following situations: • Cipher keys need to be refreshed after a prolonged SSL session. • Stronger ciphers need to be applied for a more secure connection. Select if a change in SSL parameters requires renegotiation. The options are: None (selected by default), Allow, Allow-secure, and Drop.
Certificate Revocation	Select the check box if you want to revoke the certificate.
If CRL info not present	Specifies if you want to allow or drop if CRL info is not present. Select the following actions from the list if CRL info is not present : Allow session, Drop session, or None.
Hold Instruction Code	Select Ignore if you want to keep the instruction code on hold.
Mirror Decrypt Traffic	

Table 295: Fields on the Create SSL Proxy Profile Page *(Continued)*

Field	Action
Interface	Select an SSL decryption port mirroring interface from the list. This is an Ethernet interface on SRX Series Firewall through which the copy of the SSL decrypted traffic is forwarded to a mirror port.
Only after Security Policies Enforcement	Select the check box to enable forwarding the copy of the decrypted traffic to the external mirror traffic collector after enforcing the Layer 7 security services through a security policy.
MAC Address	Enter the MAC address of the external mirror traffic collector port.

RELATED DOCUMENTATION

[About the SSL Proxy Page | 1066](#)

[Edit an SSL Proxy Profile | 1076](#)

[Delete a SSL Proxy Profile | 1076](#)

[Clone an SSL Proxy Profile | 1075](#)

Clone an SSL Proxy Profile

You are here: **Security Services > SSL Profiles > SSL Proxy.**

To clone an SSL proxy profile:

1. Select an SSL Proxy profile that you want to clone and select **Clone** from the More link.

NOTE: Alternatively, you can right-click on the selected SSL Proxy profile and select **Clone**.

The Clone SSL Proxy Profile page appears with editable fields. For more information on the options, see ["Add an SSL Proxy Profile" on page 1069](#).

2. Click **OK** to save the changes or click **Cancel** to discard the changes.

RELATED DOCUMENTATION

[About the SSL Proxy Page | 1066](#)

[Edit an SSL Proxy Profile | 1076](#)

[Delete a SSL Proxy Profile | 1076](#)

Edit an SSL Proxy Profile

You are here: **Security Services > SSL Profiles > SSL Proxy.**

To edit an SSL proxy profile:

1. Select the existing SSL proxy profile that you want to edit on the SSL Proxy Profile page.
2. Click the pencil icon available on the upper-right corner of the page.

The Update SSL Initiation Profile page appears with editable fields. For more information on the options, see ["Add an SSL Proxy Profile" on page 1069](#).

3. Click **OK** to save the changes.

RELATED DOCUMENTATION

[About the SSL Proxy Page | 1066](#)

[Delete a SSL Proxy Profile | 1076](#)

[Clone an SSL Proxy Profile | 1075](#)

Delete a SSL Proxy Profile

You are here: **Security Services > SSL Profiles > SSL Proxy.**

To delete SSL proxy profile(s):

1. Select one or more SSL proxy profiles that you want to delete on the SSL Proxy page.
2. Click the delete icon available on the upper-right corner of the page.
3. Click **Yes** to delete or click **No** to retain the profile.

RELATED DOCUMENTATION

About the SSL Proxy Page 1066
Add an SSL Proxy Profile 1069
Edit an SSL Proxy Profile 1076
Clone an SSL Proxy Profile 1075

Firewall Authentication—Access Profile

IN THIS CHAPTER

- [About the Access Profile Page | 1078](#)
- [Add an Access Profile | 1080](#)
- [Edit an Access Profile | 1087](#)
- [Delete an Access Profile | 1088](#)

About the Access Profile Page

IN THIS SECTION

- [Tasks You Can Perform | 1078](#)
- [Field Descriptions | 1079](#)

You are here: **Security Services** > **Firewall Authentication** > **Access Profile**.

Use this page to configure Access Profile. Access profiles enable you to define the authentication and accounting servers and their priorities.

Tasks You Can Perform

You can perform the following tasks from this page:

- Create an access profile. See ["Add an Access Profile" on page 1080](#).
- Edit an access profile. See ["Edit an Access Profile" on page 1087](#).
- Delete an access profile. See ["Delete an Access Profile" on page 1088](#).

- View the details of the Access profile—To do this, select the Access profile for which you want to view the details and follow the available options:
 - Click **More** and select **Detailed View**.
 - Right-click on the selected Access profile and select **Detailed View**.
 - Mouse over to the left of the selected Access profiles and click **Detailed View**.
- Show or hide columns in the Access Profile table. To do this, click Show Hide Columns icon in the upper-right corner of the Access Profiles table and select the columns you want to display or deselect the columns you want to hide on the page.
- Advance search for Access profile. To do this, use the search text box present above the table grid. The search includes the logical operators as part of the filter string. An example filter condition is displayed in the search text box when you hover over the Search icon. When you start entering the search string, the icon indicates whether the filter string is valid or not.

For an advanced search:

1. Enter the search string in the text box.

Based on your input, a list of items from the filter context menu appears.

2. Select a value from the list and then select a valid operator based on which you want to perform the advanced search operation.

NOTE: Press Spacebar to add an AND operator or OR operator to the search string. Press backspace to delete a character of the search string.

3. Press Enter to display the search results in the grid.

Field Descriptions

Table 296 on page 1079 describes the fields on the Access Profile page.

Table 296: Fields on the Access Profile Page

Field	Description
Profile Name	Displays the name of an access profile.

Table 296: Fields on the Access Profile Page (Continued)

Field	Description
Order 1	Shows the order in which Junos OS tries different authentication methods when verifying that a client can access the devices.
Order 2	Shows the next authentication method if the authentication method included in the authentication order option is not available, or if the authentication is available but returns a reject response.
Local Users	Displays the usernames that are created for accessing the application.
LDAP Servers	Displays the IP address of the LDAP authentication server.
RADIUS Servers	Displays the RADIUS server configuration.

RELATED DOCUMENTATION
[Add an Access Profile | 1080](#)
[Edit an Access Profile | 1087](#)
[Delete an Access Profile | 1088](#)
Add an Access Profile

You are here: **Security Services > Firewall Authentication > Access Profile.**

To add an access profile:

1. Click **+** on the upper-right corner of the Access Profile page.
The Create Access Profile page appears.
2. Complete the configuration according to the guidelines provided in [Table 297 on page 1081](#).
3. Click **OK** to save the changes. If you want to discard your changes, click **Cancel**.

Table 297: Fields on the Access Profile Page

Field	Description
Name	Enter a name for the access profile. The name must be a unique string of alphanumeric characters, colons, periods, dashes, and underscores. Maximum length is 64 characters.
Address assignment	Select an address pool from the list that can be used by different client applications. Click Create Address Pool to add a new address pool. For more information on creating a new address pool, see "Add an Address Pool" on page 1091. NOTE: If you have selected an address pool in Address Assignment, you need not assign an address pool for LDAP while creating allowed groups. NOTE: For junos-ike package installed platforms, address assignment supports IPv6 address in Juniper Secure Connect > Local Gateway > User Authentication > Create Access Profile > Create Address Pool.
Authentication	
Local	Select Local to configure local authentication services. To create a new local authentication user: - Click +. The Create Local Authentication User page appears. - Enter the following details: Username—Enter the user name of the user requesting access. Password—Enter the user password. XAUTH IP Address—Enter the IPv4 address for the client. Group—Enter the group name to store several user accounts together. - Click OK to save changes. To edit, select the local authentication user configuration and click the pencil icon. To delete, select the local authentication user configuration and click the delete icon.

Table 297: Fields on the Access Profile Page *(Continued)*

Field	Description
RADIUS	Select RADIUS to configure RADIUS authentication services. To create a new RADIUS server: - Click +. The Create RADIUS Server page appears. - Enter the following details: Address—Enter the IPv4 or IPv6 address of the RADIUS server. Secret—Enter the secret password to access the RADIUS server. Port—Enter the port number on which to contact the RADIUS server. Range is 1 through 65535. Default is 1812. Source virtual router—Select the source virtual router from the list. Source interface—Select a source interface (with IP configured) from the list. The IP address of the interface is configured as source address. Timeout—Enter the amount of time that the local device waits to receive a response from a RADIUS authentication server. Range is 1 through 1000 seconds. Default is 3. Retry—Enter the number of retries that a device can attempt to contact a RADIUS server. Range is 1 through 100 seconds. Default is 3. - Click OK to save changes. To edit, select the RADIUS server configuration and click the pencil icon. To delete, select the RADIUS server configuration and click the delete icon.

Table 297: Fields on the Access Profile Page *(Continued)*

Field	Description
LDAP	Select LDAP to configure LDAP authentication services. To create a new LDAP server: - Click +. The Create LDAP Server page appears. - Enter the following details: Address—Enter the IPv4 or IPv6 address of the LDAP server. Port—Enter the port number on which to contact the LDAP server. Range is 1 through 65535. Default is 389. Source virtual router—Select the source virtual router from the list. Source interface—Select a source interface (with IP configured) from the list. The IP address of the interface is configured as source address. Timeout—Enter the amount of time that the local device waits to receive a response from an LDAP authentication server. Range is 3 through 90. Default is 5. Retry—Enter the number of retries that a device can attempt to contact an LDAP server. Range is 1 through 10 seconds. Default is 5. - To configure LDAP over TLS/SSL, enter the following: Start TLS— Enable to configure LDAP over StartTLS. Peer name— Enter peer hostname in FQDN format. Timeout— Enter the number of of seconds to wait for the secure handshake to be initiated and to complete. Range is 3 through 90 seconds. Default is 5.

Table 297: Fields on the Access Profile Page (*Continued*)

Field	Description
	d. Minimum version— Select the minimum version of TLS protocol enabled in connections to negotiate the TLS connection with the LDAP server. Default is v1.2. e. Certification check— Enable certification check to validate LDAP server's certificate. 4. Click OK to save changes. To edit, select the LDAP server configuration and click the pencil icon. To delete, select the LDAP server configuration and click the delete icon.
LDAP Options	
Base Distinguished Name	Enter the base distinguished name that defines user's basic properties. For example, in the base distinguished name o=juniper, c=us, where c stands for country, and o for organization.
Revert Interval	Specifies the amount of time that elapses before the primary server is contacted if a backup server is being used. Use top/bottom arrows to provide the revert interval. Range is 60 through 4294967295.
LDAP Option Type	Select an LDAP option from the list: • None—No user LDAP distinguished name (DN). • Assemble—Indicates that a user's LDAP DN is assembled through the use of a common name identifier, the username, and base distinguished name. • Search—Indicates that a search is used to get a user's LDAP DN. The search is performed based on the search filter and the search text typed in by the user during authentication.
Common Name	Enter a common name identifier used as a prefix for the username during the assembly of the users distinguished name. This option is available when you select Assemble LDAP option type.

Table 297: Fields on the Access Profile Page *(Continued)*

Field	Description
Search Filter	Enter the name of the filter to find the users LDAP distinguished name. This option is available when you select Search LDAP option type.
Admin Search	Enable this option to perform an LDAP administrator search. By default, the search is an anonymous search. This option is available when you select Search LDAP option type.
Distinguished Name	Enter the distinguished name of an administrative user. The distinguished name is used in the bind for performing the LDAP search. This option is available when you select Admin Search is enabled.
Secret	Enter the plain-text password for the administrative user. This option is available when you select Admin Search is enabled.

Table 297: Fields on the Access Profile Page (*Continued*)

Field	Description
Allowed groups	NOTE: Starting in Junos OS Release 23.2R1, J-Web supports Allowed Groups option for Access Profile page. This option is not supported for SRX300 line of Firewalls and SRX550HM Firewall. Configure groups that are allowed to sign in. Users can configure maximum of 32 groups and group lists are limited to 255 bytes. The order in which the membership attribute is received from the LDAP server determines how a user is associated with the configured (allowed) groups. To match the user, the first group in the list received from the LDAP server that matches any of the configured groups is used. Any user who is a member of more than one group can obtain resources from either group, depending on the order of the LDAP server's response. To ensure that the user is assigned the intended resource with certainty, it is recommended that the user belong to only one group. To configure allowed groups: 1. Click + available above the allowed groups grid. 2. Enter a group name. 3. Select an address pool from the list. If you want to create a new address pool, click Create Address Pool. See "Add an Address Pool" on page 1091. NOTE: This step is optional if you have already selected an address pool in the Address Assignment option. 4. Click the tick icon to save changes. If you want to discard changes, click X instead. You can also edit and delete allowed groups using the edit icon and delete icon respectively.

Authentication Order

Table 297: Fields on the Access Profile Page *(Continued)*

Field	Description
Order 1	Select one or more of the following authentication methods: • NONE—No authentication for the specified user. • Local—Use local authentication services. • LDAP—Use LDAP. The SRX Series Firewall uses this protocol to get user and group information necessary to implement the integrated user firewall feature. • Radius—Use RADIUS authentication services. If RADIUS servers fail to respond or return a reject response, try local authentication, because it is explicitly configured in the authentication order.
Order 2	Select the authentication method from the list.

RELATED DOCUMENTATION

[About the Access Profile Page | 1078](#)

[Edit an Access Profile | 1087](#)

[Delete an Access Profile | 1088](#)

Edit an Access Profile

You are here: **Security Services > Firewall Authentication > Access Profile.**

To edit an access profile:

1. Select an existing access profile that you want to edit on the Access Profile page.
2. Click the pencil icon available on the upper-right corner of the page.

The Edit Access Profiles page appears with editable fields. For more information on editing the fields, see ["Add an Access Profile" on page 1080](#).

3. Click **OK** to save the changes or click **Cancel** to discard the changes.

RELATED DOCUMENTATION

[About the Access Profile Page | 1078](#)

[Add an Access Profile | 1080](#)

[Delete an Access Profile | 1088](#)

Delete an Access Profile

You are here: **Security Services** > **Firewall Authentication** > **Access Profile**.

To delete an access profile:

1. Select an access profile that you want to delete on the Access Profiles page.
2. Click the delete icon available on the upper-right corner of the page.
3. Click **Yes** to delete access profiles or click **No** to retain access profiles.

RELATED DOCUMENTATION

[About the Access Profile Page | 1078](#)

[Add an Access Profile | 1080](#)

[Edit an Access Profile | 1087](#)

Firewall Authentication—Address Pools

IN THIS CHAPTER

- [About the Address Pools Page | 1089](#)
- [Add an Address Pool | 1091](#)
- [Edit an Address Pool | 1094](#)
- [Delete Address Pool | 1095](#)
- [Search for Text in an Address Pools Table | 1095](#)

About the Address Pools Page

IN THIS SECTION

- [Tasks You Can Perform | 1089](#)
- [Field Descriptions | 1090](#)

You are here: **Security Services** > **Firewall Authentication** > **Address Pools**.

Use this page to get configure Address Pools.

Tasks You Can Perform

You can perform the following tasks from this page:

- Add Address Pool. See ["Add an Address Pool" on page 1091](#).
- Edit Address Pool. See ["Edit an Address Pool" on page 1094](#).
- Delete Address Pool. See ["Delete Address Pool" on page 1095](#).

- Search for Text in an Address Pools table. See ["Search for Text in an Address Pools Table" on page 1095](#).
- View the details of an address pool—To do this, select the address pool for which you want to view the details and follow the available options:
 - Click **More** and select **Detailed View**.
 - Right-click on the selected address pool and select **Detailed View**.
 - Mouse over to the left of the selected address pool and click **Detail_View**.
- Filter the address pool based on select criteria. To do this, select the filter icon at the upper-right corner of the address pool table. The columns in the grid change to accept filter options. Type the filter options; the table displays only the data that fits the filtering criteria.
- Show or hide columns in the address pool table. To do this, use the Show Hide Columns icon in the upper-right corner of the page and select the options you want to show or deselect to hide options on the page.

Field Descriptions

[Table 298 on page 1090](#) describes the fields on the Address Pools page.

Table 298: Fields on the Address Pools Page

Field	Description
Identifier	Specifies the name of the address pool.
Subnet	Specifies the IPv4 or IPv6 subnet configured.
Primary DNS	Specifies the primary-dns IP address.
Secondary DNS	Specifies the secondary-dns IP address.
Primary WINS	Specifies the primary-wins IP address.
Secondary WINS	Specifies the secondary-wins IP address.

Table 298: Fields on the Address Pools Page *(Continued)*

Field	Description
Named Address Ranges	Specifies the name of the address range.
Excluded Address Range	Specifies the range of address excluded for the address pool.
Static Address Range	Specifies the static address range for the address pool,
Linked Address Pool	Specifies the secondary address pool that is linked to the primary address pool.

RELATED DOCUMENTATION

[Add an Address Pool | 1091](#)

[Edit an Address Pool | 1094](#)

[Delete Address Pool | 1095](#)

[Search for Text in an Address Pools Table | 1095](#)

Add an Address Pool

You are here: **Security Services** > **Firewall Authentication** > **Address Pools**.

To add an address pool:

1. Click **+** on the upper-right corner of the Address Pools page.
The Create Address Pool page appears.
2. Complete the configuration according to the guidelines provided in [Table 299 on page 1091](#).
3. Click **OK** to save the changes. If you want to discard your changes, click **Cancel**.

Table 299: Fields on the Create Address Pool Page

Field	Description
Subnet	Enter the subnet for IPv4 or IPv6 address.

Table 299: Fields on the Create Address Pool Page *(Continued)*

Field	Description
Identifier	Enter the address pool name.
DNS servers	Enter the primary, secondary, or both DNS IP address.
WINS server	Enter the primary, secondary, or both WINS IP address. NOTE: This option will not be available if you enter an IPv6 subnet address.

Named Address Ranges**NOTE:** Named Address Range is not available for IPsec VPN.

Add	Click + to add a new named address range for the address pool.
Name	Enter a name for the IP address range.
From address	Enter the lower limit of the address range.
To address	Enter the upper limit of the address range and click the tick icon to save the changes. If you want to discard, click X.
Delete	Click the delete icon to delete the address range for the address pool.

Excluded Address Ranges

Add	Click + to add a new excluded address range for the address pool.
From address	Enter the lower limit of the address range.
To address	Enter the upper limit of the address range and click the tick icon to save the changes. If you want to discard, click X. NOTE: You can add up to maximum of 20 excluded addresses and 16 excluded address ranges.

Table 299: Fields on the Create Address Pool Page *(Continued)*

Field	Description
Delete	Click the delete icon to delete the excluded address range for the address pool.
Static Address Binding	
Assign static IP address for username	Enable to assign a static IP address for username. Disabled by default. NOTE: By default, this option will be enabled and hidden for IPsec VPN.
Add	Click + to add a new static address for the address pool.
Hostname	Enter a unique string that must begin with an alphanumeric character and can include periods, dashes, and underscores; no spaces allowed; 63-character maximum. NOTE: • Hostname should not be a duplicate. • Hostname field will be available only if you enable Assign static IP address for username.
Username	Enter a unique string that must begin with an alphanumeric character and can include periods, dashes, and underscores; no spaces allowed. NOTE: • Username should not be a duplicate. • Username field will be available only if you enable Assign static IP address for username.
IP address	Enter an IP address within the subnet entered. NOTE: IP address should not duplicate with other host name IP address.

Table 299: Fields on the Create Address Pool Page *(Continued)*

Field	Description
MAC address	Enter a valid MAC address and click the tick icon to save the changes. If you want to discard, click X. NOTE: • MAC address should not duplicate with other host name MAC address. • MAC address field will not be available if you enable Assign static IP address for username.
Delete	Click the delete icon to delete static address binding.
Linked address pool	Select an option from the list. To add a new secondary address pool, do the following: 1. Click Add. The Create Address Pool page appears. 2. Complete the configuration according to the guidelines provided in Table 299 on page 1091. 3. Click OK to save the changes. If you want to discard your changes, click Cancel. NOTE: You must link an IPv4/IPv6 subnet address pool with another IPv4/IPv6 address respectively.

RELATED DOCUMENTATION

[About the Address Pools Page | 1089](#)

[Edit an Address Pool | 1094](#)

[Delete Address Pool | 1095](#)

[Search for Text in an Address Pools Table | 1095](#)

Edit an Address Pool

You are here: **Security Services > Firewall Authentication > Address Pools.**

To edit an address pool:

1. Select an existing address pool that you want to edit on the Address Pools page.
2. Click the pencil icon available on the upper-right corner of the page.

The Edit Address Pool page appears with editable fields. For more information on the options, see ["Add an Address Pool" on page 1091](#).

3. Click **OK** to save the changes.

RELATED DOCUMENTATION

[About the Address Pools Page | 1089](#)

[Add an Address Pool | 1091](#)

[Delete Address Pool | 1095](#)

[Search for Text in an Address Pools Table | 1095](#)

Delete Address Pool

You are here: **Security Services > Firewall Authentication > Address Pools**.

To delete an address pool:

1. Select an address pool that you want to delete on the Address Pools page.
2. Click the delete icon available on the upper-right corner of the page.
3. Click **Yes** to delete or click **No** to retain the profile.

RELATED DOCUMENTATION

[About the Address Pools Page | 1089](#)

[Add an Address Pool | 1091](#)

[Edit an Address Pool | 1094](#)

[Search for Text in an Address Pools Table | 1095](#)

Search for Text in an Address Pools Table

You are here: **Security Services > Firewall Authentication > Address Pools**.

You can use the search icon in the upper-right corner of the Address Pools page to search for text containing letters and special characters on that page.

To search for text:

1. Click the search icon and enter partial text or full text of the keyword in the search bar.
The search results are displayed.
2. Click **X** next to a search keyword or click **Clear All** to clear the search results.

RELATED DOCUMENTATION

About the Address Pools Page	 1089
Add an Address Pool	 1091
Edit an Address Pool	 1094
Delete Address Pool	 1095

Firewall Authentication Settings

IN THIS CHAPTER

- [About the Authentication Settings Page | 1097](#)

About the Authentication Settings Page

IN THIS SECTION

- [Field Description | 1097](#)

You are here: **Security Services > Firewall Authentication > Authentication Settings.**

Use this page to configure firewall authentication. You can click the arrow pointing outwards icon to expand all the options or click the arrow pointing inwards to collapse or hide all the options.

To edit this page, configure minimum one access profile under **Security Services > Firewall Authentication > Access Profile.**

Field Description

To configure a firewall authentication:

1. Complete the configuration according to the guidelines provided in [Table 300 on page 1098](#).
2. Click **Save** to save the changes.

[Table 300 on page 1098](#) describes the fields on the Firewall Authentication page.

Table 300: Fields on the Firewall Authentication Page

Field	Description
Pass-through Settings	
Default Profile	Select a profile from the list that the policies use to authenticate users.
FTP Banners	
Login	Displays the login prompt for users logging in using FTP. Maximum characters are 250.
Success	Displays a successful login prompt for users logging in using FTP. Maximum characters are 250.
Fail	Displays failed login prompt for users logging in using FTP. Maximum characters are 250.
Telnet Banners	
Login	Displays the login prompt for users logging in using telnet. Maximum characters are 250.
Success	Displays a successful login prompt for users logging in using telnet. Maximum characters are 250.
Fail	Displays failed login prompt for users logging in using telnet. Maximum characters are 250.
HTTP Banner	
Login	Displays the login prompt for users logging in using HTTP.

Table 300: Fields on the Firewall Authentication Page *(Continued)*

Field	Description
Success	Displays a successful login prompt for users logging in using HTTP.
Fail	Displays failed login prompt for users logging in using HTTP.
Web-auth-settings	
Default Profile	Select a profile that the policies use to authenticate users.
Success	Displays a successful login prompt for users logging in using Web authentication banner.
Logo Image Upload	
Logo File	Indicates an image to be chosen for the Web authentication logo. NOTE: For the good logo image, the image format must be in .gif and the resolution must be 172x65.
Browse	Click the button to navigate to the logo image on the user's local disk.
Sync	Click the button to sync the logo image.
Restore	Click the button to restore the Web authentication logo.

RELATED DOCUMENTATION

[About the UAC Settings Page](#) | **1100**

Firewall Authentication—UAC Settings

IN THIS CHAPTER

- About the UAC Settings Page | 1100

About the UAC Settings Page

IN THIS SECTION

- Field Description | 1100

You are here: **Security Services > Firewall Authentication > UAC Settings.**

Use this page to configure UAC Settings.

Field Description

To configure UAC settings:

1. Complete the configuration according to the guidelines provided in [Table 301 on page 1100](#).
2. Click **Save** to save the changes.

[Table 301 on page 1100](#) describes the fields on the UAC Setting page.

Table 301: Fields on the UAC Setting Page

Field	Description

Global Settings

Table 301: Fields on the UAC Setting Page *(Continued)*

Field	Description
Certificate Verification	Determines whether server certificate verification is required when initiating a connection between a device and an Access Control Service in a UAC configuration. Select the following options from the list: • None—Certificate verification is not required. • Optional—Certificate verification is not required. If the CA certificate is not specified in the ca-profile option, the commit check passes and no warning is issued. • Required—Certificate verification is required. If the CA certificate is not specified in the ca-profile option, an error message is displayed, and the commit check fails. Use this option to ensure strict security. • Warning—Certificate verification is not required. A warning message is displayed during commit check if the CA certificate is not specified in the ca-profile option.
Interval	Specifies the value in seconds that the device should expect to receive a heartbeat signal from the IC Series device. Enter the heartbeat interval in seconds. Range: 1 through 9999.
Test Only Mode	Allows all traffic and log enforcement result. Enable the Test Only Mode option.
Timeout	Specifies (in seconds) that the device should wait to get a heartbeat response from an IC Series UAC Appliance. Enter the timeout in seconds. Range: 2 through 10000.
Timeout Action	Specifies the action to be performed when a timeout occurs and the device cannot connect to an Infranet Enforcer. Select the timeout action from the list.
Infranet Controller	

Table 301: Fields on the UAC Setting Page *(Continued)*

Field	Description
Infranet Controller	Click + to add an infranet controller. Click pencil icon to edit a selected infranet controller. Click delete icon to delete the selected infranet controller.
Name	Enter a name for the Infranet Controller.
IP address	Enter an IP address for the Infranet Controller.
Interface	Select an interface used for the Infranet Controller.
Interface	Enter the password to use for the Infranet Controller
CA Profiles	Select a CA from the list in the CA Profiles column and then click the right arrow to move them to the Selected column. NOTE: To deselect a CA, select the CA in the Selected column and then click the left arrow to move them to the CA Profiles column.
Port	Specifies the port number to be associated with this Infranet Controller for data traffic. Enter a value from 1 through 65,535.
Server Certificate Subject	Enter the server certificate subject name of the Infranet Controller certificate to match.
Captive Portal	
Captive Portal	Specifies the preconfigured security policy for captive portal on the Junos OS Enforcer. Click + to add a captive portal. Click pencil icon to edit a selected captive portal. Click delete icon to delete the selected captive portal.

Table 301: Fields on the UAC Setting Page *(Continued)*

Field	Description
Name	Enter a name for the captive portal.
Redirect Traffic	Select a traffic type to be redirected.
Redirect URL	Enter the URL to which the captive portal should be directed.

RELATED DOCUMENTATION

| [About the Application Tracking Page](#) | 837

Firewall Authentication—Active Directory

IN THIS CHAPTER

- About the Active Directory Page | 1104

About the Active Directory Page

You are here: **Security Services > Firewall Authentication > Active Directory.**

You can configure Active directory.

[Table 302 on page 1104](#) describes the fields on the Active Directory page.

Table 302: Fields on the Active Directory Page

Field	Description
General Information	
General	
No on Demand Probe	Enable the manual on-demand probing of a domain PC as an alternate method for the SRX Series Firewall to retrieve address-to-user mapping information.
Timeout	

Table 302: Fields on the Active Directory Page *(Continued)*

Field	Description
Authentication Entry Timeout	Set the timeout to 0 to avoid having the user's entry being removed from the authentication table after the timeout. NOTE: When a user is no longer active, a timer is started for that user's entry in the Active Directory authentication table. When the time is up, the user's entry is removed from the table. Entries in the table remain active as long as there are sessions associated with the entry. The default authentication entry timeout is 30 minutes. Starting in Junos OS Release 19.2R1, the default value is 60 minutes. To disable timeout, set the interval to zero. The range is 10 through 1440 minutes.
WMI Timeout	Enter the number of seconds that the domain PC has to respond to the SRX Series Firewall's query through Windows Management Instrumentation (WMI) or Distributed Component Object Module (DCOM). If no response is received from the domain PC within the wmi-timeoutinterval, the probe fails and the system either creates an invalid authentication entry or updates the existing authentication entry as invalid. If an authentication table entry already exists for the probed IP address, and no response is received from the domain PC within the wmi-timeout interval, the probe fails and that entry is deleted from the table. The range is 3 through 120 seconds.
Invalid Authentication Entry Timeout	Enter a value. The range is 10 through 1440 minutes. When a user is no longer active, a timer is started for that user's entry in the Active Directory authentication table. When the time is up, the user's entry is removed from the table. If this value is not configured, all the invalid auth entry from Active Directory will use the default value as 30 minutes. The range is 10 through 1440 minutes.
Firewall Authentication Forced Timeout	Enter a value. The range is 10 through 1440 minutes. This is the firewall authentication fallback time. Set the timeout to 0 to avoid having the user's entry being removed from the authentication table after the timeout.
Filter	

Table 302: Fields on the Active Directory Page *(Continued)*

Field	Description
Include	Enable to include IP addresses from the Available column. Click + to create a new IP address and add it as either include or exclude from monitoring. Click the Delete icon to delete a new IP address and add it as either include or exclude from monitoring.
Exclude	Enable to exclude IP addresses from the Available column. Click + to create a new IP address and add it as either include or exclude from monitoring. Click the Delete icon to delete a new IP address and add it as either include or exclude from monitoring.
Domain Settings	
Test	Click Test to check the Domain Connection status. test:Status page appears and displays the status.
+	Click + to add a domain. The Add Domain page appears. NOTE: - Starting in Junos OS Release 19.2R1, for SRX4200, SRX1500, SRX550M, and vSRX Virtual Firewall devices, and for the SRX5000 and SRX3000 lines of devices, you can configure the integrated user firewall in a maximum of two domains. For the other SRX Series Firewalls, you can create only one domain. - Starting in Junos OS Release 23.4R1, for SRX1600 and SRX2300 Firewalls, you can configure the integrated user firewall in a maximum of two domains. You can select the pencil icon to edit the domain or select delete icon to delete the domain.
General	

Table 302: Fields on the Active Directory Page *(Continued)*

Field	Description
Domain Name	Enter the name of the domain. The range for the domain name is 1 through 64 characters.
Username	Enter the password for the Active Directory account password. The range for the username is 1 through 64 characters. Example: admin
Password	Enter the username for the Active Directory account name. The range for the password is 1 through 128 characters. Example: A\$BC123
Domain Controller(s)	
Domain Controller(s)	Click + to add domain controller settings. - Domain Controller Name—Enter the domain controller name. Name can range from 1 through 64 characters. You can configure up to maximum of 10 domain controllers. - IP Address—Enter the IP address of the domain controller.
User Group Mapping (LDAP)	
User Group Mapping (LDAP)	Click +: - IP Address—Enter the IP address of the LDAP server. If no address is specified, the system uses one of the configured Active Directory domain controllers. - Port—Enter the port number of the LDAP server. If no port number is specified, the system uses port 389 for plaintext or port 636 for encrypted text. Default value is port 443.
Base Distinguish Name	Enter the LDAP base distinguished name (DN). Example: DC=example,DC=net

Table 302: Fields on the Active Directory Page (Continued)

Field	Description
Username	Enter the username of the LDAP account. If no username is specified, the system will use the configured domain controller's username.
Password	Enter the password for the account. If no password is specified, the system uses the configured domain controller's password.
Use SSL	Enable Secure Sockets Layer (SSL) to ensure secure transmission with the LDAP server. Disabled by default, then the password is sent in plaintext.
Authentication Algorithm	Enable this option to specify the algorithm used while the SRX Series Firewall communicates with the LDAP server. By default, simple is selected to configure simple(plaintext) authentication mode.
IP User Mapping	
Discovery Method (WMI)	Enable the method of discovering IP address-to-user mappings. WMI—Windows Management Instrumentation (WMI) is the discovery method used to access the domain controller. This option should be enabled only for internal hosts or trusted hosts.
Event Log Scanning Interval	Enter the scanning interval at which the SRX Series Firewall scans the event log on the domain controller. The range is 5 through 60 seconds. Default value is 60 seconds.
Initial Event Log TimeSpan	Enter the time of the earliest event log on the domain controller that the SRX Series Firewall will initially scan. This scan applies to the initial deployment only. After WMIC and the user identification start working, the SRX Series Firewall scans only the latest event log. The range is 1 through 168 hours. Default value is 1 hour.

Release History Table

Release	Description
19.2R1	Starting in Junos OS Release 19.2R1, the default value is 60 minutes.
19.2R1	Starting in Junos OS Release 19.2R1, for SRX4200, SRX1500, SRX550M, and vSRX Virtual Firewall devices, and for the SRX5000 and SRX3000 lines of devices, you can configure the integrated user firewall in a maximum of two domains. For the other SRX Series Firewalls, you can create only one domain.

RELATED DOCUMENTATION

[About the Authentication Priority Page](#) | **1113**

Firewall Authentication—Local Authentication

IN THIS CHAPTER

- [About the Local Authentication Page | 1110](#)
- [Add a Local Authentication Entry | 1111](#)
- [Delete a Local Authentication Entry | 1112](#)

About the Local Authentication Page

IN THIS SECTION

- [Tasks You Can Perform | 1110](#)
- [Field Descriptions | 1111](#)

You are here: **Security Services > Firewall Authentication > Local Authentication.**

Use this page to enable or disable authentication priority configuration options.

Tasks You Can Perform

You can perform the following tasks from this page:

- Create a local auth entry. See ["Add a Local Authentication Entry" on page 1111](#).
- Delete a local auth entry. See ["Delete a Local Authentication Entry" on page 1112](#).
- Clear all the local auth entry. To do this, select the local auth entries you want to clear and click **Clear All** at the upper-right corner of the table.

Field Descriptions

Table 303 on page 1111 describes the fields on the Local Auth page.

Table 303: Fields on the Local Auth Page

Field	Description
Filter by	Displays the local authentication configuration based on the selected filter.
IP	Displays the IP address.
Username	Displays the name of the user.
Role Name	Displays the list of roles assigned to the username.
Search	Select the filter you want and enter your inputs based on the filter type. Then, click the search icon to display the output based on your selected filter.

RELATED DOCUMENTATION

[Add a Local Authentication Entry | 1111](#)

[Delete a Local Authentication Entry | 1112](#)

Add a Local Authentication Entry

You are here: **Security Services > Firewall Authentication > Local Authentication.**

To add a local authentication entry:

1. Click **+** on the upper-right corner of the Local Authentication page.
The Add Local Auth Entry page appears.
2. Complete the configuration according to the guidelines provided in [Table 304 on page 1112](#).
3. Click **OK** to save the changes. If you want to discard your changes, click **Cancel**.

Table 304: Fields on the Add Local Auth Page

Field	Action
IP Address	Enter an IP address for the local authentication.
Username	Enter a username for the local authentication.
Role List	Enter roles for the local authentication entry. Enter the role and click + to add a role. To delete a role, select the role and click the delete (X) icon. To edit a role, hover over the role name and click the pencil icon. NOTE: You can configure only maximum of 200 roles for a local authentication entry.

RELATED DOCUMENTATION
[About the Local Authentication Page | 1110](#)
[Delete a Local Authentication Entry | 1112](#)

Delete a Local Authentication Entry

You are here: **Security Services > Firewall Authentication > Local Authentication.**

To delete a local authentication entry:

1. Select a local authentication entry that you want to delete on the Local Authentication page.
2. Click the delete icon available on the upper-right corner of the page.
3. Click **Yes** to delete or click **No** to retain the profile.

RELATED DOCUMENTATION
[About the Local Authentication Page | 1110](#)
[Add a Local Authentication Entry | 1111](#)

Firewall Authentication—Authentication Priority

IN THIS CHAPTER

- About the Authentication Priority Page | 1113

About the Authentication Priority Page

You are here: **Security Services** > **Firewall Authentication** > **Authentication Priority**.

Use this page to enable or disable authentication priority configuration options.

[Table 305 on page 1113](#) describes the fields on the Authentication Priority page.

Table 305: Fields on the Authentication Priority Page

Field	Description
Enable local authentication	Select the Enable local authentication check box to enable local authentication.
Priority	Enter a priority value (1 through 65,535) in the Priority field. NOTE: The default local authentication priority value is 100.
Enable firewall authentication	Select the check box to enable firewall authentication.
Priority	Enter a priority value (1 through 65,535) in the Priority field. NOTE: The default firewall authentication priority value is 150.
Enable unified access control	Select the check box to enable UAC authentication.

Table 305: Fields on the Authentication Priority Page *(Continued)*

Field	Description
Priority	Enter a priority value (1 through 65,535) in the Priority field. NOTE: The default local authentication priority value is 200.
Enable active directory	Select the check box to enable UAC authentication.
Priority	Enter a priority value (1 through 65,535) in the Priority field. NOTE: The default local authentication priority value is 125.
OK	Click OK to save the configuration changes.
Reset	Click Reset to set the priority values and enable options to the default configuration.

RELATED DOCUMENTATION

[About the Local Authentication Page | 1110](#)

Firewall Authentication—JIMS

IN THIS CHAPTER

- [About the Juniper Identity Management Service Page | 1115](#)
- [Add a Juniper Identity Management Service Profile | 1116](#)
- [Edit a Juniper Identity Management Service Profile | 1120](#)
- [Delete a Juniper Identity Management Service Profile | 1121](#)

About the Juniper Identity Management Service Page

IN THIS SECTION

- [Tasks You Can Perform | 1115](#)

You are here: **Security Services > Firewall Authentication > JIMS.**

You can add, edit or delete a Juniper Identity Management Services (JIMS) profile. You can also view the connection status of this SRX Series Firewall with the JIMS.

Tasks You Can Perform

You can perform the following tasks from this page:

- Add a Juniper Identity Management Service profile. See ["Add a Juniper Identity Management Service Profile" on page 1116](#).
- Edit a Juniper Identity Management Service profile. See ["Edit a Juniper Identity Management Service Profile" on page 1120](#).

- Delete a Juniper Identity Management Service profile. See ["Delete a Juniper Identity Management Service Profile" on page 1121.](#)

RELATED DOCUMENTATION

| [Add a Juniper Identity Management Service Profile](#) | 1116

Add a Juniper Identity Management Service Profile

You are here: **Security Services** > **Firewall Authentication** > **JIMS**.

To add a Juniper Identity Management Service (JIMS) profile:

1. Click **Configure** on the Juniper Identity Management Service page.
The Configure Juniper Identity Management Service Profile page appears.
2. Complete the configuration according to the guidelines provided in [Table 306 on page 1116.](#)
3. Click **Finish** to save the changes. If you want to discard your changes, click **Cancel**.

Table 306: Fields on the Configure Juniper Identity Management Service Profile Page

Field	Action
General Information	
Connection for Primary and Secondary Juniper Identity Management Service	
Connection Type	Select a connection type from the list. The options available are: HTTPS and HTTP.
Port	Enter the port number or press up or down arrow to either increment or decrement the port number. The default value is 443.
Primary IP Address	Enter a primary IP address of JIMS server.

Table 306: Fields on the Configure Juniper Identity Management Service Profile Page *(Continued)*

Field	Action
Primary CA Certificate	Specifies the primary certificate of the JIMS. SRX Series Firewall will use it to verify JIMS's certificate for SSL connection. Select Upload CA certificate to device or specify the path of the file on device.
Primary CA Certificate file upload	Enables you to locate and upload the CA certificate. Click Browse to locate the CA certificate on your device and click Upload the selected CA certificate.
Primary CA Certificate file path	Enter a file path of the primary CA certificate.
Primary Client ID	Enter a primary client ID of the SRX Series Firewall to obtain access token. It must be consistent with the configuration of the API client created on JIMS.
Primary Client Secret	Enter a password which enables you to access the primary identity management server. Specifies the client secret of the SRX Series Firewall to obtain access token. It must be consistent with the configuration of the API client created on JIMS.
Secondary Juniper Identity Management Service Server	Enables a secondary JIMS server, its IP address, CA certificate, client ID, and client secret. NOTE: If you enable, the Secondary IP Address, Secondary CA Certificate file upload, Secondary Client ID, Secondary Client Secret rows are displayed. Enter the IP address of the secondary server, browse and upload the secondary CA certificate, enter the secondary client ID and secret in the respective fields.

Table 306: Fields on the Configure Juniper Identity Management Service Profile Page (*Continued*)

Field	Action
Token API	Enter the token API to specify the path of the URL for acquiring access token. Default is 'oauth_token/oauth'.
Query API	Enter the path where the URL for querying user identities is located. Default is 'user_query/v2'. Click Next. The Advanced Settings page is displayed.
Advanced Settings	
Batch Query	
Item Per Batch	Specifies the maximum number of items in one batch query. Enter the number of items. Range is 100 to 1000 and the default number is 200.
Query Interval	Specifies the interval for querying the newly generated user identities. Enter the number of seconds you need between each query. The range is 1 through 60 (seconds), and the default value is 5.
IP Query	
Query Delay Time	Specifies the time delay to send individual IP query. Enter the time in seconds. The range is 0~60 (seconds). The default value is 15 seconds, which depends on the delay time of auth entry retrieved from JIMS to SRX.
No IP Query	Select the check box if you want to disable the IP query function that is enabled by default.

Table 306: Fields on the Configure Juniper Identity Management Service Profile Page (*Continued*)

Field	Action
Authentication Timeout	
Authentication Entry Timeout	Enter the value in minutes. The value range is 0 or 10~1440 (minutes). 0 means no need for a timeout. the default value is 60. Specifies the time out value for authentication entry in identity management. The timeout interval begins from when the authentication entry is added to the identity-management authentication table. If a value of 0 is specified, the entries will never expire.
Invalid Authentication Entry Timeout	Enter the value in minutes. The value range is 0 or 10~1440 (minutes). 0 means no need for a timeout. the default value is 60. Specifies the timeout value of invalid auth entry in the SRX Series authentication table for either Windows active directory or Aruba ClearPass.
Filter	
NOTE: You can select address set with maximum of 20 IP addresses and address set with wild card addresses.	
Include IP Address Book	Select an IP address book from the predefined address book in which an address set must be selected as IP filter.
Include IP Address Set	Specifies the predefined address set selected as IP filter. Select an IP address set from the list. To add a new address set for the IP address book, click Add New Address Set.
Exclude IP Address Book	Select an IP address book that you want identity management profile to exclude.

Table 306: Fields on the Configure Juniper Identity Management Service Profile Page (*Continued*)

Field	Action
Exclude IP Address Set	Select the predefined address set that you want identity management profile to exclude.
Filter to Domain	Enter one or more active directory domains, to the SRX Series Firewall. You can specify up to twenty domain names for the filter.

RELATED DOCUMENTATION

[About the Juniper Identity Management Service Page | 1115](#)

[Edit a Juniper Identity Management Service Profile | 1120](#)

[Delete a Juniper Identity Management Service Profile | 1121](#)

Edit a Juniper Identity Management Service Profile

You are here: **Security Services > Firewall Authentication > JIMS.**

To edit a Juniper Identity Management Service (JIMS) profile:

1. Select the existing JIMS profile that you want to edit on the Juniper Identity Management Service page.
2. Click the pencil icon available on the upper-right corner of the page.

The Edit a Juniper Identity Management Service Profile page appears with editable fields. For more information on the options, see "[Add a Juniper Identity Management Service Profile](#)" on page 1116.

3. Click **OK** to save the changes.

RELATED DOCUMENTATION

[About the Juniper Identity Management Service Page | 1115](#)

[Add a Juniper Identity Management Service Profile | 1116](#)

[Delete a Juniper Identity Management Service Profile | 1121](#)

Delete a Juniper Identity Management Service Profile

You are here: **Security Services** > **Firewall Authentication** > **JIMS**.

To delete a Juniper Identity Management Service (JIMS) profile:

1. Click the delete icon available on the upper-right corner of the Juniper Identity Management Service page.
2. Click **Yes** to delete or click **No** to retain the profile.

RELATED DOCUMENTATION

[About the Juniper Identity Management Service Page | 1115](#)

[Add a Juniper Identity Management Service Profile | 1116](#)

[Edit a Juniper Identity Management Service Profile | 1120](#)

ICAP Redirect

IN THIS CHAPTER

- [About the ICAP Redirect Profile Page | 1122](#)
- [Add an ICAP Redirect Profile | 1124](#)
- [Edit an ICAP Redirect Profile | 1127](#)
- [Delete ICAP Redirect Profile | 1127](#)

About the ICAP Redirect Profile Page

IN THIS SECTION

- [Tasks You Can Perform | 1122](#)
- [Field Descriptions | 1123](#)

You are here: **Security Services** > **ICAP Redirect**.

You can configure ICAP Redirect Profile.

Tasks You Can Perform

You can perform the following tasks from this page:

- Create an ICAP redirect profile. See ["Add an ICAP Redirect Profile" on page 1124](#).
- Edit an ICAP redirect profile. See ["Edit an ICAP Redirect Profile" on page 1127](#).
- Delete an ICAP redirect profile. See ["Delete ICAP Redirect Profile" on page 1127](#).

- Filter the ICAP redirect profiles based on select criteria. To do this, select the filter icon at the upper-right corner of the ICAP redirect profiles table. The columns in the grid change to accept filter options. Type the filter options; the table displays only the data that fits the filtering criteria.
- Show or hide columns in the ICAP redirect profiles table. To do this, click the Show Hide Columns icon in the upper-right corner of the ICAP redirect profiles table and select the options you want to view or deselect the options you want to hide on the page.
- Advance search for ICAP redirect profiles. To do this, use the search text box present above the table grid. The search includes the logical operators as part of the filter string. In the search text box, when you hover over the icon, it displays an example filter condition. When you start entering the search string, the icon indicates whether the filter string is valid or not.

For an advanced search:

1. Enter the search string in the text box.

Based on your input, a list of items from the filter context menu appears.

2. Select a value from the list and then select a valid operator based on which you want to perform the advanced search operation.

NOTE: Press Spacebar to add an AND operator or OR operator to the search string. Press backspace at any point of time while entering a search criteria, only one character is deleted.

3. Press Enter to display the search results in the grid.

Field Descriptions

Table 307 on page 1123 describes the fields on the ICAP Redirect Profile page.

Table 307: Fields on the ICAP Redirect Profile Page

Field	Description
Name	Displays the ICAP Service profile name.
Timeout	Displays the server response timeout in milliseconds.
Server	Displays the ICAP Redirection Server.

Table 307: Fields on the ICAP Redirect Profile Page *(Continued)*

Field	Description
Fallback Option	Specifies the request timeout action when the request is sent to the server.
HTTP Redirect	Enables redirect service on HTTP request/HTTP response.

RELATED DOCUMENTATION

[Add an ICAP Redirect Profile | 1124](#)

[Edit an ICAP Redirect Profile | 1127](#)

[Delete ICAP Redirect Profile | 1127](#)

Add an ICAP Redirect Profile

You are here: **Security Services > ICAP Redirect.**

To add an ICAP redirect profile:

1. Click **+** on the upper-right corner of the ICAP Redirect Profiles page.
The Create ICAP Redirect Profile page appears.
2. Complete the configuration according to the guidelines provided in [Table 308 on page 1124](#).
3. Click **OK** to save the changes. If you want to discard your changes, click **Cancel**.

Table 308: Fields on the Create ICAP Redirect Profile Page

Field	Action
Name	Enter a unique ICAP Service profile name. The string must contain alphanumeric characters, colons, periods, dashes, and underscores. No spaces are allowed; maximum length is 63 characters.
Timeout	Enter the server response timeout in milliseconds. The range is between 100 milliseconds to 50000 milliseconds.

Table 308: Fields on the Create ICAP Redirect Profile Page *(Continued)*

Field	Action
HTTP Redirect Option	
Request	Select to enable redirect service on HTTP request.
Response	Select to enable redirect service on HTTP response.
ICAP Server	
You can configure ICAP Redirection server by the following options:	
Add —Create an ICAP Redirect server. Enter information as specified in Table 309 on page 1125 .	
Edit —Edit an ICAP Redirect server configuration. Enter information as specified in Table 309 on page 1125 .	
Fallback Option	
Timeout Action	Select the timeout action from the list. The available options are: None, Permit, Log Permit, and Block.
Connectivity Action	Select the connectivity action from the list that the request cannot be sent out due to connection issues.
Default Action	Select a default action from the list to be taken when there are scenarios other than the above two mentioned ones.

Table 309: Fields on the Create ICAP Redirect Server Page

Field	Action
Name	Enter an ICAP Redirect server name. The string must contain alphanumeric characters, colons, periods, dashes, and underscores. No spaces are allowed; maximum length is 63 characters.
Host Type*	Select Name or IP address.

Table 309: Fields on the Create ICAP Redirect Server Page *(Continued)*

Field	Action
Host	Enter the host name or host IP address depending on what host type you choose.
Port	Specifies the port in the server. This is the server listening post and the default port will be reached according to protocol defined. Enter the port number. The range is 1025 through 65534.
Sockets	Specifies the number of connections to be created. Enter the number of connections. The range is 1 through 64.
Authentication	
Authorization Type	Specifies the type of authentication.
Credentials Type	Select the credential type as ASCII or Base64. Based on the Credential Type that you choose, enter the ASCII string or Base64 string.
URL	
Request MOD	Enter the reqmod uri that can be configured for ICAP server only.
Response MOD	Enter the respmod uri that can be configured for ICAP server only.
Routing Instance	Specifies the virtual router that is used for launching. Select a routing instance from the list.
SSL Initiation Profile	Select an SSL initiation profile from the list.

RELATED DOCUMENTATION
[About the ICAP Redirect Profile Page](#) | 1122

[Edit an ICAP Redirect Profile | 1127](#)[Delete ICAP Redirect Profile | 1127](#)

Edit an ICAP Redirect Profile

You are here: **Security Services** > **ICAP Redirect**.

To edit an ICAP redirect profile:

1. Select the existing ICAP redirect profile that you want to edit on the ICAP Redirect page.
2. Click the pencil icon available on the upper-right corner of the page.

The Edit ICAP Redirect Profile page appears with editable fields. For more information on the options, see ["Add an ICAP Redirect Profile" on page 1124](#).

3. Click **OK** to save the changes.

RELATED DOCUMENTATION

[About the ICAP Redirect Profile Page | 1122](#)[Delete ICAP Redirect Profile | 1127](#)

Delete ICAP Redirect Profile

You are here: **Security Services** > **ICAP Redirect**.

To delete ICAP redirect profile:

1. Select one or more ICAP redirect profile that you want to delete on the ICAP Redirect page.
2. Click the delete icon available on the upper-right corner of the page.
3. Click **Yes** to delete or click **No** to retain the profile.

RELATED DOCUMENTATION

[About the ICAP Redirect Profile Page | 1122](#)[Add an ICAP Redirect Profile | 1124](#)

[Edit an ICAP Redirect Profile | 1127](#)
