



Model: D20

2D LiDAR

USER MANUAL



QUICK START

Make sure that the USB driver is installed and plug the USB cable into the PC,

Connect the device to power supply ($+5V \pm 10\%$, 3A),

Run our data acquisition and analysis software,

Then select the correct communication port and set the baud rate to 921600bps.

Press the start button "▶" and start to work!

(Version V8.01.8)

For more info & supports, please visit <http://www.top1sensor.com>

Content

1. Specifications	1
2. Dimensional drawing	2
2.1 Rendering	2
2.2 Dimensions	2
3. Installation and connection	3
3.1 Installation	3
3.2 Connection	3
4. Software setting	4
4.1 Driver installation	4
4.2 Data acquisition	4
5. Communication protocol	6
5.1 Output data format	6
5.2 Data check algorithm	10
5.3 Data analysis algorithm	10
6. Trouble shooting	12
6.1 Factors affecting the measurement range	12
7. Standard and optional accessories	13
8. Contact us	13

1. Specifications



Items	Parameters
Scanning range ¹	0.15m~20m, 12m@10%
Measurement error ²	±3cm@20m@10Hz
Scanning angle range	360°
Angle resolution	0.28°
Scanning frequency ³	10Hz
Measurement frequency	14.28Khz
Output Interface	TTL
Distance resolution	1cm
Laser source	Laser diode 905nm, ≤1mW; comply with GB7247.1-2001 Class 1 Laser Eye Safety Requirements
Power supply	DC 5V±10%, Power consumption < 3W Starting current > 1.5A
Volume	78×78×56 mm
Operating temperature range	- 10°C~ +50°C
Storage temperature range	- 20°C~ +70°C
Protection level	IP54
Weight	190 g
Working life	50,000 hours under standard conditions

Notes:





1. An object with only 10% reflectivity and dark color that can be measured 12m, Kodar white up to 20m.
2. The measurement repeatability accuracy is ±3cm when the measurement range achieves 20m and scanning frequency is 10Hz.
3. The default rotating speed is 10 revolutions per second

2. Dimensional drawing

2.1 Rendering

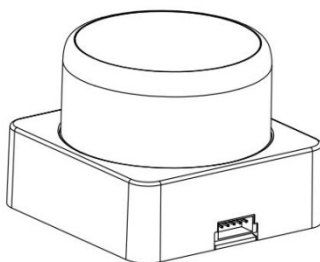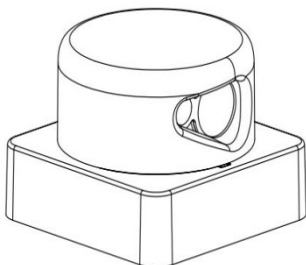


2.2 Dimensions

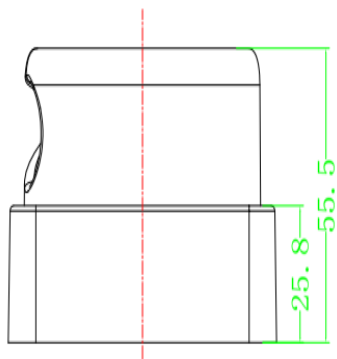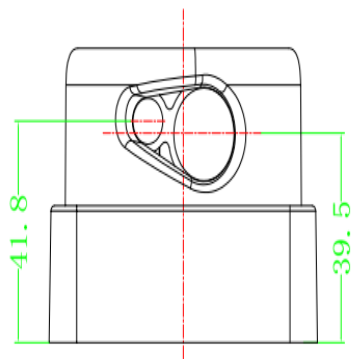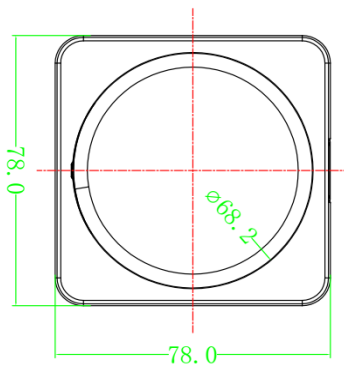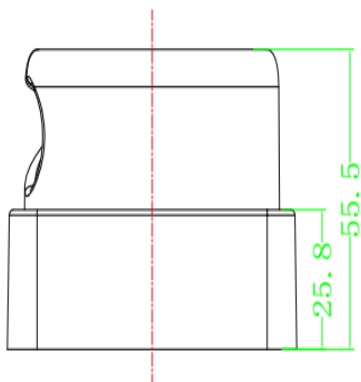

3. Installation and connection

3.1 Installation

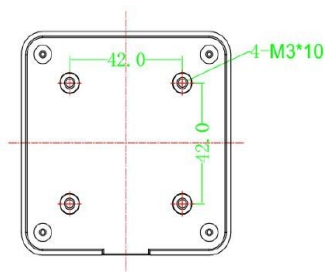

3.2 Connection

3.2.1 Wiring diagram



3.2.2 Definitions of 10pin connection cable

Pin	Function	Color	Notes
0	+5V±10%	Red	DC power supply +5V
1	GND	White	DC power ground
2	Tx	Yellow	Connect to external TTL Rx
3	Rx	Green	Connect to external TTL Tx
4	GND	Black	Connect to internal GND

3.2.3 Power supply

The starting voltage needs to be 5V, the starting current needs to be 1500mA, the normal working current is 500mA. However the ripple coefficient of the power supply should not be more than 40mV. Factory setting is D10 Lidar automatically rotates and measures after power-on.

4. Software setting

4.1 Driver installation

After USB driver is successfully installed, connect the Lidar to the computer to confirm that it recognizes the com port, and then turn on the power. If the power is turned on first and then connected, there is a possibility that the computer mouse will be out of control. Please pay attention to the operation sequence. Run the "FaseLase LiDAR Point Cloud Data Acquisition and Analysis System.exe" program " and it can be used normally.

Some PC can automatically install the driver after LiDAR connected, if not, please download the CP210X driver in our software package.

4.2 Data acquisition

To run 'FaseLase LiDAR Point Cloud Data Acquisition and Analysis System.exe' program, the communication settings window (see figure 1) will popup. First, select device D20. Second, select serial port number corresponding to the device. In fact, the serial port connected to the computer can automatically be identified by the program. Third, select baud rate 921600. Fourth, click 'Yes' to enter monitoring interface (see figure2). Baud rate: 921600 bps, Parity bit: None, Data bits: 8, Stop bit: 1

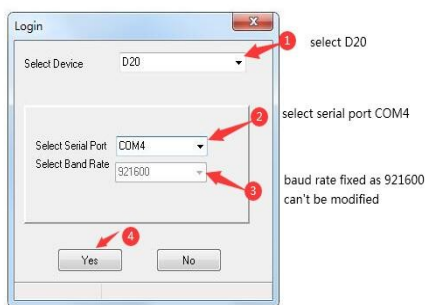


Figure 1: communication settings window

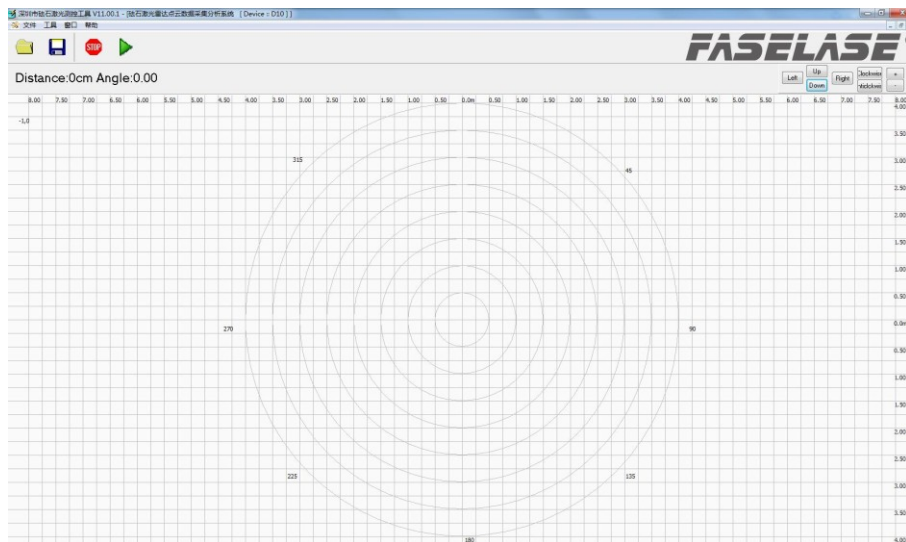
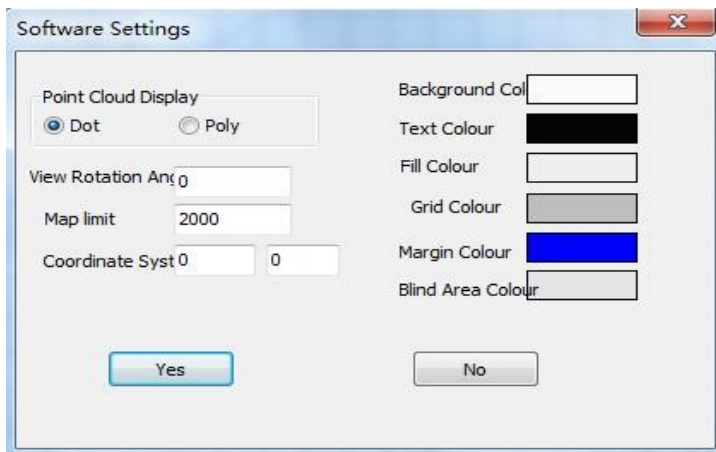


Figure 2: the monitoring interface

After entering the monitoring window, click the right mouse button in the grid chart, select System Settings, change the maximum distance from the original 1000 to 2000 in System Settings, and then click Yes, then start to measure, the measured effect of the monitor window is as Figure 3



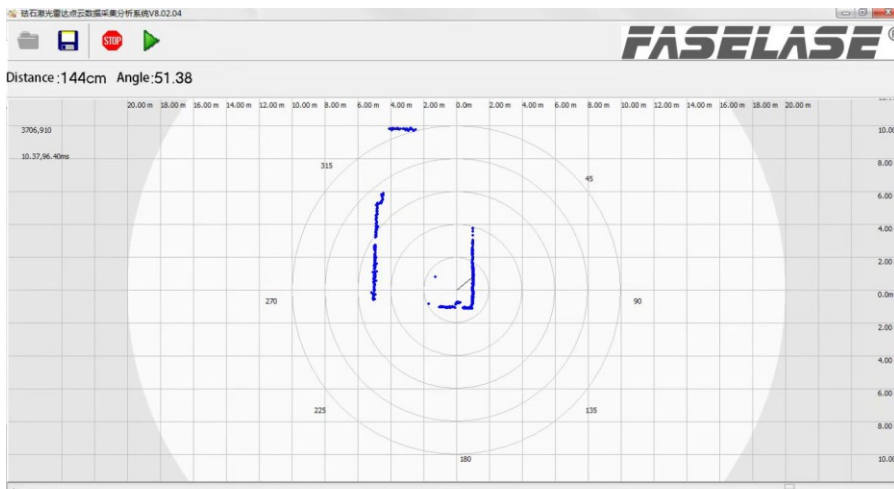





Figure 3:the measured results of the monitor window

Click the save icon  to display the number of points detected in the current circle and the distance and angle of each point.

Click the right mouse button in the monitor interface to select 'one dimensional display' to observe the real-time data changes of each circle detection.

Click Save icon , start to record the test data, after setting the name and path, click OK, The record ends. Click Save button again, click Cancel in the pop-up window to complete the data recording.

The recorded data can also be opened by clicking the Open History File button .

5. Communication protocol

5.1 Output data format

5.1.1 Binary output: 4 bytes, including both distance and angle values.

5.1.2 Each distance test data packet has 4 bytes (labeled A, B, C, and D in sequence., each byte has 8 bits, corresponding to A7,A6,...,A1,A0, B7,B6,...,B1,B0, C7,C6,...,C1,C0.and D7,D10,...,D1,D0.

5.1.3 The MSBs of the first 3 bytes are 0 (A7, B7, C7), and the MSB of the last byte is 1 (D7), which indicates the end of the data pack. There are $4 \times 7 = 28$ bits valid data in each data packet. A6, A5, A4 of byte A are the check bit. For the specific algorithm, please check the data check algorithm in the next part.

A3, A2, A1, A0, B6, ... B0, C6 are measured distances values (a total of 12 bits), its range is 0~4000cm .

C5...C0, D6,...D0 are measured angle values (a total of 13 digits). Its range is 0~5759, the angular accuracy is 1/16 degree.

Bits	A7	A6	A5	A4	A3	A2	A1	A0
Value	0	Check	Check	Check	Distance	Distance	Distance	Distance
Bits	B7	B6	B5	B4	B3	B2	B1	B0
Value	0	Distance	Distance	Distance	Distance	Distance	Distance	Distance
Bits	C7	C6	C5	C4	C3	C2	C1	C0
Value	0	Distance	Angle	Angle	Angle	Angle	Angle	Angle
Bits	D7	D10	D5	D4	D3	D2	D1	D0
Value	1	Angle	Angle	Angle	Angle	Angle	Angle	Angle

5.2 Data check algorithm

Each character has 8 bits (bit7~bit0), each bit can be 0 or 1. The check bits A6,A5,A4 store the low 3 bit of sum of 1 of B,C,D 3 bytes, when check algorithm, first get the number of '1' in the 3 bytes of B,C,D by looking up the table and then add them up, and then compare the lower 3 bits of the sum with A6,A5,A4, if they are consistent, output the measurement results

```
unsigned char GetCrcPackage4Byte (unsigned char *buf)
{
    unsigned char B,C,D;
    B = buf[1];
    C = buf[2];
    D = buf[3];
    //cbit is a number table of 1 corresponding to 0-255
    static unsigned char cbit[256] = {
        0,1,1,2,1,2,2,3,1,2,2,3,2,3,3,4,1,2,2,3,2,3,3,4,2,3,3,4,3,4,4,5,
        1,2,2,3,2,3,3,4,2,3,3,4,3,4,4,5,2,3,3,4,3,4,4,5,3,4,4,5,4,5,5,6,
        1,2,2,3,2,3,3,4,2,3,3,4,3,4,4,5,2,3,3,4,3,4,4,5,3,4,4,5,4,5,5,6,
        2,3,3,4,3,4,4,5,3,4,4,5,4,5,5,6,3,4,4,5,4,5,5,6,4,5,5,6,5,6,6,7,
        1,2,2,3,2,3,3,4,2,3,3,4,3,4,4,5,2,3,3,4,3,4,4,5,3,4,4,5,4,5,5,6,
        2,3,3,4,3,4,4,5,3,4,4,5,4,5,5,6,3,4,4,5,4,5,5,6,4,5,5,6,5,6,6,7,
        2,3,3,4,3,4,4,5,3,4,4,5,4,5,5,6,3,4,4,5,4,5,5,6,4,5,5,6,5,6,6,7,
        3,4,4,5,4,5,5,6,4,5,5,6,5,6,6,7,4,5,5,6,5,6,6,7,5,6,6,7,6,7,7,8,
    };
    return (cbit[B]+cbit[C]+cbit[D])&0x07; } return the low 3 digits the sum of 1 in the 3 bytes of
    B,C,D
```

5.3 Data analysis algorithm

```
//buf is a data package pointer, which stores 3 bytes as A, B, C in order.
//return distance value, if data check is not correct, return -1
//
int DecodeLaseData(unsigned char *buf)
{
    int distance;
    unsigned char crcdata = GetCrcPackage3Byte(buf);
```

```
//unsigned char orgcrc = (buf[0]>>4)&0x07;
if( crcdata!= (buf[0]>>4))
return -1;
;
//calculate the distance. A0,B6..B0,C6...C0
. distance = ((buf[0]&0x1)<<14)+(buf[1]&0x7F)<<7)+((buf[2]&0x7F));

return distance ;

}

//

//buf is a data package pointer, which stores 4 bytes as A, B, C and D in order.
//return the distance value, if data check is not correct, return -1
typedef struct{

int distance;

int Angle;

}FSDNode;

bool DecodeFSD10(FSDNode *nodelist,unsigned char *buf)

{

unsigned char crcdata = GetCrcPackage4Byte(buf);// calculate the low 3 digits the sum of 1 in the 3
bytes of B,C,D
unsigned char orgcrcdata = (buf[0]>>4)&0x07;//get original check A6,A5, A4

if(orgcrcdata!= crcdata)

return false;

unsigned int distance, angle;

//calculate distance

distance = (buf[0]&0x0F);

distance <<= 7;

distance += (buf[1]&0x7F);

distance <<= 1;
```

```

if( buf[2]&0x40)

distance ++;

nodelist->distance = distance;

//calculate angle

angle = buf[2]&0x3F;

angle <= 7;

angle += (buf[3]&0x7F);

nodelist->Angle = angle;

return true;

```

Contact us to get more engineering cases and SDK packages supporting ROS drivers.

6. Trouble shooting

6.1 Factors affecting the measurement range

The D10 is an optical measuring device whose measurement results are affected by environmental factors. Therefore the actual measuring result might be different with typical value which is measured in standard environment.

The following factors will effect actual measuring range.

Factors	Affecting result
Multipath reflection	Wrong measurement results may occur when the laser energy returned from other objects exceeds the energy returned from the target
Transparent surface	Wrong measurement results may occur when the measurement target is colorless liquids or glasses
Small object	When the measured object is smaller than the laser spot, or the laser measures the corner of the measured object, incorrect measurement results may occur.

7. Standard and optional accessories

No.	Items	Qty	Remarks
1	D20	1 pc	
2	Data cable	1 pc	
3	TTL to USB convertor	1 pc	
4	DC +5V power adapter	1 pc	Optional

8. Contact us

Xi'an Zhizun International Trade Co.,Ltd

[Http://www.top1sensor.com](http://www.top1sensor.com)

Tel: +86-29-87858956

Fax: +86-29-87858956

Mobi: +86-13201520716 Mr.Yang

E-mail: contact@top1sensor.com

Add: No.68 Middle Sector South,Huancheng Road, Xi'an,China