

# A8 mini 4K AI MINI ZOOM GIMBAL CAMERA USER MANUAL



V1.2 Mar 2023





Thank you for purchasing SIYI product.

A8 mini is a lightweight and elegant gimbal camera, carrying a 4K 1/1.7-inch Sony starlight night vision sensor, powerful AI identify, smart tracking feature based on neural network professing unit, and supports max 6X digital zoom. A8 mini's ethernet and HDMI output feature are compatible with both SIYI link and third-party link. And it supports CVBS (AV) output for analog FPV. A8 mini can be widely used for enterprise drones, UGV, USV, robotics, RC hobby planes and FPV drones.

To ensure you a good experience of the product, please read this manual carefully. If you encounter any issue using the product, please consult the manual or check the online pages of this product on SIYI official store (https://shop.siyi.biz). You can also write an email to SIYI official A/S center (support@siyi.biz).



# SIYI User Group - Facebook



SIYI Official Store (<a href="https://shop.siyi.biz">https://shop.siyi.biz</a>)

SIYI Official AliExpress Store (<a href="https://siyi.aliexpress.com">https://siyi.aliexpress.com</a>)

SIYI YouTube Channel (<u>https://www.youtube.com/c/SIYITech</u>)



# **CONTENT**

READ TIPS	1
lcons	1
Safety	1
Storage/Carrying/Recycling	2
1 INTRODUCTION	3
1.1 Product Features	3
1.2 Parts	6
1.2.1 At a Glance	6
1.2.2 Ports on A8 mini	8
1.3 Technical Specification	10
1.4 Packing List	12
1.5 Indicator Definition	13
2 GET READY TO USE A8 MINI	14
2.1 Installation	14
2.2 Connection and Power	15
3 GIMBAL CONTROL	16
3.1 Control Gimbal Camera through SIYI FPV App with MK32 / MK15 Ground Station	16
3.1.1 Preparation	16
3.1.2 Gimbal Pitch and Yaw Rotation	17
3.1.3 Zoom	18
3.1.4 Take pictures and Record Video	18
3.2 Control Gimbal Camera through S.Bus Signal (Taking an Example of MK15)	19
3.2.1 Preparation	19
3.2.2 Gimbal Pitch and Yaw Rotation (Taking an Example of MK15 Dials)	22
3.2.3 Zoom (Taking an Example of MK15 Switches)	23
3.1.4 Take Pictures and Record Video (Taking an Example of MK15 Buttons)	23
3.3 UART / UDP Control (through SDK)	24
3.3.1 SDK Protocol Format	24
3.3.2 SDK Communication Commands	25
3.3.3 ZR10 SDK Communication Interface	30
3.3.4 ZR10 SDK Communication Code Examples	30



3.3.5 SDK CRC16 Code	32
4 VIDEO OUTPUT	34
4.1 Output and Display Video Stream on MK15 Smart Controller	34
4.2 Output Video Stream through HM30 Full HD Image Transmission System	34
4.3 Output Video Stream to Third-Party Image Transmission Systems	36
4.4 Output A8 mini's Video Stream through HDMI	37
4.5 Output A8 mini's Video Stream by AV Signal	37
4.6 Solutions to No Image	38
4.6.1 Video Output to Android Device	39
4.6.2 Video Output to Windows Device	40
4.7 Common IP Addresses	41
5 SIYI FPV APP	43
5.1 Settings	45
5.2 Link Status	46
5.3 Gimbal Camera	47
5.4 About SIYI FPV	49
6 Firmware Upgrade and Configuration	50
6.1 Gimbal / Zoom Firmware Update	50
6.2 Camera Firmware Update	53
6.3 Gimbal Camera Configuration	54
6.3.1 Channel Settings	55
6.3.2 Camera Specs	56
7 After-sale Service	58
7.1 Repair Service	58
7.2 Warranty	59
7.2.1 7-Day Return & Refund	59
7.2.2 15-Day Replacement	60
7.2.3.1-Year Warranty Renair	62



# **READ TIPS**

### **Icons**

Please pay more attention to content indicated with the following marks:



**DANGER** Dangerous manipulation probably leads to human injuries.



WARNING Warnings on manipulation possibly leads to human injuries.



**CAUTION** Cautions on what manipulation may lead to property loss.







### **Safety**

A8 mini gimbal camera is designed for professional application in specific scenes, which has been done necessary configuration before delivery, it is forbidden to disassemble the gimbal or to change its mechanical structure. And don't add more payload to the gimbal other than its own camera. Gimbal camera is designed with very precise structure, users who approach to the equipment should have the basic knowledge of how to operate it. Irregular or irresponsible manipulations to the device may cause damage, property loss, or human injuries, and SIYI Technology is not obliged to any of the damage, loss, or injury. It is prohibited to use SIYI products for military purpose. Users under 14 years' old should follow an



experienced trainer's guide. Disassembling or modification to the system is prohibited without permission from its manufacturer, SIYI Technology.

### Storage/Carrying/Recycling

When your SIYI products are stand idle, or you are bringing it outdoors, or the system reached service life, then please do read the precautions below.



# **CAUTION**

Always place your SIYI products at places where babies or kids do not reach.



# DANGER

SIYI products should be placed in places with below conditions:

Not too hot (above 60°C) or too cold (under -20°C).

Not under direct sunshine or too dusty or too wet.

Not on an unstable holder which lacks solid supports or may cause vibration.

Not nearby steam or other heat sources.



# 1 INTRODUCTION

### 1.1 Product Features

### Al Smart Identify and Tracking

A8 mini gimbal camera carries a neural network processing unit (NPU), embedded in brand-new AI algorithms developed by SIYI. A8 mini can autonomously identify moving objects like vehicles, boats, and people. Companion with gimbal rotation and UAV flight control system, the gimbal camera will accomplish an overall smart operation from identifying and locating to continuously tracking. A8 mini's zoom camera will always maintain the tracking object in the center of the image.

\*The AI feature is under development and will be supported by firmware update soon.

### **Powerful Imaging System**

A8 mini gimbal camera comes with a 1/1.7-inch Sony image sensor, a megapixels CMOS with remarkable photosensitivity ability, impressive 4K video recording, and smooth 6X digital zooming. Those combined features make distant beautiful sceneries nicely seen in motion pictures.

### **Upside Down Mode**

A8 mini gimbal camera automatically activates upside down mode when it is placed upside down, very convenient to be mounted on multiple kinds of vehicles like UGV, USV, robot dog, and robotics.



### Various Video Output, Ultra Low Latency

A8 mini gimbal camera provides triple popular video output options, Ethernet, HDMI, and CVBS (AV). RC plane and FPV drone users can experience very low latency FPV through CVBS video output and analog image transmission system.

\*A8 mini configured as ultra-low-latency mode, CVBS output to analog FPV transmitter, view from the monitor connected to FPV receiver, the overall latency is 60ms. Direct HDMI output from A8 mini to monitor, the latency is 65ms.

### **Gimbal Motion Mode**

### **FPV Mode**

Gimbal rotates simultaneously as aircraft rolls to get FPV view, and output enhanced stable images, compatible with planes and racing drones especially for FPV scenes.

### **Follow Mode**

Horizontally, gimbal follows when aircraft rotates, compatible with multi-copter drones.

### **Lock Mode**

Horizontally, gimbal does not follow when aircraft rotates.

### **Starlight Night Vision Camera**

A8 mini gimbal camera's 1/1.7-inch ultra-sensitive starlight CMOS can keep image bright even in low light environment. HDR feature can precisely capture details of highlights and shadows in dynamic scenes, getting away of low light or backlight.



### 3-Axis Gimbal Stabilizing Control Algorithms

### **High-Precision FOC Motor Control**

A8 mini gimbal camera is applied with industry-level 3-axis stabilizing technology and high-precision FOC control algorithms, which reduces most image shaking and ensure image is always stable even if aircraft or vehicle is vigorously moving. Meanwhile, camera continuously outputs smooth and clear images even in zooming.



# 1.2 Parts

### 1.2.1 At a Glance










# 1.2.2 Ports on A8 mini

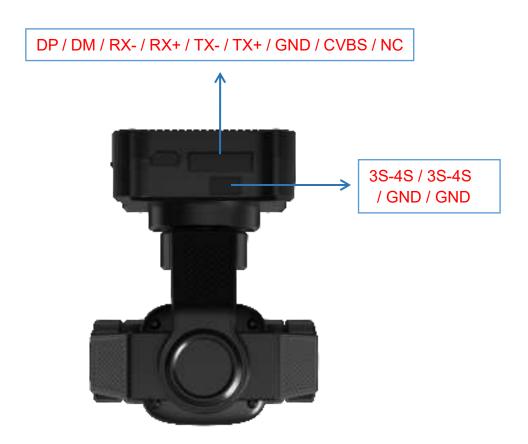



### RX / TX / GND / S.Bus IN / S.Bus OUT





# 1.3 Technical Specification

### **Overall**

Video Output Port	Ethernet, HDMI, CVBS(AV)
Control Signal Input Port	S.Bus / UART / UDP
Control Signal Output Port	S.Bus
Working Voltage	11 ~ 16.8 V
Power Consumption	Summit 12 W
Working Temperature	-10 ~ 50 ℃
Dimension	55 x 55 x 70 mm
Weight	Approx. 95 g

### **Gimbal**

Angular Vibration Range	±0.01°
Controllable Pitch Angle	-135° ~ +45°
Controllable Yaw Angle	-160° ~ +160°
Controllable Roll Angle	-30° ~ +30°

### Camera

Lens	6X Digital	
Focal Length	21 mm	
Image Sensor	Sony 1/1.7-inch, 8 MP effective resolution	
Aperture	F2.8	
FOV	93°	



	4K (4096 x 2160) @ 25 fps	
TF Card Recording	2K (2560 x 1440) @ 30 fps	
Resolution	1080p (1920 x 1080) @ 30 fps	
	720p (1280 x 720) @ 30 fps	
Supported File System	FAT32	
Supported File System	(exFAT will be supported later by firmware update)	
Photography File Format	JPG	
Video File Format MP4		
Supported TF Card Type	MicroSD Class10, max 128 GB	
Still Photography Mode	Single	
White Balance	Auto	

# Mark

To make sure that you get smoothly recorded video, please format the SD card and make the minimum storage unit as 64 KB before recording.



### 1.4 Packing List

### 1 x A8 mini Gimbal Camera

### 1 x MK15 / HM30 Air Unit S.Bus Y Cable

(Connect SIYI MK15 and HM30 air unit's S.Bus port to acquire control signal, then one connector of the cable goes to SIYI gimbal, another goes to flight controller)

### 1 x 3 in 1 Control Cable

(A universal cable for ZR30 and A8 mini, it connects SIYI gimbal's control signal port with SIYI link and controller, including UART control input, S.Bus input and output)

### 1 x SIYI Gimbal Power Cable

(Power supply cable for SIYI gimbal)

### 1 x SIYI Gimbal Ethernet Cable

(A backup cable for customer DIY purpose to connect SIYI gimbal to third-party Ethernet devices)

### 1 x SIYI Gimbal to SIYI Link Cable

(An all-in-one cable for only touch screen control to SIYI gimbal through SIYI link, it can power SIYI gimbal and can also transfer video stream and control signal)

### 1 x SIYI Gimbal Ethernet to RJ45 Cable

(Connect SIYI gimbal with RJ45 device directly)

### 1 x SIYI Gimbal Screw Pack

(Using with the fixing board to mount ZR30 gimbal, including 6 x Hex Socket Cap Screw M2.5\*5, 10 x Cross Recessed Flat Head Screw M2.5\*10, 8 x M2.5 Nut Black)

### 1 x A8 mini Mounting Board & Damper Pack

(For mounting and fixing gimbal and stabilization)



### 1.5 Indicator Definition

The status indicators on A8 mini gimbal camera use three different colors and different blinking frequencies to indicate the system's working or abnormal status.


- O Solid Green: Normally working.
- Slow Green Blinks: S.Bus signal input is normal.
- Slow Red Blinks: Firmware does not match (camera firmware or gimbal firmware or neither).
- □ Red-Red-Yellow Blinks Continuously: Fail to identify camera board.
- Yellow Blinks: Power input voltage is low (lower than 10 V).
- Double Red Blinks: IMU temperature rising is abnormal.
- O Double Yellow Blinks: IMU temperature is rising.
- O O Triple Yellow Blinks: IMU temperature is abnormal.



# **2 GET READY TO USE A8 MINI**

### 2.1 Installation

### **Screw Holes' Position and Distance**

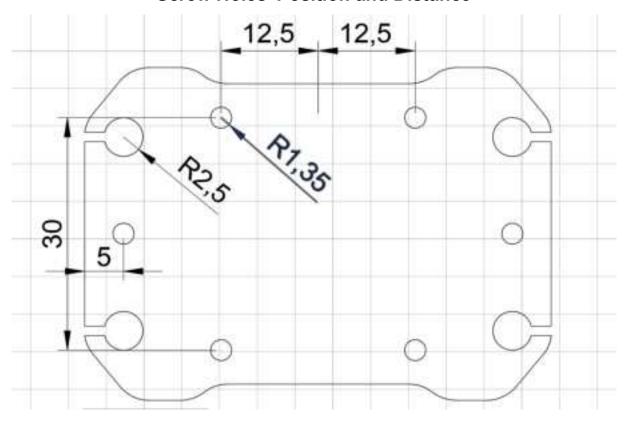



Welcome to contact SIYI to get the 3D file of A8 mini gimbal camera for pre-installation.



### 2.2 Connection and Power

A8 mini gimbal camera can be powered in many ways. If you plan to carry A8 mini by your plane and the plane may roll in a wide margin, then please use connect A8 mini's power port directly by a 3S to 4S power battery, not through power distribution board or air unit.



# 3 GIMBAL CONTROL

A8 mini gimbal camera supports multiple methods to control.

# 3.1 Control Gimbal Camera through SIYI FPV App with MK32 / MK15 Ground Station

Gimbal camera can connect to air unit directly, then you can control gimbal rotation, gimbal functions, and display video in SIYI FPV app on screen after binding it with the air unit.

### 3.1.1 Preparation

It is necessary to prepare the tools, firmware, and software below before controlling gimbal camera in this way.

- MK32 / MK15 Handheld Ground Station (MK32 / MK15 standard combo is suggested for using conveniently with A8 mini gimbal camera)
- A8 mini Gimbal Camera

# Mark

Above products can be purchased from SIYI directly or from SIYI authorized dealers.



A8 mini SIYI Video Cable

# Mark

Above tools come with gimbal camera package.

SIYI FPV App (v2.5.8.470 or latest version)

# Mark

Above software can be downloaded from relevant product page on SIYI official website.

### **Steps**

- 1. Power air unit and bind it with ground station.
- 2. Use SIYI Video Cable to connect the air unit's video port with the gimbal camera's video port.
- 3. Update SIYI FPV app.
- 4. Run SIYI FPV app, go to "Settings Camera A8 mini", and select "SIYI Camera 1" (when IP addresses are 192.168.144.25) or "SIYI Camera 2" (when IP addresses are 192.168.144.26), video stream will display. Gimbal motion and camera functions can be controlled by ground station touchscreen.

### 3.1.2 Gimbal Pitch and Yaw Rotation

While SIYI FPV App is running, sliding on touchscreen can control gimbal motion.



Sliding left and right are yaw rotation, up and down are pitch rotation.

Double tap touchscreen, gimbal will automatically center.

# O Mark

Slide on touchscreen and hold it, gimbal will continue rotating till it reaches physical limit.

Farther that you hold it from the center of the screen, faster the gimbal rotates.

### 3.1.3 Zoom

Touching "Zoom in" or "Zoom out" icon on SIYI FPV app can control camera image zooming, up to 6X digital.

### 3.1.4 Take pictures and Record Video

Touch "Photo" icon once on SIYI FPV app to take a picture. Touch "Record" icon to start video recording. Touch "Recording" icon to stop video recording.

# Mark

Before taking a picture or recording video, it is necessary to insert TF/SD card into the camera.



# 3.2 Control Gimbal Camera through S.Bus Signal (Taking an Example of MK15)

A8 mini can be connected to MK15 air unit for gimbal and camera control through joysticks, dials, switches, and buttons on MK15 remote controller after binding.

### 3.2.1 Preparation

It is necessary to prepare the below tools, firmware, and software before controlling gimbal camera in this way.

- MK15 Mini HD Handheld Smart Controller (Enterprise standard combo is suggested for conveniently using with A8 mini)
- A8 mini Gimbal Camera

# Mark

Above products can be purchased from SIYI directly or from SIYI authorized dealers.

- SIYI Video Cable
- Gimbal Control Signal Cable
- S.Bus Y Cable
- Mark



Above tools come with gimbal camera package.

Cable (USB-C to USB-A)

# Mark

Above tools should be prepared by customer.

SIYI PC Assistant (v1.3.2 or latest version)

# Mark


Above software can be downloaded from relevant product page on SIYI official website.

### **Steps**

- 1. Power MK15 air unit and bind it with MK15 remote controller.
- 2. Use SIYI Video Cable to connect MK15 air unit's video port with A8 mini gimbal camera's video port.
- 3. Put the Gimbal Control Signal Cable together with the S.Bus Y Cable by connecting them.
- 4. Then use the combined cable to connect MK15 air unit's RC port and A8 mini gimbal camera's control signal port.
- 5. Install and run SIYI PC Assistant on Windows computer.
- 6. Use the USB-C to USB-A cable to connect A8 mini gimbal camera with Windows



computer, then run SIYI PC Assistant and go to "Gimbal Config" page.

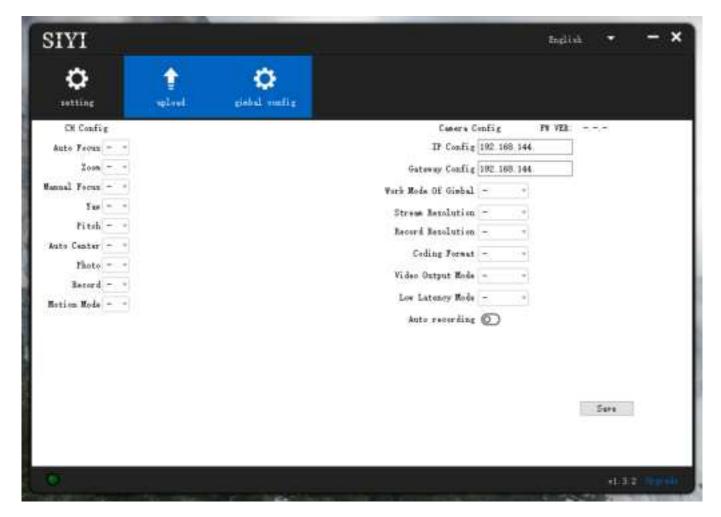

- 7. Under "Channel Config" menu, assign remote controller channel 1 to 16 to target gimbal / camera functions according to your requirement.
- 8. For the assigned channels, operate their mapped joysticks, dials, switches, and buttons on MK15 remote controller to confirm if they are working normally.

# Mark

A8 mini gimbal camera does not come with focus feature.



### 3.2.2 Gimbal Pitch and Yaw Rotation (Taking an Example of MK15 Dials)

Below are the MK15 channel mapping settings for gimbal testing, customers are free to assign MK15 channel mappings as required through SIYI TX app.

- Channel 7 = Left Dial (Reversed)
- Channel 8 = Right Dial
- Channel 12 = Button D

In SIYI PC Assistant, map "Yaw" function to channel 7 and "Pitch" to channel 8, "Center" to channel 12.

Then, if you operate the left dial on MK15 remote controller, gimbal will rotate around yaw axis. If you operate the right dial, gimbal will rotate around pitch axis. Press button D, gimbal will center automatically.

# O Mark

Hold the dial from its center position, gimbal will rotate till reaching limit. Farther that you hold it away from center screen, faster gimbal rotates.



### 3.2.3 Zoom (Taking an Example of MK15 Switches)

Below are the MK15 channel mapping settings for gimbal testing, customers are free to assign MK15 channel mappings as required through SIYI TX app.

Channel 13 = Left Switch SA

In SIYI PC Assistant, map "Zoom" function to channel 13.

Then, if you operate the SA switch on MK15 remote controller, camera will zoom in or zoom out digitally from 1X to 6X.

### 3.1.4 Take Pictures and Record Video (Taking an Example of MK15 Buttons)

Below are the MK15 channel mapping settings for gimbal testing, customers are free to assign MK15 channel mappings as required through SIYI TX app.

- Channel 9 = Button A
- Channel 10 = Button B

In SIYI PC Assistant, map "Photo" function to channel 9 and "Record" to channel 10.

Then, if you press button A on MK15 remote controller, camera will take a picture. If you press button B, camera will start or stop video recording.



# Mark

Before taking pictures or recording video, it is necessary to insert SD / TF card into the camera.

# 3.3 UART / UDP Control (through SDK)

SIYI gimbal provides control and function protocol for all customers, please refer to the below file "SIYI Gimbal Camera SDK Communication Protocol" for secondary development.

### 3.3.1 SDK Protocol Format

Field	Index	Bytes	Description	
STX	0	2	0x6655: starting mark	
			Low byte in the front	
			0: need_ack (if the current data pack need "ack")	
CTRL	2	1	1: ack_pack (if the current data pack is an "ack"	
CIKL	2	I	package)	
			2-7: reserved	
Dete les	2	0	Date field byte length	
Data_len	3	2	Low byte in the front	
SEO.	_	0	Frame sequence (0 ~ 65535)	
SEQ	5	2	Low byte in the front	
CMD_ID	7	1	Command ID	
J				
DATA	8	Data_len Data		
CDC16	0		CRC16 check to the complete data package.	
CRC16		2	Low byte in the front	



### 3.3.2 SDK Communication Commands

### **Acquire Firmware Version**

	CMD_ID:0x01Acquire Firmware Version				
		Send data f	ormat		
No.	Data Type	Data Name	Description		
	ACK data format				
	uint32_t code_board_ver		Camera firmware version		
	uint32_t gimbal_firmware_ver		Gimbal firmware version		
	uint32_t zoom_firmware_ver		Zoom firmware version		

Eg: 0x6E030203 --> firmware version v3.2.3

### Mark:

- 1. Ignore the 4<sup>th</sup> byte (higher byte)
- 2. Zoom firmware version is only available for ZR10 and ZR30 at this moment.

### **Acquire Hardware ID**

	CMD_ID:0x02 Hardware ID				
		Send data	format		
No.	Data Type Data Name Description				
	ACK data format				
	Uint8_t	hardware_id[12]	Hardware ID character string (10 digits)		

### **Auto Focus**

CMD_ID:0x04Auto Focus			
Send of	data format		
No.	Data Type	Data Name	Description
1	uint8_t	auto_focus	1: Start auto focus for once
ACK data format			
1	uint8_t	sta	1: Success 0: Fail

### **Manual Zoom and Auto Focus**

CMD\_ID:0x05-----Manual Zoom and Auto Focus



Send of	Send data format			
No.	Data Type	Data Name	Data Description	
1	int8_t	zoom	1: Start zooming in 0: Stop zooming in / out (send when released from control command) -1: Start zooming out	
ACK d	ACK data format			
	uint16_t	zoom_multiple	Current (hybrid) zoom multiples, (zoom_multiple / 10, accurate to one decimal point)	

### **Absolute Zoom and Auto Focus**

CMD_	CMD_ID:0x0FAbsolute Zoom and Auto Focus			
Send of	data format			
No.	Data Type	Data Name	Data Description	
1	uint8_t	Absolute_movemen t_int	Input the integer part of the target multiple (0X1 ~ 0X1E)	
2	uint8_t	Absolute_movemen t_float	Input the fractional part of the target multiple (0X0 ~ 0X9)	
ACK data format				
	uint8_t	Absolute_movemen t_ask	Success and return to 1	

### Mark:

Only available on ZR10 at this moment.

### **Manual Focus**

CMD_	CMD_ID:0x06Manual Focus				
Send	Send data format				
No.	Data Type	Data Name	Description		
1	int8_t	focus	1: Long shot 0: Stop manual focus (send when released from control command) -1: Close shot		
ACK data format					
	uint8_t	sta	1: Success 0: Fail		

### Mark:

Only available on ZR10 at this moment.



### **Gimbal Rotation**

CMD_ID:0x07Gimbal Rotation				
Send	Send data format			
No.	Date Type	Date Name	Description	
1	int8_t	turn_yaw	-100~0~100: Negative and positive represent two directions, higher or lower the number is away from 0, faster the rotation speed is.  Send 0 when released from control command and gimbal stops rotation.	
2	int8_t	turn_pitch	-100~0~100: Same as above	
ACK data format				
	uint8_t	sta	1: Success 0: Fail	

### Center

CMD_ID:0x08Center					
Send data format					
No.	Data Type Data Name Description				
1	uint8_t	t8_t center_pos 1: gimbal centers to position 0			
ACK d	ACK data format				
1 uint8_t sta 1: Success 0: Fail					

# **Acquire Gimbal Configuration Information**

CMD_	CMD_ID:0x0AAcquire Gimbal Configuration Information				
Send of	Send data format				
No.	Data Type	Data Name	Description		
ACK d	ACK data format				
1	uint8_t	reserved			
2	uint8 t	hdr sta	0: HDR OFF		
2	uiiito_t	iiui_sta	1: HDR ON		
3	uint8_t	reserved			
4	uint8 t	record sta	0: Recording OFF		
4	uirito_t	Tecoru_sta	1: Recording ON		



			2: TF card slot is empty
			3: (Recording) Data loss in TF card
			recorded video, please check TF card
			0: Lock Mode
5	uint8_t	gimbal_motion_mode	1: Follow Mode
			2: FPV Mode
			Gimbal Mounting Method
6	uintO t	aimhal mauntina dir	0: Reserved
0	uint8_t	gimbal_mounting_dir	1: Normal
			2: Upside Down
			(Only available on A8 mini)
	uint8_t	video_hdmi_or_cvbs	Video output status of HDMI and
			CVBS:
			0:
7			HDMI output ON
			CVBS output OFF
			1:
			HDMI output OFF
			CVBS output ON

# **Function Feedback Information**

CMD_ID:0x0BFunction Feedback Information					
Send	Send data format				
No.	Data Type	Data Name	Description		
ACK o	lata format				
1	uint8_t	info_type	0: Success 1: Fail to take a photo (Please check if TF card is inserted) 2: HDR ON 3: HDR OFF		
			4: Fail to record a video (Please check if TF card is inserted)		

### **Photo and Video**

CMD_	CMD_ID:0x0CPhoto			
Send	Send data format			
No.	Data Type Data Name Description			
	uint8_t	func_type	0: Take a picture 1: Switch on / off HDR (not supported yet)	



		2: Start / Stop Recording		
		3: Motion – Lock Mode		
		4: Motion – Follow Mode		
		5: Motion – FPV Mode		
		6: Set video output as HDMI		
		(Only available on A8 mini, restart		
		gimbal to take effect)		
		7: Set video output as CVBS		
		(Only available on A8 mini, restart		
		gimbal to take effect)		
		8: Turn off both HDMI and CVBS		
		video output		
		(Only available on A8 mini, restart		
		gimbal to take effect)		
ACK da	ACK data format			
		No ack		

# **Acquire Gimbal Attitude**

	CMD_ID:0x0DAcquire Gimbal Attitude				
	Send data format				
No.	Data Type	Data Name	Description		
		ACK data fo	ormat		
int16_t yaw Yaw axis degree		Yaw axis degree			
	int16_t	pitch	Pitch axis degree		
	int16_t	roll	Roll axis degree		
	int16_t yaw_velocity		Yaw axis rotation speed		
	int16_t	pitch_velocity	Pitch axis rotation speed		
	int16_t	roll_velocity	Roll axis rotation speed		

### Mark:

The above data to be divided by 10 is the actual degree, accuracy in one decimal place.

### **Set Gimbal Control Angle**

CMD_ID:0x0ESet Gimbal Control Angle					
	Send data format				
No.	Data Type	Data Name	Description		
	int16_t	yaw	Target yaw angle		
	int16_t	pitch	Target pitch angle		
	ACK data format				
	int16_t	yaw	Current yaw angle		
	int16_t	pitch	Current pitch angle		
	int16_t	roll	Current roll angle		

### **Angle Control Range**



### Yaw:

A8 mini: -135.0 ~ 135.0 degree
 ZR10 / ZR30: Same with A8 mini

### Pitch

A8 mini: -90.0 ~ 25.0 degree
 ZR10 / ZR30: Same with A8 mini

### Mark:

The accuracy of the control angle is in one decimal place. Eg: Set yaw as 60.5 degrees, the command number should be set as 605.

The actual angle data returned to be divided by 10 is the actual degree, accuracy in one decimal place.

### 3.3.3 ZR10 SDK Communication Interface

### **TTL Serial Port**

Baud rate: 115200

Data position: 8 digits. Stop position: 1 digit. No check.

### **UDP**

IP: 192.168.144.25

Port Number: 37260

### 3.3.4 ZR10 SDK Communication Code Examples

Zoom 1

55 66 01 01 00 00 00 05 01 8d 64

Zoom -1

55 66 01 01 00 00 00 05 FF 5c 6a



Absolute Zoom (4.5X) 55 66 01 02 00 01 00 0F 04 05 60 BB

Manual Focus 1 55 66 01 01 00 00 00 06 01 de 31

Manual Focus -1 55 66 01 01 00 00 00 06 ff 0f 3f

Take Pictures 55 66 01 01 00 00 00 00 00 34 ce

Record Video 55 66 01 01 00 00 00 0c 02 76 ee

Rotate 100 100 55 66 01 02 00 00 00 07 64 64 3d cf

Auto Centering 55 66 01 01 00 00 00 08 01 d1 12

Gimbal Status Information 55 66 01 00 00 00 00 0a 0f 75

Auto Focus 55 66 01 01 00 00 00 04 01 bc 57

Acquire Hardware ID 55 66 01 00 00 00 00 02 07 f4

Acquire Firmware Version 55 66 01 00 00 00 00 01 64 c4

Lock Mode 55 66 01 01 00 00 00 0c 03 57 fe

Follow Mode 55 66 01 01 00 00 00 0c 04 b0 8e

FPV Mode 55 66 01 01 00 00 00 0c 05 91 9e

Acquire Attitude Data 55 66 01 00 00 00 00 00 dd e8 05



Set Video Output as HDMI (Only available on A8 mini, restart to take effect) 55 66 01 01 00 00 00 0c 06 f2 ae

Set Video Output as CVBS (Only available on A8 mini, restart to take effect) 55 66 01 01 00 00 00 0c 07 d3 be

Turn Off both CVBS and HDMI Output (Only available on A8 mini, restart to take effect) 55 66 01 01 00 00 0c 08 3c 4f

#### 3.3.5 SDK CRC16 Code

```
const uint16 t crc16 tab[256];
/******************
CRC16 Coding & Decoding G(X) = X^16+X^12+X^5+1
uint16_t CRC16_cal(uint8_t *ptr, uint32_t len, uint16_t crc_init)
{
    uint16_t crc,
                 oldcrc16;
    uint8 t temp;
   crc = crc init;
    while (len--!=0)
    {
       temp=(crc>>8)&0xff;
       oldcrc16=crc16 tab[*ptr^temp];
        crc=(crc<<8)^oldcrc16;
       ptr++;
   }
    //crc=~crc;
                  //??
    return(crc);
}
uint8_t crc_check_16bites(uint8_t* pbuf, uint32_t len,uint32_t* p_result)
{
    uint16_t crc_result = 0;
    crc result= CRC16 cal(pbuf,len, 0);
    *p result = crc result;
    return 2;
}
```



const uint16 t crc16\_tab[256]=  $\{0x0,0x1021,0x2042,0x3063,0x4084,0x50a5,0x60c6,0x70e7,0x2042,0x3063,0x4084,0x50a5,0x60c6,0x70e7,0x2042,0x3063,0x4084,0x50a5,0x60c6,0x70e7,0x2042,0x3063,0x4084,0x50a5,0x60c6,0x70e7,0x2042,0x3063,0x4084,0x50a5,0x60c6,0x70e7,0x2042,0x3063,0x4084,0x50a5,0x60c6,0x70e7,0x2042,0x3063,0x4084,0x50a5,0x60c6,0x70e7,0x2042,0x3063,0x4084,0x50a5,0x60c6,0x70e7,0x2042,0x3063,0x4084,0x50a5,0x60c6,0x70e7,0x2042,0x3063,0x4084,0x50a5,0x60c6,0x70e7,0x2042,0x3063,0x4084,0x50a5,0x60c6,0x70e7,0x2042,0x3063,0x4084,0x50a5,0x60c6,0x70e7,0x2042,0x3063,0x4084,0x50a5,0x60c6,0x70e7,0x2042,0x3063,0x4084,0x50a5,0x60c6,0x70e7,0x2042,0x3063,0x4084,0x50a5,0x60c6,0x70e7,0x2042,0x3063,0x4084,0x50a5,0x60c6,0x70e7,0x2042,0x3063,0x4084,0x50a5,0x60c6,0x70e7,0x2042,0x3063,0x4084,0x50a5,0x60c6,0x70e7,0x60c6$ 

0x8108,0x9129,0xa14a,0xb16b,0xc18c,0xd1ad,0xe1ce,0xf1ef, 0x1231,0x210,0x3273,0x2252,0x52b5,0x4294,0x72f7,0x62d6, 0x9339,0x8318,0xb37b,0xa35a,0xd3bd,0xc39c,0xf3ff,0xe3de, 0x2462,0x3443,0x420,0x1401,0x64e6,0x74c7,0x44a4,0x5485,0xa56a,0xb54b,0x8528,0x9509,0xe5ee,0xf5cf,0xc5ac,0xd58d, 0x3653,0x2672,0x1611,0x630,0x76d7,0x66f6,0x5695,0x46b4, 0xb75b,0xa77a,0x9719,0x8738,0xf7df,0xe7fe,0xd79d,0xc7bc, 0x48c4,0x58e5,0x6886,0x78a7,0x840,0x1861,0x2802,0x3823,0xc9cc,0xd9ed,0xe98e,0xf9af,0x8948,0x9969,0xa90a,0xb92b, 0x5af5,0x4ad4,0x7ab7,0x6a96,0x1a71,0xa50,0x3a33,0x2a12, 0xdbfd,0xcbdc,0xfbbf,0xeb9e,0x9b79,0x8b58,0xbb3b,0xab1a, 0x6ca6,0x7c87,0x4ce4,0x5cc5,0x2c22,0x3c03,0xc60,0x1c41, 0xedae,0xfd8f,0xcdec,0xddcd,0xad2a,0xbd0b,0x8d68,0x9d49, 0x7e97,0x6eb6,0x5ed5,0x4ef4,0x3e13,0x2e32,0x1e51,0xe70, 0xff9f,0xefbe,0xdfdd,0xcffc,0xbf1b,0xaf3a,0x9f59,0x8f78, 0x9188,0x81a9,0xb1ca,0xa1eb,0xd10c,0xc12d,0xf14e,0xe16f, 0x1080,0xa1,0x30c2,0x20e3,0x5004,0x4025,0x7046,0x6067, 0x83b9,0x9398,0xa3fb,0xb3da,0xc33d,0xd31c,0xe37f,0xf35e, 0x2b1,0x1290,0x22f3,0x32d2,0x4235,0x5214,0x6277,0x7256, 0xb5ea,0xa5cb,0x95a8,0x8589,0xf56e,0xe54f,0xd52c,0xc50d, 0x34e2,0x24c3,0x14a0,0x481,0x7466,0x6447,0x5424,0x4405, 0xa7db,0xb7fa,0x8799,0x97b8,0xe75f,0xf77e,0xc71d,0xd73c, 0x26d3,0x36f2,0x691,0x16b0,0x6657,0x7676,0x4615,0x5634, 0xd94c,0xc96d,0xf90e,0xe92f,0x99c8,0x89e9,0xb98a,0xa9ab, 0x5844,0x4865,0x7806,0x6827,0x18c0,0x8e1,0x3882,0x28a3, 0xcb7d,0xdb5c,0xeb3f,0xfb1e,0x8bf9,0x9bd8,0xabbb,0xbb9a, 0x4a75,0x5a54,0x6a37,0x7a16,0xaf1,0x1ad0,0x2ab3,0x3a92, 0xfd2e,0xed0f,0xdd6c,0xcd4d,0xbdaa,0xad8b,0x9de8,0x8dc9, 0x7c26,0x6c07,0x5c64,0x4c45,0x3ca2,0x2c83,0x1ce0,0xcc1, 0xef1f,0xff3e,0xcf5d,0xdf7c,0xaf9b,0xbfba,0x8fd9,0x9ff8, 0x6e17,0x7e36,0x4e55,0x5e74,0x2e93,0x3eb2,0xed1,0x1ef0



# **4 VIDEO OUTPUT**

A8 mini gimbal camera comes with three video output methods: Ethernet, HDMI, and CVBS(AV).

# Mark

The default video output method of A8 mini gimbal is Ethernet. When "Video Output" option is set as "OFF" in SIYI FPV app, A8 mini's Ethernet video output will get the best performance.

# 4.1 Output and Display Video Stream on MK15 Smart Controller

A8 mini gimbal camera can connect to MK15 air unit directly, then video will be displayed in SIYI FPV app after binding MK15 air unit to MK15 remote controller. Please refer to Chapter 3.1 in this manual for details.

# 4.2 Output Video Stream through HM30 Full HD Image Transmission System

A8 mini gimbal camera can connect to HM30 air unit directly, then the video will be displayed in SIYI FPV app or other methods that HM30 supports after binding HM30 air unit to HM30 ground unit.



### **Preparation**

It is necessary to prepare the tools, firmware, and software below before outputting video stream in this way.

- HM30 Full HD Image Transmission System
- A8 mini Gimbal Camera
- Mark

Above products can be purchased from SIYI directly or from SIYI authorized dealers.

- SIYI Video Cable
- O Mark

Above tools come with A8 mini package.

- SIYI FPV App (v2.5.8.470 or latest version)
- Mark

Above software can be downloaded from relevant product page on SIYI official website.

## **Steps**

1. Power HM30 air unit and bind it with HM30 ground unit.



- 2. Use SIYI Video Cable to connect HM30 air unit's video port with A8 mini gimbal camera's video port.
- 3. Update SIYI FPV App on your Android device to latest version.
- 4. Run SIYI FPV app, go to "Settings Camera A8 mini", and select "SIYI Camera 1" (when IP addresses are 192.168.144.25) or "SIYI Camera 2" (when IP addresses are 192.168.144.26), then it will display video stream. Gimbal rotation and camera functions can be controlled by Android device touchscreen.

# 4.3 Output Video Stream to Third-Party Image Transmission Systems

SIYI gimbal cameras can output video stream to any third-party image transmission systems which provide Ethernet port and are compatible with RTSP video stream.

In this way, it is necessary to prepare a customized video cable for connection between SIYI gimbal camera and the third-party image transmission system.



# CAUTION

A8 mini video port's "RX-" pinout should connect to the image transmission system video port's "RX-" pinout, and "RX+" pinout to "RX+" pinout. Do not cross the pinouts, otherwise it will cause damage to the device.

SIYI gimbal cameras' working voltage is from 14.8 V, please make sure that the power voltage input is in the range before wiring.



#### **Steps**

- 1. Power the air unit of the image transmission system and bind it with the ground unit.
- 2. Use the video cable to connect SIYI gimbal camera's video output port and the image transmission system's video input port.
- Open RTSP video player and input SIYI gimbal camera's RTSP addresses (rtsp://192.168.144.25:8554/main.264), if video displays normally, connection is successful.

## 4.4 Output A8 mini's Video Stream through HDMI

A8 mini can output video stream to any HDMI monitor through the HDMI port.

# Mark

The default video output method of A8 mini is Ethernet.

Go to the "Camera A8 mini" settings in SIYI FPV app and switch video output mode to "HDMI", then A8 mini video stream will go through the Micro HDMI port.

# 4.5 Output A8 mini's Video Stream by AV Signal

A8 mini can output video stream by AV signal through the Ethernet video output port.



Mark

The default video output method of A8 mini is Ethernet.

Go to the "Camera A8 mini" settings in SIYI FPV app and switch video output mode to "CVBS", then A8 mini video stream will output as AV signal through the Ethernet video output port.

## 4.6 Solutions to No Image

If SIYI gimbal camera failed to output video or the video stream cannot be displayed properly, please follow the steps below to investigate possible reasons.

- 1. Confirm if the image transmission system ground unit is bound with the air unit and if camera is connected to the air unit.
- 2. Check Camera IP addresses and RTSP addresses.

If video stream still does not display, please follow the steps below and make a deep investigation according to the video output mode and the video display device you use.



#### 4.6.1 Video Output to Android Device

1. Input SIYI gimbal camera's default IP addresses "192.168.144.25" in the "Ping Tools" app and check if the network communication is successful. If there is a response, then check if the RTSP address in the video player is correct.



Successful Network Communication



**Network Communication Failed** 

2. If the network communication is failed, then please check if the communication between the image transmission system's ground unit and the air unit is



successful. If it is, then please check if the video cable between camera and image transmission system's air unit is good, and if the voltage input is in normal range.

#### 4.6.2 Video Output to Windows Device

1. Use the "Win + R" key combo to wake up the "Run" program and input the command "cmd".

```
Microsoft Windows [版本 10.0.19042.804]
(c) 2020 Microsoft Corporation. 保留所有权利。

C:\Users\Administrator>ping 192.168.144

正在 Ping 192.168.0.144 具有 32 字节的数据:
Control-C
C
C:\Users\Administrator>ping 192.168.144.25

正在 Ping 192.168.144.25 具有 32 字节的数据:
来自 192.168.144.25 的回复:字节=32 时间=9ms TTL=64
来自 192.168.144.25 的回复:字节=32 时间=3ms TTL=64
来自 192.168.144.25 的回复:字节=32 时间=4ms TTL=64
来自 192.168.144.25 的回复:字节=32 时间=3ms TTL=64
```

Successful Network Communication

```
正在 Ping 192, 168, 144, 25 具有 32 字节的数据:
Control-C
C:\Users\Administrator>ping 192, 168, 144, 25
正在 Ping 192, 168, 144, 25 具有 32 字节的数据:
请求超时。
来自 192, 168, 144, 153 的回复: 无法访问目标主机。
来自 192, 168, 144, 153 的回复: 无法访问目标主机。
来自 192, 168, 144, 153 的回复: 无法访问目标主机。
2. 168, 144, 25 的 Ping 统计信息:
数据包:已发送 = 4,已接收 = 2,丢失 = 2 (50% 丢失)。
C:\Users\Administrator>
```

**Network Communication Failed** 



2. Input the ZR10 gimbal camera's default IP addresses "192.168.144.25" and press the "Enter" key to check if communication is successful. If it is successful, please check if the RTSP addresses in the RTSP player is correct or try to switch to other video players.



3. If the network communication is failed, then please check if the communication between the image transmission system's ground unit and the air unit is successful. If it is, then please check if the video cable between camera and image transmission system's air unit is good, and if the voltage input is in normal range.

# Mark

If you have done investigation by following all steps above, but the reason is still not located, please contact your dealer or contact SIYI Support immediately.

#### 4.7 Common IP Addresses

SIYI Gimbal Camera's Default IP Addresses: 192.168.144.25



# SIYI Gimbal Camera's Default RTSP Addresses:

rtsp://192.168.144.25:8554/main.264

SIYI FPV App's "SIYI Camera 1" IP Addresses: 192.168.144.25

SIYI FPV App's "SIYI Camera 2" IP Addresses: 192.168.144.26



# **5 SIYI FPV APP**

SIYI FPV is an Android application developed by SIYI to configure multiple SIYI devices for image transmission settings, camera settings, video stream display, and link status monitor.

# O Mark

The manual is edited based on SIYI FPV App v2.5.470.

SIYI FPV App can be download from the SIYI official links.

SIYI FPV App compatible SIYI devices.

- A2 mini Ultra-Wide-Angle FPV Gimbal
- MK32 Enterprise Handheld Ground Station
- A8 mini Al Mini Zoom Gimbal Camera
- ZR10 2K QHD 30X Hybrid Zoom Gimbal Camera
- R1 / R1M HD Recording FPV Camera
- Air Unit HDMI Input Converter
- HM30 Full HD Image Transmission System
- MK15 / MK15E Mini HD Handheld Smart Controller



## **SIYI FPV App OSD Information Definition**



#### **SIYI FPV Camera Function Icon Definition**





## 5.1 Settings

In the "Settings" page, you can configure camera IP Addresses, configure application interface, switch decoding type.



#### **About Settings**

Camera IP: Select SIYI Camera 1 and SIYI Camera 2, or input camera RTSP addresses manually, or disable image. The "Rotate" buttons can rotate the image in 180 degrees.

Cross Sight: Display a cross sight in the center of the image.

Map: Display the flight map at the left-bottom corner of the app.

OSD Color: Adjust the color of all OSD information.

Decoding Type: Switch between "Hardware Decoding" and "Software Decoding". Please refer to your video input device to choose the decoding type with the best performance.



#### 5.2 Link Status

Display the link status directly over the FPV image.



#### **About Link Status**

OSD: Enable / disable standard OSD information.

Mavlink OSD: Enable / disable Mavlink OSD information.

Speed Unit: Switch speed unit between meter per seconds and kilometer per hour.

Longitude and Latitude: Enable / disable information.



#### 5.3 Gimbal Camera

Configure the basic functions for SIYI gimbal cameras and cameras.



#### **About Gimbal Camera**

Auto Record: Turn on / off automatically video recording by TF card on gimbal camera start.

Record Resolution: Switch camera record resolution between HD (720p), Full HD (1080p),

2K, and 4K (under 4K recording resolution, A8 mini camera does not zoom).

Video Resolution: Switch camera real-time streaming resolution between HD (720p) and Full HD (1080p).

Working Mode: Switch gimbal motion mode between Lock Mode, Follow Mode, and FPV Mode.

• Under Lock Mode, gimbal rotates simultaneously as aircraft rolls to get FPV and output



enhanced stable images, compatible with planes and racing drones especially for FPV scenes.

- Under Follow Mode, gimbal follows when aircraft rotates horizontally, compatible with multi-copter drones.
- Under Lock Mode, gimbal does not follow when aircraft rotates horizontally.

Video Output: Switch gimbal camera's video output method.

- HDMI: A8 mini gimbal camera outputs video stream through the Micro-HDMI port.
- CVBS: A8 mini gimbal camera outputs video stream through the CVBS pin of the Ethernet port by AV signal.
- OFF: A8 mini gimbal camera only outputs video stream through the Ethernet port.

HDMI Latency Mode: Switch A8 mini gimbal camera's latency mode under HDMI / CVBS video output method.

- Normal: Ethernet port outputs video stream, recording function is normal.
- Low Latency: Ethernet port video output is disabled, recording function is normal.
- Lowest Latency: Both Ethernet port video output and recording function are disabled.

Camera Firmware Version: Display the current camera firmware version.

Gimbal Firmware Version: Display the current gimbal firmware version.

# O Mark


After switching video output mode or HDMI latency mode, gimbal camera should be restarted to implement the change.

Gimbal working mode is Follow Mode in default every time it is started.



## **5.4 About SIYI FPV**

Displays the software version of SIYI FPV and common contact information of SIYI Technology.

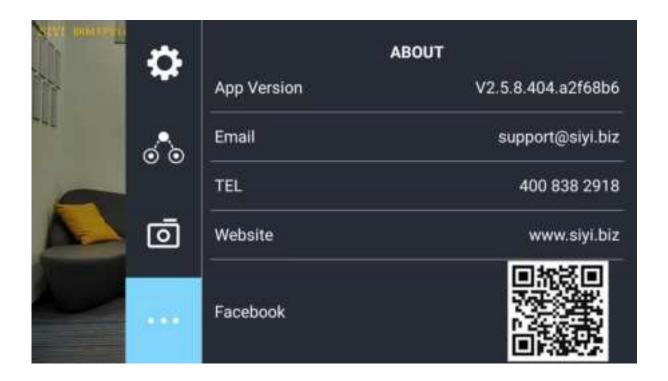



# **6 Firmware Upgrade and Configuration**

SIYI PC Assistant is a Windows software developed by SIYI to configure almost all SIYI devices for remote controller channels settings, firmware update, and gimbal camera configuration.

# O Mark

The manual is edited based on SIYI PC Assistant v1.3.2.

## 6.1 Gimbal / Zoom Firmware Update

SIYI gimbal camera can be connected to SIYI PC Assistant for gimbal firmware and zoom firmware update.

Before upgrading, it is necessary to prepare the tools, software, and firmware below.

- SIYI PC Assistant (v1.3.2 or latest version)
- Gimbal Firmware
- Mark



Above software and firmware can be downloaded from relevant product page in SIYI Official Store (https://shop.siyi.biz) or from A8 mini Google Drive Link (https://drive.google.com/drive/folders/1aSulEJW6OYt8UTtW0osgL20lkXcMuGxp?usp= share\_link) or got from your dealer.

Cable (USB-C to USB-A)



Customers should prepare the above tools.

## Firmware Upgrade Steps

- 1. Install "SIYI PC Assistant" on your Windows device.
- 2. Use the USB-C to USB-A cable to connect Windows device's USB-A port to gimbal camera's USB-C port.
- 3. Run "SIYI PC Assistant" and switch to "Upgrade" page to check gimbal camera's current gimbal firmware version.





4. If gimbal firmware is not latest, then click the "Select File" button in the "Gimbal" to import the latest firmware. And click "Upgrade" and wait till it is "100%" finished.

# Mark

Before updating any firmware, gimbal camera should be powered.



# 6.2 Camera Firmware Update

SIYI gimbal camera can be upgraded by SD / TF card for camera firmware.

Before upgrading, it is necessary to prepare below tools, software, and firmware below.

SD / TF card



Customers should prepare the above tools.

Camera Firmware

# Mark

Above software and firmware can be downloaded from relevant product page on SIYI Official Store (https://shop.siyi.biz) or from A8 mini Google Drive Link (https://drive.google.com/drive/folders/1aSulEJW6OYt8UTtW0osgL20lkXcMuGxp?usp= share\_link) or got from your dealer.



### **Firmware Upgrade Steps**

1. Save camera firmware's ".bin" file to the SD / TF card's root directory and do not change the file name.




- 2. Restart gimbal camera and wait for 3 to 5 minutes. Camera firmware will be flashed automatically.
- 3. Run SIYI FPV app or SIYI PC Assistant software to check if camera firmware is updated successfully.

# 6.3 Gimbal Camera Configuration

SIYI gimbal camera can be connected to SIYI PC Assistant for channel settings and camera settings.



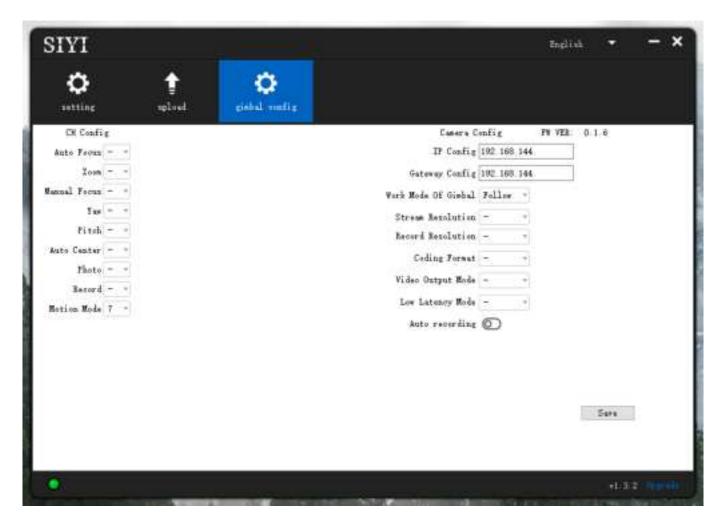

# 6.3.1 Channel Settings

The "Channel Config" menu under "Gimbal Config" menu can config the below gimbal camera functions to up to 16 channels and an idle channel (disabled).

- Auto Focus
- Zoom
- Manual Focus



• Yaw	
• Pitch	
Auto Center	
• Photo	
• Record	
<ul><li>Motion Mode</li></ul>	
6.3.2 Camera Specs	
The "Gimbal Config" menu also supports checking gimbal cam	era's current camera
firmware, switching camera resolution, and configuring camera	a IP addresses.
• IP Config	
Gateway Config	
Gimbal Working Mode	
Stream Resolution	
Record Resolution	
Coding Format	



- Video Output Mode
- Low Latency Mode
- Auto Recording



# 7 After-sale Service

If there were any questions or problems using SIYI Technology's product, you can always try to send an email to SIYI Official A/S Center (<a href="mailto:support@siyi.biz">support@siyi.biz</a>) or consult your sales representative or dealer for answers or solutions.

## 7.1 Repair Service

If your purchased SIYI products cannot work properly, please contact SIYI Official A/S Center for consulting.

Usually there are two situations for acquiring repair service.

- Product Defect
- Product Damage

SIYI products under the two situations can be sent back to SIYI for repairing. Defect products with valid warranty can be repaired for free. Defect products without valid warranty or damaged products should be charged of repair fees after repairing. Please refer to SIYI's Official A/S Quotation for detail.



## 7.2 Warranty

SIYI Technology guarantees that, subject to the following conditions, Return & Refund Service, Replacement Service, and Warranty Repair Service can be requested. Please contact SIYI directly (<a href="mailto:support@siyi.biz">support@siyi.biz</a> or your sales manager) or authorized SIYI dealer for more detail.

## 7.2.1 7-Day Return & Refund

You can request Return & Refund Service:

Within seven (7) days of receiving a product if the product has no manufacturing defect, has not been activated and is still in new or like-new condition.

Within seven (7) days of receiving a product if the product has a manufacturing defect.

Return & Refund Service will not be provided where:

It is requested beyond seven (7) calendar days of receiving a product.

A product sent to SIYI for Return & Refund Service does not include all original accessories, attachments or packaging, or any item is not in new or like-new condition, i.e., with cracks, dents, or scratches.

A legal proof of purchase, receipt or invoice is not provided or is reasonably believed to have been forged or tampered with.



Any fault or damage of the product is caused by unauthorized use or modification of the product, including exposure to moisture, entry of foreign bodies (water, oil, sand, etc.) or improper installation or operation.

Product labels, serial numbers, waterproof marks, etc. show signs of tampering or alteration.

Damage is caused to the product by uncontrollable external factors, including fire, floods, high winds, or lightning strikes.

A product is not delivered to SIYI within seven (7) calendar days after Return & Refund Service confirmation is sent from SIYI.

Other circumstances stated in this policy.

## 7.2.2 15-Day Replacement

You can request Replacement Service:

Within fifteen (15) calendar days of receiving the product if the product has sustained a substantial damage in transit, provided always that the damage proof issued by the carrier can be provided to SIYI.

Within fifteen (15) calendar days of receiving the product if the product does not match the original description of the product in one or more significant respects.



Within fifteen (15) calendar days of receiving the product if the product suffers performance failure.

Replacement Service will not be provided where:

Service is requested more than fifteen (15) calendars days after receiving a product.

Legal proof-of-purchase, receipts, or invoices are not provided, or are reasonably believed to have been forged or tampered with.

A product sent to SIYI for replacement does not include all original accessories, attachments, and packaging, or contains items damaged by user error.

A product is found to have no defects after all appropriate tests are conducted by SIYI.

Any fault or damage of the product is caused by unauthorized use or modification of the product, including exposure to moisture, entry of foreign bodies (water, oil, sand, etc.) or improper installation or operation.

Damage is caused by uncontrollable external factors, including fires, floods, high winds, or lightning strikes.

Received product has not been sent back to SIYI seven (7) calendar days after replacement confirmation from SIYI.

Proof of damage during transit issued by the carrier cannot be provided.

Other circumstances stated in this policy.



## 7.2.3 1-Year Warranty Repair

You can request warranty repair service:

If a product does not function as warranted during the warranty period, you may obtain after-sales service by contacting SIYI's service center. You will need to provide a valid proof-of-purchase, receipt, or order number for the warranty service.

Charges may apply for services not covered by this Limited Warranty. Please contact SIYI for information specific to your location.

Please note that the warranty service is only available in the respective SIYI service regions where you purchased your SIYI product.

Warranty Repair service will not be provided where:

Crashes or fire damage caused by non-manufacturing factors, including but not limited to pilot errors.

Damage caused by unauthorized modification, disassembly, or shell opening not in accordance with official instructions or manuals.

Damage caused by improper installation, in correct use, or operation not in accordance with official instructions or manuals.

Damage caused by non-authorized service provider.



Damage caused by unauthorized modification of circuits and mismatch or misuse of the battery and charger.

Damage caused by operation in bad weather (i.e., strong winds, rain, sand/dust storms, etc.)

Damage caused by operating the product in an environment with electromagnetic interference (i.e., in mining areas or close to radio transmission towers, high-voltage wires, substations, etc.)

Damage caused by operating the product in an environment suffering from interference from other wireless devices (i.e., transmitter, video-downlink, Wi-Fi signals, etc.)

Damage caused by reliability or compatibility issues when using unauthorized thirdparty parts.

Damage caused by operating the unit with a low-charged or defective battery.

Products or parts with an altered identification label or from which the identification label has been removed.



# SIYI Technology (Shenzhen) Co., Ltd

Business Inquiry: info@siyi.biz

Phone: +86 400 838 2918

A/S Center: support@siyi.biz