

Introduction

Thank you for purchasing the CATEYE V3.

The V3 is a high-performance computer for riders who wish to train extensively and analyze their data.

2.4GHz-frequency digital wireless technology, which is the same technology used for wireless LAN, is used for both the speed/cadence integrated speed sensor and the heart rate sensor. This technology practically eliminates interference from external noise and cross-talk with other wireless computer users, providing you with stress-free riding.

Read this instruction manual thoroughly and understand the functions of the computer before using it.

Keep it in a safe place for future reference.

Important

- Always follow the sections that are marked with “⚠ Warning!!!”.
- No part of this manual may be reproduced or transmitted without the prior written permission of CatEye Co., Ltd.
- The contents and illustrations in this manual are subject to change without notice.
- If you have any questions or concerns about this manual, please contact CatEye at www.cateye.com.

About the manuals

Basic installation and operation

Please go here for installation of the unit on the bicycle, use of the heart rate measurement function, preparing the computer, and the basic operation of the product.

1. How to install the unit on your bicycle See page 6-8
2. Heart rate sensor See page 9
3. Preparing the computer See page 10-15
4. Basic operation of the computer See page 16-17

Measurement screen

Please go here to learn how to operate the computer functions.

- Measurement screen See page 18-22

Ride data review

Please go here to check and manage recorded data.

- File view See page 24-27

Changing computer configuration

Please go here for changing and checking each menu items.

- Changing the computer configuration See page 23-34

Advanced use

- Recording lap and split time data See page 20 “Lap function”
- Training with target heart rate zones See page 37
“Use of the target zone”

Introduction	1	Changing the computer configuration ...	23
About the manuals	1	File view (FILE VIEW)	24
Proper use of the CatEye V3	3	Setting the clock/date	
Description of computer and its parts ...	4	(CLOCK.DATE)	28
Computer	4	Wheel selection and tire	
Accessories	4	circumference ((WHEEL))	29
Screen display	5	Searching the sensor ID	
How to install the unit on your bicycle ...	6	(SEnSOR-ID)	29
1. Attach the bracket to the stem or		Setting the measurement unit	
handlebar	6	(UnIt)	31
2. Mount the speed sensor and		Total distance manual entry	
magnet	7	(ODO InPUT)	31
3. Remove/Install the computer	8	Setting the auto-mode	
Heart rate sensor	9	(AUTO MODE)	32
Before wearing the heart rate sensor	9	Setting the countdown distance	
Wearing the heart rate sensor	9	(C.D.DST→)	32
Preparing the computer	10	Setting sound (SOUnD)	33
Removing the insulation sheet	10	Setting the target heart rate zone	
1. Formatting/Restarting operation	11	(HR.ZOnE)	34
2. Date/Clock setting	11	Heart rate training	35
3. Tire circumference input	12	1. Improving general fitness	35
4. Set the sensor ID	13	2. Training for competition	36
5. Selecting speed unit	14	3. Use of the target zone	37
6. Operation test	15	Trouble shooting	38
Sensor signal status	15	Trouble on display	38
Basic operation of the computer	16	Trouble on operation	40
Functions on the measurement		Replacing battery	41
screen	16	Computer	41
Starting/Stopping the		Heart rate sensor	41
measurement	17	Speed sensor	41
Backlight	17	Maintenance	42
Resetting the measurement data	17	Spare accessories	42
Power-saving function	17	Specifications	43
Measurement screen	18	Registration	44
Upper and middle display data	18	Limited warranty	44
Lower display data	19		
Pace function	20		
Lap function	20		
Countdown distance	21		
Target heart rate zone	22		

Proper use of the CatEye V3

Observe the following instructions for safe usage.

The meaning of icons in this manual:

 **Warning!!!** : Sections marked with these icons are critical for safe use of the device. Be sure to follow these instructions.

Caution : Important cautionary notes on the use and operation of the V3.

* Helpful tips are highlighted with asteriks.

Warning!!! :

- Pace maker users should never use this device.
- Do not concentrate on the data while riding. Always be sure to ride safely.
- Do not leave any battery within the reach of children, and dispose of them correctly. If a battery is swallowed, consult a doctor immediately.

Caution:

- Regularly check the positions of the magnets and the speed/cadence sensors and make sure that they are securely mounted. Tighten it firmly if there is any looseness.
- Avoid leaving the main unit / wireless sensor in direct sunlight for extended periods of time.
- Do not disassemble the computer, heart rate sensor, or speed sensor.
- Do not subject the computer, heart rate sensor, or speed sensor to strong impact; take care also to prevent any of them from falling.
- Do not use paint thinner or rubbing alcohol to clean the unit.
- Stop using the unit if you have skin irritation with the HR strap or electrode pad.
- Do not twist or pull strongly the heart rate sensor.
- The heart rate sensor may deteriorate due to long-term use. Replace the heart rate sensor if it has frequent measurement errors.
- As a nature of liquid crystal displays, sunglasses with polarized lens may block the visibility.


2.4GHz digital wireless system

2.4GHz-frequency digital wireless technology, which is the same technology used for wireless LAN, is used for both the speed/cadence integrated speed sensor and the heart rate sensor. This technology practically eliminates interference from external noise and cross-talk with other wireless computer users, and enables to store highly reliable data. However, in a very rare occasions, objects and places may generate strong electromagnetic waves and interference, which may result in incorrect measurement:

- TV, PC, radios, motors/engines, or in cars and trains.
- Railroad crossings and near railway tracks, around television transmitting stations and radar bases.
- Other wireless computers or digitally controlled lights.

Description of computer and its parts

Computer

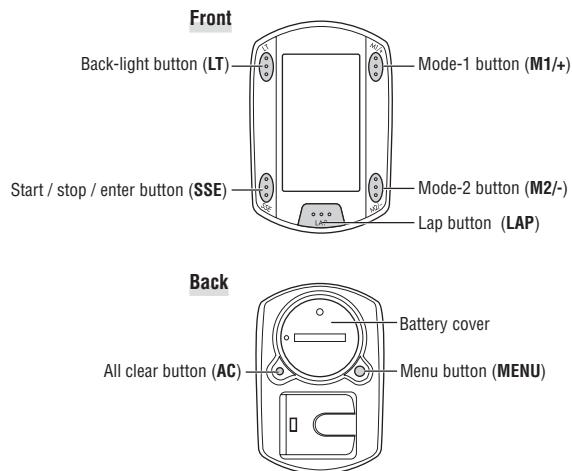


Accessories

Bracket /
Bracket band



Speed sensor
(SPEED/CADENCE)

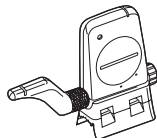

Bracket rubber pad




Wheel magnet




Cadence magnet



Nylon ties (x5)

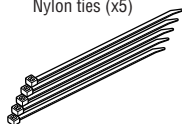

Heart rate sensor / HR strap

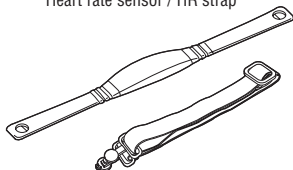

Screen display

⌂ : Speed sensor signal

Indicate Speed sensor signal status. (page 15)

🔔 : Alarm

Lights up when the HR alarm sound feature is turned on.

Ⓐ Ⓑ : Wheel selection

Displays the wheel currently selected.

♥ : Heart rate sensor signal

Indicate Heart Rate sensor signal status. (page 15)

🎯 : Target zone

Lights up when the target zone is on, and flashes when it is out of the zone.

↗ : Speed pace arrow

The pace arrows show whether the current speed is faster (▲) or slower (▼) than the average speed.

km/h mph : Speed unit

Flashes while speed measurement is in progress.

🔋 : Low battery indicator

Lights up when the remaining battery capacity for the computer is low.

AV : Average display

Lighting up displays that the speed, heart rate, and cadence displays are average values.

MX : Maximum value display

Lighting up displays that the speed, heart rate, and cadence displays are maximum values.

↗ : Heart rate pace arrow

The pace arrows show whether the current heart rate is faster (▲) or slower (▼) than the average heart rate.

bpm : Heart rate unit

AT : Auto-mode

Lights up when the auto-mode function is on.

LAP : Lap icon

Lights up while the lap data is displayed.

🕒 : Cadence sensor signal

Indicate Cadence sensor signal status. (page 15)

Dot display

Mainly displays mode descriptions for the values displayed just below.


Selected data icon/unit

Displays together with the data currently displayed in the lower display.

Button navigation

Operative buttons at set-up of the computer, or on the menu screen, will flash.

Lights up or flashes when the SSE is operative.

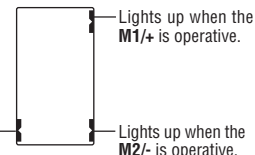

How to install the unit on your bicycle

1. Attach the bracket to the stem or handlebar


The Flex Tight™ bracket can be attached to either the stem or the handlebar depending on how the bracket and band are configured.

Caution:

Tighten the dial on the bracket band by hand only. Over-tightening can damage the screw threads.


When attaching the Flex Tight™ bracket to the stem

- * Attach the bracket with its open end facing to the right.

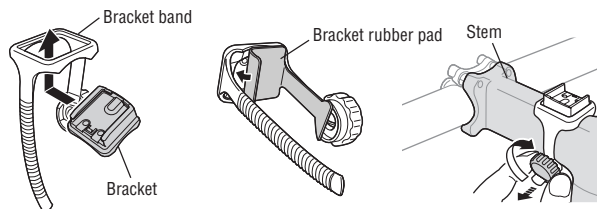

When attaching the Flex Tight™ bracket to the handlebar

- * Attach the bracket with its open end facing to the right.

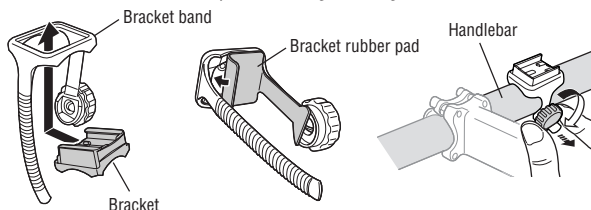


Cut extra length of the band with scissors.

Caution:

Round off the cut edge of the bracket band to prevent injury.


2. Mount the speed sensor and magnet

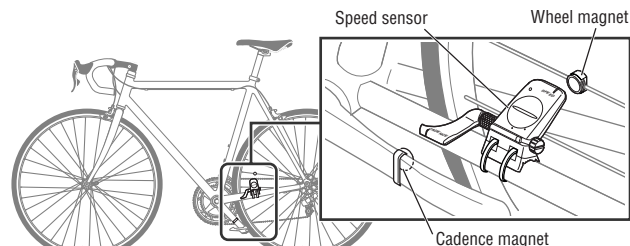

2-1. Temporarily secure the speed sensor

Locate the speed sensor on the left chain stay as shown above, and loosely secure it with the nylon ties.

- * Do not tighten the nylon ties completely at this stage. Once a nylon tie is tightened, it cannot be pulled out.

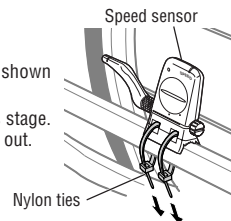


2-2. Mount the magnet

1. Loosen the setscrews both on the SPEED side and CADENCE side of the speed sensor, and turn the sensor to the angle as shown on the right.
2. Temporarily secure the wheel magnet to the spoke so that it faces the sensor zone on the SPEED side.
3. Temporarily secure the cadence magnet inside the crank with nylon ties, so that it faces the sensor zone on the CADENCE side.


- * When the speed sensor is not positioned appropriately in respect to the two magnets (in both Steps 2 and 3), move the speed sensor back and forth so that it is positioned properly. After you move the speed sensor, adjust the position so that the two magnets face the relevant sensor zone.

4. After adjustment, tighten the nylon ties firmly to secure the speed sensor.

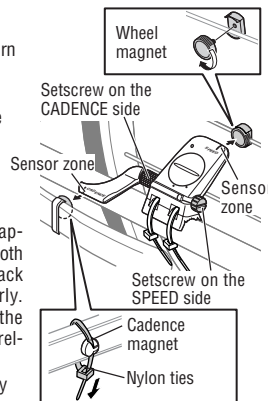

2-3. Adjust the distance to the magnet

1. Adjust the distance between the wheel magnet and the SPEED side of the speed sensor to be about 3 mm. After adjustment, tighten the setscrew on the SPEED side.
2. Adjust the distance between the cadence magnet and the CADENCE side of the speed sensor to be about 3 mm. After adjustment, tighten the setscrew on the CADENCE side.

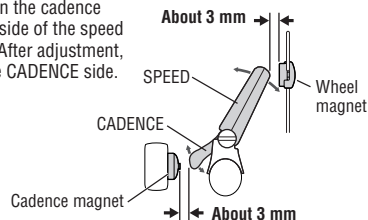

2-4. Securing various parts

Tighten the speed sensor, setscrew, and magnet firmly, and check for any looseness.

- * For steel axle pedals, cadence magnet can be compactly installed onto the end face of the pedal axle. Make sure to remove the double-sided tape from the magnet when doing this.




3. Remove/Install the computer


Caution:

When removing, hold the unit to prevent it from falling.

Install

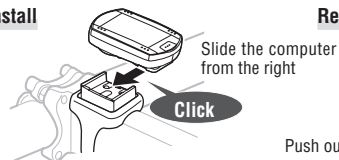


Remove

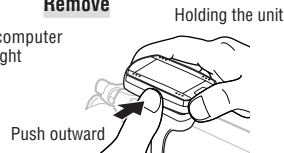

Heart rate sensor

Heart rate is measured when the heart rate sensor is worn on the chest.




Before wearing the heart rate sensor

⚠ Warning!!! :

This product must NOT be used by those who have a pacemaker.

- To avoid measurement errors, it is recommended to moisten the electrode pads with water.
- If your skin is ultra-sensitive, the electrode pad may be moistened with water and worn on a thin undershirt.
- Chest hair may interfere with the measurement.

Wearing the heart rate sensor

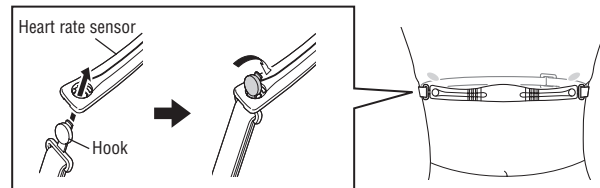

1. Insert the HR strap hook to a hole on the heart rate sensor, and push it until it clicks.
2. Wear the heart rate sensor with the HR strap, and adjust the length of the HR strap to fit your chest size (under bust). Fastening the strap too tightly may cause discomfort.
3. Insert the HR strap hook to another hole on the heart rate sensor, and push it until it clicks.
4. For removal, hold near the hole on the heart rate sensor and the hook, and twist off.
 - * Ensure that the rubber part of the electrode pad is in direct contact with the body.
 - * When your skin is dry, or wearing the heart rate sensor on top of your undershirt may produce measurement errors.
 - To avoid errors, moisten the rubber part of the electrode pad.


Preparing the computer

Computer's basic items must be set up before using it.

Removing the insulation sheet

When using the unit for the first time after purchasing, open the battery cover and remove the insulation sheet.

* After you remove the insulation sheet, replace the battery cover in place.

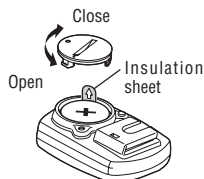


Flow of set-up

There are 2 different set-up operations:


- Formatting operation: At initial purchase, or reset all to default.
- Restarting operation: When you replace batteries, or an error is displayed.

Each operation has a different flow of set-up.

For formatting:

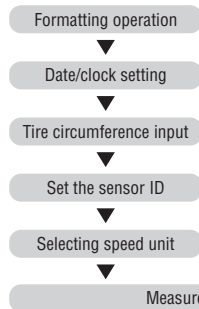

For restarting:

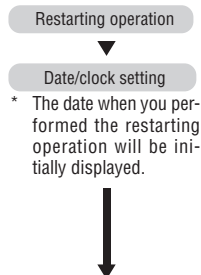

In the restarting operation, the following data are retained.

Measurement screen
Total time
Total distance
Menu screen
File data saved
Time format
Date
Tire circumference and wheel selection
Speed unit
Sensor ID
Auto-mode
Countdown distance
Sound
Setting the target zone

* If mistake was made or "ID-ERROR" showed in the initial set up, go through the full initial set up steps first, and all corrections can be made afterwards through Menu screens. (page 23)



1. Formatting/Restarting operation

Formatting operation (At initial purchase, or reset all to default.)

Caution: All data are reset to the default and deleted.

1. While pressing the **MENU** button on the back of the computer, press **AC** button. Release the **MENU** button when a test pattern is displayed on the screen. The date/clock setting screen appears. Continue with date/clock setting.

Formatting operation:




After a test pattern is displayed, all screen items light up.

* When all screen items light up without any test pattern displayed on the screen, the formatting operation has not been completed properly. Perform the formatting operation again.

Restarting operation (When you replace batteries, or an error is displayed.)

1. Press the **AC** button on the back of the computer. After all screen items light up for a second, the date/clock setting screen appears. Continue with date/clock setting.

Restarting operation:



All screen items light up (for a second).

* Most of the settings and file data saved are retained for the restarting operation (see chart on page 10).

2. Date/Clock setting

Set the current date and time.

1. Select the date display format. Select the date display format from "YY/MM/DD", "MM/DD/YY", and "DD/MM/YY" using the **M1/+** and **M2/-** buttons, and confirm with the **SSE** button.

Switch the display: **M1/+** (or) **M2/-**

Confirm:



2. Enter the "Year", "Month" and "Day."
Enter the "Year", "Month" and "Day" in the display order selected in Step 1 using the **M1/+** and **M2/-** buttons, and confirm with the **SSE** button. Enter the last 2 digits of the year.


Increase/decrease: (or) Confirm:



3. Select the clock display format.

Select "**24h** (24 hour)" or "**12h** (12 hour)" using the **M1/+** and **M2/-** buttons, and confirm with the **SSE** button.

24h ↔ 12h: (or) Confirm:

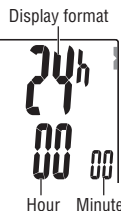

4. Enter the "Hour" and "Minute."

Enter the "Hour" using the **M1/+** and **M2/-** buttons, confirm with the **SSE** button, and then enter the "Minute" in the same way.

Increase/decrease: (or) Confirm:

5. After you set the date/clock, press the **MENU** button to proceed to the next set up item.

For the formatting operation: To the "Tire circumference input" screen below
For the restarting operation: To the measurement screen and ready for use

3. Tire circumference input

Enter the tire circumference of the bicycle wheel in millimeter.

1. Enter the last 2 digits of the tire circumference.

Enter using the **M1/+** and **M2/-** buttons, and move digits using the **SSE** button. Then, enter the first 2 digits in the same way.

Increase/decrease: (or) Move digits:



2. After completed, press the **MENU** button to proceed to "Set the sensor ID" below.

To "Set the sensor ID":

Tire circumference

You can find the tire circumference (L) of your tire size in the chart below, or actually measure the tire circumference (L) of your bicycle.

How to measure the tire circumference (L)

For the most accurate measurement, do a wheel roll out. With the tires under proper pressure, place the valve stem at the bottom. Mark the spot on the floor and with the rider's weight on the bike, roll exactly one wheel revolution in a straight line (until the valve comes around again to the bottom). Mark where the valve stem is and measure the distance in millimeter.

* For your reference, use the tire circumference chart below.



Tire size	L (mm)	Tire size	L (mm)	Tire size	L (mm)
12 x 1.75	935	26 x 1(59)	1913	650 x 20C	1938
14 x 1.50	1020	26 x 1(65)	1952	650 x 23C	1944
14 x 1.75	1055	26 x 1.25	1953	650 x 35A	2090
16 x 1.50	1185	26 x 1-1/8	1970	650 x 38A	2125
16 x 1.75	1195	26 x 1-3/8	2068	650 x 38B	2105
18 x 1.50	1340	26 x 1-1/2	2100	700 x 18C	2070
18 x 1.75	1350	26 x 1.40	2005	700 x 19C	2080
20 x 1.75	1515	26 x 1.50	2010	700 x 20C	2086
20 x 1-3/8	1615	26 x 1.75	2023	700 x 23C	2096
22 x 1-3/8	1770	26 x 1.95	2050	700 x 25C	2105
22 x 1-1/2	1785	26 x 2.00	2055	700 x 28C	2136
24 x 1	1753	26 x 2.10	2068	700 x 30C	2146
24 x 3/4 Tubular	1785	26 x 2.125	2070	700 x 32C	2155
24 x 1-1/8	1795	26 x 2.35	2083	700C Tubular	2130
24 x 1-1/4	1905	26 x 3.00	2170	700 x 35C	2168
24 x 1.75	1890	27 x 1	2145	700 x 38C	2180
24 x 2.00	1925	27 x 1-1/8	2155	700 x 40C	2200
24 x 2.125	1965	27 x 1-1/4	2161	29 x 2.1	2288
26 x 7/8	1920	27 x 1-3/8	2169	29 x 2.3	2326

4. Set the sensor ID

Set the heart rate sensor ID and the speed sensor ID.

- * This unit requires the sensor ID in order for the computer to receive signal from the sensors.
- * To check the sensor ID, heart rate sensor must be worn properly (page 9), and be within 5 m from the bicycle with a speed sensor mounted (page 7).
- * When performing ID Synch, make sure there is no other similar sensors in the surrounding area. (It may pick up other sensor's ID)

1. Wear the heart rate sensor.

2. Press the **SSE** button to start searching for the heart rate sensor ID.

When the heart rate is displayed as "ID-OK" on the screen, searching is completed.

Start searching:




- Verify that the speed/cadence sensor is mounted properly to the bicycle.
- Press the **SSE** button to start searching the speed sensor ID. When the speed (cadence) is displayed as “ID-OK” on the screen by spinning the rear wheel or crank, searching is completed.

Start searching:



- Press the **MENU** button to proceed to “Selecting speed unit” below.

To “Selecting speed unit”:

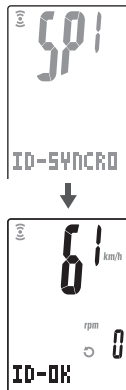

* This unit enters the search mode for 5 minutes after starting the ID check. Press the **SSE** button during the search mode, then “ID-SKIP” is indicated and it proceeds to “Selecting speed unit” screen below. Or, unless a sensor signal is received in 5 minutes, “ID-ERROR” is indicated and it proceeds to “Selecting speed unit” screen below. When “ID-SKIP” or “ID-ERROR” is indicated, this unit is not ready for measurement because the sensor ID has not been registered even though the set-up is completed. Be sure to check the sensor ID from the menu screen “Searching the sensor ID” (page 29).

5. Selecting speed unit

Select the speed unit from “km” and “mile”.

- Select the speed unit.

km ↔ mile: (or)

- After selecting, press the **MENU** button. The measurement screen appears and the computer set-up is completed.



6. Operation test

Test the functioning of the speed sensor (SPEED) and the cadence sensor (CADENCE).

- * If the sensor signal icons, and are turned off, press the **M1/+** or **M2/-** button to turn them on.

Speed sensor (SPEED)

- Raise the rear wheel and spin the wheel.
- When flashes on the computer screen and the speed is displayed, it is operating normally.



Cadence sensor (CADENCE)

- Turn the crank.
- When flashes on the computer screen and the cadence is displayed, it is operating normally.



* When or does not flash, the position of the sensor and the magnet is not proper. Check and adjust the position of the sensor and magnet again (page 7).

Important: In the following situations, it is possible that other sensor's ID was picked up; (such can happen when performing ID Synch at the race venue or group rides)

- Does not display values, even though sensor/magnet position is proper
 - Does not display HR values, even though HR sensor is strapped properly
- Recommended Action:** Go to the computer's ID Synch setup screen (page 23) and go through the process of ID Synch. (Make sure that there is no similar devices in the vicinity. Signal transition distance can vary from environmental conditions such as weather, buildings, etc)

Sensor signal status

If there is no incoming signal for approximately 5 minutes, the transmission stops and no longer receive the sensor data.

Once you press the **M1/+** or **M2/-** button, the computer will come out of the Sleep mode and return to the Stand-by for sensor signal.

Signal transmission status can be checked with Signal icon.

(flashing) : Receiving sensor signal

(constant) : Stand-by for sensor signal


(off) : Transmission off

* Transmission off status is independent for heart rate and speed/cadence sensor. If both sensors stop transmission, the computer screen will change to Sleep mode (page 17).

Basic operation of the computer


Functions on the measurement screen

The measurement screen displays 4 different types of data, which are switched by pressing the **M1/+** and **M2/-** buttons.
The display data are as follows.

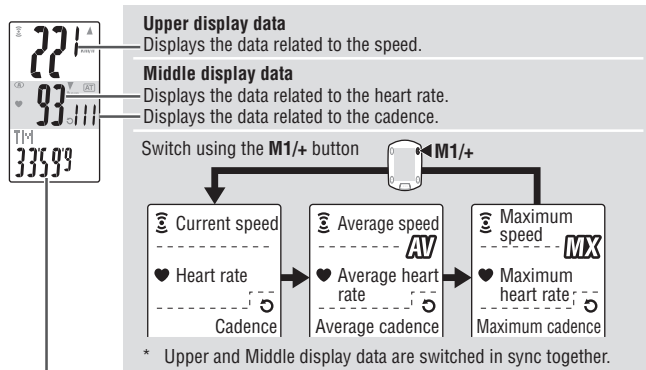

Lower display data

Displays the other data.

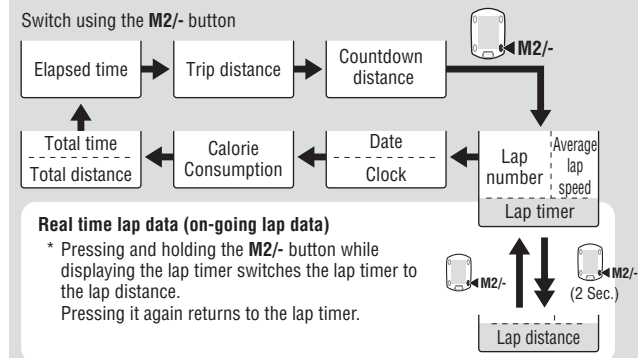

Starting/Stopping the measurement

Initially, the unit starts or stops measurement automatically in sync with the bicycle motion. This is called auto-mode function. "km/h" or "mph" flashes during measurement.


The total distance, maximum speed, maximum heart rate, and maximum cadence are updated independently of starting/stopping measurement.

Auto-mode function


When the auto-mode is turned on (**AT** lights up), the unit detects the wheel spinning, and starts/stops measurement automatically. When the auto-mode is turned off (**AT** lights off), the unit starts/stops measurement by using the **SSE** button.

* For on/off of the auto-mode, see the menu screen "Setting the auto-mode" (page 32).

* When the transmission is stopped and Sensor signal icons , ,  are off (page 15), the main timer may not start due to speed signal not responding. Press the **M1/+** or **M2/-** button to turn on the sensor signal icons , , .

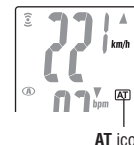

AT icon



Backlight

Pressing the **LT** button illuminates the displays for about 3 seconds.

* Pressing any button while backlight is still on extends the illumination for another 3 seconds.

Resetting the measurement data


To reset the measurement data (TM, DST, Lap Time, C.D. DST, etc) and the lap data, simultaneously press the **SSE** button and the **M1/+** or **M2/-** button in the measurement screen.

* Resetting the measurement data saves the data automatically on a file. (page 24)

* The screen will freeze for about 2 seconds after resetting; however, all measurements are operating normally, including the elapsed time.

* The countdown setting (**C.D.DST**→) is returned to the menu set value you set.

* Cannot reset for 5 seconds after pressing the **LAP** button.

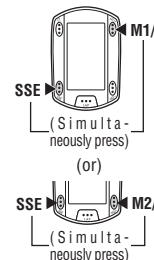

Power-saving function

When the computer does not receive any data for 5 minutes, it will enter the power-saving mode, in which only the date/clock is displayed. By pressing any buttons except the **AC** recovers from the power-saving mode, and the measurement screen appears. You must press a button when the computer is in power saving mode before it will start to measure any data.



Power-saving mode

Measurement screen

Upper and middle display data

1 Current speed
Displays the current speed.
Updated every second.

2 Heart rate
Displays the heart rate in real time.
Updated every second.

3 Cadence
Displays the number of pedal rotations per minute.
Updated every second.

4 Average speed ^{*1}
Displays the average speed after the start of measurement.

5 Average heart rate ^{*2}
Displays the average heart rate after the start of measurement.
The average will not be reflected when the heart rate is not measured.

6 Average cadence ^{*3}
Displays the average cadence after the start of measurement.
The average will not be reflected when you stop pedaling.

7 Maximum speed
Displays the maximum speed after the start of measurement.
Updated independently of starting/stopping measurement.

8 Maximum heart rate
Displays the maximum heart rate after the start of measurement.
Updated independently of starting/stopping measurement.

9 Maximum cadence
Displays the maximum cadence after the start of measurement.
Updated independently of starting/stopping measurement.

*1: When the trip distance (DST) exceeds 10,000 km [mile], or the elapsed time (TM) exceeds 100 hours, [E] appears indicating further measurement is impossible. Clear the data by resetting (page 17).

*2: This device stops calculating the average when the heart rate sensor is detached, and resumes the calculation when the heart rate sensor is worn again. This feature produces actual averages with the heart rate sensor worn.

*3: This device calculates the average excluding the time when you stop pedaling. This feature produces actual averages, which are different from those with conventional models that calculate it for the entire measurement time period.

Lower display data

Elapsed time
Displays the elapsed time from the start of measurement to the 1/10 second.
When it exceeds 99:59'59", it repeats from 00'00"00.
* When the elapsed time reaches 1 hour, the 1/10 second is not displayed.

Trip distance
Displays the trip distance from the start of measurement.

Countdown distance (page 21)
Displays the countdown distance to the target distance.

10 Lap number (page 20)
Displays the number of current lap.

11 Average lap speed in real time
Displays the average lap speed of the current lap in real time.

12 Lap timer
Displays the elapsed time of the current lap in real time.

Trip lap distance in real time
Displays the trip distance of the current lap in real time.

13 Date
Displays the day, month, and year (last 2 digits).
* Display format is different depending on display set up.

14 Clock
Displays the current time of day in the 24- or 12-hour system.

Calorie Consumption
Displays the estimated calorie consumption from the start of measurement based on the heart rate.

15 Total time
The total time is accumulated time since purchase. It can only be reset with Format (page 11).


16 Total distance
The total distance is accumulated distance. It is updated independently of starting/stopping measurement.
It can be edited to desired value.

Pace function

2 types of pace arrow icons for the current speed and the heart rate are displayed on the screen.


These arrow icons indicate whether the current speed (heart rate) is above or below the average speed (average heart rate).

- ▲ : Appears when the current value is above the average.
- ▼ : Appears when the current value is below the average.
- No arrows : When the current value is equal to the average, or zero.

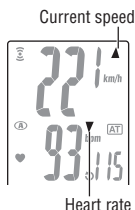

Lap function

Pressing the **LAP** button on the measurement screen during measurement records the measurement data between a given set of points (average lap speed/maximum lap speed, average lap heart rate/maximum lap heart rate, lap time/split time, and trip lap distance) up to 99 points. Immediately after recording, the lap data are displayed in the order as shown below, and then return to the measurement screen.

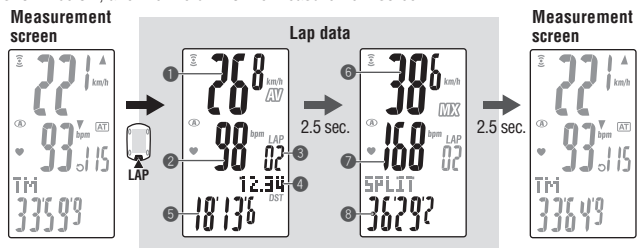


- 1 **Average lap speed**
- 2 **Average lap heart rate**
Displays the average lap speed (average lap heart rate) from the previous point (for L-01: from the start of measurement).
- 3 **Lap number**
Displays the lap number just recorded.
* When the total number of laps exceeds 99 points, "--" appears indicating further lap recording cannot be done.
- 4 **Trip lap distance**
Displays the trip lap distance from the previous point (for L-01: from the start of measurement).
- 5 **Lap time**
Displays the elapsed time from the previous point (for L-01: from the start of measurement).
- 6 **Maximum lap speed**
- 7 **Maximum lap heart rate**
Displays the maximum lap speed (maximum lap heart rate) from the previous point (for L-01: from the start of measurement).
- 8 **Split time**
Displays the total elapsed time from the start of measurement.

Lap time and split time

The lap time displays elapsed time from the last press of the **LAP** button.

The split time displays the elapsed time from the start of measurement to the point **LAP** button is pressed.

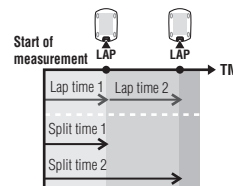


* The measured lap data is saved to a file when you perform a reset operation (page 17) and can be reviewed in "File view" (page 24).

* Pressing the **LAP** button while the total number of laps reaches 99 points displays the lap data, but "--" appears in place of the lap number indicating further recording is impossible.

Advance use of the real time lap data

For the real time lap data indicated in the lower display, the unit starts/stops measurement in sync with the main time measurement; however, it resets and restarts the data every time you press the **LAP** button.

This independent feature of lap time can be useful also for intervals and sectional trials such as hill climb section.

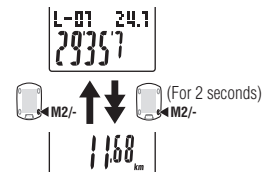

Countdown distance

The countdown distance feature displays the countdown distance to a predetermined target trip distance, and notifies when it reaches zero. When it reaches the target trip distance, the unit switches any measurement data to the countdown data, and notifies it by flashing the numeric/dot display and an alarm sound.



In case of 20 km

Example of how the countdown distance is used

1. Entering the race event distance

For distance system events such as a road race and century ride, enter the race event distance before the start, and develop your strategy and pace based on the countdown distance during the race.


2. Entering the destination sign distance

For touring, enter the sign distance whenever you encounter a destination sign along the road, and develop your pace based on the countdown distance.

3. Entering the periodical target distance

Enter the periodical target distance for a week, month, or year to check your progress.


* The target trip distance is set from the menu screen "Setting the countdown distance" (page 32).

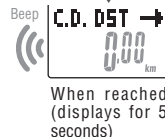

Target heart rate zone

During measurement,  on the screen displays the target heart rate status.

-  (constant) : The target zone is set to any of **HR.ZONE:1** to **4**.
-  (flashing) : The current heart rate is out of the selected zone.
-  (off) : The target zone is set to off.

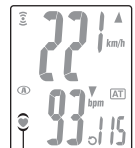


Target heart rate zone

* The target heart rate zone is set from the menu screen "Setting the target heart rate zone" (page 34).

Changing the computer configuration

Pressing the **MENU** button in the measurement screen switches to the menu screen. In the menu screen, you can view and delete the files saved, and view and change various configurations.

- * Use the **M1/+** and **M2/-** to change menu items.
- * After changes are made, be sure to review the setting(s) and confirm by pressing the **MENU** button.
- * Leaving the menu screen without any operation for 2 minutes returns to the measurement screen, and changes are not saved.

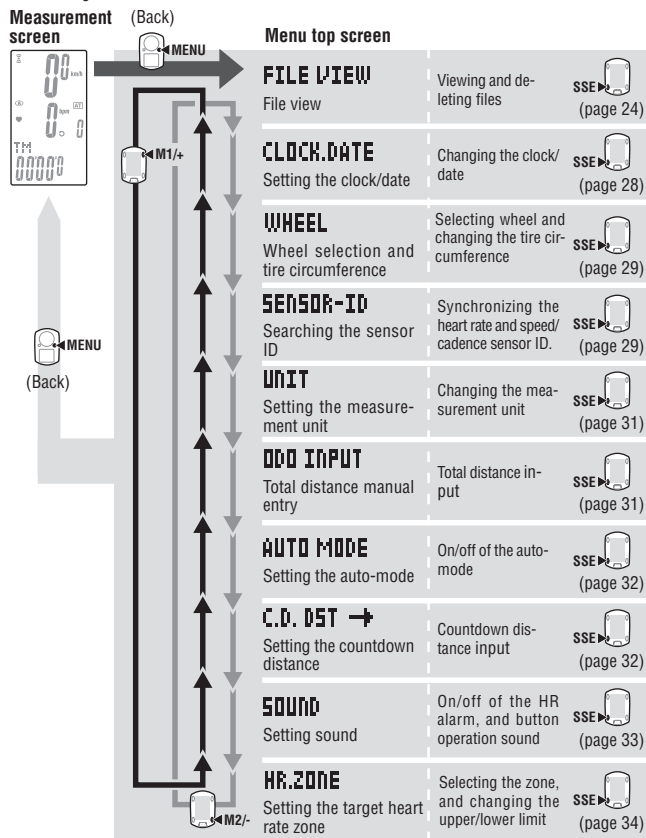

File view

FILE VIEW

The lap and measurement data are saved into a file automatically each time a ride is reset (Resetting Operation page 17)

With the file view, you can review the past rides or delete data recorded.

Measurement data to be recorded in a file

The computer can record up to 14 files^{*1}.

When 14 files (rides) are saved, the oldest one is deleted automatically. The latest file is always **F-01**.

The measurement data to be saved in a file are as follows.

Date of creation: New ← Old



- Trip distance
- Elapsed time
- Various average values (average speed, average heart rate, and average cadence)
- Various maximum values (maximum speed, maximum heart rate, and maximum cadence)
- Date and time of file creation (date/time when the measurement started)
- Number of laps used
- Calorie consumption
- Time distribution to the target zone (time in the zone, time above the zone, and time below the zone) and the percentage (%)
- Lap data (average lap speed, average lap heart rate, maximum lap speed, maximum lap heart rate, lap time, split time, trip lap distance)

^{*1}: One lap per file is used even in the case there is no lap data. Therefore, when the total number of laps reaches 99 points, no more files can be saved.


Viewing the measurement data in a file

View the measurement data in a file saved in the computer.

1. Press the **MENU** button in the measurement screen to switch to the menu top screen.
Press the **SSE** button on the **FILE VIEW** screen.

Menu top: **MENU**
(Back)

Confirm: **SSE**

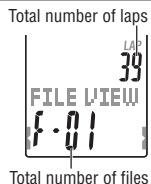


2. Select the file using the **M1/+** and **M2/-** buttons, and confirm with the **SSE** button.

Switching the file number: **M1/+** (or) **M2/-**

3. Scroll through the data saved in each file by pressing the **SSE** button.

The display items are as follows.

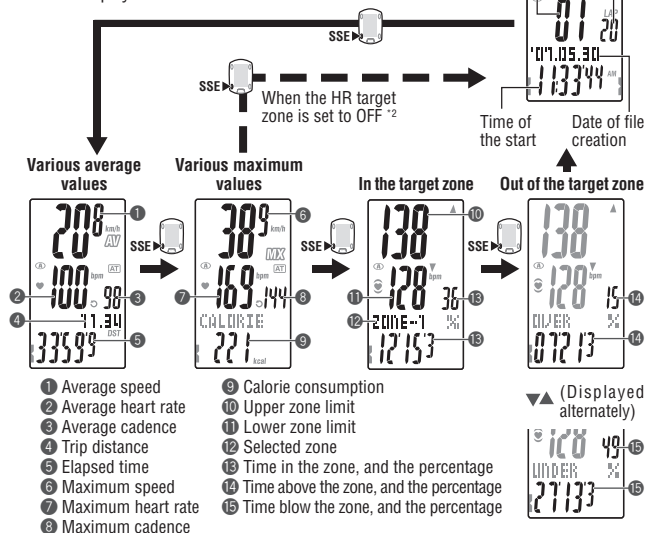

4. Pressing the **MENU** button returns to the menu top screen (**FILE VIEW** screen). Pressing it again returns to the measurement screen.

To the menu top/measurement screen: **MENU**
(Back)

^{*2}: HR target zone is set to **OFF** during measurement, no data related to the target zone is displayed.

* Pressing the **LAP** button while viewing some data switches to viewing the lap data (page 26).


Viewing the lap data

View the lap data in a file saved in the computer.

Select the file number you want to view from the menu screen "File view" (page 24).

1. Press the **LAP** button to view the lap data contained in the file selected.

Press the **LAP** button again to return from the lap data. The average and maximum values are displayed alternately as follows.

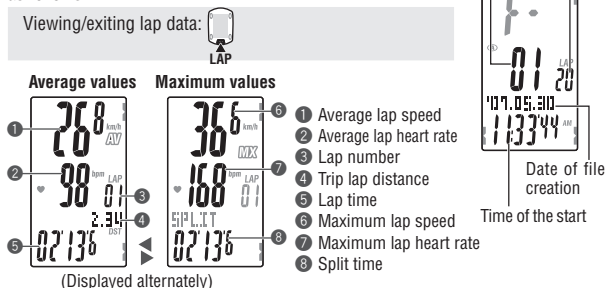

2. Switch the laps, if applicable, using the **M1/+** and **M2/-** buttons.

Switching the lap number:  (or) 

3. Pressing the **MENU** button returns to the menu top screen (**FILE VIEW** screen). Pressing it again returns to the measurement screen.

To the menu top/measurement screen:  (Back)

Deleting files

Delete the file saved in the computer.

You can select deleting only the file specified, or all files.

Switch to the menu screen "File view" (page 24).

1. Simultaneously press the **SSE** button and the **M1/+** or **M2/-** button to switch to the deleting screen.

Switching to the deleting screen:

 **M1/+** (or)  **M2/-**
(Simultaneously press) (Simultaneously press)

2. Select the file number you want to delete from the date/clock screen of file creation. To delete all files, select "aLL".


Switching the file number:  (or) 
01 ↔ 02 ↔ 03 ... aLL ↔ 01

3. Press the **SSE** button to delete the file.


Deleting files: 

4. Pressing the **MENU** button returns to the menu top screen (**FILE VIEW** screen). Pressing it again returns to the measurement screen.

To the menu top/measurement screen:  (Back)

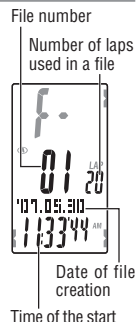

Searching delete screen



* When the computer has no files (**F-00**) the delete file operation is not operable.

* Once a file is deleted, all lap data associated with that file is also deleted.

* Once a file is deleted, it cannot be restored.

Setting the clock/date

CLOCK.DATE

Set the "Clock display format", "Hour", "Minute", "Date display format", "Year", "Month" and "Day."

1. Press the **MENU** button in the measurement screen to switch to the menu top screen.
Switch to the **CLOCK.DATE** screen using the **M1/+** and **M2/-** buttons, and confirm with the **SSE** button.



Menu top:



Changing the menu:



(or)

Confirm:



2. Select the clock display format.
Select "**24h** (24 hour)" or "**12h** (12 hour)" using the **M1/+** and **M2/-** buttons, and confirm with the **SSE** button.

24h ↔ 12h:



Confirm:



Hour Minute

3. Enter the "Hour" or "Minute."
Enter the "Hour" using the **M1/+** and **M2/-** buttons, confirm with the **SSE** button, and then enter the "Minute" in the same way.

Increase/decrease:



Confirm:



4. Select the date display format.
Select the date display format from "**YY/MM/DD**", "**MM/DD/YY**", and "**DD/MM/YY**" using the **M1/+** and **M2/-** buttons, and confirm with the **SSE** button.

Switch the display:



Confirm:



5. Enter the "Year", "Month" and "Day."
Enter the "Year", "Month" and "Day" in the display order selected in Step 4 using the **M1/+** and **M2/-** buttons, and confirm with the **SSE** button. Enter the last 2 digits of the year.

Increase/decrease:



Confirm:



6. Pressing the **MENU** button returns to the menu top screen (**CLOCK.DATE** screen), and confirm the change(s).
Pressing it again returns to the measurement screen.

To the menu top/measurement screen:



Wheel selection and tire circumference

WHEEL

Switch the Wheel Size (**A** / **B**), and change the Tire Size (tire roll out length).

* For the tire size, see "Tire circumference" (page 13).

1. Press the **MENU** button in the measurement screen to switch to the menu top screen.
Switch to the **WHEEL** screen using the **M1/+** and **M2/-** buttons, and confirm with the **SSE** button.

Wheel selection



Current wheel size



Menu top:



Changing the menu:



(or)

Confirm:



2. Select the Wheel Size "A" or "B" using the **M1/+** and **M2/-** buttons.

A ↔ B:



(or)

Confirm:



At this point if change of tire circumference is not necessary, you can escape the setup by pressing the **MENU** button.

3. Enter the last 2 digits of the tire circumference for the wheel selected in Step 1 using the **M1/+** and **M2/-** buttons, and confirm with the **SSE** button.
Then, enter the first 2 digits in the same way.

Increase/decrease:



(or)

Move digits:



4. Pressing the **MENU** button returns to the menu top screen (**WHEEL** screen), and confirm the change(s).
Pressing it again returns to the measurement screen.

To the menu top/measurement screen:



Searching the sensor ID

SENSOR-ID

When moving the computer from one sensor to another or to use a different HR chest strap, this operation must be performed.

- * This unit requires the sensor ID.
The computer cannot receive the sensor signal unless the sensor ID is synchronized properly.
- * To synchronize the sensor ID, the heart rate sensor must be worn properly (page 9), and be near the bicycle with a speed/cadence mounted (page 7).
- * When searching the sensor ID, make sure no other sensors are in the area within 10 m radius.
For the Speed/Cadence sensor, it is also possible to press the Reset button on the sensor to intentionally turn off the signal transmission from the sensor.

- Press the **MENU** button on the measurement screen to switch to the menu top screen.
Switch to the **SENSOR-ID** screen using the **M1/+** and **M2/-** buttons, and confirm with the **SSE** button.



Menu top:



Changing the menu:



Confirm:



- Select the sensor ID to be checked.
Select it from "**Hr** (heart rate sensor)", "**SP1** (speed sensor 1)", and "**SP2** (speed sensor 2)" using the **M1/+** and **M2/-** buttons.

Selecting the sensor:



- Check whether the heart rate sensor is worn properly when you selected "**Hr**", or whether the speed sensor is mounted properly when you selected "**SP1**" or "**SP2**".
- Press the **SSE** button to start searching the ID.
Spin the rear wheel or crank when you selected "**SP1**" or "**SP2**".

When the heart rate or speed (cadence) is displayed with "**ID-OK**" on the screen, synchronization is completed.

Start searching:



- Pressing the **MENU** button returns to the menu top screen (**SENSOR-ID** screen), and confirm the change(s).
Pressing it again returns to the measurement screen.

To the menu top/measurement screen:



- * This unit enters the search mode for 5 minutes after starting the ID synch.
While "**ID-SKIP**" is indicated, press the **SSE** button in the search mode to cancel the ID synch, and "**ID-SKIP**" is displayed. Unless a sensor signal is received in 5 minutes, "**ID-ERROR**" is displayed.
When "**ID-SKIP**" or "**ID-ERROR**" is displayed, the ID has not been synchronized properly. In such a case, the sensor ID retains the previous ID setup.
Be sure to check the sensor/mounting condition before you check the ID again.
- * **SP2** is used when a computer is commonly used for second bicycles. By synchronizing the ID of the second bicycle equipped with a second speed/cadence sensor and the computer with **SP2**, re-synchronizing and the computer with **SP2**, synchronizing the ID is not required every time you move the computer between first bike to the second bike.

Setting the measurement unit

UNIT

Change the unit (**km** or **mile**).

- * Stop measurement and perform the resetting operation (page 17) before you change the unit. Unless you perform the resetting operation, "**DATA RESET**" appears on the screen, preventing from changing the unit.

- Press the **MENU** button in the measurement screen to switch to the menu top screen.
Switch to the **Unit** screen using the **M1/+** and **M2/-** buttons, and confirm with the **SSE** button.



Current speed unit

Menu top:



Changing the menu:



Confirm:



- Select the speed unit using the **M1/+** and **M2/-** buttons.

km ↔ mile:



- Pressing the **MENU** button returns to the menu top screen (**Unit** screen), and confirm the change(s).
Pressing it again returns to the measurement screen.

To the menu top/measurement screen:



- * After the unit is switched, the total distance measured in the past is automatically converted to the new unit.

Total distance manual entry

ODO INPUT

You can enter any value to the total distance.

The total distance in the past can be input after formatting or to a new computer.

- Press the **MENU** button in the measurement screen to switch to the menu top screen.
Switch to the **ODO InPUT** screen using the **M1/+** and **M2/-** buttons, and confirm with the **SSE** button.



Current total value

Menu top:



Changing the menu:



Confirm:



- Enter the total distance using the **M1/+** and **M2/-** buttons, and move digits using the **SSE** button.

- * The total distance shall be entered with a positive value.

Increase/decrease:



Move digits:



- Pressing the **MENU** button returns to the menu top screen (**ODO InPUT** screen), and confirm the change(s). Pressing it again returns to the measurement screen.

To the menu top/measurement screen:  **MENU** (Back)

Setting the auto-mode

AUTO MODE

Switch on/off of the auto-mode (page 17).

- Press the **MENU** button in the measurement screen to switch to the menu top screen. Switch to the **AUTO MODE** screen using the **M1/+** and **M2/-** buttons, and confirm with the **SSE** button.

Menu top:  **MENU** (Back)

Changing the menu:  **M1/+** (or)  **M2/-** Confirm:  **SSE**

- Select **On** or **OFF** using the **M1/+** and **M2/-** buttons.

On ↔ **OFF**:  **M1/+** (or)  **M2/-**

- Pressing the **MENU** button returns to the menu top screen (**AUTO MODE** screen), and confirm the change(s). Pressing it again returns to the measurement screen.

To the menu top/measurement screen:  **MENU** (Back)



Current setting



Setting the countdown distance

C.D. DST →

Enter the target trip distance for the countdown (page 21).

- Press the **MENU** button in the measurement screen to switch to the menu top screen. Switch to the **C.D. DST** screen using the **M1/+** and **M2/-** buttons, and confirm with the **SSE** button.

Menu top:  **MENU** (Back)

Changing the menu:  **M1/+** (or)  **M2/-** Confirm:  **SSE**



Current setting

- Enter the target distance using the **M1/+** and **M2/-** buttons, and move digits using the **SSE** button.

* The target distance can be set to the 0.1 km.

Increase/decrease:  **M1/+** (or)  **M2/-** Move digits:  **SSE**



Target distance
In case of 100.0 km

- Pressing the **MENU** button returns to the menu top screen (**C.D. DST** screen), and confirm the change(s). Pressing it again returns to the measurement screen.

To the menu top/measurement screen:  **MENU** (Back)

Setting sound

SOUND

Switch on/off of the target zone alarm sound and button operation sound.

- Press the **MENU** button in the measurement screen to switch to the menu top screen. Switch to the **SOUND** screen using the **M1/+** and **M2/-** buttons, and confirm with the **SSE** button.

Menu top:  **MENU** (Back)

Changing the menu:  **M1/+** (or)  **M2/-** Confirm:  **SSE**



- Switch between the HR out of zone alarm and button operation using the **SSE** button.

HR.ALARM ↔ **BUTTON**:  **SSE**

HR zone alarm



- Select **On** or **OFF** using the **M1/+** and **M2/-** buttons.

On ↔ **OFF**:  **M1/+** (or)  **M2/-**

Button operation
sound



- Pressing the **MENU** button returns to the menu top screen (**SOUND** screen), and confirm the change(s). Pressing it again returns to the measurement screen.

To the menu top/measurement screen:  **MENU** (Back)

Setting the target heart rate zone

HR.ZONE

You can select the target heart rate zone, and change the upper/lower limit.

- * Stop measurement and perform the resetting operation (page 17) before you can change the target heart rate zone. Unless you perform the resetting operation, "DATA RESET" appears on the screen, preventing from changing the target heart rate zones.
- * For details of the target zone, see "Use of the target zone" (page 37).

- Press the **MENU** button in the measurement screen to switch to the menu top screen.
Switch to the **HR.ZONE** screen using the **M1/+** and **M2/-** buttons, and confirm with the **SSE** button.

Menu top:



Changing the menu:



Confirm:



Current setting



- Select one from **OFF**, **1**, **2**, **3**, or **4** for the target heart rate zone using the **M1/+** and **M2/-** buttons.
When using the target zone, select from 1 to 4, confirm with the **SSE** button, and then proceed to Step 3.
When not using the target heart rate zone, select **OFF**, and then proceed to Step 4.

Select the zone:



OFF ↔ **01** ↔ **02** ... **04** ↔ **OFF**

Confirm:



- Enter the lower limit for the selected zone using the **M1/+** and **M2/-** buttons, and enter the upper limit in the same way after pressing the **SSE** button.

Increase/decrease:



Confirm:



Upper limit



Lower limit

- Pressing the **MENU** button returns to the menu top screen (**HR.ZONE** screen), and confirm the change(s). Pressing it again returns to the measurement screen.

To the menu top/measurement screen:



Confirm:




Heart rate training

This section is just a general overview of training with heart rate data. For more complete information, there are books and websites with more in-depth information. Generally, the heart rate increases during exercise, getting higher in conjunction with the intensity of the workout. Measurement the rate of your heart beat is a good indicator of the intensity of your workout. By setting target HR (heart rate) zones and sticking to pre-set exercises, you will be able to work out more efficiently. Before beginning a training program, be sure to first consult a medical specialist or sports trainer.

1. Improving general fitness

Bicycling is one of the best activities to improve your general fitness. To improve your overall fitness through bicycling, set a target heart rate zone from between 30% and 70% of your maximum HR, depending on your physical strength. For best results, exercise consistently in this zone for periods of at least 20-30 minutes, 3 or more times a week. To obtain your target zone, see the table below, which illustrates the correlation between heart rate and training level. For beginners, it is recommended to start with the level of 30% of your max. From this point, gradually increase the level according to your fitness level and experience. Training at levels over 70% of your HR max will focus more on anaerobic exercise, and less on aerobic exercise. Weight loss usually occurs through longer rides (over 1 hour) at lower HR levels.

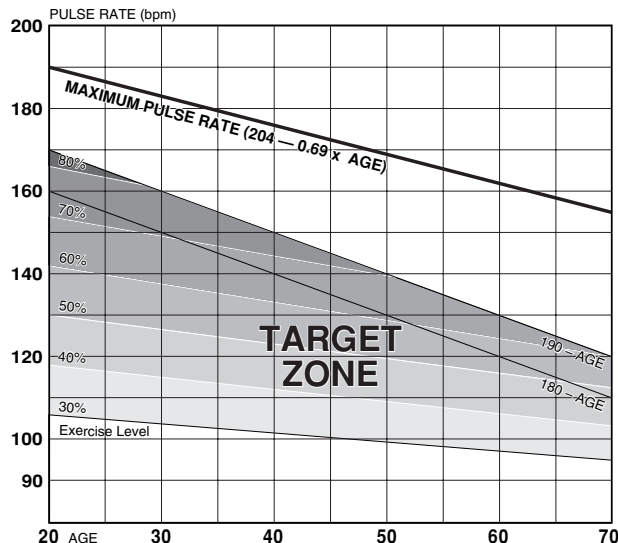

2. Training for competition

Measure your resting heart rate just after waking in the morning and your maximum heart rate (perhaps during competition). Then set your target zone according to your goal:

A) For recovery, endurance training, and weight loss :

60% - 70% (aerobic exercise)



B) For quality endurance and tempo training :

70% - 80% (aerobic exercise)



C) For increasing TT and race ability, and V02 max :

85% + (anaerobic exercise)

D) For anaerobic capacity and sprinting :

92.5% + (anaerobic exercise)

$$\text{Training level (\%)} = \frac{(\text{Target heart rate}) - (\text{Resting heart rate})}{(\text{Maximum heart rate}) - (\text{Resting heart rate})} \times 100$$

$$\text{Target heart rate} = (\text{Maximum heart rate} - \text{Resting heart rate}) \times$$

$$\frac{\text{Training level (\%)}}{100} + \text{Resting heart rate}$$



Resting heart rate

Your resting heart rate is usually the lowest recorded rate soon after waking up in the morning.

Maximum heart rate

The following calculations are generally used: $(220 - \text{age})$ or $(204 - 0.69 \times \text{age})$.
For more precise figure, consult a training specialist.

3. Use of the target zone


When the heart rate is out of the zone during the measurement, the computer sounds an alarm and notifies the rider by flashing .

The heart rate zone is selected from 4 predetermined zones.

For a training aiming at a heart rate of 140 to 160 bpm, select **HR.ZONE:3** as shown below. Then, the computer sounds an alarm when the heart rate falls below 139 bpm, or rises above 161 bpm.

Once the target zone is set to **On**, the relevant data are recorded and the time in the zone, time above the zone, and time below the zone and their percentages can be viewed in the file view (page 24).

* You can enter any upper/lower limit to each zone.

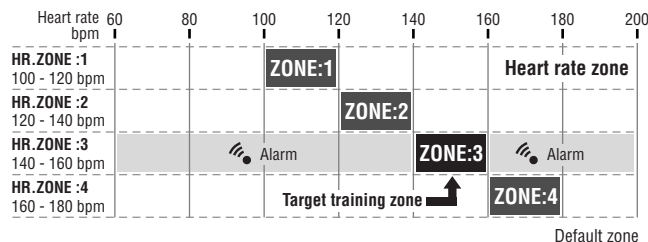

* For the target zone, you can select **OFF** or Zone 1 to 4, and change the upper/lower limit from the menu screen "Setting the target heart rate zone" (page 34).

* On/off of the alarm sound is selected from the menu screen "Setting sound" (page 33).

Trouble shooting

If a malfunction occurs, check the following before contacting CatEye or your retailer for repair or service.

Trouble on display

Trouble	Check Items	Remedy
Display motion becomes slower.	Is the surrounding temperature low (below zero degree Celsius or 32 degrees Fahrenheit)?	Temperatures below freezing may result in slower screen response. Data is not affected.
 Flashes on the screen.	The remaining battery capacity for the computer is low.	Replace it with a new battery (CR2032) immediately. After replacement, be sure to perform the restarting operation (page 11).
No displays appear.	Is the battery for the computer empty?	Replace it with a new battery (CR2032). After replacement, be sure to perform the restarting operation (page 11).
Meaningless display appears.		Perform the restarting operation (page 11).
Cannot measure the trip speed (cadence)	Have you checked the sensor ID? Is the computer ID Synchronised with somebody else's sensor?	Check the speed sensor ID (page 29) for SP1 (speed sensor 1) or SP2 (speed sensor 2).
	Is the Speed and Cadence sensor icon on  ,  ?	If the Speed and Cadence sensor icon is off  ,  , the computer cannot receive data. Press the M1/+ or M2/- button once to turn on the icon.
	Check whether the distance between the speed (cadence) sensor and the magnet is too large.	Adjust the position of the speed (cadence) sensor and that of the magnet correctly. (See "How to install the unit on your bicycle" on page 6.)
	Is the sensor zone of the speed (cadence) sensor off the center of the magnet?	
	Has the power-saving function been activated, showing only date/clock on the screen?	Press any button on the computer to cancel the power-saving function.
	Is the battery for the speed sensor empty?	Replace it with a new battery (CR2032). After replacement, be sure to press the RESET button on the speed sensor.

Trouble	Check Items	Remedy
Heart rate signals are not received.	Have you checked the sensor ID? Is the computer ID Synchronised with somebody else's sensor?	Check the speed sensor ID (page 29) for Hr (heart rate sensor).
	Is the Heart rate sensor icon off  ?	If the Heart rate sensor icon is off  , the computer cannot receive the Heart rate data. Press the M1/+ or M2/- button once to turn on the icon.
	Has the power-saving function been activated, showing only date/clock on the screen?	Press any button on the computer to cancel the power-saving function.
	Is the heart rate sensor attached securely to your body?	Adjust the electrode pad with its rubber surface to have a good contact with the body.
	Dry skin (particularly in winter)	Slightly moisten the electrode pad of the heart rate sensor.
	Is the battery for the heart rate sensor used up?	Replace it with a new battery (CR2032).
Fluctuation in the heart rate indicator, for example it returns to zero and then the heart rate is measured again.	Check whether  lights up on the computer screen. The remaining battery capacity for the computer is low.	Replace it with a new battery (CR2032). After replacement, be sure to perform the restarting operation (page 11).
	Is the electrode pad overly worn and damaged after long use?	Replace it with a new heart rate sensor.
	Is the electrode pad being worn correctly?	To wear the electrode pad correctly, follow the instructions for wearing the heart rate sensor (page 9).
Moving the main unit away from your body will prevent measurement of the heart rate.	Check whether  lights up on the computer screen. The remaining battery capacity for the computer is low.	Replace it with a new battery (CR2032). After replacement, be sure to perform the restarting operation (page 11).
	Is the battery for the heart rate sensor used up?	Replace it with a new battery (CR2032).
Pressing the LT button does not turn on a light.	Check whether  lights up on the computer screen. The remaining battery capacity for the computer is low.	Replace it with a new battery (CR2032). After replacement, be sure to perform the restarting operation (page 11).

Trouble on operation

Trouble	Check Items	Remedy
Pressing the SSE button does not start/stop measurement.	Check whether the auto-mode is turned on (with AT illuminating).	When AT illuminates, the auto-mode is on; you cannot start or stop measurement by pressing the button. Turn off the auto-mode. (See "Setting the auto-mode" on page 32.)
The heart rate sensor (speed sensor) ID check failed.		The battery for the heart rate sensor (speed sensor) is possibly depleted. After replacing the battery with a new one (CR2032), check the sensor ID again (page 29).
Lap data cannot be stored.	Have you already completed 99 laps? Is the lap time over 100 hours (Or is the trip lap distance over 9999.99 km)? Is it immediately after pressing the LAP button?	Delete data files that contain several laps from the file view (page 27) in order to obtain free space for lap recording. With the recording range exceeded, the lap cannot be measured. Perform the resetting operation (page 17) for further measurements. You cannot record the lap for 5 seconds immediately after pressing the LAP button.
Abnormal values appear.	Are there any objects emitting electromagnetic waves (railway tracks, transmitting stations for television, etc.) nearby?	Keep the unit away from any object that may be causing interference, and reset the data (page 17).
In menu mode, cannot change settings.	Is it currently measurement? When the auto-mode is turned on (with AT illuminating), it may enter the measurement mode due to electromagnetic waves. Is it the target zone or the measurement unit that cannot be changed?	Only top menu can be viewed during measurement. Keep the unit away from any object that may be causing interference with electromagnetic waves. To change the target zone and measurement unit, the resetting operation is required. Stop measurement, and perform the resetting operation (page 17).
Measurement data cannot be stored on the file view.	Has the total number of laps reached 99 points?	Delete data files that contain several laps from the file view (page 27) in order to obtain free space for lap recording.

Replacing battery

The product comes with factory-installed batteries. When a battery is empty, replace it with a new one according to the following instructions.

⚠ Warning!!! :

Safely dispose of the old batteries, and do not place them within reach of children. If a battery is swallowed, consult a doctor immediately.


- * When any battery for the computer, heart rate sensor, or speed sensor is depleted, we recommend replacing all batteries at the same time.
- * The battery life shown in this manual is not definitive and it varies depending on the use environment.
- * The battery cover sealing is critical to maintain the waterproof feature. Clean any contamination on the battery cover or the seal, and check whether it seals correctly.

Computer

Battery life: Approx. 1 years when used for 1 hour per day.

- * When the remaining battery capacity is low,  lights up.

1. Remove the battery cover on the back of the computer using a coin, or the equivalent.
2. Insert new lithium batteries (CR2032) with the (+) sign upward, and close the battery cover firmly.
3. After replacement, be sure to perform the restarting operation (page 11), and set the date and time.

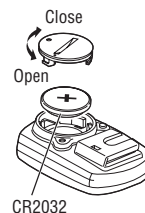


Heart rate sensor

Battery life: Approx. 1 years when worn for 1 hour per day.

1. Remove the battery cover on the back of the heart rate sensor using a coin, or the equivalent.
2. Insert new lithium batteries (CR2032) with the (+) sign upward, and close the battery cover firmly.


- * The heart rate sensor consumes power when worn. Remove the heart rate sensor whenever measurement is not required.

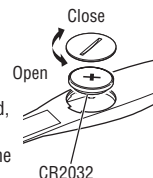

Speed sensor

Battery life: Approx. 1 years when used for 1 hour per day.

1. Remove the battery cover on the speed sensor using a coin, or the equivalent.
2. Insert new lithium batteries (CR2032) with the (+) sign upward, and close the battery cover firmly.
3. After replacement, be sure to press the **RESET** button on the speed sensor, and check that the positions of the magnet and sensor are correct and they are secured firmly.

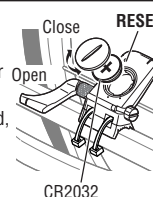

Maintenance


Perform the daily care according to the following instructions.

- Regularly check that the positions of the magnets and sensors are correct, and they are secured firmly.
- When the computer, heart rate sensor, and speed sensor are dirty, wash them with water or wipe them with a soft cloth dampened with diluted neutral detergent, then wipe with dry cloth. Do not use solvents such as benzene or rubbing alcohol as they may damage the surfaces.
- The heart rate strap absorbs sweat easily, and leaving it as such is unsanitary. Wash with neutral detergent.


Spare accessories

Standard accessories


#160-2380
Parts kit



#160-2385
Speed sensor kit



#160-2390
Heart rate sensor kit



#160-2395
HR Strap



#160-0280
Bracket band



#160-2193
Bracket



#169-9691
Wheel magnet



#169-9766
Cadence magnet



#166-5150
Lithium battery (CR2032)



Specifications

Display functions	Upper display	Current speed	0.0 (4.0) – 150.0 km/h [0.0 (3.0) – 93.0 mph] For 27-inch tire size
		Average speed	0.0 – 150.0 km/h [0.0 – 93.0 mph]
		Maximum speed	0.0 (4.0) – 150.0 km/h [0.0 (3.0) – 93.0 mph]
	Middle display	Heart rate	0 (30) – 299 bpm
		Average heart rate	0 – 299 bpm
		Maximum heart rate	0 (30) – 299 bpm
		Cadence	0 (20) – 199 rpm
		Average cadence	0 – 199 rpm
		Maximum cadence	0 (20) – 199 rpm
	Lower display	Date	'07.01.01 – '99.12.31 (Display format can be switched)
		Clock	0:00'00" – 23:59'59" [AM 1:00'00" – PM 12:59'59"] (Both 12 and 24-hour modes can be selected)
		Calorie consumption	0 – 9999/10000 – 999999 kcal (Calculation-based estimation only)
		Total time	0 – 99999 hour
		Odometer	0.0 – 9999.9/10000 – 999999 km [mile]
		Elapsed time	00'00"0 – 59'59"9 / 1:00'00" – 99:59'59"
		Trip distance	0.00 – 9999.99 km [mile]
		Countdown distance	9999.90 – 0.00 km [mile]
		Lap number	L-01 – L-99
		Average lap speed in real time	0.0 – 150.0 km/h [0.0 – 93.0 mph]
		Lap timer	00'00"0 – 59'59"9 / 01:00'00" – 99:59'59"
		Trip lap distance in real time	0.00 – 9999.99 km [mile]
	Lap	Upper display (Average lap speed, maximum lap speed)	
		Middle display (average lap heart rate, Lap number, maximum lap heart rate)	
		Lower display (trip lap distance, lap time, split time)	
Control system		4-bit one-chip microcomputer, crystal oscillator	
Display system		Liquid crystal display (EL backlight)	
Speed/Cadence sensor signal detection system		Noncontact magnetic sensor	
Sensor signal transmission and reception		2.4 GHz ISM Band	
Communication range		5 m (above 5 m, transmission distance may vary due to environmental conditions)	
Operating temperature range		32 °F – 104 °F [0 °C – 40 °C] (This product will not function appropriately when exceeding the Working Temperature range. Slow response or black LCD at lower or higher temperature may happen respectively.)	
Storage temperature range		-4 °F – 122 °F [-20 °C – 50 °C]	
Wheel circumference set range		0100 – 3999 mm	
Power supply/battery life		Computer	: CR2032 x 1 / Approx. 1 years (When using 1 hour/day)
		Heart rate sensor	: CR2032 x 1 / Approx. 1 years (When worn about 1 hour per day)
		Speed sensor	: CR2032 x 1 / Approx. 1 years (When using 1 hour/day)
Dimensions/Weight		Computer	: 2-7/32" x 1-1/2" x 11/16" (56.0 x 38.0 x 17.3 mm) / 0.98 oz (28 g) (With the batteries)
		Heart rate sensor	: 12-13/16" x 1-1/4" x 1/2" (325.0 x 31.4 x 12.2 mm) / 1.41 oz (40 g) (With the batteries)
		Speed sensor	: 2-9/16" x 3-9/16" x 9/16" (65.0 x 90.5 x 14.4 mm) / 1.25 oz (36 g) (With the batteries)

* When the elapsed time exceeds 100 hours, or the trip distance exceeds 9999.99 km/h, "E" appears in place of the average speed.

* Designs and specifications are subject to change without notice, due to modifications or improvements.

Registration

CATEYE Web Site (<http://www.cateye.com>)

For warranty service you must register your product. Please register your V3 as soon as possible. CATEYE provides you technical support and new product information as much as possible.

Please register on-line through our web site, or send the registration card below directly to our Customer Service Department. For registration, please fill in the product's serial number (the 7-digits number marked on on the battery cover of computer).

Limited warranty

2-Year: computer, heart rate sensor and speed sensor

(Not including depletion of batteries)

CatEye products are warranted to be free of defects from materials and workmanship for a period of two years from original purchase. If the product fails to work due to normal use, CatEye will repair or replace the defect at no charge. Service must be performed by CatEye or an authorized retailer.

To return the product, pack it carefully and enclose the warranty certificate (proof of purchase) with instruction for repair.

Please write or type your name and address clearly on the warranty certificate.

Insurance, handling and transportation charges to CatEye shall be borne by person desiring service.

For UK and REPUBLIC OF IRELAND consumers, please return to the place of purchase.

This does not affect your statutory rights.

CAT EYE CO.,LTD.

Service & Research Address for USA:

CATEYE Service and Research Center

1705 14th St. 115 Boulder, CO 80302

Phone: 303.443.4595 Fax: 303.473.0006

Toll Free: 800.5CATEYE E-mail: service@cateye.com

URL: <http://www.cateye.com>

Japan Office:

2-8-25, Kuwazu, Higashi Sumiyoshi-ku, Osaka 546-0041 Japan

Attn: CATEYE Customer Service Section