


RF REMOTE CONTROL PROGRAMMING

Program a Remote

Press the **S** button once

Press and hold either button on the remote you wish to program

Within 5 sec.

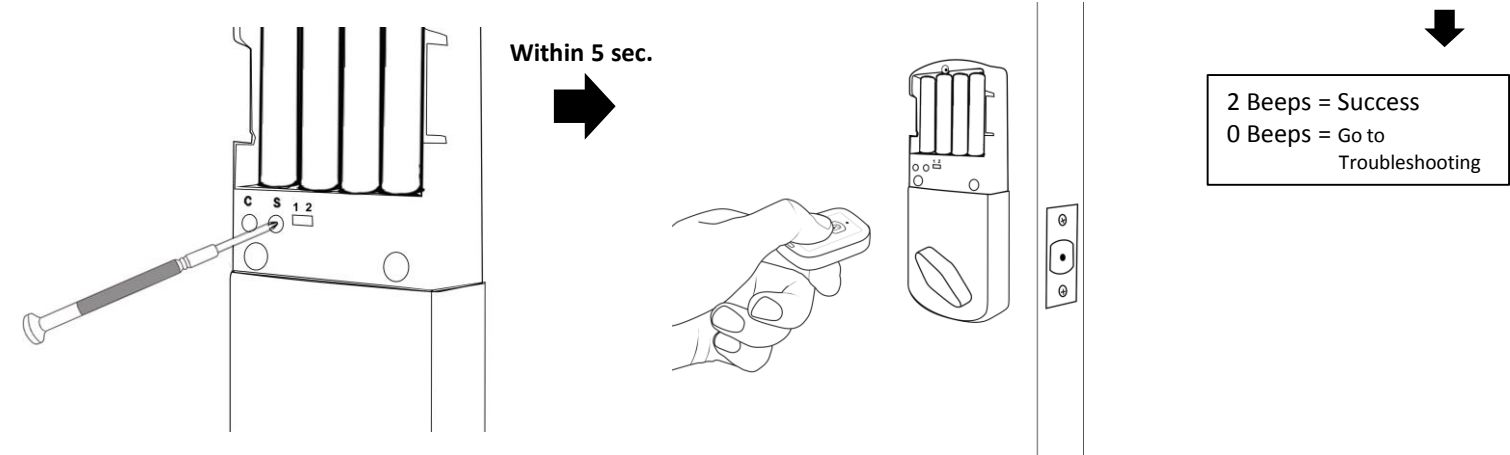


To clear all remotes

Press the **C** button once

Press and hold either button on the remote you wish to delete

Within 5 sec.

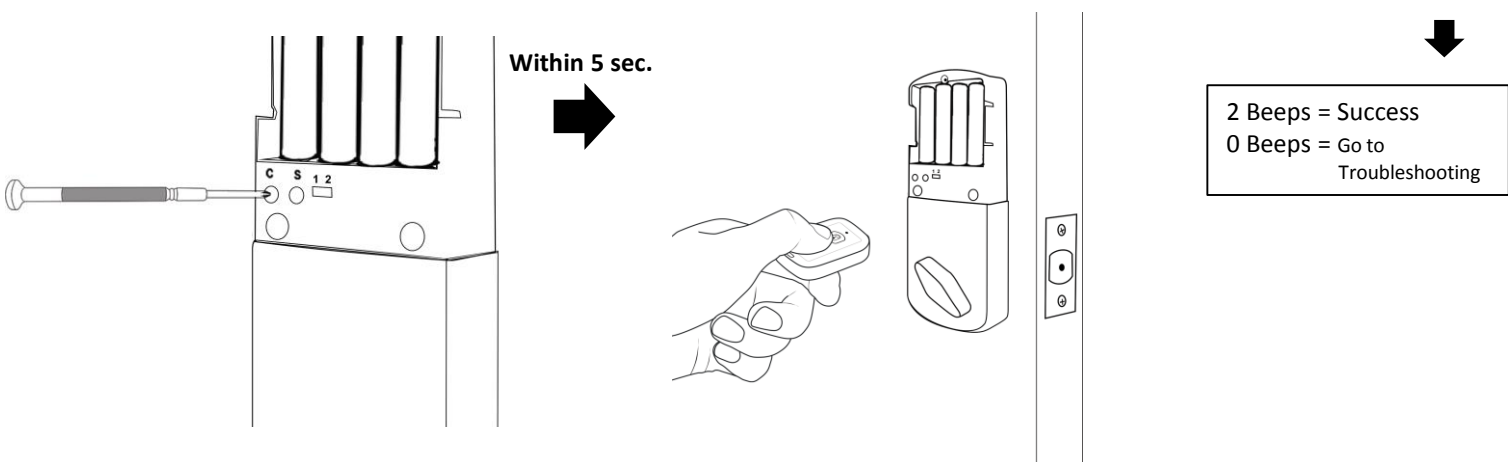

NOTE: This will delete all remotes stored in the memory and will program the remote you are using at that moment.

TROUBLESHOOTING

Low Batteries (Most Common Issue): If the lock produces a longer set of rapid beeps and either locks or does not lock the door, you have low batteries. To avoid any difficulties during set up, make sure you are using brand new AA alkaline batteries. Using a battery tester is not recommended.

Door Jam Alignment: Make sure the deadbolt and the hole in the door jam line up so that there is minimal resistance on the deadbolt as it extends and retracts from the door.

Driver Bar Position: In step 3 of the installation, you are instructed to position the driver bar in the vertical position while the deadbolt is retracted. In step 5 of the installation, you are instructed to position the thumb turn according to which side the door latch faces. If these parts are not positioned according to the instructions, you will encounter issues such as the lock only working with the key in the cylinder, a jammed thumb turn, or a key that will not release from the cylinder. The best thing to do is remove the lock from the door and install the lock according to the instructions provided.

Loose Keypad Connection: If not connected securely, the keypad wire harness connection may come loose and cause some of the numbers to operate inconsistently. To confirm your door lock issue is not being cause by a loose keypad connection, press every number on the keypad and confirm every button beeps when pressed.

If some of the numbers are not beeping, remove the back module (*part B*) and inspect the wires for any pinches or tears. Make sure to check the wires coming from the keypad as well. Disconnect the wire harness and make sure the pins in the male connection are not bent out of alignment. Reconnect your wires and confirm every button on the keypad beeps when pressed.

If you are still having keypad issues after following our troubleshooting guide, call us for a replacement under warranty.

Function Test: If a passcode has not been successfully programmed, the lock will not operate using the keypad. Lets check if a passcode has been successfully programmed in the memory:

1. Unlock the door lock and open the door. Make sure you keep the door open while troubleshooting.

2. Press the LOCK button on the keypad 1 time and listen to the beeps:

- If the lock beeps 3 times and does not lock, it does not have a passcode set in its memory. Refer to the programming page for instructions on adding a passcode.
- If the lock produces a longer set of rapid beeps and either locks or does not lock the door, you have low batteries. Replace the batteries with a set of 4 premium “AA” alkaline batteries.
- If the lock beeps 2 times and locks successfully, it has at least 1 passcode stored in its memory and is operating correctly.

**If you are unable to get your lock to work
please give us a call during business hours.**

US Live Tech Support: 1-800-355-0157 M-F 9am - 5pm PST (English & Spanish)
Warranty shipments are always shipped promptly.


WARRANTY

MiProducts Corporation warrants to the original residential user of this product that it will be free from defects in materials and workmanship, under normal use, for 1 year from the date of purchase. User must provide a copy of original purchase receipt. This warranty does not cover abuse or misused products or products used in commercial applications. All mechanical components carry a limited warranty, for a period of 25 years from the date of purchase. The finish of the exterior of this lock carries a limited warranty of the lifetime of the unit against deterioration due to normal weather conditions. This warranty does not apply to locks that have been improperly installed, modified, put to a use other than designed, or subjected to acts of God (such as floods, lightning, earthquakes, etc.) This warranty is limited to repairing or replacing of this lock only at MiProducts Corporation’s sole discretion. MiProducts Corporation will NOT be liable for the cost of installing, removing, nor reinstalling this product, nor direct, indirect, or consequential damages to persons or property resulting from the use of this product. This warranty only covers the cost of replacement parts, it does not cover shipping & handling fees.


To implement this warranty please give us a call during business hours at 1-800-355-0157, or visit www.milocks.com.




Model RF

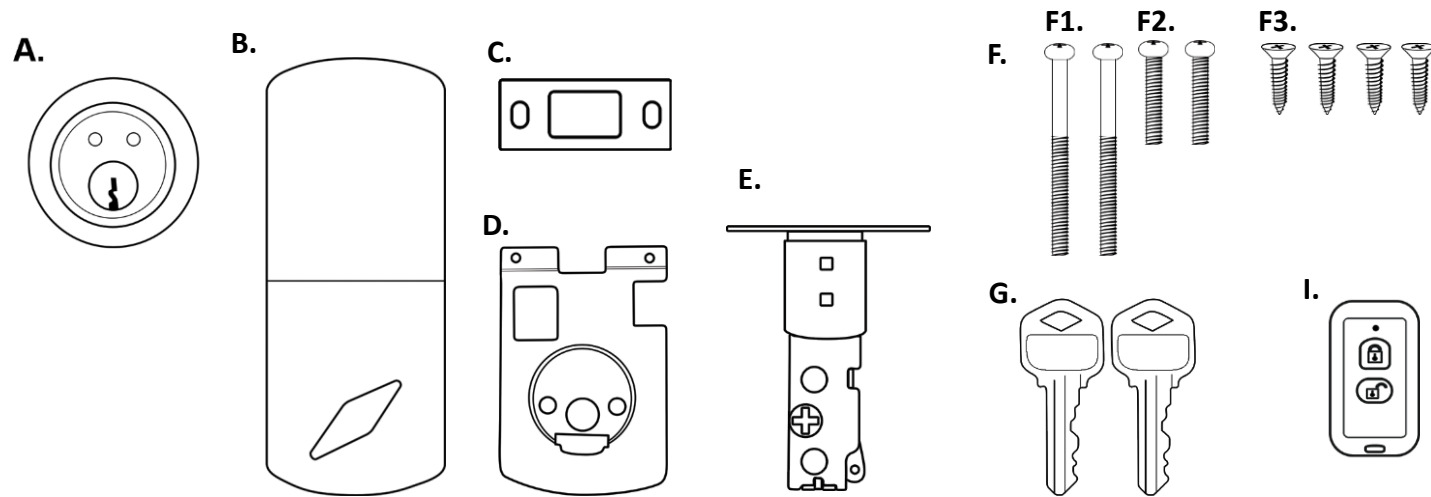

Tools Required (*not included*):



Phillips Screwdriver

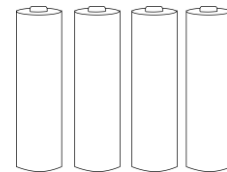

(4) AA Batteries

(1-2 Switch on Part B.) Left Handed & Right Handed Setting:

On the back module (part B), there is a switch labeled “1-2” which controls the left handed and right handed setting.

1 = Right Hand Doors (most common)

2 = Left Hand Doors

When entering the doorway, if the hinges are on the left, you have a left handed door. If the hinges are on the right, you have a right handed door.

GENERAL WARNINGS & CAUTIONS:

1. The back module (Part B.) needs to be protected from the weather
2. Remote works up to 30’ without obstructions



For assistance with assembly or installation, parts and customer service, call:

1-800-355-0157 (English & Spanish)
9am – 5pm PST Mon. – Fri.
North America


Battery Precautions

- Do not mix old with new batteries.
- Do not use rechargeable batteries.
- Remove batteries from product when storing for extended periods of time.
- Do not dispose of batteries in fire as they may explode. Please follow your local battery disposal procedure.
- Do not puncture batteries. Electrolyte leakage from the batteries is corrosive and can cause serious harm to the eyes or skin. If swallowed, the electrolyte can be toxic.
- Do not allow conductive materials such as jewelry or metal tools to make contact with the batteries which may cause a short circuit. With a short circuit, the batteries and conductive material can become extremely hot and cause burns.


Register Your Product

- Although we hope you never have to deal with a warranty claim during the use of our product, you should submit a product registration to validate the warranty. This keeps it on record with us so you don’t have to save a receipt or record of any kind. Just give us a call and we will take care of you.
- Register at www.milocks.com


1. Adjust Latch Backset

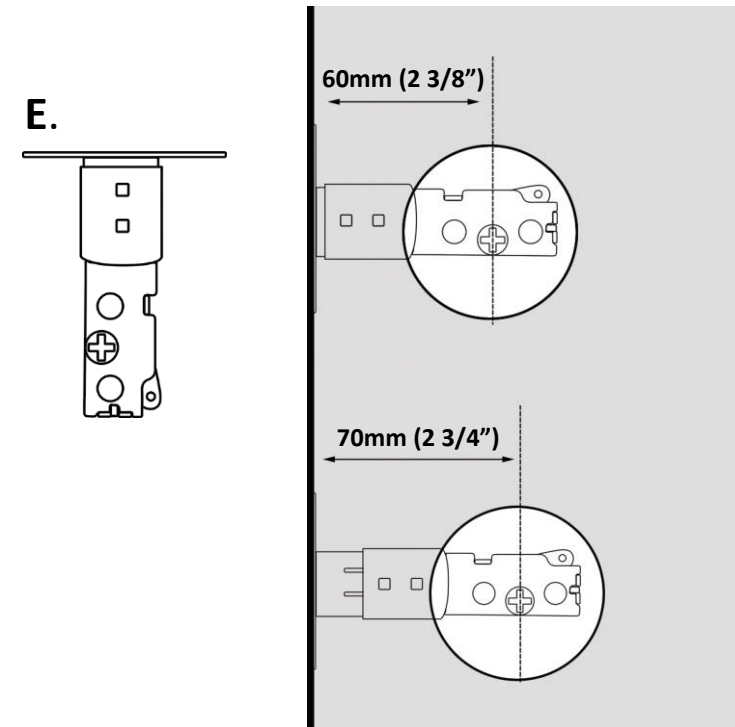


2. Install Door Latch (w/ Bolt Retracted)

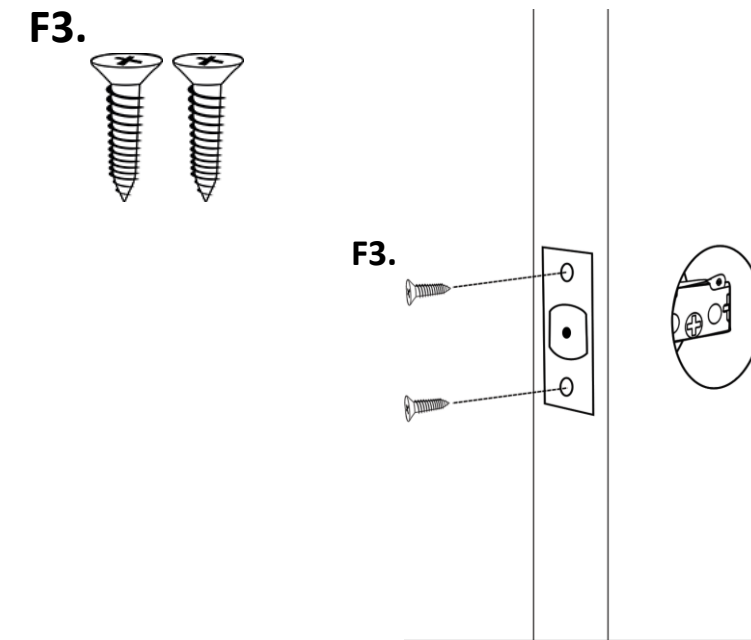


3. Mount Front Module

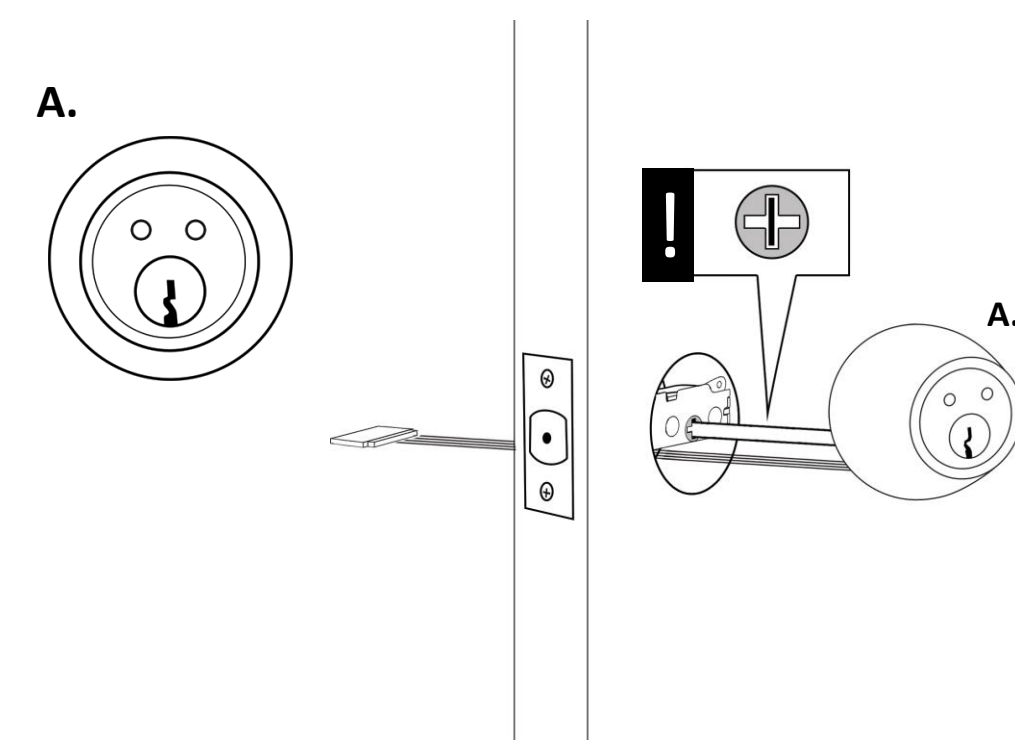

4. Fasten Back Mounting Plate

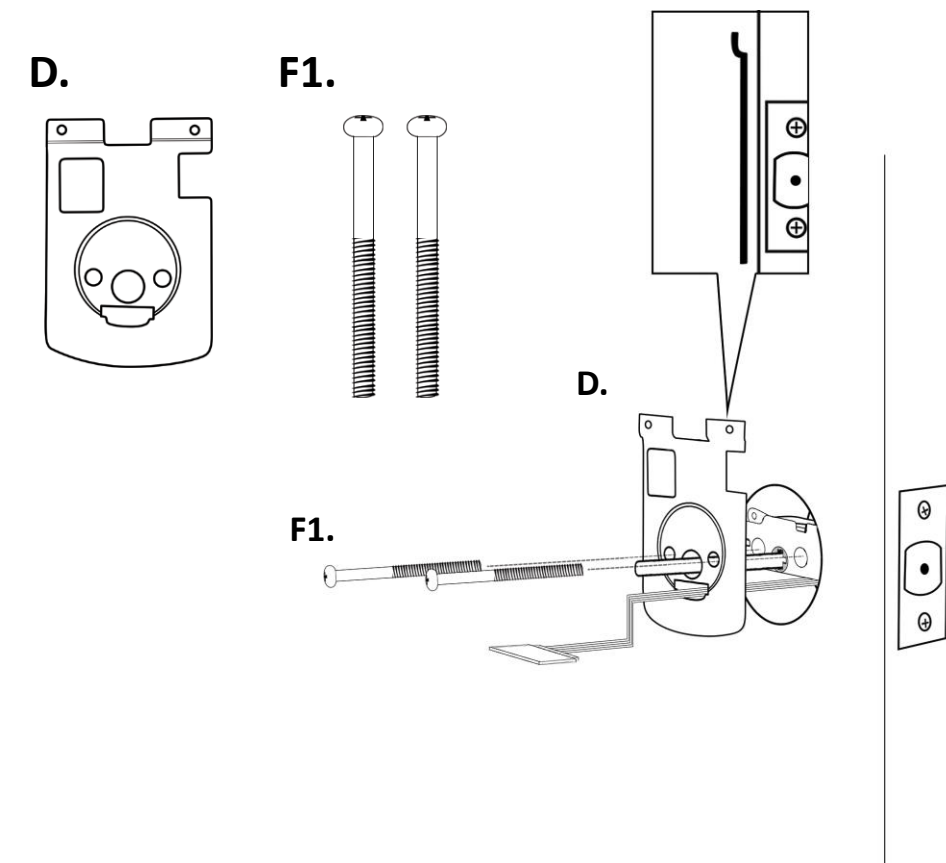

5. Connect, Mount & Fasten Back Module

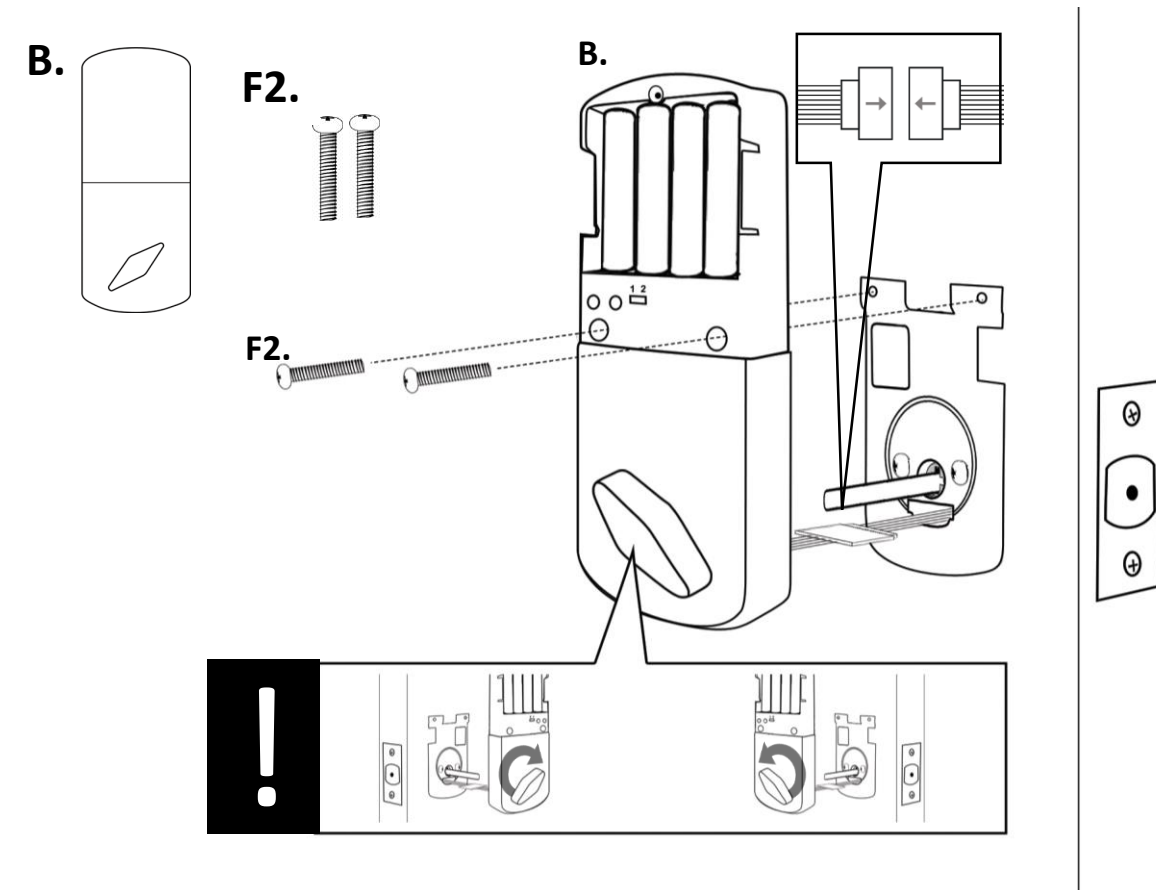

6. Install Battery Cover

