

- ※ Thanks for selecting the EPEVER WiFi transmission terminal;
please read this manual carefully before using the product.
※ Please keep this manual for future reference.

WiFi Transmission Terminal

EPEVER-WiFi-2.4G-RJ45-A

EPEVER-WiFi-2.4G-DB9-B

1. Overview

The WiFi transmission terminal is specially designed for our solar controller, inverter, or inverter/charger. The WiFi transmission terminal can automatically upload data to the cloud server based on wireless transmission technology after connecting to the local wireless network. The device connected to the WiFi transmission terminal can be remotely monitored through the cloud server or mobile APP, which makes communication and data transmission easier and more convenient.

Features:

- Wireless monitoring the solar controller, inverter, or inverter/charger
- Support cloud server or APP communication
- Convenient connection and operation
- Adopt high-performance M4 core CPU
- Ultra-low power consumption and high-speed data processing capabilities
- Directly powered by the communication port
- Up to 50 meters communication distance
- Supports the AP and STA working mode.
- One-key to restore factory settings

2. Appearance

2.1 EPEVER-WiFi-2.4G-RJ45-A




Interface instruction

No.	Name	Instruction
①	RJ45 port	Connect to solar controller, inverter, or inverter/charger
②	Reload button	One key to restore factory settings Note: Long press the Reload button with a sharp object, the Link indicator flashes twice quickly, and the factory settings are restored successfully.
③	Link indicator	Display communication status
④	Power indicator	Display power status

Indicator instruction

Indicator	Status	Instruction
Link indicator	ON solid in green	Connect to WiFi successfully.
	OFF	Not connect to WiFi.
	Fast flashing in green	Reset to the factory mode.
Power indicator	ON solid in green	Normal powered on
	OFF	Not powered on


2.2 EPEVER-WiFi-2.4G-DB9-B

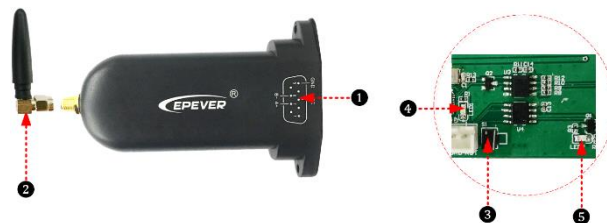

Interface instruction

No.	Name	Instruction
①	DB9 male connector★	Connect to solar controller, inverter, or inverter/charger
②	Antenna	Enhance the signal transmission
③	Reset button	One key to restore factory settings Note: The Reset button is located on the internal circuit board. Disassemble the shield first, press and hold the Reset button when the power is on, the indicator light flashes twice quickly, and the factory settings are restored successfully.
④	Network Indicator	Display communication status
⑤	Power Indicator	Display power status

★ EPEVER-WiFi-2.4G-DB9-B is connected to the solar controller, inverter, or inverter/charger by a DB-9 female connector. The wire sequence and name of the DB9 female connector are shown below.

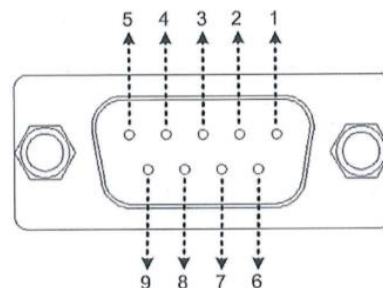


No.	Name	Instruction	No.	Name	Instruction
1	NC	Floating	6	NC	Floating
2	NC	Floating	7	RS485-A	RS485-A
3	VCC2	Input DC voltage 12V/200mA	8	RS485-B	RS485-B
4	GND2	DC Power GND2	9	VCC1	Power1 (5V/200mA)
5	GND1	DC Power GND1		--	

Indicator instruction

Indicator	Status	Instruction
Network Indicator	ON solid in green	Connect to WiFi successfully.
	OFF	Not connect to WiFi.
	Fast flashing in green	Reset to the factory mode.
Power Indicator	ON solid in green	Normal powered on
	OFF	Not powered on

3. Working procedures

Step1: Connect the WiFi transmission terminal to the controller, inverter, or inverter/charger through the RJ45 port or the DB9 connector. For example:

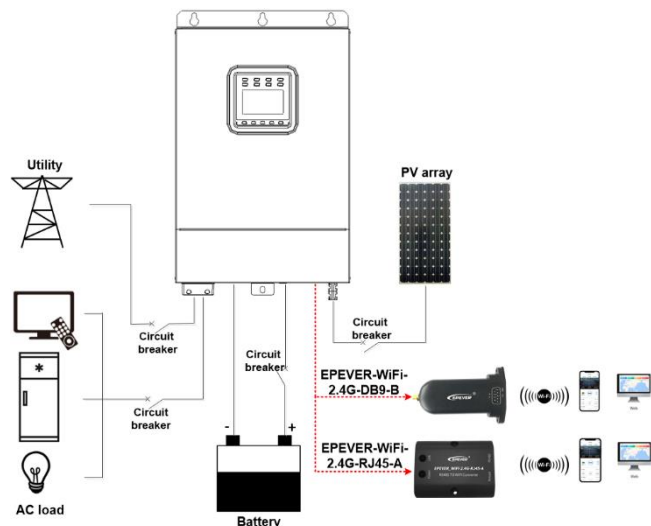

Note: EPEVER-WiFi-2.4G-RJ45-A is suitable for the controller, inverter, or inverter/charger designed with an RJ45 port. EPEVER-WiFi-2.4G-DB9-B is suitable for the device designed with a DB9 interface. For detailed connection cables, refer to the connected device's accessories list.

Step2: Users remotely monitor the controller, inverter, or inverter/charger through a PC, large screen, or mobile phone APP.



The phone APP supports the AP(default) and STA working mode. According to the login method and local network, it automatically enters the corresponding working mode, no need to switch the working mode manually.

- **AP mode** (default): When there is no local network, the WiFi terminal cannot upload data to the cloud server. All performs (including real-monitoring and parameter settings) are only carried out between mobile phone and the WiFi terminal.

Operations:

- 1) Turn on the WiFi switch on your phone and open the cloud APP.
- 2) Click the "Local" icon to enter the "WiFi" tab.
- 3) Click the corresponding name to connect the WiFi terminal. Users can obtain the name by checking the QR code on the WiFi terminal.
- 4) Enter the real monitoring interface after connecting the network successfully (only downloaded product models can be monitored).



- **STA mode:** When there is local network, the WiFi terminal uploads data to the cloud server automatically.

Operations:

- 1) Connect the phone to local network.
- 2) Open the cloud APP, and click the "EPEVER Cloud" icon to enter the login interface.
- 3) Click the "Wifi On Cloud" icon to enter the "Network Connection" interface.
- 4) Connect the network by searching the hotspots or scanning the QR code on the WiFi terminal. After successful network connection, the WiFi terminal is added into the cloud server automatically.
- 5) Click the "Confirm" button to return the initial login interface.
- 6) Input the user name and password. Click the "Sign In" button to enter the cloud interface. All devices added into the cloud server can be monitored by the phone APP.



4. Specifications

Model	EPEVER-WiFi-2.4G-RJ45-A	EPEVER-WiFi-2.4G-DB9-B
Parameters		
Input voltage	DC5V	
Power consumption	Peak emission voltage: 5V@100mA Idle voltage: 5V@40mA	
Enclosure	IP54	
Communication method	RS485	
Communication parameters	9600~115200Bps, 8N1	
Working Frequency	2.4~2.4835GHz	
Antenna gain	2.5dBi~ 5dBi	
Working temperature	-40°C~ 85°C	
Communication standard	EPEVER general communication standardV1-1.0	
Communication protocol	EPEVER IoT communication protocol V1.1	
Communication port	RJ45	DB9
Dimension	66.24* 51.28* 23.76mm	101.2* 64* 26mm
Net weight	37g	38g

5. Disclaimers

The warranty does not apply to the following conditions:

- Damage caused by improper use or inappropriate environment.
- The parameter setting exceeds the WiFi terminal's limit.
- Damage caused by working temperature exceeds the rated range.
- Unauthorized dismantling or attempted repair.
- Damage caused by force majeure.
- Damage occurred during transportation or handling.