



NewTek NC2 Studio Input Output Module User Guide

[Home](#) » [NewTek](#) » NewTek NC2 Studio Input Output Module User Guide 

Contents

- [1 NewTek NC2 Studio Input Output Module User Guide](#)
- [2 INTRODUCTION AND SETUP](#)
- [3 USER INTERFACE](#)
- [4 APPENDIX A: NDI \(NETWORK DEVICE INTERFACE\)](#)
- [5 APPENDIX B: DIMENSIONS AND MOUNTING](#)
- [6 APPENDIX C: ENHANCED SUPPORT \(PROTEK\)](#)
- [7 APPENDIX D: RELIABILITY TESTING](#)
- [8 CREDITS](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)
- [10 Related Posts](#)

NewTek NC2 Studio Input Output Module User Guide



INTRODUCTION AND SETUP

SECTION 1.1 WELCOME

Thank you for purchasing this NewTek product. As a company, we are extremely proud of our record of innovation and commitments to excellence in design, manufacture, and superb product support.


NewTek's innovative live production systems have repeatedly redefined broadcast workflows, providing new

possibilities and economy. In particular, NewTek has been a leader in introducing integrated devices providing a complete set of tools related to program creation and broadcast, along with web streaming and social media publishing. This tradition continues with the NC2 Studio IO Module. Its implementation of NDI® (Network Device Interface) protocol places your new system squarely in the forefront of IP technology solutions for the video broadcast and production industries.

SECTION 1.2 OVERVIEW

Commitments and requirements can change from production to production. A powerful, versatile platform for multi-source production and multi-screen delivery workflows, the Studio I/O Module quickly pivots to accommodate additional cameras, devices, displays or destinations.

With NC2 IO's turnkey installation and operation, you can easily assemble a network of modules to configure your own multi-system and multi-site workflows.

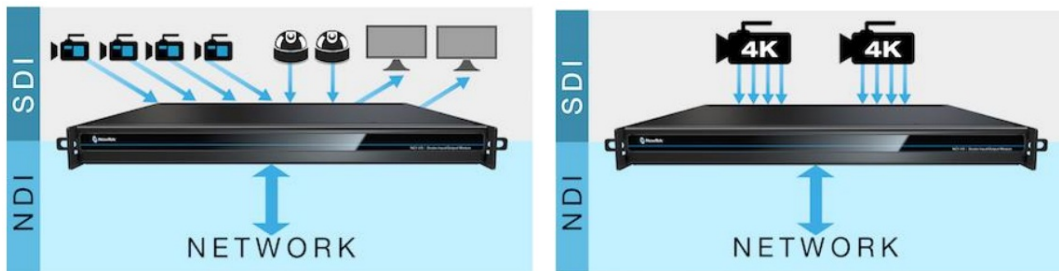

From increasing your available inputs and outputs, to merging established and emerging technologies, to linking locations across your network, the NewTek Studio I/O Module is a universal solution that adapts to your production needs.

- Translate up to 8 compatible video sources to SDI or NDI for input, output, or a combination of both
- Configure for dual-channel 4K Ultra HD at 60 frames per second with support for 3G-SDI quad-link grouping
- Integrate with compatible systems and devices across your network for switching, streaming, display, and delivery
- Stack modules in a single location or station in multiple locations to meet the demands of your productions

SECTION 1.3 SETTING UP COMMAND AND CONTROL

1. Connect an external computer monitor to the USB C port on the backplate (see Figure 1).
2. Connect the mouse and keyboard to USB C ports also on the backplate.
3. Connect the power cord to NC2 IO's backplate.
4. Turn on the computer monitor.
5. Press the Power switch on NC2 IO's faceplate (located behind the drop-down door)

At this point, the blue Power LED will illuminate, as the device boots up. (If this does not happen, check your connections and retry). Though not a requirement, we do strongly recommend that you connect NC2 IO using an uninterruptable power supply (UPS), as for any 'mission critical' system.


Likewise, consider A/C "power conditioning," especially insituations where local power is unreliable or 'noisy.' Surge protection is especially important in some locales. Power conditioners can reduce wear on NC2 IO's power supplies and other electronics, and provide a further measure of protection from surges, spikes, lightning and high voltage.

A word about UPS devices:

'Modified sine wave' UPS devices are popular due to low manufacturing costs. However, such units should generally be viewed as being of low quality and possibly inadequate to fully protect the system from abnormal power events

For a modest added cost, consider a "pure sine wave" UPS. These units can be relied on to supply very clean power, eliminating potential problems, and are recommended for applications demanding high reliability

INPUT/OUTPUT CONNECTIONS

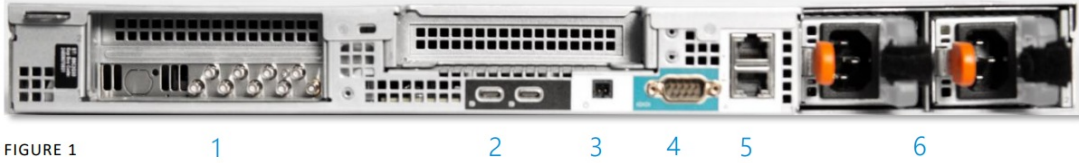

1. Genlock and SDI – employs HD-BNC connectors
2. USB – connect keyboard, mouse, video monitor and other peripheral devices
3. Remote Power Switch
4. Serial Connector
5. Ethernet – network connections
6. Mains | Power

The 'Configure IO Connectors' dialog can be opened directly from the System Configuration panel. See Section 2.3.2.

Generally, simply connecting a suitable cable from one of the two Gigabit Ethernet ports on NC2 IO's backplane is all that is required to add it to a local area network (LAN). In some settings, additional steps may be required. You can access the system Network and Sharing control panel to accomplish more extensive configuration tasks. If further help connecting is required, please consult your system administrator.


USER INTERFACE

This chapter explains the layout and options of the user interface, and how to configure NC2 IO audio and video input and output. It also introduces the various supplemental video production features NewTek IO provides, including Proc Amps, Scopes and capture.

SECTION 2.1 THE DESKTOP

The NC2 IO default Desktop interface is shown below, and provides very useful remote monitoring options in addition to configuration and control features.

FIGURE 2

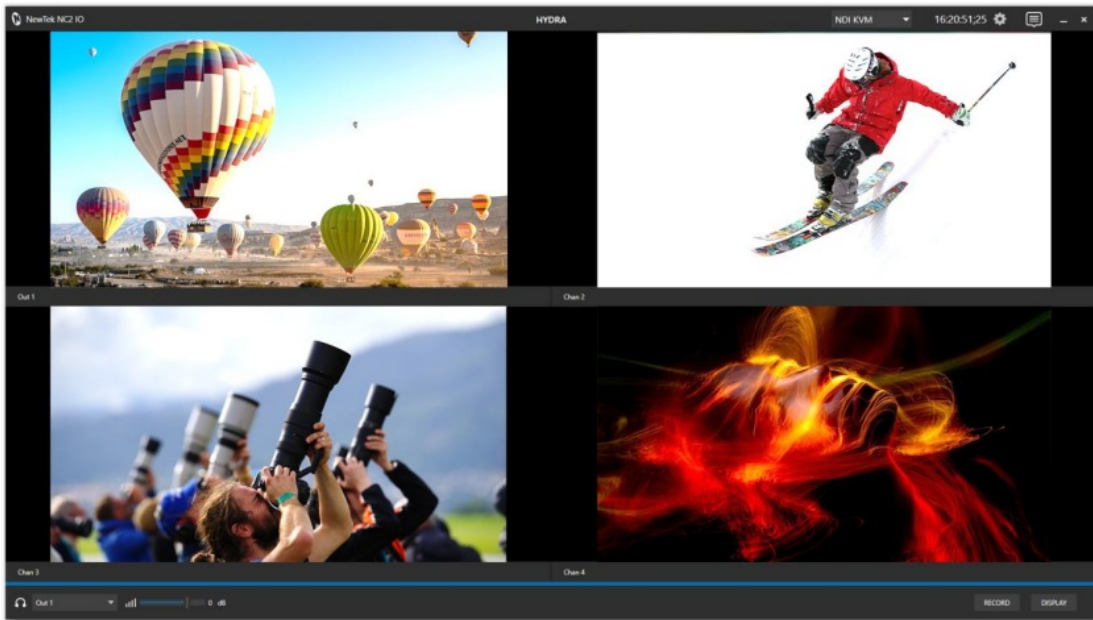

The Desktop interface includes dashboards running across the top and the bottom of the screen. By default, the large middle section of the Desktop is divided into quadrants, each displaying one video 'channel.' Beneath each channel's viewport is a toolbar. (Note that additional viewport toolbar controls are hidden when not in use, or until you move the mouse pointer over a viewport.)

Continue reading for an overview of the NC2 IO Desktop features.

CONFIGURE CHANNELS

FIGURE 3



NC2 IO allows you to select different audio and video sources for each channel via the Configure panel (Figure 3). Click the gear next to the channel label below a viewport to open its Configure panel (Figure 4)

INPUT TAB

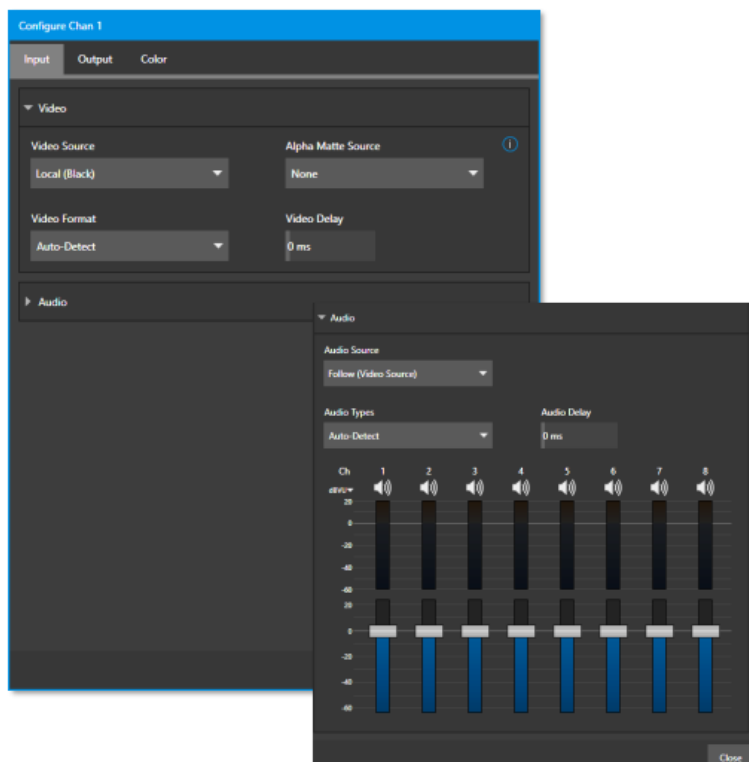


FIGURE 4

The tabbed Input pane allows you to select audio and video sources for this channel and set their format. You can immediately choose any NDI or SDI connector configured as an input (the latter are shown in the Local group), a webcam or PTZ camera with compatible network output, or even an input from a suitable external A/V capture

device. (Quad-link selections list the four associated SDI input numbers that will be used, for reference.)

In the Video Format drop down menu (Figure 4), select the Video and Alpha option that corresponds to the designated SDI connectors you have set up. For example, if your Video Input is SDI In Ch(n), the corresponding Alpha for that connector will be SDI In Ch(n+4).

It is unnecessary to configure the key input for 32bit NDI sources.


Video and Alpha sources must be synchronized and have the same format.

A Delay setting is provided for both audio and video sources, allowing precise A/V synchronization where a/v source timing differs.

NDI Access Manager, included in NDI Tools, can control which NDI sources are visible on this system.

CLIPS AND IP SOURCES

FIGURE 5

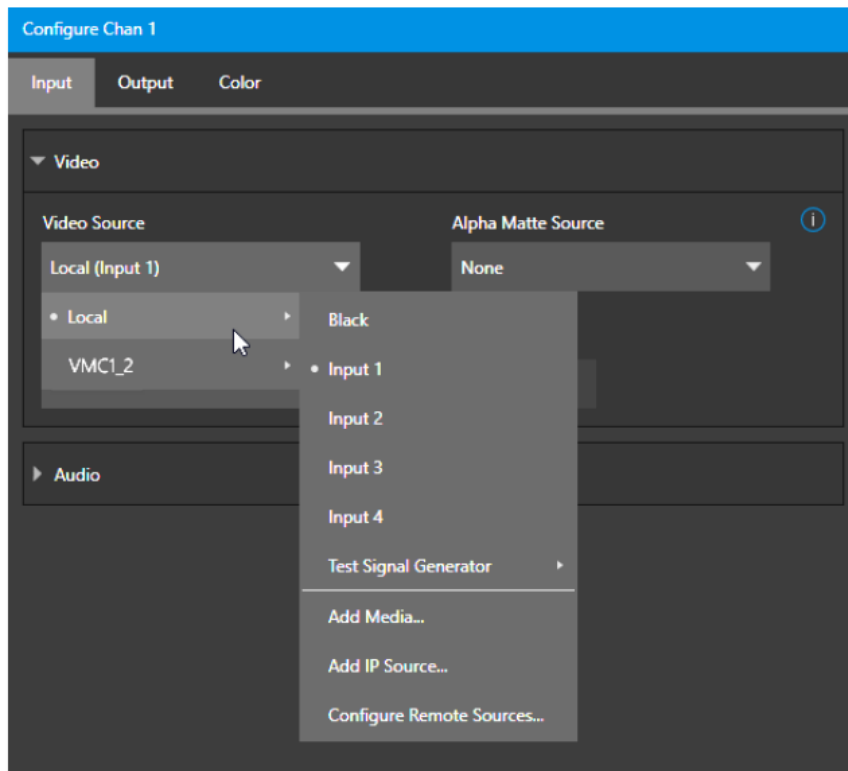

As mentioned in the previous section, an IP (network) source – such as a PTZ camera with NDI network video output – can be directly selected. The Video Source drop down menu contains an Add Media item to let you select a video file, Add IP Source menu item, and Configure Remote Sources option (Figure 5).

Clicking the Add IP Source entry opens the IP Source Manager (Figure 6). Adding entries to the list of sources shown in this panel causes corresponding entries for new sources to appear in the Local group shown in the Video Source menu of the Configure Channel panel.

To use, click the Add New IP Source menu, select a source type from the dropdown list provided. This opens a dialog suited to the particular source device you wish to add, such as one of the numerous supported PTZ camera brands and models.




Configure PTZ Optics Camera

Name:	PTZOptics 1
Memo:	
IP:	
Port:	554
Username:	
Password:	
<input type="checkbox"/> Use Preview Mode	

OK Cancel

The NewTek IP Source Manager panel displays the selected sources, here you can edit by clicking the gear to the right of the source name, or click the X to remove the source.

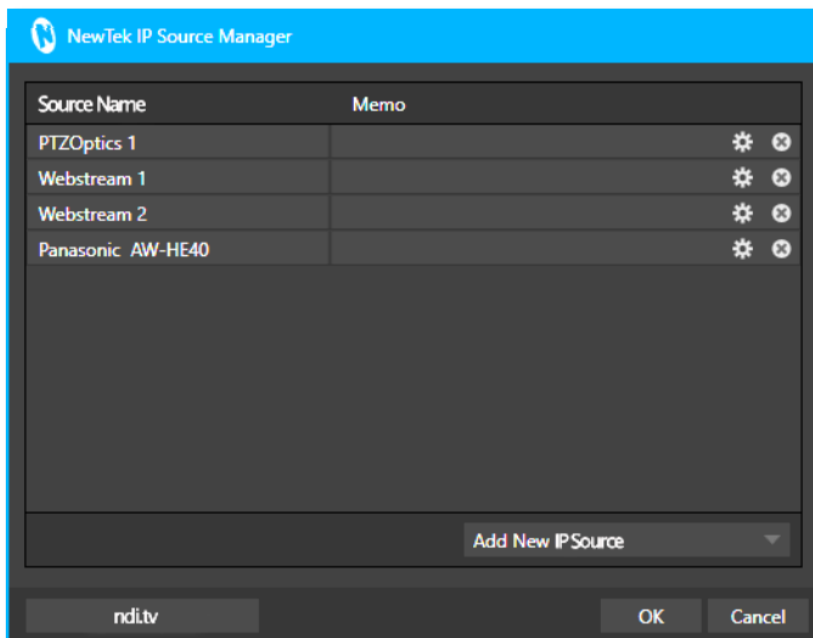


Note: After adding an IP source, you must exit and restart the software for the new settings to be applied.

Additional protocols have been added to provide more options for video sources. RTMP (Real Time Message Protocol), a standard for delivering your streams to your online video platform. RTSP (Real Time Streaming Protocol), used for establishing and controlling media sessions between end points. Also included is SRT Source (Secure Reliable Transport) which is an open source protocol that is managed by the SRT Alliance. It can be used to send media over unpredictable networks, like the Internet. More information about SRT can be found at srtalliance.org

OUTPUT TAB

The second tab in the Configure Channel pane hosts settings related to output from the current channel.

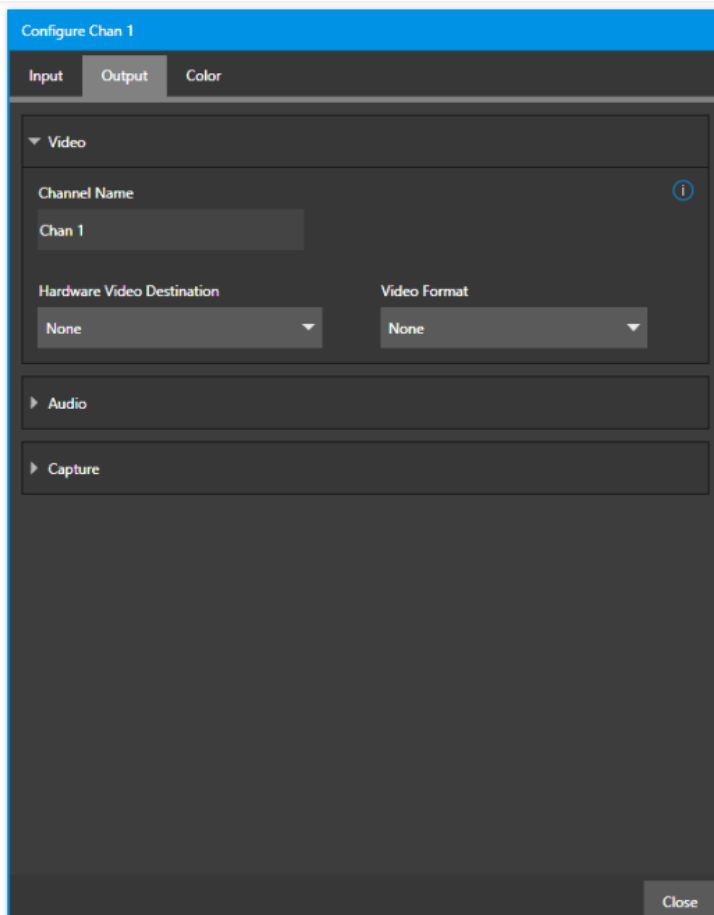


NDI OUTPUT

Output from channels assigned to local SDI input sources is automatically sent to your network as NDI signals. The editable Channel Name (Figure 10) identifies output from this channel to other NDI-enabled systems on the network

Note: NDI Access Manager, included with your NC2 IO, can be used to control access to NDI source and output streams. For additional NDI Tools, visit ndi.tv/tools.

HARDWARE VIDEO DESTINATION


FIGURE 10

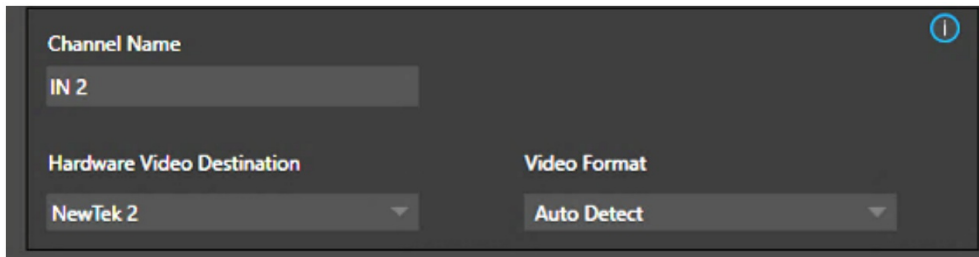The screenshot shows a configuration panel with a dark background. At the top left, the text 'Channel Name' is followed by a text input field containing 'IN 2'. To the right of this field is a small blue circle with a white 'i' icon. Below the 'Channel Name' field, there are two dropdown menus. The first is labeled 'Hardware Video Destination' and has 'NewTek 2' selected. The second is labeled 'Video Format' and has 'Auto Detect' selected.

The Hardware Video Destination menu allows you to direct video output from the channel to an SDI connector on the system's backplane that is configured as an output (or another video output device connected to and recognized by the system). Video Format options supported by the device are provided in a menu at right. (Quad-link selections list the four associated SDI output numbers that will be used, for reference.)

SUPPLEMENTAL AUDIO DEVICE

FIGURE 11

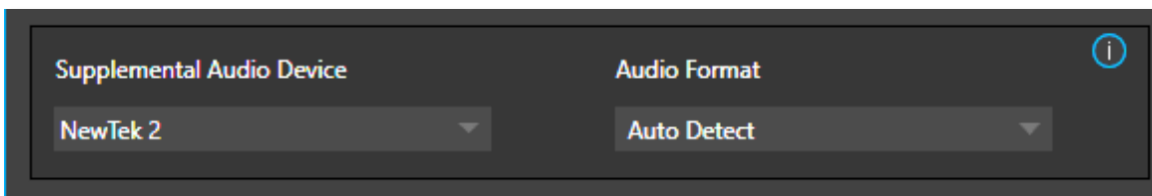The screenshot shows a configuration panel with a dark background. It contains two dropdown menus. The first is labeled 'Supplemental Audio Device' and has 'NewTek 2' selected. The second is labeled 'Audio Format' and has 'Auto Detect' selected. To the right of the 'Audio Format' dropdown is a small blue circle with a white 'i' icon.

The Supplemental Audio Device allows you to direct audio output to system sound devices as well as any supported third part audio devices you may connect (typically by USB). As required, Audio Format options are provided in a menu at right.

Additional audio output devices (including Dante) recognized by the system can be configured in this section.


CAPTURE

This tab is also where you assign the path and filename for captured video clips and stills.

The initial Record and Grab Directories are the default Videos and Pictures folders on the system, but we strongly encourage you to use fast network storage volumes for video capture especially.

COLOR TAB

FIGURE 12

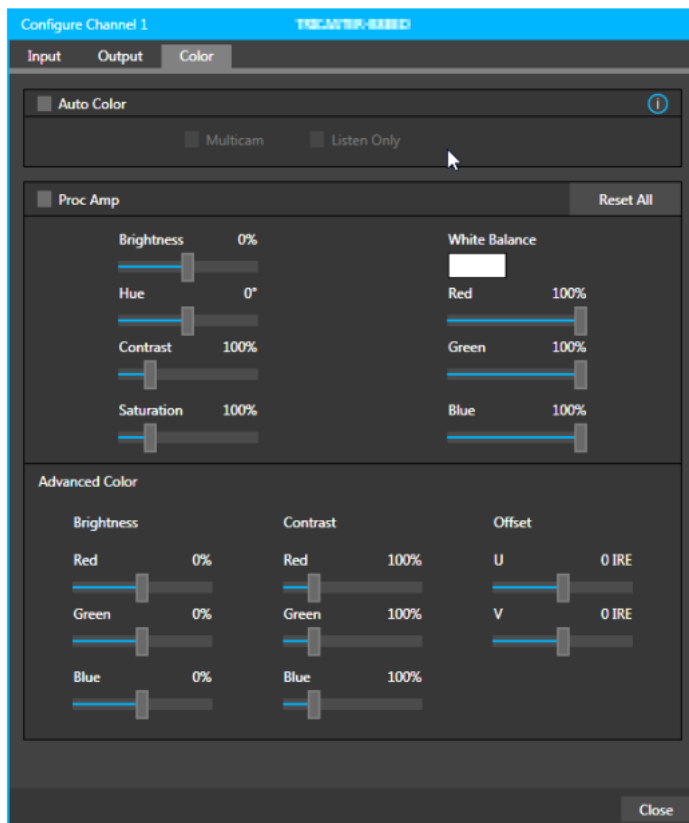

The Color tab provides an extensive set of tools for adjusting the color characteristics of each video channel. Choosing Auto Color automatically adapts color balance as lighting conditions change over time.


Note: Proc Amp adjustments follow Auto Color processing

By default, each camera with Auto Color enabled is processed by itself. Enable Multicam to process multiple cameras as a group.

To apply Multicam processing to a source without its own colors being evaluated, checkmark Listen Only. Or enable Listen Only for all Multicam group members except one to make that source the 'master' color reference

Note: Custom settings in the Color tab trigger figure a COLOR notification message that appears in the footer below the viewport of the channel (Figure 13).

FIGURE 13



SECTION 2.2 KEY/FILL CONNECTIONS

Key/Fill output using two SDI output connectors is supported as follows:

- Even-numbered output channels show "video and alpha" options in their Configure Channel Format menu. Selecting this option sends 'video fill' from the selected source to the designated (evennumbered) SDI connector.
- The 'key matte' output is placed on the next lower-numbered connector. (So, for example, if the fill is output on SDI output 4, the SDI output connector labeled 3 will supply the corresponding matte).

SECTION 2.3 TITLEBAR & DASHBOARD

NC2 IO's Titlebar and Dashboard are home to a number of important displays, tools and controls. Prominently located at the top and bottom of the Desktop, the Dashboard occupies the full width of the screen.



The various elements presented in these two bars are listed below (starting from the left):


1. Machine name (the system network name supplies the prefix identifying NDI output channels)
2. NDI KVM menu – Options to control NC2 IO remotely via NDI connection
3. Time Display
4. Configuration (see Section 2.3.1)
5. Notifications Panel
6. Headphones Source and Volume (see Section 2.3.6)
7. Record (see Section 2.3.6)
8. Display (see section 2.3.6)

Of these items, some are so important that they rate their own chapters. Others are detailed in various sections of this guide (cross references to the relevant sections of the manual are provided above)

TITLEBAR TOOLS

NDI KVM

Thanks to NDI, it is no longer necessary to configure complicated hardware KVM installations to enjoy remote control over your NC2 IO system. The free NDI Studio Monitor application brings network KVM connectivity to any Windows® system on the same network.

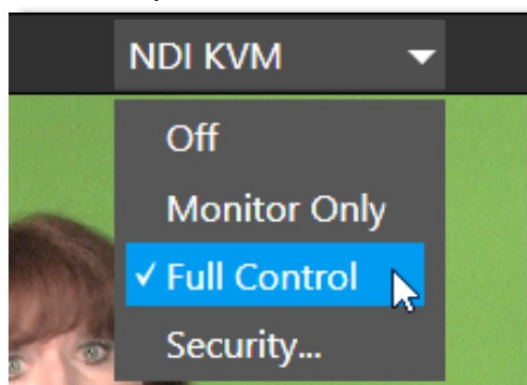

To enable NDI KVM, use the titlebar NDI KVM menu to select an operating mode, choosing between Monitor Only or Full Control (which passes mouse and keyboard operations to the remote system). The Security option lets you apply NDI Group control to limit who can view the NDI KVM output from the host system.

To view the output from the remote system and control it, select [Your NC2 IO Device Name]>User Interface in the Studio Monitor application supplied with the NDI Tool pack, and enable the KVM button overlaid at upper-left when you move the mouse pointer over the screen.

Hint: Note that Studio Monitor's KVM toggle button can be relocated to a more convenient spot by dragging.

This feature gives you a great way to control the system around your studio or campus. With the User Interface running full-screen in Studio Monitor on a receiving system, it's really hard to remember that you're actually controlling a remote system. Even touch is supported, meaning you can run the User Interface output on a Microsoft® Surface system for portable touch control over your entire live production system.

(Actually, many of the interface screenshots shown in this manual – including those in this section – were grabbed from NDI Studio Monitor while controlling the remote system in the manner described above.)

System Configuration

The System Configuration panel is opened by clicking the configuration (gear) gadget found in the upper-right corner of the screen (**Figure 15**).




TIMECODE

LTC timecode support can be activated by choosing an input using the LTC Source menu to choose almost any audio input to receive the timecode signal over and enabling the checkbox at left (Figure 16).

SYNCHRONIZATION

Under the Synchronization field, there are several options to Synchronize the Reference Clock. If your NC2 IO is running hardware, it will default to Internal System Clock, which means it is clocking to the SDI output.

FIGURE 16

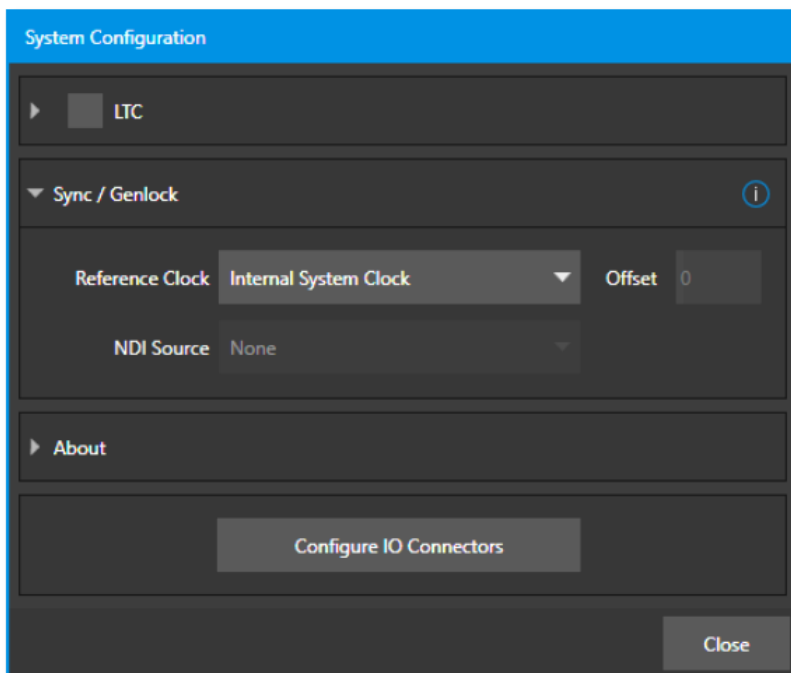

GENLOCK

The Genlock input on NC2 IO's backplane is for connection of a 'house sync' or reference signal (typically a 'black burst' signal intended specifically for this purpose). Many studios use this method to synchronize equipment in the video chain. Genlock is commonplace in higher-end production environments, and genlock connections are typically provided on professional gear.

If your equipment allows you to do so, you should genlock all hardware sources supplying NC2 IO, and the NC2 IO unit. To connect the genlock source, supply the reference signal from the 'house sync generator' to the Genlock connector on the backplane. The unit can auto-detect an SD (Bi-level) or HD (Tri-level) reference. After connection, adjust the Offset as necessary to achieve stable output.


Hint: The unit can be SD (Bi-level) or HD (Tri-level) reference. (If the Genlock switch is disabled, the unit operates in internal or 'free running' mode, instead.)

CONFIGURE NDI GENLOCK

NDI Genlock synchronization allows video sync to reference a network-supplied external clock signal over NDI. This type of synchronization will be key to future 'cloud-based' (and hybrid) production environments.

The Genlock feature allows NC2 IO to 'lock' its video output or NDI signal, to timing derived from an external reference signal (house sync, such as 'black burst') supplied to its genlock input connector.

This allows NC2 output to be synchronized to other external equipment that is locked to the same reference. NC2 comes with additional options for Synchronization, (**Figure 17**) the pull down menu conveniently centralizes all sync options and allows them to be changed on the fly

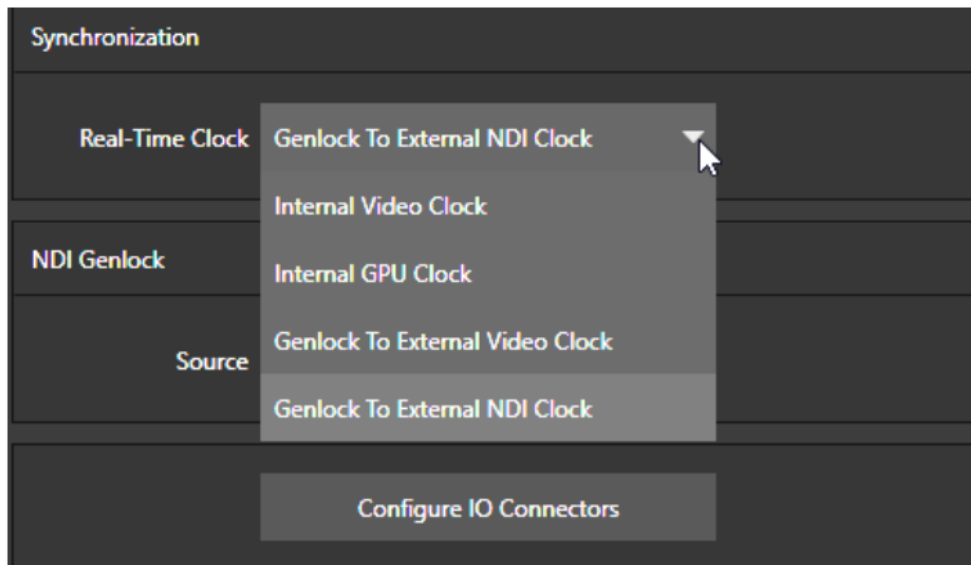


Genlocking is not an absolute requirement in most cases, but is recommended whenever you have the capability.

Tip: "Internal Video Clock" means clocking to the SDI output (best quality when connecting a projector to an SDI output).

"Internal GPU Clock" means following the graphics card output (best quality when connecting a projector to a Multiview output).

FIGURE 18

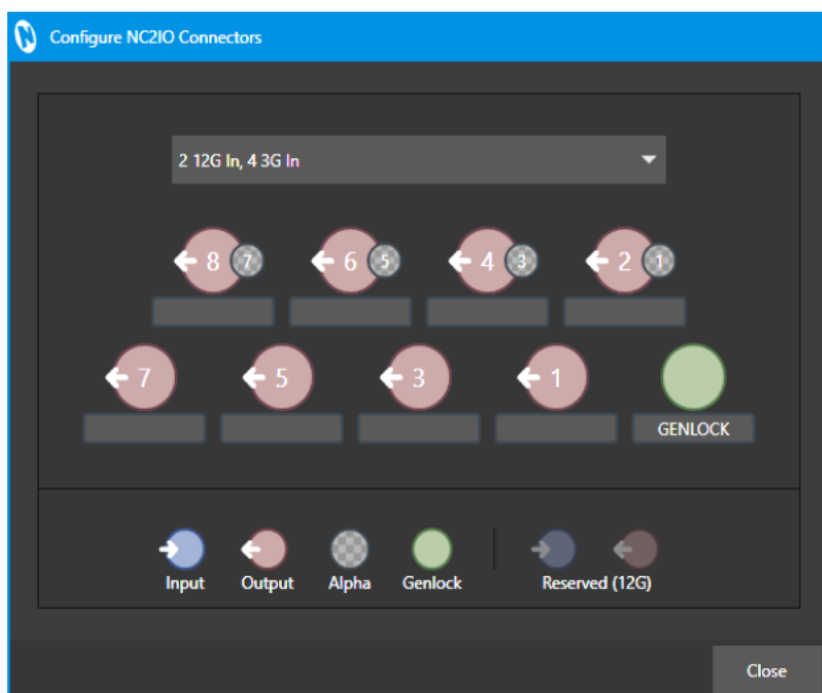

This panel presents various input/output preset options, providing access to all possible connector configuration alternatives.

The presets graphically display various i/o configurations as viewed from the rear of the system. Simply click a configuration preset to select it.

Note: Configuration changes require you to either reboot the system, or simply to restart the application.

NOTIFICATIONS

The Notifications panel opens when you click the 'text balloon' gadget at right in the Titlebar. This panel lists any information messages the system provides, including any cautionary alerts




FIGURE 19

Hint: You can clear individual entries by right-clicking to show the item's context menu, or the Clear All button in the panel's footer.

The footer of the Notifications panel also features a Web Browser button, discussed next.

WEB BROWSER

FIGURE 20

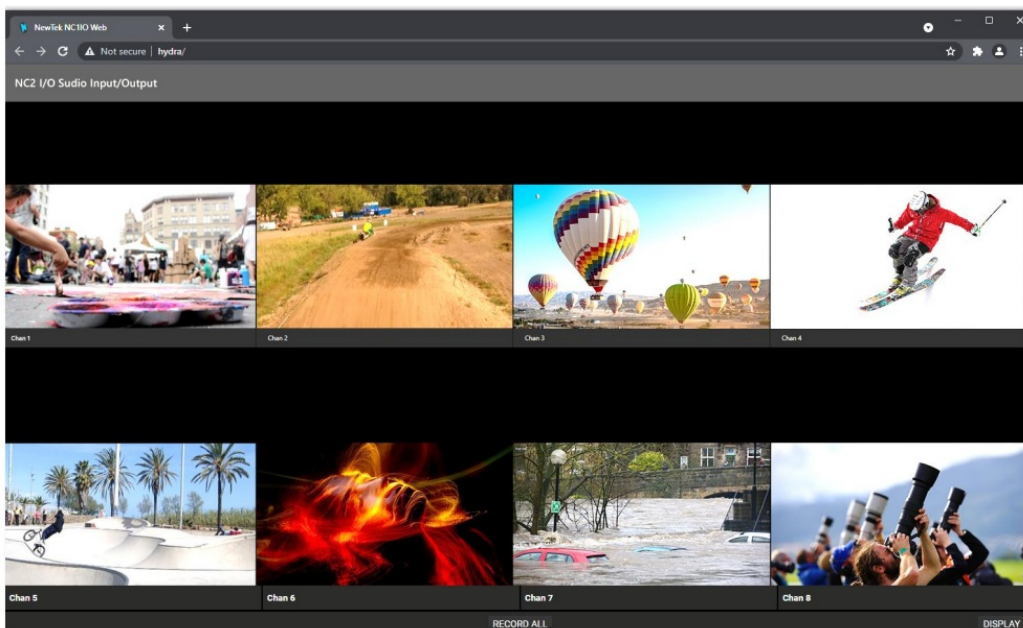


In addition to the remote control features provided for your NC2 IO system by the integrated NDI KVM feature, the unit also hosts a dedicated webpage.

The Web Browser button at the bottom of the Notifications panel provides a local preview of this webpage, which is served to your local network to let you control the system from another system on your network.

To visit the page externally, copy the IP address shown beside the Web Browser button in the Notification panel into the address field of a browser on any computer on your local network.

VIEWPORT TOOLS

FIGURE 21



NC2 IO's channels each have a toolbar beneath their respective viewports. The various elements comprising the toolbar are listed below from left to right:

1. Channel name – Can be changed by clicking on the label, and also in the Configure Channel panel.
 - a. A Configuration gadget (gear) pops up next to the channel name when the mouse is over a viewport.
2. Record and Record Time – The record button below each viewport toggled recording that channel; the RECORD button in the bottom dashboard opens a widget enabling capture from any SDI input.
3. Grab – the base filename and path for still image grabs are set in the Configure Channel panel.
4. Full screen
5. Overlays

GRAB

A Grab Input tool is located in the lower right corner below the monitor for each channel. By default, still images files are stored in the system Pictures folder. The path can be modified in the Output window for the channel (see the Output heading above).

FIGURE 22



A Grab Input tool is located in the lower right corner below the monitor for each channel. By default, still images files are stored in the system Pictures folder. The path can be modified in the Output window for the channel (see the Output heading above)

FULLSCREEN

FIGURE 23



Clicking this button expands the video display for the selected channel to fill your monitor. Press ESC on your keyboard or click the mouse to return to the standard display


OVERLAY

FIGURE 24



Found in the lower right corner of each channel, Overlays can be useful for visualizing safe zones, centering and more. To use an overlay, just click on an icon in the list (see Figure 25); more than one overlay can be active at the same time

FIGURE 25

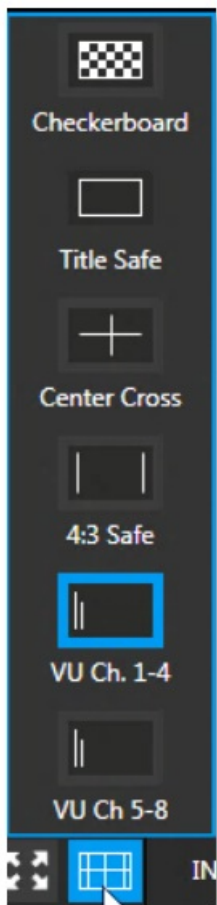

MEDIA BROWSE

The custom Media Browser provides easy navigation and selection of content on the local network. Its layout is principally comprised of two panes on the left and right that we'll refer to as the Location List and File Pane.

LOCATION LIST

The Location List is a column of favorite "locations", grouped under headings such as LiveSets, Clips, Titles, Stills, and so on. Clicking the + (plus) button will add selected directory to the Location List.

SESSION AND RECENT LOCATIONS

The Media Browser is context sensitive, so the headings shown are generally appropriate for the purpose for which they were opened.

In addition to locations named for your stored sessions, the Location List includes two notable special entries.

The Recent location provides quick access to newly captured or imported files, saving you time hunting through a hierarchy to find them. The Session location (named for the current session) shows you all files captured in the current session.

BROWSE

Clicking Browse opens a standard system file explorer, rather than the custom Media Browser.

FILE PANE


Icons appearing in the File Pane represent content located inside the sub-heading selected at left in the Locations List. These are grouped under horizontal dividers named for sub-folders, which allows related content to be organized conveniently.

FILE FILTERS

The File Pane view is filtered to show only relevant content. For example, when selecting LiveSets, the browser

only shows LiveSet files (.vsfx).

FIGURE 27

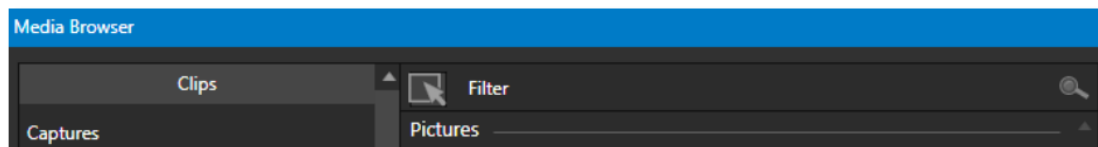


An additional filter appears above the File Pane (Figure 27). This filter quickly locates files matching criteria you enter, doing so even as you type. For example, if you enter “wav” into the filter field, the File Pane displays all content at the current location with that string as part of its filename. This would include any file with the extension “.wav” (WAVE audio file format), but also “wavingman.jpg” or “lightwave_render.avi”.

FILE CONTEXT MENU

Right-click on a file icon in the right-hand pane to show a menu providing Rename and Delete options. Be aware that Delete really does remove content from your hard drive. This menu is not shown if the item clicked is write-protected.

PLAYER CONTROLS

FIGURE 28

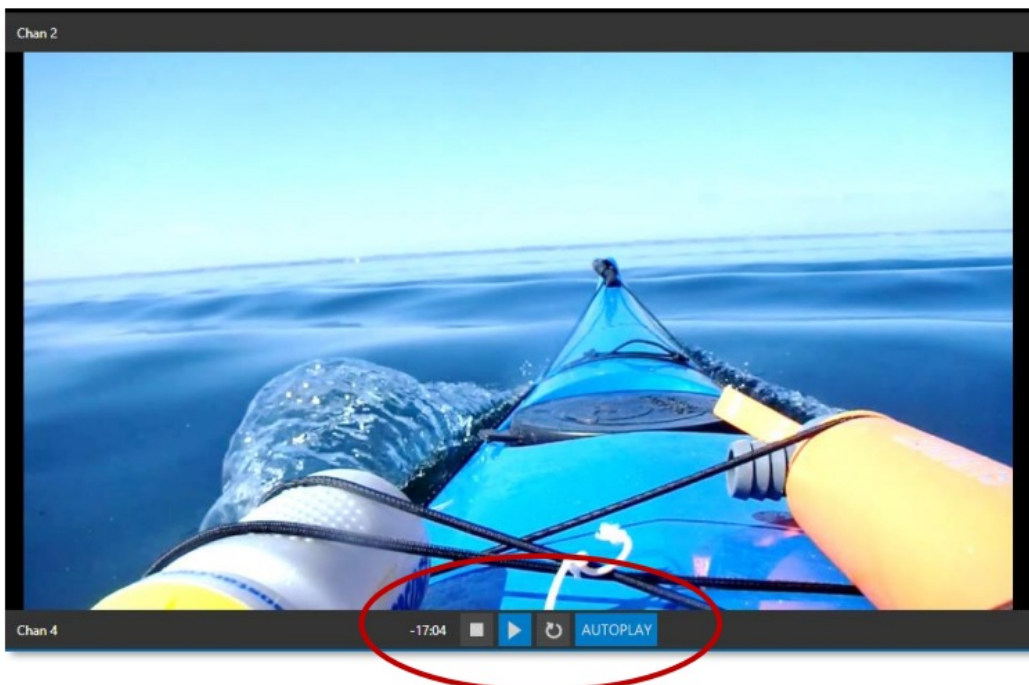

The Player Controls (located directly below the viewport) appear only when Add Media has been chosen as your video input source.

TIME DISPLAY

To the far left of the controls is the Time Display, during playback it displays the current countdown time for the embedded clip timecode. The time display provides visual indication that the playback is nearing its end. Five seconds before the end of play for the current item, the digits in the time display turn red.

STOP, PLAY AND LOOP

- Stop – clicking Stop when the clip has already stopped goes to the first frame.
- Play
- Loop – when enabled, playback of the current item repeats until manually interrupted.

AUTOPLAY

Autoplay, located to the right of the Loop button, is linked to the player’s current tally status, where it remains in the play state if at least one of the connected live production systems has it on Program (PGM), unless manually


overridden through the user interface. However, once all the connected live production systems have removed this NDI output from PGM, it will automatically stop and return to its cue state

Note: The Autoplay button becomes somewhat hidden when the 8 Channel layout is selected for display, see 2.3.6 Dashboard Tools.

DASHBOARD TOOLS

AUDIO (HEADPHONES)

FIGURE 29

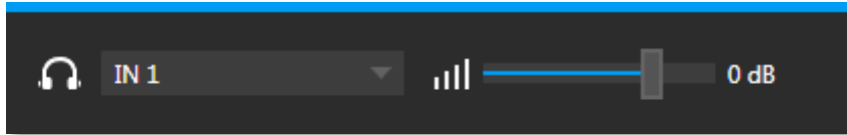

Controls for Headphone audio are found in the lower-left corner of the dashboard at the bottom of the screen (Figure 29).

1. The audio source supplied to the Headphone jack can be selected using the menu next to the headphone icon (Figure 30).
2. The Volume for the selected source can be adjusted moving the slider provided at right (double-click this control to reset it to the default 0dB value)

FIGURE 30


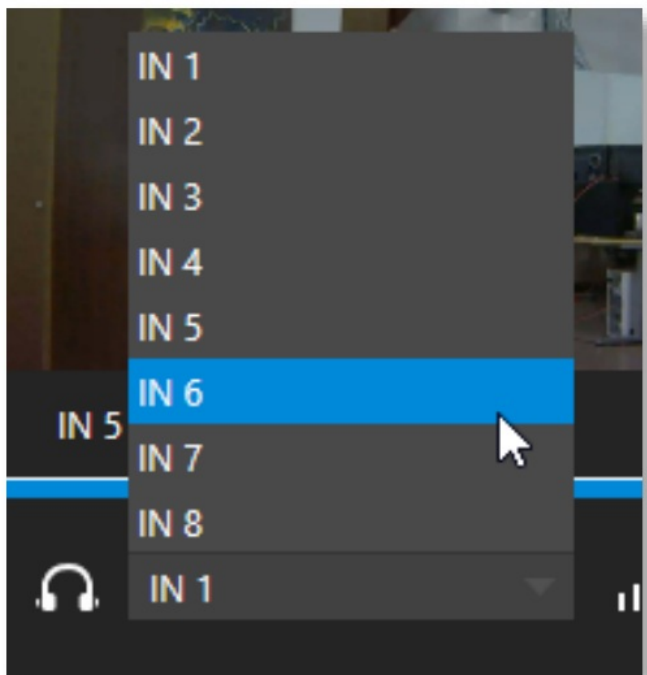


FIGURE 31

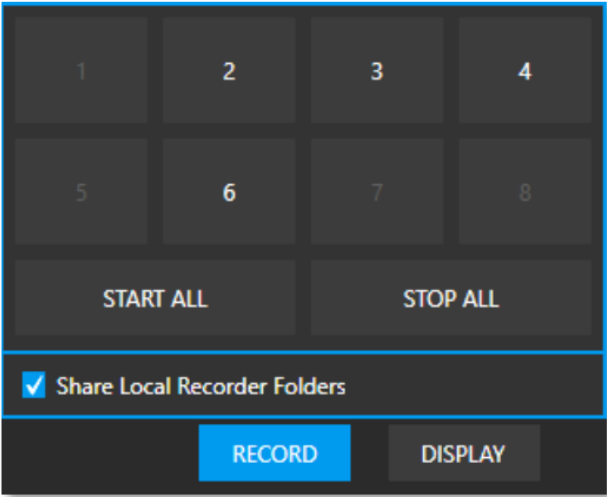


The Record button is also located in the lower-right corner of the dashboard (Figure 31). Click it to open a widget allowing you to begin or stop recording of individual channels (or start/stop all recordings.)

Notes: The destinations for recorded clips, their base file names and other settings are controlled in the Configuration panel (Figure 9). Recording NDI sources is not supported. The Share Local Recorder Folders can be used to expose local folders assigned to capture duties on your network, making it easy to access captured files externally

DISPLAY

In the bottom-right corner of the Dashboard at the bottom of the (primary) screen, the Display widget offers a variety of layout options to let you view channels individually (**Figure 32**).

FIGURE 32

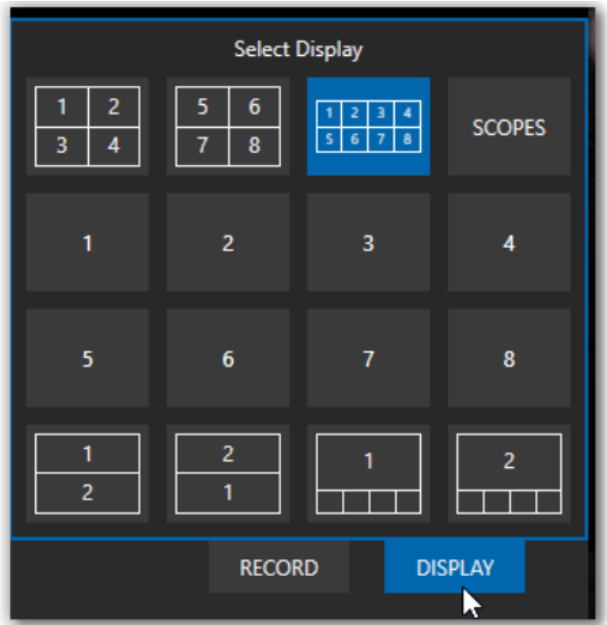


Please note that if you have selected the Add Media option as a video source when the 8-channel layout is chosen for display, the Autoplay button resizes down to 'A' due to size restraints as shown in **Figure 33**.



Waveform and Vectorscope features are shown when you select the SCOPES option in the Display widget.

FIGURE 34

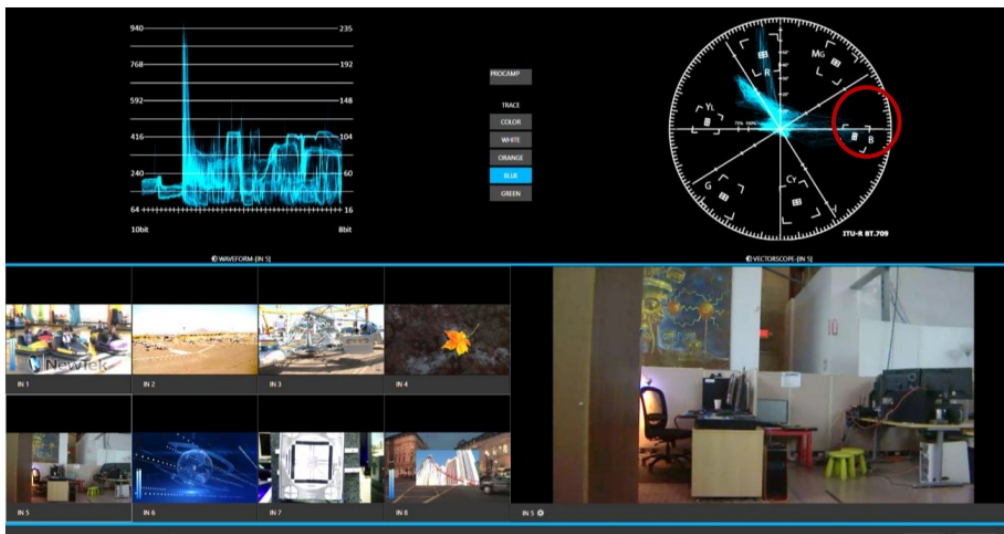

APPENDIX A: NDI (NETWORK DEVICE INTERFACE)


For some, the first question may be “What is NDI?” In a nutshell, Network Device Interface (NDI) technology is a new open standard for live production IP workflows over Ethernet networks. NDI allows systems and devices to identify and communicate with each other, and to encode, transmit, and receive high quality, low latency, frame-accurate video and audio over IP in real time.

NDI enabled-devices and software have the potential to greatly enhance your video production pipeline, by making video input and output available anywhere your network runs. NewTek’s live video production systems and a growing number of third party systems provide direct support for NDI, both for ingest and output. Although NC2 IO provides many other useful features, it is purpose designed primarily to turn SDI sources into NDI signals.

For more extensive details on NDI, please visit <https://ndi.tv/>.


APPENDIX B: DIMENSIONS AND MOUNTING

NC2 IO is designed for convenient mounting in a standard 19” rack (mounting rails are available separately from NewTek Sales). The unit comprises a 1 Rack Unit (RU) chassis supplied with ‘ears’ designed to permit mounting in standard 19” rack architecture.

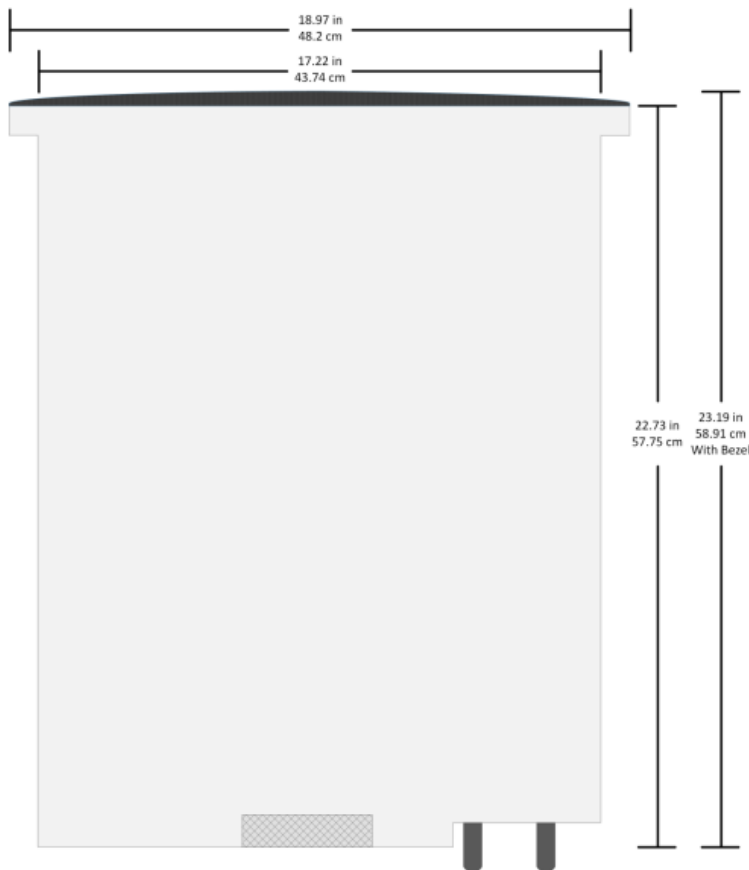


The units weigh 27.38 pounds (12.42 KG). A shelf or rear support will distribute the load more evenly if rack-mounted. Good front and rear access is important for convenience in cabling and should be considered.

In view of the top panel vents on the chassis, at least one RU should be allowed above these systems for ventilation and cooling. Please keep in mind that adequate cooling is a very important requirement for virtually all electronic and digital equipment, and this is true of NC2 IO as well. We recommend allowing 1.5 to 2 inches of space on all sides for cool (i.e., comfortable 'room temperature') air to circulate around the chassis. Good ventilation at the front and rear panel is important, and ventilated space above the unit (1RU minimum is recommended).

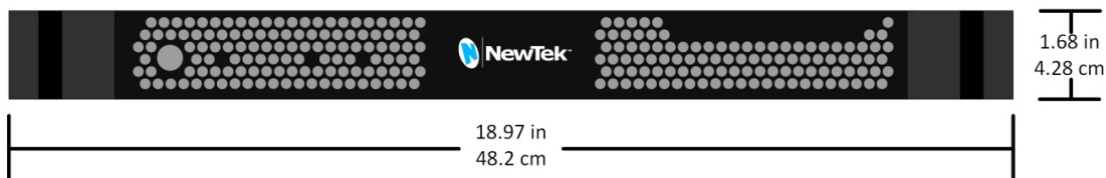

When designing enclosures or mounting the unit, supplying good free air movement around the chassis as discussed above should be viewed as a critical design consideration. This is especially true in fixed installations where NC2 IO will be installed inside furniture-style enclosures.

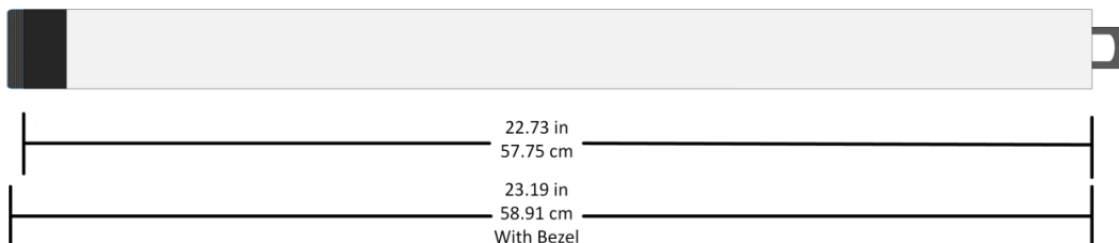

APPENDIX C: ENHANCED SUPPORT (PROTEK)

NewTek's optional ProTekSM service programs offer renewable (and transferable) coverage and enhanced support service features extending well beyond the standard warranty period.

Please see our [Protek webpage](#) or your local authorized [NewTek reseller](#) for more details regarding ProTek plan options.

APPENDIX D: RELIABILITY TESTING

We know our products play vital roles in the productions of our customers. Durability and consistent, robust performance are much more than just adjectives for your business and ours.

For this reason, all NewTek products undergo rigorous reliability testing to ensure they meet our exacting test standards. For NC2 IO, the following standards are applicable

Test Parameter	Evaluation Standard
Temperature	Mil-Std-810F Part 2, Sections 501 & 502
Ambient Operating	0°C and +40°C
Ambient Non-Operating	-10°C and +55°C
Humidity	Mil-STD 810, IEC 60068-2-38
Ambient Operating	20% to 90%
Ambient Non-Operating	20% to 95%
Vibration	ASTM D3580-95; Mil-STD 810
Sinusoidal	Exceeds ASTM D3580-95 Paragraph 10.4: 3 Hz to 500 Hz
Random	Mil-Std 810F Part 2.2.2, 60 minutes each axis, Section 514.5 C-VII
Electrostatic Discharge	IEC 61000-4-2
Air Discharge	12K Volts
Contact	8K Volts

CREDITS

Product Development: Alvaro Suarez, Artem Skitenko, Brad McFarland, Brian Brice, Bruno Deo Vergilio, Cary Tetrick, Charles Steinkuehler, Dan Fletcher, David Campbell, David Forstenlechner, Erica Perkins, Gabriel Felipe Santos da Silva, George Castillo, Gregory Marco, Heidi Kyle, Ivan Perez, James Cassell, James Killian, James Willmott, Jamie Finch, Jarno Van Der Linden, Jeremy Wiseman, Jhonathan Nicolas MorieraSilva, Josh Helpert, Karen Zipper, Kenneth Nign, Kyle Burgess, Leonardo Amorim de Araújo, Livio de Campos Alves, Matthew Gerner, Menghua Wang, Michael Gonzales, Mike Murphy, Monica LuevanoMares, Naveen Jayakumar, Ryan Cooper, Ryan Hansberger, Sergio Guidi Tabosa Pessoa, Shawn Wisniewski, Stephen Kolmeier, Steve Bowie, Steve Taylor, Troy Stevenson, Utkarsha Washimka

Special thanks to: Andrew Cross, Tim Jenison

Libraries: This product uses the following libraries, licensed under the LGPL license (see link below). For the source, and the ability to change and recompile these components, please visit the links provided

- FreedImage library freeimage.sourceforge.io
- LAME library lame.sourceforge.io

- FFMPEG library ffmpeg.org

For a copy of the LGPL license, please look in the folder c:\TriCaster\LGPL\

Portions use Microsoft Windows Media Technologies. Copyright (c)1999-2023 Microsoft Corporation. All Rights reserved. VST PlugIn Spec. by Steinberg Media Technologies GmbH.


This product uses Inno Setup. Copyright (C) 1997-2023 Jordan Russell. All rights reserved. Portions Copyright (C) 2000-2023 Martijn Laan. All rights reserved. Inno Setup is provided subject to its license, which can be found at:

<https://jrsoftware.org/files/is/license.txt> Inno Setup is distributed WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY of FITNESS FOR A PARTICULAR PURPOSE.







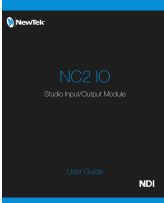


Trademarks: NDI® is a registered trademark of Vizrt NDI AB. TriCaster, 3Play, TalkShow, Video Toaster, LightWave 3D, and Broadcast Minds are registered trademarks of NewTek, Inc. MediaDS, Connect Spark, LightWave, and ProTek are trademarks and/or service marks of NewTek, Inc. All other products or brand names mentioned are trademarks or registered trademarks of their respective holders.










Documents / Resources

	<p>NewTek NC2 Studio Input Output Module [pdf] User Guide NC2 Studio Input Output Module, NC2, Studio Input Output Module, Input Output Module, Output Module, Module</p>
---	---

References

-  [FFmpeg](https://ffmpeg.org)
-  [FFmpeg](https://ffmpeg.org)
-  [The Freemake Project](https://www.freemake.com)
-  [LAME MP3 Encoder](https://lame.sourceforge.io/)
-  [NDI Tools | NDI.tv](https://ndi.tv)
-  [SRT Alliance - Open-source SRT - Secure Reliable Transport](https://srt-alliance.org/)
-  [The Freemake Project](https://www.freemake.com)
-  jrsoftware.org/files/is/license.txt
-  [LAME MP3 Encoder](https://lame.sourceforge.io/)

-  [NDI.tv | Your Official Destination for All Things NDI®](#)
-  [About NDI - Network Device Interface](#)
-  [NDI Tools | NDI.tv](#)
-  [NDI Tools | NDI.tv](#)
-  [NewTek ProTek | Premium Support Coverage](#)
-  [NewTek Reseller Locator](#)
-  [SRT Alliance - Open-source SRT - Secure Reliable Transport](#)

Manuals+.