



NINGBO BHD9829B Remote Control Light Socket Instruction Manual

[Home](#) » [Ningbo](#) » NINGBO BHD9829B Remote Control Light Socket Instruction Manual 

Contents

- [1 NINGBO BHD9829B Remote Control Light Socket](#)
- [2 SAFETY WARNING](#)
- [3 Product Layout](#)
- [4 Operating Instructions](#)
- [5 Cancelling Programming](#)
- [6 Battery Replacement](#)
- [7 Troubleshooting](#)
- [8 Specifications](#)
- [9 Safety Information](#)
- [10 One-Year Limited Warranty](#)
- [11 Documents / Resources](#)
 - [11.1 References](#)

NINGBO

NINGBO BHD9829B Remote Control Light Socket




SAFETY WARNING

To reduce the risk of fire, electric shock, or personal injury, please strictly follow the instructions.

1. Indoor use only. Avoid high humidity, high temperature, and areas with a high magnetic field.
2. Always be sure to cut off the power before installing the receiver.
3. Don't connect any device that may exceed the performance limits of the receiver.
4. Don't install or repair the product Only authorized service personnel should undertake such installation and repairs.
5. If the remote is not in use for an extended period time, remove batteries.
6. Used batteries should be disposed of safely and properly.
7. To prevent a choking hazard, keep packing materials away from children.
8. Do not use the battery again if it is dropped or knocked out of shape.

Product Layout

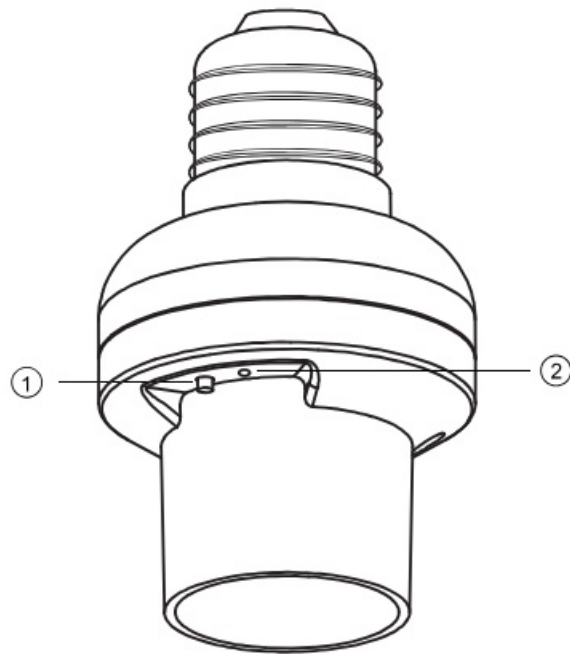


- ① Program button (On/Off button)
- ② Indicator


1. Program button (On/Off button)
2. Indicator

Operating Instructions

1. Please screw the lamp head to the lamp holder.

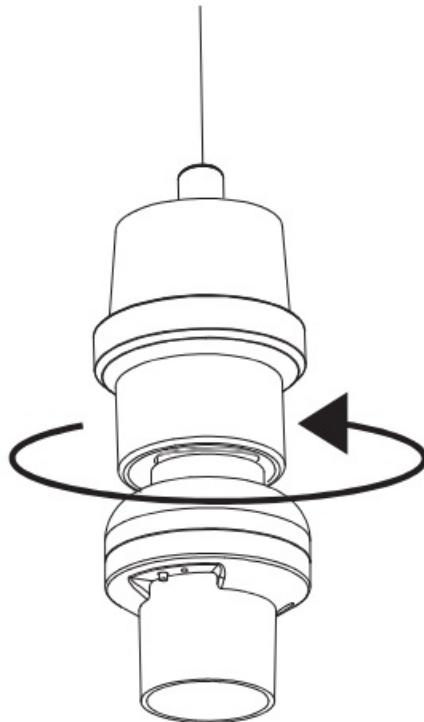

2. Remove the isolation tab in the battery compartment of the transmitter.

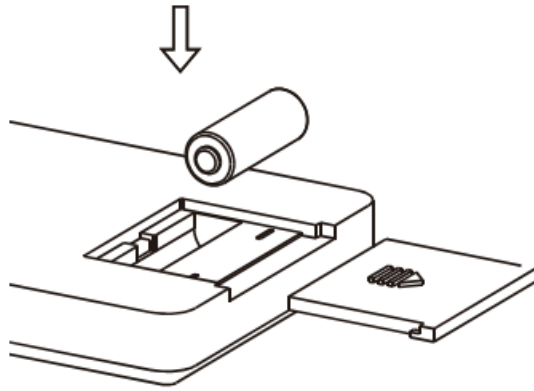


3. Press the ON/OFF button on the wall switch remote control to turn the receiver on and off.


Note: The program button of the receiver can also be used as a manual switch.

Cancelling Programming

To remove a receiver from all transmitter pairings (no remote transmitter can control it):

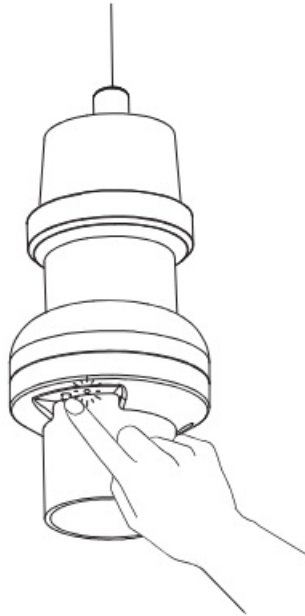


1. Press the program button on the receiver for 6 seconds until the indicator light starts to flash rapidly. (Note: The light flashes from slowly to rapidly.)
2. Release the program button and then press it again. The indicator light will be off. All the programming has been canceled.

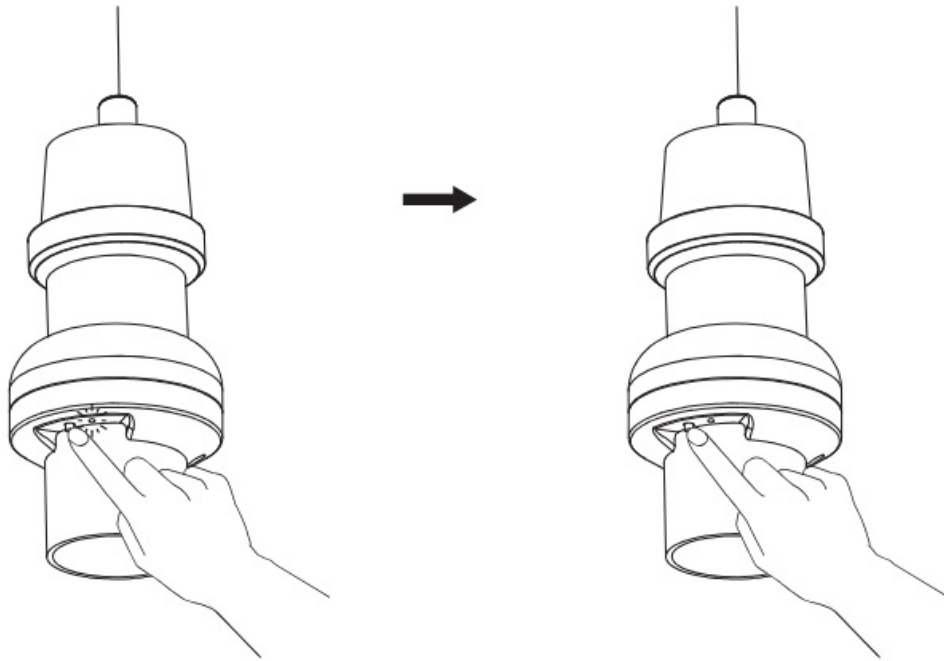

Programming the Receiver

The receivers and transmitters have been pre-paired for immediately use, but there are few units may not be pre-programmed or programmed incorrectly, or you want to customize the configuration to meet your needs. To program a transmitter and receiver, please follow the steps below:

1. Press the program button on the receiver for 3 seconds until the indicator light starts to flash slowly.

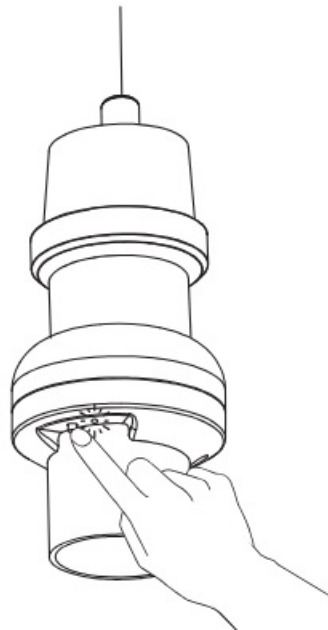

2. Release the program button and then press the “on” or “off” button on the remote control.



3. Programming/ pairing is successful when the indicator light stops blinking.

Note: Each set of ON or OFF button can be paired with and control several receivers; Each receiver can be paired and controlled by multiple transmitters.

Battery Replacement

1. If you find the receiver is working abnormally or the indicator on the transmitter becomes dim, replace the remote battery with a new DC 12V (type 23A) battery, making sure the polarity +/- of the battery is correct.
2. Low battery power may decrease readable wireless remote range.
3. Remove batteries if the remote is not in use for an extended period of time.

Troubleshooting

In the case that one receiver is unresponsive to the remote control, please follow the steps below to resolve the issue:

1. If the wire switch receiver is unresponsive to the remote control, please refer to the “Canceling Programming” and “Programming the Receiver” sections in the manual to reprogram the receiver.
2. Make sure the receiver and appliance are properly connected and powered on.
3. Replace the remote battery with a new 12V (23A) battery.
4. The remote transmitter may be too far away to control the receiver.
5. Make sure not to exceed the maximum load.
6. “Canceling Program” is always prior to “Programming the Receiver” when you would like to make changes.

Specifications

- Input Voltage: 120VAC, 60Hz
- Max.load Power: Incandescent Bulb 60W; CFL/LED 20W
- Transmission Frequency: 433.92MHz
- Remote Control Distance: 100 Feet (Free Area)
- Remote Battery: 12V (23A)
- Socket Type: Standard Medium E26

Safety Information

Federal Communications Commission Interference Statement. This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Redirect or relocate the receiving antenna.
- Increase distance between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate this equipment.

ISED Warning:

This device complies with Innovation, Science, and Economic Development Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:


1. this device may not cause interference, and
2. this device must accept any interference, including interference that may cause undesired operation of the device.

The device is compliance with RF exposure guidelines, users can obtain Canadian information on RF exposure and compliance.

One-Year Limited Warranty

Supported by our professional R&D team and QC team, we provide A Year’s Warranty for materials and workmanship from the purchase date. Please note that the warranty does not cover damage caused by personal misuse or improper installation. Please attach your Order ID and Name so that our dedicated customer service team can help you better.

Documents / Resources

<div><p>Remote Control Light Socket <small>(Innovation Warning)</small></p><p><small>Please pay attention to the warning signs. Read the instructions and safety rules carefully, and keep it handy.</small></p></div>	<p>NINGBO BHD9829B Remote Control Light Socket [pdf] Instruction Manual BHD9829B, BHD9829B Remote Control Light Socket, Remote Control Light Socket, Control Light Socket, Light Socket, Socket</p>
---	---

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.