



nVent HOFFMAN SITES Operator Adapter Instruction Manual

[Home](#) » [nVent HOFFMAN](#) » nVent HOFFMAN SITES Operator Adapter Instruction Manual 






OPERATOR ADAPTER SITES Installation Instructions for I-T-E MAX-FLEX™ (For parts list, see Page 2)

Contents

- [1 SITES Operator Adapter](#)
- [2 Parts List](#)
- [3 INTRODUCTION](#)
- [4 INSTALLATION STEPS](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)

SITES Operator Adapter

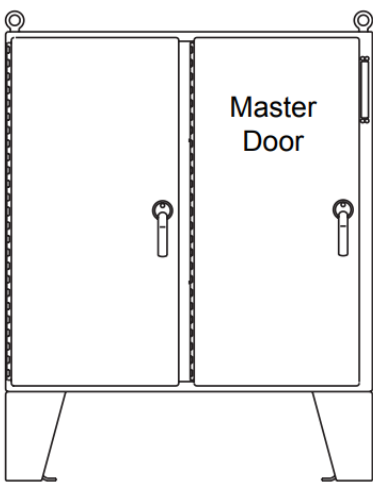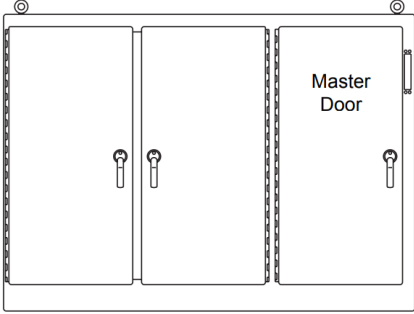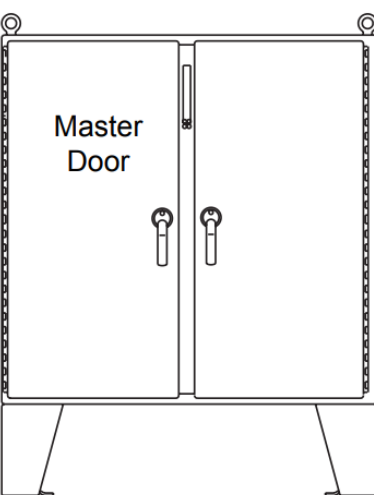		
<p>For floor-mounted enclosures with the disconnect on the right flange</p>	<p>For one- through six-door free-standing enclosures with the disconnect on the right flange</p>	<p>For floor-mounted enclosures with the disconnect on the center post</p>

WARNING

The functions, fits and clearances of the installation described hereon are calculated from information supplied by the manufacturers of the equipment to be installed. Be certain to check the function, fits and clearances of all equipment both before and after installation to assure that it operates properly and safely and meets all applicable codes, standards and regulations.

In the event the completed installation does not function properly or fails to meet any such codes, standards or regulations, do not attempt to make alterations or operate the equipment. Report such facts immediately to:

Hoffman Customer Service
2100 Hoffman Way
Anoka, MN 55303
763.422.2211

<http://hoffman.nvent.com/contact-us>

Parts List

Operator Adapter, Catalog Number GEV, for General Electric Disconnects

Item No.	Description	Part No.	Qty.
1	ADAPTER PLATE FOR FHOH AND FHOHS	27206002	1
2	PLATE GASKET	89109613	1
3	SCREW, 1/4-20X1/2 PAN HEAD	99401031	4
4	SLIDE ARM	26250001	1
5	SHOULDER COLLAR	26149001	1
6	SCREW, 1/4-20X7/8 HEX HEAD	99401030	1
7	LOCKWASHER, 1/4 SPRING	99401318	1
8	WASHER, FLAT	22101003	2
9	LOCKWASHER, 1/4 INTERNAL TEETH	99401300	2
10	NUT, 1/4-20 HEX	99401406	2
11	DOOR CATCH	23101002	1
12	SCREW, 10-32X3/8 PAN HEAD	99401007	2
13	LOCKWASHER, #10 INTERNAL TEETH	99401307	2
14	NYLON WASHER	26132003	4
15	INSTALLATION INSTRUCTIONS	89114652	1

These parts are for the smaller I-T-E flange handle.
(FHOHS for disconnect switches, FHOH for circuit breakers)

INTRODUCTION

This installation instruction is for I-T-E MAX-FLEX™ mechanisms. These mechanisms are for disconnect switches and circuit breakers mounted in Hoffman two door, floor-mounted and one through six door, free-standing enclosures with the disconnect on the right flange.

INSTALLATION STEPS

Step 1

Install adapter plate (item 1) and plate gasket (item 2) on the inside of the enclosure, behind the rectangular opening provided. Gasket side with PSA should be attached to the adapter plate. Secure in place with four screws (item 3) and four nylon washers (item 14).

Step 2

Assemble the I-T-E operating handle to the mounting plate which was installed in the enclosure in step 1. Omit cap screw and lock washer which fits into bottom hole of I-T-E operating handle.

Step 3

Install the slide arm (item 4) over the interlock lever part of the I-T-E operating handle, as shown. Note that the notch in the slide arm is positioned toward the door opening. Place the smaller diameter end of the shoulder collar (item 5) through the oval slot in the slide arm. Install long cap screw (item 6) with lock washer (item 7) through shoulder collar into the bottom mounting hole of the I-T-E operating handle and tighten. The slide arm should move up and down smoothly. Install interlock lever extension per I-T-E instructions.

Step 4

Attach the bottom of the slide arm to the offset arm of the lock release mechanism. Use two flat washers (item 8),

two lock washers (item 9), and two hex nuts (item 10). Do not tighten until parts are adjusted. (see step 5B)

Step 5

The handle safety lock release mechanism is adjustable in two places.

(A) Check the adjustment of the factory installed roller bracket. The door latch should hit against the latch stop portion of the roller bracket when the door is closed and latched. Adjust up or down if necessary. The attached mechanism will then provide the necessary up-down motion required to operate the release mechanism in the I-T-E operating handle.

(B) Adjust the length of the slide arm assembly. With proper adjustment of the slide arm, the safety lock (in I-T-E operating handle) should release just before the master door is fully latched. Lengthen slide arm if safety lock releases too soon. Shorten slide arm if safety lock releases too late.

Step 6

Attach the door catch (item 11), provided by Hoffman, to the tapped spacer on the door using the bottom set of mounting holes. Use two screws (item 12) and lock washers (item 13). The door catch prevents the door from being opened when the I-T-E operating handle is in the "ON" position.

Step 7

Drill and tap holes in panel per I-T-E instructions. Disconnect can be located anywhere within reach of cable length being used. See I-T-E instructions.


Step 8

Install panel on collar studs in enclosure.

Step 9

Mount disconnect switch or circuit breaker and operating mechanism on panel using I-T-E instructions and parts.

For Two-Door, Floor-Mounted and One- Through Six-Door, Free-Standing Enclosures with Disconnect on Right Flange

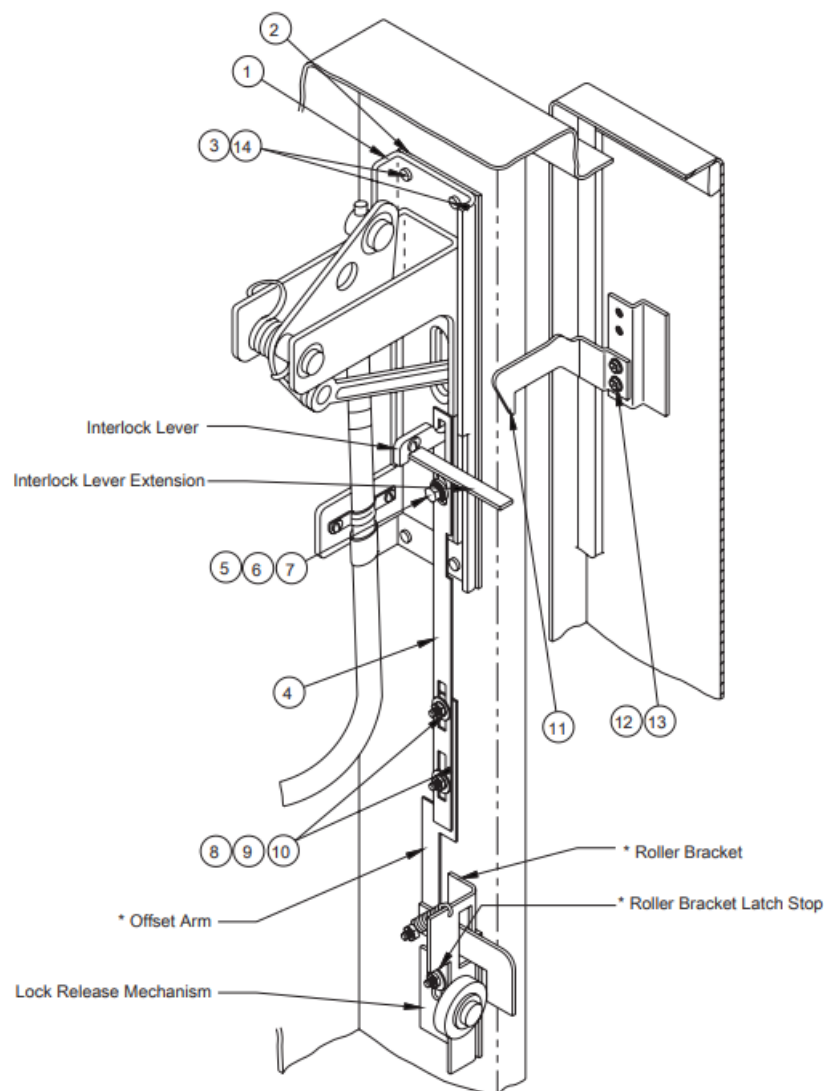

* Parts of Lock Release Mechanism

INTRODUCTION

This installation instruction is for I-T-E MAX-FLEX™ mechanisms. These mechanisms are for disconnect switches and circuit breakers mounted in Hoffman two door, floor-mounted enclosures with the disconnect on the center post.

INSTALLATION STEPS

Step 1

Install adapter plate (item 1) and plate gasket (item 2) on the inside of the enclosure, behind the rectangular opening provided in the center post. Gasket side with PSA should be attached to the adapter plate. Secure in place with four screws (item 3) and four nylon washers (item 14).

Step 2

Assemble the I-T-E operating handle to the mounting plate which was installed in the enclosure in step 1. Omit cap screw and lock washer which fits into bottom hole of I-T-E operating handle.

Step 3

Cut 2 1/2 inches off bottom end of slide arm (item 4) (bottom end has rectangular holes only).

Step 4

Install the slide arm (item 4) over the interlock lever part of the I-T-E operating handle, as shown. Place the smaller diameter end of the shoulder collar (item 5) through the oval slot in the slide arm. Note that the notch in the slide arm is positioned toward the door opening. Place the smaller diameter end of the shoulder collar (item 5) through the oval slot in the slide arm. Install long cap screw (item 6) with lock washer (item 7) through shoulder collar into the bottom mounting hole of the I-T-E operating handle and tighten. The slide arm should move up and down smoothly. Install interlock lever extension per I-T-E instructions.

Step 5

Attach the bottom of the slide arm to the offset arm of the lock release mechanism. Use two flat washers (item 8), two lock washers (item 9), and two hex nuts (item 10). Do not tighten until parts are adjusted.

Step 6

Adjust the length of the slide arm assembly. With proper adjustment of the slide arm, the safety lock (in I-T-E operating handle) should release just before the master door is fully latched. Lengthen slide arm if safety lock releases too soon. Shorten slide arm if safety lock releases too late.

Step 7

Attach the door catch (item 11), provided by Hoffman, to the tapped spacer on the door using the bottom set of mounting holes. Use two screws (item 12) and lock washers (item 13). The door catch prevents the door from being opened when the I-T-E operating handle is in the "ON" position.

Step 8

Drill and tap holes in panel per I-T-E instructions. Disconnect can be located anywhere within reach of cable length being used. See I-T-E instructions.


Step 9

Install panel on collar studs in enclosure.

Step 10

Mount disconnect switch or circuit breaker and operating mechanism on panel using I-T-E instructions and parts.


For Two-Door, Floor-Mounted Enclosures with Disconnect on Center post

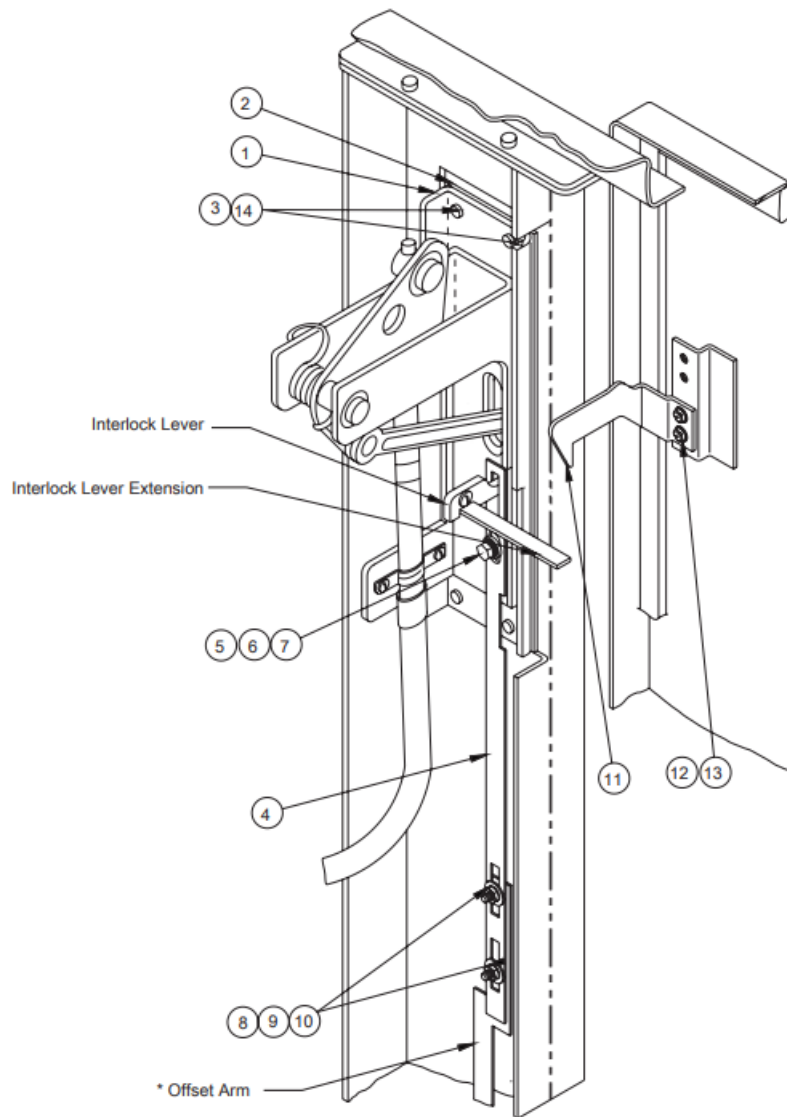

* Parts of Lock Release Mechanism

© 2018 Hoffman Enclosures Inc.
 PH 763 422 2211 • nVent.com/HOFFMAN
 89115504

Documents / Resources

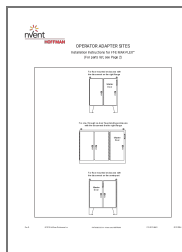

[nVent HOFFMAN SITES Operator Adapter](#) [pdf] Instruction Manual
 SITES, FHOHS, FHOH, I-T-E MAX-FLEX, SITES Operator Adapter, SITES, Operator Adapter, Adapter

References

- [🔥 Contact us, we'd love to hear from you | nVent](#)
- [🔥 We connect and protect | nVent](#)

