


RENESAS HS4000-EVK Relative Humidity and Temperature Sensor Evaluation Kit User Guide

[Home](#) » [RENESAS](#) » RENESAS HS4000-EVK Relative Humidity and Temperature Sensor Evaluation Kit User Guide 

RENESAS HS4000-EVK Relative Humidity and Temperature Sensor Evaluation Kit User Guide

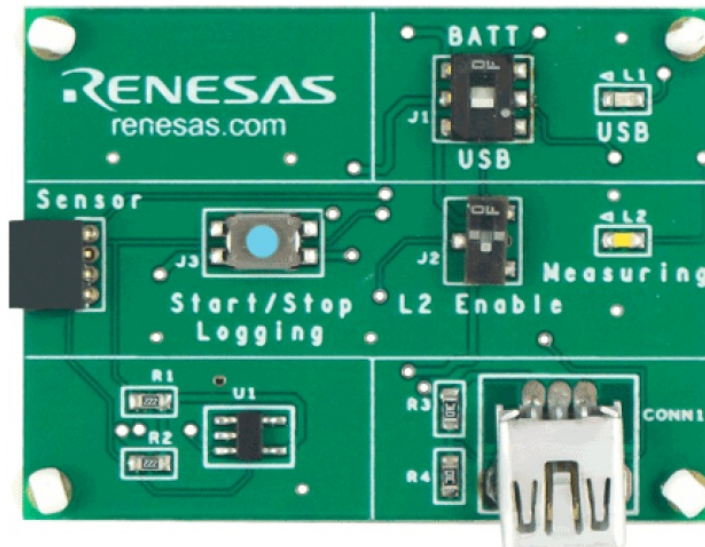

Contents

- 1 Introduction
- 2 Board Contents
- 3 Features
- 4 Functional Description
 - 4.1 Setup and Configuration
 - 4.2 Kit Hardware Connections
- 5 Using the EVK
 - 5.1 Exporting Data
 - 5.2 Data Logging Mode (Untethered)
 - 5.3 Data Logging Settings
 - 5.4 Using the Plotter
 - 5.5 Valid Settings Ranges
- 6 Ordering Information
- 7 Revision History
- 8 IMPORTANT NOTICE AND DISCLAIMER
- 9 Support
- 10 Documents / Resources
 - 10.1 References
- 11 Related Posts

Introduction

The HS4000-EVK Evaluation Kit is used to assess the HS4001 High-Performance Relative Humidity and Temperature Sensor. The hardware allows users to perform data logging experiments, and it can communicate through a standard USB interface with the user's computer using the Demo Software. This software can be used to view measurements in realtime, adjust the resolution of the sensor, configure measurement parameters, and download previously logged measurements.

The evaluation board can be powered directly from the USB port of the user's computer or from a 1632 coin cell battery to enable fully autonomous (untethered) data logging.

Board Contents

- HS4000-EVK evaluation board
- Three HS4001 sensor modules
- Sensor module extension cable
- USB cable

Features

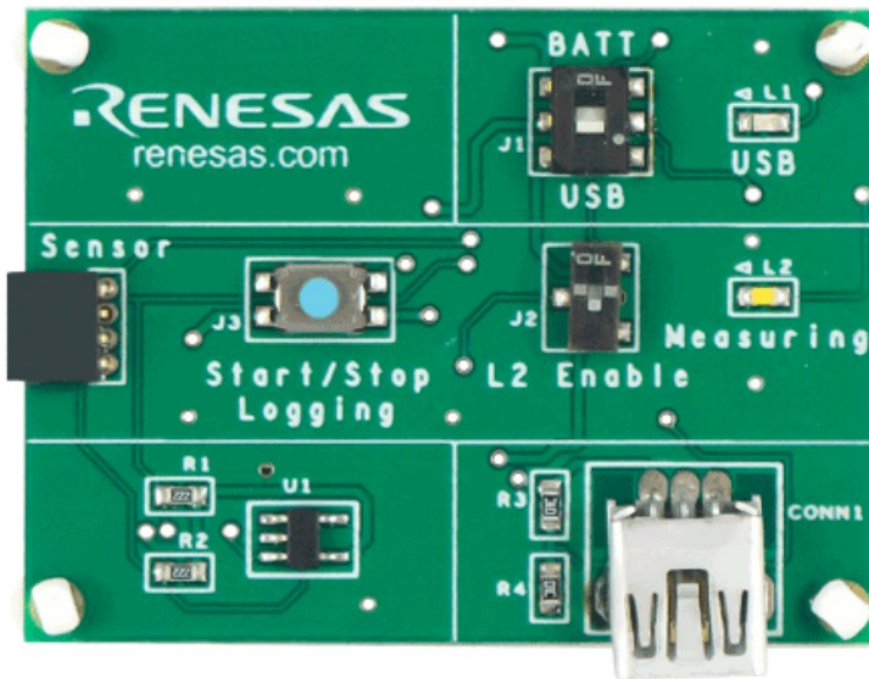


Figure 1. HS4000-EVK Evaluation Kit

- Relative Humidity Sensor Module with HS4001 sensor:
 - RH accuracy: $\pm 1.5\%RH$
- Demo Software:
 - Data plotter
 - Measurement resolution configuration
 - Data export
- Sensor module extension cable allows extending the HS4001 Sensor Module to different measurement areas

Functional Description

Setup and Configuration

Computer Requirements

A Windows®-based computer is required for interfacing with the kit and configuring the device. The user must have administrative rights on the computer to install the Renesas Demo Software for the kit.

The computer must meet the following minimum systems requirements:

1. CPU – Intel or compatible
2. RAM – 512MB
3. Operating system – Windows® XP / Vista / 7 / 8 / 10
4. Ports – One available USB port

Software Installation and Setup

Complete the following procedure to install the Demo Software:

1. Plug in the USB flash drive to start the setup.
2. If the setup process does not start automatically, double-click on the [Setup.exe](#) file.

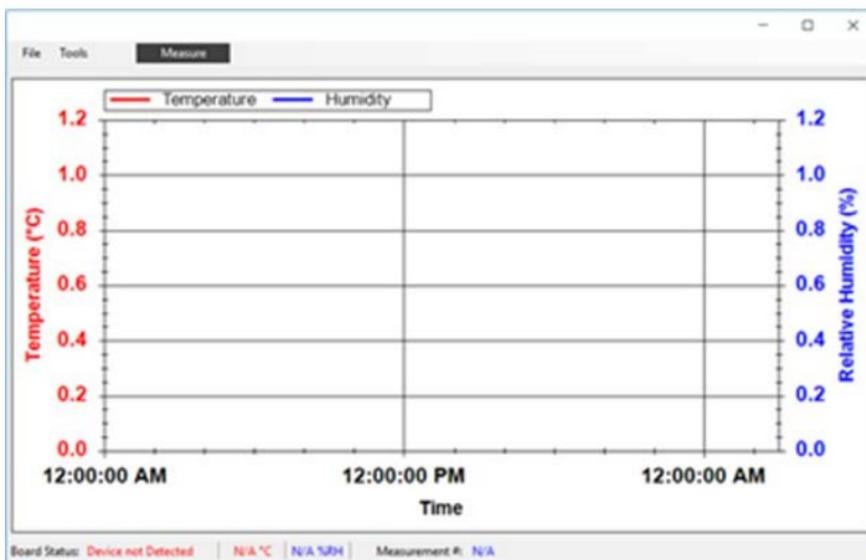


Figure 2. Initial Display after Installation of the Demo Software

Kit Hardware Connections

Complete the following procedure to set up the kit as shown in Figure.3:

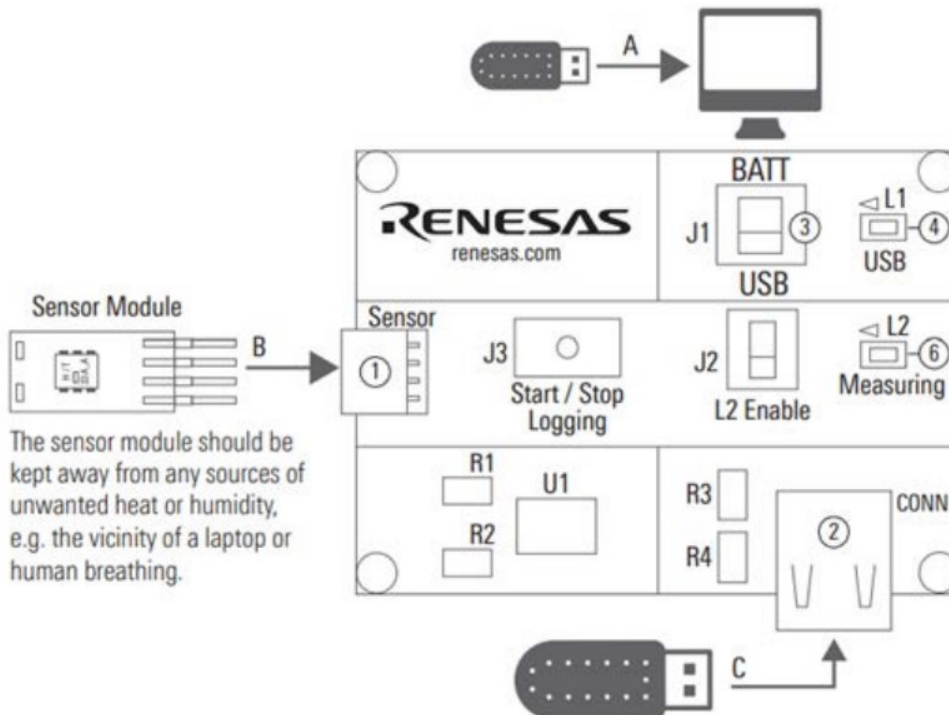


Figure 3. Evaluation Kit Connections

1. Install the software from the USB flash drive or download from renesas.com as described in Software Installation and Setup.
2. Connect one of the HS4001 sensor modules facing up, with or without the extension cable attached, into the sensor module connector **1**.
3. Connect the USB port 2 of the board to the user's computer using the supplied USB cable, and ensure that the power switch 3 on the board is in the USB position. The "USB" LED 4 will light.
4. Run the Demo Software package from the Start menu, and click on the "Measure" button **5**. The "Measuring" indicator 6 will blink whenever data is being captured.

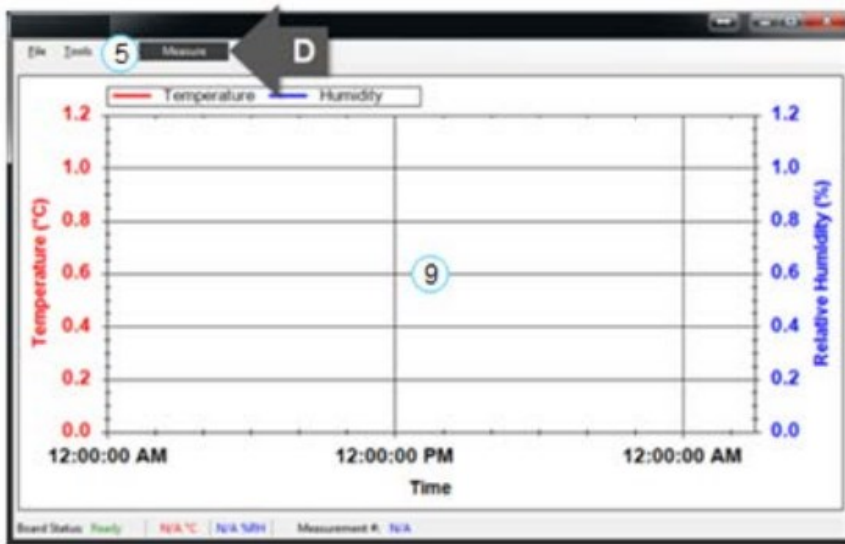


Figure 4. Start Measurements

Using the EVK

Measurement Settings

To change the interval and number of measurements to be made, select Measurement Settings from the Tools menu, enter the desired values, and then click OK, as **shown in Figure 5**. For the range of valid settings for these two entry fields, see Valid Settings Ranges.

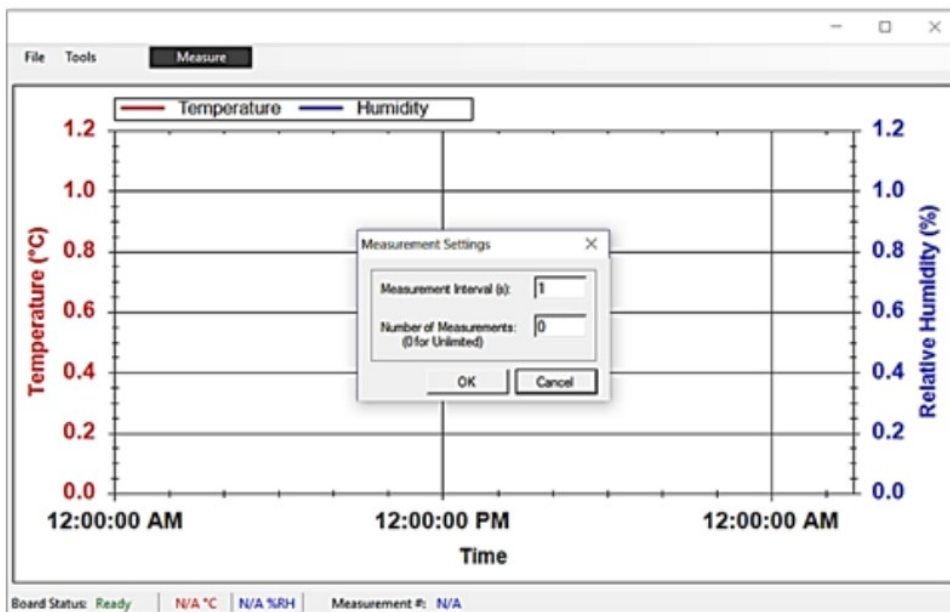


Figure 5. Measurement Settings

To change the measurement resolution, select Set Resolution from the Tools menu, select the desired resolution, and then click OK, **as shown in Figure 6**. The resolution setting is stored on the sensor, and it will be the default value applied when measurements are started. Measurement settings can be changed only when no measurements are being taken.

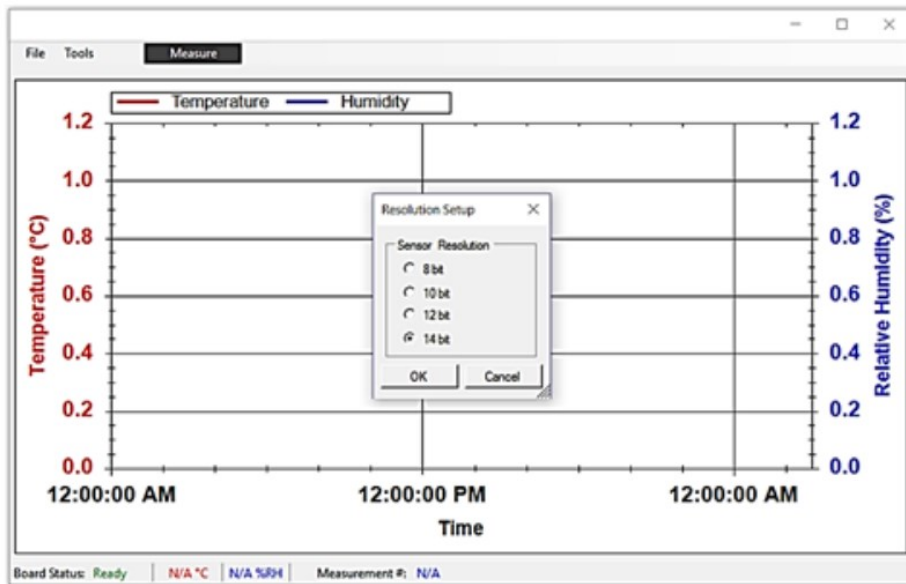


Figure 6. Set Resolution


Exporting Data

The data displayed in the plotter area can be exported in two different formats.

- To export the measured data points in a Microsoft Excel® compatible comma-separated text file, select Save Data from the File menu. Create a filename for the data, and select the location where the file will be saved.
- To export the plots themselves as a picture file, right-click on the plot area and select Save Image As. Create a file name, select the location, and select the file type for the image.

Data Logging Mode (Untethered)

Disconnect the kit from the computer. Ensure that a battery is inserted in the battery holder on the back of the board with the positive battery terminal facing away from the board, as shown in **Figure 7**.

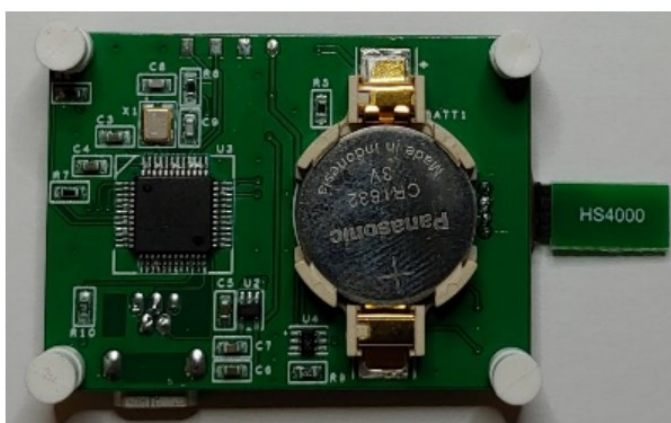

Complete the following to operate the kit in the data logging mode (see **Figure 2** and **Figure 3**).

1. To set the board to the data logging mode, put the power switch 3 in the “Batt” position.
2. To start data logging, hold the “Start/Stop Logging” button 7 for 3 seconds. The “Measuring” indicator 6 will light for 2 seconds and then start blinking on every logged measurement. This can be disabled to extend the battery life by toggling the “L2 Enable” switch 8 .

3. To stop data logging, press the “Start/Stop Logging” button. The “Measuring” indicator blinks 3 times to indicate the end of data logging.
4. To download the logged data to the Demo Software, connect the USB port 2 to the computer using the supplied USB cable, and ensure that the power switch 3 on the board is in the USB position. The “USB” LED 4 will light.
5. In the software, select Data Logging from the Tools menu and click on the Download Data button 10 **as shown in Figure 8**. The maximum number of measurements that can be stored on the board is 2000.

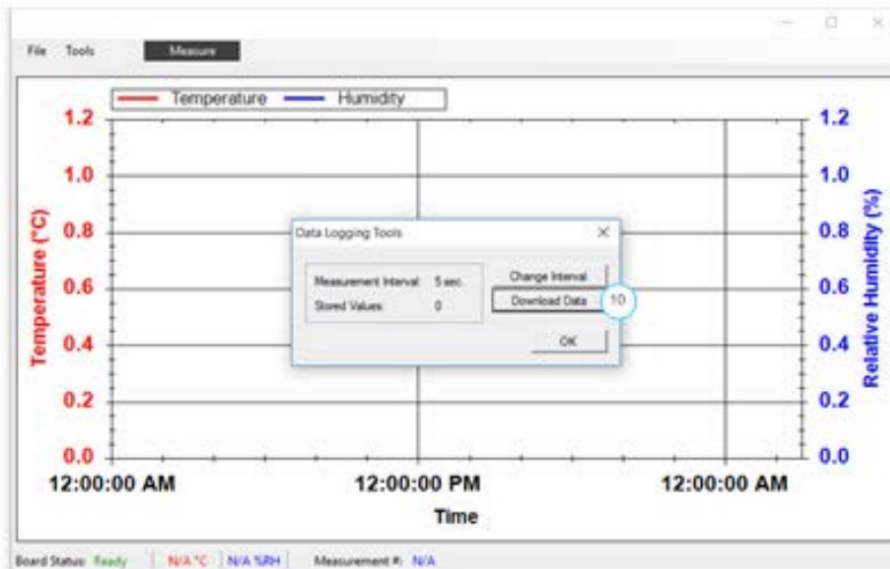


Figure 8. Download Data to Demo Software

Data Logging Settings

To change the data logging measurement interval, select Data Logging from the Tools menu, and then click on Change Interval. Enter the desired measurement interval, and click OK.

The data logging resolution can be selected in the same method as described in Valid Settings Ranges. Data logging settings can only be changed when no measurements are being taken.

Using the Plotter

The plotter 9 displays the measured relative humidity and temperature data simultaneously versus time (**see Figure 3**).

- Hold the left-mouse button, and drag it around an area to zoom onto that area.
- Hold the middle mouse or scroll button, and drag to pan across the plot area.
- To undo a zoom or pan operation, right click on the plot area, and select Un-Zoom (Un-Pan).
- The plot area can always be reset to the default view by right clicking on the plot area and selecting Undo All Zoom/Pan.
- To display the measurement points on the plotted curves, right click on the plot area and select Show Data Points. While moving the application window, measurements points will not be plotted.

Valid Settings Ranges

Measurement settings can be selected within the following ranges:

- Measurement interval: 0.5 to 3600 s
- Number of measurements: 1 to unlimited
- Data logging interval: 1 to 250 s
- Measurement resolution: 8, 10, 12, 14 bits

Ordering Information

Part Number	Description
HS4000-EVK	HS4000-EVK Evaluation Kit, including HS4000-EVK evaluation board, HS4001 sensor modules, sensor module extension cable, USB key with Demo Software, USB cable

Revision History

Revision	Date	Description
1.00	May 10, 2022	Initial release.

IMPORTANT NOTICE AND DISCLAIMER

RENESAS ELECTRONICS CORPORATION AND ITS SUBSIDIARIES (“RENESAS”) PROVIDES TECHNICAL SPECIFICATIONS AND RELIABILITY DATA (INCLUDING DATASHEETS), DESIGN RESOURCES (INCLUDING REFERENCE DESIGNS), APPLICATION OR OTHER DESIGN ADVICE, WEB TOOLS, SAFETY INFORMATION, AND OTHER RESOURCES “AS IS” AND WITH ALL FAULTS, AND DISCLAIMS ALL WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, WITHOUT LIMITATION, ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR NON-INFRINGEMENT OF THIRD PARTY INTELLECTUAL PROPERTY RIGHTS.

These resources are intended for developers skilled in the art designing with Renesas products. You are solely responsible for (1) selecting the appropriate products for your application, (2) designing, validating, and testing your application, and (3) ensuring your application meets applicable standards, and any other safety, security, or other requirements. These resources are subject to change without notice. Renesas grants you permission to use these resources only for development of an application that uses Renesas products. Other reproduction or use of these resources is strictly prohibited. No license is granted to any other Renesas intellectual property or to any third party intellectual property. Renesas disclaims responsibility for, and you will fully indemnify Renesas and its representatives against, any claims, damages, costs, losses, or liabilities arising out of your use of these resources. Renesas’ products are provided only subject to Renesas’ Terms and Conditions of Sale or other applicable terms agreed to in writing. No use of any Renesas resources expands or otherwise alters any applicable warranties or warranty disclaimers for these products.

Support

Corporate Headquarters
 TOYOSU FORESIA, 3-2-24 Toyosu,
 Koto-ku, Tokyo 135-0061, Japan
www.renesas.com

Contact Information

For further information on a product, technology, the most up-to-date version of a document, or your nearest sales


office, please visit:
www.renesas.com/contact/

Trademarks

Renesas and the Renesas logo are trademarks of Renesas Electronics Corporation. All trademarks and registered trademarks are the property of their respective owners.



Documents / Resources

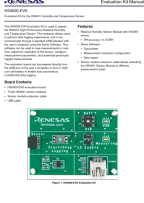	<p>RENESAS HS4000-EVK Relative Humidity and Temperature Sensor Evaluation Kit [pdf] User Guide</p> <p>HS4000-EVK Relative Humidity and Temperature Sensor Evaluation Kit, HS4000-EVK, Relative Humidity and Temperature Sensor Evaluation Kit, Temperature Sensor Evaluation Kit, Sensor Evaluation Kit, Evaluation Kit</p>
---	---

References

- [Renesas Electronics Corporation](#)
- [Renesas Electronics Corporation](#)
- [Contact Us | Renesas](#)
- [Renesas Electronics Corporation](#)
- [Contact Us | Renesas](#)

[Manuals+](#)