



SpeedyBee F7 V3 BL32 50A 30×30 Stack Mini Flight Controller User Manual


[Home](#) » [SpeedyBee](#) » SpeedyBee F7 V3 BL32 50A 30×30 Stack Mini Flight Controller User Manual

Contents [[hide](#)]

- 1 [SpeedyBee F7 V3 BL32 50A 30×30 Stack Mini Flight Controller](#)
- 2 [Overview](#)
 - 2.1 [Specs Overview](#)
- 3 [Dimensions](#)
- 4 [Package](#)
- 5 [FC & ESC Connection](#)
- 6 [SpeedyBee F7 V3 Flight Controller](#)
 - 6.1 [Layout](#)
- 7 [FC's Peripheral Connection](#)
 - 7.1 [Wiring Diagram](#)
- 8 [App](#)
- 9 [FC Firmware Update](#)
- 10 [Specifications](#)
- 11 [SpeedyBee BL32 50A 4-in-1 ESC](#)
 - 11.1 [Layout](#)
- 12 [Connection with Motors & Power Cable](#)
- 13 [ESC Conifguration & Firmware Update](#)
- 14 [Documents / Resources](#)
 - 14.1 [References](#)
- 15 [Related Posts](#)



SpeedyBee F7 V3 BL32 50A 30×30 Stack Mini Flight Controller

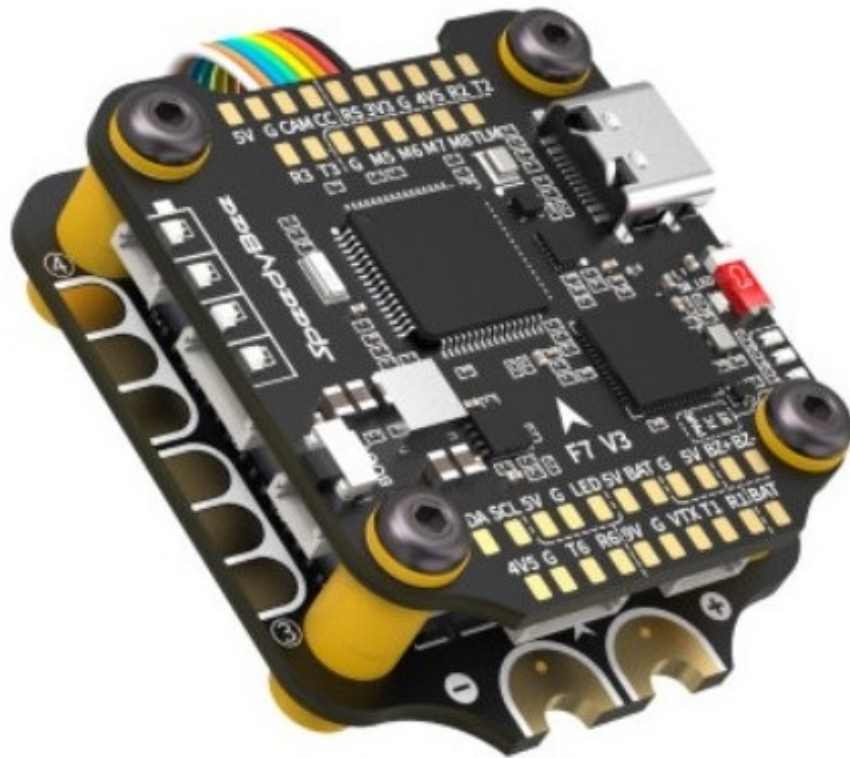


Overview


Specs Overview

Product Name	SpeedyBee F7 V3 BL32 50A 30×30 Stack
Flight Controller	SpeedyBee F7 V3
ESC	SpeedyBee BL32 50A 4-in-1 ESC
Bluetooth	Supported. For FC & ESC parameter setting
Wireless FC Firmware Flashing	Supported
Wireless Blackbox Download	Supported
Power Input	3-6S LiPo
Mounting	30.5 x 30.5mm 4mm hole size
Dimension	45.6mm(L) x 40mm(W) x 16.1mm(H)
Weight	29.9g

Dimensions

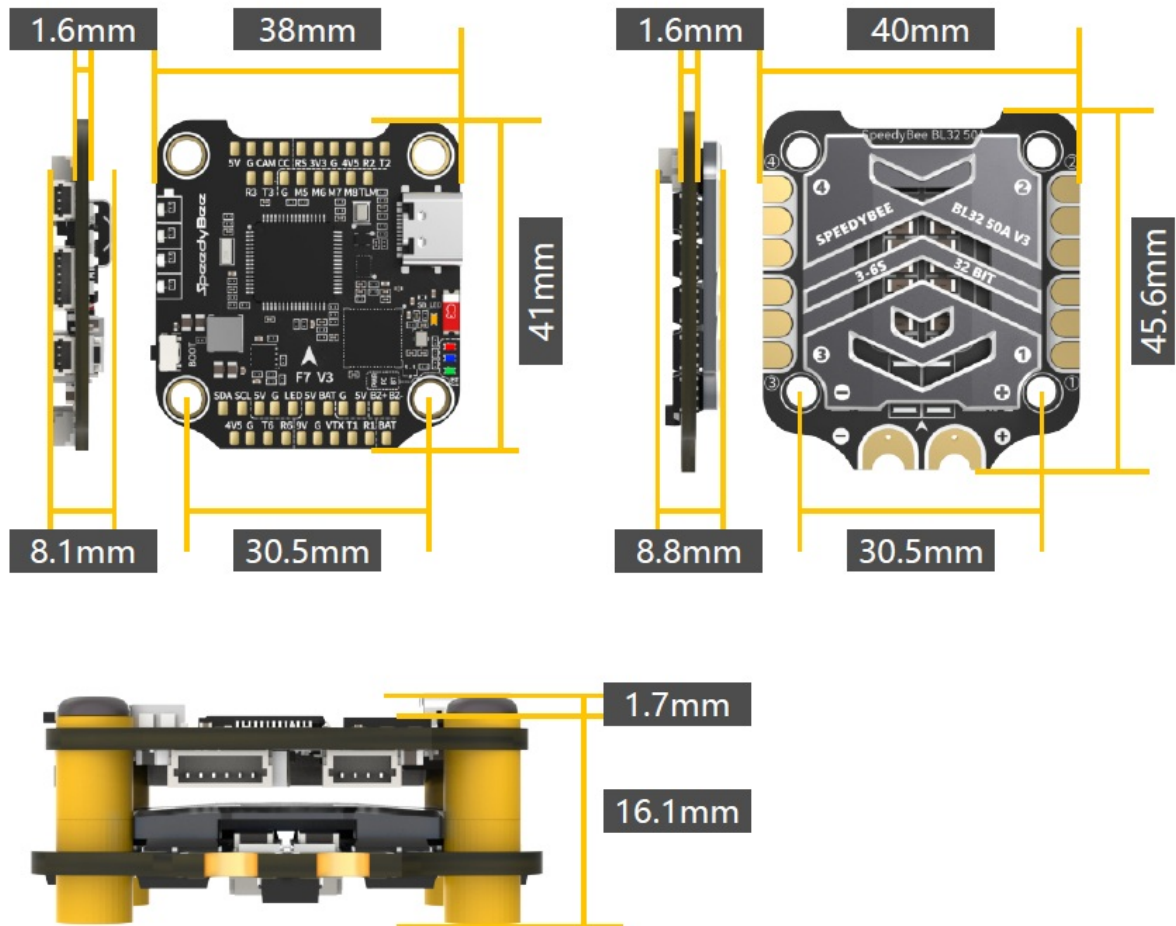


Package

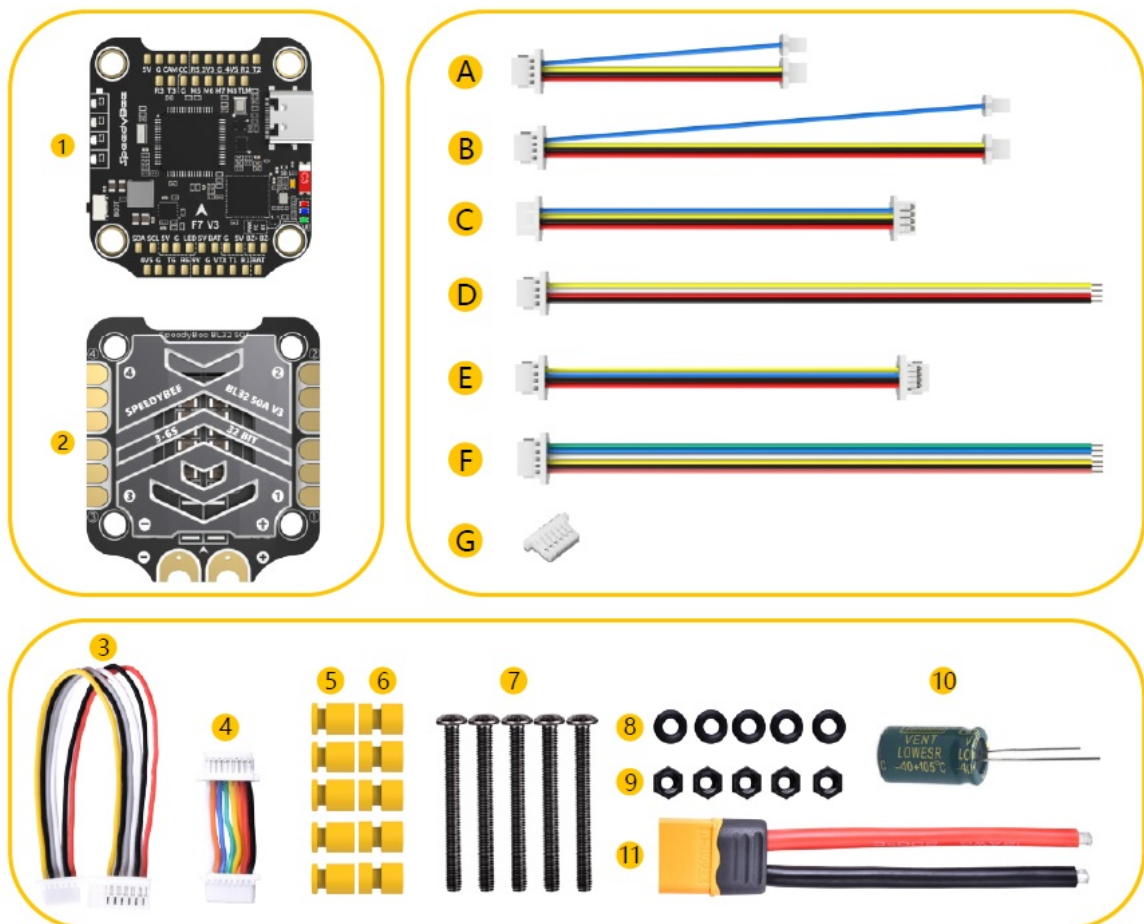

1. SpeedyBee F7 V3 Flight Controller x 1
2. SpeedyBee BL32 50A 4-in-1 ESC x 1
3. DJI 6pin Cable(80mm) x 1
4. SH 1.0mm 15mm-length 8pin Cable(for FC-ESC connection) x 1
5. M3*8mm Silicone Grommets(for FC) x 5
6. M3*8.1mm Silicone Grommets(for ESC) x 5
7. M3*30mm Inner-hexagon Screws x 5
8. M3 silicone O Ring x 5
9. M3 Nylon Nut x 5
10. 35V 1500uF Low ESR Capacitor x 1
11. XT60 Power Cable(70mm) x 1
 - 4pin SH1.0 to 3+2pin JST1.25 FPV Cam Cable(30mm) x 1
 - 4pin SH1.0 to 3+2pin JST1.25 FPV Cam Cable(60mm) x 1
 - 4pin SH1.0 to 4pin JST1.25 FPV Cam Cable(60mm) x 1
 - 4pin SH1.0 Radio Receiver Cable(100mm) x 1
 - 4pin SH1.0 to 4pin SH1.0 Analog VTX Cable x 1
 - 6pin SH1.0 GPS Module Cable without Connector on another end(100mm) x 1
 - 6pin SH1.0 GPS Module Cable Connector of another end x 1

FC & ESC Connection



Method 1 – Direct Soldering

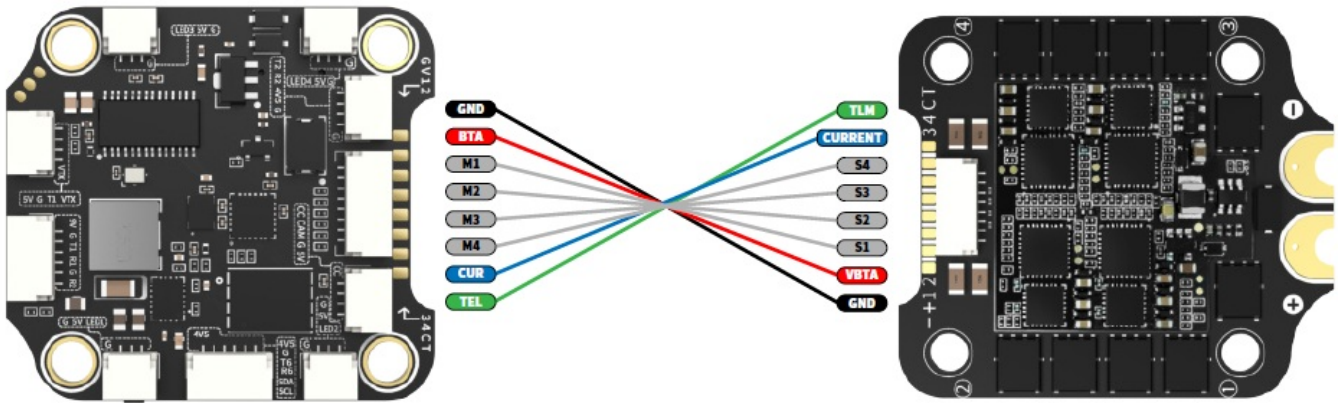

F7 V3 Flight Controller

BL32 50A 4-in-1 ESC

Method 2 – All connectors

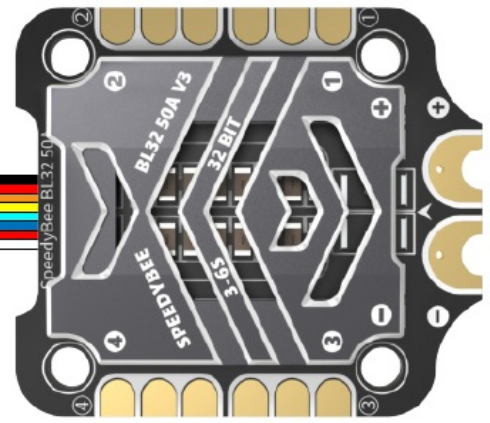
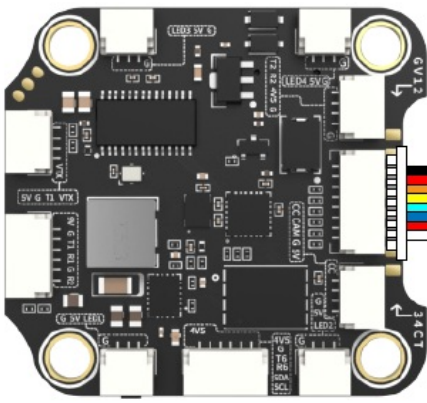


F7 V3 Flight Controller

BL32 50A 4-in-1 ESC

SpeedyBee F7 V3 Flight Controller

Layout

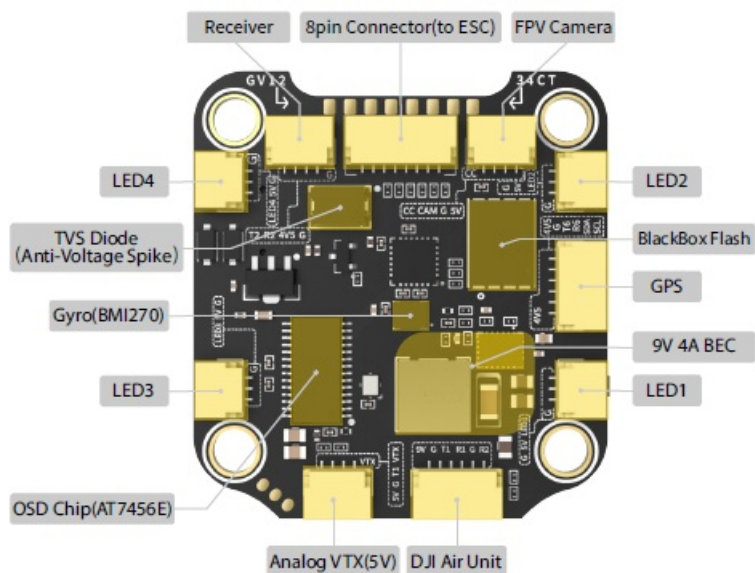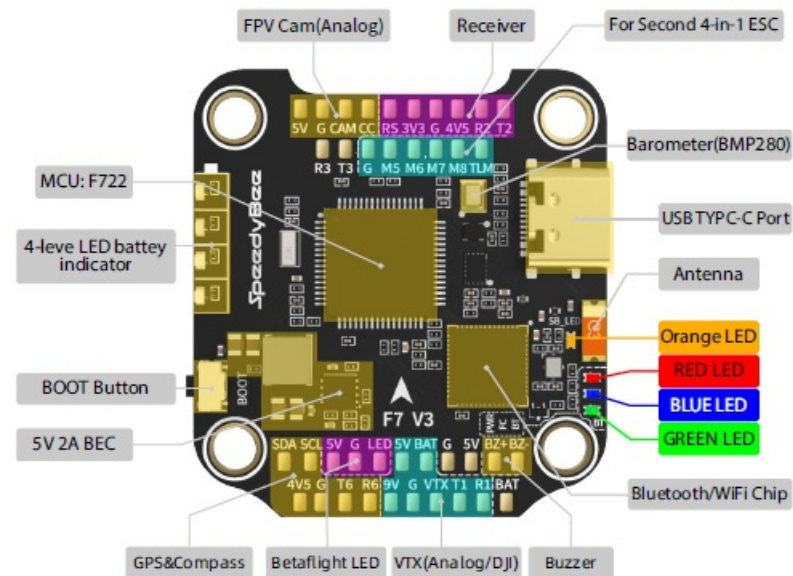


- LED Indicator Definition
- RED LED – Power Indicator. Solid Red aer powering up.
- GREEN LED – Bluetooth status light. Solid Green indicates Bluetooth is connected.
- BLUE LED – Flight controller status light which is controlled by the flight controller firmware.
- Orange LED – LED Control Mode Indicator. It indicates the 4 sets of LEDs connected to LED1-LED4 connectors on the bottom side are controlled by Betaflight firmware(BF_LED mode) or the Bluetooth Chip(SB_LED mode).
- **Solid Orange:** indicates the 4 x LEDs are in SB_LED mode. In this mode, when the FC is powered on and in standby mode, press the BOOT button to cycle the display modes of the LEDs.
You could also change modes in the app wirelessly.
- **OFF:** indicates the 4 x LEDs are controlled by Betaflight firmware. Long press the button for 3 seconds to switch the control modes between BF_LED mode and SB_LED mode.

FC's Peripheral Connection


Wiring Diagram

Method 1 – Direct Soldering

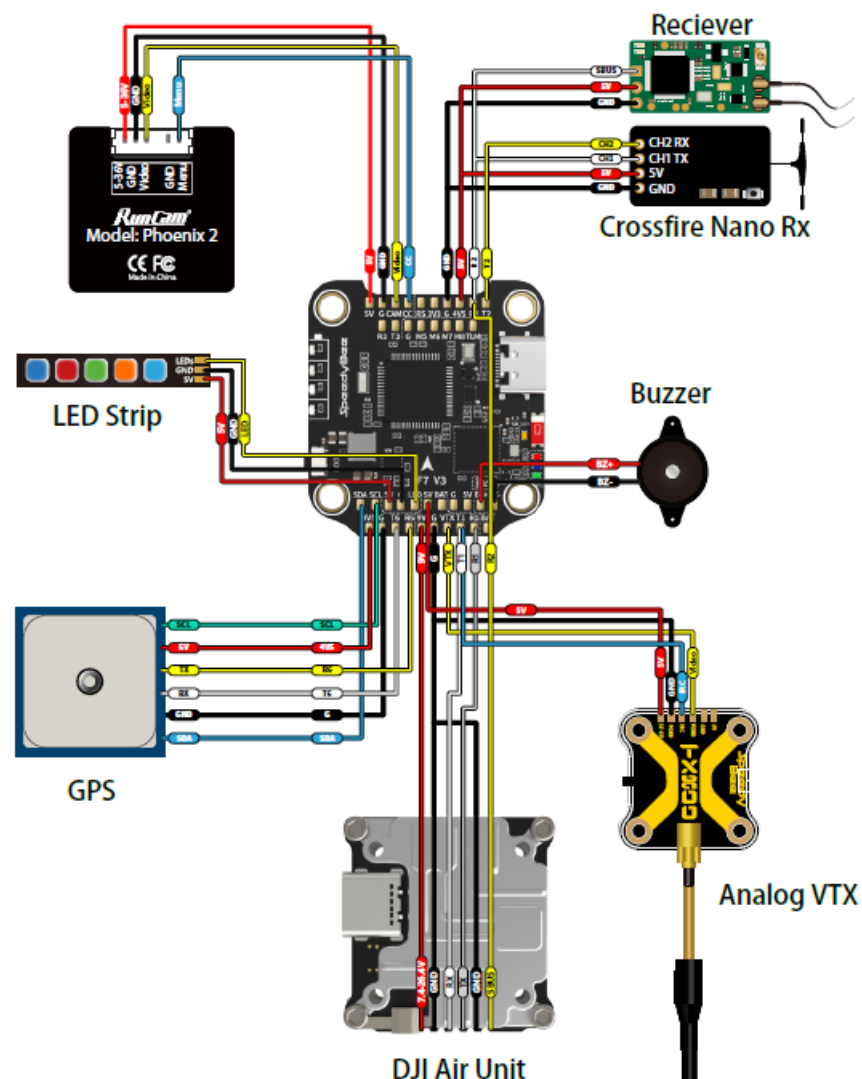

Method 2 – All connectors

To recognize the wires in the package better, we marked some of these wires with letters(from A to F). Please find the right wires according to their letters.

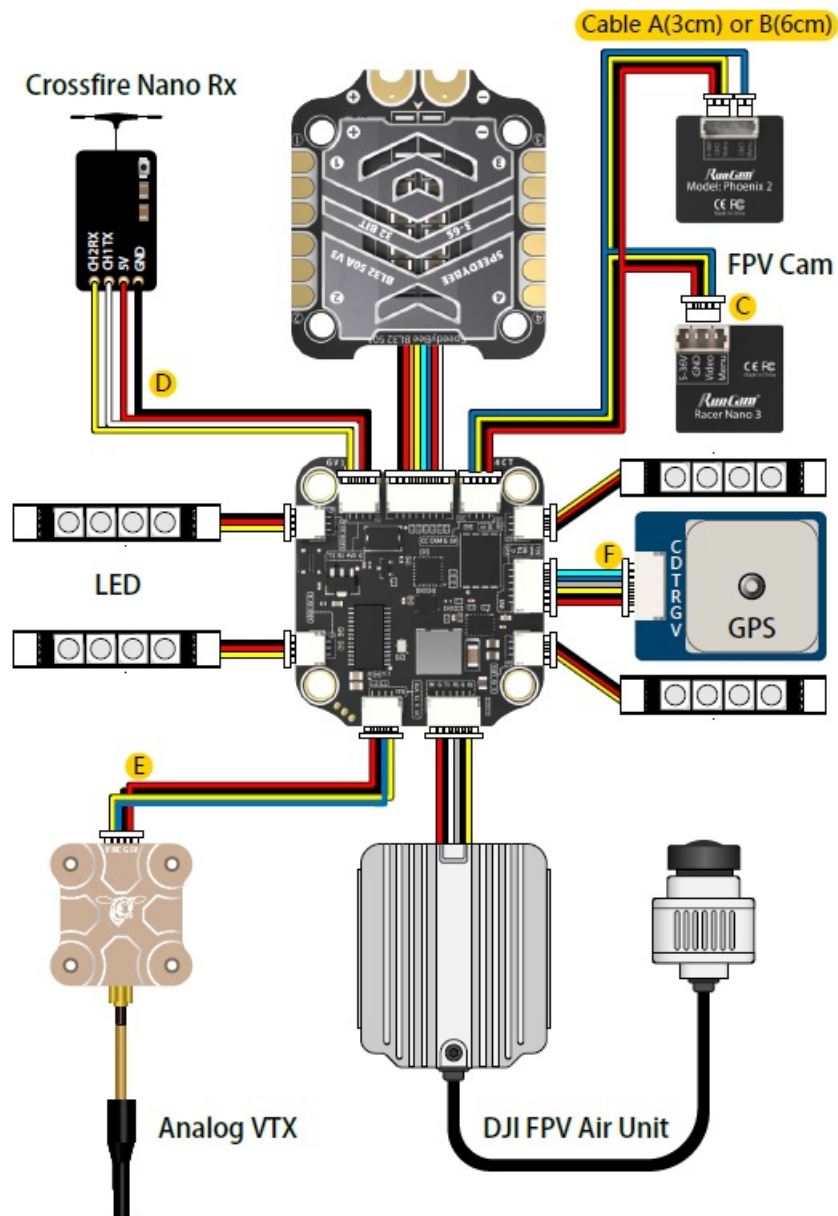


App

- **Get the SpeedyBee App**


Search 'SpeedyBee' on Google Play or App Store. Or download the Android .apk file on our website:







<https://www.speedybee.com/download>

- **Connect the App**

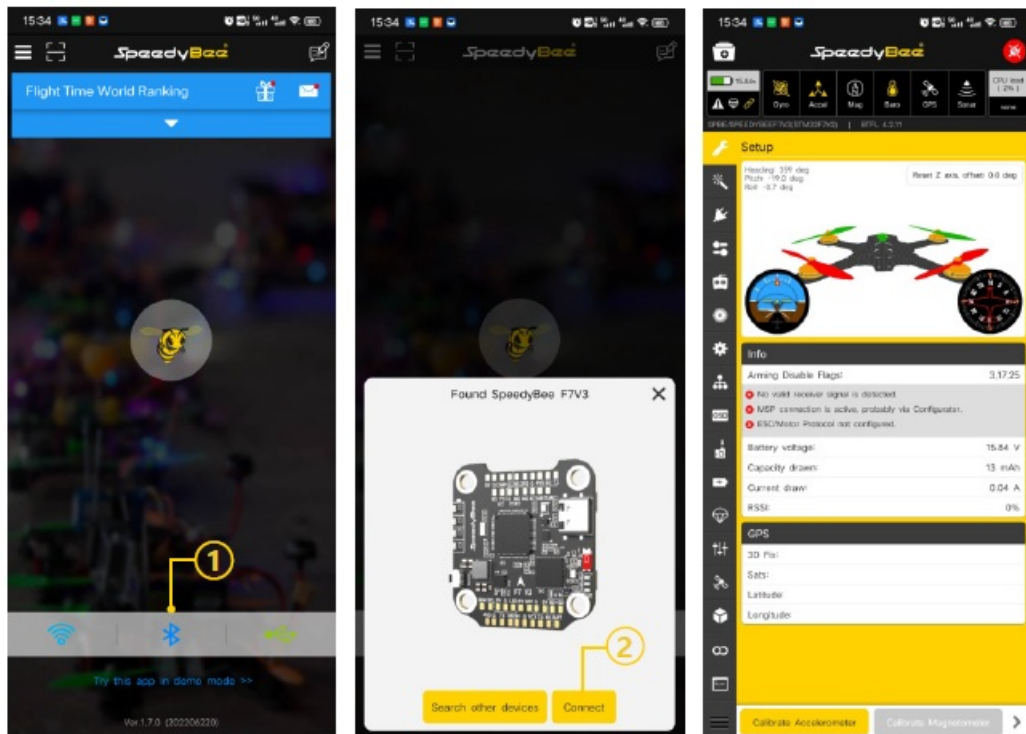

FC Firmware Update

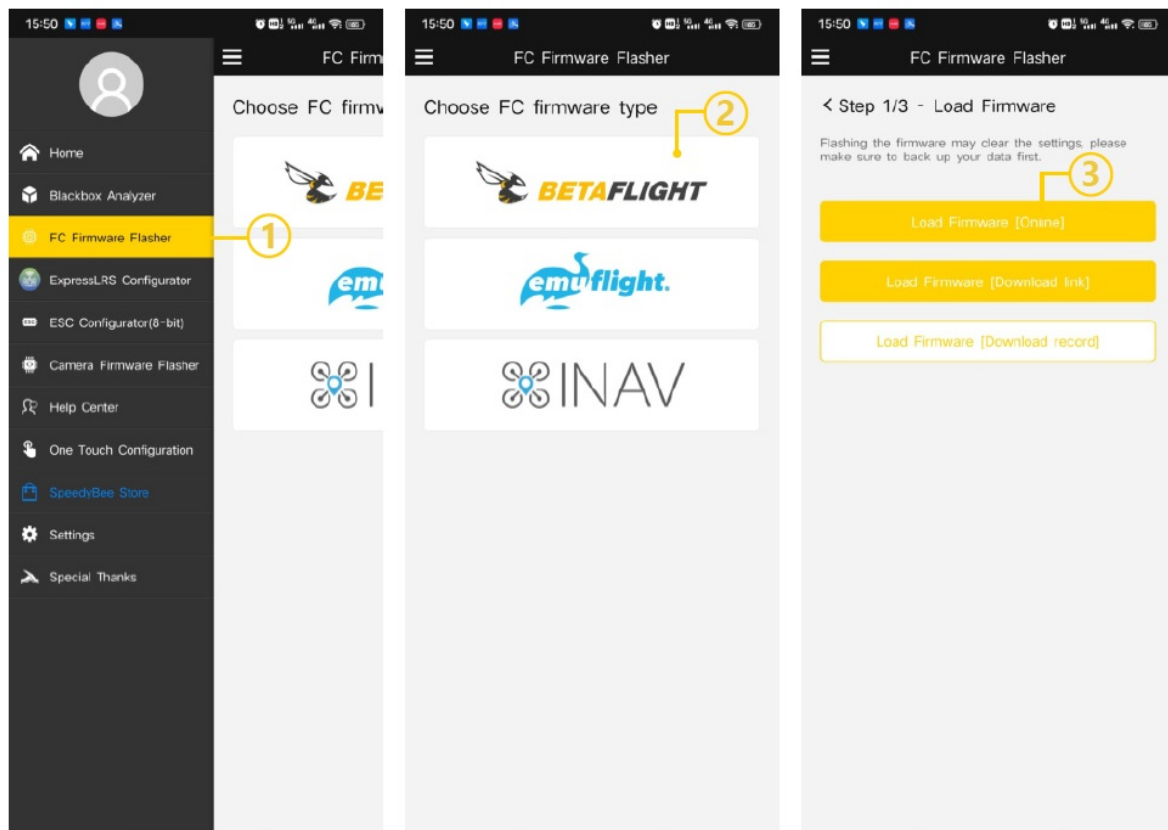

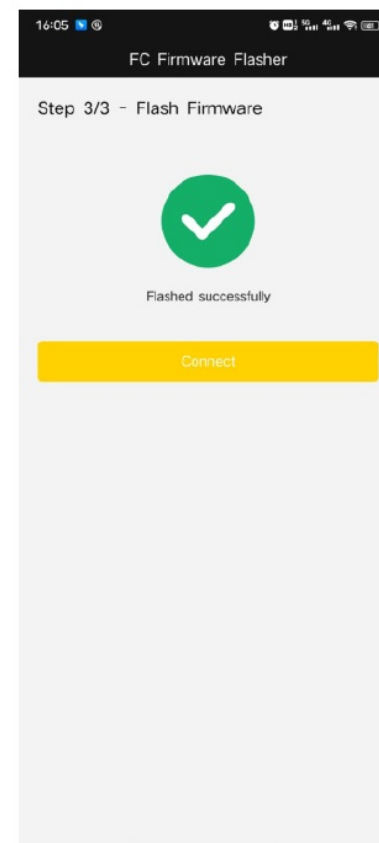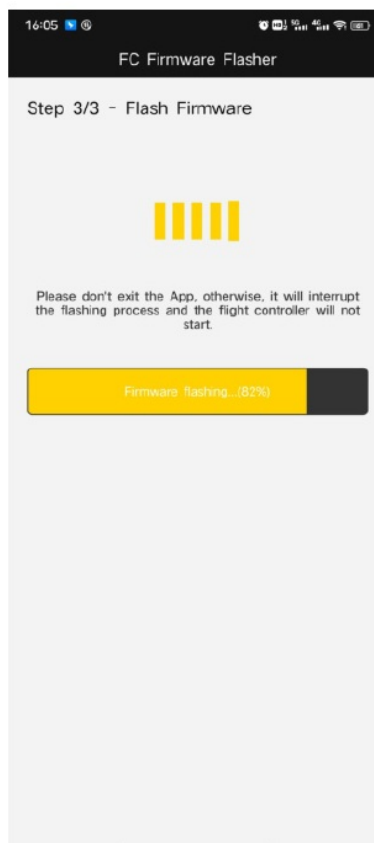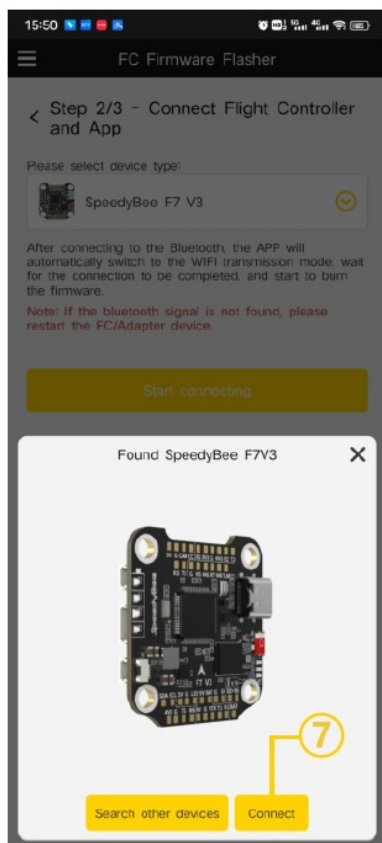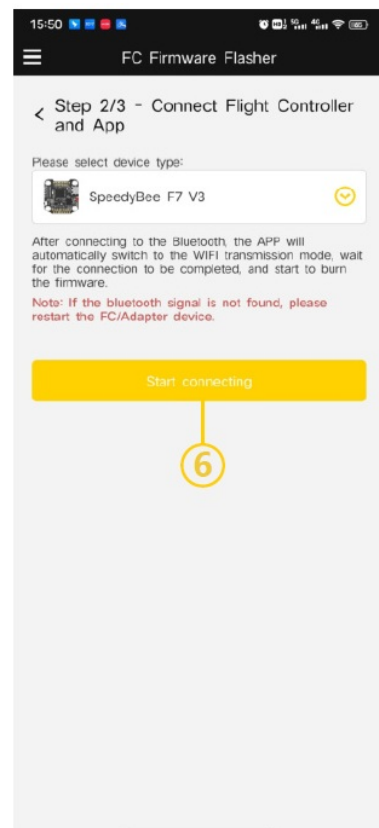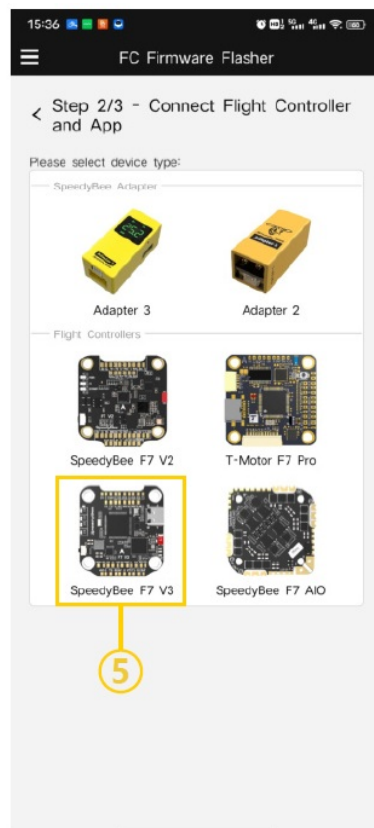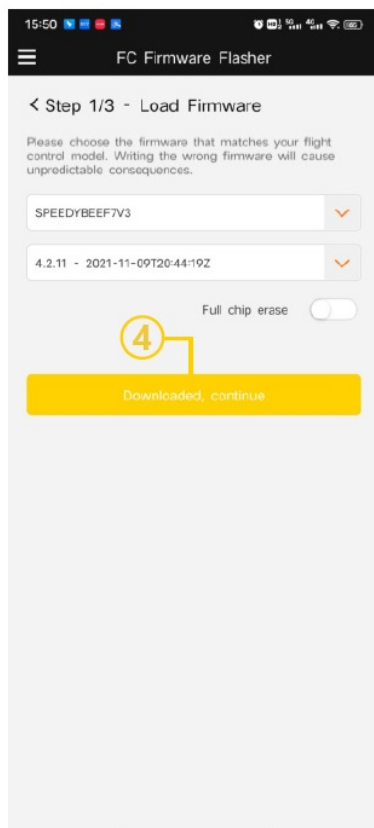


Specifications

Product Name	SpeedyBee F7 V3 Flight Controller
MCU	STM32F722
IMU(Gyro)	BMI270
USB Port Type	Type-C
Barometer	BMP280
OSD Chip	AT7456E chip
BLE Bluetooth	Supported. Used for Flight Controller configuration
Flash FC Firmware Wirelessly	Supported. Please enter MENU > FC Firmware Flasher
Download/Analyze Blackbox	Supported. Please enter MENU > Blackbox Analyzer
DJI Air Unit Connection Way	Two ways supported: 6-pin connector or direct soldering.
Flash(for BlackBox)	500MB
BetaFlight Camera Control Pad	Yes(CC pad on the front side)
Power Input	3S - 6S Lipo
5V Output	10 groups of 5V output, three +5V pads and 1 BZ+ pad(used for Buzzer) on front side, and 6 +5V output included in the connectors on bottom side. The total current load is 2A.
9V Output	2 groups of 9V output, one +9V pad on front side and other included in a connector on bottom side. The total current load is 4A.
3.3V Output	Supported. Designed for 3.3V-input receivers. Up to 500mA current load.
4.5V Output	Supported. Designed for receiver and GPS module even when the FC is powered through the USB port. Up to 1A current load.
ESC Signal Pads	M1 - M4 on bottom side and M5-M8 on front side.
UART	5 sets(UART1, UART2, UART3, UART4(For ESC Telemetry), UART6)
ESC Telemetry UART	R4(UART4)
I2C	Supported. SDA & SCL pads on front side. Used for magnetometer, sonar, etc.
LED Pad	Used for WS2812 LED controlled by Betaflight firmware.
Buzzer	BZ+ and BZ- pad used for 5V Buzzer


BOOT Button	Supported. [A]. Press and hold BOOT button and power the FC on at the same time will force the FC to enter DFU mode, this is for firmware flashing when the FC gets bricked. [B]. When the FC is powered on and in standby mode, the BOOT button can be used to controller the LED strips connected to LED1-LED4 connectors on the bottom side. By default, short-press the BOOT button to cycle the LED displaying mode. Long-press the BOOT button to switch between SpeedyBee-LED mode and BF-LED mode. Under BF-LED mode, all the LED1-LED4 strips will be controlled by Betaflight firmware.
RSSI Input	Supported. Named as RS on the front side.
SmartPort	Use any TX pad of UART for the SmartPort feature.
Supported Flight Controller Firmware	BetaFlight(Default), EMUFlight, INAV
Firmware Target Name	SPEEDYBEEF7V3
Mounting	30.5 x 30.5mm(4mm hole diameter)
Dimension	41(L) x 38(W) x 8.1(H)mm
Weight	10.7g

SpeedyBee BL32 50A 4-in-1 ESC

Layout

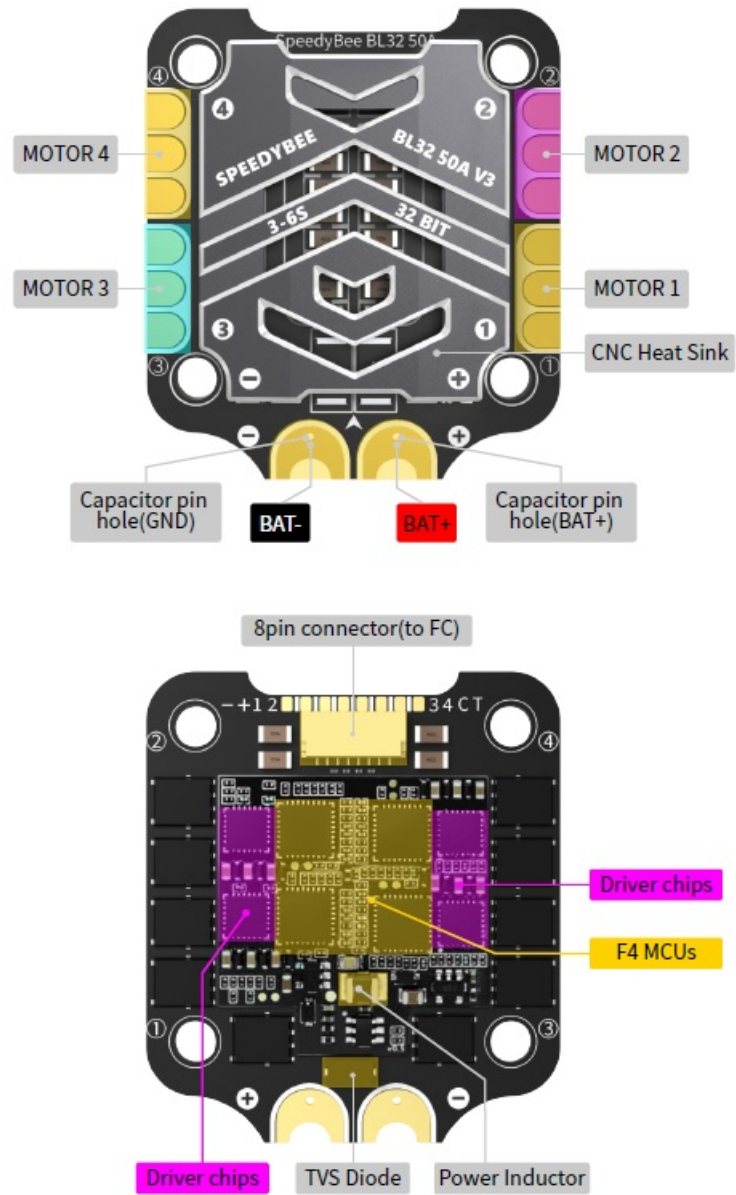


Connection with Motors & Power Cable

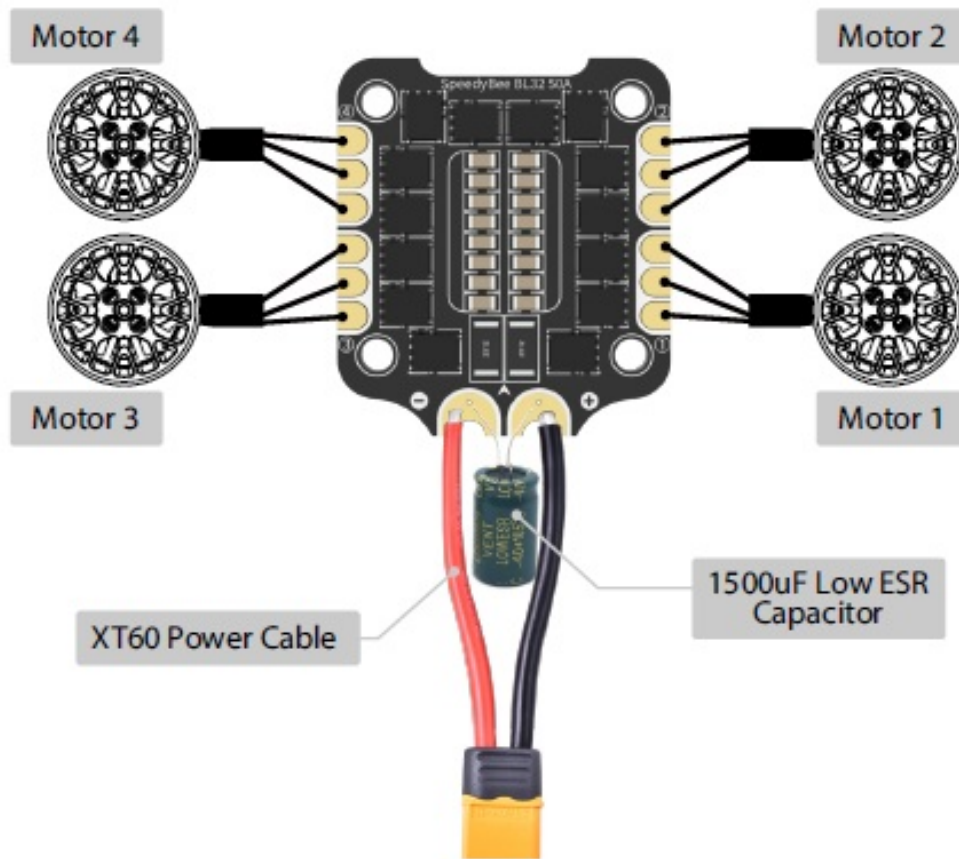

Note: In order to prevent the stack from being burnt out instantaneous voltage spikes on powering up, it is strongly recommended to use the Low ESR capacitor in the package.

ESC Configuration & Firmware Update

- This ESC is a 32-bit ESC running BLHeli32 firmware inside. Since the BLHeli32 is close-sourced. So ESC configuration & firmware update can be done wirelessly in the SpeedyBee app. Please download the latest BLHeliSuit32 configurator to setup your ESC at <https://github.com/bitdump/BLHeli/releases>.
- Even so, you could still change motor directions in the app for this ESC. Please connect to the app, go to Motors page, click the button shown below. Then experience the easiest and coolest way to change motor directions.

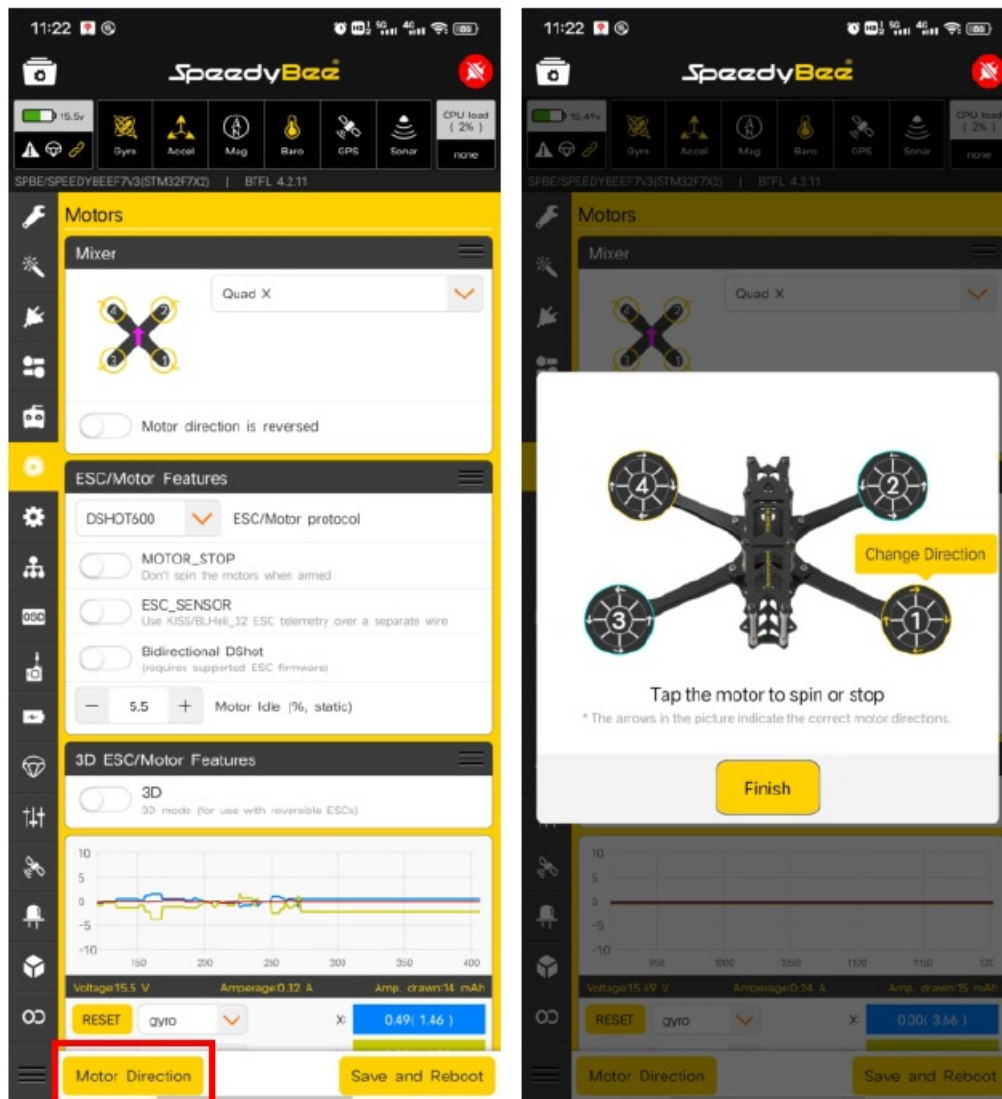

Specifications

Product Name	SpeedyBee BL32 50A 4-in-1 ESC
Firmware	SpeedyBee BL32 50A
Configurator Download Link	http://github.com/bitdump/BLHeli/releases
Continuous Current	50A * 4
Burst Current	55A(5S)
TVS Protective diode	Yes
Heat Sink	Yes
External Capacitor	1500uF Low ESR Capacitor(In the package)
ESC Protocol	DSHOT300/600
Power Input	3-6S LiPo
Power Output	VBAT
Current Sensor	Support (Scale=490 Offset=0)
Mounting	30.5 x 30.5mm(4mm hole diameter)
Dimension	45.6(L) * 40(W) * 8.8mm(H)
Weight	19.2g with heat sink


contents	
Part 1 - Overview	1
• Speech Overview	1
• Dimensions	2
• Package	3
Part 2 - iSC Connection	4
Part 3 - SpeedyEE F7 V3 BL32 50A 30x30 Stack	5
• Layout	5
• F7's Peripheral Connection	6
• App	7
• F7 Firmware Update	8
• Specifications	9
Part 3 - SpeedyEE BL32 50A 4-in-1 iSC	10
• Layout	10
• Connection with Motors & Power Cable	11
• Configuration & Firmware Update	12
• Specifications	13

Part 1 - OverView


Specs Overview

Product Name	SpeedStar V7700, E-SATA, 30.7TBx2
Drive Controller	SpeedStar V7703
RAID	SpeedStar H-800, 8-bay, 1.5TB
Mounts	Integrated 3.5", E-SATA, automatic setting
Software/Utilities/Tools	Integrated
Power Supply	1,400 W
Cooling	2x 120 mm fans, 4 heatpipes (40°C)
Accessories	#BX260022 + #BX260023 (100,0000)
Weight	27.0 kg

Dimensions

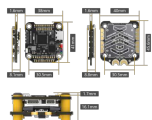

Package

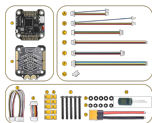


- [illegible]

FC & ESC Connection

Method 1 - Direct Soldering





Method 2 - All connectors



Part 2 - SpeedyBee F7 V3 Flight Controller

Layout

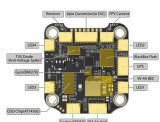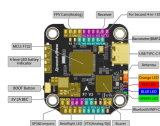


• LED Indicator Definition

- RED LED** - Powers indicator solid red after powerup;
 - GREEN LED** - Bluetooth status light. Solid green indicates Bluetooth is connected;
 - BLUE LED** - Light symbolizes status which is controlled by the flight controller firmware;
 - Orange LED** - LED Control Mode indicator. It indicates if the user's LED is connected to the 5V GND connection on the bottom side are controlled by the flight controller (5V GND mode) or the Bluetooth-Chip (5V GND mode).
- Solid Green** - indicates the 4 LEDs are in 5V GND mode in this mode, when the FC is powered on and in Kamado mode, press the BOOT button inside the display module of the LEDs. You could also change modes in the app separately.
- OFF** - indicates the 4 LEDs are controlled by the flight controller.
- Long press the button for 3 seconds to switch the control modes between 5V GND mode and 5V GND mode.

FC's Peripheral Connection


Wiring Diagram

Method 1 - Direct Soldering

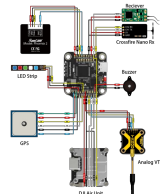


Method 2 - All connectors

To recognize the wines in the package better, we marked some of these wines with letters from A to F. Please find the right wines according to their letters.



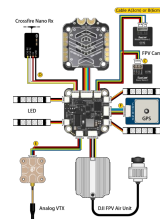


App

- Get the Speedy Bee App
Search "SpeedyBee" at Google Play or App Store. Or download the Android .apk file on our website: <https://www.speedybee.com/download>



[SpeedyBee F7 V3 BL32 50A 30x30 Stack Mini Flight Controller](#) [pdf] User Manual
F7 V3 BL32 50A 30x30 Stack, Mini Flight Controller, F7 V3 BL32 50A 30x30 Stack Mini Flight
Controller

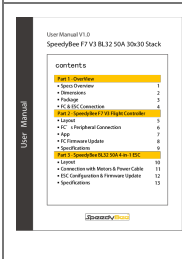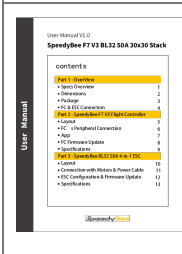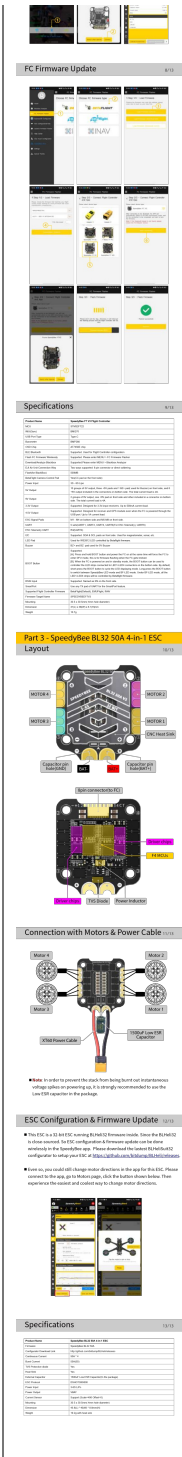

[SpeedyBee F7 V3 BL32 50A 30x30 Stack](#) [pdf] User Manual
F7 V3 BL32 50A 30x30 Stack, V3 BL32 50A 30x30 Stack, BL32 50A 30x30 Stack, 50A 30x30 Stack, 30x30 Stack, Stack

[SpeedyBee F7 V3 BL32 50A 30x30 Stack](#) [pdf] User Manual
F7 V3 BL32, F7 V3 BL32 50A 30x30 Stack, 50A 30x30 Stack, 30x30 Stack

-  [Releases](#) · [bitdump/BLHeli](#) · [GitHub](#)
-  [Releases](#) · [bitdump/BLHeli](#) · [GitHub](#)
-  [download](#)