

SUMMIT
SUMMIT
ASDR2414
Built In All
Refrigerator
Built In
Refrigeration



SUMMIT ASDR2414 Built In All Refrigerator Built In Refrigeration User Manual

[Home](#) » [SUMMIT](#) » SUMMIT ASDR2414 Built In All Refrigerator Built In Refrigeration User Manual 

Contents

- 1 SUMMIT ASDR2414 Built In All Refrigerator Built In Refrigeration
- 2 APPLIANCE SAFETY
- 3 IMPORTANT SAFEGUARDS
- 4 Disposal instructions
- 5 LOCATION OF PARTS
- 6 INSTALLATION INSTRUCTIONS
- 7 Electrical Connection
- 8 Installing a Stainless-Steel Handle
- 9 Included in the bracket kit
- 10 Installing the handle(s) on the overlay panel
- 11 OPERATING YOUR APPLIANCE
- 12 Temperature Alarm/Door Alarm
- 13 CARE AND MAINTENANCE
- 14 TROUBLESHOOTING
- 15 LIMITED WARRANTY
- 16 FAQ
- 17 Documents / Resources
 - 17.1 References
- 18 Related Posts

SUMMIT



APPLIANCE SAFETY

Your safety and the safety of others are very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the Safety Alert Symbol. The symbol alerts you to potential hazards that can kill or injure you and others. All safety messages will follow the Safety Alert Symbol and either the words “DANGER” or “WARNING”.

DANGER means that failure to heed this safety statement may result in severe personal injury or death.

WARNING means that failure to heed this safety statement may result in extensive product damage, serious personal injury, or death.

All safety messages will alert you about the potential hazard, tell you how to reduce the chance of injury, and let you know what can happen if the instructions are not followed.

IMPORTANT SAFEGUARDS

Before the appliance is used, it must be properly positioned and installed as described in this manual, so read the

manual carefully. To reduce the risk of fire, electrical shock or injury when using the appliance, follow basic precautions, including the following:

DANGER

- Plug into a grounded 3-prong outlet, do not remove grounding prong, do not use an adapter, and do not use an extension cord.
- Replace all panels before operating.
- It is recommended that a separate circuit serving only your appliance be provided. Use receptacles that cannot be turned off by a switch or pull chain.
- **WARNING:** Never clean appliance parts with flammable fluids. These fumes can create a fire hazard or explosion. And do not store or use gasoline or other flammable vapors and liquids or explosive substances such as aerosol cans with a flammable propellant in this appliance or in the vicinity of this or any other appliance. The fumes can create a fire hazard or explosion.
- Do not connect or disconnect the electric plug when your hands are wet.
- Unplug the appliance or disconnect power before cleaning or servicing. Failure to do so can result in electrical shock or death.
- Do not attempt to repair or replace any part of your appliance unless it is specifically recommended in this manual. All other servicing should be referred to a qualified technician.

A3 Warning: Risk of Fire / Flammable Materials. R600a

- This appliance is CFC- and HFC-free and contains small quantities of Isobutane (R600a) which is environmentally friendly, but flammable. It does not damage the ozone layer, nor does it increase the greenhouse effect. Care must be taken during transportation and setting up of the appliance that no parts of the cooling system are damaged. Leaking coolant can ignite and may damage the eyes.
- In the event of any damage:
 - Avoid open flames and anything which creates a spark,
 - Disconnect from the power supply,
 - Air the room in which the appliance is located for several minutes and
 - Contact the Service Department for advice.
- The more coolant there is in an appliance, the larger the room it should be installed in. In the event of a leakage, if the appliance is in a small room, there is the danger of combustible gases building up.
- For every ounce of coolant at least 325 cubic feet of room space is required. The amount of coolant in the appliance is stated on the data plate inside the appliance. It is hazardous for anyone other than an Authorized Service Person to carry out servicing or repairs to this appliance.
- Take serious care when handling, moving and using the appliance to avoid either damaging the refrigerant tubing or increasing the risk of a leak.
- Replacing component parts and servicing shall be done by factory authorized service personnel, so as to minimize the risk of possible ignition due to incorrect parts or improper service.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

WARNING

FOLLOW WARNING CALLOUTS BELOW ONLY WHEN APPLICABLE TO YOUR MODEL

- Use two or more people to move and install appliance. Failure to do so can result in back or other injury.
- **WARNING:** Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- **WARNING:** Do not use mechanical devices or other means to accelerate the defrosting process or to clean, other than those recommended by the manufacturer.
- **WARNING:** The appliance shall be stored in a room without continuously operating ignition sources (for example: open flames, an operating gas appliance or an operating electric heater).
- **WARNING:** Do not pierce or burn. Do not damage the refrigerant circuit.
- **WARNING:** Be aware that refrigerants may not contain an odour.
- **WARNING:** Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- **WARNING:** To avoid a hazard due to instability of the appliance, it must be fixed in accordance with the instructions.
- **WARNING:** Danger of injury from LED lamp. If the cover is defective: do not look directly into the illumination with optical lenses from close proximity. The eyes can be injured.
- **CAUTION:** Use this appliance only for its intended purpose. This equipment is intended for the storage and display of packaged products only.
- To ensure proper ventilation for your appliance, the front of the unit must be completely unobstructed. Choose a well-ventilated area with temperatures above 44°F (7°C) and below 90°F (32°C).
- The appliance should not be located next to ovens, grills or other sources of high heat.
- The appliance must be installed with all electrical, water and drain connections in accordance with state and local codes. A standard electrical supply (115 V AC only, 60 Hz), properly grounded in accordance with the National Electrical Code and local codes and ordinances, is required.
- Do not kink or pinch the power supply cord of the appliance.
- The size of the fuse (or circuit breaker) should be 15 amperes.
- It is important that the appliance be leveled in order to work properly. You may need to make several adjustments to level it.
- Make certain that the pipes are not pinched, kinked or damaged during installation.
- Check for leaks after connection.
- Never allow children to operate, play with or crawl inside the appliance.
- Do not use solvent-based cleaning agents or abrasives on the interior. These cleaners may damage or discolor the interior.
- Use this appliance only for its intended purpose as described in this User Manual.
- Keep fingers out of the “pinch point” areas. Clearances between the door and cabinet are necessarily small. Be careful closing the door when children are in the area.

SAVE THESE INSTRUCTIONS –

DISPOSAL

Dispose of your appliance packaging properly. Ensure that any plastic wrappings, bags, etc., are disposed of safely and kept out of the reach of babies and young children. Danger of suffocation!
Refrigeration equipment must be properly disposed of in a professional and appropriate way, in accordance with

the current local regulations and laws which protect the environment. This applies to your old appliance and to your new unit once it has reached the end of its service life.

WARNING: Please ensure that old, worn appliances are rendered unusable before disposal by removing the doors, removing the plug, cutting the network cable, and removing or destroying any snap fastenings or bolts. Leave shelving in place. You will thus prevent children from locking themselves in the appliance during play (risk of suffocation) or endangering their lives in any other way. DO NOT dispose of the appliance in landfill as the insulation (Cyclopentane) and refrigerant gas (R600a) contained in these appliances are flammable.

Disposal instructions

- The appliance must not be disposed of in the dustbin or with normal household rubbish.
- The coolant circuit, particularly the heat exchanger at the back/bottom of the unit, must not be damaged.
- The appliance is not to be handled as normal household waste but is to be taken to a recycling collection point for electrical and electronic goods. By correctly disposing of this product, you are contributing to the protection of the environment and to the health of your fellow human beings. Improper disposal endangers health and the environment. Further information about the recycling of the product may be obtained from your town hall, refuse collection department or the store where you purchased the product.

DANGER

Risk of child entrapment!


Child entrapment and suffocation are not problems of the past. Junked or abandoned appliances are still dangerous, even if they will “just sit for a few days”.

Before discarding your old refrigerator:

- Take off the doors.
- Leave the shelves in place so that children may not easily climb inside.


LOCATION OF PARTS

- Refrigerators: ASDR1524 / LADR1545 / ASDR1554 / SDR1529 / LDR1549 / SDDR1558 / ASDR2414 / LADR2433 / ASDR2444 / SDR2418 / LDR2437 / SDDR2448 / SDHDR1535 / SDHDR2446 / ADRD241 / FF642DADA / LDR24A / FF642D / SPR627OS2D / DB2DRR1584ASD / DB2DRR2487ASD / DB2DRR1585SD / DB2DRR2488SD / DB2DRR2486ADA / DB2DRROS2489
- Freezers: ADFD243 / SCFF532DADA / LDF24A / ADFD243IM/ SCFF532D / SCFF532DIM / SPFF51OS2D / DB2DFZ2474ADA / DB2DFZIM2494ADA / DB2DFZ2475 / DB2DFZIM2495 / DB2DFZOS2478
- Refrigerator/Freezers: ADRF244 / SPRF2D24ADA / LDRF24A / ADRF244IM/ SPRF34D / SPRF34DIM / DB2DRF2479ADA / DB2DRFIM2482ADA / DB2DRF2481 / DB2DRFIM2483

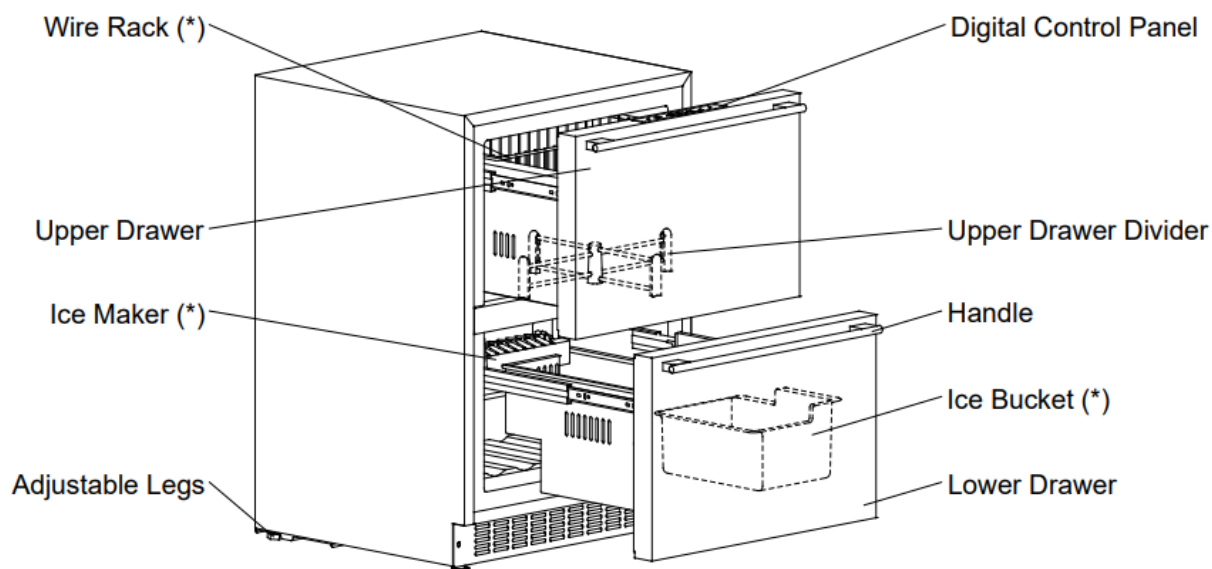

(*) Only available for certain models.

Refrigerators: SP6DS3D / SPR245OS3D / FF493D / DB3DRR2499

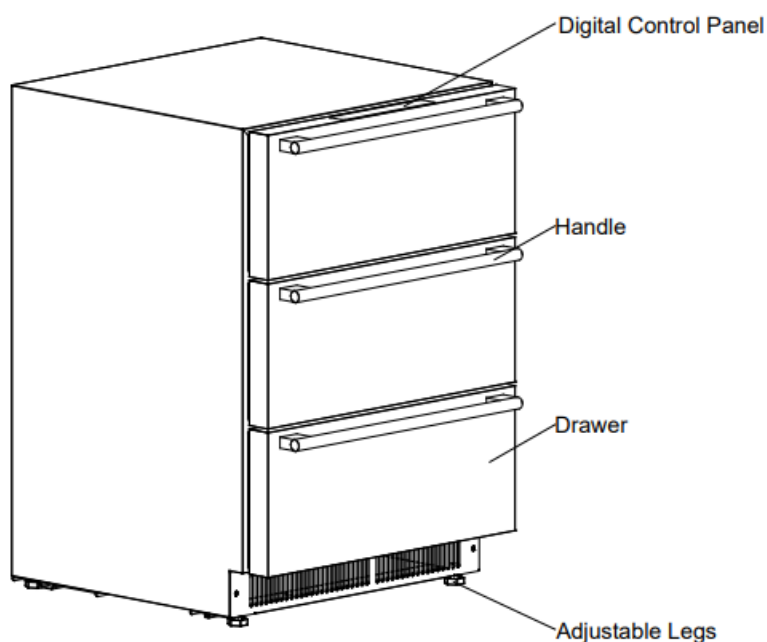

INSTALLATION INSTRUCTIONS

Before Using your Appliance

- Remove the exterior and interior packing.
- Before connecting the appliance to the power source, let it stand upright for approximately 2 hours. This will reduce the possibility of a malfunction in the cooling system from handling during transportation.
- Clean the interior surface with lukewarm water using a soft cloth.
- Install the handles on the drawers, if they are not already attached. (See Installing the Stainless Steel Handles.)

Installation of your Appliance

- The appliance is designed for built-in or recessed or free-standing installation for outdoor and indoor use for models SPR627OS2D, ADRD241, FF642DADA, LDR24A, SPFF51OS2D, ADFD243, ADFD243IM, SCFF532DADA, LDF24A, ADRF244, SPRF2D24ADA, LDRF24A, SPR245OS3D, DB2DRR2486ADA, DB2DFZ2474ADA, DB2DFZIM2494ADA, DB2DRROS2489, DB2DFZOS2478, DB2DRF2479ADA and DB2DRFIM2482ADA. All other models are indoor use only.

CAUTION: This appliance is not designed for the storage of medicine or other medical products.

- Place your appliance on a floor that is strong enough to support it when it is fully loaded. To level the unit, adjust the front leveling legs.
- For free-standing installation, 5" (127mm) of space between the back and sides of the unit, and 4" (102mm) at the top, are suggested. This allows the proper air circulation to cool the compressor and condenser. Even for built-in installation, it is a must to keep ¼" (6.35mm) space on each side and at the top and 2" (51mm) at the rear. Take care that the air vent at the front of the appliance is never covered or blocked in any way.


NOTE: It is recommended that you do not install the appliance near an oven, radiator or other heating source.

Direct sunlight may affect the outer coating and heat sources may increase electrical consumption. Don't install in a location where the temperature will fall below 44°F (7°C). For best performance, do not install the appliance behind a cabinet door or block the base grille.

- Avoid locating the unit in moist areas.
- Plug the appliance into an exclusive, properly grounded wall outlet.

Built-in Under-counter Instructions

Make sure your installation does not block the front ventilation grille. The unit is designed to fit under worktops, using the height-adjustable ventilation grille to ensure that the feet are concealed from front view. If the unit is fully integrated to be installed for fitting kitchen plinth, make sure that the ventilation gaps in the plinth are at least 300 square centimeters and remove the ventilation grilles, so that warm air can disperse unhindered. Otherwise, the appliance has to work harder, resulting in an increase in electricity consumption.

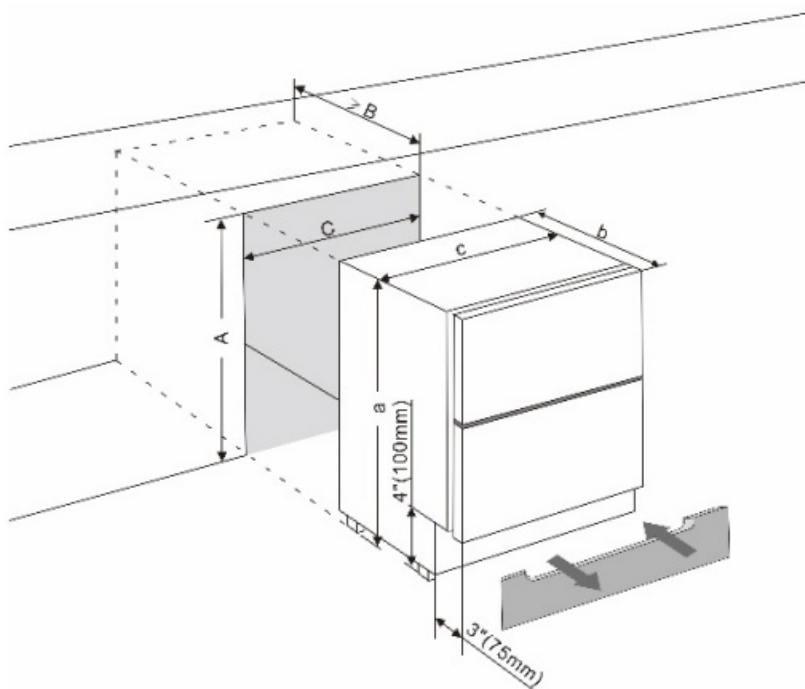

NOTE: When pushing the appliance into the niche, make sure that the mains cable does not get trapped.

Model No.	a (Inch/mm)	b (Inch/mm)	c (Inch/mm)	A(Inch/mm)	B(Inch/mm)	C(Inch/mm)
ASDR1524	32" / 813	18" / 455	14 ³ / ₄ " / 375	32 ¹ / ₈ " / 816	18" / 455	15" / 380
SDHDR1535	34" / 864	18" / 455	14 ³ / ₄ " / 375	34 ¹ / ₈ " / 866	18" / 455	15" / 380
ASDR2414	32" / 813	18" / 455	23 ¹ / ₂ " / 595	32 ¹ / ₈ " / 816	18" / 455	23 ⁵ / ₈ " / 600
SDHDR2446	34" / 864	18" / 455	23 ¹ / ₂ " / 595	34 ¹ / ₈ " / 866	18" / 455	23 ⁵ / ₈ " / 600
ADRD241	32" / 813	22 ¹ / ₂ " / 570	23 ¹ / ₂ " / 595	32 ¹ / ₈ " / 816	22 ³ / ₄ " / 575	23 ⁵ / ₈ " / 600
SPR627OS2D	34" / 864	24" / 608	23 ¹ / ₂ " / 595	34 ¹ / ₈ " / 866	24" / 608	23 ⁵ / ₈ " / 600

NOTE:



1. Models LADR1545, ASDR1554, SDR1529, LDR1549, SDDR1558 and DB2DRR1584ASD have the same size as ASDR1524.
2. Model DB2DRR1585SD has the same size as SDHDR1535.
3. Models LADR2433, ASDR2444, SDR2418, LDR2437, SDDR2448 and DB2DRR2487ASD have the same size as ASDR2414.
4. Model DB2DRR2488SD has the same size as SDHDR2446.
5. Models FF642DADA, LDR24A, ADFD243, SCFF532DADA, LDF24A, ADRF244, SPRF2D24ADA, LDRF24A, ADFD243IM, ADRF244IM, DB2DRR2486ADA, DB2DFZ2474ADA, DB2DRF2479ADA, DB2DFZIM2494ADA and DB2DRFIM2482ADA have the same size as ADRD241.
6. Models FF642D, SCFF532D, SCFF532DIM, SPFF51OS2D, SPRF34D, SPRF34DIM, SP6DS3D, SPR245OS3D, FF493D, DB2DRROS2489, DB2DFZ2475, DB2DFZIM2495, DB2DFZOS2478, DB2DRF2481, DB2DRFIM2483 and DB3DRR2499 have the same size as SPR627OS2D.

Anti-tip Bracket Installation

To reduce the risk of tipping the unit by abnormal usage or improper loading, the appliance must be secured by properly installing the anti-tip device packed with the appliance.

- Place the anti-tip bracket on the floor as shown in the figure. An anti-tip bracket must be installed at the left side.
- Mark the locations of the 4 holes of the anti-tip bracket on the floor.
- Use a 5/16" masonry drill bit and insert plastic anchors.
- Secure bracket to floor using screws.
- Slide appliance into position and make sure the leg engages the anti-tip bracket.

NOTE: If the unit is relocated, the bracket must be removed and installed in the new location.

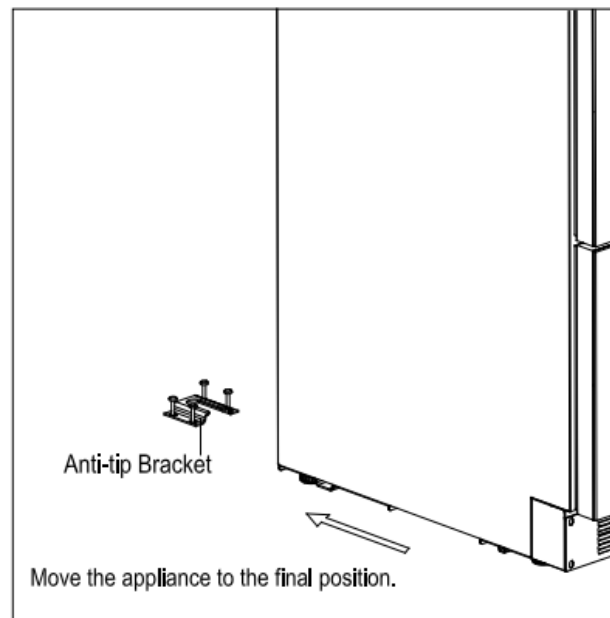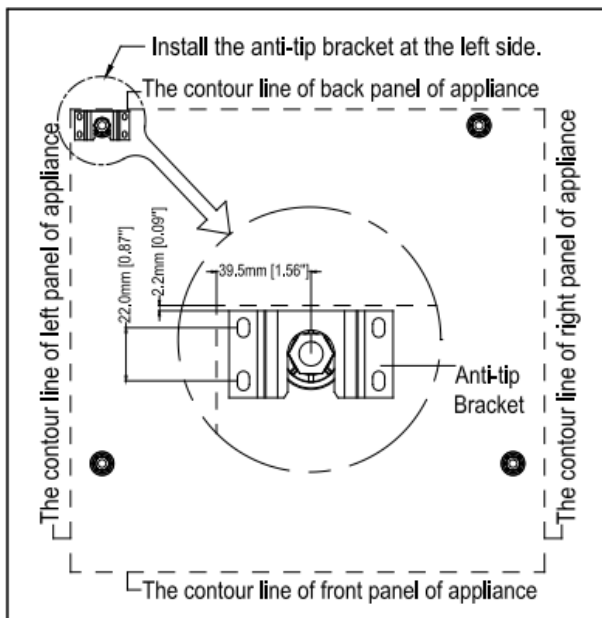

Electrical Connection

WARNING

Improper use of the grounded plug can result in the risk of electrical shock. If the power cord is damaged, have it replaced by a qualified electrician or an authorized service center.

- This appliance should be properly grounded for your safety. The power cord of this appliance is equipped with a three-prong plug which mates with standard three-prong wall outlets to minimize the possibility of electrical shock.
- Do not under any circumstances cut or remove the third (ground) prong from the power cord supplied. For personal safety, this appliance must be properly grounded. Any questions concerning power and/or grounding should be directed toward a certified electrician or an authorized service center.
- This appliance requires a standard 115/120 Volt AC ~ 60Hz three-prong grounded electrical outlet. Have the wall outlet and circuit checked by a qualified electrician to make sure the outlet is properly grounded. When a standard 2-prong wall outlet is encountered, it is your responsibility and obligation to have it replaced with a properly grounded 3-prong wall outlet.
- To prevent accidental injury, the cord should be secured behind the appliance and not left exposed or dangling.
- The appliance should always be plugged into its own individual electrical outlet which has a voltage rating that matches the rating label on the appliance. This provides the best performance and also prevents overloading house wiring circuits that could cause a fire hazard from overheating. Never unplug the appliance by pulling on the power cord. Always grip the plug firmly and pull straight out from the receptacle. Repair or replace immediately all power cords that have become frayed or otherwise damaged. Do not use a cord that shows cracks or abrasion damage along its length or at either end. When moving the appliance, be careful not to damage the power cord.

Extension Cord

Because of potential safety hazards under certain conditions, it is strongly recommended that you do not use an extension cord with this appliance. However, if you must use an extension cord, it is absolutely necessary that it be a UL/CUL-Listed, 3-wire grounding type appliance extension cord having a grounding type plug and outlet and that the electrical rating of the cord be 115 volts and at least 10 amperes.

Connecting to the Water Supply (If available)

WARNING

Improper water line connection may result in flooding. You must use a licensed plumber. Review state and local plumbing codes before installation.

Prepare water supply line before installation for models with ice maker. Installation requires a 1/4" ID copper cold water line and compression fitting (not supplied). All the necessary hardware is not provided so it is necessary to hire a professional licensed plumber to complete the installation. Connect the water line to the nearest cold water source. Leave sufficient coiled copper tubing to the unit to allow the unit to be pulled out of the cabinet or away from the wall for cleaning and service. Also make sure that the tubing is not pinched or damaged during the transportation.


WARNING: Connect to potable water supply only.

IMPORTANT NOTE: Water lines cannot be exposed to freezing temperatures.

Installing a Stainless-Steel Handle

This appliance includes the stainless-steel handles that are not required to operate the unit. To install the handles, follow the instructions below:

Locate the handle (2) over the mounting stud (1) of the door and using the supplied Allen key, tighten the securing grub screws (3) to fix the handle.

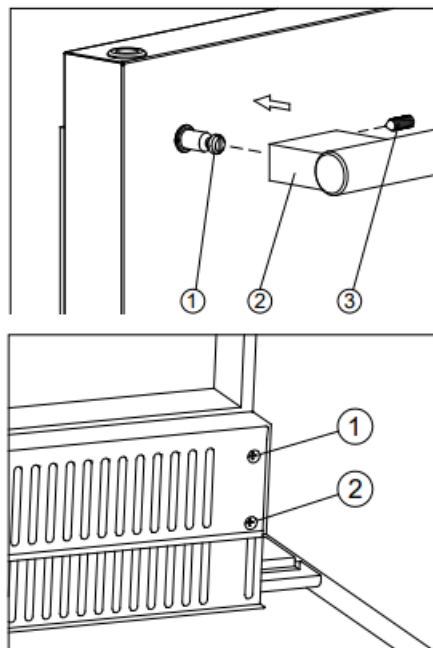

Adjusting the Kick Plate (Only for ADA models)

The pre-fitted kick-plate of the appliance includes an adjustable kick-plate section that is initially seated behind the upper section. To adjust the kick-plate height, follow the instructions below:


1. Remove the screws (1) from both the top left- and top right-hand sides of the kick-plate.
2. Loosen or remove the screws (2) from both the bottom left- and bottom right-hand sides of the kick-plate. Failure to loosen the bottom screws sufficiently may cause damage to the lower trim when adjusting it.
3. Carefully guide the lower trim down until the desired height is achieved.
4. Reinsert screws and tighten them.

Full Overlay Panel Installation (Optional)

An overlay panel covers the stainless steel to give it an integrated appearance. There are two installation options for attaching the overlay panel to the unit's door. Option 1 does not require drilling through the unit door and can be easily installed using the bracket kit provided with your unit. Option 2 requires drilling into the unit door for a flush appearance. The overlay panel and appropriate hardware are not included with the unit. Please refer to the instructions for both options and choose the one that best suits your needs.

Overlay Panel Preparation

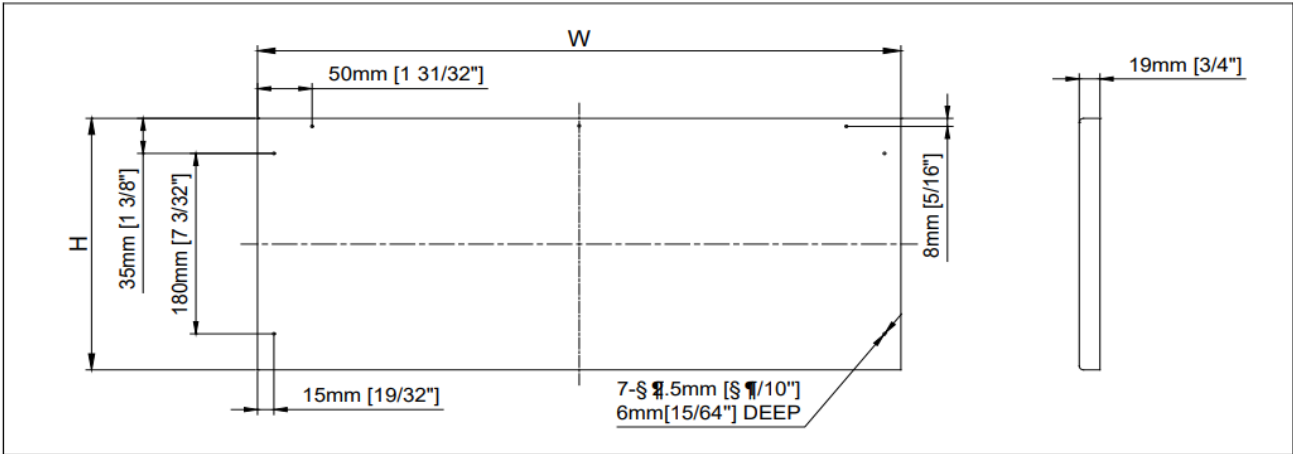



Prepare the overlay panel to the dimensions as per the descriptions given below.



Important:

- 1. H = height of door + 3/80" (1mm), W = width of door + 5/32" (4mm).
- 2. Ensure that all new holes are drilled to the correct depth to avoid splits in the wood when hardware is installed.

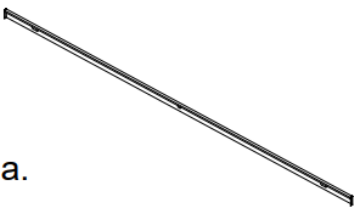Included in the bracket kit

			
a.	c.	d.	f.
stainless trim (1) per drawer	truss head screws (7) per drawer	mounting brackets (2) per drawer	pan head screws (4) per drawer

Door Panel Installation Option 1: (using bracket kit provided)

This is an easier installation option that does not require drilling into the unit's door.

NOTE: This option will leave a 3/16" (5mm) gap between the overlay panel and the top of door. The stainless-steel trim (included in the kit) will fill this gap.

Installing the handle(s) on the overlay panel

If reusing the handle(s) that came with the unit:


- 1. Unscrew the studs located on the front face of the drawer and set them aside for later use.
- 2. Remove the screws from the drawer and proceed to mark their positions on the overlay panel by using the

handle as a guide.

3. Use a 3/16" (5mm) drill bit to make the holes on the overlay panel for the screws.
4. Insert the screws, making sure to leave the head of the screw flush with the surface of the panel (countersink screws if necessary).
5. Take the studs you saved in Step 1 and screw them back. They are now projecting from the face of the panel.
6. Place the handle over the mounting studs and, using the supplied Allen key, tighten the securing grub screws to fix the handle. Refer to "Installing a Stainless Steel Handle" (Refer to page 11).

If using a customer supplied handle(s):

1. Attach the handle to the overlay panel by using flat head or countersunk screws.

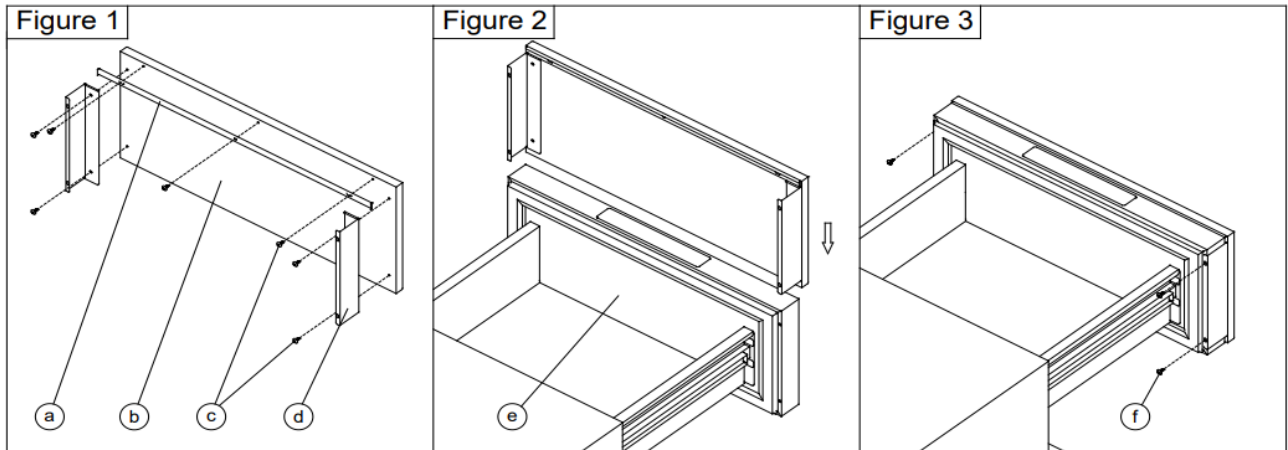


Installing the bracket


1. Attach the stainless trim (a) at the top of the wood overlay panel (b) with (3) #8 x 3/8 truss head Phillips self-tapping screws (c). (see Figure 1)
2. Drill the 2 mounting brackets (d) on either side of the wood overlay panel with (4) #8 x 3/8 truss head Phillips screws (c). (see Figure 1)
Important: Tape over the head of the screws with a strong hold tape to prevent scratching the unit door.
3. Align the brackets (d) with the sides of the unit door (e) gently sliding wood overlay panel into place.(see Figure 2)
4. Drill (4) #8 x 3/8 pan head Phillips self-tapping screws (f) to secure the bracket to the door. (see Figure 3)

Door Panel Installation Option 2:

This option will leave the panel flush with the door but will require drilling through the front door(s) of the unit. (Hardware is not included for this option).

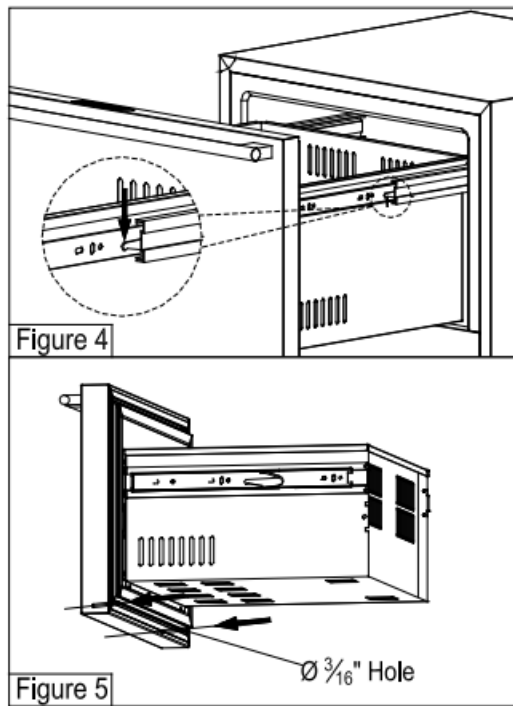

1. Empty the drawers of any items.
2. Release the drawers from the track by pressing the right lever down and lifting the left lever up at the same time. (see Figure 4).
3. Pull the drawer completely off the cabinet tracks.
4. Peel gasket off the door groove and set it aside.
5. Unscrew the mounting studs that are on the door. Set them aside for later use.
6. Remove the screws that were holding the studs in place.
7. Drill 2 new holes into the door groove at the lower inside of the drawer with a $\frac{3}{16}"$ (5mm) drill bit until it goes through the door face (see Figure 5).
8. If reusing the handle(s) that came with the unit:
 - Replace the screws from Step 6 with #10-32 UNF x 2.5 screws (g). (see Figure 6)
 - Drill 2 holes with diameter $\frac{3}{16}"$ (5mm) into the overlay panel at the top. The holes MUST match the position of the protruding screws on the door.
 - Mount the overlay panel on to the protruding screws.
 - Screw the studs from Step 5 into the screw.
 - Refer to Page 11 for handle installation.
 - Drill 2 #10x2 Phillips self-tapping screws (h) through the existing holes in the door groove at the bottom to secure the overlay panel. (see Figure 6)

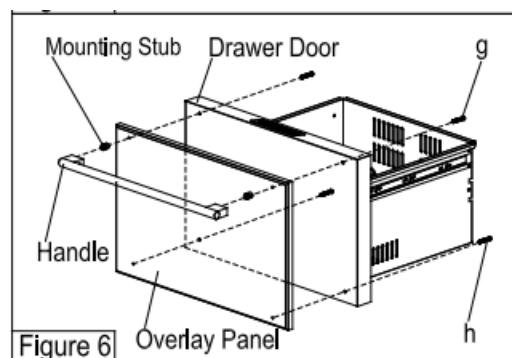

- If using a customer supplied handle(s):
- Attach the handles to the wood overlay panels with flat head screws till they are flush.

- Drill 4 #10×2 Phillips self-tapping screws (h) through the 4 existing holes in the door groove to secure the overlay panel. (see Figure 6)

9. Reapply the gaskets, then align the left and right slide channels with the tracks in the cabinet.

Ensuring an even engagement on both sides of the track, and gently push the drawer into the cabinet until it stops.


OPERATING YOUR APPLIANCE

It is recommended you install the appliance in a place where the ambient temperature is between 44° and 95°F (7° and 35°C). If the ambient temperature is above or below the recommended temperatures, the performance of the unit may be affected. For example, placing your unit in extremely cold or hot conditions may cause interior temperatures to fluctuate. The expected operating temperature range may not be reached.

Control Panel for Refrigerators



ON/OFF Power

To turn the appliance off, press and hold the  key for 5 seconds until the temperature display goes off. To turn the appliance on, press and hold the key for 1 second until the temperature display lights up.

NOTE: Pressing the POWER key once can switch off the audible alarm when the alarm is on.

UP +

Used to increase (warm) the set temperature by 1°C/1°F.

DOWN –

Used to decrease (cool) the set temperature by 1°C/1°F.

°F/°C Selector

* Select the temperature display in Fahrenheit or Celsius degrees.

** To change the temperature from Fahrenheit to Celsius or from Celsius to Fahrenheit, press and hold the LIGHT key for 5 seconds.

Indicator Light

The indicator light is the dot located at the bottom right corner of the display. The indicator light will be on when a multi-key function is selected. To perform a multi-key function, touch and hold the first key, then touch the second key for at least 5 seconds and then release both keys.

Child Lock

* If in 2 minutes or longer without touching any key, the child lock will be activated automatically. To cancel the lock, touch the UP and DOWN keys at the same time for at least 5 seconds and the indicator light will flash three times to confirm the action.


Setting the Temperature Control

- You can set the temperature by pressing the UP and DOWN keys. When you press either of the two buttons for the first time, the LED readout will show the original temperature set previously. (The temperature preset at the factory is 38°F or 3°C.)
- The temperature you are setting will increase by one degree each time you press the UP key and will decrease by one degree each time you press the DOWN key.
- The range of set temperatures is from 36°F to 43°F.
- To view the set temperature at any time, press the UP or DOWN key. The set temperature will temporarily flash in the display window for 5 seconds. Then the display shows the current inner temperature again.

Control Panel for Freezers



ON/OFF Power

To turn the appliance off, press and hold the  key for 5 seconds until the temperature display goes off. To turn the appliance on, press and hold the key for 1 second until the temperature display lights up.

NOTE: Pressing the POWER key once can switch off the audible alarm when the alarm is on.

SuperFreeze

SuperFreeze is used to freeze fresh food quickly. The function overrides the thermostat control and will make the compressor operate continuously. It is not necessary to adjust the thermostat setting when using this function. When the function is selected, the SuperFreeze indicator (the dot at the bottom right of the display) will be ON. The function can be turned off by pressing the key again and the indicator will turn OFF. SuperFreeze will turn off automatically after 8 hours.

UP +

Used to increase (warm) the set temperature by 1°C/1°F.

DOWN –

Used to decrease (cool) the set temperature by 1°C/1°F.

°F/°C Selector

* Select the temperature display in Fahrenheit or Celsius degrees.

** To change the temperature from Fahrenheit to Celsius or from Celsius to Fahrenheit, press and hold the SuperFreeze key for 5 seconds.

Indicator Light

The indicator light is the dot located at the bottom right corner of the display. The indicator light will be on when a multi-key function is selected. To perform a multi-key function, touch and hold the first key, then touch the second key for at least 5 seconds and then release both keys.

Child Lock

* If in 2 minutes or longer without touching any key, the child lock will be activated automatically. To cancel the

lock, touch the UP and DOWN keys at the same time for at least 5 seconds and the indicator light will flash three times to confirm the action.


Setting the Temperature Control

- You can set the temperature by pressing the UP and DOWN keys. When you press either of the two keys for the first time, the LED readout will show the original temperature set previously. (The temperature preset at the factory is 0°F or -18°C.)
- The temperature you are setting will increase by one degree each time you press the UP key and will decrease by one degree each time you press the DOWN key.
- The range of set temperatures is from -11°F to 11°F.
- To view the set temperature at any time, press the UP or DOWN key. The set temperature will temporarily flash in the display window for 5 seconds. Then the display shows the current inner temperature again.

Control Panel for Refrigerator/Freezers



ON/OFF Power

To turn the appliance off, touch and hold the  key for 5 seconds until the temperature display goes off. To turn the appliance on, touch and hold the key for 1 second until the temperature display lights up.

NOTE: Touching the POWER key once can switch off the audible alarm when the alarm is on.

UP +

Used to increase (warm) the set temperature by 1°C/1°F.

DOWN –

Used to decrease (cool) the set temperature by 1°C/1°F.

°F/°C Selector

Select the temperature display setting in Fahrenheit or Celsius degree.

Indicator Light

The indicator light is the dot located at the bottom right corner of the display. The indicator light will be on when a multi-key function is selected. To perform a multi-key function, touch and hold the first key, then touch the second key for at least 5 seconds and then release both keys.

Child Lock

If in 2 minutes or longer without touching any key, the child lock will be activated automatically. To cancel the lock, touch the UP and DOWN keys at the same time for at least 5 seconds and the indicator light will flash three times to confirm the action.

Setting the Temperature Control

- The unit has two separate temperature compartments. You can set the temperature of the bottom compartment (freezer) by touching the left UP and DOWN symbols and set the temperature of the top compartment (refrigerator) by touching the right UP and DOWN symbols. When you touch either key for the first time, the

LED readout will show the original temperature set previously. (The temperature preset at the factory is 0°F/-18°C for freezer compartment and 38°F/3°C for refrigerator compartment.)

- The temperature you are setting will increase by one degree each time you touch the UP key, and will decrease by one degree each time you touch the DOWN key.
- The range of the temperature control is from -11°F/-24°C to 11°F/-12°C for freezer compartment and from 36°F/2°C to 43°F/6°C for refrigerator compartment.
- To view the set temperature at any time, touch the UP or DOWN symbol. The set temperature will temporarily flash in the display window for 5 seconds. Then the display shows the current inner temperature again.

NOTES:

- If the unit is unplugged or power is lost or turned off, you must wait 3 to 5 minutes before restarting the unit. If you attempt to restart before this time delay, the unit will not start.
- When you use the unit for the first time or restart the unit after it has been shut off for a long time, there could be a few degrees variance between the temperature you select and the one indicated on the LED readout. This is normal and is due to the length of the activation time. There should not be a problem once the unit has been running for a few hours.

Interior Light

The unit is equipped with the interior LED lights which will be turned ON when a door is opened. The LED type lights are designed for extremely long life. They are not user serviceable. To change them please contact the service department.

NOTE: Please use only the original LED light fittings provided by the manufacturer.

Sabbath Mode

Sabbath mode is available for the observance of certain religious holidays. This mode turns off the displays, interior light and audible alarms and prevents them from turning on again. Normal cooling operations will still take place. To initiate Sabbath mode, touch and hold the POWER and °C/F or LIGHT or SUPERFREEZE keys simultaneously for at least 5 seconds. The displays will go off to confirm the Sabbath mode is ON. Sabbath mode can be canceled by repeating the above process. The Sabbath Mode will automatically turn off after 96 hours.

Temperature Memory Function

In the event of a power interruption (power surge, breaker switch, etc.), the unit can remember the previous temperature settings, and when power is recovered, the cabinet temperature will return to the same set temperature as before the power went off.

Defrosting

- Under normal operating conditions, the unit requires no manual defrosting.
- The evaporator behind the rear wall of the unit defrosts automatically. The condensate collects in the drainage channel behind the rear wall of the unit and flows through the drainage hole into the drip tray by the compressor where it evaporates.
- However, frost may accumulate on the evaporator if the unit is repeatedly opened in high heat or high humidity locations. If this frost pattern does not clear within 24 hours, your unit will require manual defrosting.

Using the Freezer (if available)

- This unit is designed for the long-term storage of frozen food. Storage time is up to three months.
- The storage life of frozen foods varies, and the recommended storage time should not be exceeded.
- Pre-packed commercially frozen food should be stored in accordance with the frozen foods manufacturer's instructions for a three-star frozen food storage compartment or home freezer.
- Place frozen food into the freezer as quickly as possible after purchase. If there are instructions on the packet, carefully follow these instructions regarding storage times.

Ice Maker (if available)

Make sure the water supply is ON and lower the bail arm on the ice maker to its ON position. As soon as the inner mechanism reaches the proper temperature, the ice maker will fill the mold with water.

The first cubes may be small because of air in the water line. Later cubes will be of standard crescent moon type size.

For the first time to use,

- Let the ice maker make ice for 1-2 days.
- Discard the first 2-3 batches of ice to remove the impurities in the water supply system. When the ice bucket is full, the ice making mechanism will automatically shut off.
- Ice delivery may be interrupted by raising the bail arm to the OFF position.
- If the ice maker is not used regularly, it is recommended that the ice bucket be emptied periodically to insure fresh ice.

Temperature Alarm/Door Alarm

- An audible alarm sounds if the storage temperature is not cold enough. The temperature display flashes at the same time.
- The cause of the temperature being too high may be:
 - Warm fresh food was placed inside.
 - Too much warm ambient air flowed in when rearranging and removing food.
 - Power failure for some time
 - The appliance is faulty.
- The audible alarm is automatically silenced, and the temperature display stops flashing when the temperature is sufficiently cold again.
- If a drawer has been left open for more than 60 seconds, the alarm will sound. Pressing the POWER key once switches off the audible alarm.

CARE AND MAINTENANCE

Cleaning Your Appliance

- Turn off the power, unplug the appliance, and remove all items, including racks and dividers.
- Wash the inside surfaces with a solution of warm water and baking soda (about 2 tablespoons of baking soda to a quart of water).
- Wash the racks and dividers with a mild detergent solution.
- Wring excess water out of the sponge or cloth when cleaning the area where the controls are located, or any

electrical parts.

- Wash the outside cabinet with warm water and mild liquid detergent. Rinse well and wipe dry with a clean, soft cloth.
- Use an approved stainless-steel cleaner to clean the doors and handles. Do not use steel wool or a steel brush on the stainless steel.

CAUTION: Failure to unplug the appliance before cleaning could result in electrical shock or other personal injury.

Power Failure

Most power failures are corrected within a few hours and should not affect the temperature of your appliance if you minimize the number of times the drawers are opened. If the power is going to be off for a longer period of time, you need to take the proper steps to protect the contents.

Vacation Time

- Short vacations: Leave the appliance operating during vacations of less than three weeks.
- Long vacations: If the appliance will not be used for several months, remove all items and turn off the appliance. Clean and dry the interior thoroughly. To prevent odor and mold growth, leave the drawers open slightly, blocking them open if necessary.

Moving your Appliance

1. Remove all items.
2. Securely tape down all loose items (racks, dividers) inside your appliance.
3. Turn the adjustable legs up to the base to avoid damage.
4. Tape the drawers shut.
5. Be sure the appliance stays secure in the upright position during transportation. Also, protect the outside of the appliance with a blanket or similar item.

Energy-Saving Tips

- The appliance should be located in the coolest area of the room or outdoor location, away from heat-producing appliances and out of direct sunlight.
- Ensure that the unit is adequately ventilated. Never cover air vents.
- Do not keep the drawers open any longer than necessary.
- Let hot foods cool to room temperature before placing in the unit. Overloading the unit forces the compressor to run longer.
- Be sure to wrap foods properly, and wipe containers dry before placing them in the unit. This cuts down on frost build-up inside the unit.
- Unit bins and racks should not be lined with aluminum foil, wax paper, or paper toweling. Liners interfere with cold air circulation, making the unit less efficient.
- Organize and label food to reduce drawer openings and extended searches. Remove as many items as needed at one time and close the drawer as soon as possible.

TROUBLESHOOTING

You can solve many common problems easily, saving you the cost of a possible service call. Try the suggestions below to see if you can solve the problem before calling the servicer.

PROBLEM	POSSIBLE CAUSE	REMEDY
Appliance does not operate.	Appliance is not connected to a power supply. The appliance is turned off. Tripped circuit breaker or blown fuse	Connect the appliance. Switch on the appliance. Switch on circuit breaker or replace fuse.
Appliance is not cold enough.	The temperature is not set correctly. The ambient temperature could require a lower temperature setting. Drawers were opened too often. A drawer was not closed completely. Drawer is not hermetically sealed. The condenser is too dirty. The ventilation opening is blocked or too dusty.	Check the set temperature. Set a lower temperature. Do not open drawers more often than necessary. Close drawer properly. Check the seal and clean or replace. Clean the condenser when necessary. Clear the obstructions and clean off the dust.
Appliance turns itself on and off frequently.	The room temperature is higher than average. A large amount of food has been added to the unit. Drawers are opened too often. A drawer is not closed completely. A drawer gasket does not seal properly.	Put the appliance in a cooler place. Leave the appliance to work for a while until the set temperature has been reached. Do not open the drawers more often than necessary. Close drawer properly. Check the drawer seal and clean or replace it.
The light does not work.	Appliance is not connected to a power supply. Tripped circuit breaker or a blown fuse. The light was switched off on the control panel.	Connect the appliance. Switch on circuit breaker or replace fuse. Switch on the light.
Vibrations	The appliance is not properly leveled.	Level the appliance with the adjustable feet.
The appliance seems to make too much noise.	The rattling noise may come from the flow of the refrigerant, which is normal. As each cycle ends, you may hear gurgling sounds caused by the flow of refrigerant in your appliance. If temperature fluctuations occur, the contraction and expansion of the inner walls may cause popping and crackling noises.	
	The appliance is not properly leveled.	Level the appliance with the adjustable feet.
	One or more of the following sounds is heard:- Buzzing- Trickling water- Thud (clatter of ice)	The water valve is operating. Water is entering the icemaker to fill cup. Ice is being dumped into the ice bin.
Drawers will not close properly.	The appliance is not properly leveled. The gaskets are dirty. The racks or bins are out of position.	Level the appliance with the adjustable feet. Clean the drawer gaskets.

		Check the racks and bins and refit correctly.
Display “E0”, “E1”, “E2”, “E3”, “E4”, “E5” or “E7”.	“E0” indicates a communication error for 3 zone models. “E1” or “E2” indicates that the air temperature sensor has failed. “E3” or “E4” indicates that the defrost sensor in the evaporator has failed. “E5” indicates defrost heater failure. “E7” indicates door switch failure.	Call for service.
The alarm sounds and the temperature display flashes.	Has a drawer been open for longer than 60 seconds? If not, then the temperature has risen higher or fallen lower than the temperature that has been set. This could be due to: The appliance drawers being opened too often. The ventilation opening being covered or too dusty. A lengthy interruption in the power supply. A large amount of food has been added to the unit.	If yes, close the drawer. Do not open drawers more often than necessary. Clear the obstructions and clean off the dust. Leave the appliance to work for a while until the set temperature has been reached.
The icon “—” is lit and flashing in the temperature display.	The display temperature is out of range.	Only temperatures within the range 16~99°F/-9~37°C for refrigerators and the range -99~99°F/-73~37°C for freezers can be displayed. If the temperature is not within this range, the icon “—” will be displayed instead. This is normal.
Ice tastes stale.	The ice is old.	Make a new batch.
Water in icemaker overflows	Refrigerator or icemaker is not level. If the icemaker still overflows after leveling.	Level the appliance with the adjustable feet. Water pressure must be 20-80 psi. Turn off the icemaker’s water supply at the shut-off valve and raise the icemaker’s bail arm to the “off” position (see previous page); then contact your local service center.
Not enough ice.	It will take 48 hours to fill the ice bucket. The icemaker will make ice every 2 to 3 hours.	For more ice, adjust the freezer control to a colder setting.
Ice making has stopped.	Be sure that the bail arm is lowered to its ON position. Make sure that the water shut-off valve is open. The water shut-off valve or the water valve screen is clogged.	Contact your local service center.

If you’ve checked the table above and find that you still need help with your appliance, call our Customer Service facility at [800-932-4267](tel:800-932-4267) between 9:00AM and 5:00PM ET. We will do our best to answer your questions.

CALIFORNIA CARB/SNAP DISCLOSURE

This product uses eco-friendly hydrocarbon refrigerant and fully complies with California CARB regulations. However, we are required by California Law to provide the following disclosure statement in every product sold in California. “This equipment is prohibited from use in California with any refrigerants on the ‘List of Prohibited Substances’ for that specific end-use, in accordance with California Code of Regulations, title 17, section 95374. This disclosure statement has been reviewed and approved by Felix Storch, Inc. and Felix Storch, Inc. attests, under penalty of perjury, that these statements are true and accurate.” This product does not use any refrigerants on the ‘List of Prohibited Substances’”

LIMITED WARRANTY

ONE-YEAR LIMITED WARRANTY

Within the 48 contiguous United States, for one year from the date of purchase, when this appliance is operated

and maintained according to instructions attached to or furnished with the product, warrantor will pay for factory-specified parts and repair labor to correct defects in materials or workmanship. Service must be provided by a designated service company. Outside the 48 states, all parts are warranted for one year from manufacturing defects. Plastic parts, shelves and cabinets are warranted to be manufactured to commercially acceptable standards, and are not covered from damage during handling or breakage.

5-YEAR COMPRESSOR WARRANTY

1. The compressor is covered for 5 years.
2. Replacement does not include labor.

ITEMS WARRANTOR WILL NOT PAY FOR:

1. Service calls to correct the installation of your appliance, to instruct you how to use your appliance, to replace or repair fuses or to correct wiring or plumbing.
2. Service calls to repair or replace appliance light bulbs or broken shelves. Consumable parts (such as filters) are excluded from warranty coverage.
3. Damage resulting from accident, alteration, misuse, abuse, fire, flood, acts of God, improper installation, installation not in accordance with electrical or plumbing codes, or use of products not approved by warrantor.
4. Replacement parts or repair labor costs for units operated outside the United States.
5. Repairs to parts or systems resulting from unauthorized modifications made to the appliance.
6. The removal and reinstallation of your appliance if it is installed in an inaccessible location or is not installed in accordance with published installation instructions.

DISCLAIMER OF IMPLIED WARRANTIES; LIMITATION OF REMEDIES

CUSTOMER'S SOLE AND EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY SHALL BE PRODUCT REPAIR AS PROVIDED HEREIN. IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO ONE YEAR. WARRANTOR SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, OR LIMITATIONS ON THE DURATION OF IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS, SO THESE EXCLUSIONS OR LIMITATIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE.

WARNING: This product can expose you to chemicals including Nickel (Metallic) which is known to the State of California to cause cancer. For more information go to www.P65Warnings.ca.gov

Note: bakd is a component of stainless steel some other metal contents-

Felix Storch, Inc. An ISO 9001:2015 registered company 770 Garrison Ave Bronx, New York 10474
www.summitappliance.com

For parts and accessory ordering, troubleshooting and helpful hints, visit: www.summitappliance.com/support

FAQ


• Q: How do I reduce the risk of fire when using the appliance?

A: Follow basic precautions outlined in the manual and ensure proper installation and positioning of the appliance.

• **Q: Where can I obtain information on recycling the product?**

A: Contact your town hall, refuse collection department, or the store where you purchased the product for details on proper disposal and recycling.

Documents / Resources



SUMMIT DREAMBILT	
FRONT FREE SWAYNE REFRIGERATORS, FREEZERS AND REFRIGERATOR/FREEZERS	
Model	ASDR2414
Capacity	24 cu. ft.
Weight	110 lbs.
Dimensions (H x W x D)	69 1/2" x 23 7/8" x 24 1/8"
Energy Star Rating	1st
Annual Energy Consumption (kWh)	185
Estimated Annual Operating Cost	\$27.75
Refrigerant	R600a
Warranty	1 Year

[SUMMIT ASDR2414 Built In All Refrigerator Built In Refrigeration](#) [pdf] User Manual
ASDR2414 Built In All Refrigerator Built In Refrigeration, ASDR2414, Built In All Refrigerator Bui
It In Refrigeration, Refrigerator Built In Refrigeration, Built In Refrigeration, Refrigeration

References

- [f Manufacturing Specialty Appliances Since 1969 | Summit® Appliance](#)
- [f Service and Support | Summit® Appliance](#)
- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.