



# Sunco 4ft LED Linear Fixture Light Installation Guide

[Home](#) » [SUNCO](#) » Sunco 4ft LED Linear Fixture Light Installation Guide 

## Contents

- [1 Sunco 4ft LED Linear Fixture Light](#)
- [2 Installation Guide](#)
- [3 TROUBLESHOOTING](#)
- [4 CLEANING & MAINTENANCE](#)
- [5 Documents / Resources](#)
  - [5.1 References](#)
- [6 Related Posts](#)

# Sunco

## Sunco 4ft LED Linear Fixture Light



## WARNING


1. Turn power off before inspection, installation or removal.
2. The installation should be performed by qualified electricians or lighting technicians.
3. Before conducting any installation, maintenance, or removal, disable all power to the luminaries and wait until the fixture cool down.
4. Do not touch the fixture while it is in service.

5. If there is any problem with the fixture, DO turn off power and DO NOT attempt repair unless you are a qualified technician or the customer service member.


## Installation Guide

### Surface Mounting


1. Unscrew the 4pcs screws on the back box of the luminaire or the luminaire base

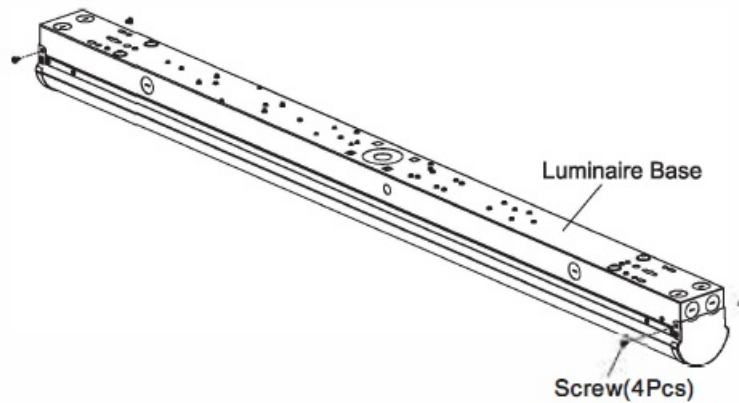


2. Disconnect the wire plug to start installation.

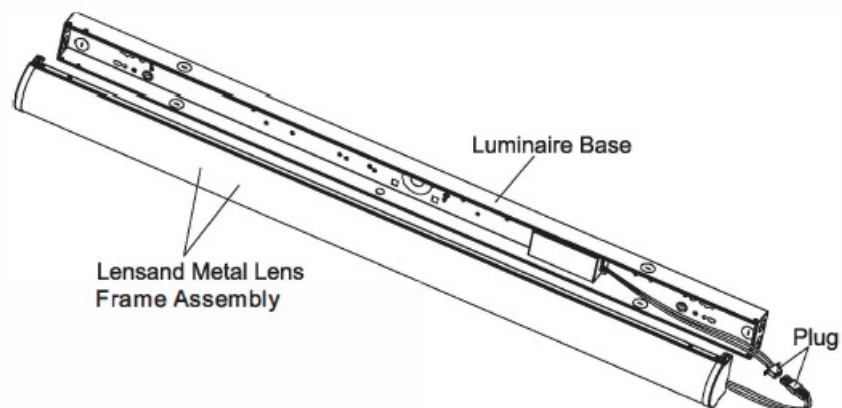


3. Install and lock the mounting plate on the luminaire base following the arrow

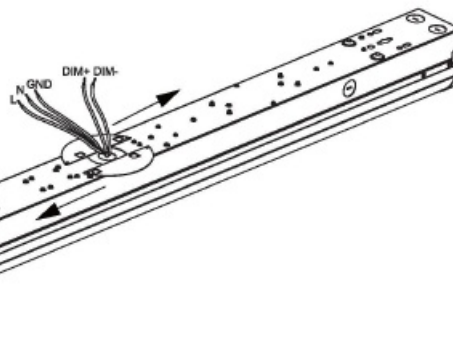


4. Connect the AC wires and dimming wires.

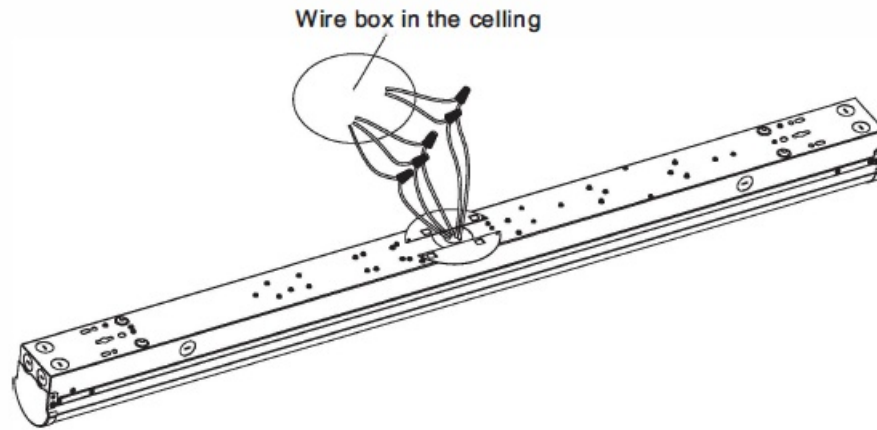

5. After wire connection complete, fix the screws on the ceiling.

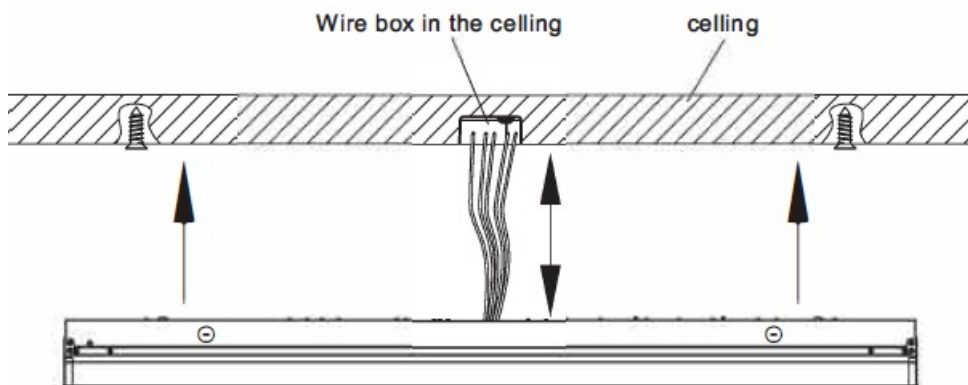

6. Align the holes of the fixture with the screws on the ceiling and slide it to the side to lock the fixture

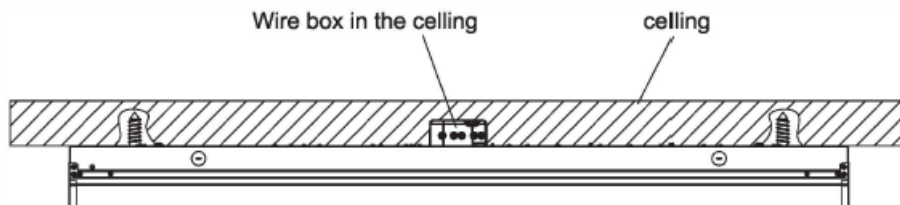


## WIRING

Universal voltage driver permits operation at 120V thru 277V, 60 Hz. For 1-1 0V Dimming, follow the wiring directions as in fig.1

1. Connect the black fixture lead to the(+) LINE supply lead.
2. Connect the white fixture lead to the(-) COMMON supplylead.
3. Connect the GROUND wire from fixture to supply ground. Do NOT connect the GROUND of the dimming fixture to the output.
4. Connect the purple fixture lead to the (V+) DIM lead.
5. Connect the pink fixture lead to the (V-) DIM lead

**Fig. 1**

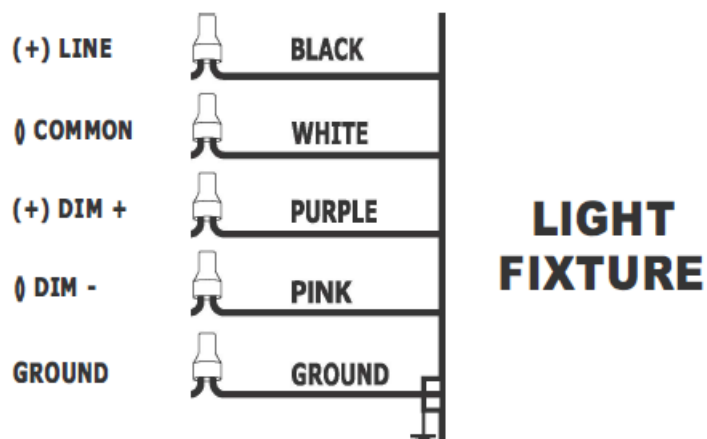

## TROUBLESHOOTING

1. Check that the line voltage at the fixture is correct. Refer to wiring directions.
2. Make sure the fixture grounded properly.

## CLEANING & MAINTENANCE

**CAUTION:** Be sure fixture temperature is cool enough to touch. Do not clean or maintain while fixture is energized.

## Documents / Resources

	<a href="#">Sunco 4ft LED Linear Fixture Light</a> [pdf] Installation Guide 4ft LED Linear Fixture Light, 4ft, LED Linear Fixture Light, Linear Fixture Light, Fixture Light
---	---

## References

- [User Manual](#)