



Tamarack UNI-GR/90, UNI-GR/130 Solar Uni GR Series Installation Guide


[Home](#) » [Tamarack](#) » Tamarack UNI-GR/90, UNI-GR/130 Solar Uni GR Series Installation Guide 

Contents

- [1 Tamarack UNI-GR/90, UNI-GR/130 Solar Uni GR Series](#)
- [2 Introduction](#)
- [3 Pre Assembly](#)
- [4 Final Assembly](#)
- [5 InstallerResponsibility](#)
- [6 Warranty Information](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)
- [8 Related Posts](#)



Tamarack UNI-GR/90, UNI-GR/130 Solar Uni GR Series

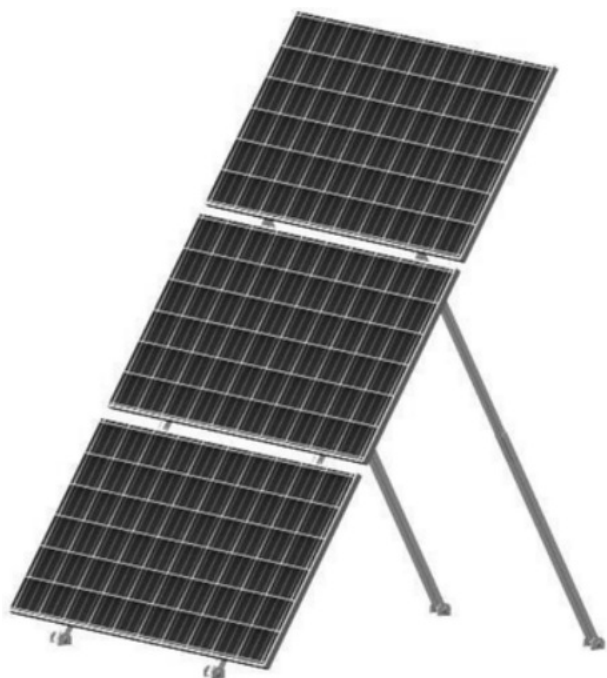

Introduction

The Universal Ground/Roof Mount is a simple and universal mounting solution up to 3 solar panels. With its user-adjustable angle settings, the Ground/Roof Mount can support installations in a wide range of locations, as a standalone or multiple mounts intertied in rows. Quantities of panels supported vary by panel widths.

Customer Support

Tamarack Solar makes every effort to ensure your mounting kit is easy to install. If you need assistance at any point in your installation or have suggestions on how we can improve your experience, call customer support at 1-800-819-7236 ext 556 or email us at support@tamaracksolar.com.

Tools Required


Tools that support the following size Hex heads: Torque values listed in the manual are “dry”, the use of anti-seize lubricant on Stainless hardware is Recommended (see the torque chart).

Torque Values in Ft Lbs \ (In Lb)			
		18-8 Stainless	
Bolt Size		Dry	Lubricated
1/4-20		6 / (75)	5 / (64)
5/16-18		11 / (132)	9 / (112)

- 1. 7/16" Socket
- 2. 1/2" Socket

Components List The following parts are included with the GR mounts


Part #	Description	UNI-GR/90	UNI-GR/130
51-0627-003	Channel Connector	2	2
51-0545-001	Panel Support Channel – 45-inch	4	
51-0565-001	Panel Support Channel – 65-inch		4
51-0546-000	Inner Brace Channel – 46-inch	2	2
51-0546-001	Outer Brace Channel – 46-inch	2	2
51-6000-003	U-Foot	4	4
51-6000-004	Backing Plate	4	4
29-5001-100	Mount Assembly Hardware – 5/16-inch	1	1
29-5001-0GR	Module Mounting Hardware – ¼-inch	4	4

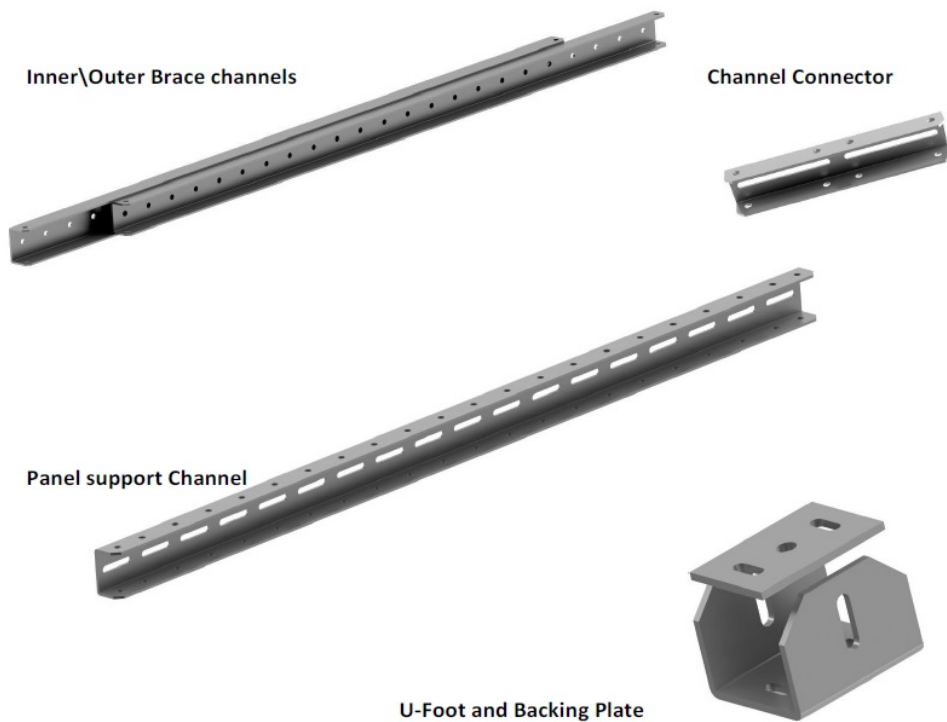

Pre Assembly

Step 1: Connect Panel Support Channels



- **A.** Slide the 10" connector halfway into the end of the one of the panel support and install the 5/16" hardware, Torque to 132 in-lbs. repeat with the second panel support to achieve the overall panel support length
- **B.** UNI-GR/90 uses two 45" panel support channels. UNI-GR/130 uses two 65" panel support channels

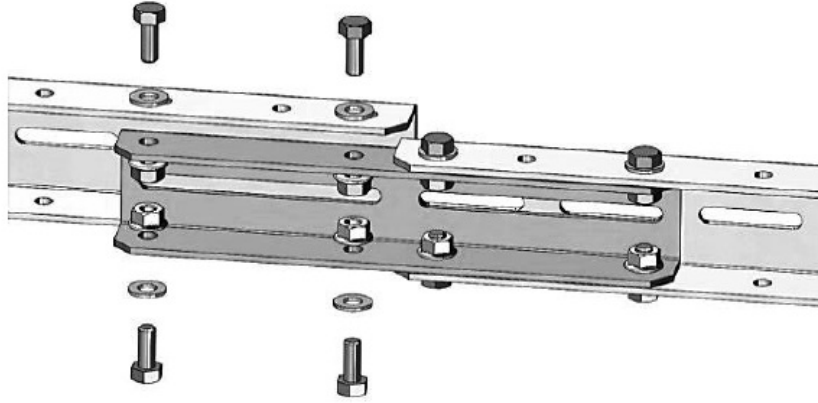

Step 2: Determine foot spacing

There are many combinations of bolting locations and brace overlap configurations to achieve foot spacing's for the angle(s) desired for your location, the following is a process to make that determination to fit your requirements, or use the general specification chart on page 5.

- **A.** For the front to rear distance, loosely assemble the A frame section as shown below, adjust the rear leg brace maintaining the minimum 6" overlap or more ("C") to support the panels at the desired angle to the sun and keeping the rear leg within 60° to 90° to the panel supports. With the "A" frame laying on a flat surface measure the center to center distance between the U-feet to determine the front to rear spacing for the footing.
- **B.** Keep the rear brace assembled at the overlap determined in prior operation, preassemble the second pair and set aside.
- **C.** For the side-to-side footing of both "A" frames, the center to center spacing is equal to the center-to-center distance of the mounting holes on the PV module you are using, See mount spacing diagram on PAGE 5.
- **D.** If you are installing multiple UNI-GR mounts side-by-side, leave a 1" space between the edges of the modules on each mount. To determine the spacing between mounting feet, measure the distance from the short edge of the modules to the mounting hole you are using. The recommended spacing between mounting feet on adjacent mounts is two times the distance from the edge of the panel to center of the mounting hole plus 1". See the diagram in Step 1 of Final Assembly on page 8

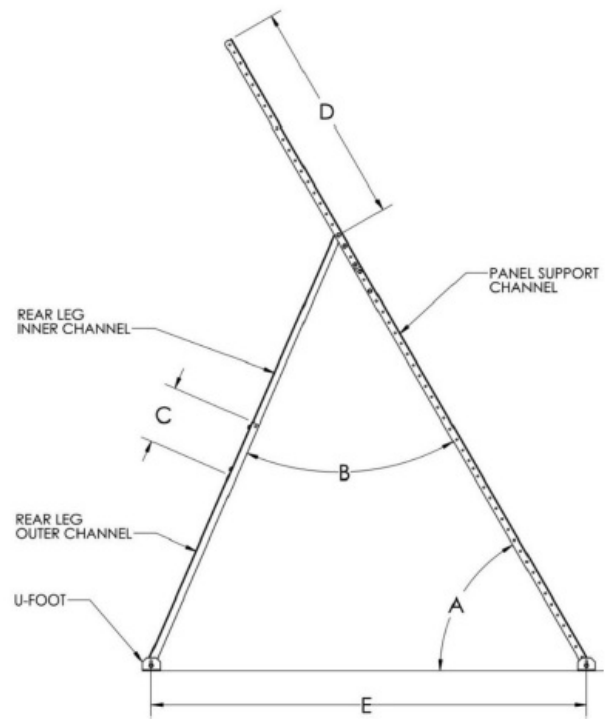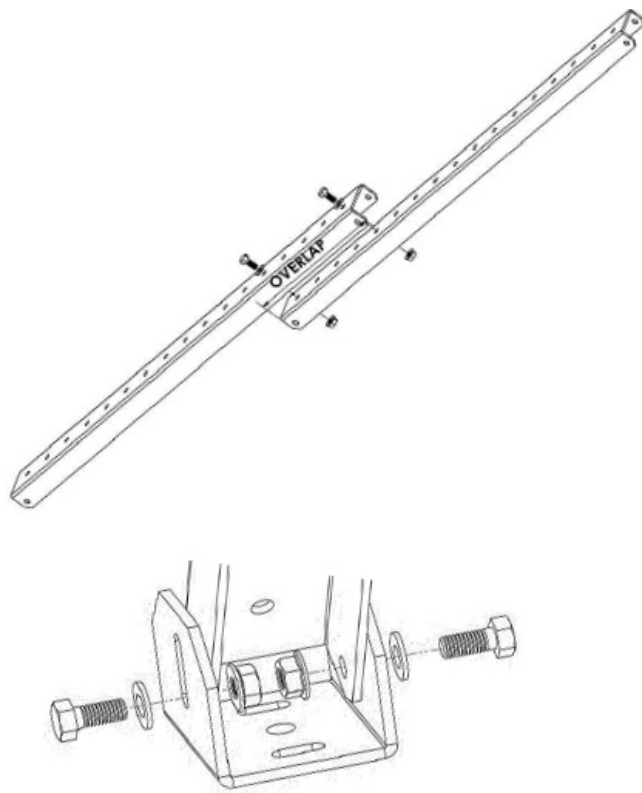

General specification chart



The tables below are suggested front to back foot spacing “E” with the tilt angles that can set at that spacing. “A” is module tilt angle from the horizontal, “C” is the overlap of the back leg sections and “D” is the distance from the top of the module mounting rail to the hole used to connect the back leg. See the diagrams on Page 4.

UNI-GR/90				
“A” ANGLE	60°	50°	40°	36
“C” OVERLAP	16”	28	40	44”
“D” DISTANCE	15	15	15	15
“E” FOOT SPACING	78	78	78	78

UNI-GR/130				
“A” ANGLE	60°	50°	40°	32
“C” OVERLAP	10”	22	34	44
“D” DISTANCE	41	41	41	41
“E” FOOT SPACING	75	75	75	75


UNI-GR/90					
"A" ANGLE	55	50°	40°	30°	25
"C" OVERLAP	6	12	24	38	44
"D" DISTANCE	15	15	15	15	15
"E" FOOT SPACING	104	104	104	104	104

UNI-GR/130				
"A" ANGLE	45	40°	30°	20
"C" OVERLAP	8	16	30	44
"D" DISTANCE	41	41	41	41
"E" FOOT SPACING	120	120	120	120

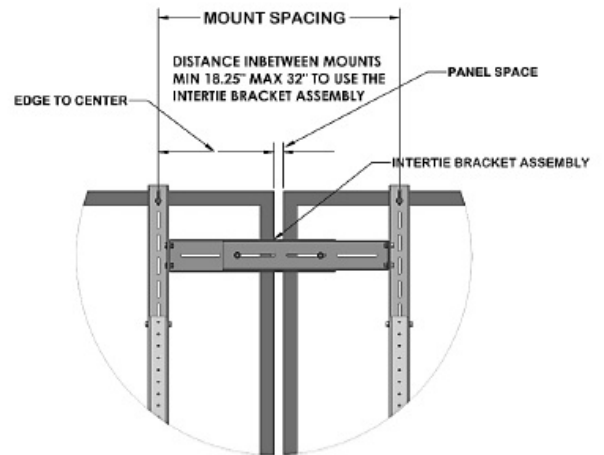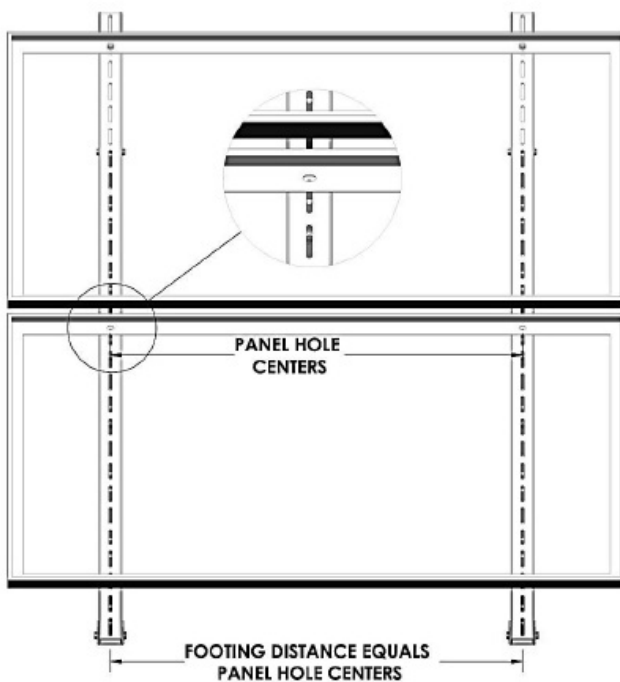


Step 3: Foot attaching options

- Use Galvanized or Stainless-Steel Hardware
- See Suggestions below:

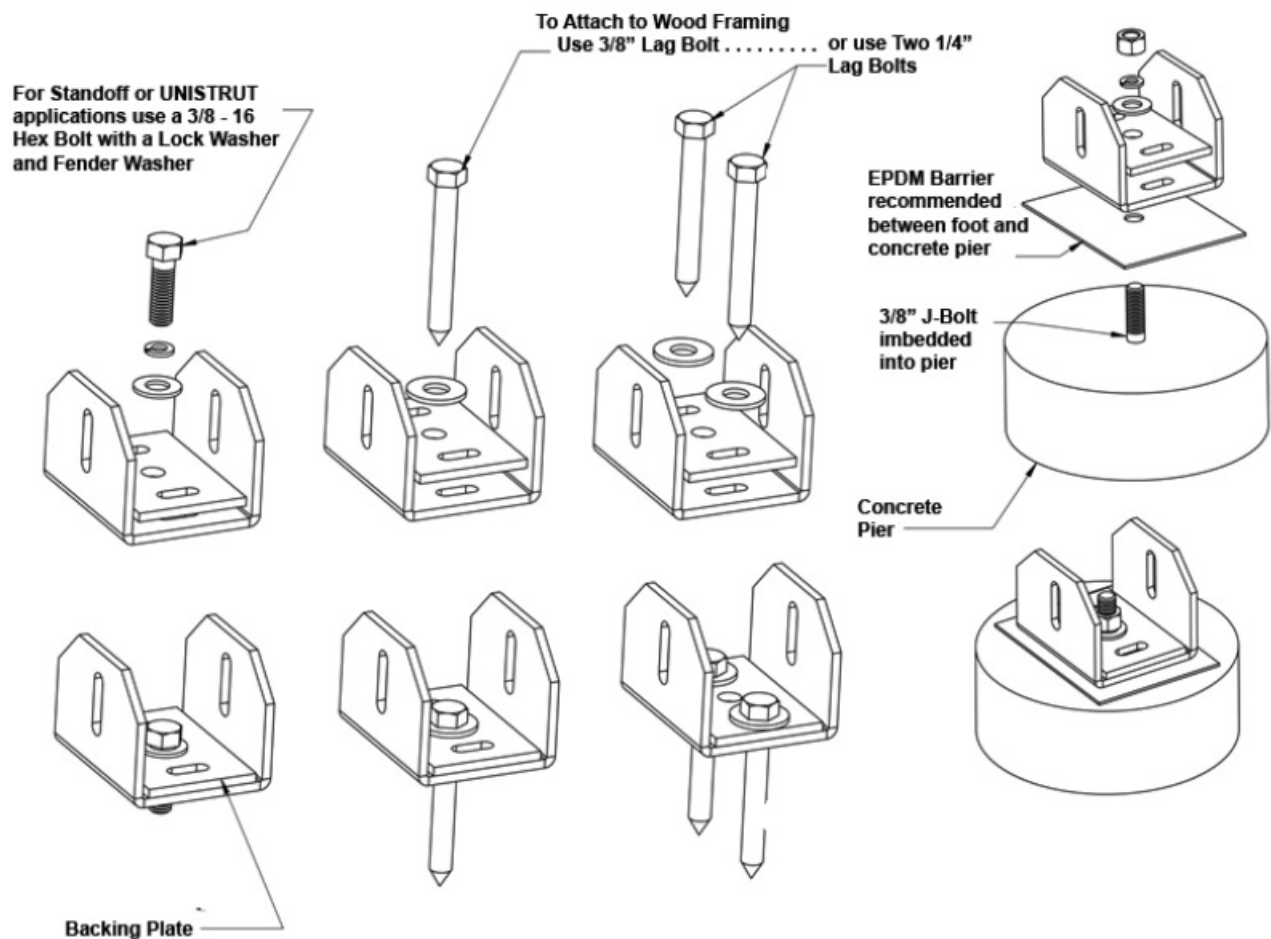

Step 4 Attaching PV modules to panel supports


- **A.** Lay the PV Modules face-down on a protected flat surface mounting hole side up.
- **B.** Lay the flat side of the panel support channels across the panels keeping panels and supports parallel.
- **C.** Align mounting holes on the panels with the slots on the panel supports, allow Approximately 1/4" to 1" in between PV modules and leave any available left-over support length at the bottom of the array for ground clearance to allow for vegetation management.
- **D.** Secure with 5/16" hardware and torque to 132 in-lbs. if the mounting holes on the solar panels are large enough. If the panels have 1/4" or 6 mm holes, use the 1/4" hardware in the 29-5000-0GR mounting hardware kits and torque them to 75 in-lbs.

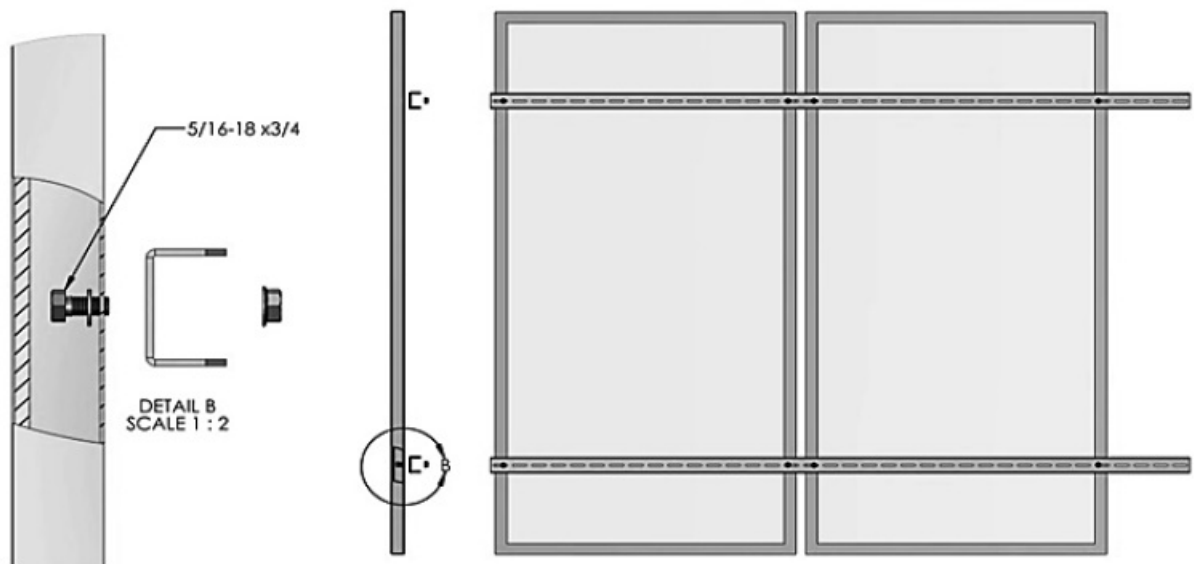

Final Assembly


Step: 1 Attach U-foot to footings

- **A.** Attach the U-foot and backing plate to your footings, align the feet east\west and north\south and torque 3/8-16 galvanized hardware to 16 ft-Lbs. (Concrete footings shown)

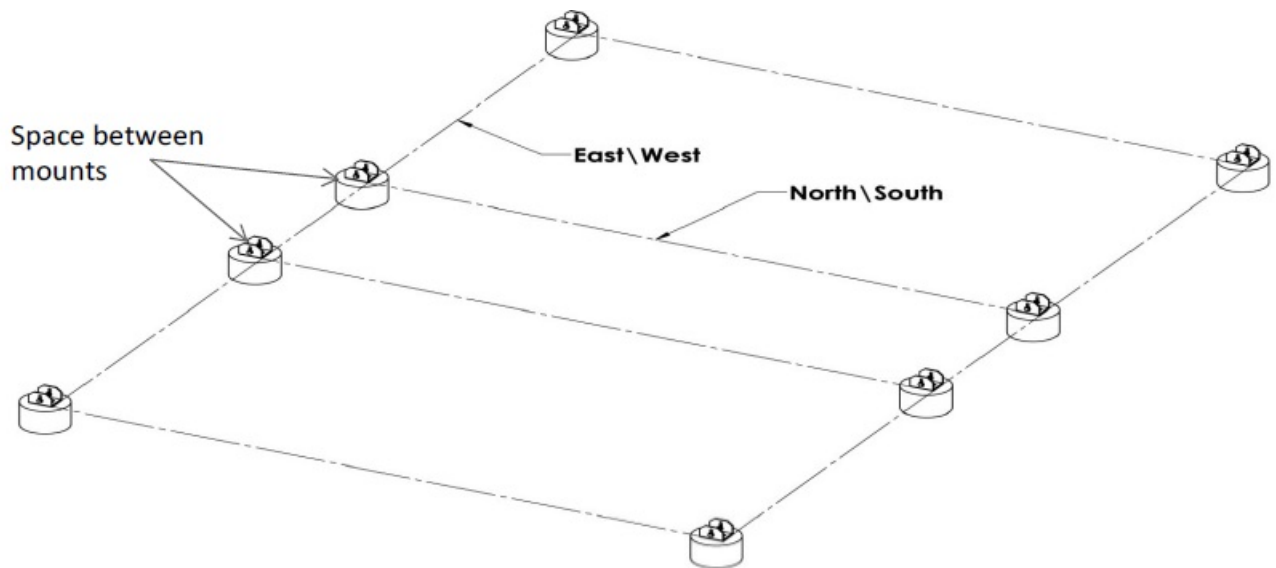


Step 2: Attach Preassembled rear braces to footings.

- **A.** Loosely attach the pre-assembled rear brace to the rear footings (pre-assembled from the prior angle determination step). The “outer leg” is attached to the foot. Lay back away from the front for next step.

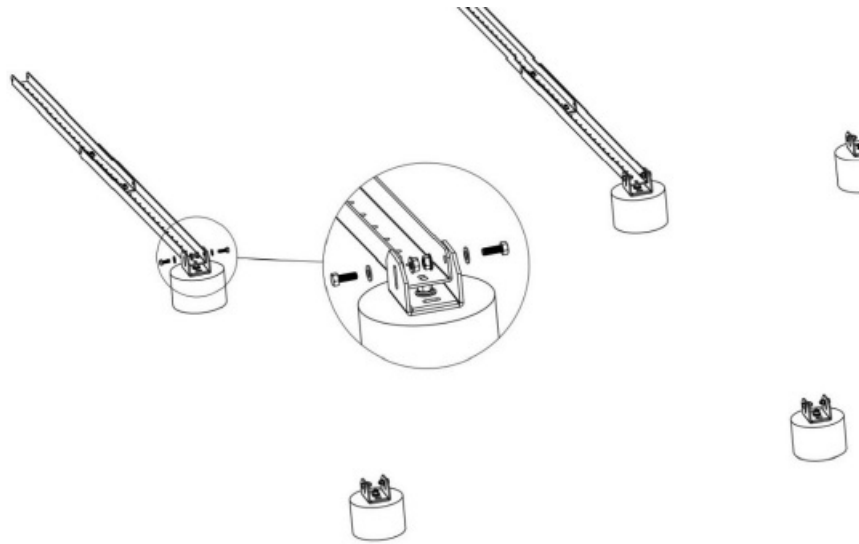


Step 3: Attach Pre-Assembled Panel array to footings.

- **A.** Loosely attach one end of the Panel assembly to the U-feet on the footings.

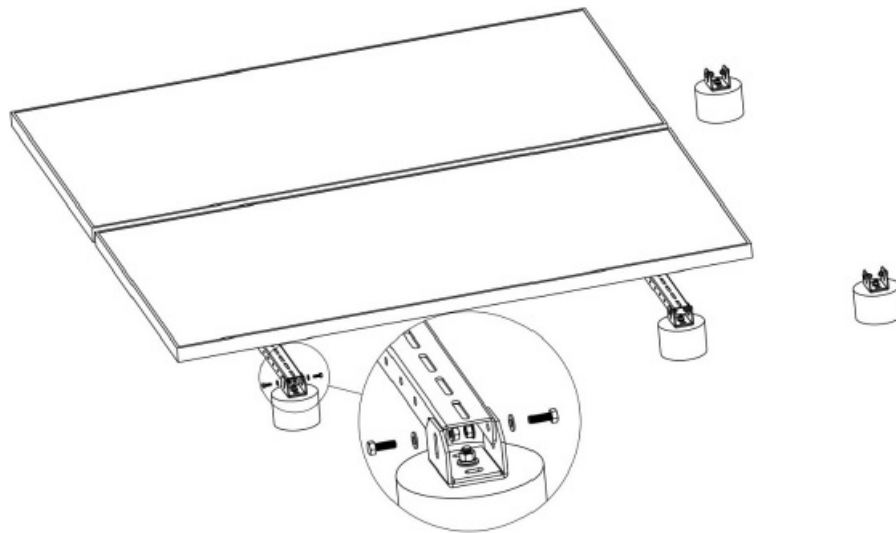

Step 4: Attach rear braces to panel supports


- **A.** Tilt up the array, and the rear braces, and bolt the rear leg into the hole chosen at the distance on step 2 of the “Determine foot spacing” operation, or the general spec chart.
- **B.** Torque all locations to 132 in-lbs.

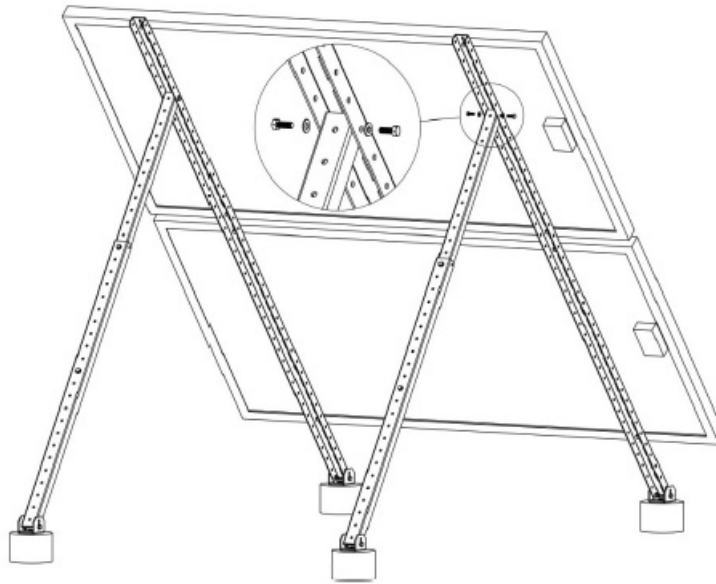


OPTIONAL UNI-GR Intertie Installation 51-0520-005

If you are installing 2 or more UNI-GR mounts, you can tie them together to increase stability by putting one of the UNI-GR intertie kits between each mount. This brace is adjustable from 18.25" to 32" and can be used with solar panels that have mounting holes that are between 7" and 15" from the end of the modules.

- **A.** Loosely connect the inner and outer intertie channels with the 5/16" bolt, lock washer, flat washer, and hex nut.

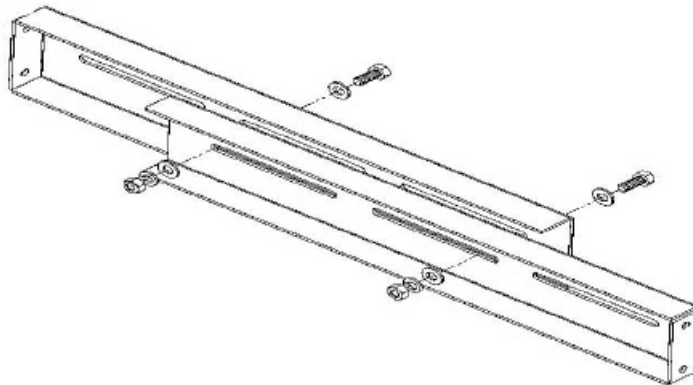

- **B.** Place the intertie as shown about midway between the rear brace connection and the end of the panel support channels, slide the channels out to meet the panel support channels, connect with the 5/16" hardware, torque to 132 In Lbs 6 places.

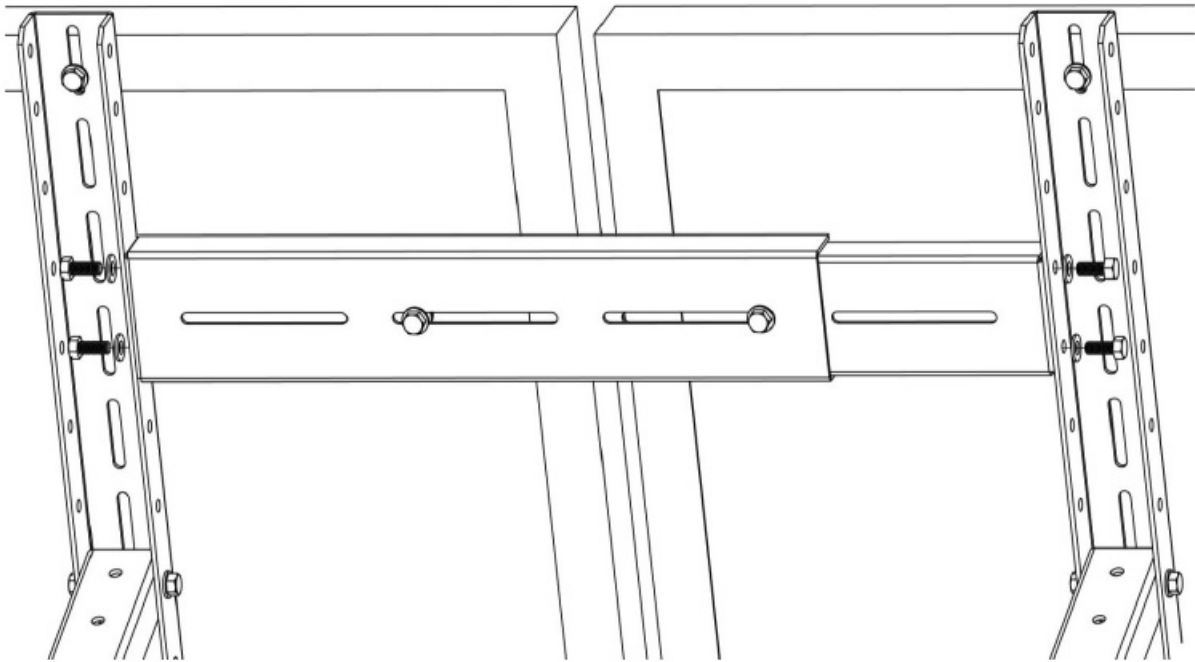

Installer Responsibility

The installer is solely responsible for:

1. Complying with all applicable local or national building codes, including any that may supersede this manual.
2. Ensuring that Tamarack Solar and other products are appropriate for the installation and the installation environment.
3. Using only Tamarack Solar parts and installer-supplied parts as specified by Tamarack Solar. Substitution parts may void the warranty.
4. Ensuring safe installation of all electrical aspects of the PV array.
5. Ensuring correct and appropriate design parameters are used in determining the design loading used for the specific installation. Parameters, such as snow loading, wind speed, exposure and topographic factor should be confirmed with the local building official or a licensed professional engineer.

Warranty Information

Tamarack Solar warrants each Mounting Structure to be free from defects in materials and workmanship for ten (10) years from the date of first purchase ("Warranty Period"), when installed properly and used for the purpose for which it is designed, except for the finish, which shall be free from visible peeling, or cracking or chalking under normal atmospheric conditions for a period of three (3) years, from the earlier of 1) the date the installation of the Product is completed, or 2) 30 days after the purchase of the Product by the original Purchaser ("Finish Warranty"). The Finish Warranty does not apply to any foreign residue deposited on the finish.

All installations in corrosive atmospheric conditions are excluded. The Finish Warranty is VOID if the practices specified by AAMA 609 & 610-02 – "Cleaning and Maintenance for Architecturally Finished Aluminum" (www.aamanet.org) are not followed by Purchaser for Tamarack Solar's aluminum-based products.

The warranty covers the replacement cost of parts to repair the product to proper working condition.

Transportation and incidental costs associated with warranty items are not reimbursable. The warranty does not cover normal wear, or damage resulting from misuse, abuse, improper installation, negligence, or accident, or typographical errors in instruction manuals. The Warranty does not cover any defect that has not been reported in writing to Tamarack Solar within ten (10) days after discovery of such defect. Furthermore, it does not cover units that have been altered, modified, or repaired without written authorization from the manufacturer or its authorized

representative, or units used in a manner or for a purpose other than that specified by the manufacturer. Tamarack Solar’s entire liability and Purchaser exclusive remedy, whether in contract, tort or otherwise, for any claim related to or arising out of breach of the warranty covering the Mounting Structures shall be correction of defects by repair, replacement, or credit, at Tamarack Solar’s discretion. Refurbished Mounting Structures may be used to repair or replace the Mounting Structures

Tamarack Solar shall have no liability for any injuries or damages to persons or property resulting from any cause, whatsoever, or any claims or demands brought against Tamarack Solar by Purchaser, any employee of Purchaser, client of Purchaser, end-user of the Product or other party, even if Tamarack Solar has been advised of the possibility of such claims or demands (collectively, “Third Party Claims”). This limitation applies to all materials provided by Tamarack Solar during and after the Warranty Period.

1-800-819-7236 Ext 556
support@tamaracksolar.com

Documents / Resources

	<p>Tamarack UNI-GR/90, UNI-GR/130 Solar Uni GR Series [pdf] Installation Guide UNI-GR 90, UNI-GR 130, UNI-GR 90 Solar Uni GR Series, UNI-GR 130 Solar Uni GR Series, Solar Uni GR Series, Solar Uni</p>
---	---

References

-  [FGIA](#)