



UNI-T UT15A Voltage Indicator Instruction Manual

[Home](#) » [UNI-T](#) » UNI-T UT15A Voltage Indicator Instruction Manual 

Contents

- [1 UNI-T UT15A Voltage Indicator](#)
- [2 1\) Introduction](#)
- [3 2\) Safety notices](#)
- [4 Instrument Layout](#)
- [5 Voltage test](#)
- [6 Single pole voltage detection](#)
- [7 Continuity test](#)
- [8 Phase rotation test](#)
- [9 Maintenance](#)
- [10 Specifications](#)
- [11 Documents / Resources](#)
- [12 Related Posts](#)



UNI-T UT15A Voltage Indicator



Product Information:

The product is a digital multimeter with three different models: UT15A, UT15B, and UT15C. The manufacturer of the product is Uni-Trend Technology (Dongguan) Limited in Guang Dong Province, China. The headquarters of the company is in Hong Kong.

Product Usage Instructions:

1. Open the battery cover and remove the anti-leakage piece before using the device. Refer to content 3: instrument layout 13 for more information.
2. Choose the appropriate model: UT15A, UT15B, or UT15C.
3. Connect the device to the circuit being tested.
4. Turn on the device by pressing the power button.
5. Select the desired measurement function using the function dial.
6. Take the measurement by placing the test leads on the appropriate points in the circuit.
7. Read the measurement result on the display screen.
8. Turn off the device by pressing the power button again.

Note: Always use caution and follow safety precautions when working with electrical circuits.

1) Introduction

Notice:

please open battery cover and remove antileakage piece before using. (Refer to content 3:instrument layout 13)

- Thank you for purchasing a voltage tester.
- This tester has been designed in accordance with the latest international safety standards.
- The combivolt testers are fully automatic voltage indicators capable of measuring AC/DC voltage up to 690 V. Both units have visual and acoustic continuity indication


Constructed in accordance with IC 61010 and IC 61243-3.

- Single pole phase indication
- 2 pole phase rotation indication
- LED& LCD display (UT15C)

2) Safety notices

- This manual contains information that must be followed for operating the meter safely and maintaining the meter in a safe operating condition. If this meter is not used in the manner specified, the protection provided may be impaired.
- 4 Warning! Warns of potential danger, refer to the instruction manual to avoid personal injury or damage to the meter.
- 1 Caution! Dangerous voltage. Danger of electrical shock
- Continuous double or reinforced insulation complies with IEC536, class 11 CE Symbol of conformity, confirms conformity with relevant EU directives. The meter complies with EMC directives (89/336/EEC). Specifically standards EN 50081-1 and EN 50082-1 as well as the Low Voltage Directive (73/23/EEC) described in the standard EN 61010-1.
- The meter has been designed in accordance with the safety regulations for electronic measuring instruments, EN 61010-1, IEC 61010 Voltages above 75V DC or 50V AC may constitute a serious shock hazard.
- Before using the meter check for physical damage to the casing in particular around the connectors. If the case is damaged do not use the meter.
- Check the test probes for damaged insulation or exposed metal. Check the leads for continuity.
- Do not apply more than the rated voltage, as marked on the meter between the terminals or between any terminal and ground.
- Do not use or store the meter in an environment of high temperature, humidity, fumes, vapour, gaseous, inflammable and strong magnetic field. The performance and safety of the instrument and the user may be compromised in such circumstances.
- Disconnect circuit power and discharge all high voltage capacitors before testing resistance, continuity and diodes.
- Remove the batteries if the meter is not in use for a long period. Constantly check the battery as it may have leaked. A leaking battery will damage the meter.
- The meter may only be opened by a qualified service technician for calibration and repair.

Instrument Layout

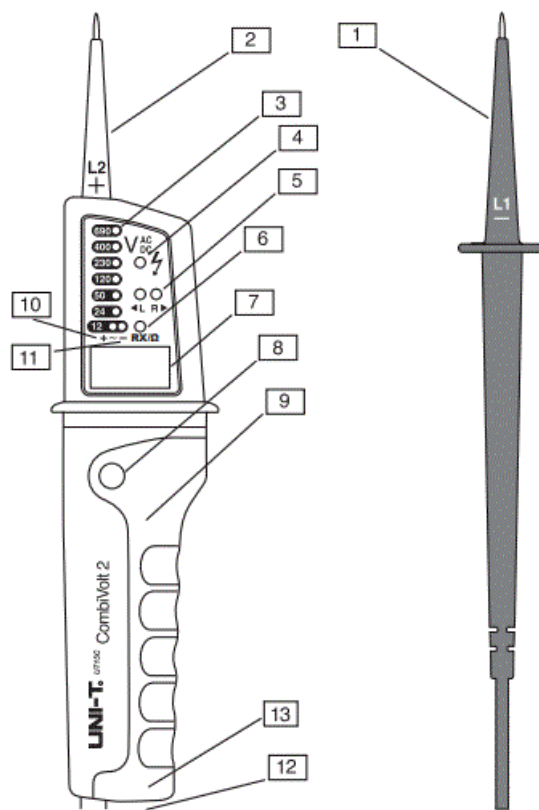

1. Test Probe (-) L1
2. Test Probe (+) L2
3. LED's for voltage indication
4. LED for single-pole test
5. Right & Left LED, phase rotation indication
6. LED for continuity
7. LCD for voltage display (only UT15C)
8. Contact electrode for the double-pole test of phase rotation and single-pole test
9. Torch button on the back
10. Positive LED
11. Negative LED
12. Battery Compartment
13. Anti-leakage piece


Carrying out measurements

Perform a self test of the unit. Connect the two test probes L1 and L2. The continuity LED (6) will be lit and an audible tone should be heard


Before any test check the unit on a known voltage source.

If the unit is defective it should be put out of service and returned to uni-trend for repair.

Voltage test

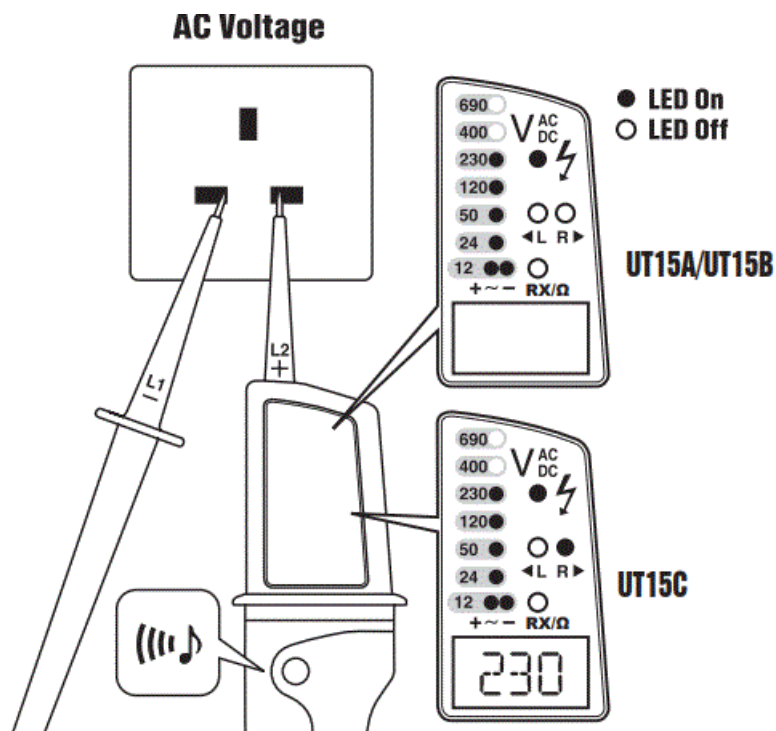


- Always hold the test probes by the handles behind the finger guards.. Observe the safety notices at all times.
- An audible tone is present when an AC voltage and a negative DC voltage are indicated.
- The maximum switch on time is 30 s. When this time has elapsed you must wait 10 minutes before retesting.
- Connect probes to voltage source observing polarity of the test probes L2 is positive probe, L1 is the negative probe.
- For AC voltage the value is indicated on the LEDs (3) and on the LCD display (UT15C only). The + and – LEDs are illuminated and buzzer is audible.
- For DC voltage connect probe L2 to the positive terminal and L1 to the negative terminal. The voltage is displayed on the LEDs and the LCD display (UT15C only). The positive
- LED (10) is illuminated. If the polarity is reversed the buzzer will sound. The negative LED (11) will be illuminated.

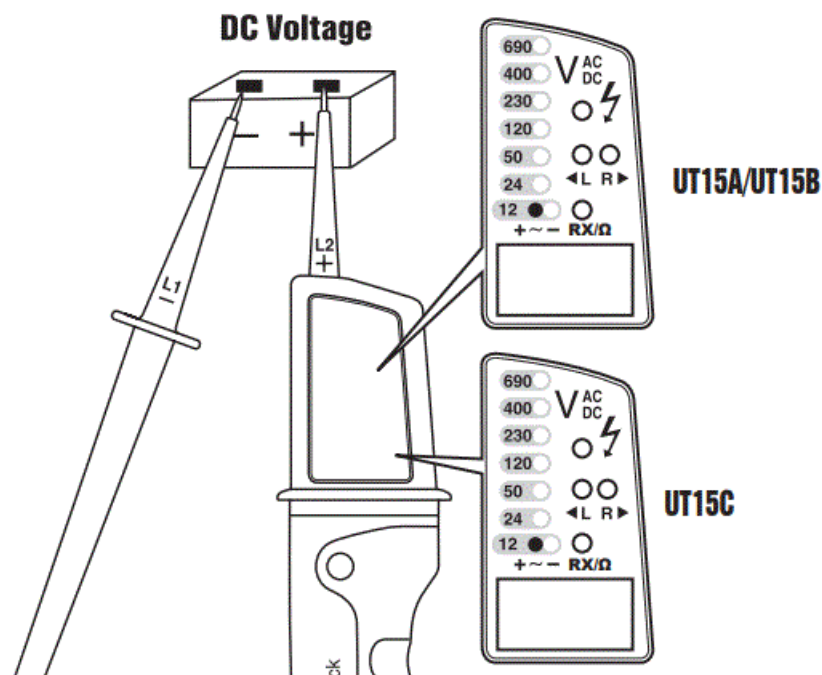

Single pole voltage detection

Single-pole Voltage Detection Test

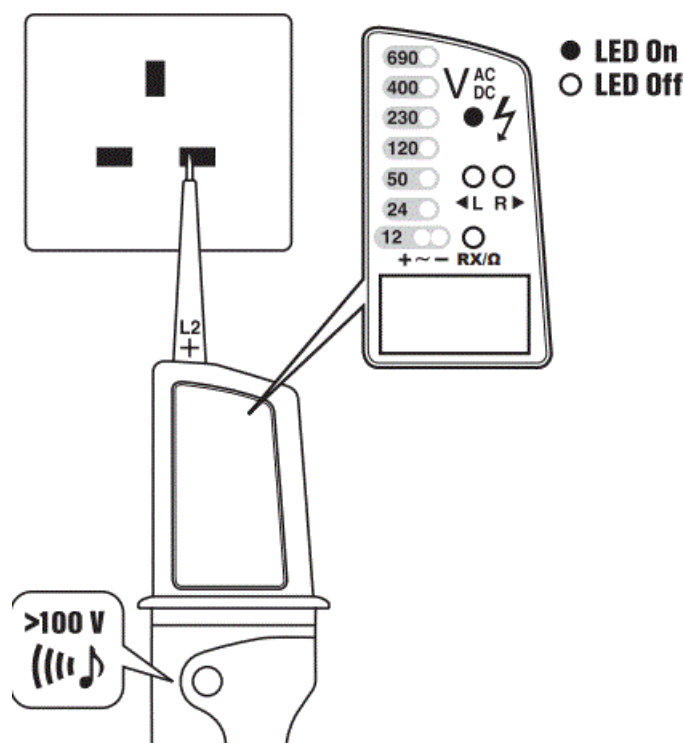

Perform a function test prior to this test.

This unit can be used as a single pole voltage detector when batteries are inserted.

The single pole test is intended only as a quick check. The circuit must be checked again for the presence of voltage using the two pole method.

Connect test probe L2 to the voltage source and keep finger on the contact electrode (8). If an AC voltage above 100 V is present the LED (4) is illuminated and the buzzer sounds.

The single pole test can be negatively affected by unfavourable conditions such as an electrostatic field, good insulation etc.


Continuity test

The continuity test is only possible when batteries are inserted and in good condition.

Ensure the circuit under test is not live.

Connect test probes L1 and L2 to the circuit. The continuity LED (6) will illuminate and the buzzer will sound.


The unit will indicate continuity below 400 Kohm

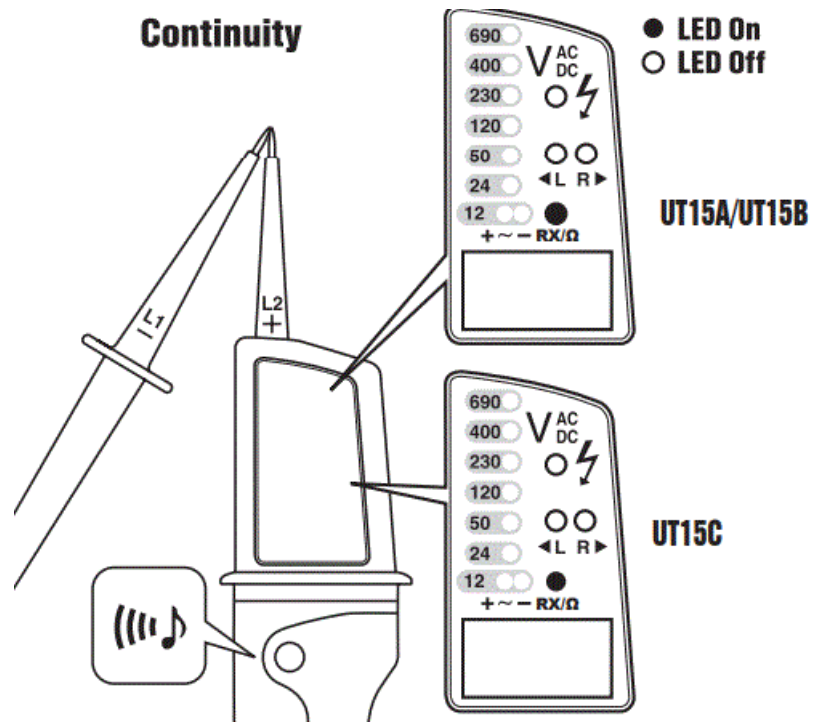


Note: The continuity test is only possible when batteries are installed and in good condition

Phase rotation test

- Perform a function test prior to this test.
- This unit can determine the phase rotation within a three phase supply.
- Connect test probe L2 to the supposed phase 2 and the test probe L1 to the supposed phase 1. If the R LED illuminates the phases are in the correct sequence 1 to 2.

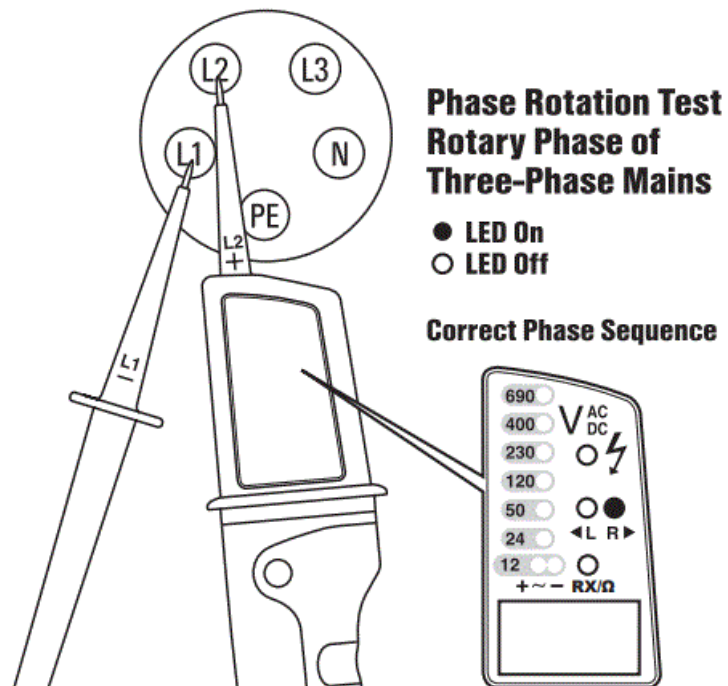

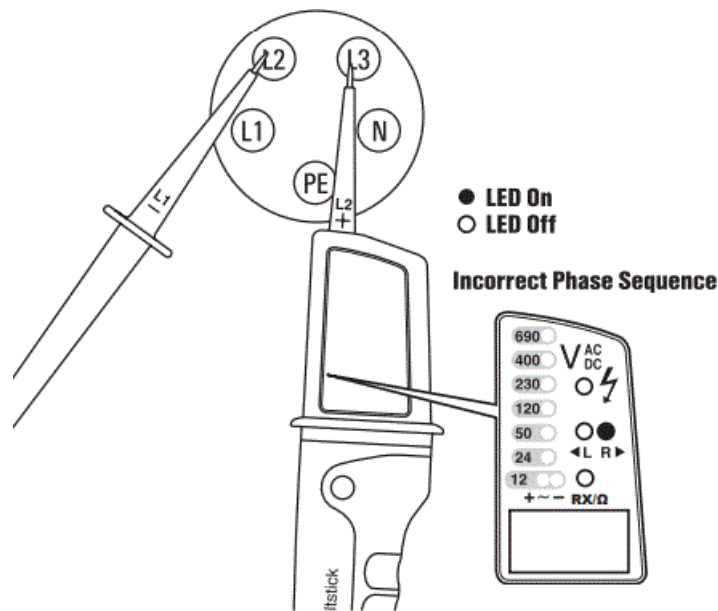

- Connect test probe L2 to the supposed phase 3 and test probe L1 to the supposed phase 2. If the B LED illuminates the phases are in the correct sequence 2 to 3.
- Connect test probe L2 to the supposed phase 1 and the test probe L1 to the supposed phase 3. If the R LED illuminates the phases are in the correct sequence 3 to 1.

During phase rotation test touch the contact electrode.

If the L LED illuminates then the phase sequence is anti-clockwise.

Maintenance

Do not attempt to repair this unit . There are no user-serviceable items in this unit. Never attempt to open the casing apart from the battery cover.

Do not use the instrument if there is any physical damage to the case or test leads.

The outside of the unit can be cleaned with a soft damp cloth only. Do not use abrasive or chemical cleaning agents.

Changing batteries

Turn the battery cover by 90 degrees anti-clockwise. Remove the cover and take out spent batteries. Replace with 2 off 1.5 V AAA (LRO3) batteries, checking the correct polarity. Replace the battery cover and turn by 90° clockwise. Spent batteries should be disposed of responsibly and with compliance with current recycling and disposal regulations.

Calibration

The recommended calibration interval for the UT15A/UT15B/UT15C is 12 months.

Specifications

Voltage	UT15A/UT15B	UT15C
Voltage display	12 – 690 V AC/DC	12– 690 V AC/DC
LED Resolution	12, 24, 50, 120, 230, 400, 690	12, 24, 50, 120, 230, 400, 690
LCD Resolution		+/- 3 % + 8 digits (24 – 690 V)
Voltage detection	automatic	automatic
Acoustic signal	AC voltage – DC voltage	AC voltage – DC voltage
Polarity detection	Full range	Full range
Response time	LED < 0.1s	LED <0. 1s, LCD <2s
Frequency range	0 – 400 Hz	0 – 400 Hz
Peak Current	Is<0.3A/Is(after 5s) <3.5 mA	Is<0.3A/Is(after 5s) <3.5 mA
Operation time	30s	30s
Recovery time	10 min	10 min
Auto power on	<12 V AC/DC	<12 V AC/DC
Single pole voltage indication		
Voltage range	100 – 690 V AC	100 – 690 V AC
Frequency range	50 – 400 Hz	50 – 400 Hz
Continuity		
Measuring range	0 - 400 Kohm	0 - 400 Kohm
Phase rotation test		
Voltage range	100 – 690 V	100 – 690 V
Frequency	45 – 65 Hz	45 – 65 Hz
Over voltage protection	690 V AC/DC	690 V AC/DC
Power supply	2 x 1.5 LR03 battery	2 x 1.5 LR03 battery
Dimensions	255 x 70 x 28 mm	255 x 70 x 28 mm
Weight	200g	200g


Manufacturer:

Uni-Trend Technology (Dongguan) Limited
Dong Fang Da Dao
Bei Shan Dong Fang Industrial Development District Hu Men Town, Dongguan City
Guang Dong Province
China
Postal Code: 523 925

Headquarters:

Uni-Trend Group Limited
Rm901, 9/F, Nanyang Plaza
57 Hung To Road
Kwun Tong
Kowloon, Hong Kong
Tel: (852) 2950 9168
Fax: (852) 2950 9303
Email: info@uni-trend.com
<http://www.uni-trend.com>

Documents / Resources

	<p>UNI-T UT15A Voltage Indicator [pdf] Instruction Manual</p> <p>UT15A Voltage Indicator, UT15A, Voltage Indicator, Indicator</p>
--	--