


unitronicsplc IO-Link HUB Expansion Modules User Guide

[Home](#) » [unitronicsplc](#) » unitronicsplc IO-Link HUB Expansion Modules User Guide 



User Guide
UG_ULK-1616P2-M2P6
(IO-Link HUB,16I/O,PN,2A,M12,IP67)

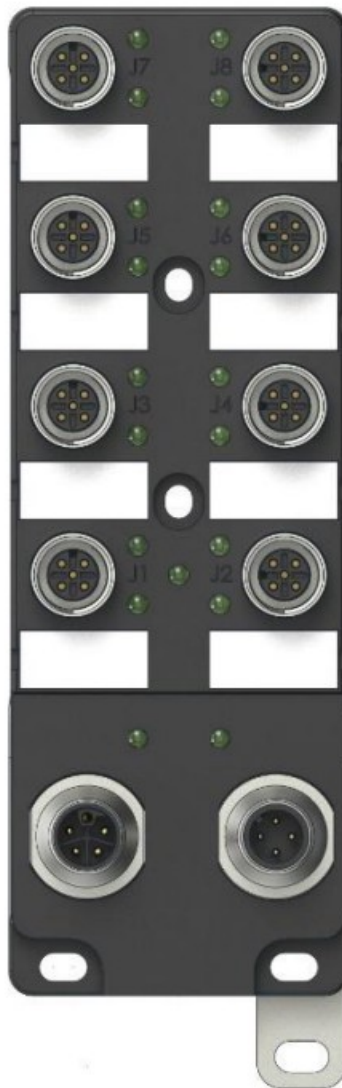

Contents

- [1 Description](#)
- [2 Safety Instructions](#)
- [3 Technical Parameters](#)
- [4 Product Installation](#)
- [5 Documents / Resources](#)
- [5.1 References](#)

Description

1.1 Agreement

The following terms/abbreviations are used synonymously in this document:

IOL: IO-Link.

LSB: least significant bit.

MSB: most significant bit.

This device: equivalent to “this product”, refers to the product model or series described in this manual.

1.2 Purpose

This manual contains all the information required to use the device correctly, including information on necessary functions, performance, usage, etc. It is suitable both for programmers and test/debugging personnel who debug the system themselves and interface it with other units (automation systems, other programming devices), as well as for service and maintenance personnel who install extensions or perform fault/error analysis.

Please read this manual carefully before installing this equipment and putting it into operation.

This manual contains instructions and notes to help you step-by-step through installation and commissioning. This

ensures trouble-free use of the product. By familiarizing yourself with this manual, you will gain.

The following benefits:

- ❖ ensuring safe operation of this device.
- ❖ take advantage of the full capabilities of this device.
- ❖ avoid errors and related failures.
- ❖ reduce maintenance and avoid cost waste.

1.3 Valid Scope

The descriptions in this document apply to the IO-Link device module products of the ULKEIP series.

1.4 Declaration of Conformity

This product has been developed and manufactured in compliance with applicable European standards and guidelines (CE, ROHS).

You can obtain these certificates of conformity from the manufacturer or your local sales representative.

Safety Instructions

2.1 Safety Symbols

Read these instructions carefully and inspect the equipment before attempting to install, operate, repair, or maintain it. The following special messages may appear throughout this document or on the equipment to indicate status information or to warn of potential hazards.

We divide the safety prompt information into four levels: "Danger", "Warning", "Attention", and "Notice".

DANGER indicates a severely hazardous situation which, if not avoided, will result in death or serious injury.

WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.

ATTENTION indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

NOTICE used to prompt information not related to personal injury

DANGER This is the DANGER symbol, which indicates an electrical hazard exists which, if instructions are not followed, will result in personal injury.

WARNING This is a WARNING symbol, which indicates an electrical hazard exists which, if instructions are not followed, could result in personal injury.

ATTENTION This is the "Attention" symbol. Used to warn you of a potential personal injury hazard. Observe all safety instructions following this symbol to avoid injury or death.

NOTICE This is the "Notice" symbol, which is used to warn the user of possible risks. Failure to observe this regulation may result in faulty operation of device.

2.2 General Safety

This equipment should only be installed, operated, serviced and maintained by qualified personnel. Qualified person is a person who has skills and knowledge concerning the construction and operation of electrical equipment, and its installation, and has received safety training to recognize and avoid the hazards involved.

There shall be a statement in the instructions that if the equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.

NOTICE User modifications and/or repairs are dangerous and will void the warranty and release the manufacturer from any liability.

ATTENTION Product maintenance can only be carried out by our personnel.

Unauthorized opening and improper servicing of the product can result in extensive equipment damage or possibly personal injury to the user.

In the event of a serious malfunction, discontinue use of the equipment. Prevent accidental operation of the device. If repairs are required, please return the device to your local representative or sales office.

It is the operating company's responsibility to comply with locally applicable safety regulations.

Store unused equipment in its original packaging. This provides the best protection against impact and moisture for the device. Please ensure that the ambient conditions comply with this relevant regulation.

2.3 Special Safety

WARNING A process started in an uncontrolled manner may endanger or be exposed to other equipment, therefore, before commissioning, make sure that the use of the equipment does not involve risks that may endanger other equipment or be endangered by other equipment risks of.

Power Supply

This device can only be operated with a current source of limited power, that is, the power supply must have overvoltage and overcurrent protection functions. To prevent the power failure of this equipment, affecting the safety of other equipment; or the failure of external equipment, affecting the safety of this equipment.

Product Overview


The IO-Link master establishes the connection between the IO-Link device and the automation system. As an

integral part of the I/O system, the IO-Link master station is either installed in the control cabinet, or directly installed on site as a remote I/O, and its encapsulation level is IP65/67.

- ❖ Designed for industrial environments, it is a system applied to automated lines.
 - ❖ Compact structure, suitable for usage scenarios with limited installation conditions.
 - ❖ IP67 high protection level, anti-interference design, suitable for demanding application environments.
- As a special reminder, IP rating is not part of UL certification.

Technical Parameters

4.1 ULK-1616P2-M2P6

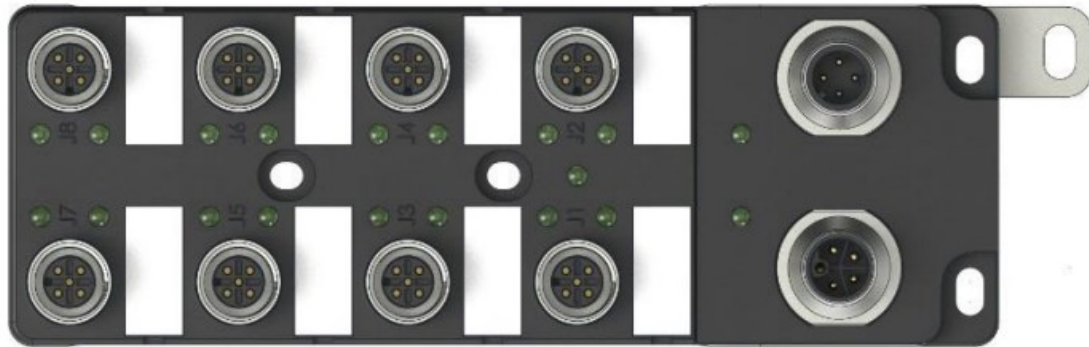

4.1.1 ULK-1616P2-M2P6 Specification

The technical specifications of ULK-1616P2-M2P6 are as follows:


Basic Parameters	Full Series
Housing Material	PA6 + GF
Housing Color	Black
Protection Level	IP67, Epoxy full potting
Dimensions (W x H x D)	155mm x 53mm x 28.7mm
Weight	227g
Operating Temperature	-25°C...70°C
Storage Temperature	-40°C...85°C
Operating Humidity	596...95%
Storage Humidity	596...9596
Operating Atmospheric Pressure	80KPa...106KPa
Storage Atmospheric Pressure	80KPa...106KPa
Altitude	0...2000m
Pollution Degree	3
Tightening Torque (1/0)	M120.SNm
Application Environment	conforms to EN-61131
Vibration Test	conforms to IEC60068-2
Impact Test	conforms to IEC60068-27
Free Drop Test	conforms to IEC60068-32
EMC	conforms to IEC61000-4-2,-3,-4
Certification	CE,RoHS
Mounting Hole Size	04.3mm x4

Model	ULK-1616P2-M2P6
IOLINK Parameters	
IO-UNK Device	1 x Device
Data Length	2 bytes input/2 bytes output
Minimum Cycle Time	3ms
Power Parameters	
Rated Voltage	18...30V DC
Total Current UI	<1.6A
Total Current UO	<12A
Port Parameters (input)	

Input Port Position	11 J8
Input Port Number	up to16
Input Polarity	PNP
Input Signal	3-wire PNP sensor or 2-wire passive signal
Input Signal '0'	low level 0-5V
Input Signal '1'	High level 11-30V
Switching Threshold	EN 61131-2 Type 1/3
Switching Frequency	250HZ
Input Delay	20ps
Maximum load Current	200mA
I/O Connect ion	M12 Spin Female A coded
Port Parameters (output)	
Output Port Position	11 J8
Output Port Number	up to16
Output Polarity	PNP
Output Voltage	24V(follow UA)
Output Current	2A
Output Diagnositic Type	point diagnosis
Synchronization Factor	1
Switching Frequency	250HZ
Load Type	Resistive, Plot Duty, Tungsten
Short Circuit Protection	yes
Overload Protection	yes
VO Connection	M12 5pin Female A coded

4.1.2 ULK-1616P2-M2P6 Series LED Definition

ULK-1616P2-M2P6 LED is shown in the below figure.

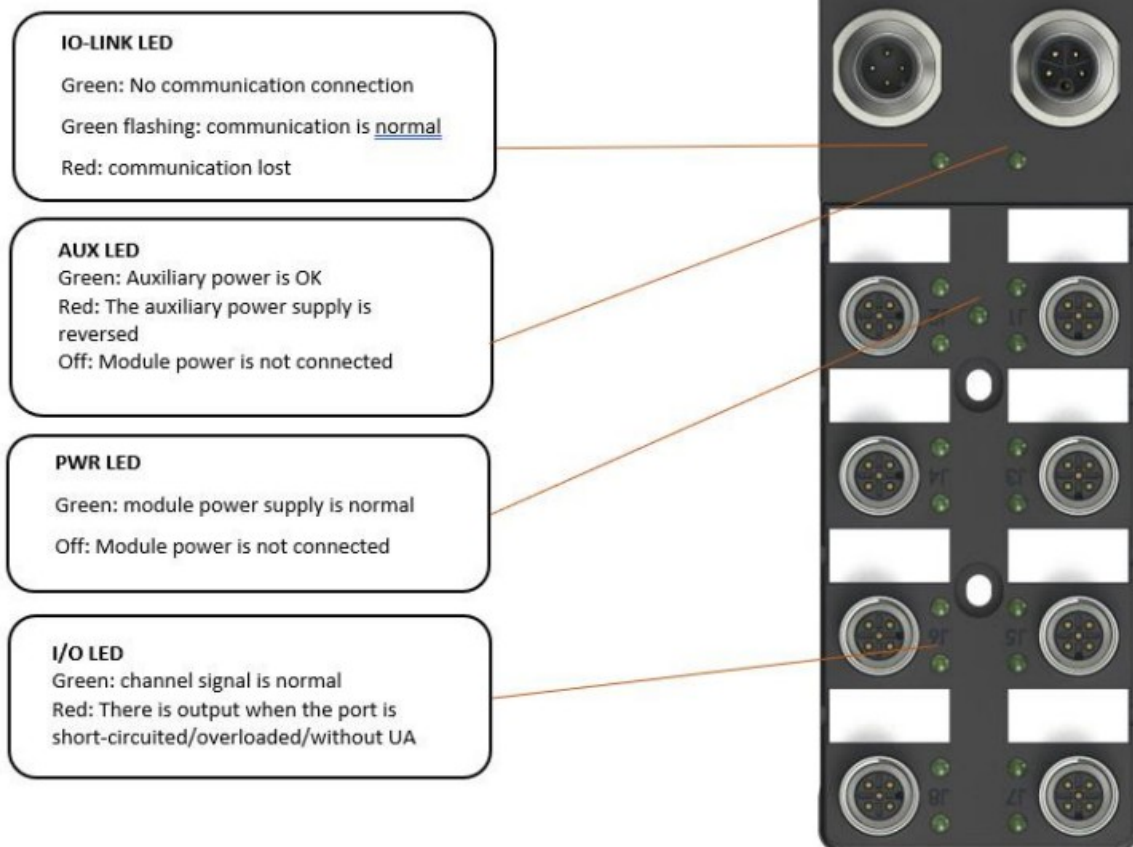


	Status	Solution
PWR	Green: Power OK	
	Off: Module power disconnected	Check power wiring
pm	Green: Auxiliary power is OK	
	Red: The auxiliary power supply is reversed	Check the wiring of the auxiliary power port
	Off: Auxiliary power disconnected	Check auxiliary power wiring
10-LIN K	Green: link is normal, data communication is abnormal	Check the configuration of the modules in the PLC
	Green flashing: link is normal, data communication is normal	
	Off: Link not established	Check the cable
	Red: Communication with the master station is interrupted	Check the status of the master station / view the connection line
10	Green: channel signal is normal	
	Red: There is output when the port is short-circuited/overloaded/without UA power	Check whether the wiring is correct/measure UA voltage/PLC program

Note: When the Link indicator is always off, if there is no abnormality in the cable inspection and replacement of other modules, it indicates that the product is working abnormally. Please contact the manufacturer for technical consultation.

4.1.3 ULK-1616P2-M2P6 Dimension

The size of the ULK-1616P2-M2P6 is 155mm × 53mm × 28.7mm, including 4 mounting holes of $\Phi 4.3$ mm, and the depth of the mounting holes is 10mm, as shown in the figure below:

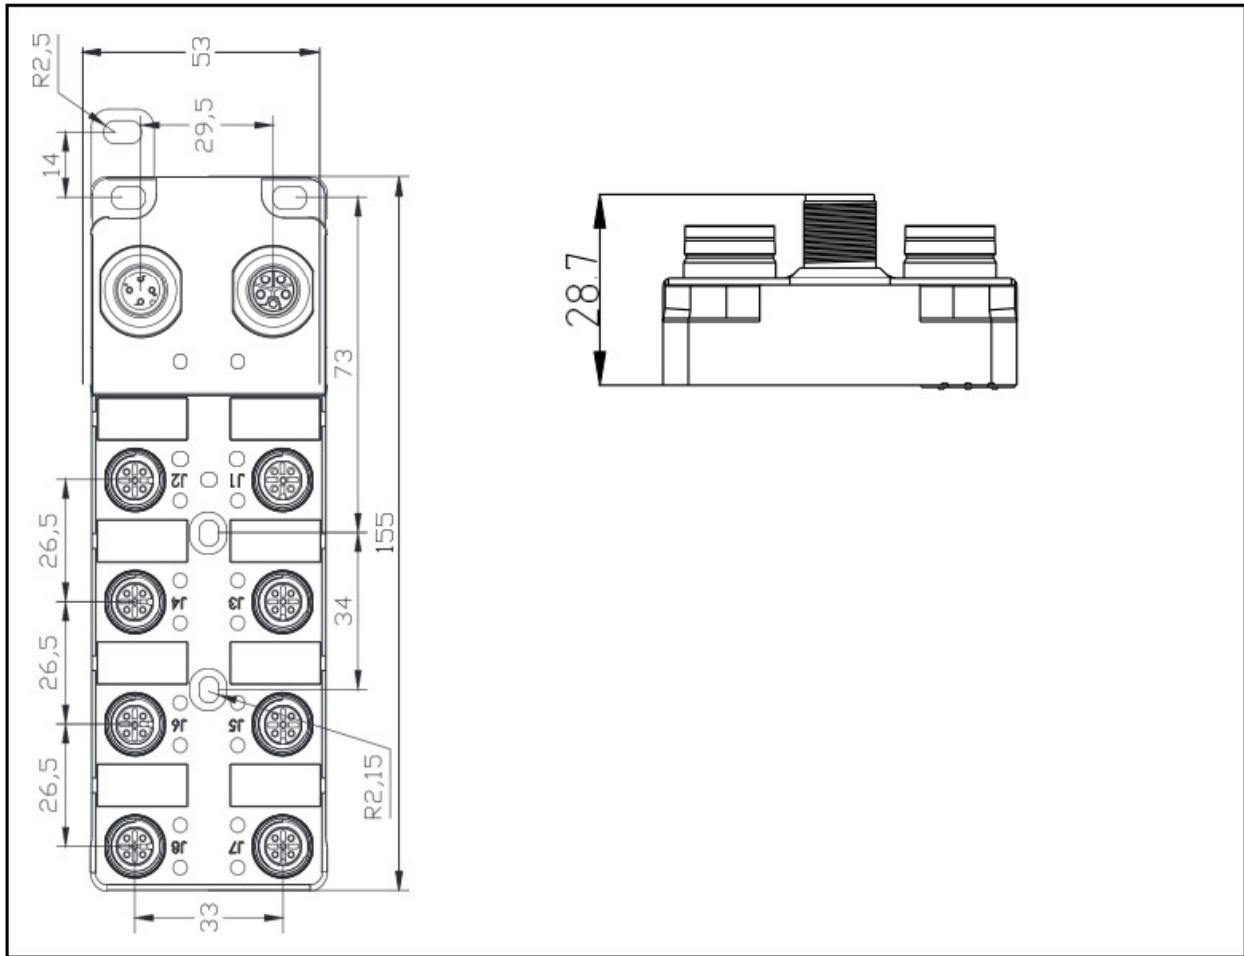

Product Installation

5.1 Installation Precautions

To prevent product malfunction, malfunction, or negative impact on performance and equipment, please observe the following items.

5.1.1 Installation Site

NOTICE Please avoid installing near devices with high heat dissipation (heaters, transformers, large-capacity resistors, etc.)

NOTICE Please avoid installing it near equipment with serious electromagnetic interference (large motors, transformers, transceivers, frequency converters, switching power supplies, etc.).

This product uses PN communication. Radio waves (noise) generated by transceivers, motors, inverters, switching power supplies, etc. may affect the communication between the product and other modules.

When these devices are around, it may affect the communication between the product and the module or damage the internal components of the module. When using this product near these devices, please confirm the effects before use.

NOTICE When multiple modules are installed close to each other, The service life of the modules may be shortened due to the inability to dissipate heat.

Please keep more than 20mm between the modules.

5.1.2 Application

Do not use AC power. Otherwise, there is a risk of rupture, seriously affecting the safety of personal and equipment.

Please avoid wrong wiring. Otherwise, there is a risk of rupture and burnout. It may affect the safety of personal and equipment.

5.1.3 Usage

Attention

Do not bend the cable within a radius of 40mm. Otherwise there is a risk of disconnection.

Attention

If you feel that the product is abnormal, please stop using it immediately and contact the company after cutting off the power.


5.2 Hardware Interface

5.2.1 ULK-1616P2-M2P6 Interface Definition


Power Port Definition

1. ULK-1616P2-M2P6 Port Definition

Power Port Pin Definition

Port M12 Male Pin Definiti on	Connection Type	M12, 5 pins, A-code Male	Male  1.V+ 2.N/C 3.OV 4.C/Q 5.N/C
	Allowable Input Voltage	18...30 VDC (type.24VDC	
	Maximum Current	1A	
	Static Working Current Ic	80mA	
	Power Reverse Polarity Protectic	yes	
	Tightening Torque (power port)	M12:0.5Nm	
	Protocol	IOLINK	
	Transfer Speed	38.4 kbit/s (COM2)	
	Minimum Cycle Time	55ms	

Auxiliary Power Port Pin Definition
Auxiliary Power Port Pin Definition

Port M12 L-code Male P	Connection Type	M12, 5 pins, L-code, Male/Female	Male  1.+24V_Ua 2.GND_Ua '3. GND Ua 4.+24VUa 5.FE
	System Supply Voltage us	18...30 VDC (type.24VDC)	
	Auxiliary supply voltage ua	18...30 VDC (type.24VDC)	
	Total Current Is	12A	
	Total Current Ia	12A	
	Static Working Current Ic	150mA	
	Power Reverse Polarity Protection	yes	
	Tightening Torque (power port)	M12:0.5Nm	


IO-Link Port Definition

I/O Port Pin Definition						
Port	Pin Definition			Address Distribution		
	Input(In/Output)		Output			
	PNP	PNP				
M12 A-code Female	1. 24V DC+	1. N/C				
	2. Input(In/Output)	2. Output				
	3. 0V	3. 0V				
	4. Input(In/Output)	4. Output				
	5. FE	5. FE				
				(-R)		
				Byte	1	0
				Bit0	J1P4	J5P4
				Bit1	J1P2	J5P2
				Bit2	J2P4	J6P4
				Bit3	J2P2	J6P2
				Bit4	J3P4	J7P4
				Bit5	J3P2	J7P2
				Bit6	J4P4	J8P4
				Bit7	J4P2	J8P2


Pin 5 (FE) is connected to the ground plate of the module. If the shielding layer of the connected temperature sensor needs to be grounded, please connect pin 5 to the shielding layer and ground the grounding plate of the module.

5.2.2 ULK-1616P2-M2P6 Wiring Diagram

1. Output Signal

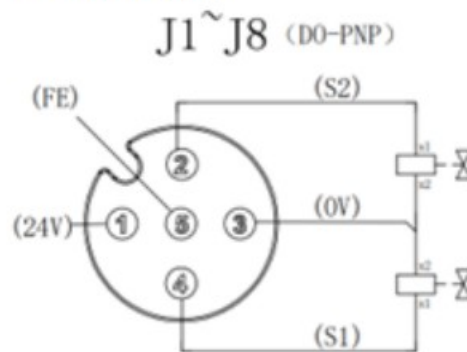

2. Input/Output Signal (self-adaptive)

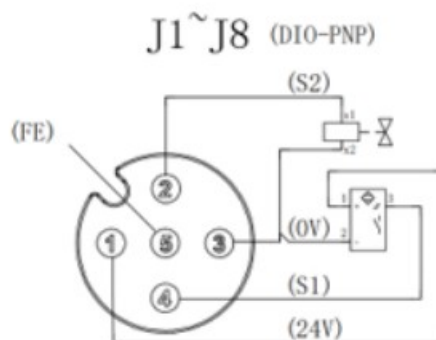

5.2.3 ULK-1616P2-M2P6 IO Signal Address Correspondence Table

Applicable Models: ULK-1616P2-M2P6

Byte	I0.0/Q0.0	I0.1/Q0.1	I0.2/Q0.2	I0.3/Q0.3	I0.4/Q0.4	I0.5/Q0.5	I0.6/Q0.6	I0.7/Q0.7
0	J5P4	J5P2	J6P4	J6P2	J7P4	J7P2	J8P4	J8P2
Byte	I1.0/Q1.0	I1.1/Q1.1	I1.2/Q1.2	I1.3/Q1.3	I1.4/Q1.4	I1.5/Q1.5	I1.6/Q1.6	I1.7/Q1.7
1	J1P4	J1P2	J2P4	J2P2	J3P4	J3P2	J4P4	J4P2

The information in this document reflects products at the date of printing. Unitronics reserves the right, subject to all applicable laws, at any time, at its sole discretion, and without notice, to discontinue or change the features, designs, materials and other specifications of its products, and to either permanently or temporarily withdraw any of the foregoing from the market.


All information in this document is provided "as is" without warranty of any kind, either expressed or implied, including but not limited to any implied warranties of merchantability, fitness for a particular purpose, or non-infringement. Unitronics assumes no responsibility for errors or omissions in the information presented in this document. In no event shall Unitronics be liable for any special, incidental, indirect or consequential damages of

any kind, or any damages whatsoever arising out of or in connection with the use or performance of this information.

The tradenames, trademarks, logos and service marks presented in this document, including their design, are the property of Unitronics (1989) (R”G) Ltd. or other third parties and you are not permitted to use them without the prior written consent of Unitronics or such third party as may own them.



Documents / Resources

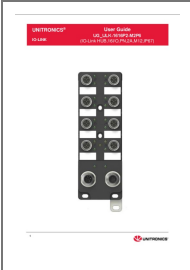	<p>unitronicsplc IO-Link HUB Expansion Modules [pdf] User Guide</p> <p>IO-Link HUB Expansion Modules, IO-Link, HUB Expansion Modules, Expansion Modules, Modules</p>
---	--

References

- [User Manual](#)

Manuals+. [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.