



UR FOG 200 Modular Fogging Systems User Manual

[Home](#) » [UR FOG](#) » UR FOG 200 Modular Fogging Systems User Manual 



Contents

1	200 Modular Fogging Systems
2	PACKAGE CONTENT
3	PRODUCT PRESENTATION
4	CONDITIONS OF USE AND WARNINGS
5	INSTALLATION TIPS FOR FOGGING SYSTEMS
6	TECHNICAL SPECIFICATIONS AND BATTERY ENDURANCE/BACKUP
7	PREPARATION TO THE INSTALLATION
8	ELECTRICAL POWER SUPPLY
9	POWER SUPPLY CONNECTION
10	DESCRIPTION OF INPUT AND OUTPUT CONNECTIONS
11	ONNECTION EXAMPLES
12	SHOOTING TIME SETTING AND FOG FLOW DIRECTION
13	INSTALLATION, EXCHANGE AND BAG RESET
14	FRONT LEDS MEANING
15	MAINTENANCE
16	RESET FROM FAULT CONDITION
17	DEFECTS POSSIBLE SOLUTION
18	WARRANTY
19	MAINTENANCE
20	Documents / Resources
20.1	References

200 Modular Fogging Systems

Installation and use manual model MODULAR rev. 01/09/2023

WARNING!

All UR FOG fogging systems should only be used with UR FOG-branded fluids.

It is strictly forbidden to use any fluid not previously authorized in writing by UR FOG srl.

PACKAGE CONTENT

Inside the package you will find:

1. A fogging machine Modular 200/300/400/500/800 model
2. One 500 ml fluid bag (200/300 mod.) – One 750 ml (400/500 mod.) – One 1000 ml (800 mod.)
3. A warning label to indicate the device presence
4. Installation and use manual

PRODUCT PRESENTATION

Thank you for purchasing a UR Fog product

The great technological innovations such as the fluid injection system, the disposable bag, the ecological and economic system for the complete emptying of the bag, together with the heating system, make the Modular fogging systems the best performing devices in the security market.

– Simple: machine easy to install and able to be integrated to any existing alarm system; they lodge 1 fog fluid bag.

– Cheap: the lowest power consumption among fogging systems.

CONDITIONS OF USE AND WARNINGS

If the system is used according to the manufacturer's recommendations.

The generated fog is certified as safe for people and animals from an authorized international certification company and it is proven that it does not leave any residual.

UR Fog products are certified respecting European laws and regulations.

Any certifications required in specific countries are a responsibility of the distributor of that specific country.

The documents related to certifications can be requested by mail to: support@urfog.com.

It is not guaranteed by the manufacturer the use of UR Fog system in the presence of objects that may be damaged anyway by the contact with substances based on glycol, water and alcohol.

Any employee or worker that may be exposed to fog must be warned in advance and must be checked for any allergy to the substances listed above.

At the date of printing of this manual it has never been pointed out any problem related to any allergy.

UR Fog is in no way responsible for any damage or condition of use that has not been required and specifically approved by any specific written request prior to the installation of its products.

For fog fluid please refer to UR Fog fluid safety data sheet published on the website and carefully read it at www.urfog.com.

Contact a doctor if for any reason you swallow fog fluid or if after contact with eyes or skin you have any kind of reaction, and in any case wash it immediately with water and soap.

Do never stay for a long time in a room filled with fog.

Do not use charged bags that are not the ones suggested by UR Fog and never try to recharge them, they are made for a single use.

Follow your national rules for the dispose of empty bags.

Keep UR Fog bags out of reach of babies and animals.

The nozzle may be hot and touching it may cause burns.

Do not look directly into the nozzle.

Never use UR Fog products for any purpose that is not related to protection from thief or robbery (the choice of the conditions of use in case of robbery will be suggested by your security consultant).

Never use different fog fluids or add any other substance into the bags.

Do not use or keep charged UR Fog machines in vehicles and do never transport UR Fog before 24 hours since it has been shut off.

During transport it must be not armed.

INSTALLATION TIPS FOR FOGGING SYSTEMS

Please observe the following instructions for installing UR Fog:


1. This appliance is not intended for use by person (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they do not play with this appliance.
3. The machine must be installed avoiding to obstruct escape routes.
4. Verify the fog does not limit the visibility near: stairs, landings, moving objects that may cause falls, injuries or any damage to persons.
5. When using the product in multi-storey buildings, if the escape route runs through an area which is protected by a fogging system, it is recommended to install a vocal warning that provides instructions on the behavior to observe.
6. Do not look directly into the nozzle. Do not add any other substance into the bags.
7. The nozzle may reach high temperatures, touch it may cause burns.
8. When UR Fog produces fog avoid staying closer than 1 meter from the machine.
9. Before testing UR Fog, remember to report it in advance to the firefighters in your area to avoid false alarms.
10. Remember to put warning labels about the presence of UR Fog on the windows.
11. Report its installation to the firefighters in your area and to other institutions if needed.
12. It is necessary to add an external switch to separate the fog generator from the alarm system and it should be

activated before the maintenance to avoid that input tests, for example, can activate the fog generator.

13. Never direct the fog jet towards an object or a wall less than 2 meters away and if possible increase the suggested minimum distance. Thanks to the power of the jet, UR Fog reaches and exceeds more than 10 meters away in the first 3 seconds from the point where the machine is installed.
14. Setting the shooting time interval between the minimum and maximum shown in the shooting table, avoid “overshooting” even if the produced fog is dry and generally doesn’t leave residue. A shot that goes far beyond the recommended seconds can create a residue problems in the room.
15. Install at an height of about 2,5 meters not to let it be reached, avoiding possible tampering.
16. Do not move the machine when it is still hot.
17. The main body of UR Fog, which has the heating system enclosed inside a metal frame, should not be opened unless by specific and authorized service centers. Do not open and touch for any reason the insulation before 24 hours UR Fog has been shut off. The internal part may reach really high temperature.
18. Do not activate the UR Fog machine before the installation is completed.
19. Insert the fluid bag as the last procedure and verify the anti-tampering function.
20. When the installation is finished, always test the system.
21. Install UR Fog avoiding any obstacles in front of it which can prevent the spreading of the fog.
22. The tip of a stranded conductor should not be soft-soldered where the conductor is subjected to contact pressure.
23. The UR Fog machine should not be exposed to water spray or dripping.
24. Request to UR Fog or its distributors to take part in courses for installers to ensure the optimal installation of the equipment.
25. The content of the bags is mechanically predetermined and can be subject to variations +/- 10%

TECHNICAL SPECIFICATIONS AND BATTERY ENDURANCE/BACKUP

* Industrial standard as from other manufacturers	MODULAR 200	MODULAR 300	MODULAR 400	MODULAR 500	MODULAR 800
Weight without bag	7,5 Kg	8 Kg	8,5 Kg	8,5 Kg	9,5 Kg
Max fog emission in a single shot	200 ms	300 m	400 m3	500 m	800 rn,
Total fog emission capacity with full bag	850 m3	900 ms	1200 in,	1500 in	2400 m3
Fog bag capacity	1 x 500 ml	1 x 500 ml	1 x 750 ml	1 x 750 ml	1 x 1000 ml
Working time without mains power	A about 1 hour	about 1 hour	about 1 hour	about 1 hour	about 1 hour
Max power on heating system	170 W	170 W	280 W	280 W	280 W
Average power consumption during heating	170 W	170 W	280 W	280 W	280 W
Heating time	about 1 hour	about 1 hour	about 2 hours	about 2 hours	about 2 hours
Average power consumption	37 W	37 W	48 W	48 W	48 W
Maximum current consumption at 12 V	1,2A	1,2 A	1,8A	2A	2,5A
Battery type (not included)	Pb 2 Ah 12V	Pb 2 Ah 12V	Pb 2 Ah 12V	Pb 2 Ah 12V	Pb 2 Ah 12 V
Door tamper	n/a	n/a	a/a	n/a	
Anti-tear off and anti-shift	n/a	n/a	n/a	n/a	


 The “empty” signal shows that the unit is still capable of performing a full shot at full capability. However, it is recommended to always have at disposal a further recharge and to proceed at the substitution as soon as possible.

WARNING:

- Do not disconnect the machine immediately after the shot
- Change the battery every two years
- Change the bag as soon as the “empty” signal appears
- The generator cannot be activated on a surface that does not allow air circulation from side slots

PREPARATION TO THE INSTALLATION

It is always recommended to secure the fog generator to a wall even when it is placed on a flat surface. The optional bracket, mainly recommended for ceiling installation, can also simplify standard installation, by allowing to use back holes for the passage of cables. An optional orientable module is available for wall mounting. Always verify that the bracket or the support surface are suitable for the weight of the machine. It is suggested not to install the machine behind walls in a limited closed area without a specific ventilation, in order to prevent a possible overheating.

 **CAUTION:.** to avoid injuries please securely secure the fogging machine to the wall according to the installation instructions.

After removing the machine from the package, unscrew the four screws of the front panel. Remove the front panel and uncover the electrical circuit (hereinafter referred to as PCB), the DC12V power supply, the thermal unit and the fluid bag.

ELECTRICAL POWER SUPPLY

The 230V input provides primary power to the heat exchanger and, by the use of a switching power supply, to the electronic board and the pump. The heat exchanger's working time without mains power ensures proper functioning for a certain period of time, depending on the model, even in complete absence of mains power. The functioning of the electronic part and the pumping system is guaranteed by the 12V 2A battery (not included). Although the heating element is of 180W, the average power consumption is 170W during heating and between 40W and 60W when operating.



Do not use inverter or UPS if you are not sure that they generate a pure sine wave, not a rebuilt one. Ask please to the UPS manufacturer the correspondence of such features before proceeding with the connection.


- The max current to be considered for the system is 2A
- The connection to the 230V and 110V electricity grid must be performed by a qualified technician.
- Connect the equipment to the electricity grid only after you have completed the installation.
- It is necessary to connect the ground terminal.
- The system must be connected to the mains through an automatic switch (automatic switch, curie C, with $I_h = 10\text{ A}$ and $I_{dif} = 30\text{ mA}$,...) with breaching capacity based on the assumed fault current of the fogging system in the sampling point.

PLEASE NOTE THAT, AS ALL POWERED EQUIPMENT FROM THE ELECTRICITY GRID REQUIRING INSTALLATION, IT IS SUBJECT TO COMPLIANCE WITH RULES OF THE COUNTRY IN WHICH IT IS INSTALLED

(D.M. 37 January 22, 2008)




IF YOU NEED TO REPLACE THE FUSE, USE ONLY FUSE WITH THE FOLLOWING SPECIFICATIONS:
Timed Fuse 250v H Type (1500A) CERAMIC BODY FILLED WITH QUARTZ, REF. STD. EN60127-2-3/DIN41660 3,15AH (EXAMPLE OMEGA GT520231)


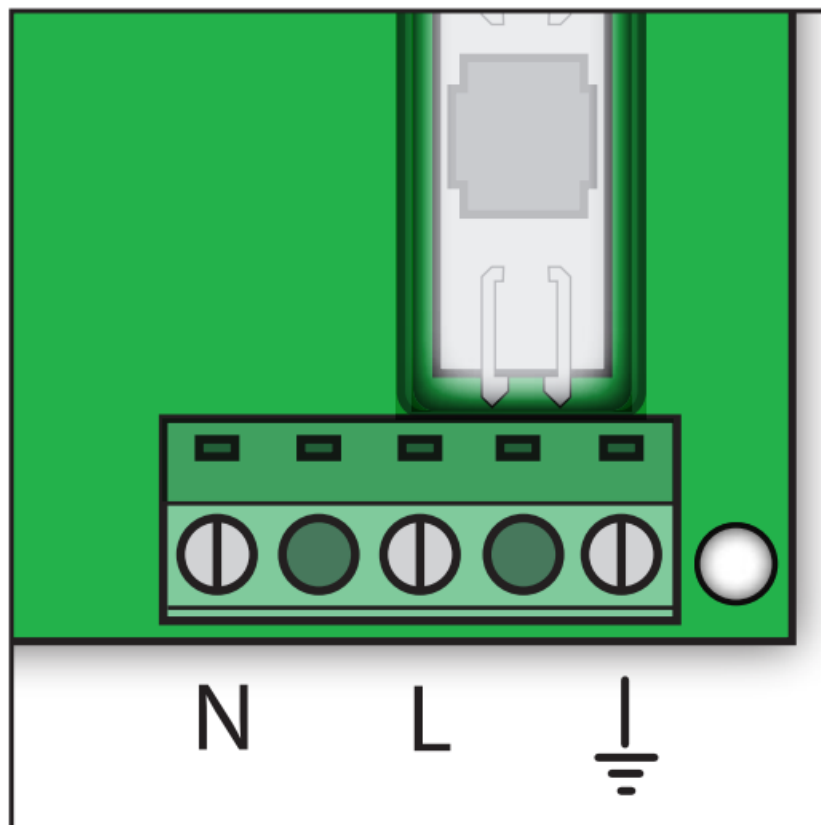


While connecting the machine to the mains power, it is recommended to pay attention to the connection and the screwing of the terminal block screws. The fact of disconnecting or modifying the ground cable voids the warranty and can cause troubles or accidents related to the temperature control.

POWER SUPPLY CONNECTION

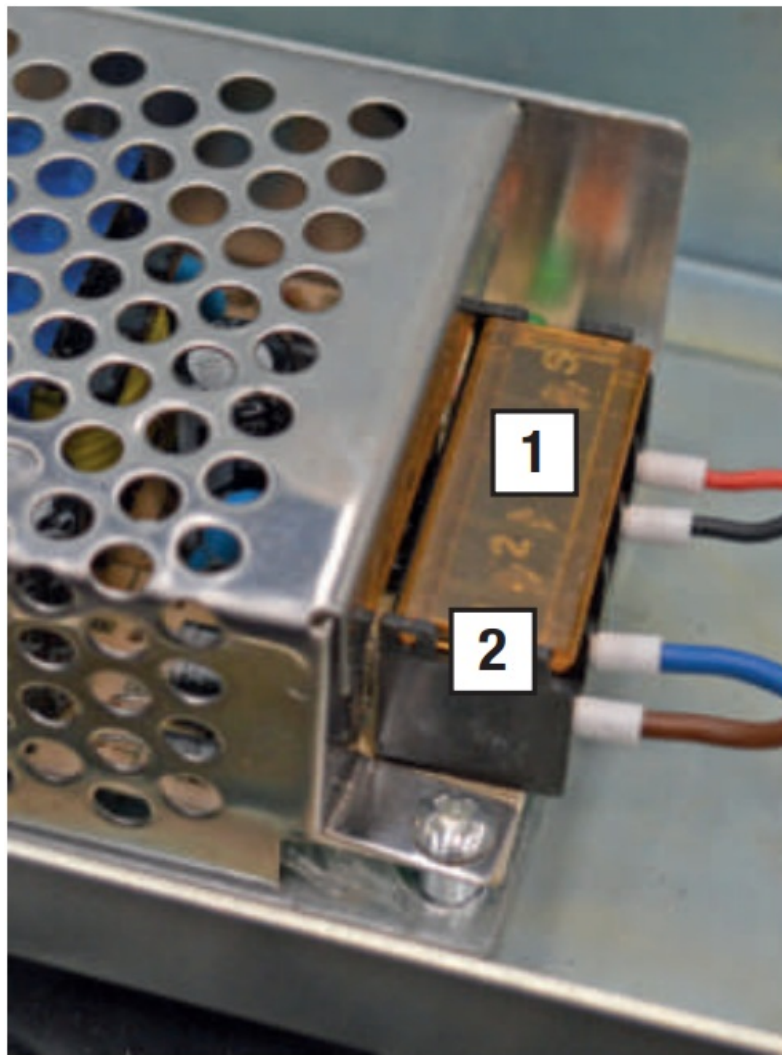


- The battery is essential for the safe use of the device, it is recharged by the board's circuitry
- The predisposition 2A 12V lead-acid battery is lodged below the exchanger
- To gain access to the battery slot it is necessary to remove the plastic front panel and possible stop screw

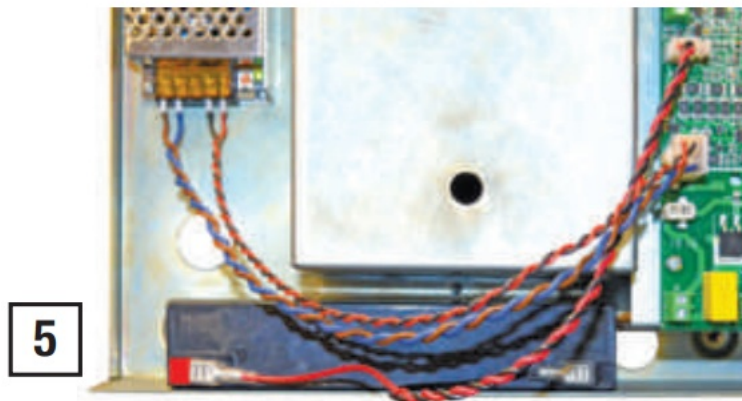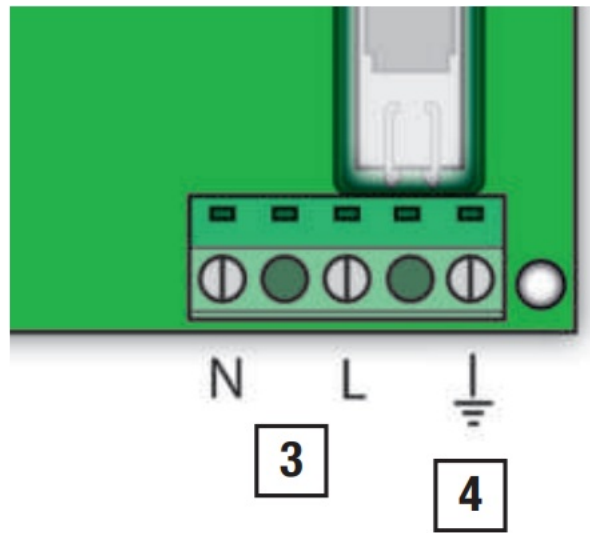

1. 12V Power supply connection
2. 230V Power supply connection
3. 230V Mains power
4. Ground connection
5. Battery slot (battery not included)

DESCRIPTION OF INPUT AND OUTPUT CONNECTIONS

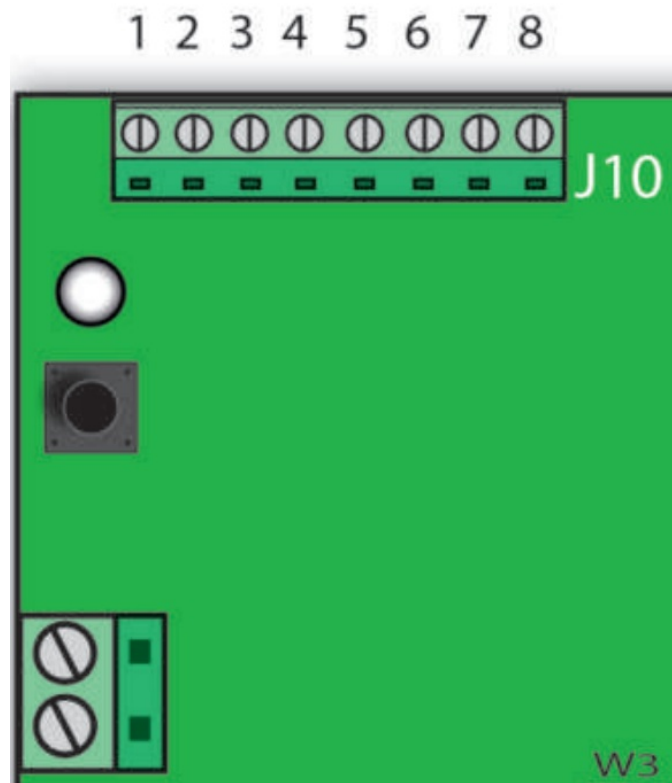

Connection PIN description

DC12V Power supply OUTPUT

1 + DC 12V Output (max 300 mA)

2 – 0V DC ground connected

OUTPUTS

3 READY	OC – temperature reached
4 ARM	OC – ready to shoot
5 EMPTY/FAULT	OC – empty bag/faulty unit

INPUTS

6 –	GND
7 ARM	Arming input
8 TRIG	Shooting input

Note: both commands are contact that close towards GND

OUTPUT Power DC12 V

1-2 Output DC12v (max 300mA) for electrical connection of local devices connected to the board.

It can be used to power a local PIR or a remote receiver. It is recommended not to overload the output.

OUTPUTS

3 READY Unit has reached the correct temperature, full time shooting is possible.

4 ARM Unit is armed and ready to shoot.

5 EMPTY/FAULT

EMPTY This Output (NPN Open Collector) closes towards negative when the bag is empty or in reserve.

The empty bag signal is eliminated only by performing the RESET. The RESET MUST be performed at each bag change (see paragraph 12).

FAULT This Output (NPN Open Collector) closes towards negative when a fault condition that voids functionality

occurs.

It also activated when maintenance is needed, eg. empty batteries or wrong detections on power supply or temperature sensor. If a power fault occurs it will be self resetted when mains power is back.

We remind you that it is FUNDAMENTAL to connect this output to an alarm control panel or other equipment able to forward the signal to whom is concerned.

INPUTS

6 **GND** Reference GND for the inputs.


7 **ARM** Closing the contact ARM : the blue led turns ON and then , if the unit has reached the correct temperature, it is ready to generate fog. During the shot, if the contact ARM is opened, it immediately stops fog generation.

8 **TRIG** Closing the contact TRIG, if the unit is armed and has reached the correct temperature, it produced fog for the time set.

After the shot, all further shot command within 120 seconds will not be processed.

In order to avoid accidental activations with consequent fog emission, the inputs are in “negative safety”, so the disconnection of a wire does not cause their activation.


It is essential to carefully check the reliability of the connections and protect the cables to the alarm control unit where there is a risk of accidental or malicious damage.

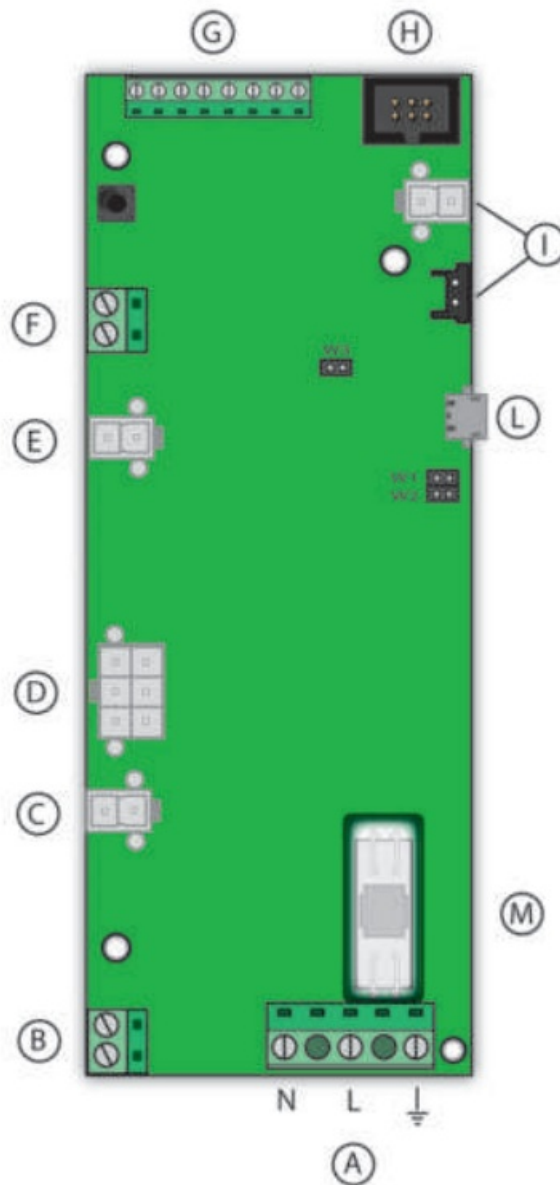



- A) J4 Mains power connection
- B) J5 Heater Resistor
- C) J2 Fuse Cable
- D) J7 Power supply unit 12v
- E) J9 Battery 12v 2A connector
- F) J8 Thermal Sensor connector
- G) J10 Inputs/Outputs connector
- H) J11 RS232 connector
- I) J3 (J6) FogStorm Pump Connector

- L)** J1 USB port
- M)** F4 Mains fuse
- W1** Shooting time setting enable
- W2** Reserved (Open)
- W3** Reserved (Open)

ONNECTION EXAMPLES


 The diagrams and examples below are intended only for a “better understanding” of the operation of the inputs / outputs. None of the diagrams below represents the “single scheme to perform” as, in respect of the reference standard EN50131-8, there are precise indications and only using all inputs and outputs on the PCB it is possible to abide by the standard.

 Is recommended to use the “HOLD-UP” function after a careful evaluation of the risks from a security consultant.

 When FAST Modular is ARMED , it becomes immediatly ready to create fog. For safety reasons and to avoid false fog emissions is suggested to program the allarm panel to allow enough time to leave the place.

- A** FAST MODULAR inputs connected to standard alarm panel outputs
- B** FAST MODULAR inputs connected with a clean contact (relays) alarm panel outputs
- C** Wiring example of FAST MODULAR outputs to drive leds and/or relays


A – FAST MODULAR inputs connected to standard alarm panel outputs

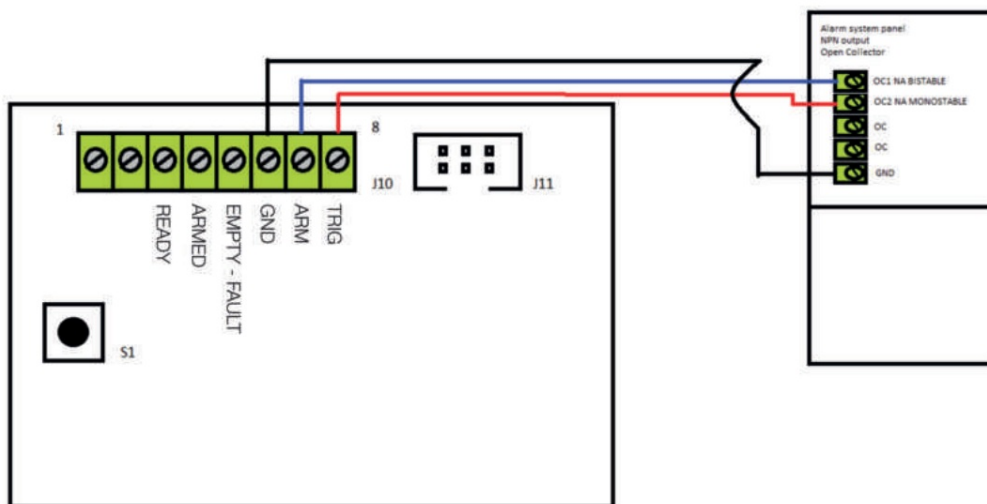

The ON/OFF output of this alarm panel is an Open Collector NPN that is OPEN with the alarm OFF and close to negative for all the time the alarm panel is active and monitoring.

The alarm panel output is normally open and close the contact during alarm time.


B – FAST MODULAR inputs connected with a clean contact (relays) alarm panel outputs

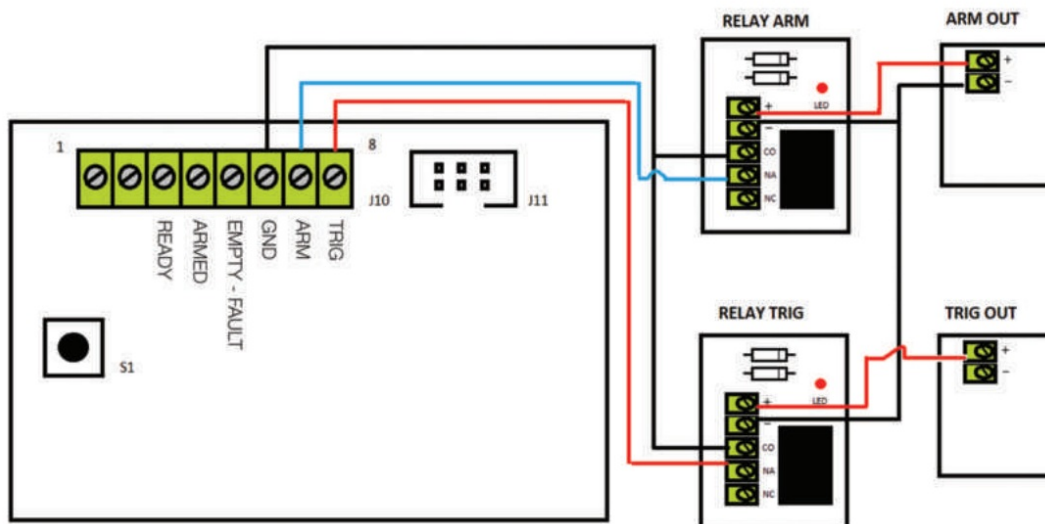


The ON/OFF output of this alarm panell is an open relay when panell is OFF that continuously keep close for all the time the alarm panel is monitoring.

The alarm output of the panell is an open realy that close when alarm condition is detected.

C – Wiring example of FAST MODULAR outputs to drive leds and/or relays

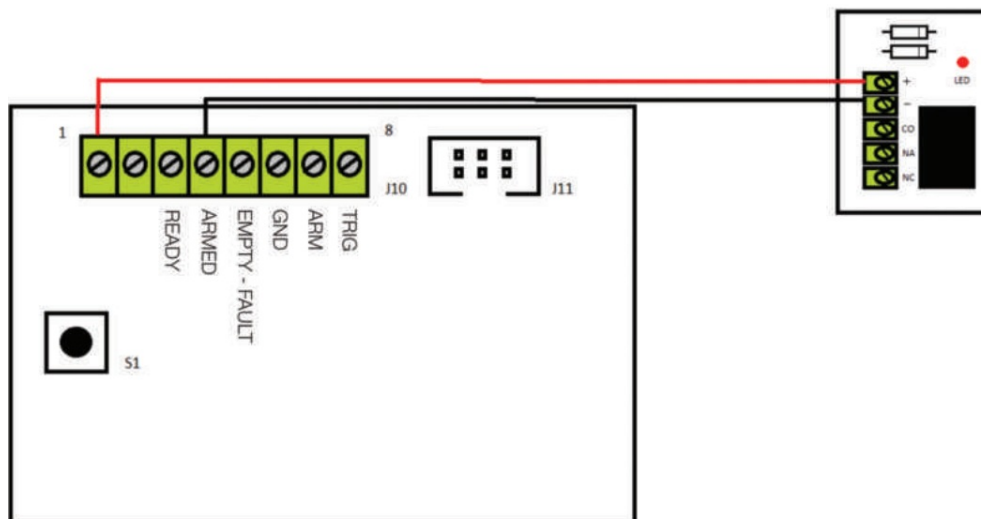

SHOOTING TIME SETTING AND FOG FLOW DIRECTION

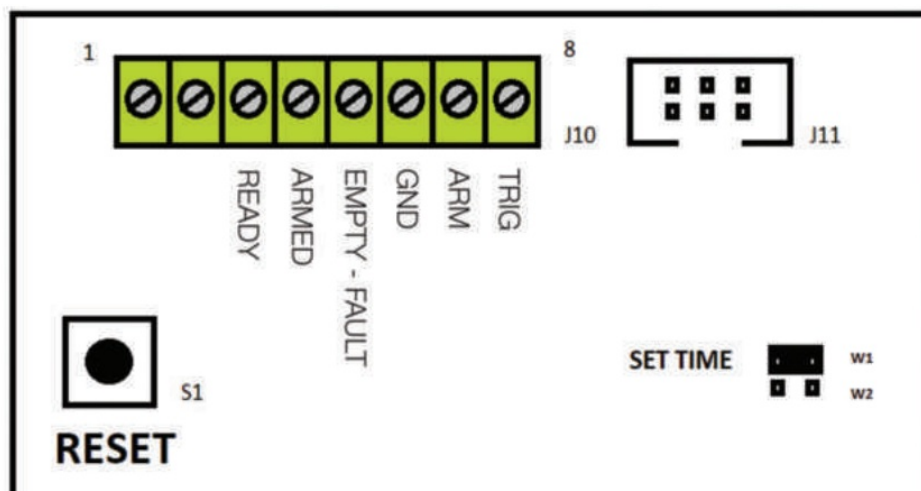

To set the shooting time, after opening the front panell, you must close the jumper W1 in SET position as shown in figure, then, holding down the button S1 “RESET”, the green led on the front will flash and each flash is equivalent to one second.

If you press the button again, the shooting time is not added to the one previously set, but will restart from zero.

Notice: each blink equals 1 second.

If RESET button is kept pressed for a time longer than the shoting time allowed for the unit, shooting time will be set to the maximum.

Shooting time can be set according to desired seconds, but to correctly activate the bag reserve in full security, it must be set minimum 4 seconds of shooting

RECOMMENDED SHOOTING SECONDS ACCORDING TO THE VOLUME SPACE TO PROTECT (m3)

Fogging systems FAST Modular are able to produce fog based on second by second setting.

The maximum quantity of 5,6 ml/s (FAST Modular 200) and 11,3 ml/s (FAST Modular 800) allows to fill an area of about 200 and 800 m3.

There might be cases in which, due to specific characteristic of the location, nozzle type, levels of temperature and air pressure, degree of the fog density and light in the target area, the shooting time can be increased or decreased.

For example, above 5mt of height the shooting time must be integrated and above 7mt, every additional meter should be considered as double.

(HxLxP) x D x V x R x I

HxLxP—— Height x Width x Depth of the area to protect

D—— Density of the produced fog

V—— Temperature and air pressure

R—— Acceptable residue in case of saturation of V parameter

I—— Intensity of the surface light

The following tables indicate the suggested fog emission in relation to the number of seconds of shooting set in average condition of temperature, air pressure and humidity.

To correctly dimension the machines it is needed to verify that the saturation of the area occurs in faster time than the one supposed for the theft.

SHOOTING TABLE MODULAR 200 (max 28 sec.)

m³ to protect	Seconds of emission	m³ to protect	Seconds of emission	m³ to protect	Seconds of emission
25 (75*)	4	75 (225*)	11	150 (450*)	21
50 (150*)	7	100 (300*)	14	200 (600*)	28

SHOOTING TABLE MODULAR 400 (max 46 sec.)

m³ to protect	Seconds of emission	m³ to protect	Seconds of emission	m³ to protect	Seconds of emission
50 (150*)	7	150 (450*)	21	300 (900*)	40
75 (225*)	9	200 (600*)	28		
100 (300*)	14	250 (750*)	35		

SHOOTING TABLE MODULAR 300 (max 40 sec.)

m³ to protect	Seconds of emission	m³ to protect	Seconds of emission	m³ to protect	Seconds of emission
50 (150*)	6	150 (450*)	21	300 (900*)	40
75 (225*)	9	200 (600*)	23	400 (1200*)	46
100 (300*)	12	250 (750*)	35		

SHOOTING TABLE MODULAR 500 (max 48 sec.)

m³ to protect	Seconds of emission	m³ to protect	Seconds of emission	m³ to protect	Seconds of emission
50 (150*)	6	150 (450*)	16	300 (900*)	27
75 (225*)	9	200 (600*)	21	400 (1200*)	37
100 (300*)	12	250 (750*)	24	500 (1500*)	48

SHOOTING TABLE MODULAR 800 (max 69 sec.)

m³ to protect	Seconds of emission	m³ to protect	Seconds of emission	m³ to protect	Seconds of emission
50 (150*)	5	200 (600*)	19	500 (1500*)	43
75 (225*)	8	250 (750*)	22	600 (1800*)	51
100 (300*)	10	300 (900*)	26	700 (2100*)	60
150 (450*)	14	400 (1200*)	35	800 (2400*)	69

* Industrial standard as from other manufacturers


The value in the first column indicates the volume of the room to be protected, with respective seconds of emission reported in the second column. The value in m³ varies depending on the density to be obtained. With the suggested value it is possible to get the maximum density recommended to ensure the absence of any residual. In places where a little residual causes no problems, it is possible to increase the shooting time. Please note that the more fog released, the more the time required to recover visibility. High levels of fog, over recommended limits, can leave residual. Any residue usually goes away by itself within 24/48 hours, otherwise, being soluble in water, it is enough to use a wet cloth for cleaning. If you desire to obtain an average of 1 meter visibility after 60 seconds, as specified by the standard EN 50131-8, as used as reference by all manufacturers of Fog generators, the number of shooting seconds it is to be reduced in half.

INSTALLATION, EXCHANGE AND BAG RESET


Insert the bag in place as show in picture.




To reset the unit the jumper W1 must be open, as shown in picture.

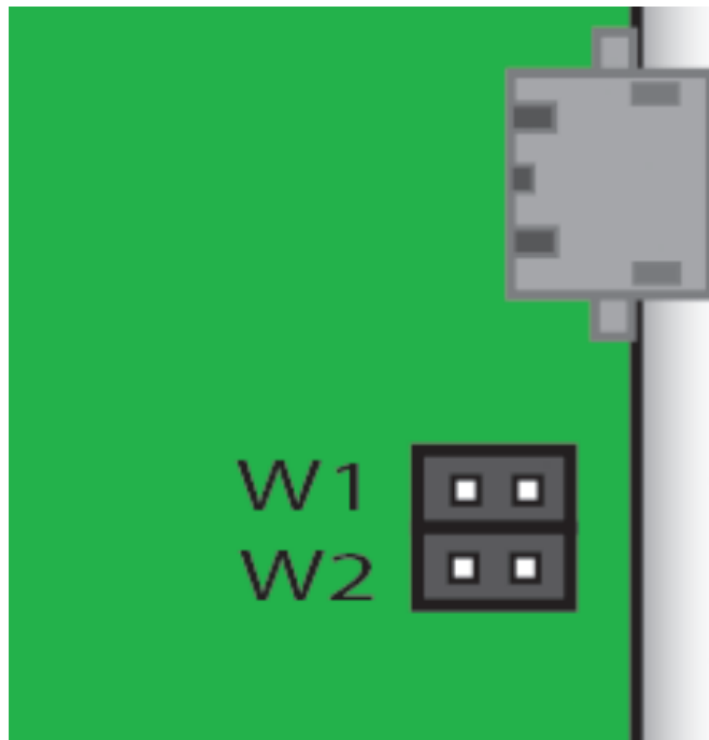

Insert a new bag and push metal connector till a “click” is heard.

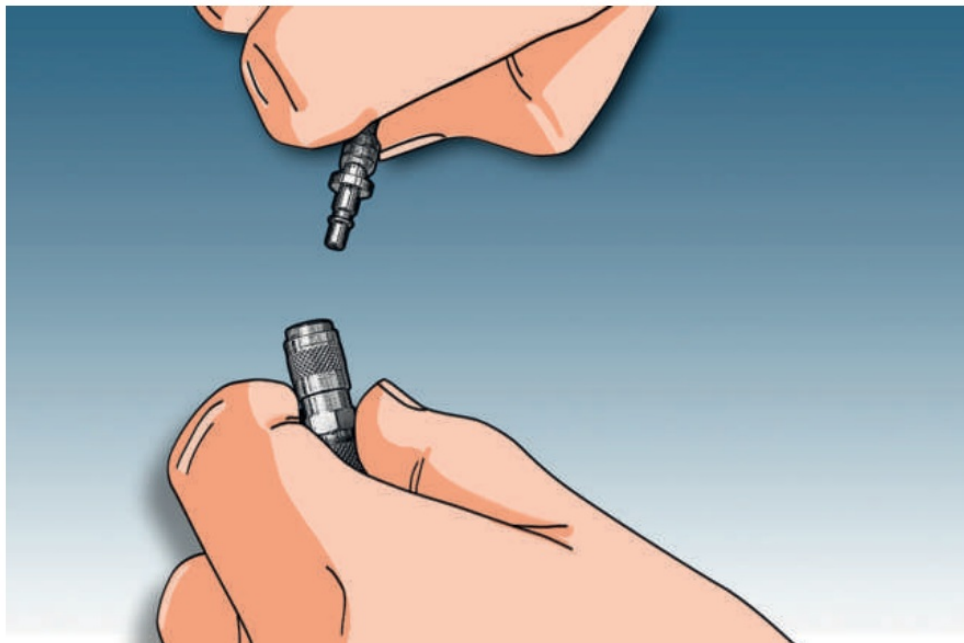



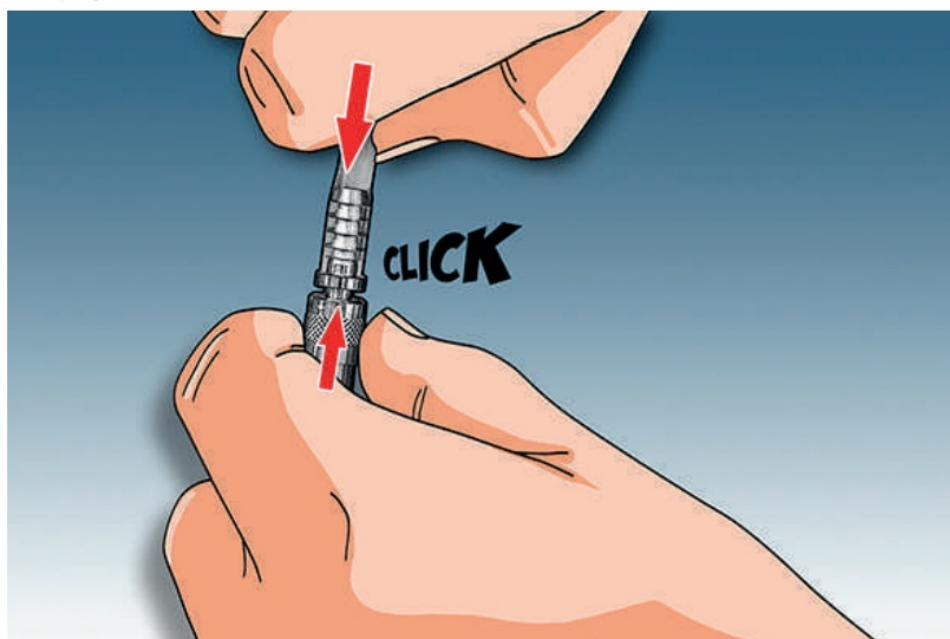

Metal plug



Metal plug

FRONT LEDS MEANING

 EMPTY RESERVE	RED LED (right) ON: Error (Empty bag or low fluid , Mains power off/Battery low) or Fault OFF: No error condition.
 ARM FAULT	BLU LED (center) ON: Unit is armed and ready to shoot (with green led ON). OFF: Unit is disarmed, shot not possible.
 HEATING	GREEN LED (left) ON: Unit has reached the correct temperature. OFF: Unit is warming , no shot possible.

 The EMPTY signal also means that fluid is going LOW. It means that the unit has shot at least 100 seconds since last reset (Modular 200).



The central RED low power light means unit is powered on. The RED FAULT led is on the top of the board.

MAINTENANCE

UR FOG fogging systems don't need special maintenance, nevertheless it is suggested a periodical check to the following parts by skilled operators:

1. Verify battery and power supply status.
2. Verify screws are firmly closed.
3. Verify the output nozzle is not damaged and without anything inside.
4. Verify pneumatic circuit.
5. Verify once a year liquid pump.

BATTERY AND POWER SUPPLY CHECK

Verify that the output of the power supply without any load (battery unplugged) is 14,1 V on the PSU and 13,8 V on FASTON battery connectors. If a different value is noticed, set the trimmer on power supply.

Verify battery status (integrity check, no overheating); it is suggested to replace the battery on 2 years base due to the heavy load during shots without mains power.

SCREWS

Verify that all fixing screws are correctly setted and eventually rescrew them.

OUTPUT NOZZLE

Verify that output nozzle is not damaged and that there is nothing inside blocking the fog ejection flow.

YEARLY PUMP FUNCTIONALITY TEST

The test is done executing a trial shot on the unit. To avoid creating too much fog during the test it is suggested to stop the flow after a few seconds dearming the unit under test. The fog flow will immediately stop.

RESET FROM FAULT CONDITION

Disconnect the units from any power source, both mains power and battery must be disconnected. Wait 15 minutes and reconnect the battery and mains power.

This procedure helps to understand if the fault condition was due to mains power overload, serious power supply problems or problems in thermal loop. The fault condition is shown by the RED led ON (LED DL4 on the top), the output FAULT immediately switches and can indicate a transient or fixable condition (Eg. low battery power or no mains power), or a problem that cannot be fixed on site.

WARNING: The RED led (LED DL1, middle of the board), means that unit is ON. It is NOT a fault condition.

On mains power fault or battery low conditions the unit will recover itself without any further operation on it.

In the event that the mains power fault has generated further problems to the unit (Eg. on board fuse) or that the backup battery is not working anymore, the maintenance is needed.

DEFECTS POSSIBLE SOLUTION


DEFECT FOUND	POSSIBLE CAUSE	POSSIBLE SOLUTION
Small fog flow coming out from nozzle	All products are 100% and a small ammount of liquid could be still in the warming unit Check power input DC12v	This condition is normal and can happen on first installation, it will completely disappear in a while when the unit will become completely hot. Verify the output from power supply (see paragraph 14)
RED Led ON (Error)	Too low battery level or exhaust	Replace Battery
	Bag in Reserve or Empty	Replace fluid Bag
	No Mains power	Check mains power or F4 fuse
RED Led ON (Fault)	Disturbance / interference or potential differences between devices	In the event of high noise on mains power (lightings) an error while reading thermocouple values can occur. Execute recovery (Paragraph 16). If even recovery fails the unit may be faulty
		In very large installations or with more than one fog units connected to the same alarm panel, a mains power difference can occur, in that event the units have to be decoupled
	Error in the thermal loop	Error on thermocouple, fuse cable, resistor. Please refer to technical service
	Heater Temperature too high or thermocouple error	Switch off the unit and verify the screw on J8 connector
	Poor ventilation	Switch off the unit and clean air holes
Unit ARMED (BLUE LED ON)but don't execute trig command	Red front led ON	Bag changed ,reset needed Follow instructions Paragraph 13
		Empty bag- replace it following instructions on Paragraph 13
	Green front led is OFF	Unit still warming , wait max 120min. with the unit connected to the mains power
	Wires error	Verify on J10 that when alarm is ON there is a contact between – GND(6) + TRIG(8)
	Mains power overload	Try the Recover procedure(Paragraph 16) With no results replace the board
	Electronic Board overheath	Clean air flow holes (Paragraph14)
Unit cannot be ARMED BLUE LED OFF	Wires error	Verify on J10 that when alarm is active there is a contact between – GND(6) + ARM(7)
While setting shooting time the green LED lights on	The W1 jumper is OPEN, unit in' "RESET" mode	Refer to bag Reset (Paragraph12) and shooting time setting (Paragraph 11) Warning:please verify/set again the shooting time.
		See time setting (Paragraph 11)

WARRANTY

The warranty of UR Fog is two years and is handled directly from the dealer or authorized installer, so please contact your supplier to take advantage of warranty with the copy of the purchase document that contains the serial number of the machine. Not included in the warranty: moving parts and/or damages depending on the incorrect use unless it is found a manufacturing defect in origin. Liquid and bags are not covered by warranty.



BY BREAKING THE SECURITY LABELS AND THE OPENING OF THE MACHINE YOU WILL ACCEPT WHAT IS WRITTEN ON THIS MANUAL AND ON THE WEB SITE: www.urfog.com



We recommend to throw away the batteries in the appropriate waste containers for recycling. Heavy metals contained in them are recyclable.



UR Fog srl: Via Toscana n. 38 – 10099 San Mauro Torinese – Italy
Phone +39 011/01.33.037 – Fax 011/01.33.005 support@urfog.com

Legal office: Via Giacinto Collegno 11 – 10143 – Torino – Italy

RESELLER/INSTALLER STAMP (company to contact for the warranty)

Serial number.....

Date of installation.....

Signature of installer.....

At the end of the installation, write down the identification number of the machines, the date of the installation and sign in the dedicated spaces.

MAINTENANCE

Notification of successful installation

Hereby informs that UR FOG machine, model _____
 has been connected to the alarm system at:

Company Name	
Address	
Referent	E-mail address
Phone number	Mobile number

The fog machine generates a dense fog when an intrusion occurs to impede the visibility to the intruder.
 The fog is safe for people, animals, things and food.
 This notification has been sent or delivered to:

Firemen	
Referent	E-mail address
Phone number	Mobile number
Public security	
Referent	E-mail address
Phone number	Mobile number
Private security	
Referent	E-mail address
Phone number	Mobile number

AUTHORIZED INSTALLER: _____

PLACE: _____ DATE: _____

SIGNATURE AND STAMP: _____


UR FOG S.r.l. Sede legale / Legal Office : via Giacinto Collegno n°11 - 10143 Torino - Italy
 Sede operativa e magazzini / Operation and delivery to : via Toscana n° 38 - 10099 San Mauro T.a.s. (Torino) - Italy
 C.F. / P. Iva 10724850010 - Reg. imprese TO - 1157030 - Cap. Soc. Euro 10.000 int. versati
 Tel. +39 011 0133037 - Fax +39 011 0133005 - e-mail: amministrazione@urfog.com

N.B. Ask for the PDF module writing to: support@urfog.com



TO USE UR FOG FOGGING SYSTEMS WITH PURIFOG/PURIFOG HYPO FLUIDS FOLLOW THE DATASHEETS INSTRUCTIONS AVAILABLE FOR DOWNLOAD ON WWW.PURIFOG.COM

Documents / Resources

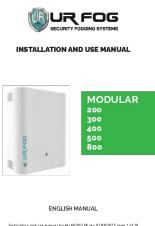	<p>UR FOG 200 Modular Fogging Systems [pdf] User Manual 200 Modular Fogging Systems, 200, Modular c, Modular Fogging Systems</p>
---	--

References

- [PuriFog by URfog](#)
- [Anti-intrusion Fogging Systems anti-theft - UR Fog S.r.l.](#)
- [User Manual](#)

Manuals+ Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.