



## STORM DOOR MEASURE GUIDE

# 4 EASY STEPS

For a measuring video or a digital copy of this guide, visit [stormdoors.com/measure](http://stormdoors.com/measure) or scan the QR Code.

### STEP


# 1

## CHECK TO ENSURE DOOR OPENING AND TRIM ALLOW ENOUGH SPACE FOR A STORM DOOR

**DIMENSION A:** Minimum  $\frac{3}{4}$ " width flat trim surface required (Note: 75 Series and Forever® Storm Doors require a minimum of 1")

**DIMENSION B:** Minimum of 1" trim (brickmould) depth required

**DIMENSION C:** Minimum of 2  $\frac{1}{2}$ " door frame (jamb) depth required\*

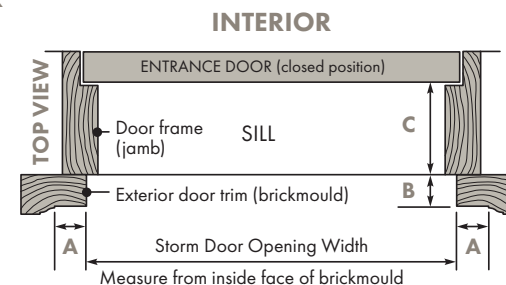

### EXTERIOR

\* Note: Depending on the depth and location of your entry door handle set, additional clearance may be needed.

### STEP

# 2

## MEASURE THE DOOR OPENING

Measure the width of the door opening at the inside face of exterior trim on each side at top, center & bottom: (see measure points W1, W2 & W3)


**RECORD THE SHORTEST WIDTH:** \_\_\_\_\_

INCHES

Measure for height from the sill to the underside of the brickmould at the top of the door: (see measure point H)

**RECORD THE HEIGHT:** \_\_\_\_\_

INCHES

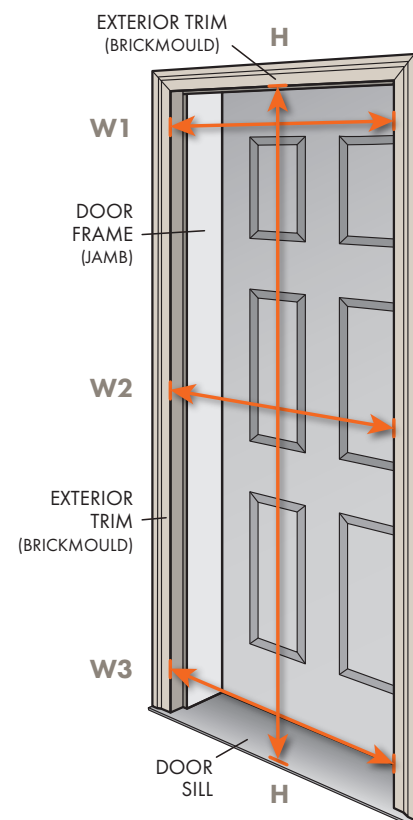

PROCEED TO STEP 3 ON BACK



TEAR HERE

STEP

3

DETERMINE THE SIZE YOU NEED BASED ON THE DOOR OPENING MEASUREMENTS AND THE STORM DOOR MODEL THAT IS SELECTED

STANDARD DOOR SIZE  
WIDTH RANGES:

30"

32"

34"

36"

Andersen 4000 & 3000 Series Storm  
Doors with 45 Minute Easy Install System  
(from Step 2)

29 7/8"

31 7/8"

33 7/8"

35 7/8"

TO  
30 3/8"

TO  
32 3/8"

TO  
34 3/8"

TO  
36 3/8"

Andersen 2000 & 400 Series  
and EMCO Storm Doors  
(from Step 2)

29 3/4"

31 3/4"

33 3/4"

35 3/4"

TO  
30 3/8"

TO  
32 3/8"

TO  
34 3/8"

TO  
36 3/8"

STANDARD DOOR SIZE  
HEIGHT RANGES:

80"

All Doors  
(from Step 2)

80"  
TO  
80 7/8"

IF YOUR MEASUREMENTS FROM STEP 2 FALL  
WITHIN THE STANDARD WIDTH & HEIGHT  
RANGES, RECORD YOUR DOOR SIZE HERE:

X

STANDARD WIDTH

STANDARD HEIGHT

(for example 36" X 80")

If your measurements are outside the standard width or height ranges shown above,  
you will require a custom size door.\*



	CUSTOM	CUSTOM XL
Andersen Custom Door Opening WIDTHS:	27 7/8" TO 38 3/8"	27 7/8" TO 42"
Andersen Custom Door Opening HEIGHTS:	72" TO 84 7/8"	72" TO 96"
	CUSTOM	CUSTOM X
EMCO Custom Door Opening WIDTHS:	27 3/4" TO 38 3/8"	38 1/2" TO 42"
EMCO Custom Door Opening HEIGHTS:	75" TO 84 7/8"	79" TO 91"


\* Select storm door models and select options are not available in custom sizes.

STEP


4

CHOOSE THE HANDING  
THAT WORKS BEST WITH  
YOUR ENTRYWAY

If you choose an Andersen 4000 or 3000  
Series Storm Door with the 45 Minute  
Easy Install System, handing will need  
to be specified at the time of purchase.

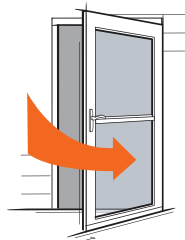

EXTERIOR  
VIEW

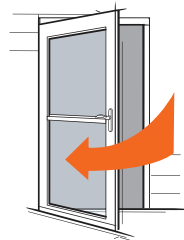

☐ Left Handed (LH)

☐ Right Handed (RH)

TEAR HERE