


AKAI ACVA2 MPC ONE+ Standalone Sampler and Sequencer User Guide

[Home](#) » [AKAI](#) » AKAI ACVA2 MPC ONE+ Standalone Sampler and Sequencer User Guide 

AKAI ACVA2 MPC ONE+ Standalone Sampler and Sequencer

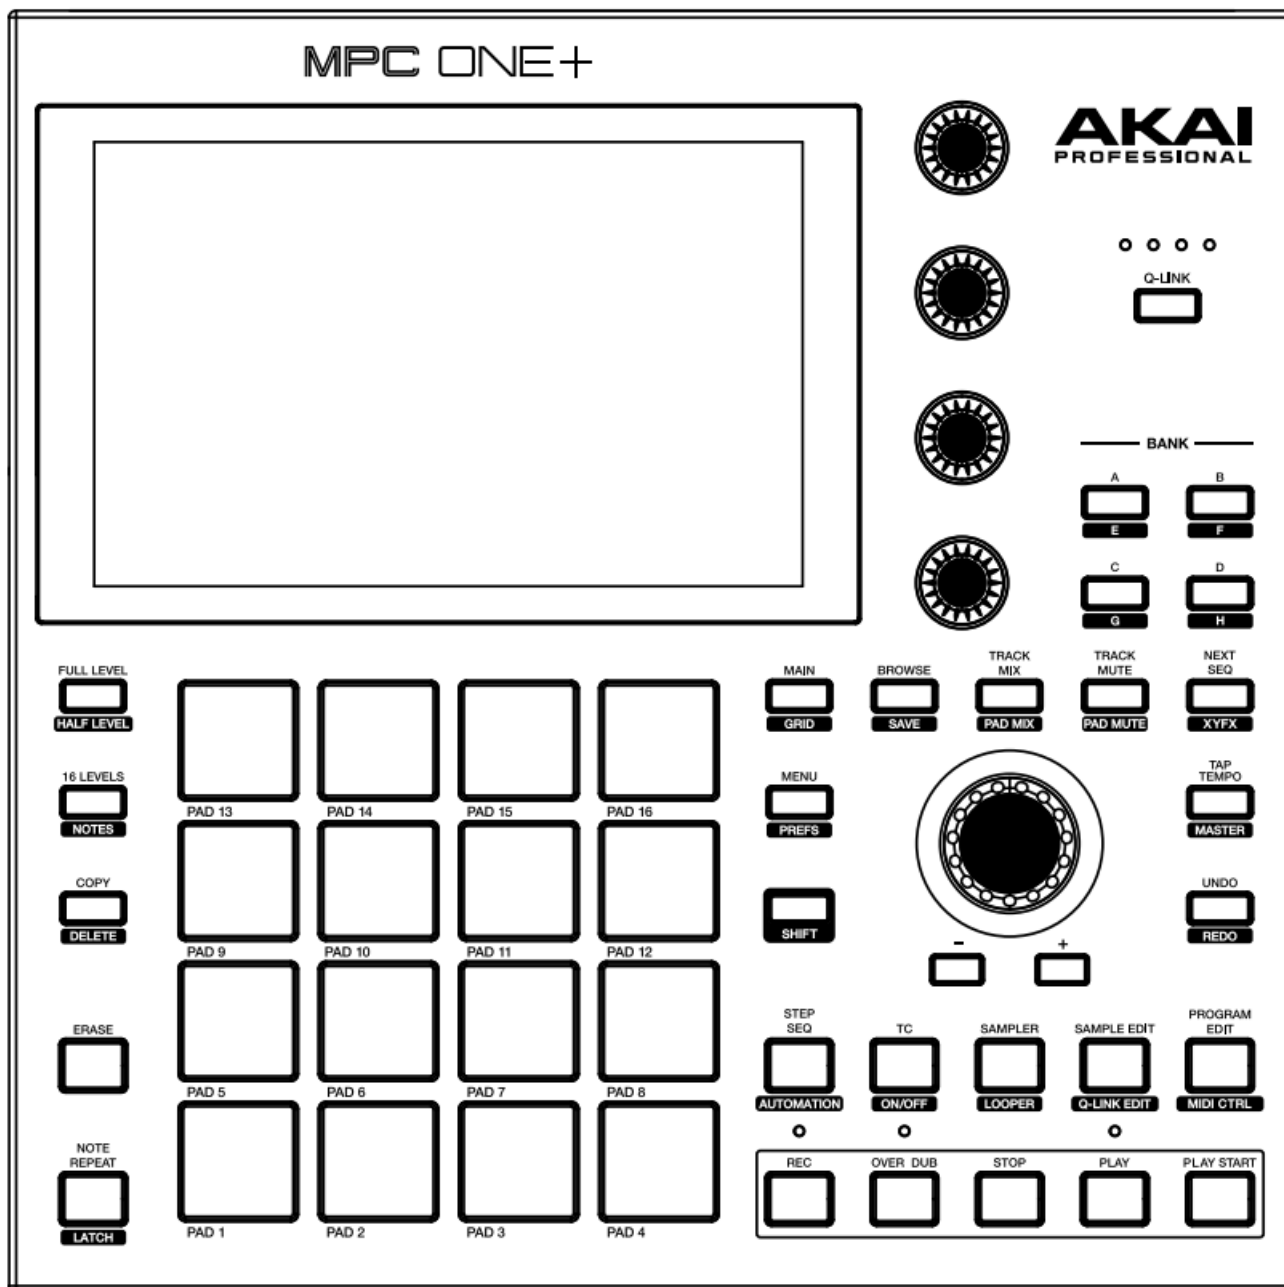

Contents

- 1 [GETTING STARTED](#)
- 2 [Connection Diagram](#)
- 3 [Operation](#)
- 4 [Using the Display](#)
- 5 [Wi-Fi](#)
- 6 [Bluetooth](#)
- 7 [Customer Support](#)
- 8 [Documents / Resources](#)
- 9 [Related Posts](#)

GETTING STARTED

Package Contents:

- MPC ONE+


- Power Adapter
- USB Cable
- Software
- Download Card
- Quick start Guide
- Safety & Warranty Manual

AKAI.PRO.COM/REGISTER



- REGISTER YOUR PRODUCT
- DOWNLOAD THE USER GUIDE
- DOWNLOAD INCLUDED SOFTWARE
- WATCH TUTORIAL VIDEOS


Connection Diagram

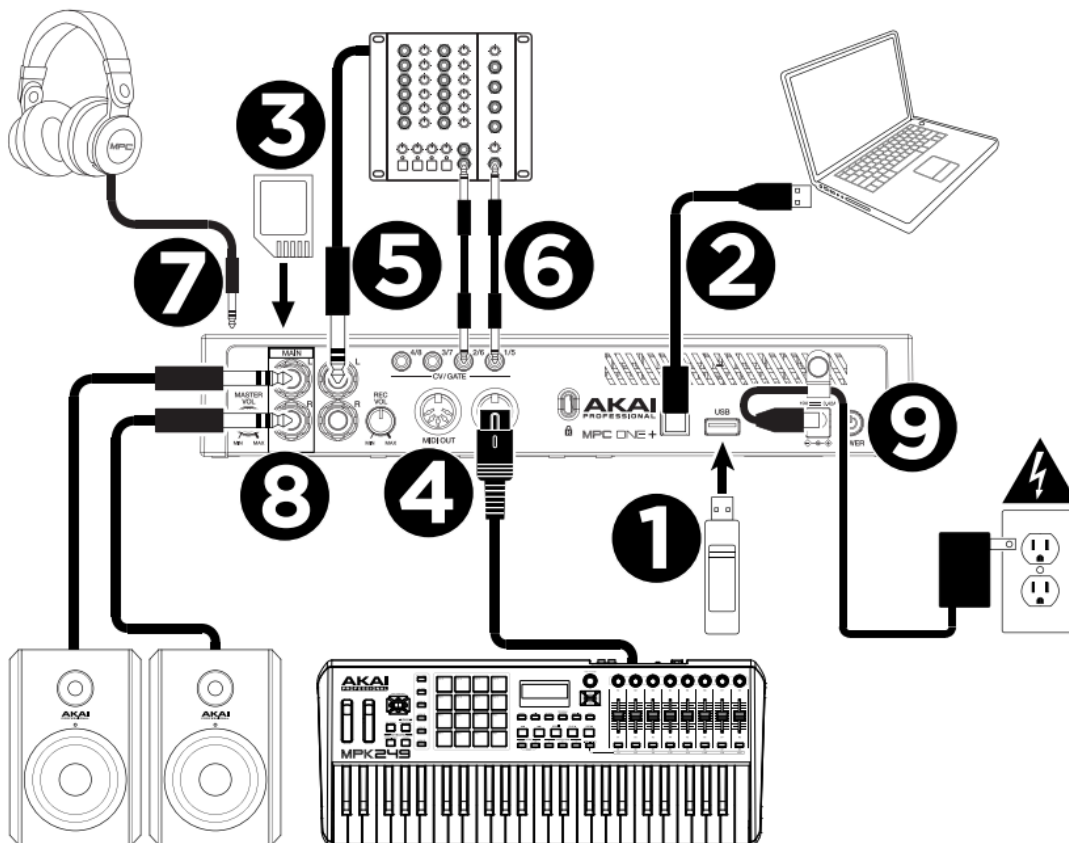

- 1. USB-A Port:** Connect a MIDI controller or USB flash drive here to access files.
- 2. USB-B Port:** Connect to a computer's USB port to send/receive MIDI data.

3. **SD Card Slot:** Insert a SD, SDHC, or SDXC card (ex-FAT or FAT32 formatted) to access files (front panel).
4. **MIDI Input/Output:** Connect to external MIDI devices (synthesizer, drum machine, etc.).
5. **Audio Inputs (1/4" TRS, 6.35 mm):** Connect these inputs to an audio source (mixer, synthesizer, drum machine, etc.).
6. **CV/Gate (1/8" TRS, 3.5 mm):** Send control voltage (CV) and/or gate signals from these outputs to external sequencers.
7. **Headphones Output: (1/8", 3.5 mm):** Connect headphones here (front panel).
8. **Main Output (1/4" TRS, 6.35 mm):** Connect these outputs to your monitors, mixer, etc.
9. **Power:** Connect the included power adapter here.

Operation

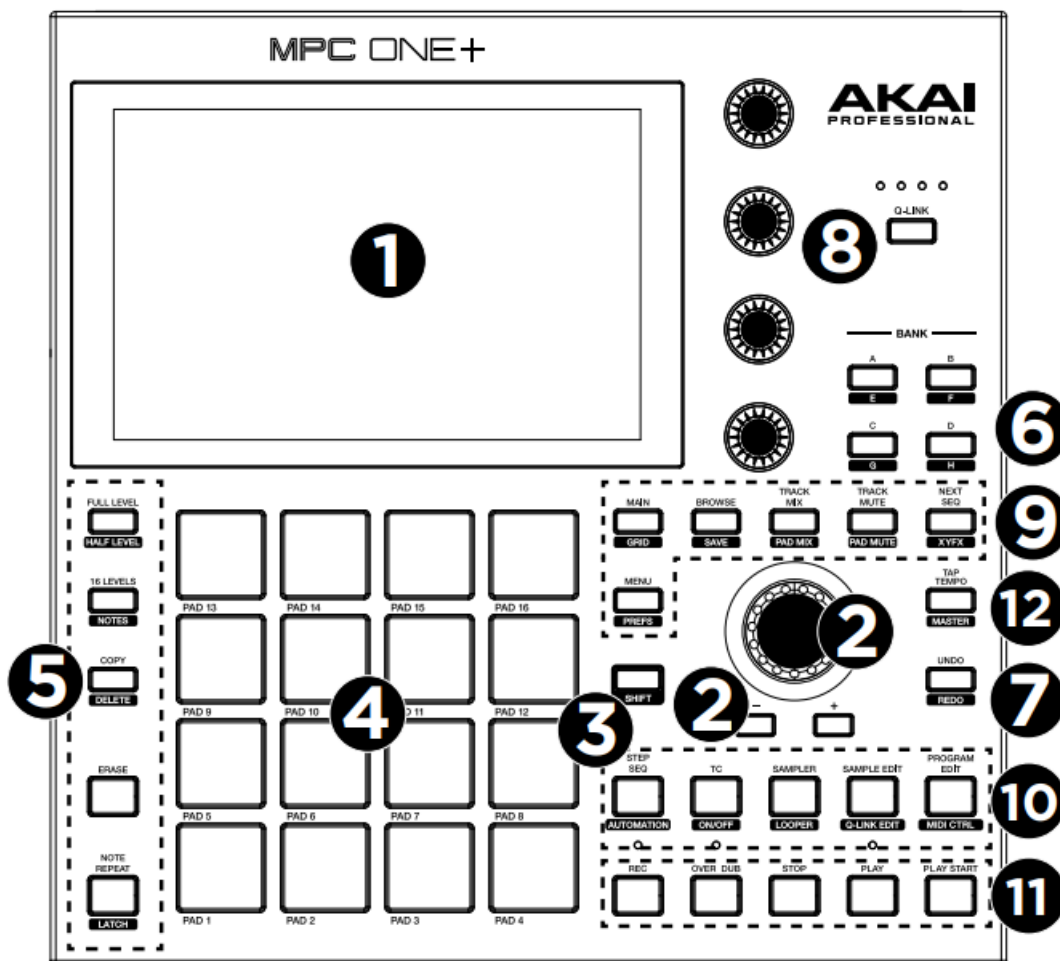

1. **Display:** View the full-color multi-touch display for information on the current operation.
2. **Data Entry Controls:** Use these to scroll through menu options or adjust parameter values.
3. **Shift:** Press and hold to access some buttons' secondary functions.
4. **Pads:** Press these velocity and pressure-sensitive pads to trigger samples.
5. **Pad Functions:** Press to activate pad-related functions.
6. **Bank:** Press to access Pad Banks A-D. Double press or SHIFT +press a button to access Pad Banks E-H.
7. **Undo/Redo:** Press to undo or SHIFT +press to redo the last action.
8. **Q-Link Controls:** Press the Q-LINK button to change which parameters are controlled. Turn the touch-sensitive knobs to adjust parameters and settings.
9. **Track and View Controls:** Press these buttons to open the mode menu or access other track modes.

10. **Programming Controls:** Press these buttons to access editing, sequencing, and sample modes and controls.
11. **Transport Controls:** Use these controls to start/stop playback and recording.
12. **Tap Tempo:** Repeatedly press in time to enter a new tempo (in BPM). SHIFT +press to set whether the sequence follows its own tempo or a global tempo.

Using the Display

Tap a button or option to enable it or select it. Use the data dial or -/+ buttons to change settings or values. Double-tap a control to access advanced editing options. Tap the upper-left part of the display to open the mode menu or return to the previous view. Spread two fingers to zoom in (into a section of a waveform, for example). Pinch two fingers to zoom out.

Wi-Fi

Press SHIFT+MENU to open the Preferences and select Wi-Fi.
To activate or deactivate wireless connectivity, tap On/Off.
To select a wireless network, tap it.
To connect to a selected wireless network, tap Connect.
To disconnect from a connected wireless network, tap Disconnect.

Bluetooth

Press SHIFT +MENU to open the Preferences and select **Bluetooth**.
To activate or deactivate Bluetooth connectivity, tap On/Off.
To select a Bluetooth device, tap it.
Note: QWERTY style keyboards and Bluetooth MIDI devices are supported.
To pair or connect to a Bluetooth device (in the Available Devices section), tap Pair or **Connect**.
To disconnect from a connected Bluetooth device (in the Paired Devices section), tap **Disconnect**.

Customer Support

AKAI.PRO.COM/SUPPORT

For articles, videos, and phone and web support.



DOWNLOAD THE FULL USER GUIDE TO LEARN MORE
AKAI.PRO.COM

AKAI[®]
PROFESSIONAL

Documents / Resources



[AKAI ACVA2 MPC ONE+ Standalone Sampler and Sequencer](#) [pdf] User Guide
ACVA2, Y4O-ACVA2, Y4OACVA2, ACVA2 MPC ONE Standalone Sampler and Sequencer, MP
C ONE Standalone Sampler and Sequencer, Standalone Sampler and Sequencer, Sampler an
d Sequencer, Sequencer

Manuals+.