

ALLEGRO CT220BMV-IS5 Linear Evaluation Board User Guide

Home » ALLEGRO CT220BMV-IS5 Linear Evaluation Board User Guide 🖫



EVB222-1.5 CT220BMV-IS5 Evaluation Board User Guide

Contents

- 1 DESCRIPTION
- 2 FEATURES
- **3 EVALUATION BOARD**

CONTENTS

4 USING THE EVALUATION

BOARD

- **5 SCHEMATIC**
- **6 LAYOUT**
- **7 BILL OF MATERIALS**
- **8 RELATED LINKS**
- 9 Revision History
- 10 Documents / Resources
 - 10.1 References

DESCRIPTION

The EVB222-1.5 evaluation board is designed to demonstrate the current sensing capabilities of the CT220 linear magnetic sensor from Allegro MicroSystems. The CT220 is a contactless current sensor based on XtremeSense™ tunnel magnetoresistance (TMR)

technology. It features a full-bridge configuration comprising four TMR elements monolithically integrated with active CMOS circuitry, allowing it to have high resolution and low noise in a small-package footprint. This user guide describes how to connect and use the EVB2221.5 evaluation board.

FEATURES

Field range: ±1.5 mTGain: 300 mV/V/mT3 V to 5 V power supply

EVALUATION BOARD CONTENTS

• EVB222-1.5 evaluation board

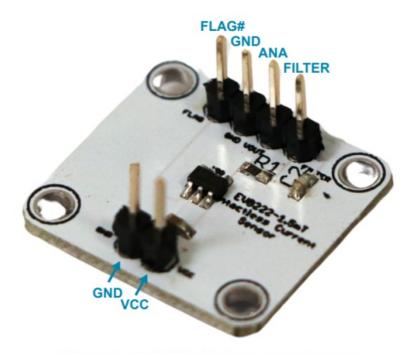


Figure 1: EVB222-1.5 Evaluation Board

Table 1: EVB222-1.5 Evaluation Board Configurations

Configuration Name	Part Number	B-Field	Gain
EVB222-1.5	CT220BMV-IS5	±1.5 mT	300 mV/V/mT

Table 2: General Specifications

Specification	Min.	Тур.	Max.	Units
Input Operating Voltage	3	3.3	5	V
Cutoff Frequency (3 dB)	_	10	_	kHz
Operating Temperature	-40	-	85	°C

USING THE EVALUATION BOARD

This section provides an overview of the connections and configuration options of the EVB222-1.5 evaluation board. Each group of connections highlighted in Figure 2 has a detail section below. The product datasheet contains detailed information about the use and functionality of each pin and should be consulted for more-detailed

information than is contained in this user guide.

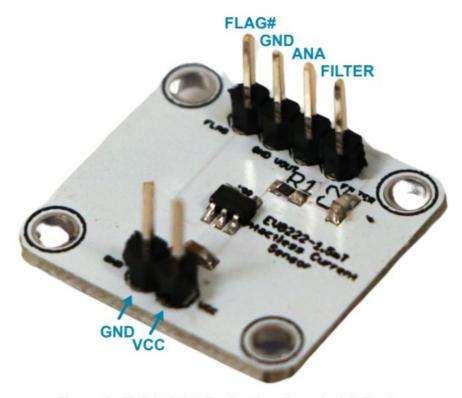


Figure 2: EVB222-1.5 Evaluation Board with Busbar

Power Input and Board Configuration

The two-pin male header connector is used to apply the bias voltage to the CT220 sensor. The four-pin male header on the PCB is used to measure the output. The voltage at the ANA pin (output) is proportional to the magnetic field present at the sensor. The EVB222-1.5 also has a resistor-capacitor (RC) filter-based low-pass filter with a 3 dB frequency of 10 kHz implemented. The filtered response to the magnetic field can be measured from the FILTER pin. The output on the FLAG pin changes state when the magnetic field exceeds ±1.35 mT (90% of the full-scale magnetic field range).

SCHEMATIC

The schematic of the EVB222-1.5 evaluation board is shown in Figure 3.

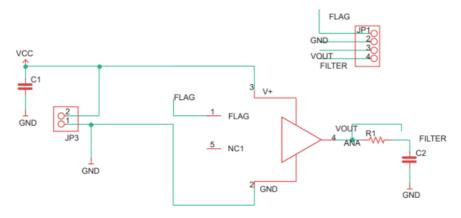


Figure 3: EVB222-1.5 Evaluation Board Schematic

LAYOUT

The top and bottom layers of the EVB222-1.5 evaluation board are shown in Figure 4 and Figure 5.

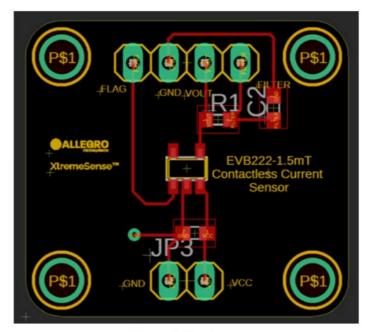


Figure 4: Top Layer



Figure 5: Bottom Layer

BILL OF MATERIALS

Table 3: CT220BMV-IS5 Version Evaluation Board Bill of Materials

Designator	Quanti ty	Description	Manufacturer	Manufacturer Part Number		
ELECTRICAL COMPONENTS						
_	1	EVB222-1.5 EVAL PCB	Allegro MicroSystems	_		
U\$3	1	CT220 Sensor	Allegro MicroSystems	_		
FLAG, GND, VOUT, FILTER	4	Male Header Connectors	Samtec	TSW-104-07-F-S		
GND, VCC	2	Male Header Connectors	Samtec	TSW-102-07-F-S		
JP3	1	Capacitor, Ceramic, 1.0 pF, 25 V, 10% X7R 0603	TDK	MSAST168SB7105K TNA01		
C2	1	Capacitor, Ceramic, 150 pF, 1 kV, 1 0% X5F 0603	Vishay	562R1OTST15		
R1	1	Resistor, 105 kO, 1110 W, 1% 0603	Vishay	TNPW0603105KBEE A		

RELATED LINKS

CT220 Product Webpage:

https://www.allegromicro.com/en/products/sense/current-sensor-ics/sip-package-zero-to-thousand-ampsensor-ics/ct220

Revision History

Number	Date	Description
_	May 23, 2024	Initial release
1	September 11, 2024	Updated general specifications (page 1), updated evaluation board images (pages 1 and 2), removed busbar configuration (page 3), and updated BOM (page 5).

Copyright 2024, Allegro MicroSystems.

Allegro MicroSystems reserves the right to make, from time to time, such departures from the detail specifications as may be required to permit improvements in the performance, reliability, or manufacturability of its products. Before placing an order, the user is cautioned to verify that the information being relied upon is current.

Allegro's products are not to be used in any devices or systems, including but not limited to life support devices or systems, in which a failure of Allegro's product can reasonably be expected to cause bodily harm.

The information included herein is believed to be accurate and reliable. However, Allegro MicroSystems assumes no responsibility for its use; nor for any infringement of patents or other rights of third parties which may result from its use.

Copies of this document are considered uncontrolled documents.



955 Perimeter Road Manchester, NH 03103-3353 U.S.A. www.allegromicro.com

Documents / Resources



ALLEGRO CT220BMV-IS5 Linear Evaluation Board [pdf] User Guide CT220BMV-IS5, CT220BMV-IS5 Linear Evaluation Board, Linear Evaluation Board, Evaluation Board, Board

References

• User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.